






























Assembling Instruction
















Attention: Do not tighten screws until all of them are in right positions

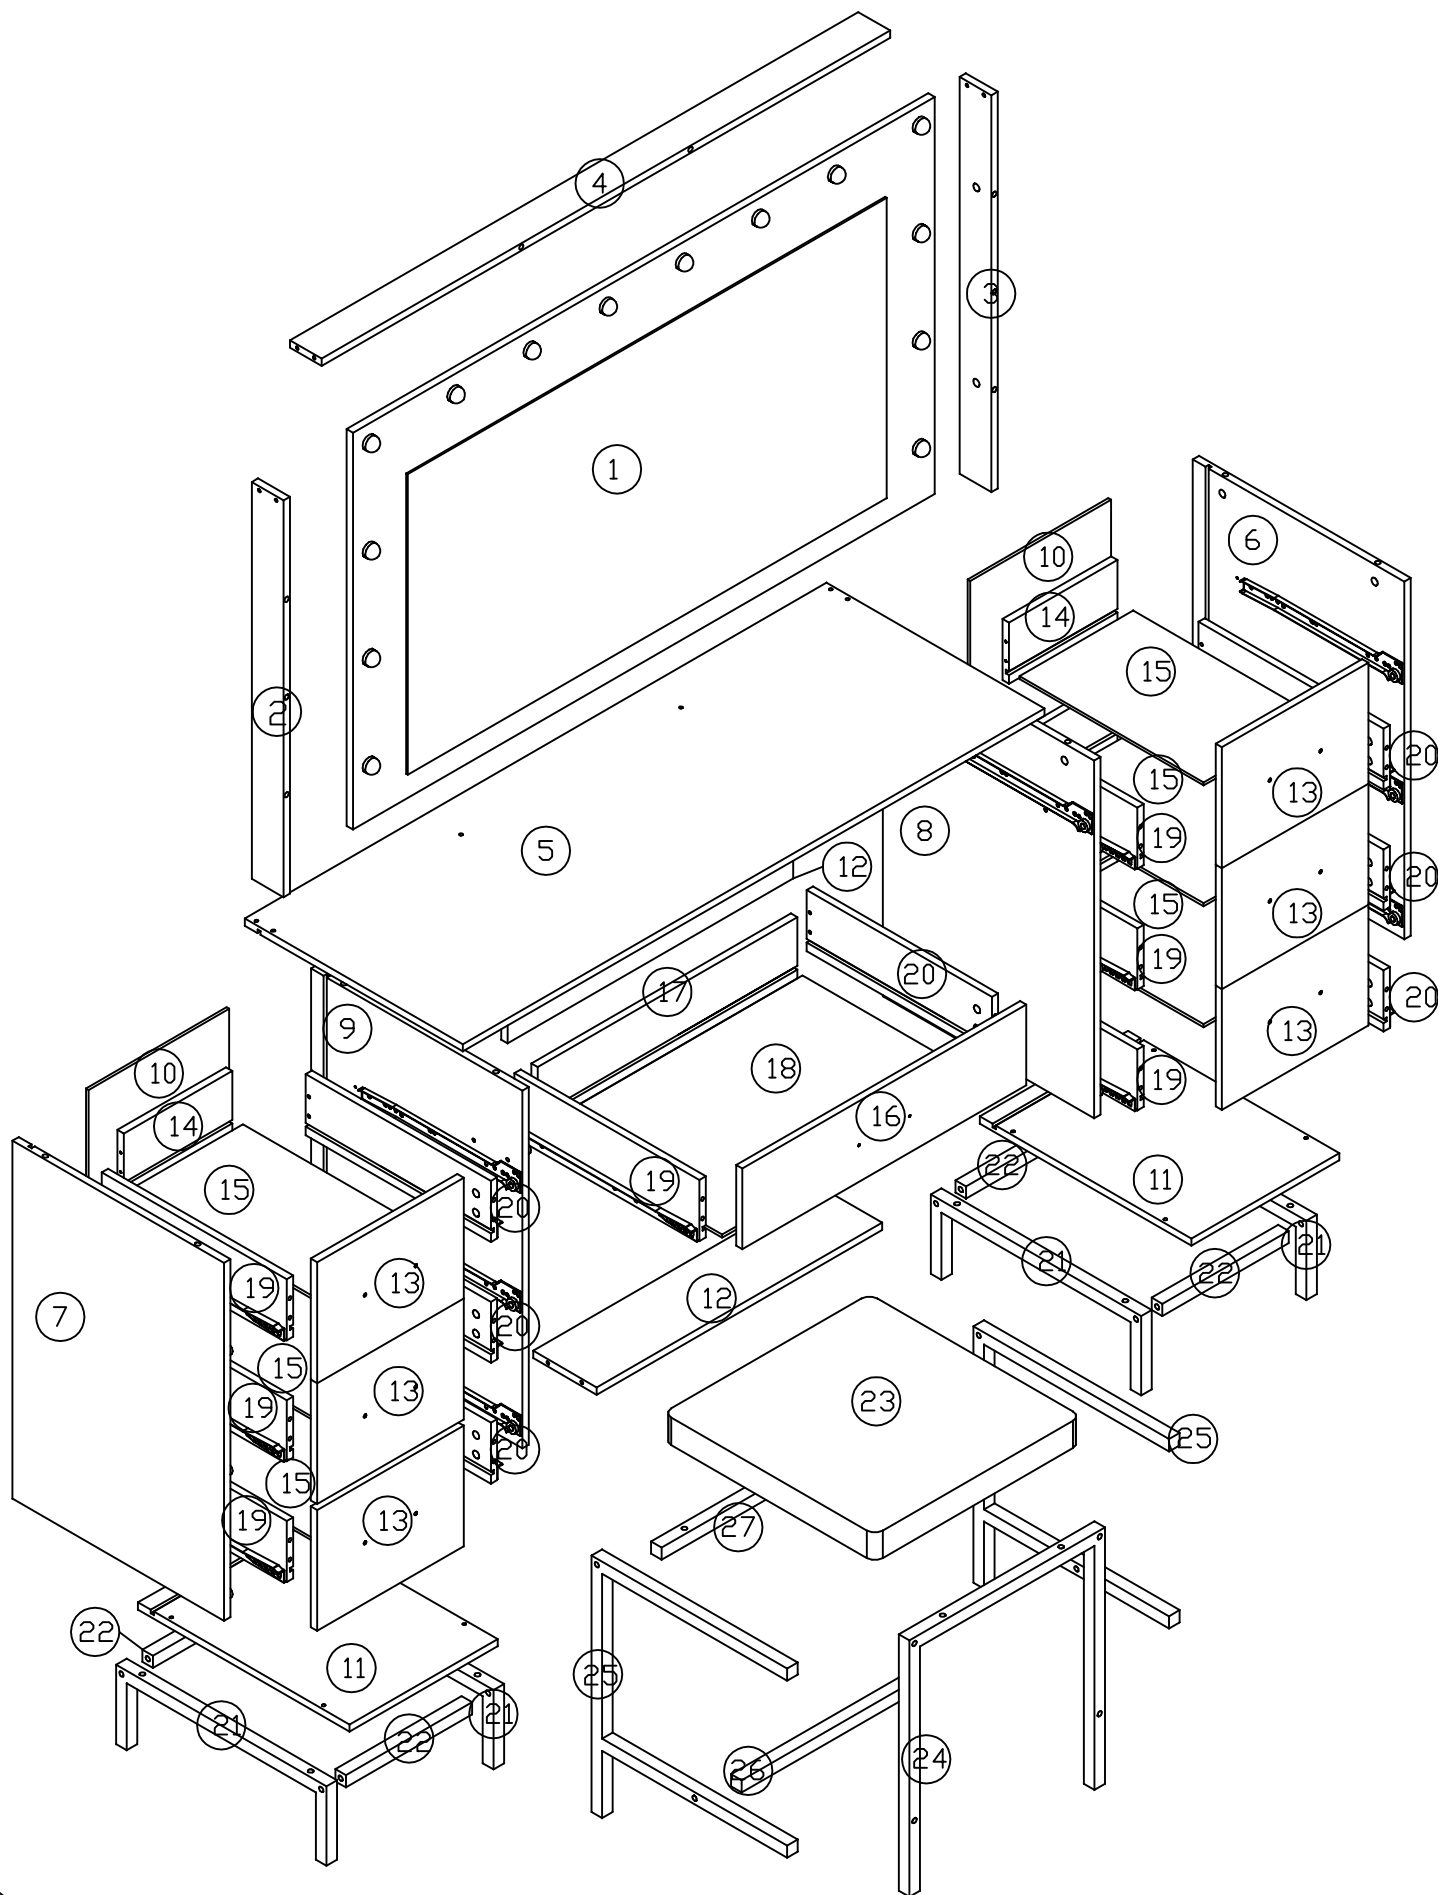




Assembling Instruction

Attention: Do not tighten screws until all of them are in right positions

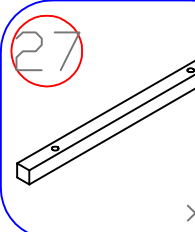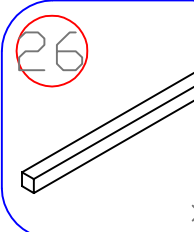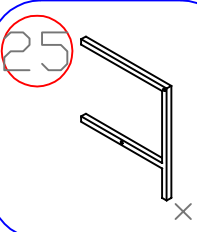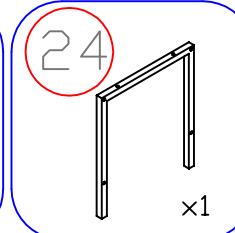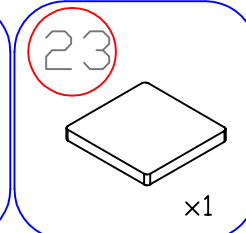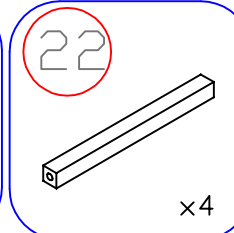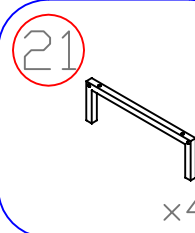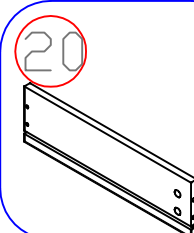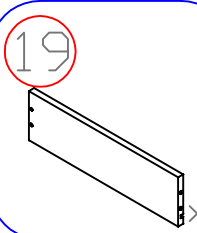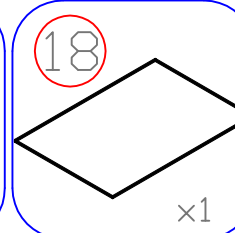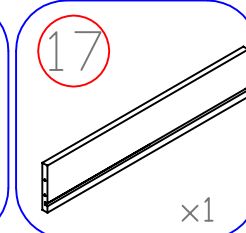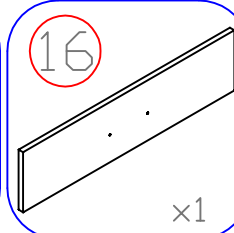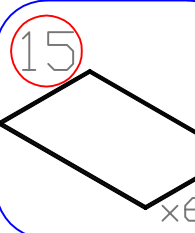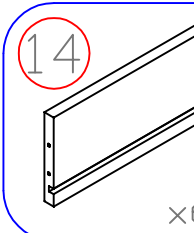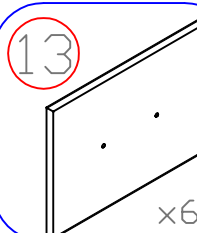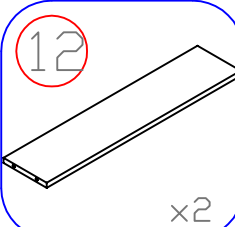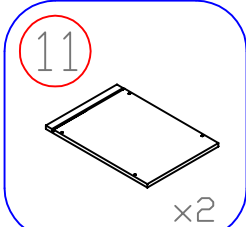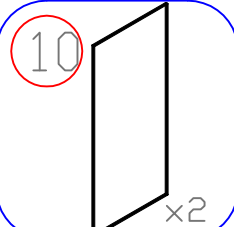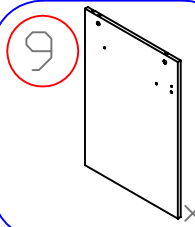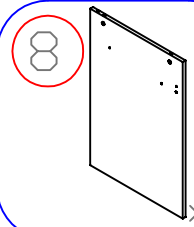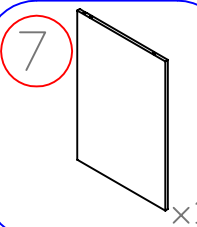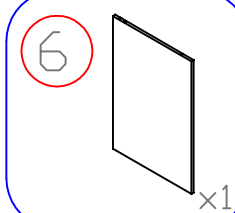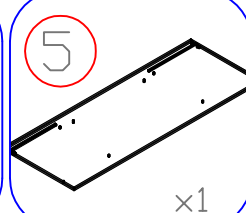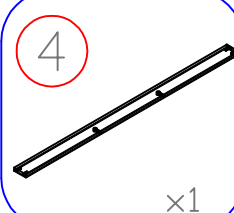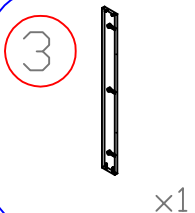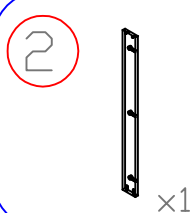
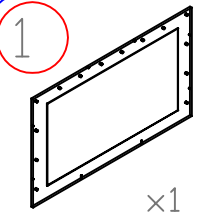
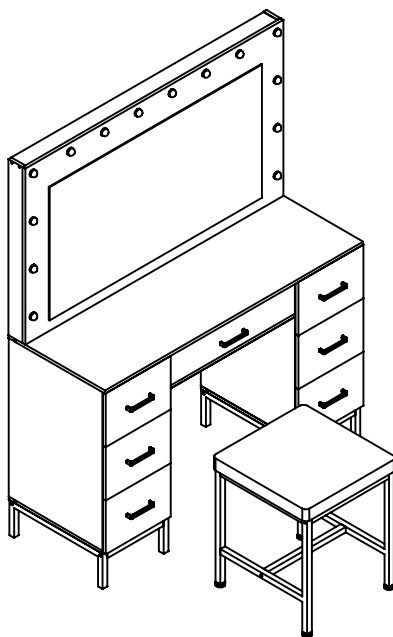


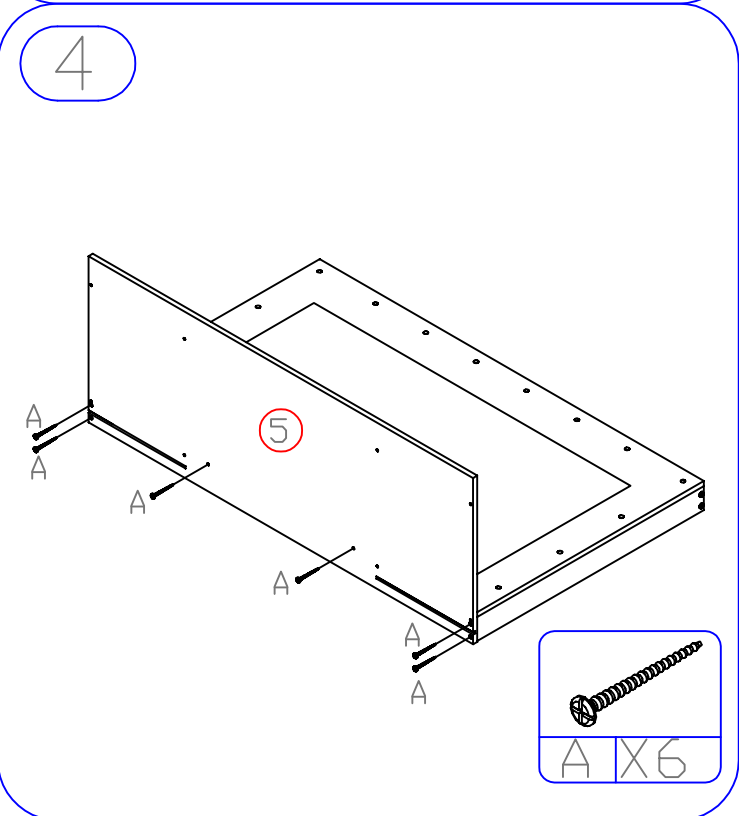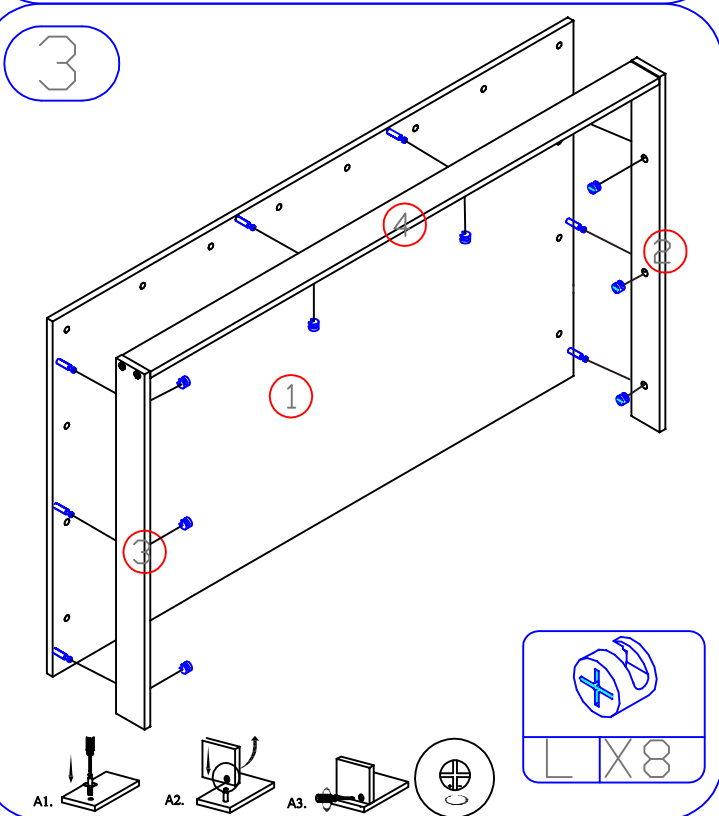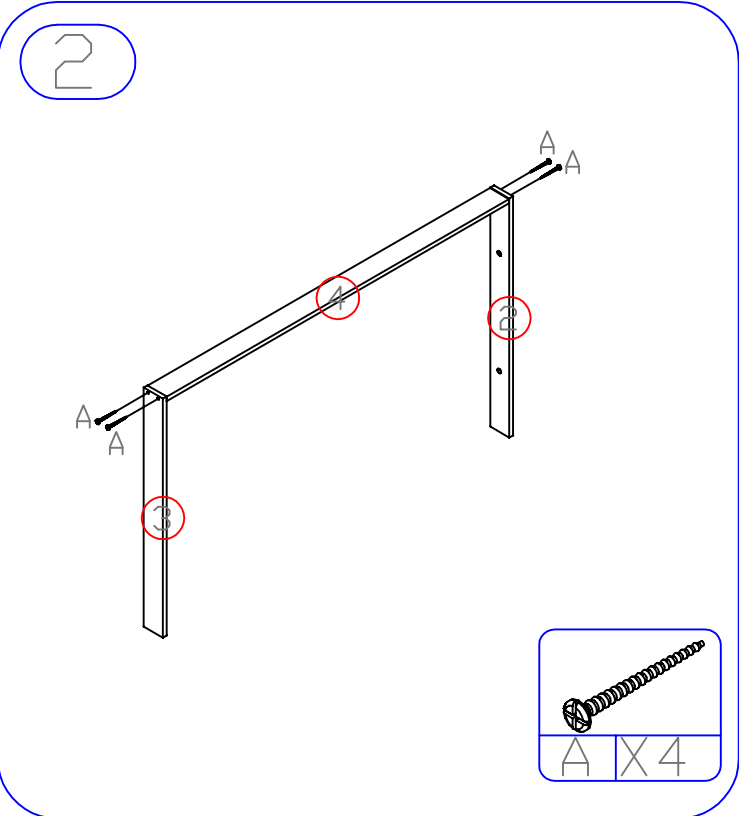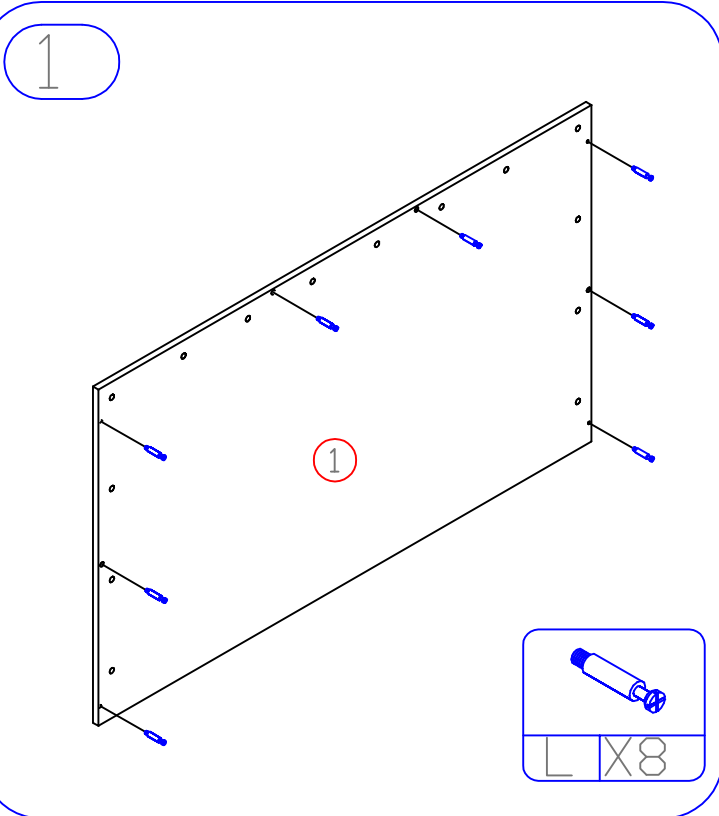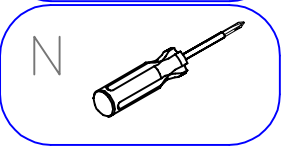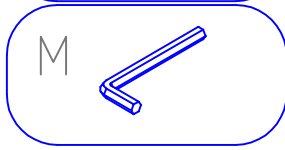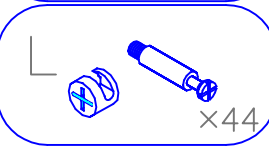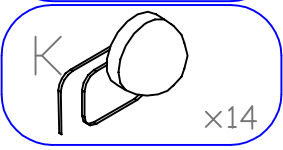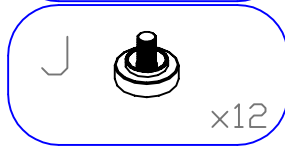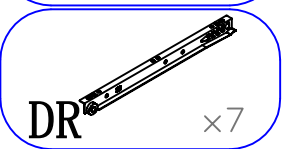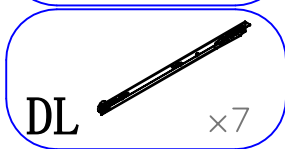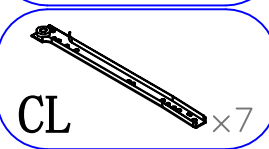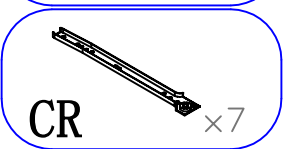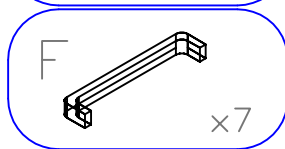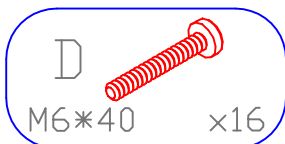




5

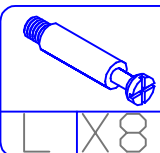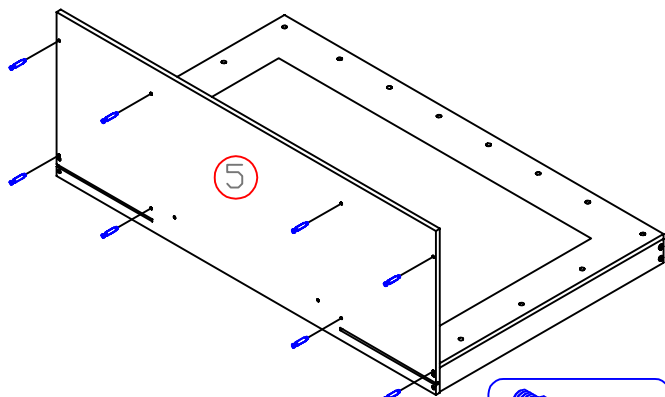






6

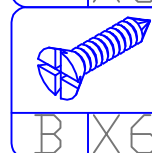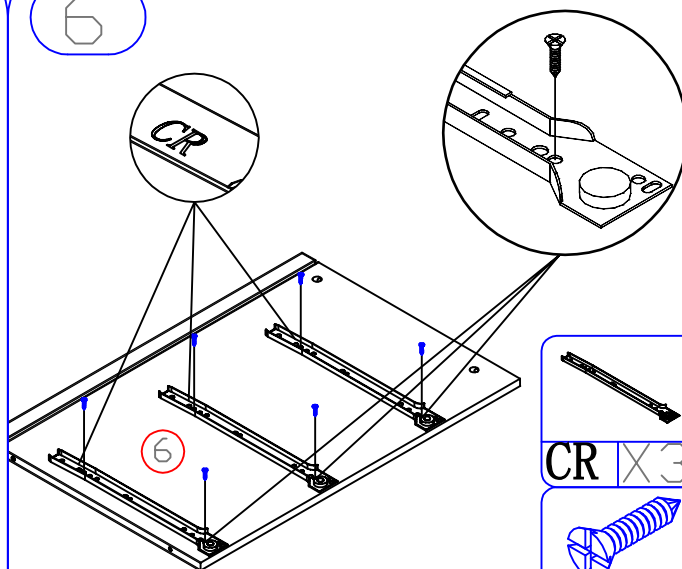







7

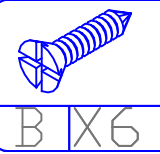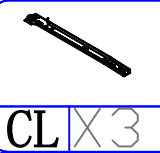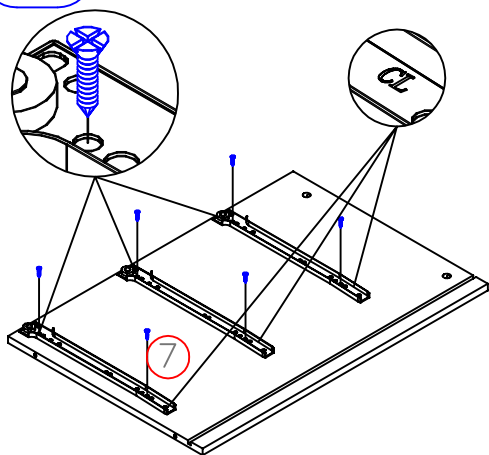




8

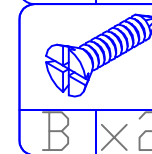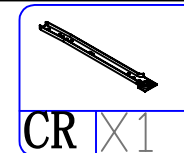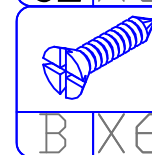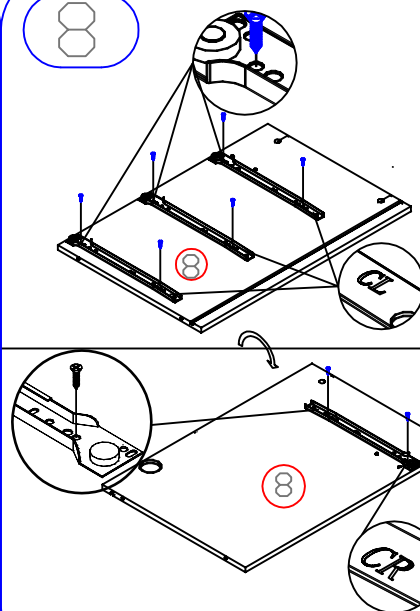



9

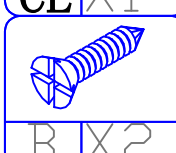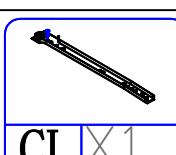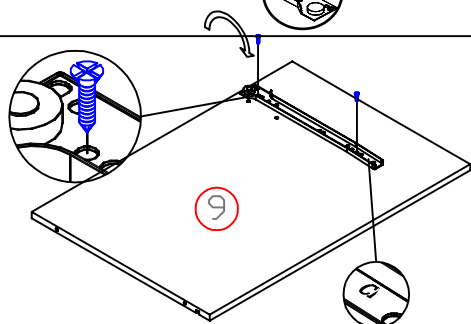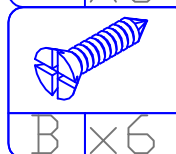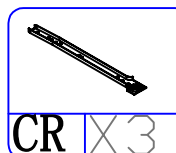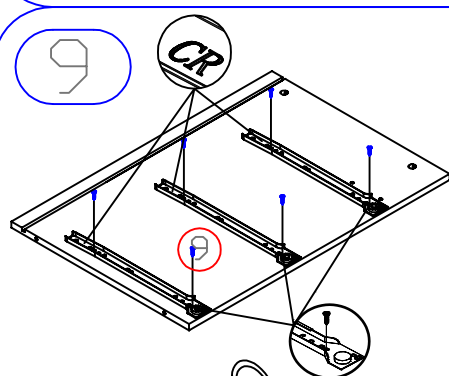



10

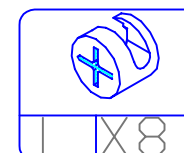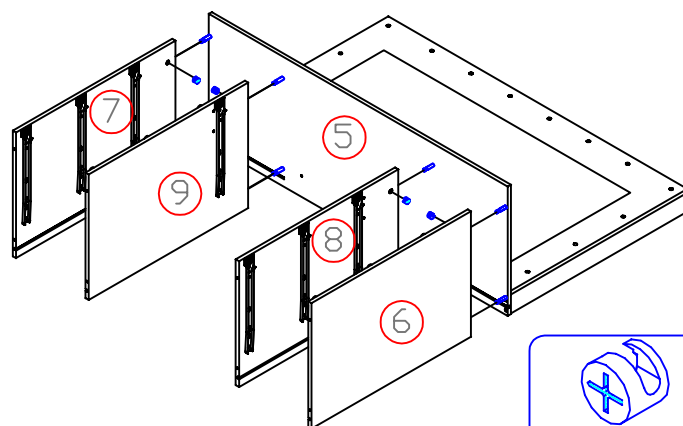



11

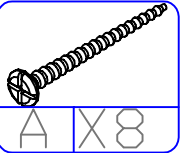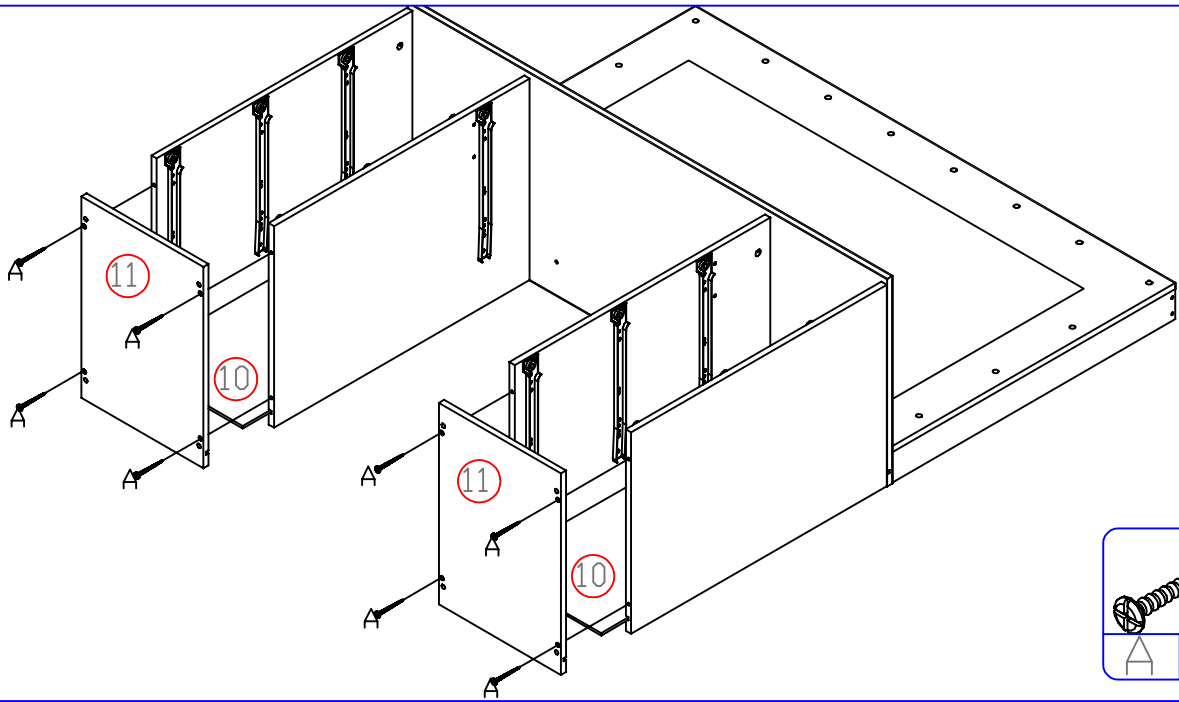



12

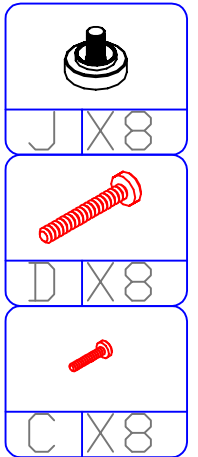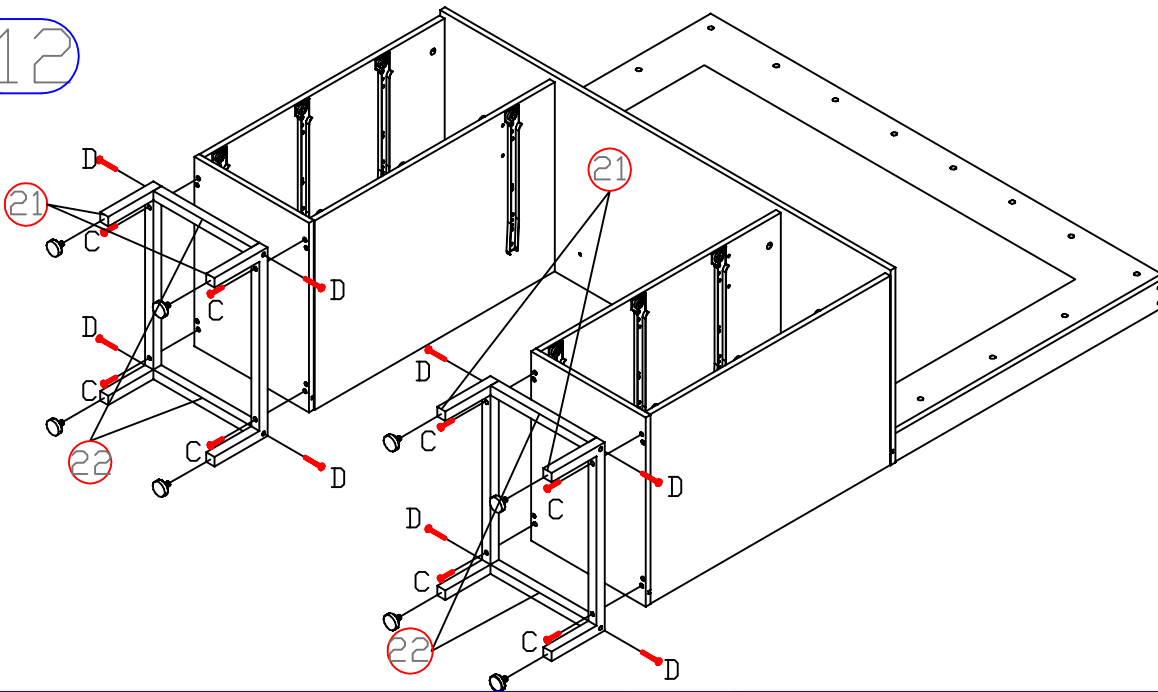


13

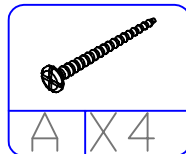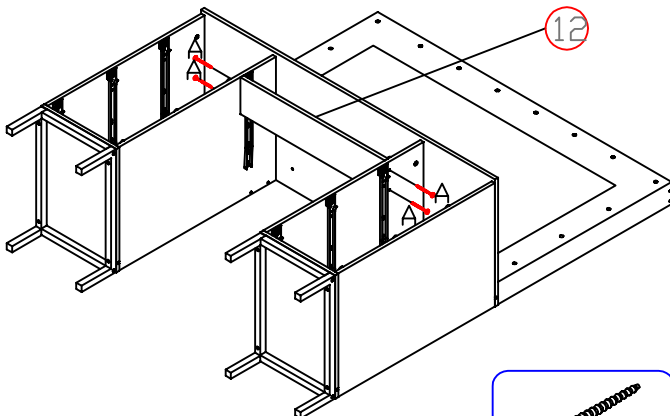


14

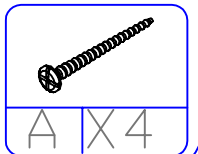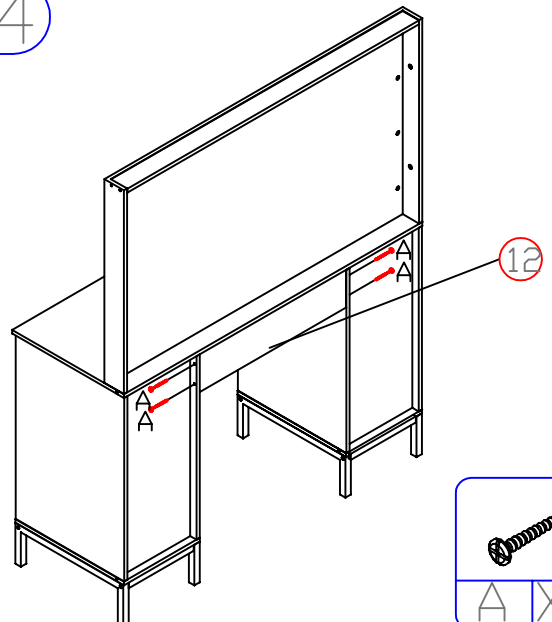

15

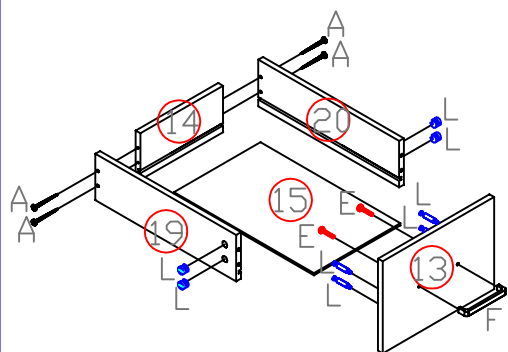

X6



E X12



A X24




L X24



F X6

16

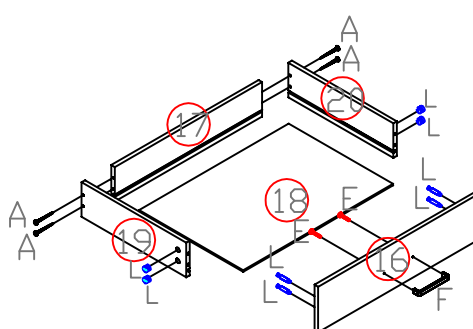


E X2




A X4




L X4



F X1



17

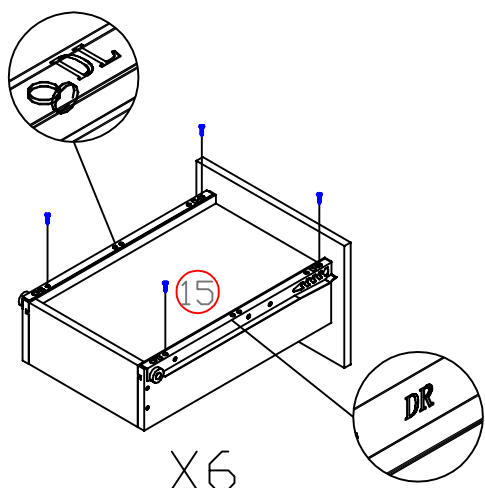

X6



DL X6




DR X6



B X24

18

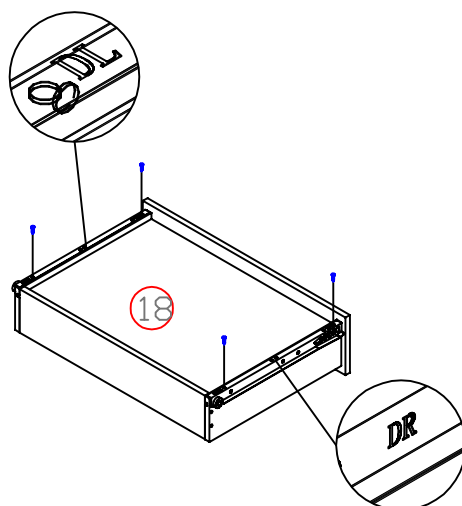

DL X1






DR X1




B X4


19

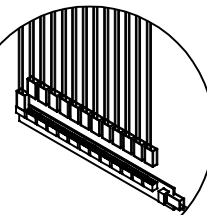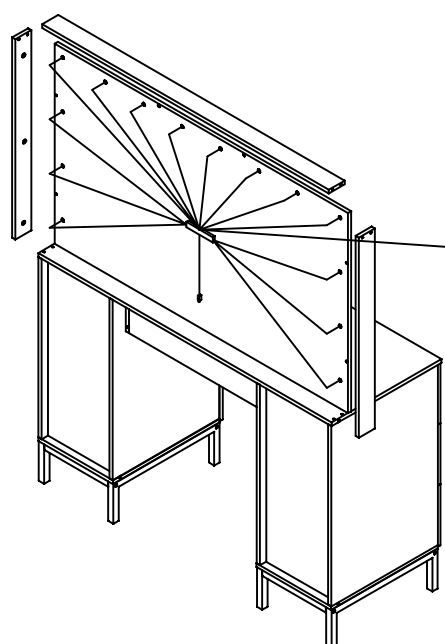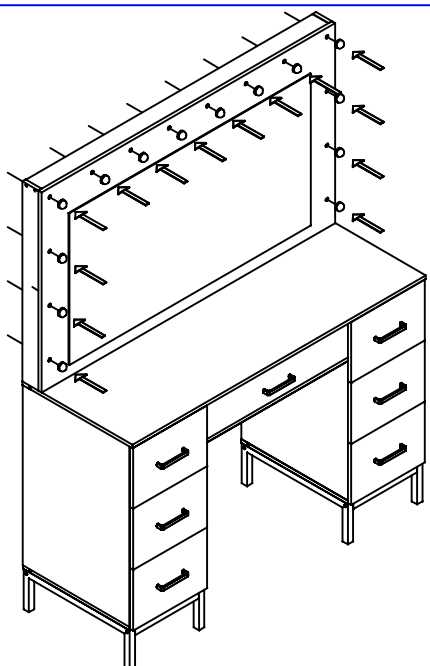

K X14

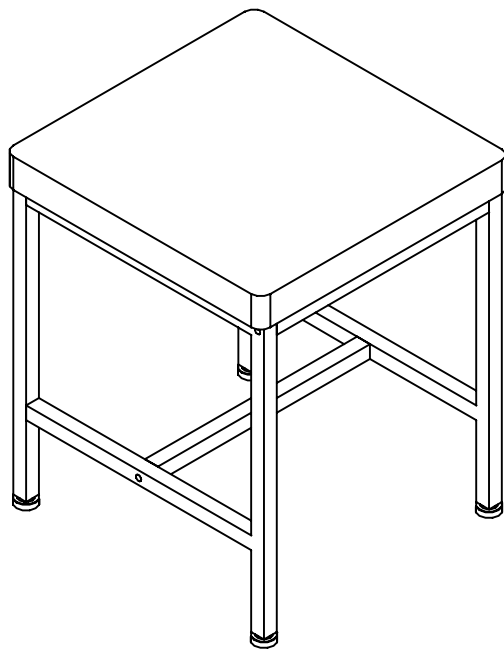


1

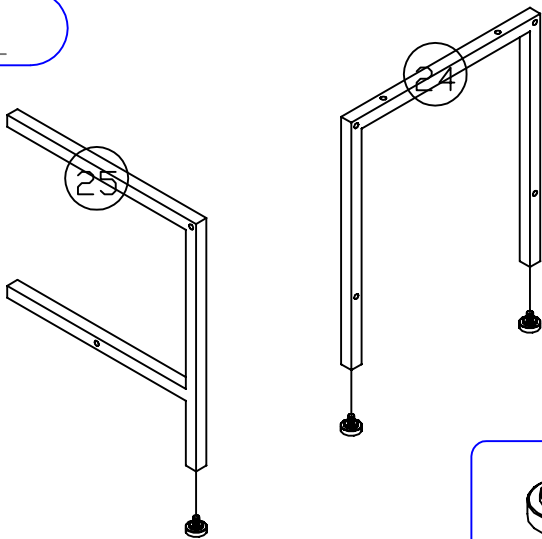


J X 4

2

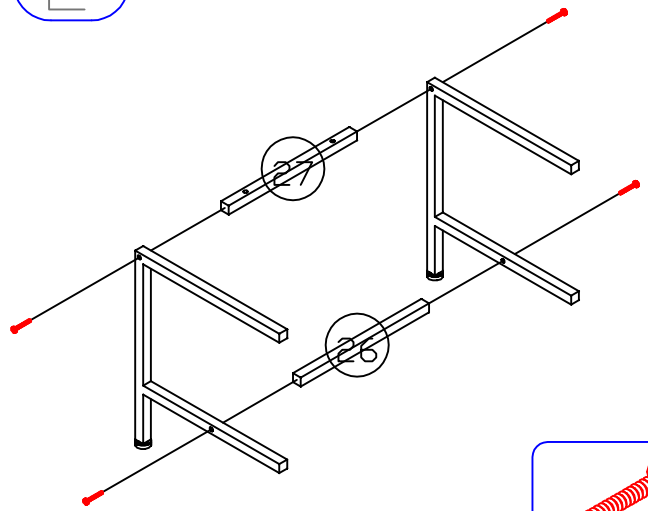


D X 4

3

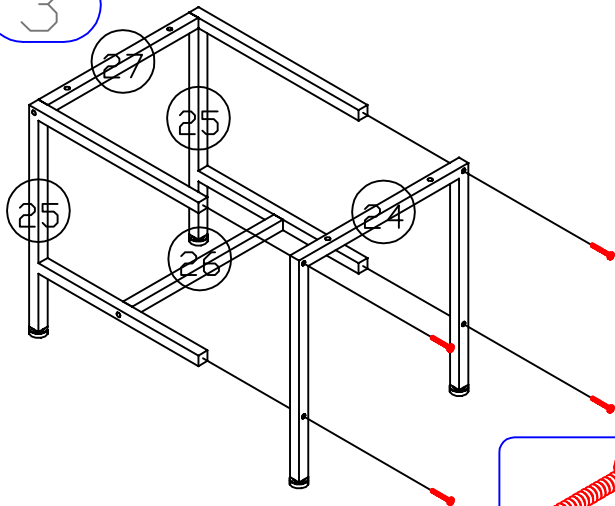

D X 4

4

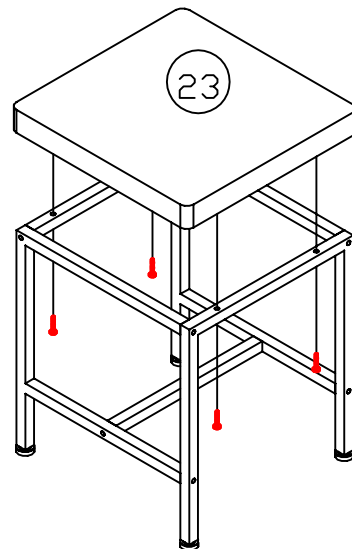

C X 4

Assembling Instruction

Attention: Do not tighten screws until all of them are in right positions

