












Installation instructions

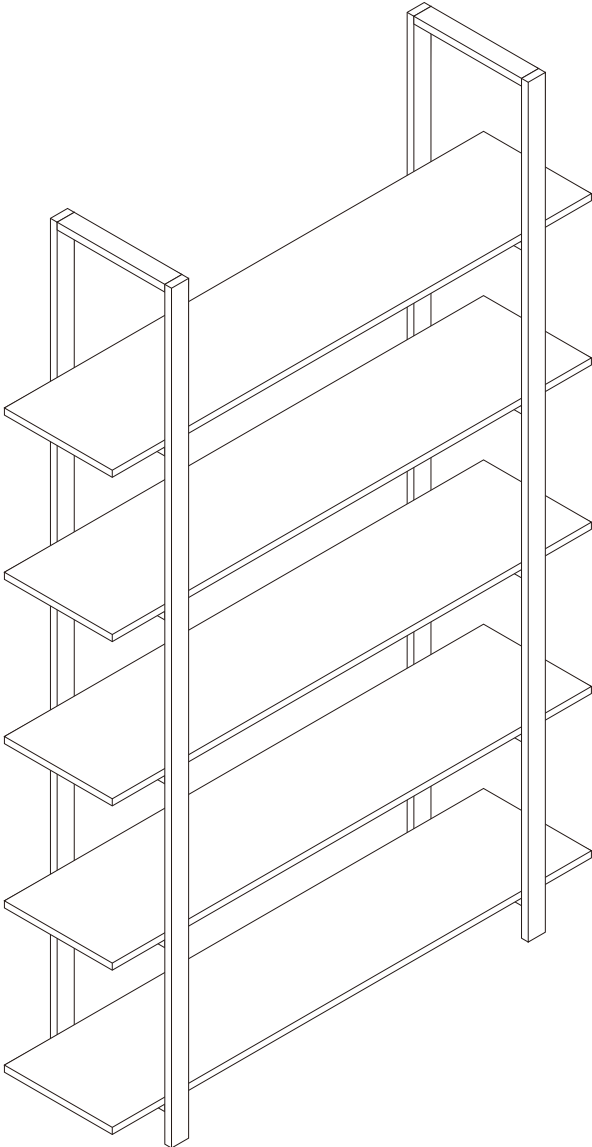


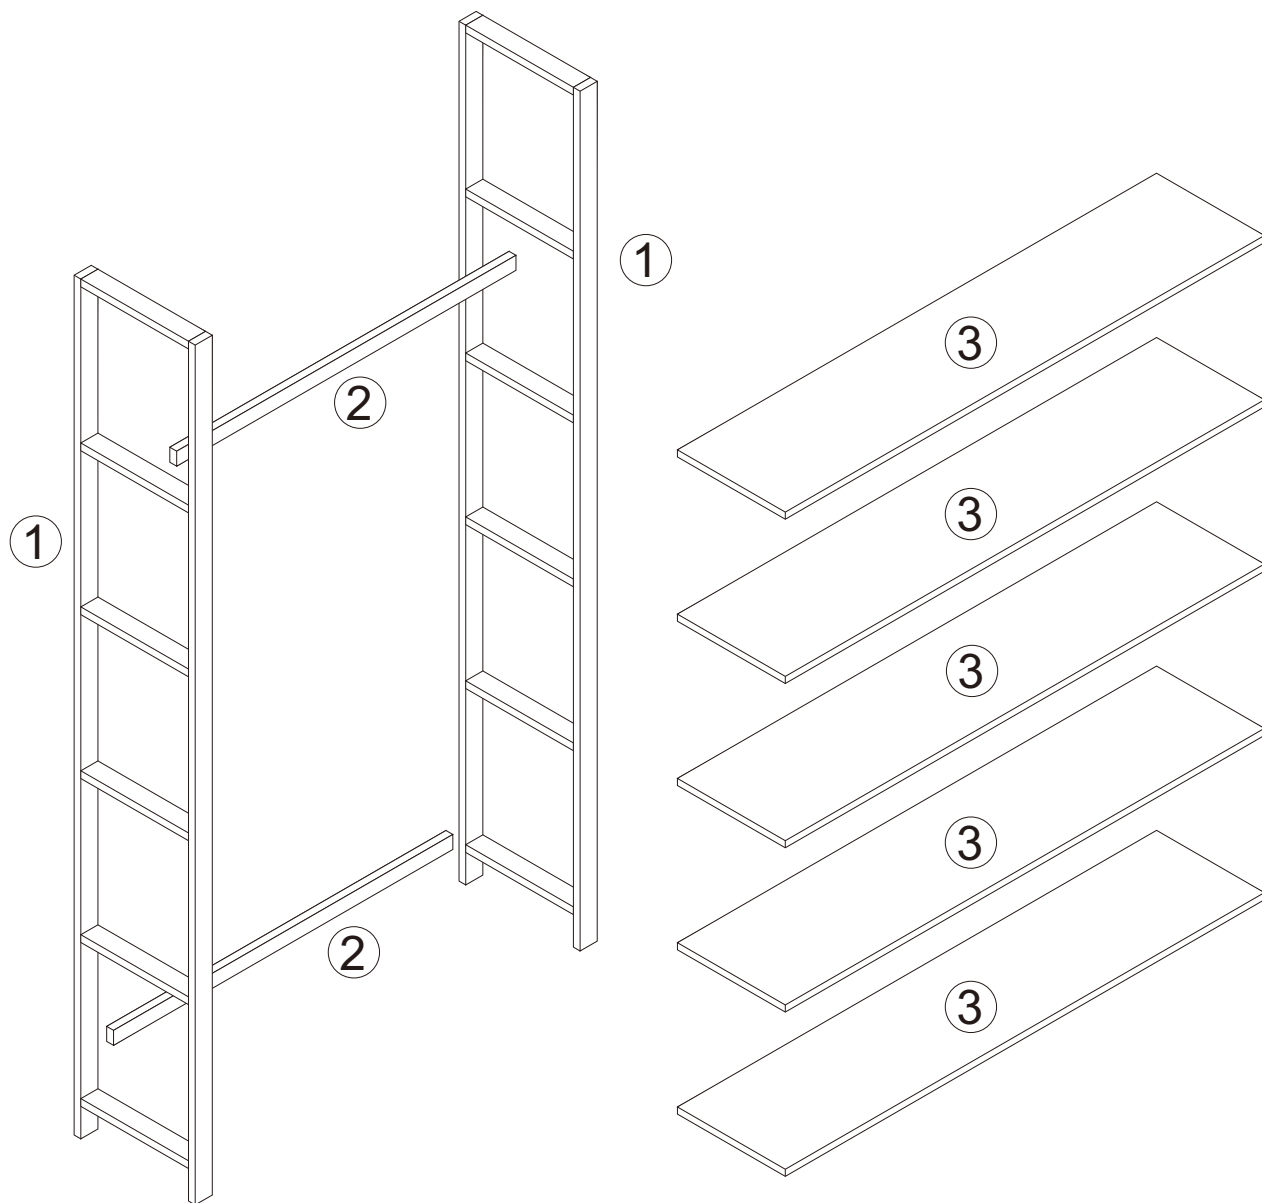


<p>A</p>  <p>8x70mm</p> <p>x4</p>	<p>B</p>  <p>x20</p>	<p>C</p>  <p>6x30mm</p> <p>x20</p>	<p>D</p>  <p>x4</p>	<p>E</p>  <p>x4</p>
<p>F</p>  <p>x1</p>				




01

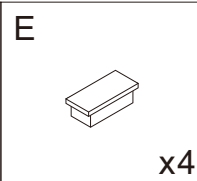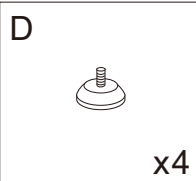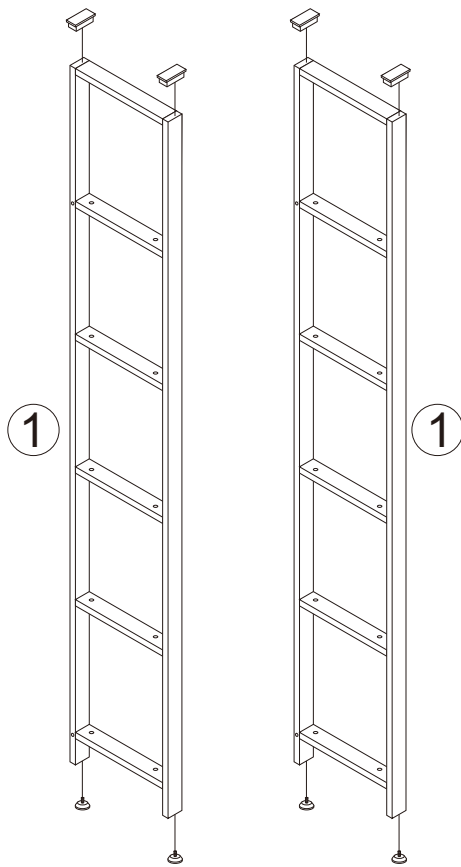


02

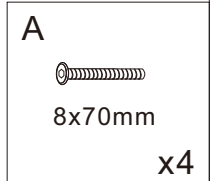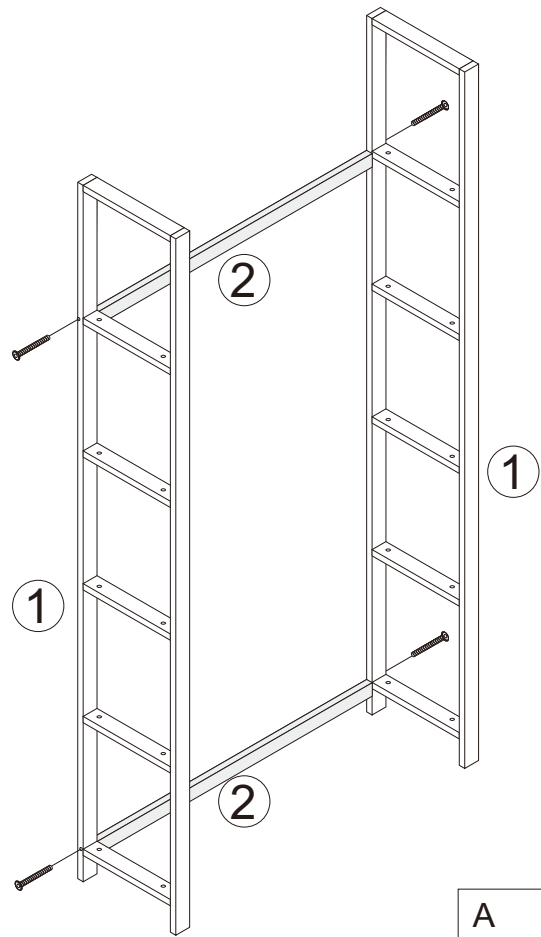

03

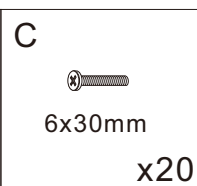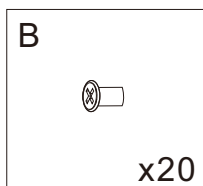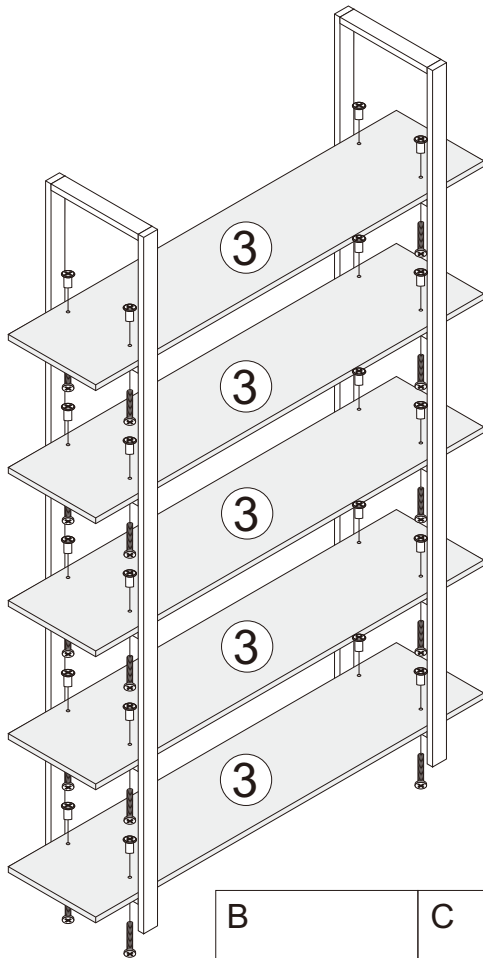

04

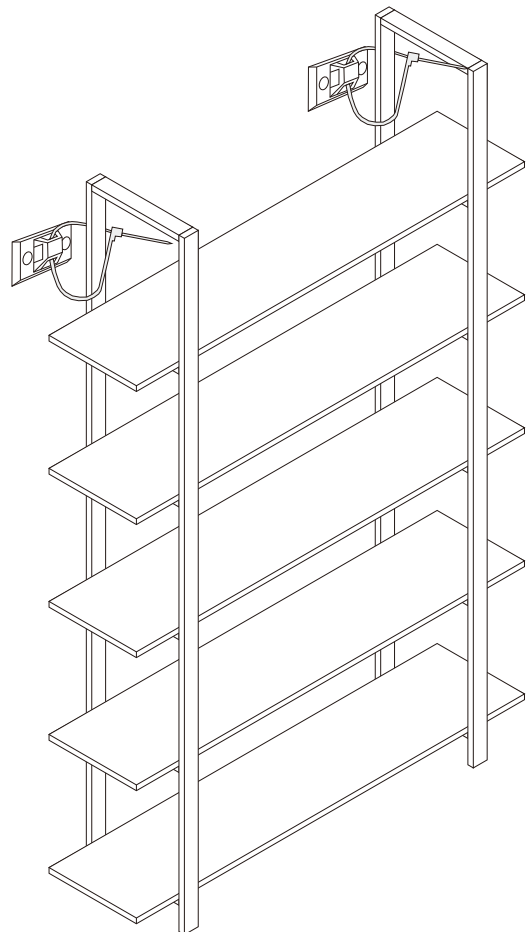


Special instructions for installation



Plastic anchor
M4x30



Nylon Strap
M8x250




Plastic connectors




M4x30


Step 1

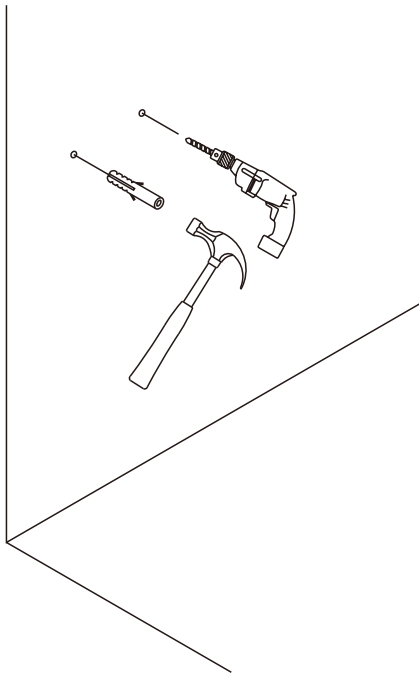

Step 2

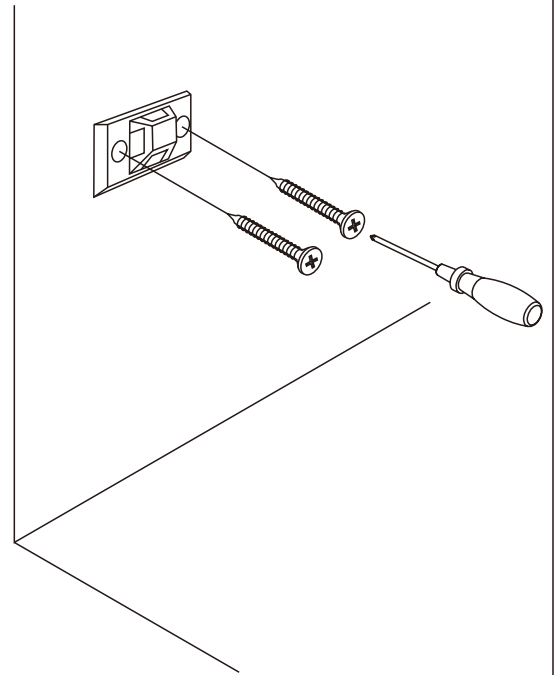

Step 3

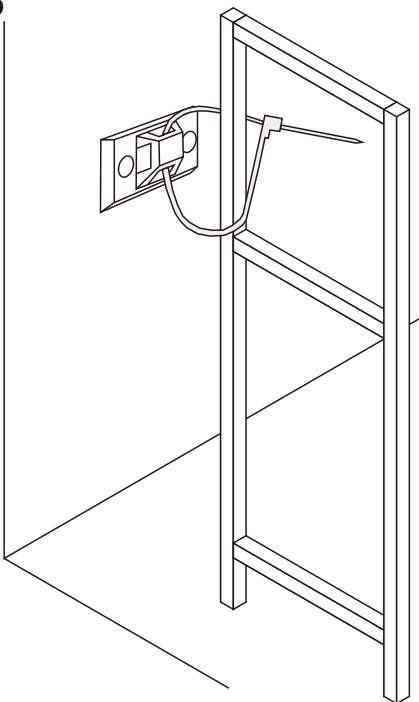

Step 4

