MURPHY BED

FULL

ASSEMBLY INSTRUCTIONS

Before assembling your murphy bed, please read through these instructions carefully and familiarize yourself with the different parts.

Phillips screwdriver

Customer supplied

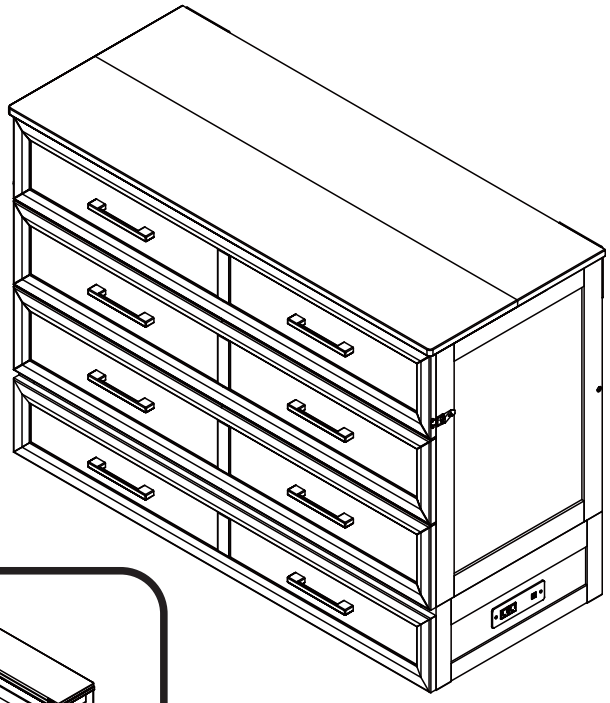

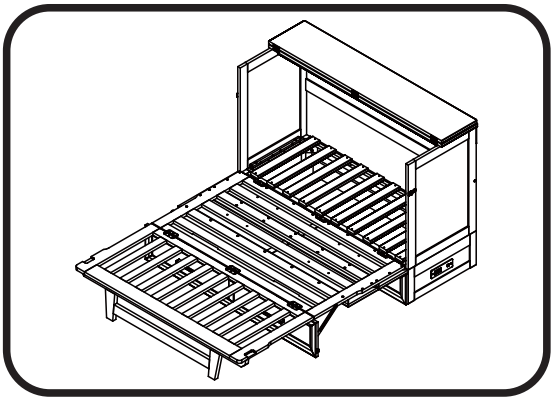

Adult assembly

HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

A JCB M6 X 30mm (1 1/4") - 12 pcs
Spare - 1 pc

B JCB M6 X 55mm (2 1/8") - 2 pcs
Spare - 1 pc



C JCB M8 X 55mm (2 1/8") - 8 pcs
Spare - 1 pc

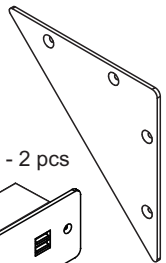

G Triangle Bracket - 2 pcs

D Wood screw 3/4" - 17 pcs
Spare - 1 pc



E Wood screw 1 1/4" - 2 pcs
Spare - 1 pc

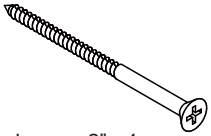

F Wood screw 2" - 4 pcs
Spare - 1 pc

H Barrel Nut - 2 pcs
Spare - 1 pc

I Flat Washer - 8 pcs
Spare - 1 pc

J Cable Fastener - 1 pc
Set with Screw

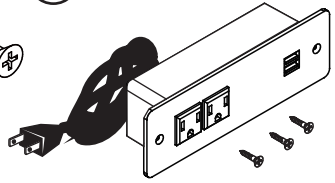

K Surface Mount Charger - 1 set
Screw 1/2" - 2 pcs
Spare - 1 pc

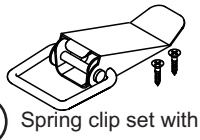

L Spring clip set with screw - 2 pcs

M Wood dowels 8 x 30mm - 10 pcs
Spare - 2 pcs

N JCB M6 X 25mm (1") - 4 pcs
Spare - 1 pc

O Allen wrench M5 - 1 pc



P Allen wrench M4 - 1 pc
Spare - 1 pc

FULL

PARTS LIST

01	HARDWARE	
02	SMC	
03	LEFT SIDE PANEL	
04	RIGHT SIDE PANEL	1 BOX C-7632X
05	BASE	
06	LEFT FRONT LEG RIGHT REAR LEG	
07	LEFT REAR LEG RIGHT FRONT LEG	
08	L PANEL LEFT	
09	L PANEL RIGHT	
10	L BOTTOM RAIL	
11	DRAWER FACE	
12	DRAWER BACK	
13	DRAWER SIDE	
14	DRAWER PANEL	
15	DRAWER PANEL SUPPORT	
16	BACK RAIL	1 BOX C-7633X
17	BACK PANEL	
18	TOP PANEL	
19	FOLDING PANEL	1 BOX C-7631X
20	FOLDING MATTRESS	1 BOX

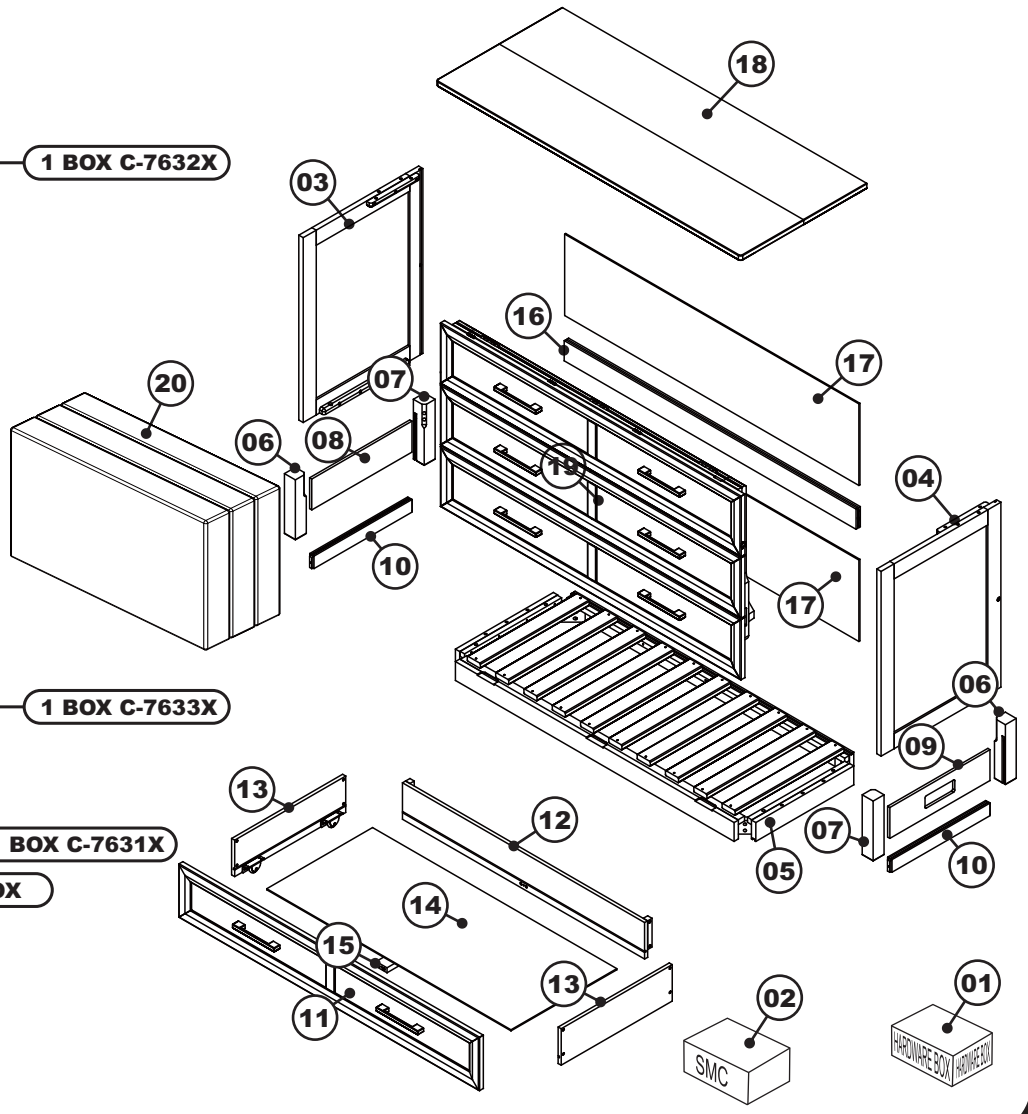

STEP 1 Insert wood dowels (M) to the side panels(03)(04) as shown below. Install spring clip (L) set with screw to side panels (03)(04). Tighten with phillips head screwdriver. Customer supplied. Attach left side panel (03) and right side panel (04) to the base (05) as shown below. Use JCB (A).Tighten with Allen wrench M4 (P).

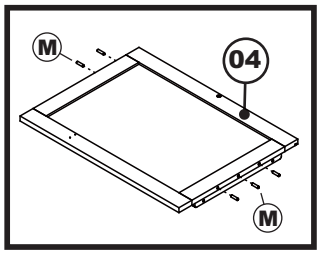

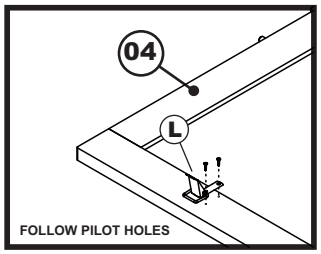

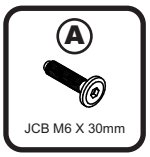

STEP 2 Guide the back panel (17) and back rail (16) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the back rail before fitting the top panel. Use JCB (B) and barrel nut (H). Tighten with allen wrench M4 (P).

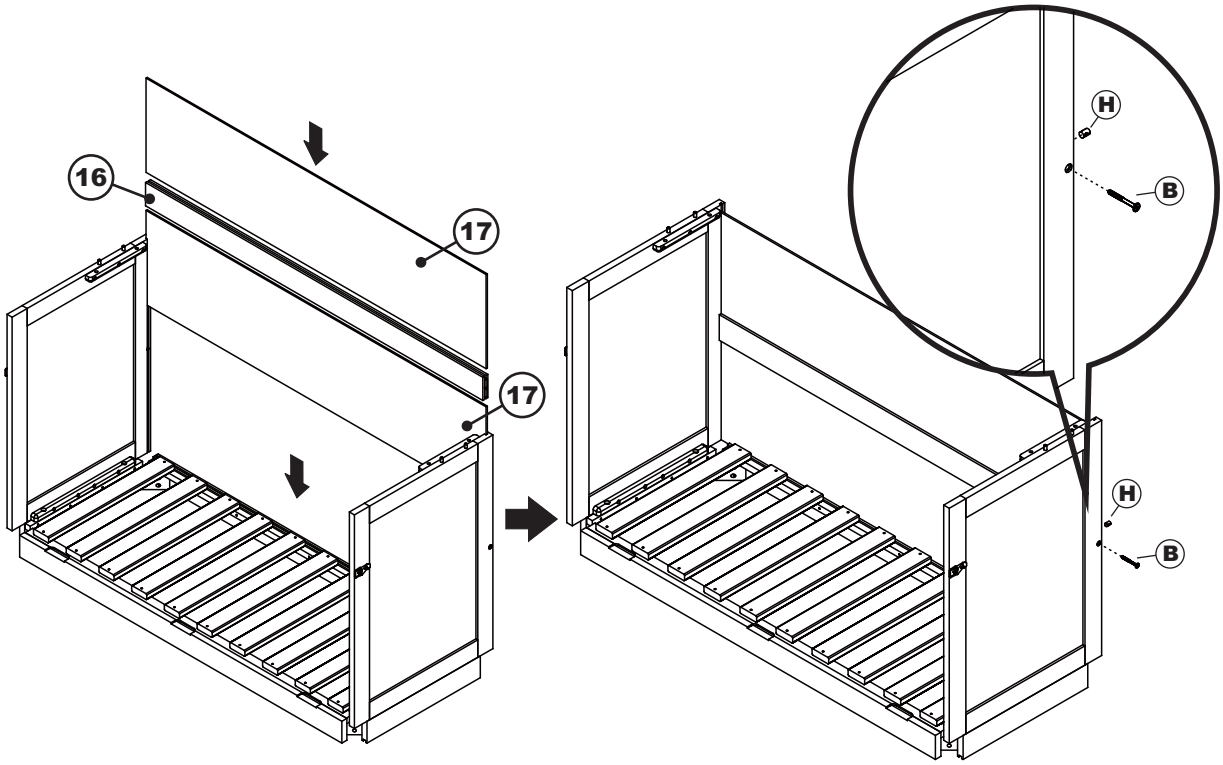

STEP 3 Attach top panel (18) to cabinet assembly as shown below. Use JCB (N). Tighten with Allen wrench M4 (P)

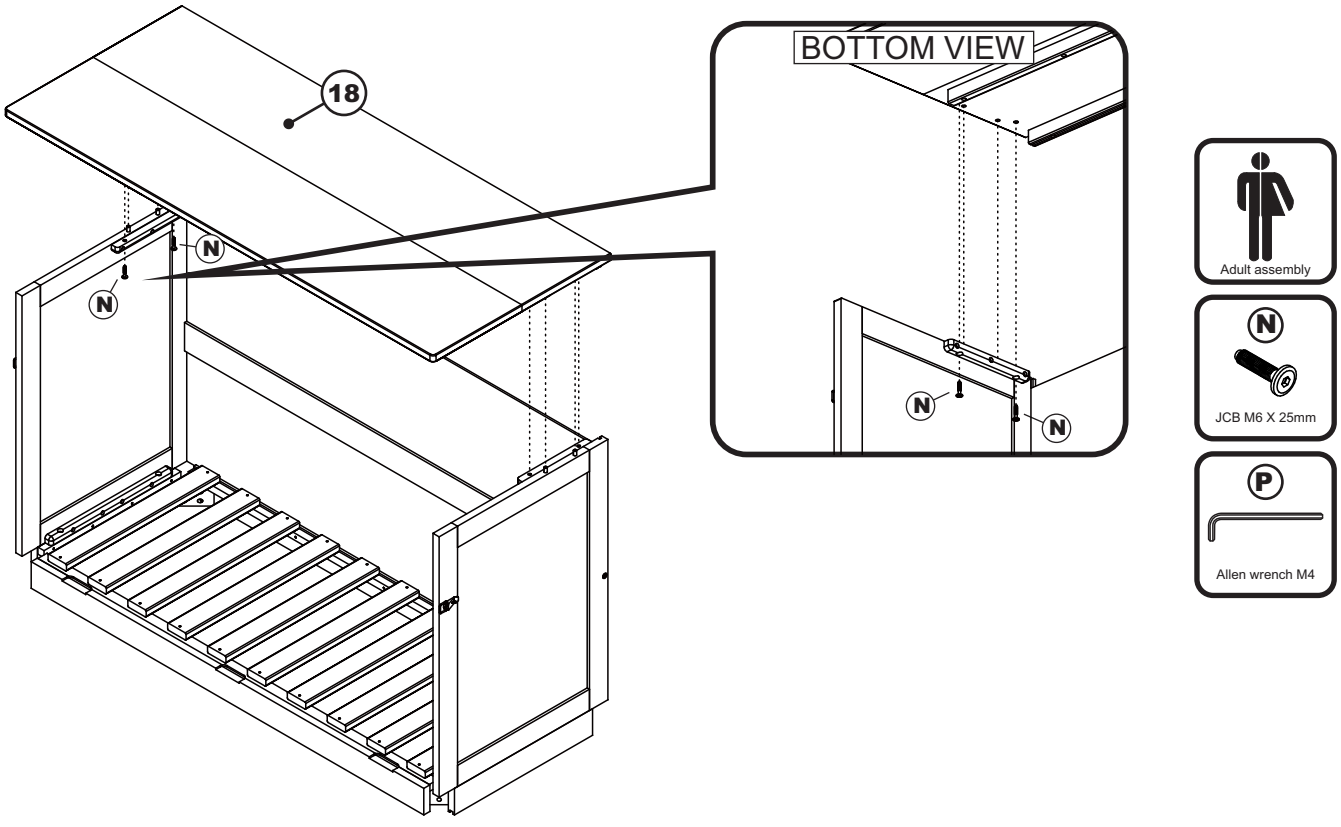

STEP 4 Attach legs (06)(07) to cabinet assembly as shown below. Use flat washer (I) and JCB M8 (C).Tighten with Allen wrench M5 (O)

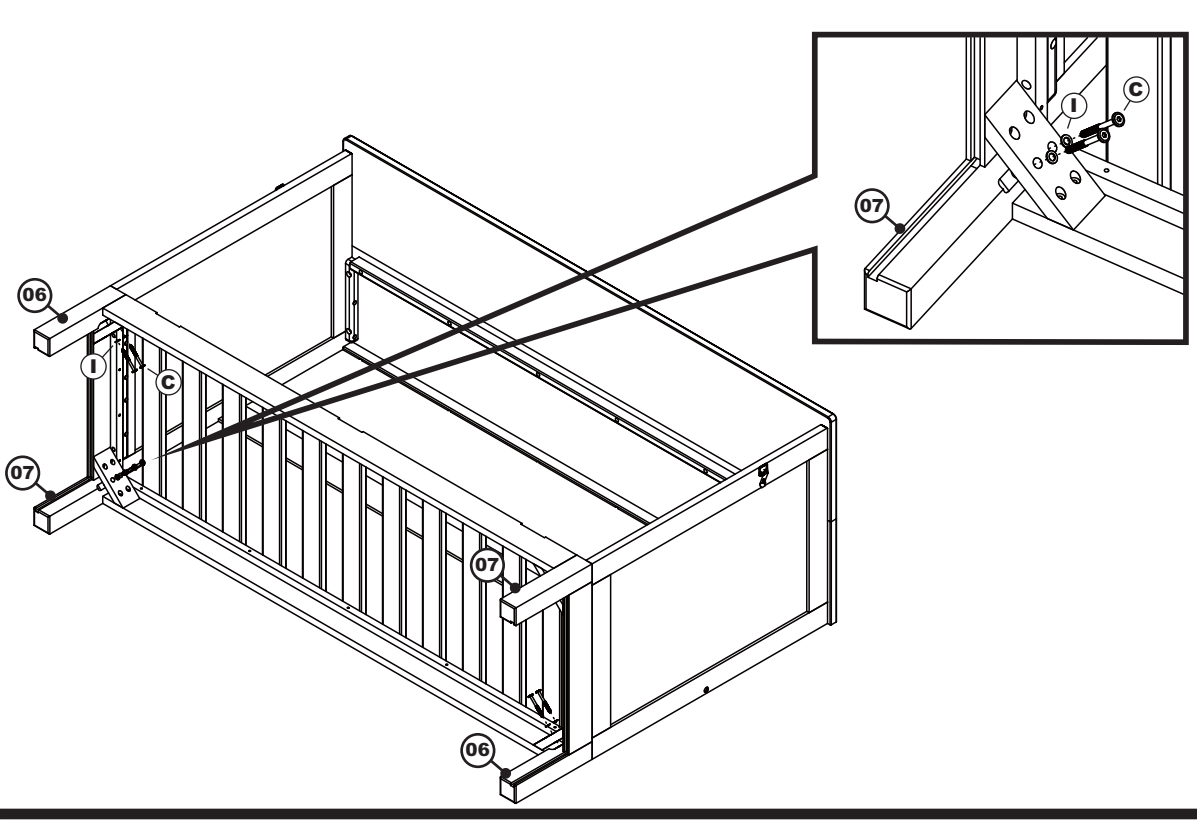

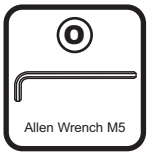

STEP 5 Guide the L panel (08)(09) and L bottom rail (10) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the base rail before fitting the L bottom rails (10). Use wood screw (F). Tighten with Phillips head screwdriver. (Customer supplied)

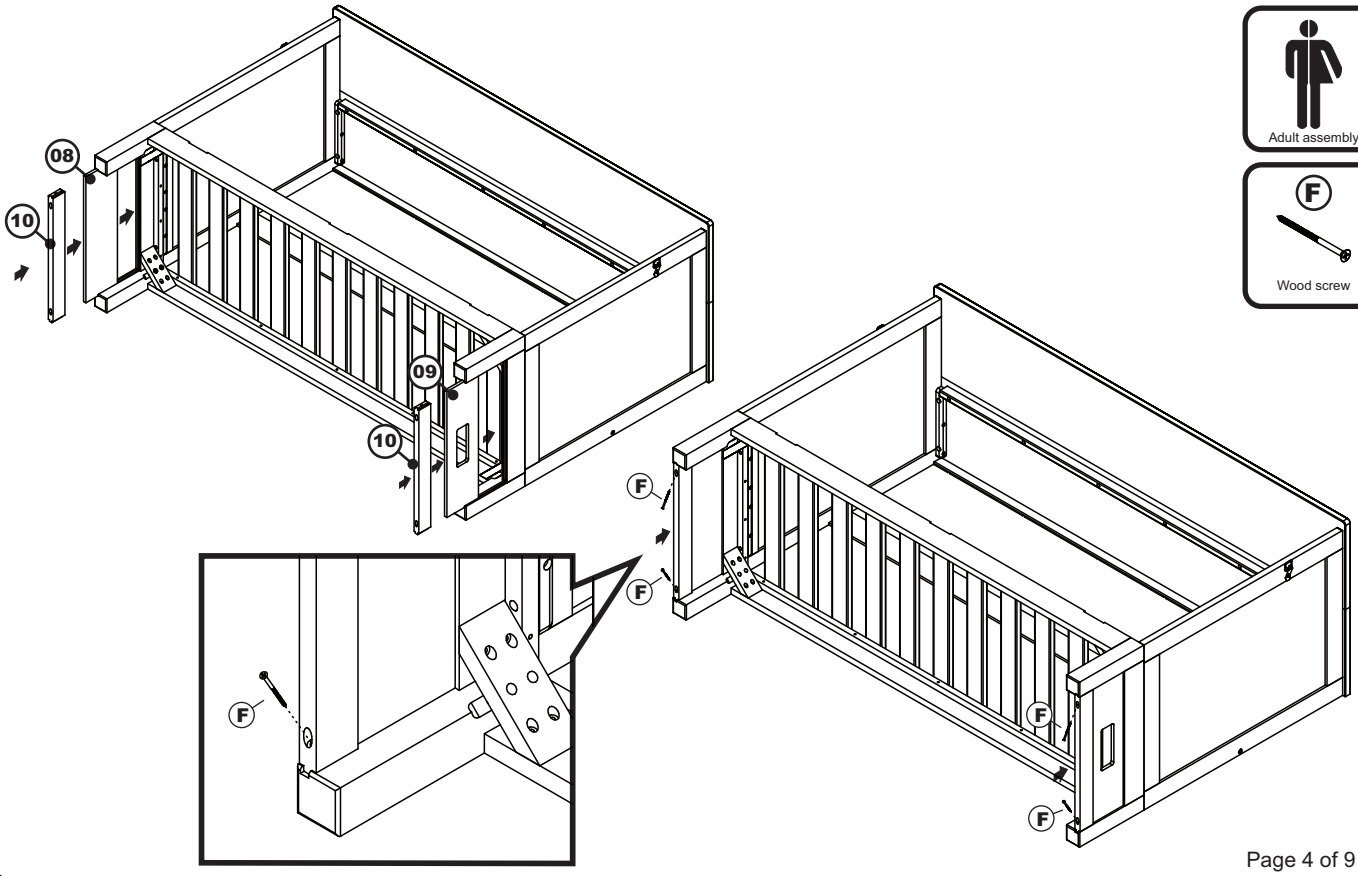

STEP 6 Open top drawer folding leg as shown below. Using metal support and lock to the post.(both side)

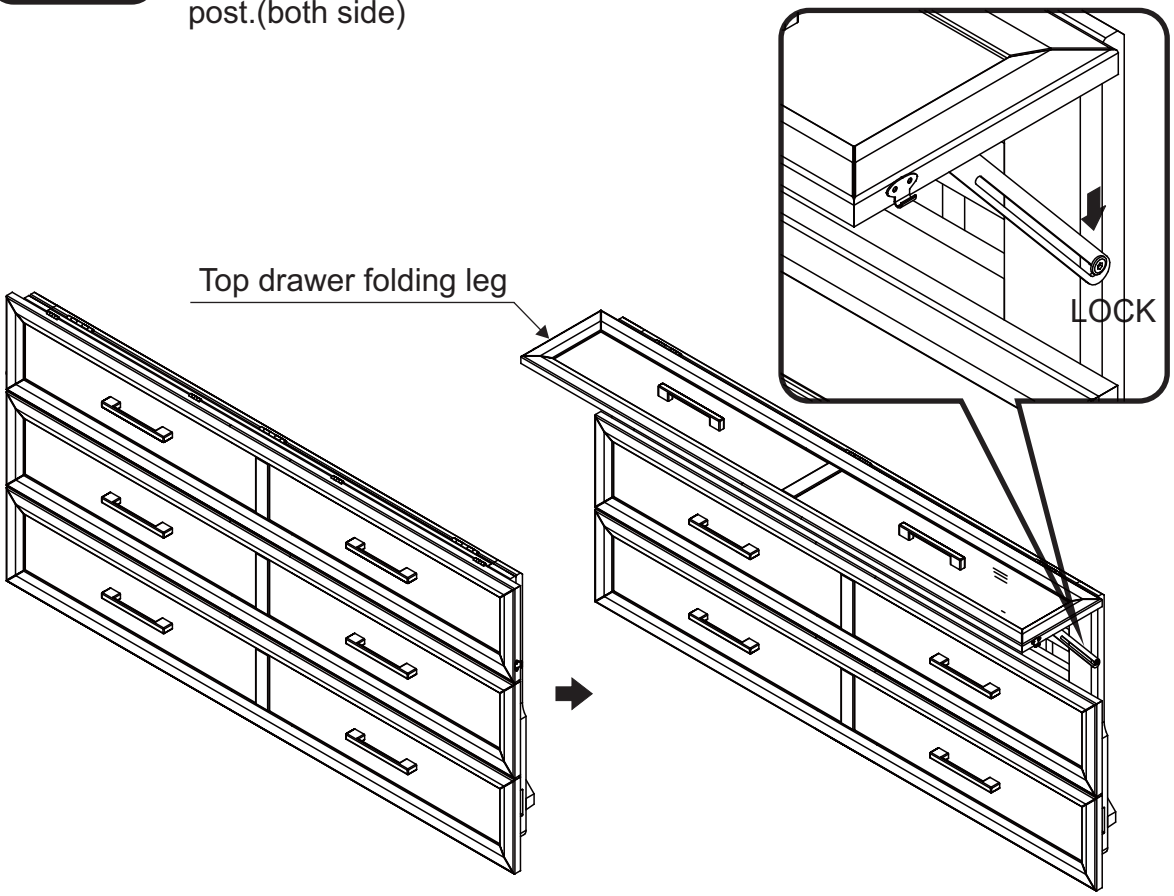

STEP 7 Attach folding panel assembly (19) to cabinet assembly as shown below. Use wood screw (D). Tighten with Phillips head screwdriver. Customer supplied.
Be sure to align with cabinet.

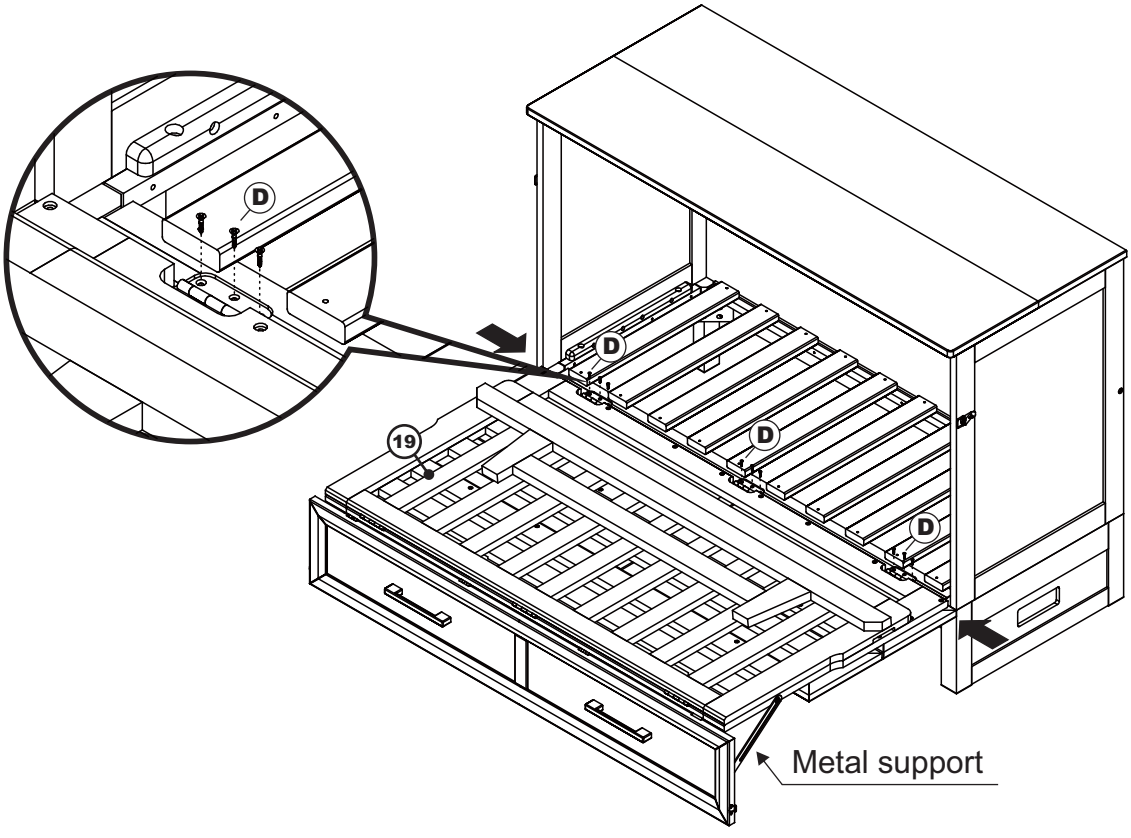

STEP 8 Unlock metal support. Lift the door and latch to side panel. Push the door closed and latch both sides as shown below.

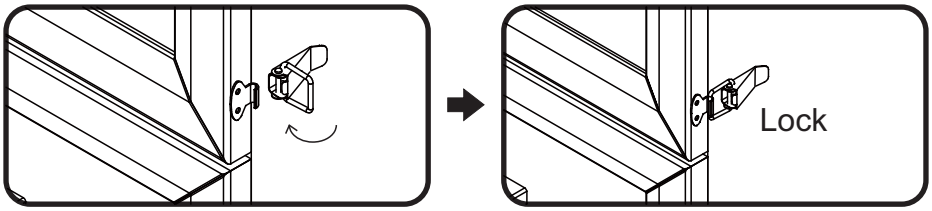

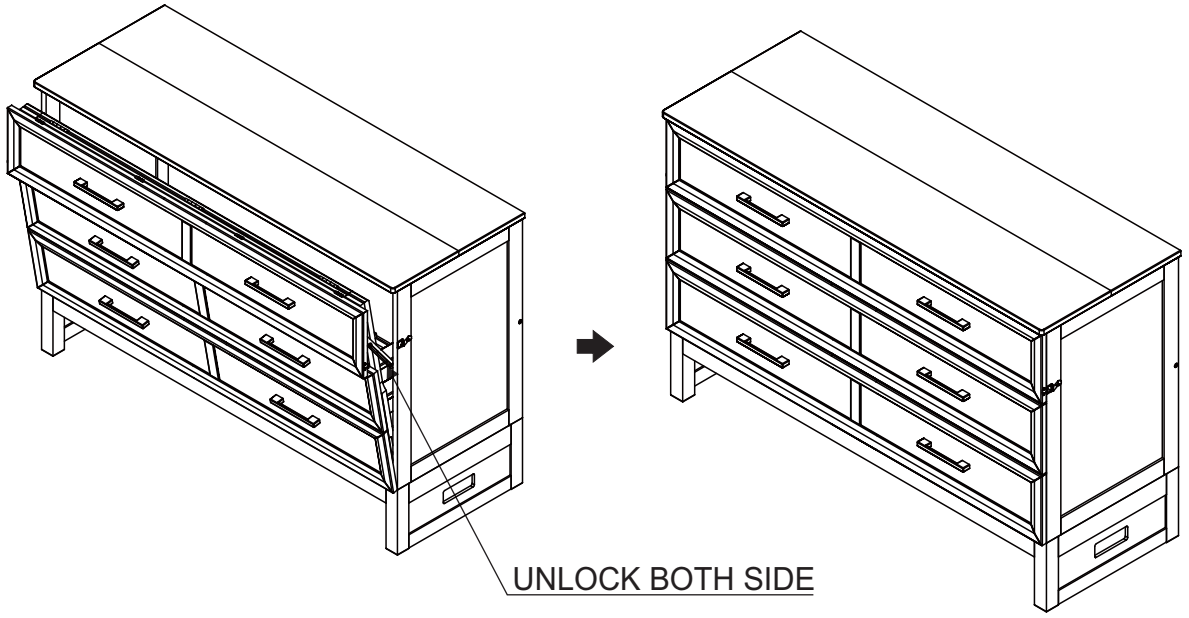

STEP 9 Attach triangle bracket (G) to the back of cabinet as shown below. Use wood screw (D) tighten with Phillips head screwdriver. (customer supplied).

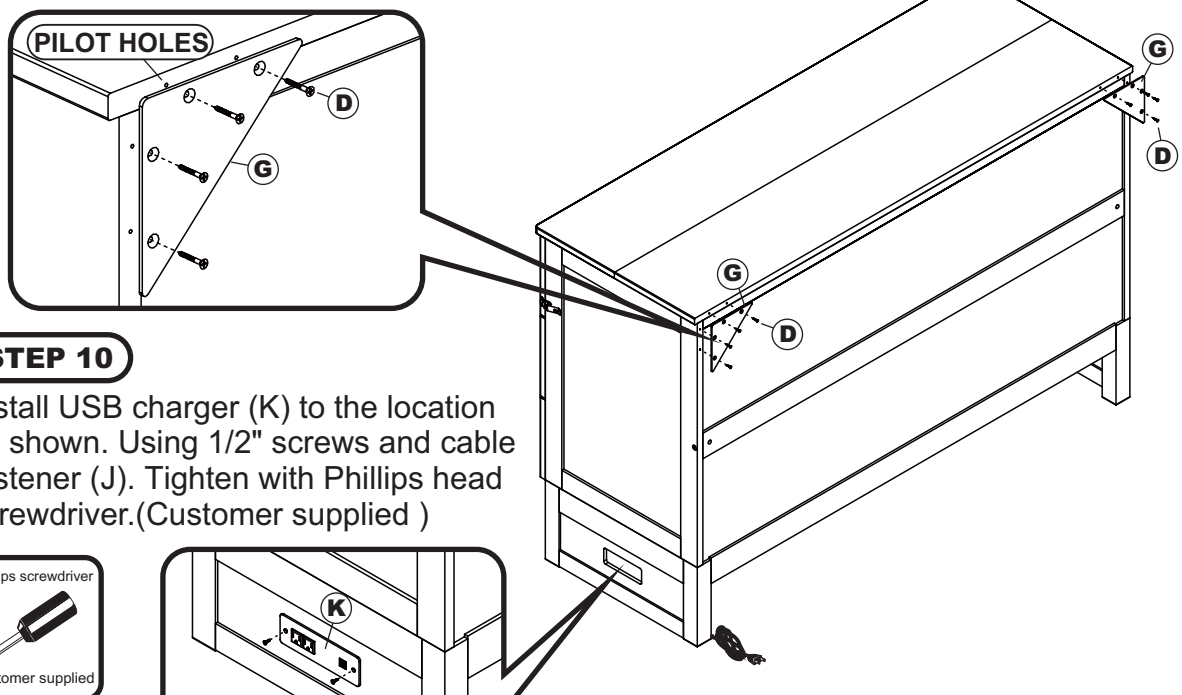

STEP 10

Install USB charger (K) to the location as shown. Using 1/2" screws and cable fastener (J). Tighten with Phillips head screwdriver.(Customer supplied)

STEP 11 Lay the drawer face (11) on smooth, flat surface so the groove is facing upwards. Fit the drawer side (13) to drawer face (11), Use JCB (A), align groove inside panel with groove in drawer face. Tighten with Allen wrench M4 (P).

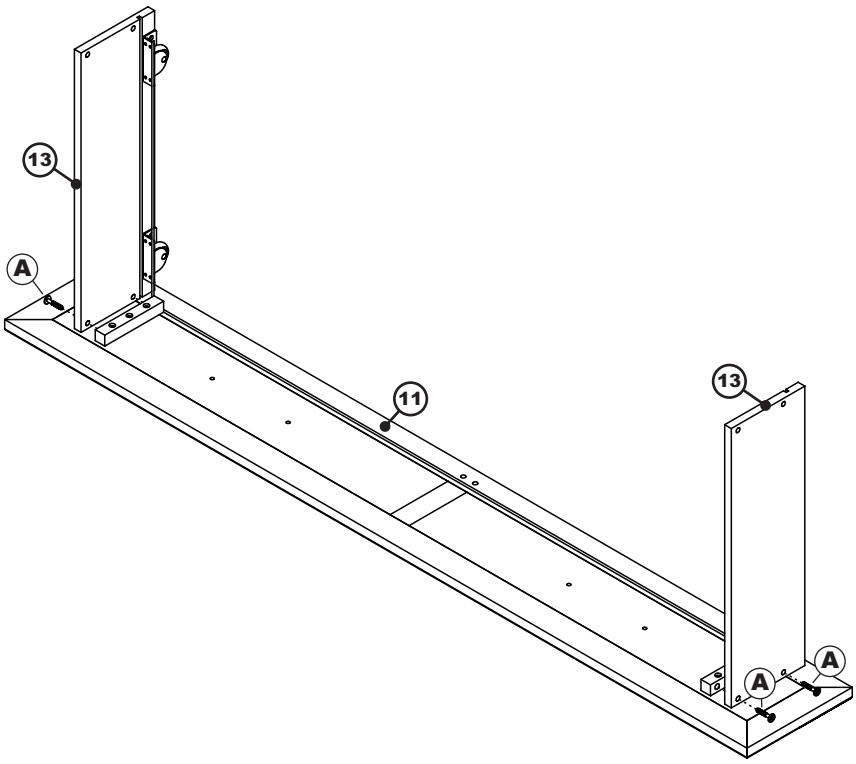

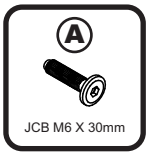

STEP 12 Guide the drawer panel (14) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom (in the drawer face) before fitting the drawer back. Attach drawer panel support (15) to the locator holes as shown below.

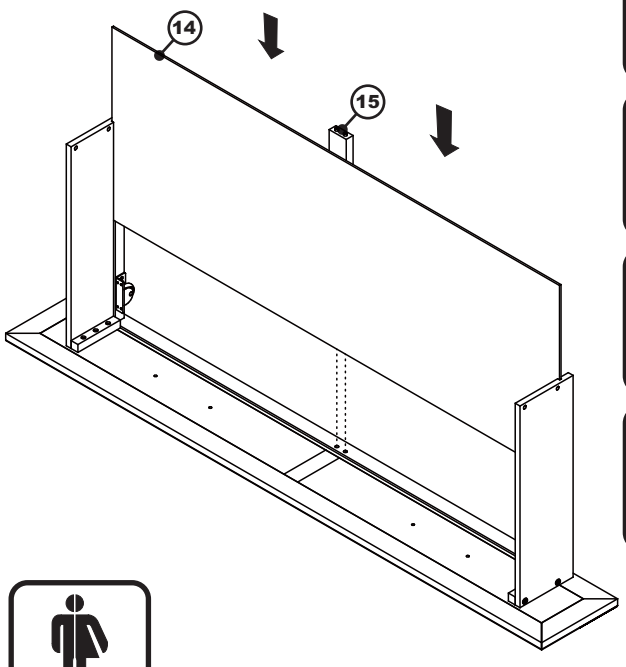

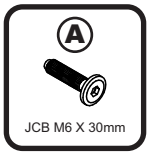

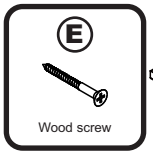

STEP 13 Attach drawer back (12) to drawer assembly as shown. Use JCB M6 (A) and wood screw (E) Tighten with Allen wrench M4 (P) and Phillips head screwdriver. Customer supplied.

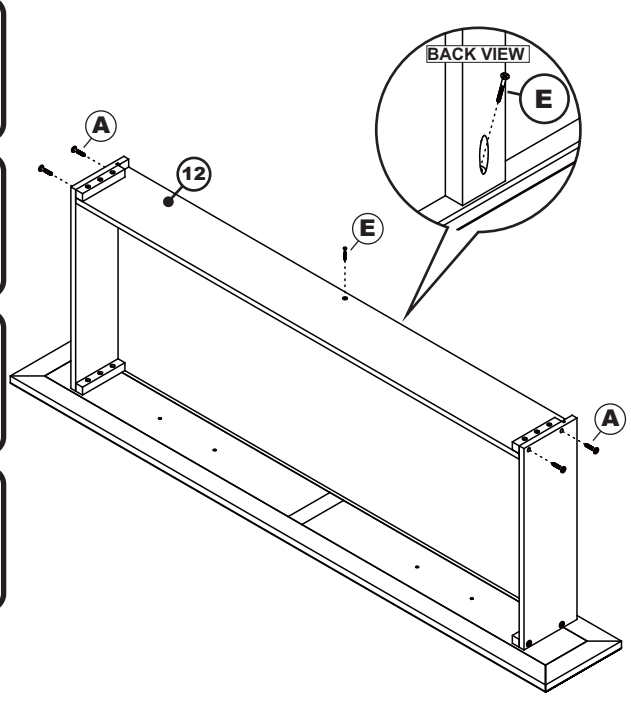

STEP 14 Move the murphy bed assemblies where you want to place them in the room. Insert drawer assembly to the murphy bed assembly as shown below.

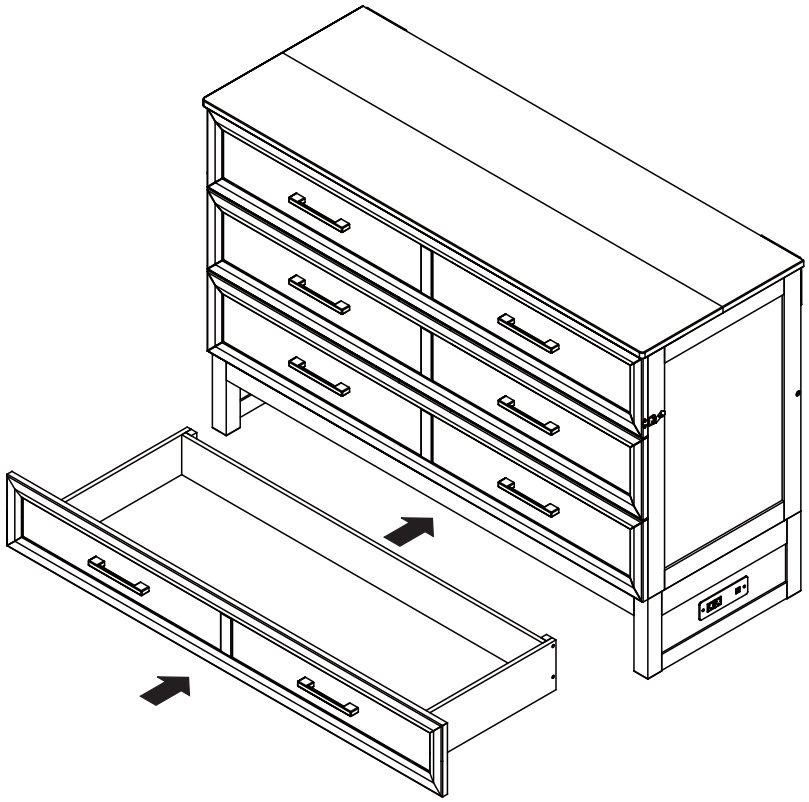

STEP 15 Unlatch the door and open, folding down and lock metal support to the post as shown.

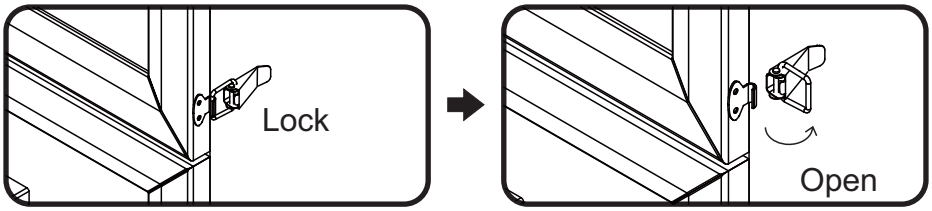

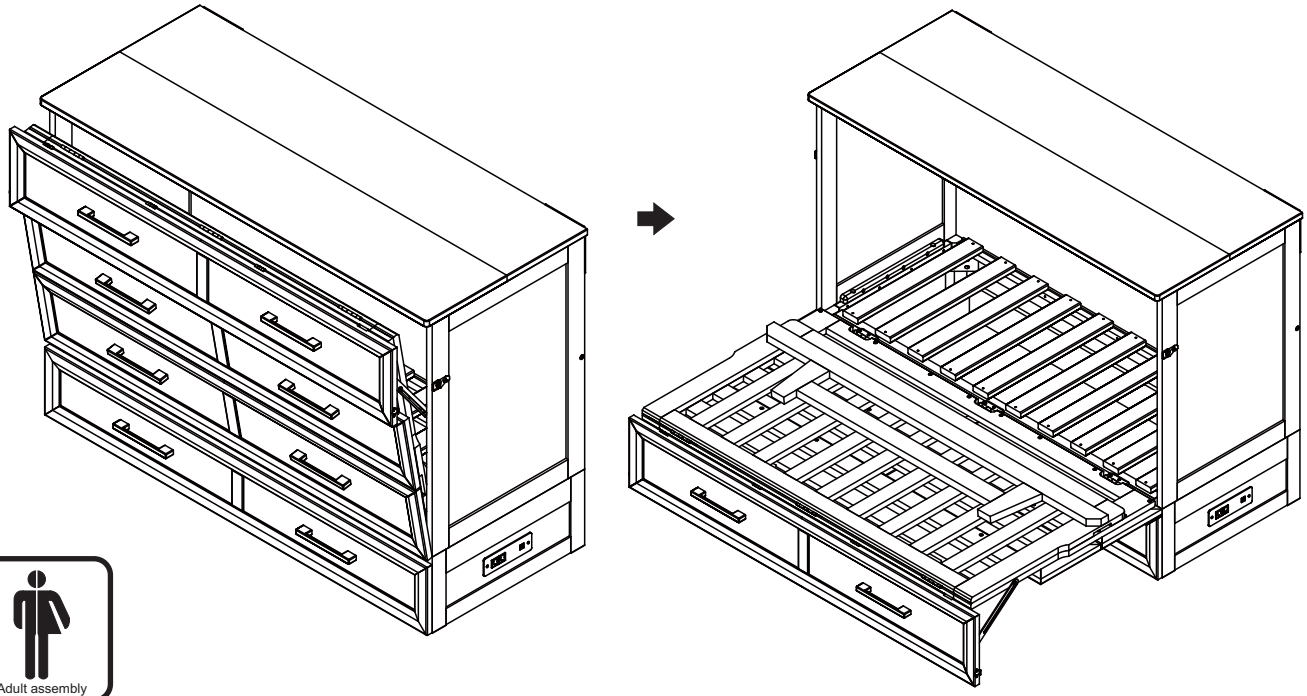

STEP 16 Open and pull footboard frame and open footboard leg as shown below.

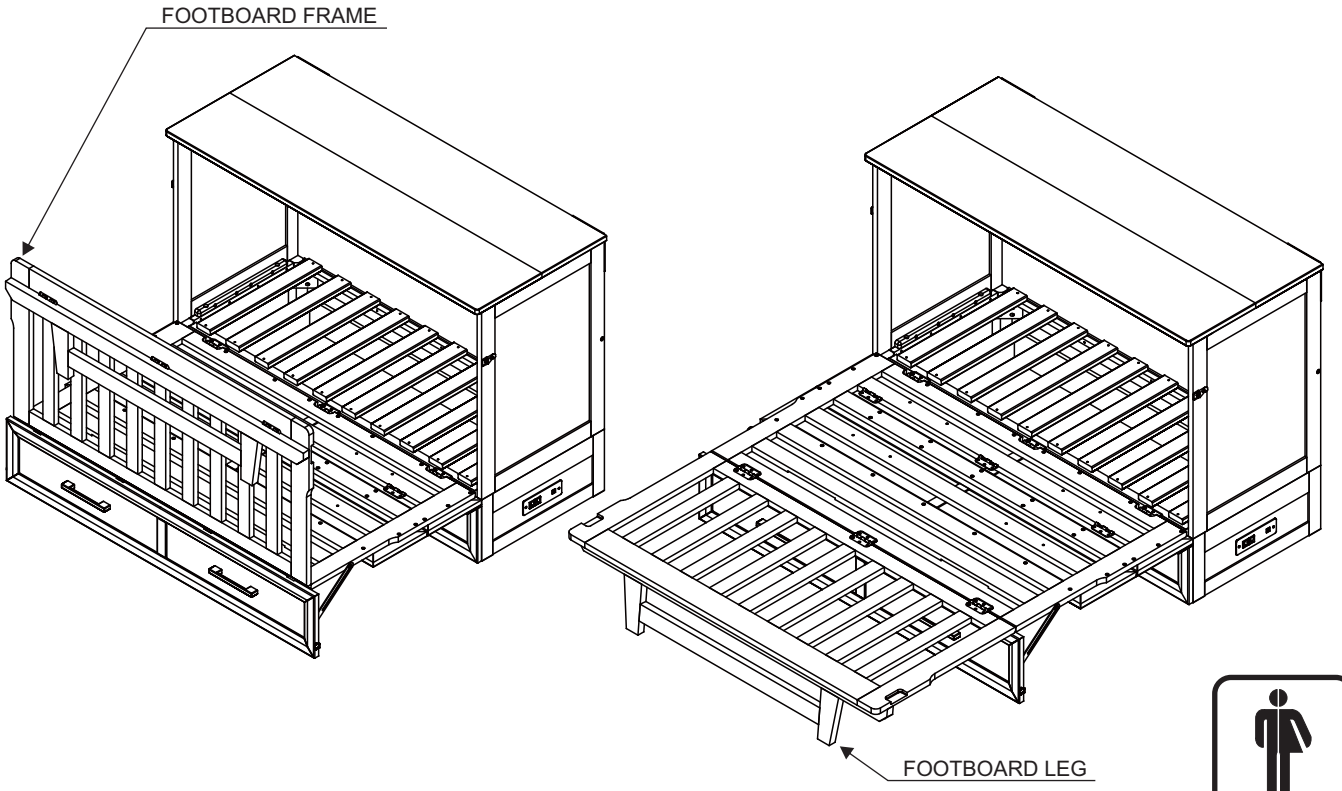

Adult assembly

STEP 17 Install folding mattress (20) to the bed. Open top panel as shown below.

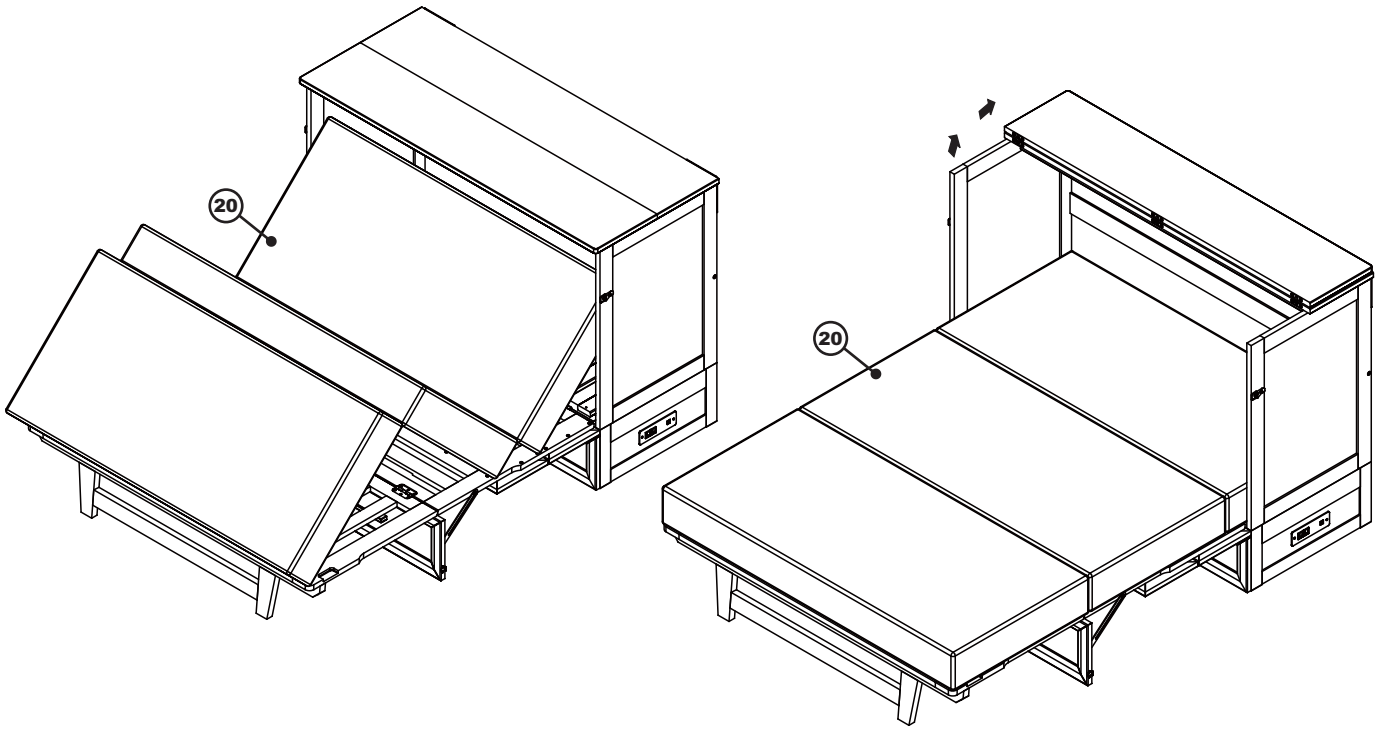

Adult assembly

Congratulations!

Your Murphy bed is now ready for use.

We recommend that you recheck that all screws are tight,
and that all parts are secure before use to ensure lasting Safety.