

12 x 16 FT


WQOT287TN

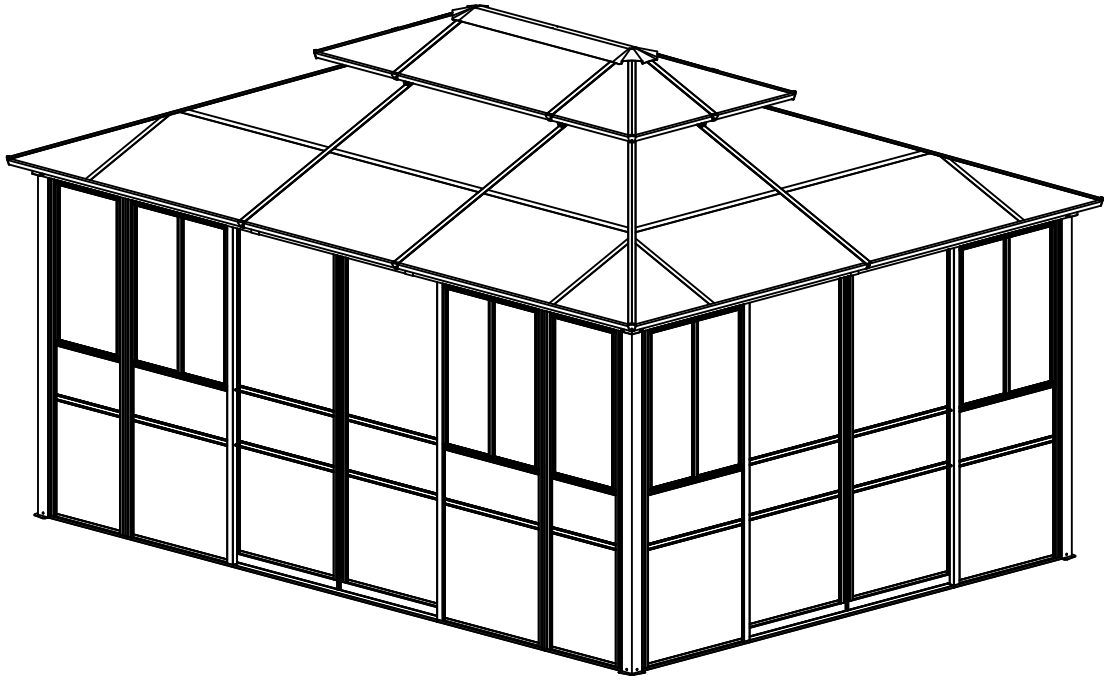



Note: The gazebo requires five people for assembly.
The following tools are required for assembly but are not included.

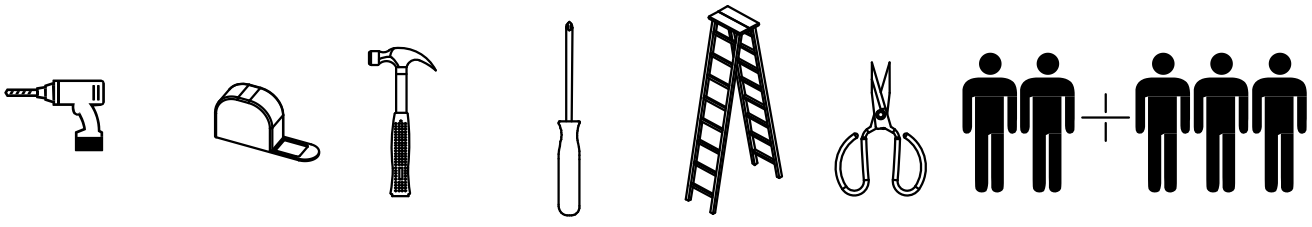

Pistol Drill Tape Measure Hammer Screwdriver Ladder Scissor 5 People

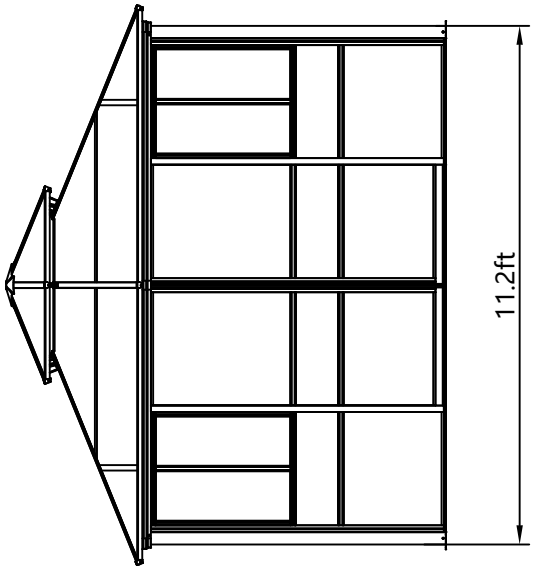
11.2ft

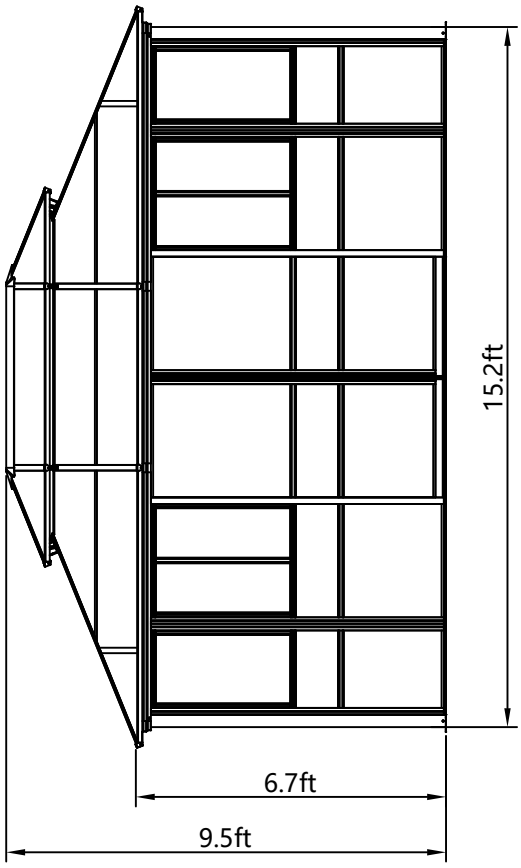
15.2ft
6.7ft
9.5ft

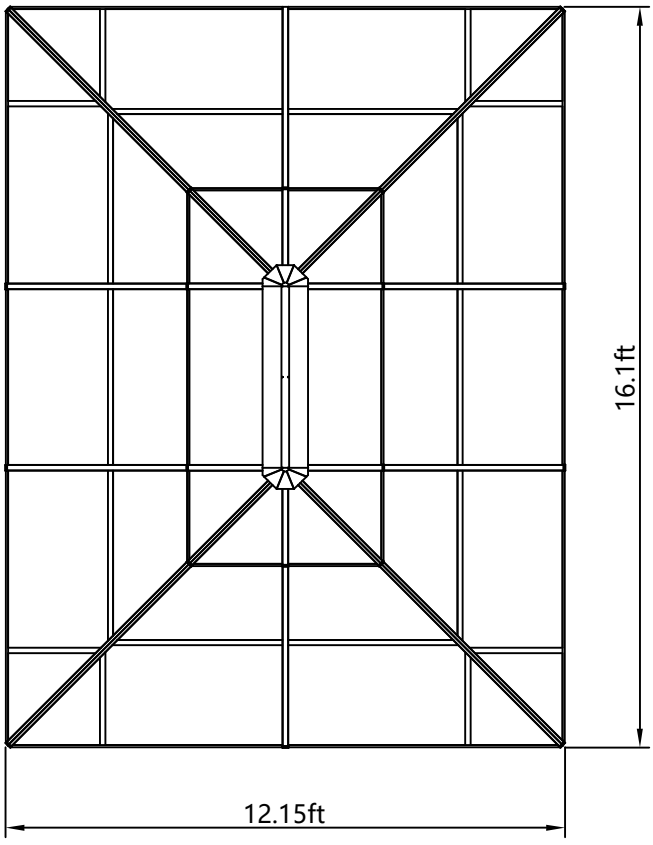
16.1ft
12.15ft

Box A	
Part #	Qty
B	4
E2	4
G9	2
G5	4
G6	4
G7	4
G8	4
H9	4
H5	4
H6	4
H7	4
H8	4
I2	2
I3	2
I4	2
I6	2
M1A	4
M2A	4
M1F	4
M1Q	4

Box B	
Part #	Qty
C4	4
C5	4
F2	6
F3	4
M5G	32
L1	1
M1	1

Box C	
Part #	Qty
M1B	8
M2B	8
M1C	4
M2C	4
M1G	8
M8G	8
M7K	4
M7L	8
M7P	4

Box D	
Part #	Qty
Z2	2
Z5	2
Z6	2
M5B	4
M6B	4
M1D	4
M2D	4
M4H	8
M4M	8
M4K	8
M4P	8
E3	4


Box E	
Part #	Qty
C6	2
F3	2
M4V	2
M7V	2
M4L	16
M4N	4
J1	4
K	6
R	10
P	4
Q	6
T	4
MQ2	28


X	6
N	12
N1	12
U1	4
U2	4
U3	4
U4	4
MD1	48
MD2	96
MD3	24
MD4	16
MD5	16
3-1	16
4-1	16
5-1	2
MS1	16
MS2	8
MS14	4
23	1
Instructions	1
Bags for screws: 1-26	1
12x16: AB AB AB AB AD AD AD AD / AE AE AE AE AG AG AG AG / AF AF AF AF AF AF AF AF / BA BA BA BA DA DA DA DA	1


Box F	
Part #	Qty
M1E	24
1R-1	24
1R-2	16
1R-4	8
MS2	8
MS3	8
MS4	8
MS20	8
MS13	4
M1S	8
M4S	4
V11	4
V12	4

Box G	
Part #	Qty
MS15	4
W6	2
W4	4
W5	4
V13	4
V7	4
V8	4
V9	4
V10	4


Remove the plastic packing blocks from both ends of profiles M1E, M1G, M5G, M7G, M4L, M6L, M4H,and M6H.

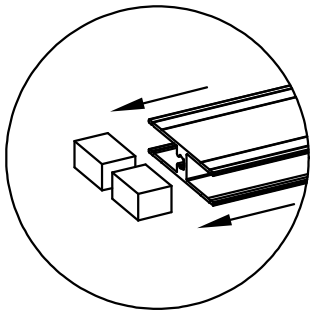

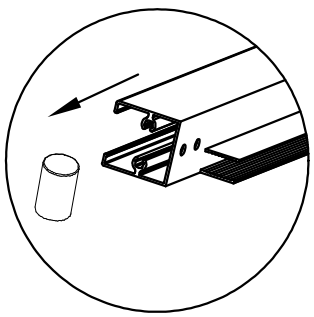





B 4x



C4 4x



C5 4x



C6 2x



E2 4x



E3 4x



F2 6x




F3 6x



G9 2x




G5 4x



G6 4x



G7 4x




G8 4x



H9 4x



H5 4x




H6 4x




H7 4x




H8 4x



I2 2x




I3 2x




I4 2x




I6 2x




Z2 2x



Z5 2x




Z6 2x




M1A 4x




M2A 4x

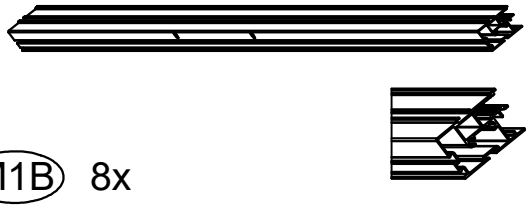


M1B 8x

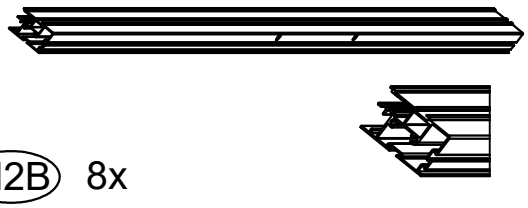


M2B 8x

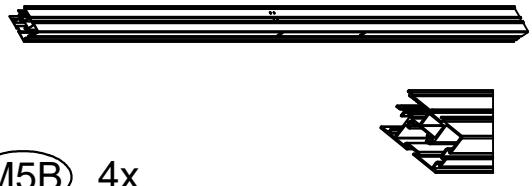


M5B 4x

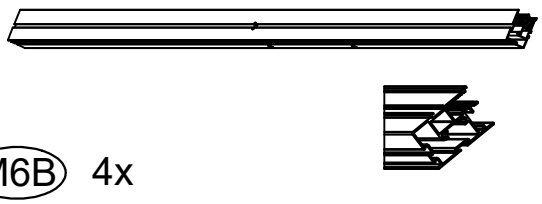


M6B 4x

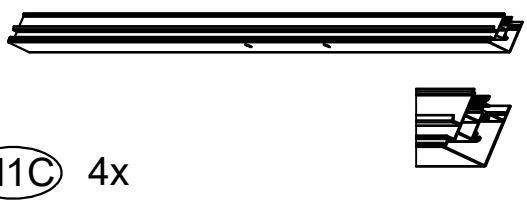


M1C 4x

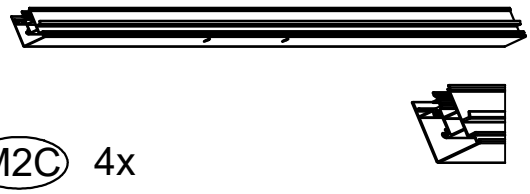

M2C 4x

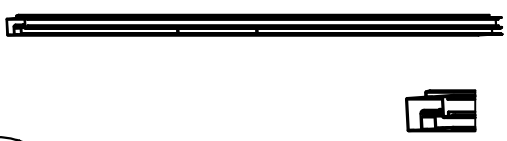


M1D 4x

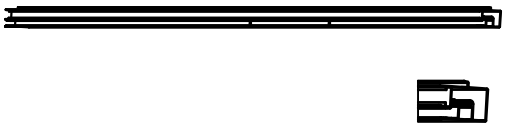


M2D 4x




M1F 4x

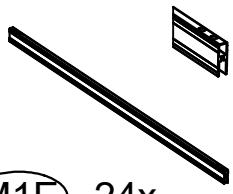


M1E 24x

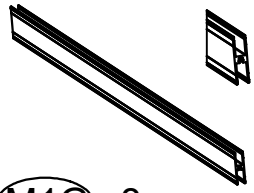


M1G 8x

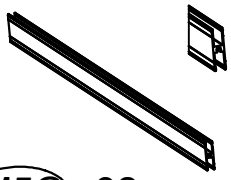


M5G 32x

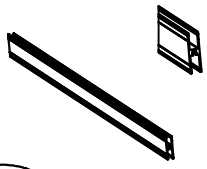


M8G 8x

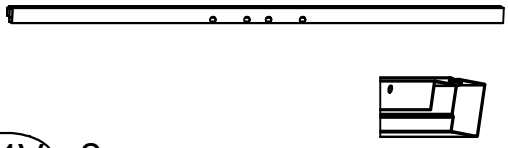


M4V 2x

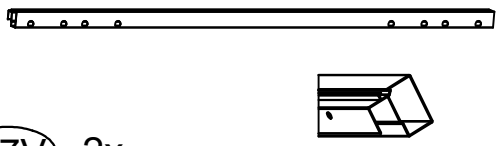


M7V 2x

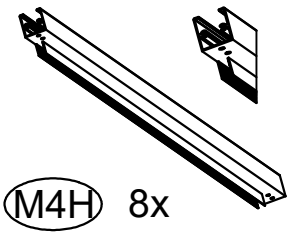


M4H 8x

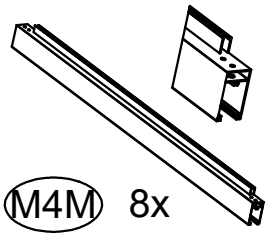


M4M 8x

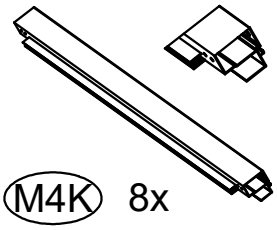


M4K 8x

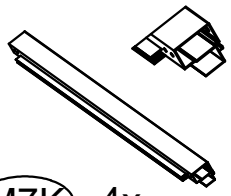


M7K 4x

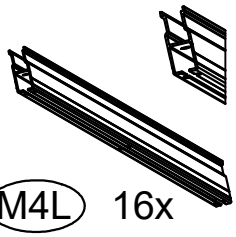

M4L 16x

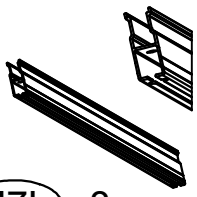


M7L 8x

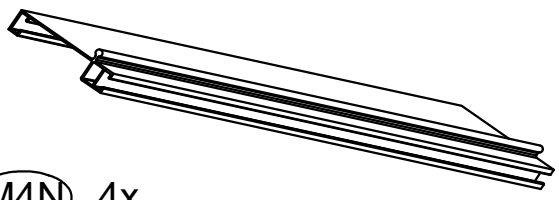

M4N 4x




M1Q 4x

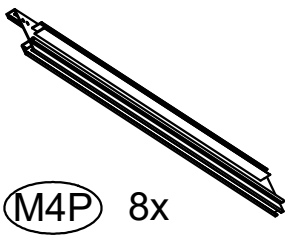


M4P 8x



M7P 4x

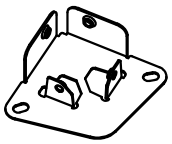


J1 4x




K 6x



L1 1x




M1 1x

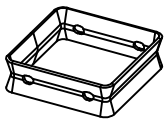

R 10x




P 4x




Q 6x




T 4x



MQ2 28x




X 6x



N 12x




N1 12x




U1 4x




U2 4x



U3 4x




U4 4x




MD1 48x



MD2 96x




MD3 24x



MD4 16x




MD5 16x



6.2*11*15


3-1 16x

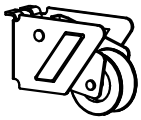


4-1 16x




5-1 2x

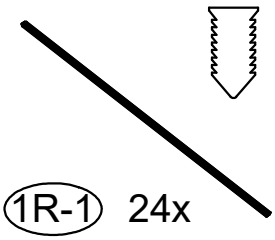


1R-1 24x

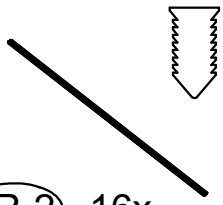


1R-2 16x

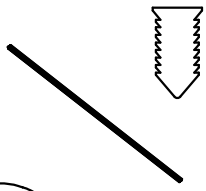


1R-4 8x




MS1 16x




MS2 16x

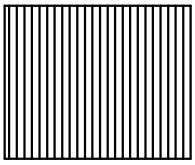


MS3 8x

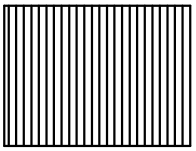


MS4 8x

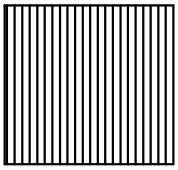


MS20 8x




MS13 4x




MS14 4x

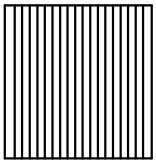


MS15 4x

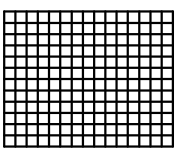


M1S 8x

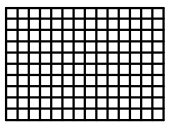


M4S 4x

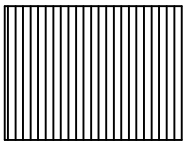


W6 2x

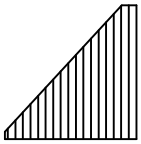


W4 4x

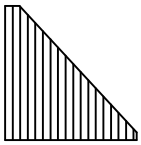


W5 4x

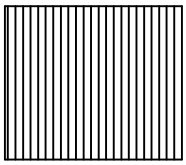


V13 4x

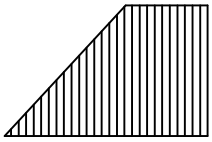


V7 4x

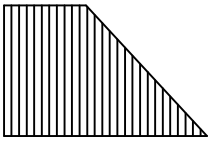


V8 4x




V9 4x

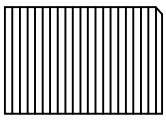

V10 4x



V11 4x



V12 4x

Bags of Screws



M6x15

① 243x



② 16x




ST4.8x12

③ 44x




M5x12

④ 52x



⑤ 2x



⑥ 1x



M6x10

⑦ 10x




M6

⑧ 26x




M4x20

⑨ 192x




M4x35

⑩ 80x



M4x50

⑪ 80x



⑫ 36x



M5x6

⑬ 144x



M5

⑭ 56x



M5x12

⑮ 56x



⑳ 8x




M5x15

21 16x




M4x12

22 4x

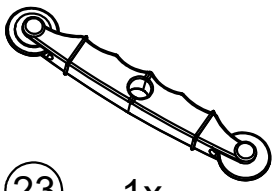

23 1x

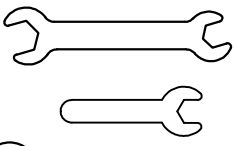

24 1x



4mm

25 2x



2.5mm


26 2x

12x16							
AB	AB	AB	AB	AD	AD	AD	AD
AE	AE	AE	AE	AG	AG	AG	AG
AF	AF	AF	AF	AF	AF	AF	AF
BA	BA	BA	BA	DA	DA	DA	DA

letter sticker 1x



B 4x

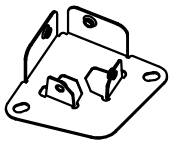

J1 4x





M6x15

1 8x


<1>

x4

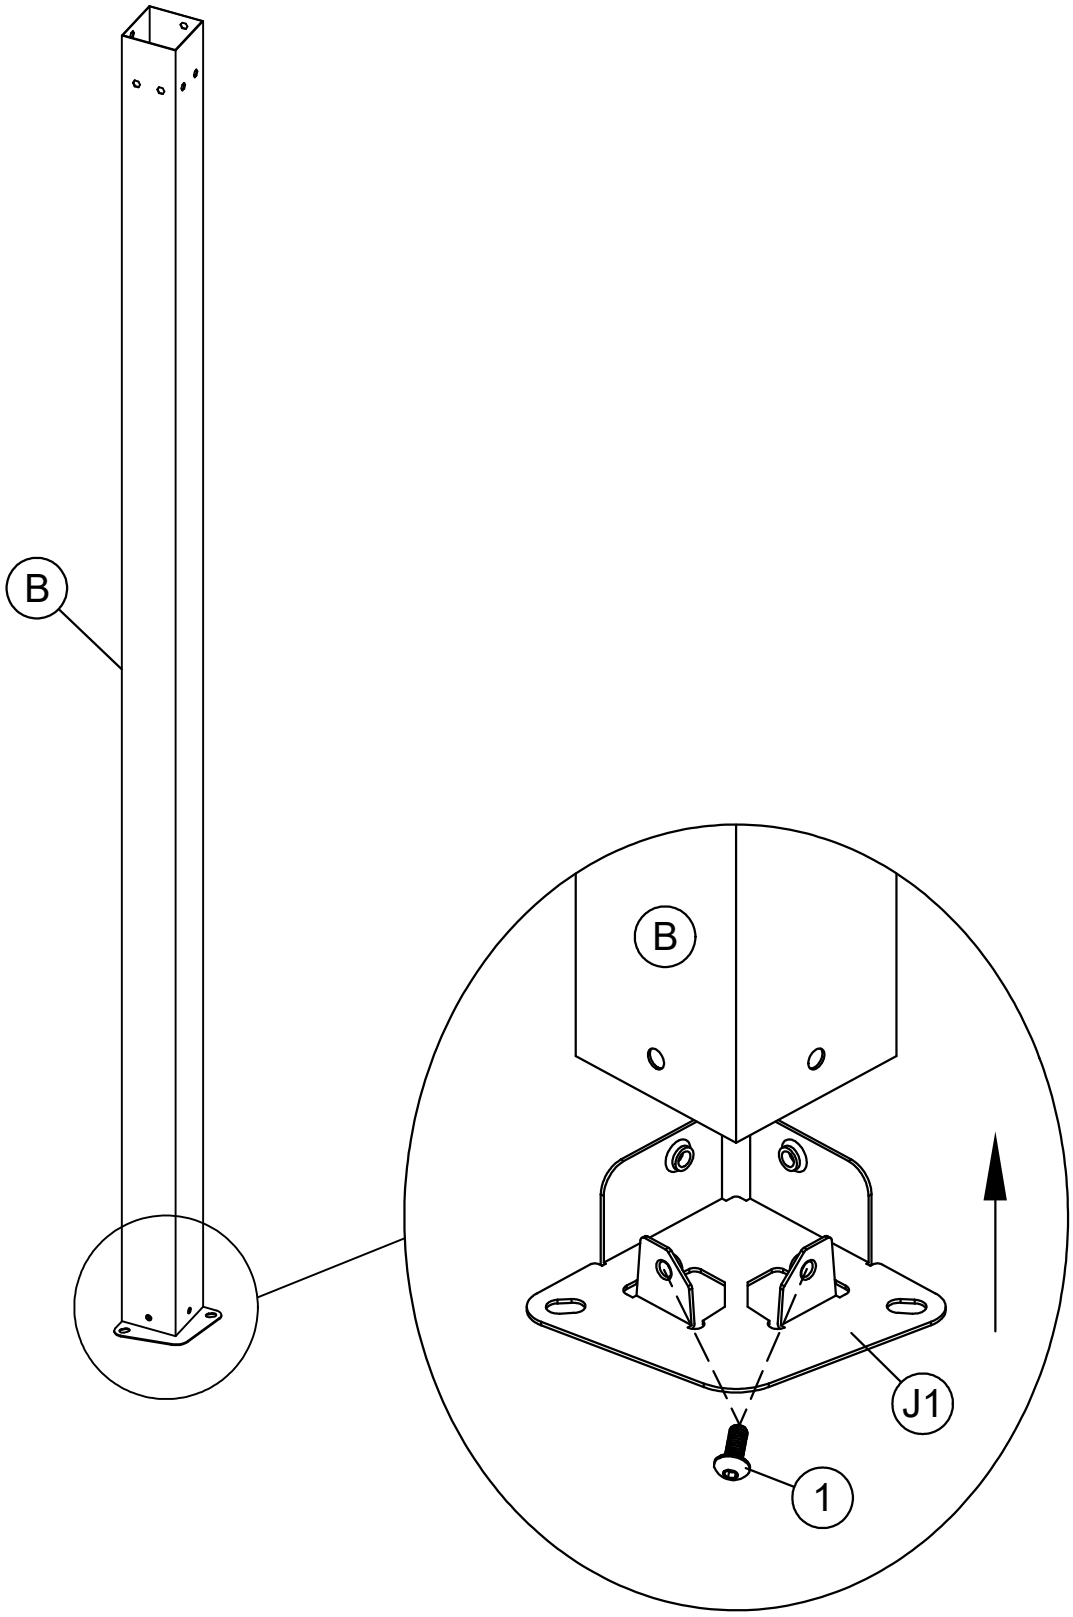


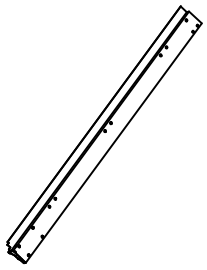


C4 4x

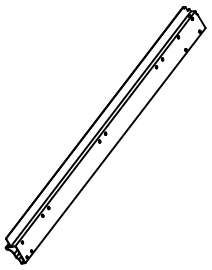

C5 4x

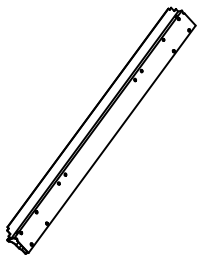

C6 2x



K 6x




M6x15

1 48x


12

<2>

x2

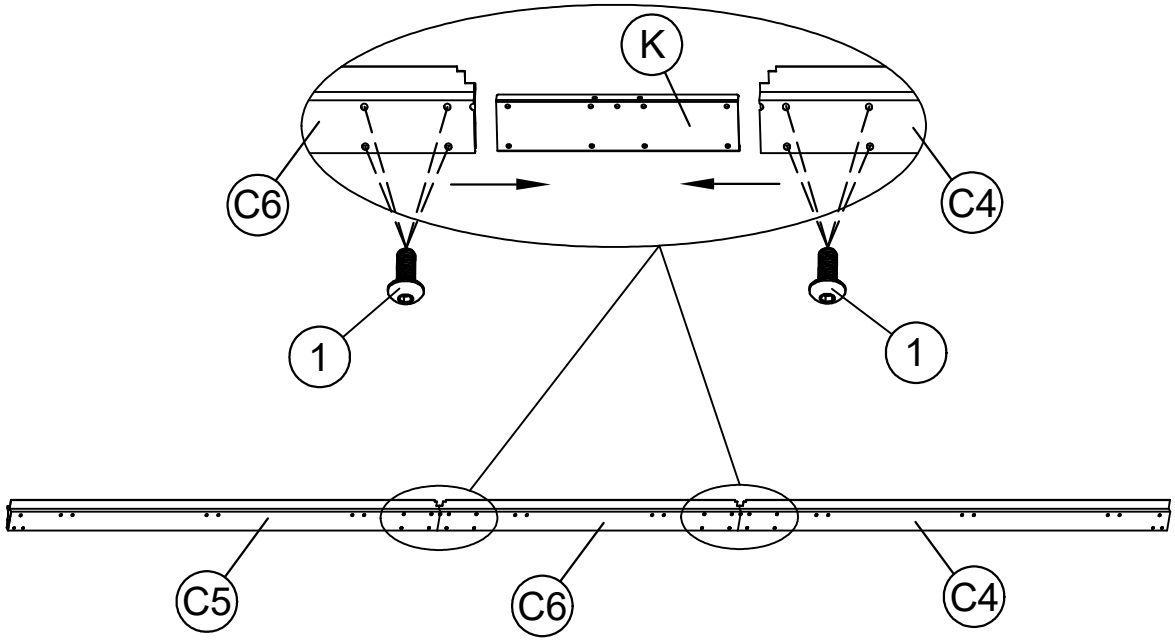

x2

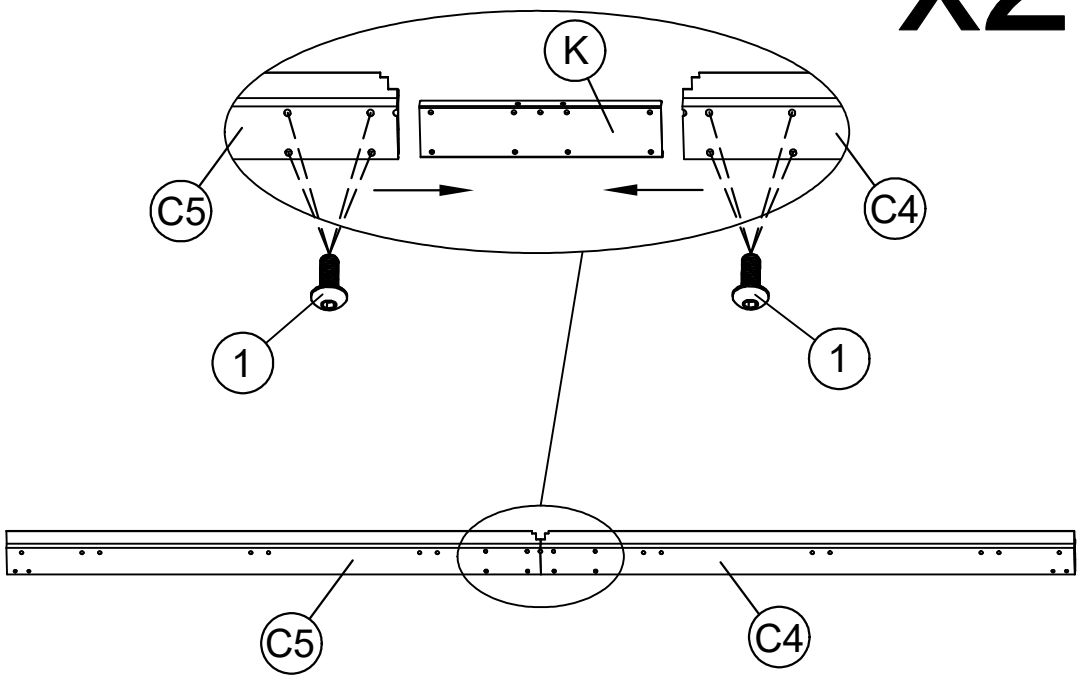




(2) 16x



M6x15


(1) 8x

<3>

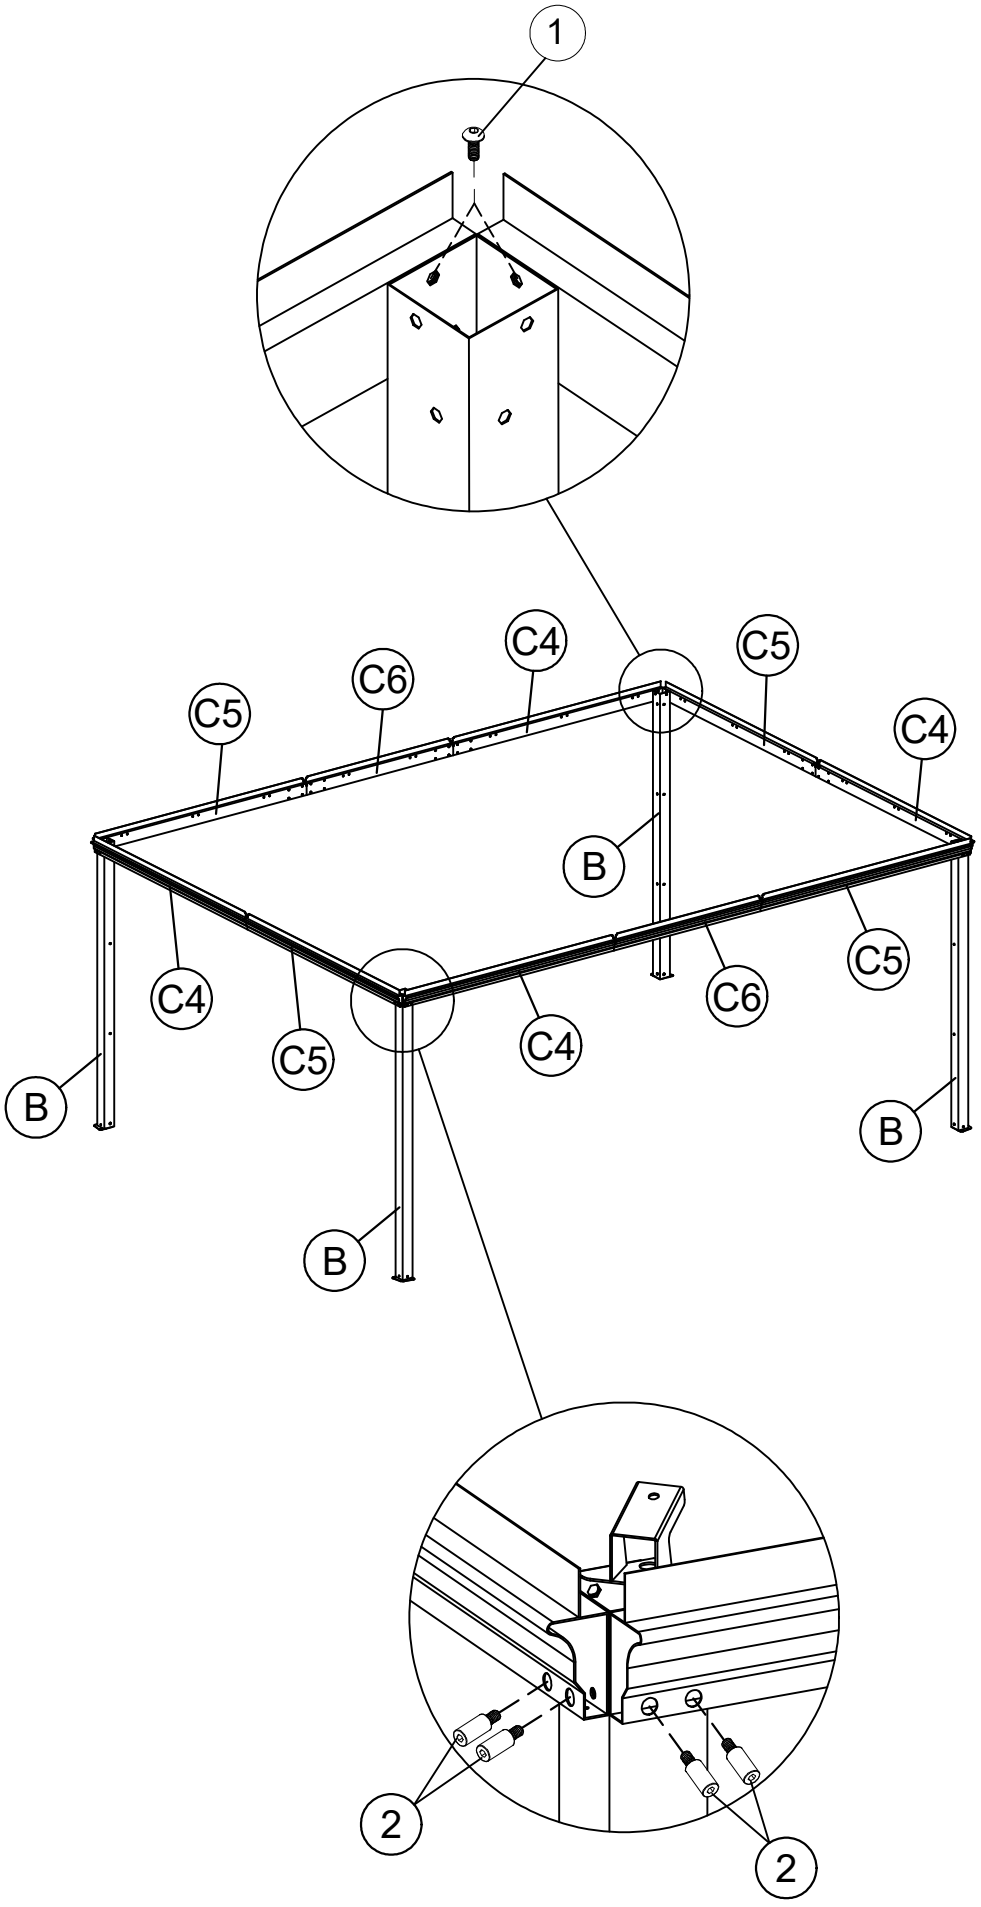



T 4x



Q 6x



P 4x


M6x15


1 14x




ST4.8x12

3 28x

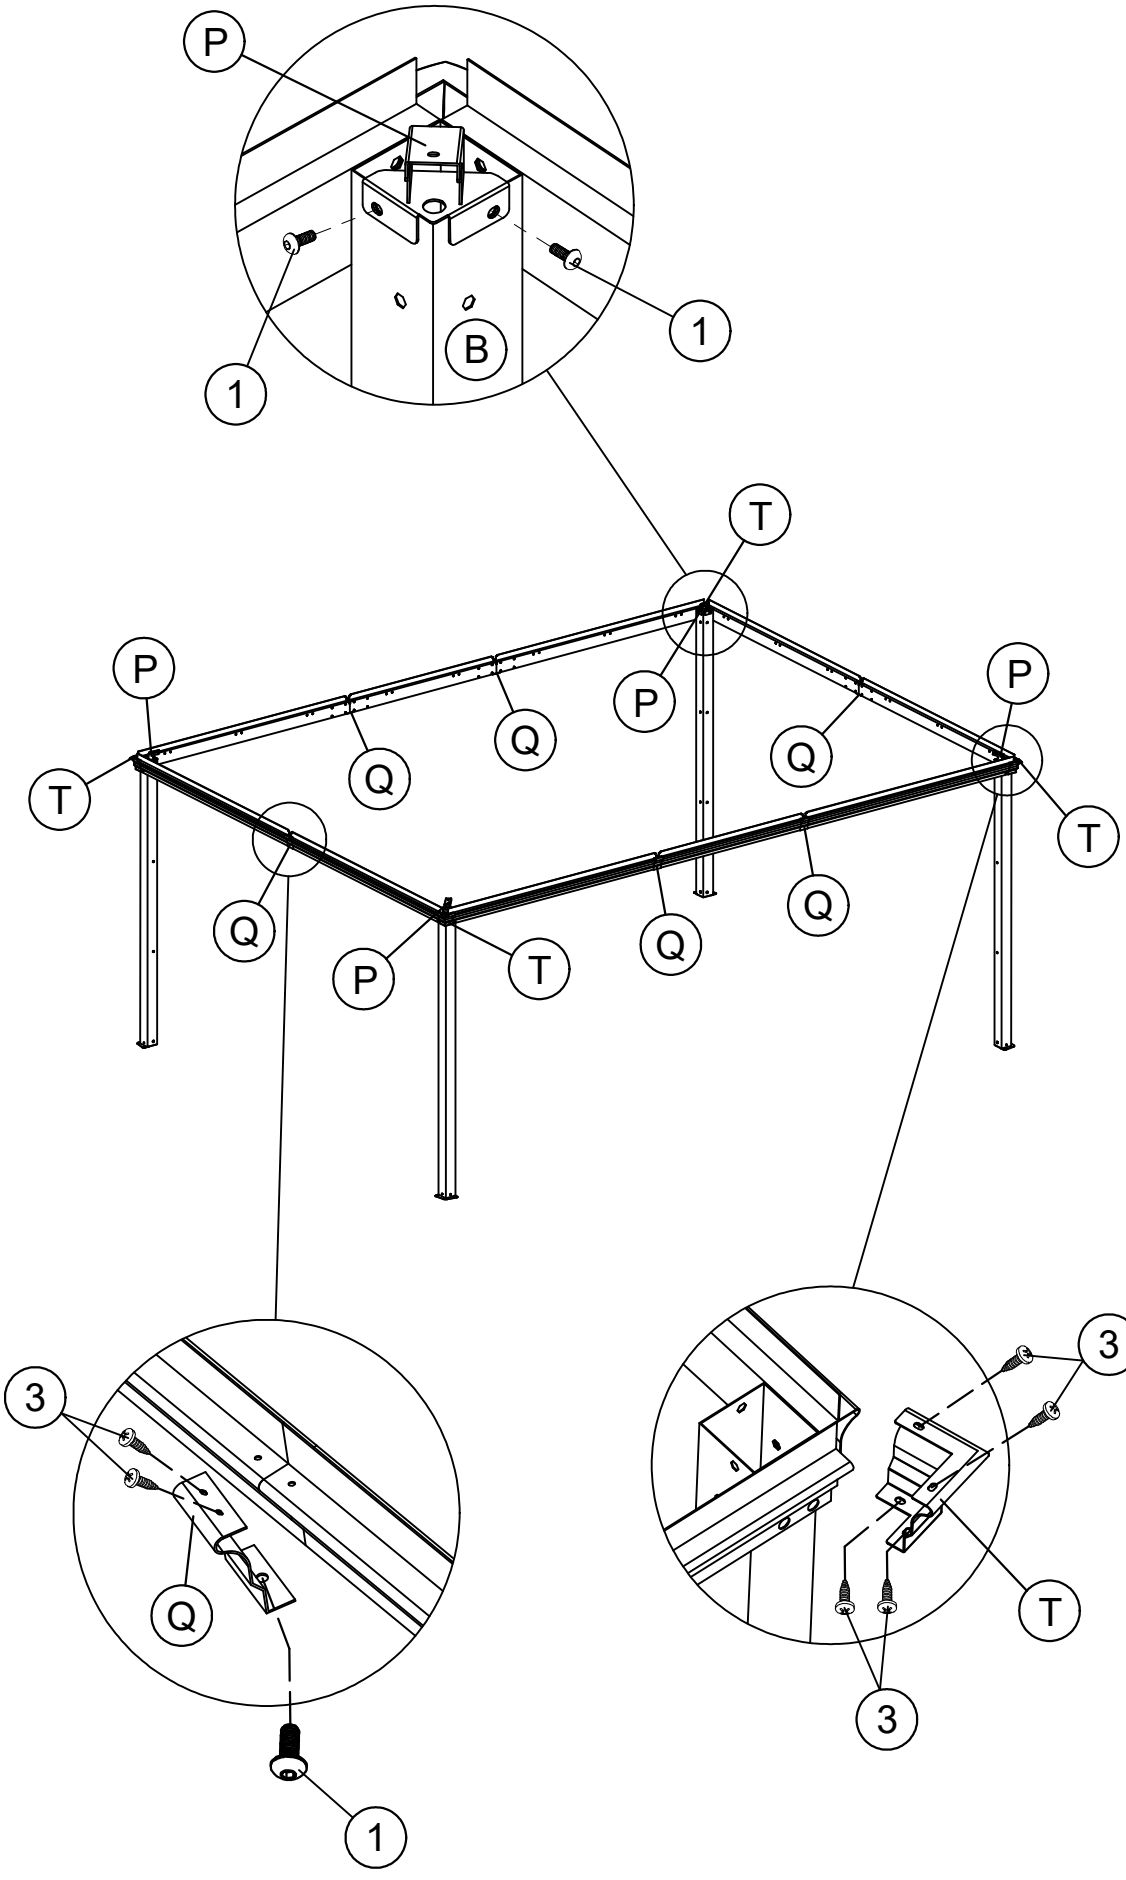

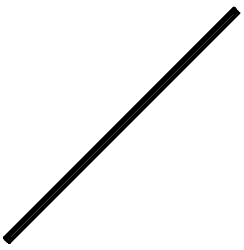

E2 4x

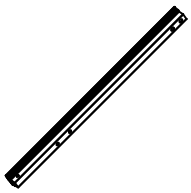


E3 4x



F2 6x



F3 6x

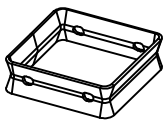

L 10x





X 6x




M5x12


4 52x

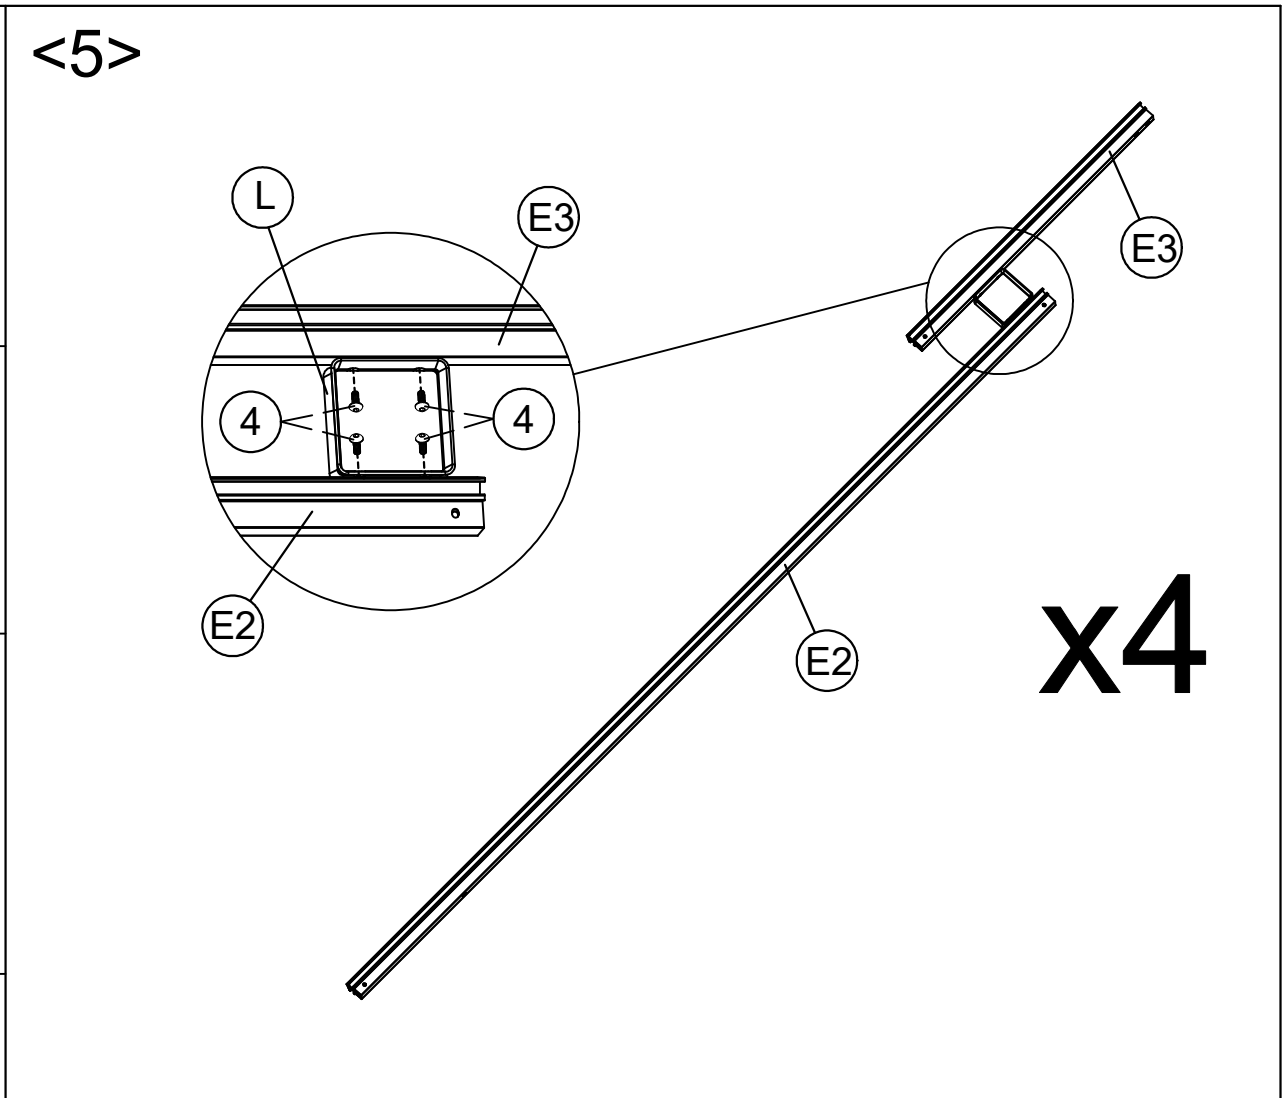

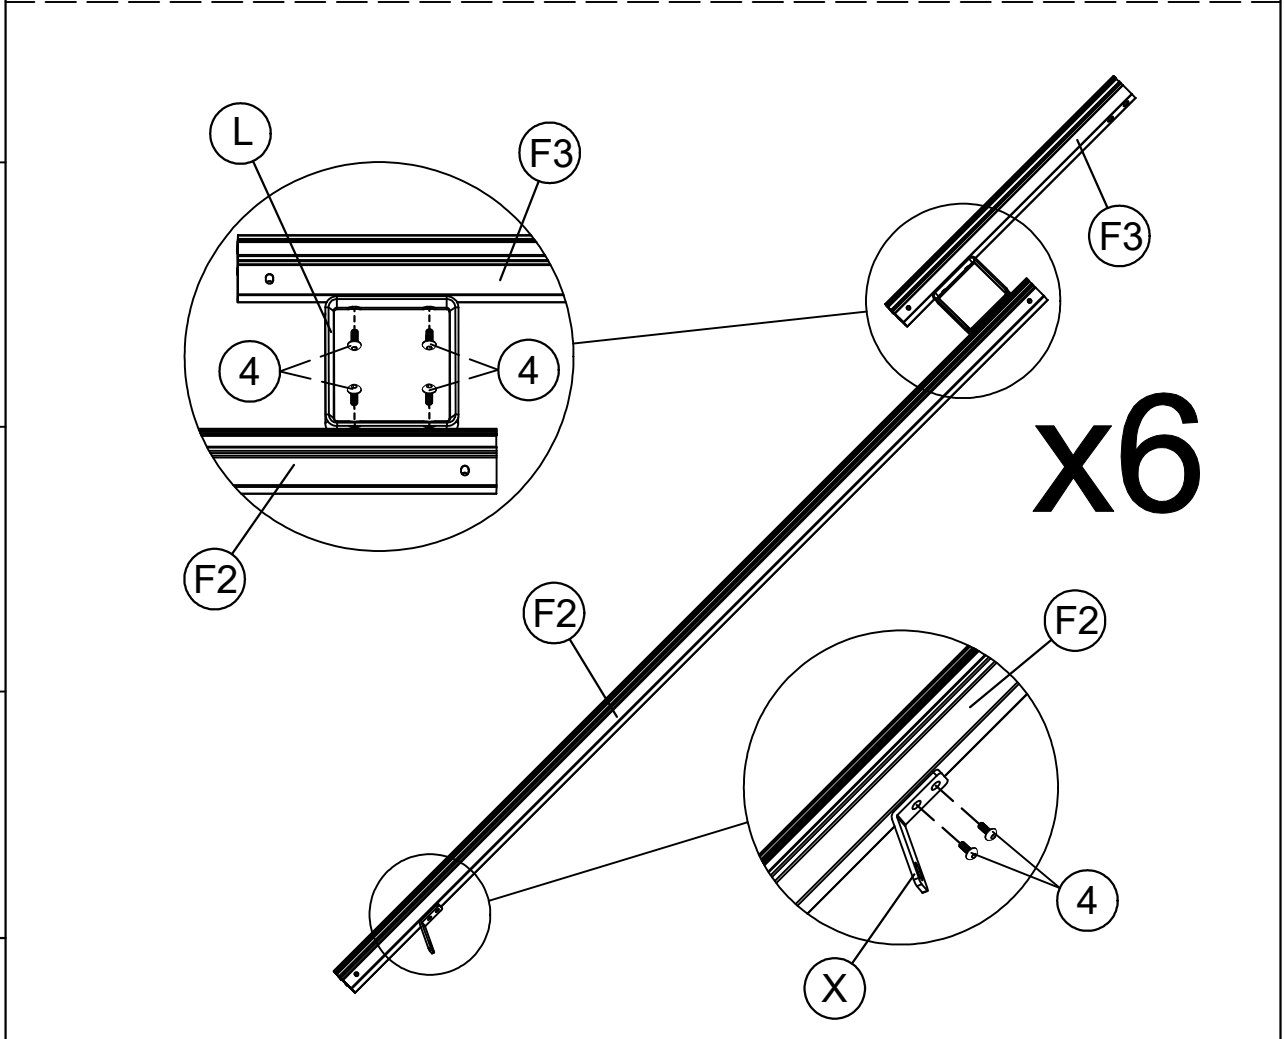

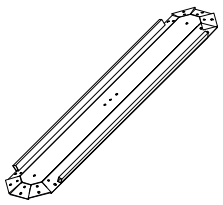

L1 1x




6 1x




M6x15

1 8x

<6>

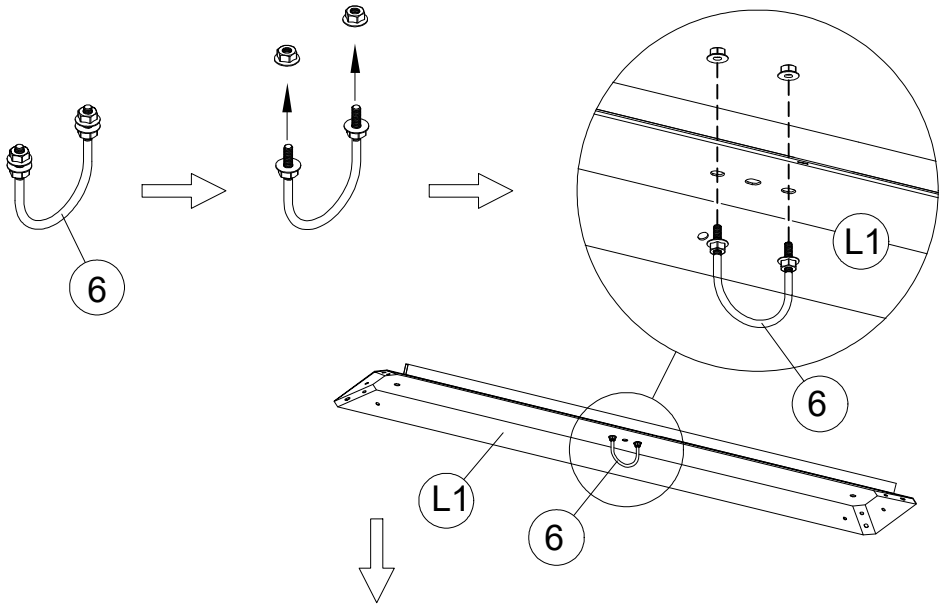

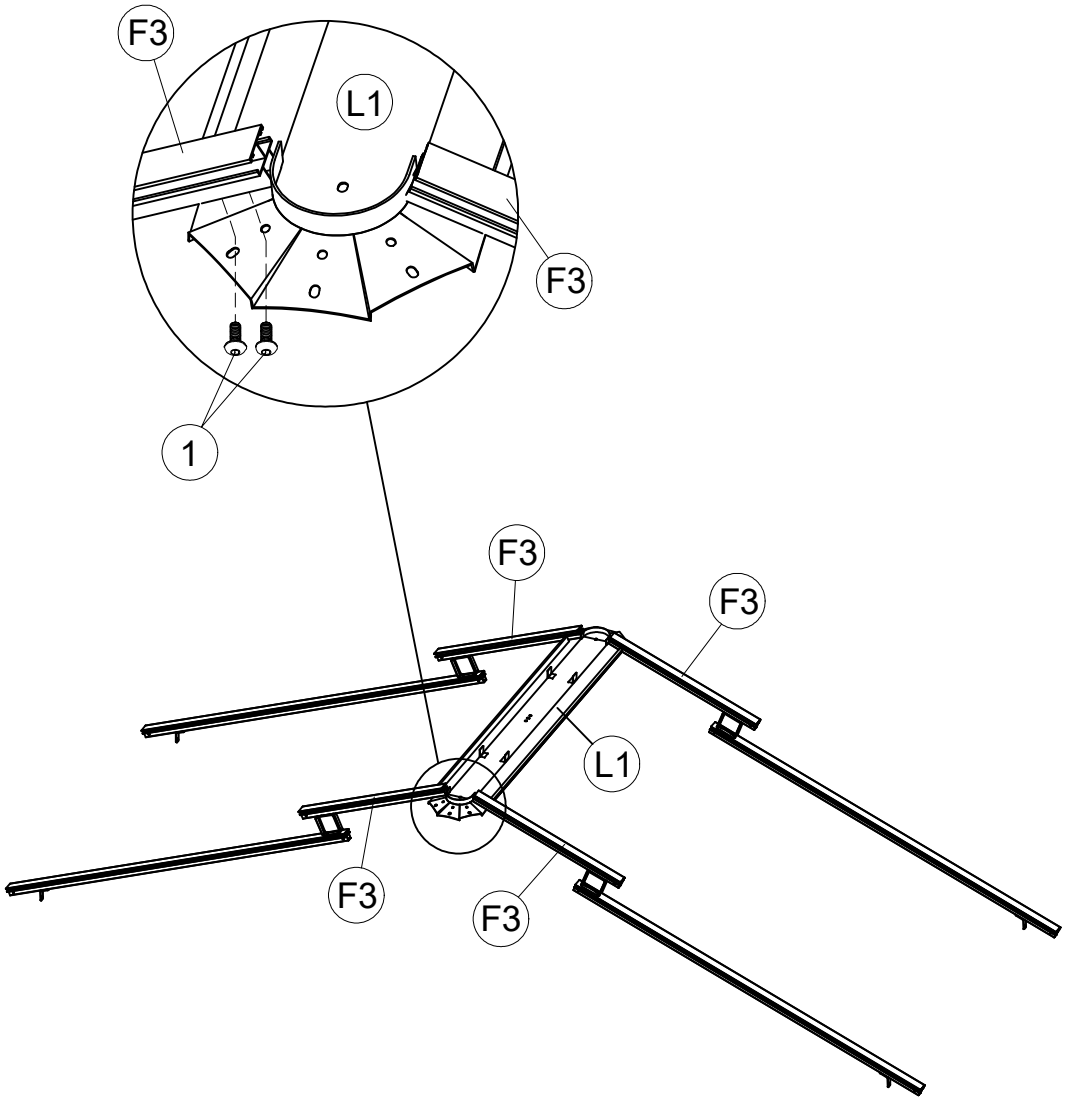


<7>



M6x15


① 4x

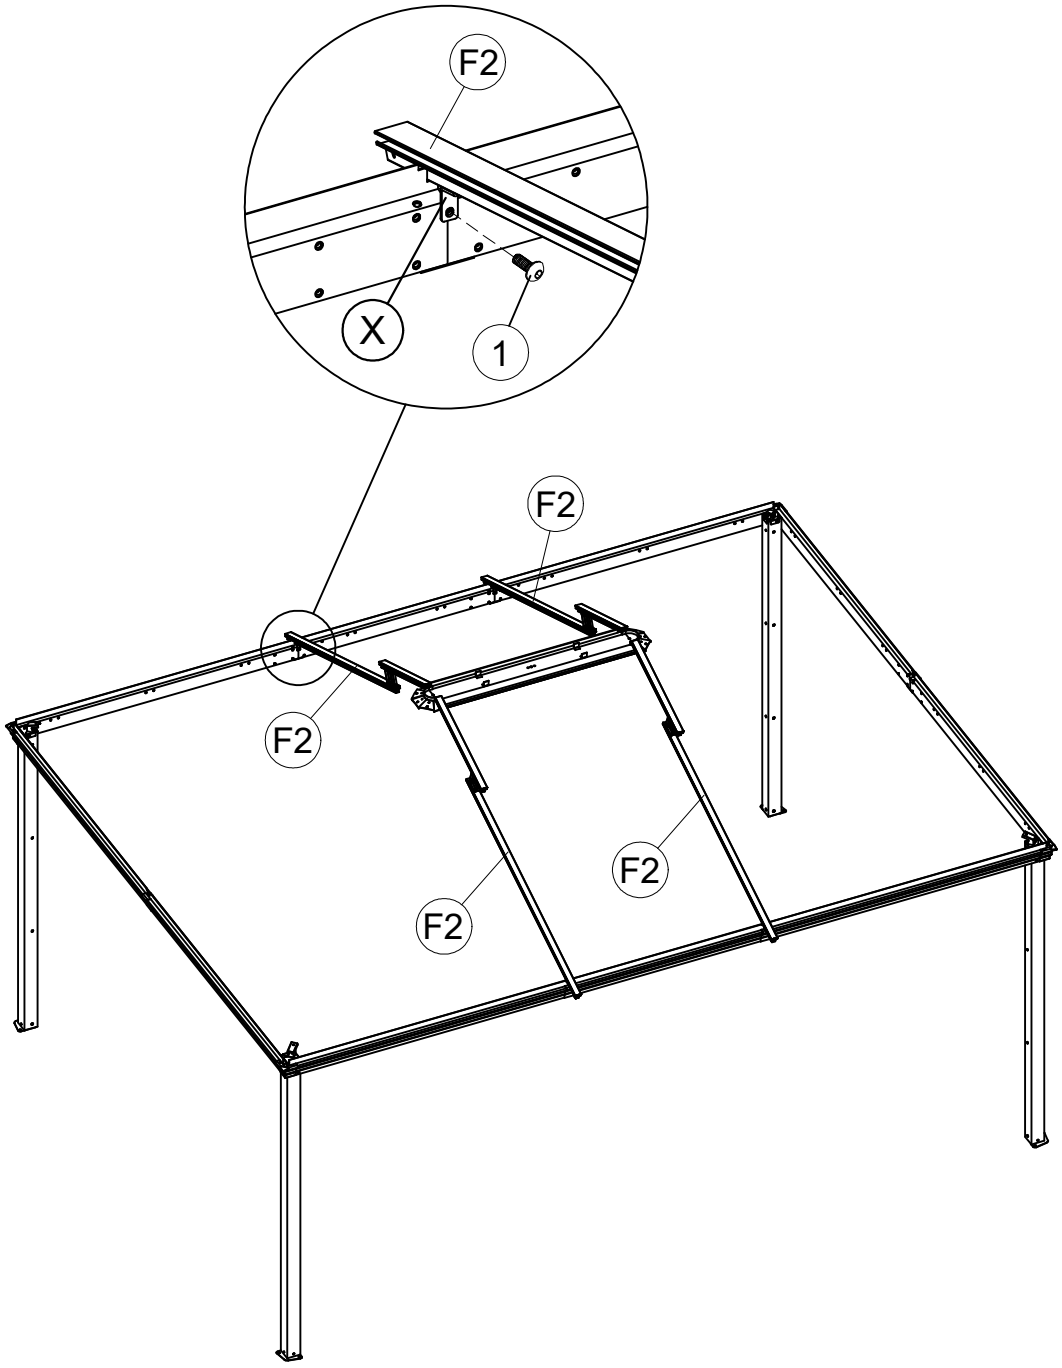


<8>

M6x15

1 18x

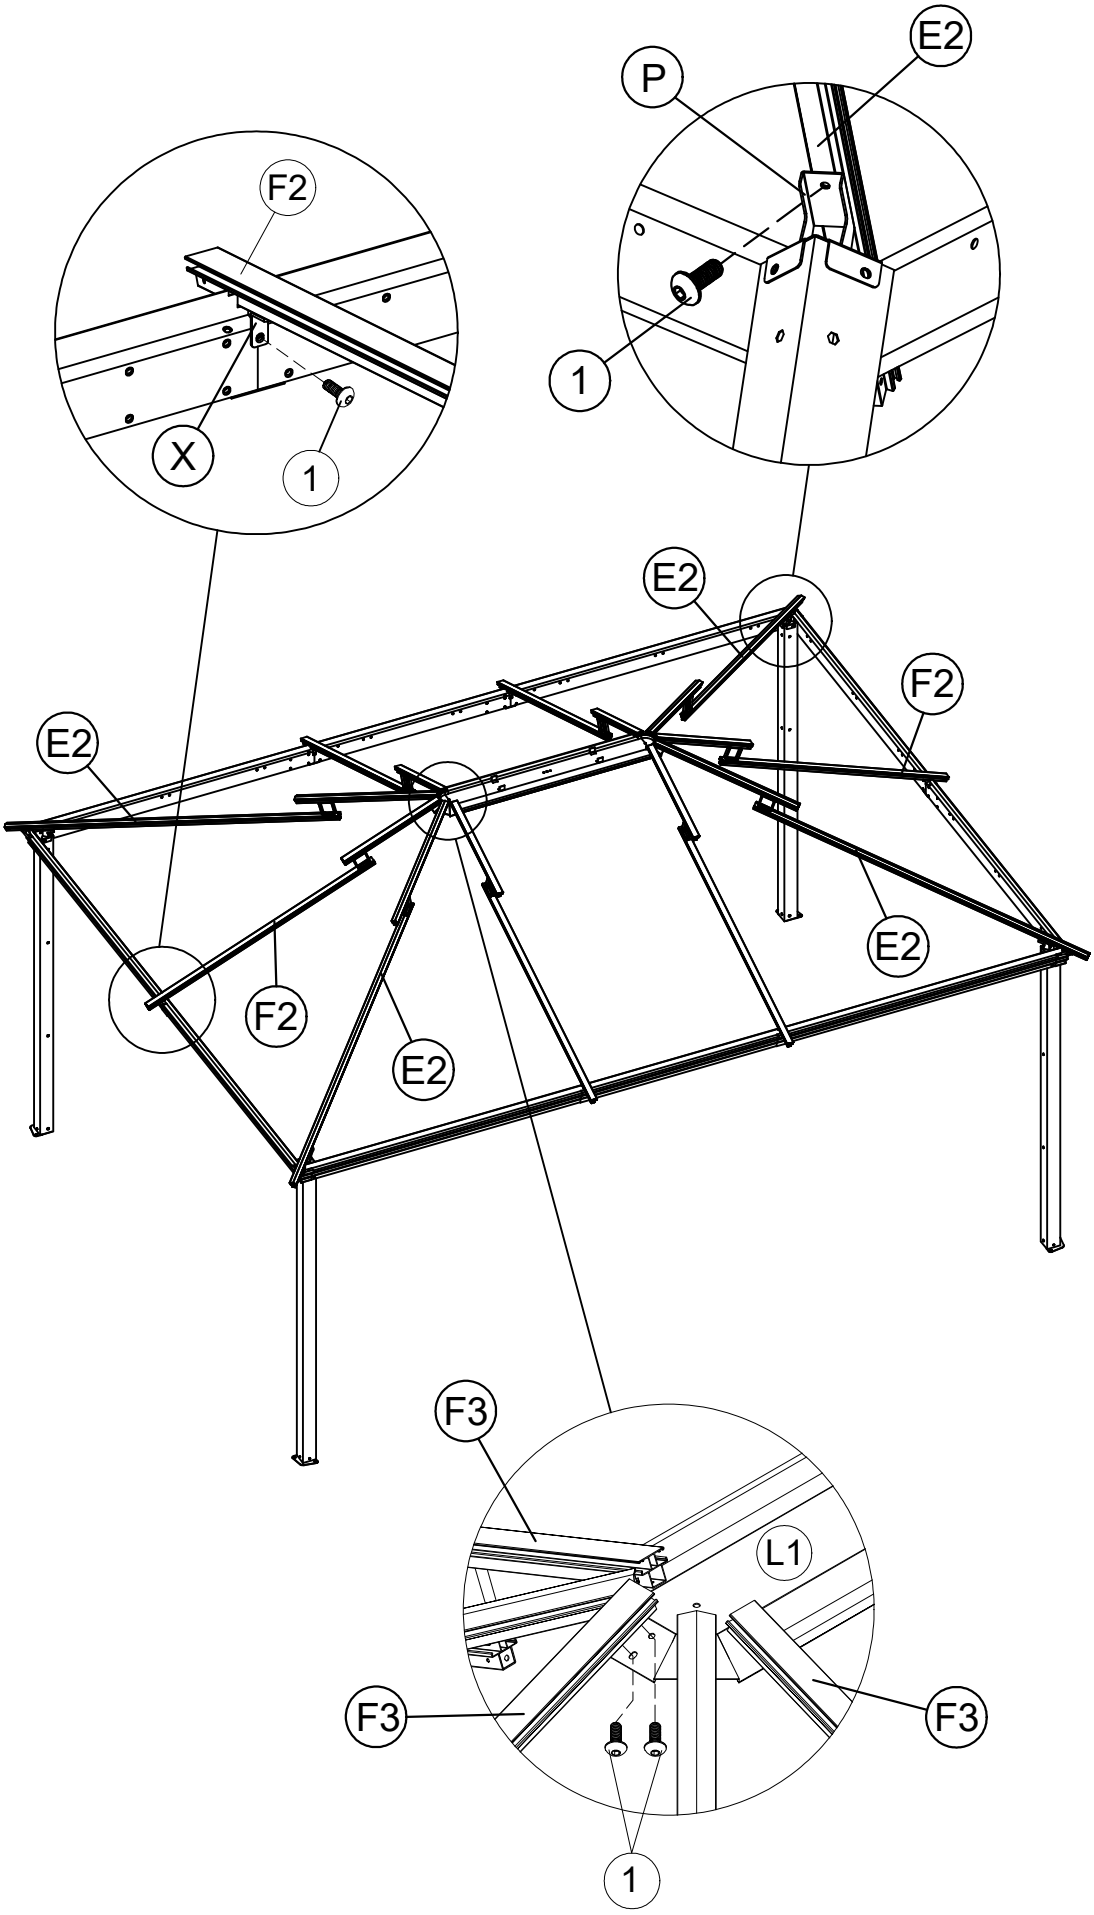

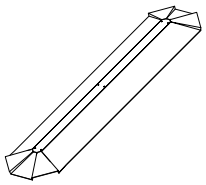

M1 1x





5 2x




M6x15

1 1x

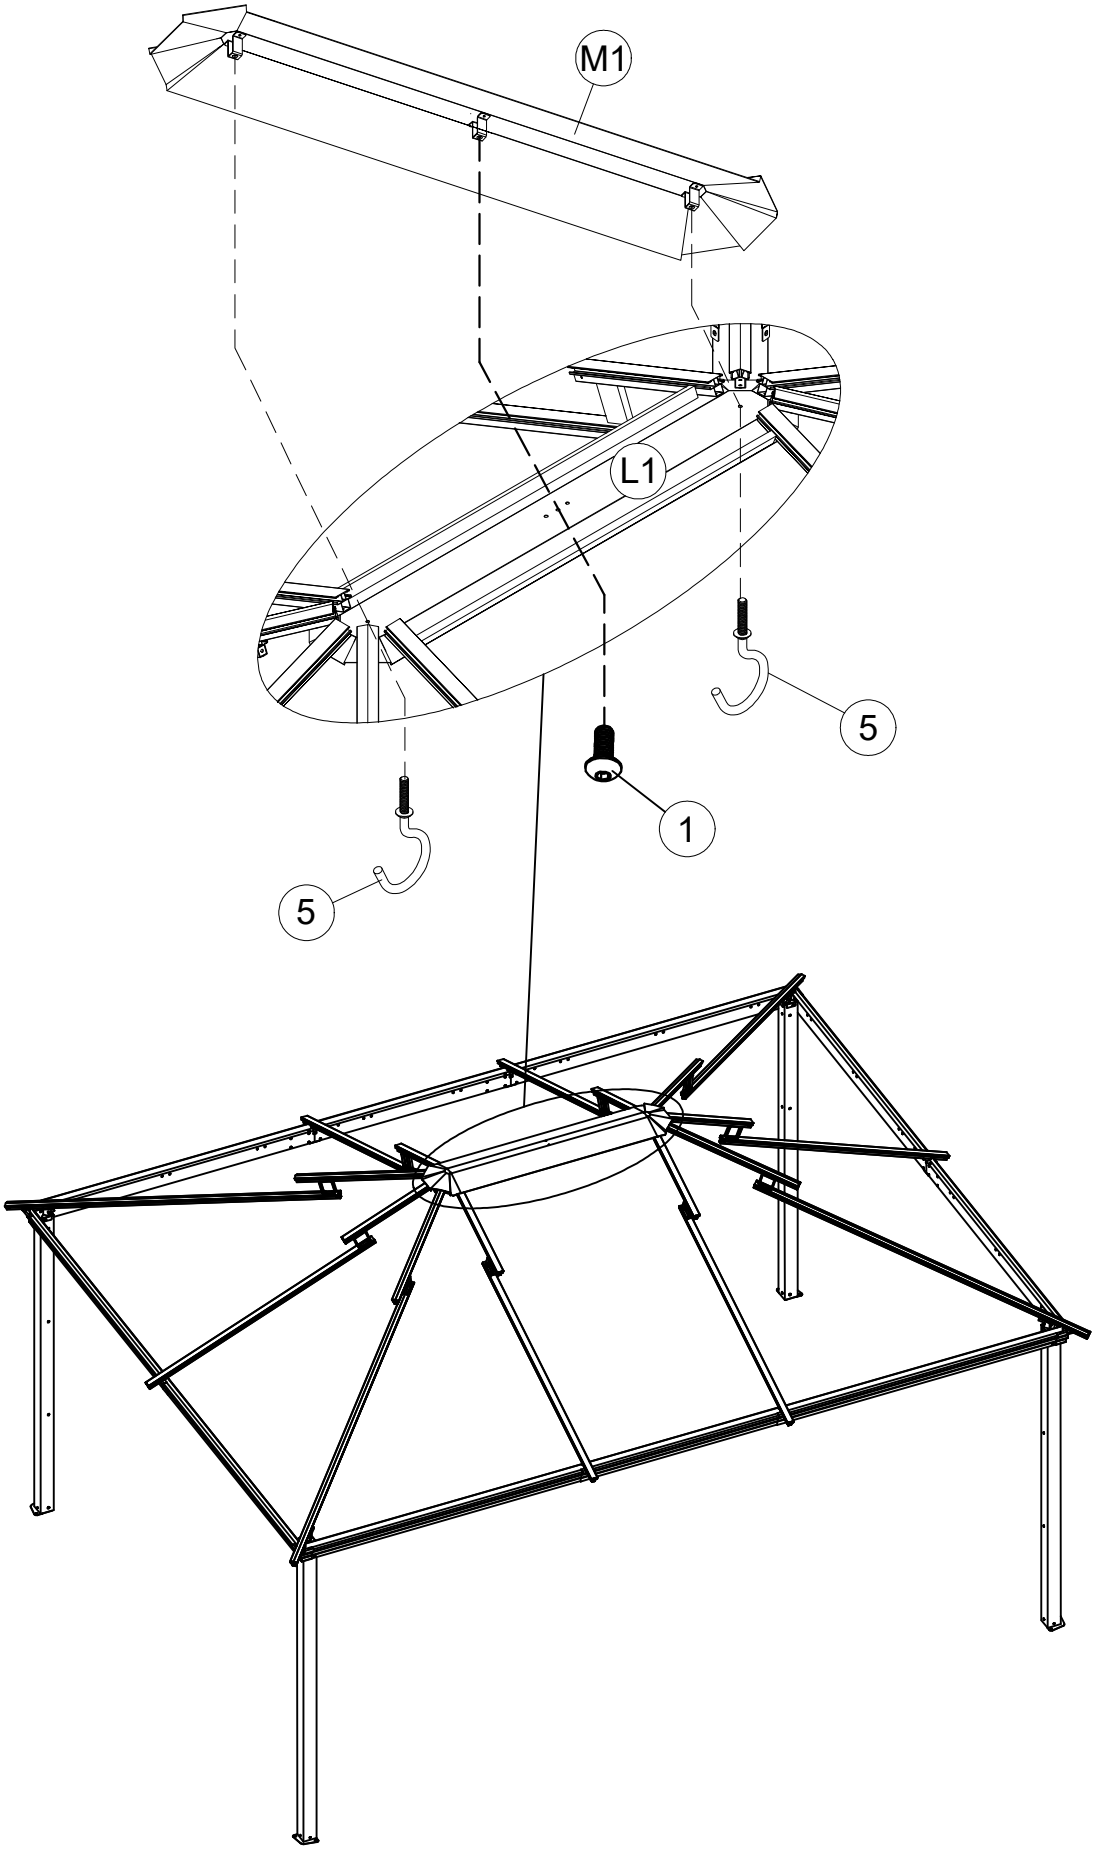


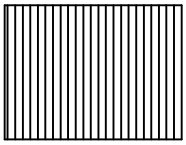

W6 2x

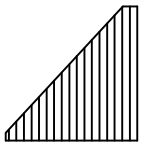



W4 4x

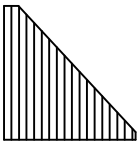


W5 4x

<10>

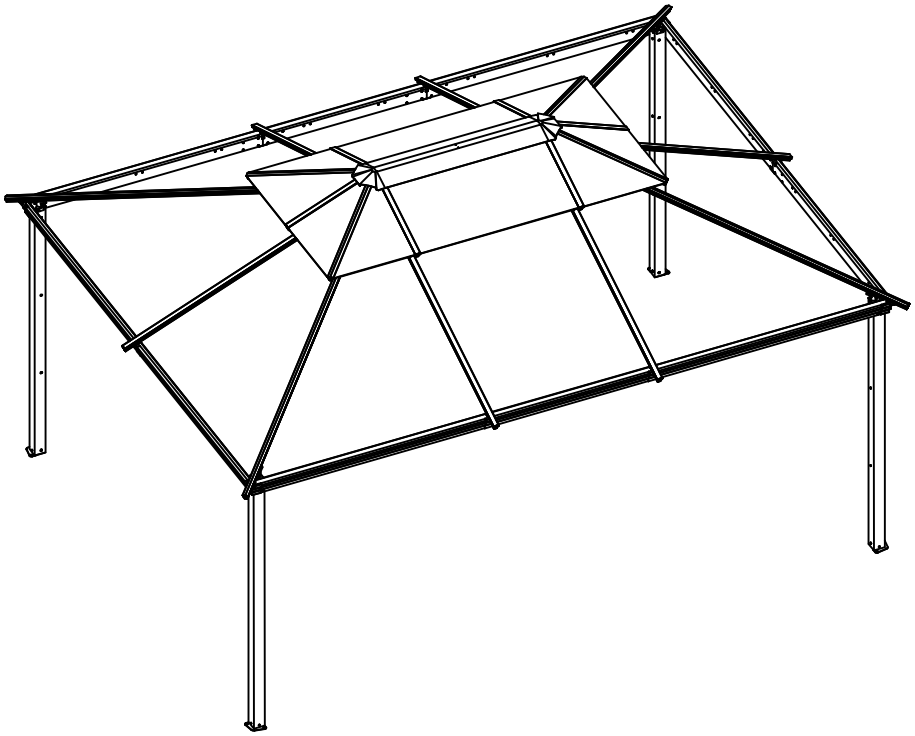


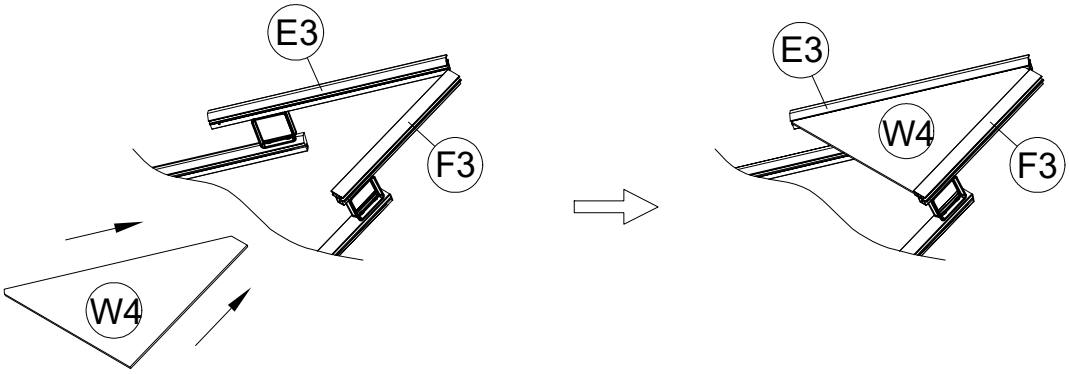

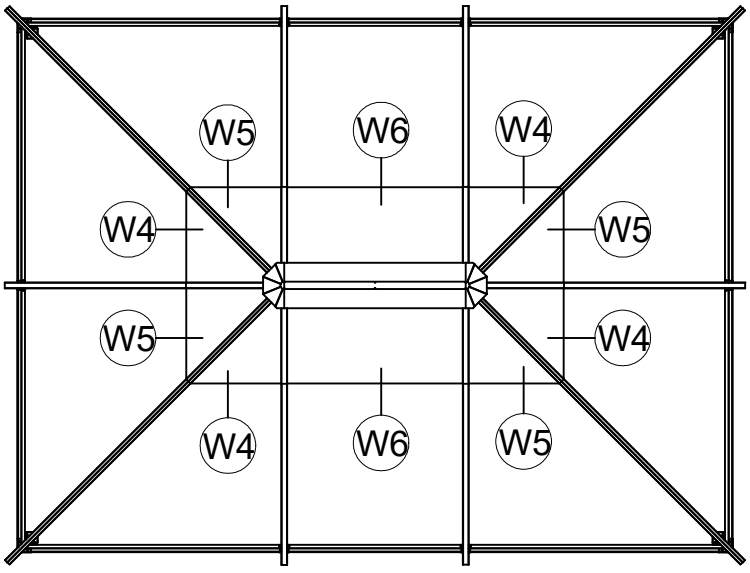




H9 2x

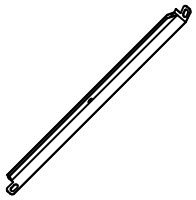

H7 4x



H8 4x



N 4x




N1 6x





M6x15

1 10x


<11>

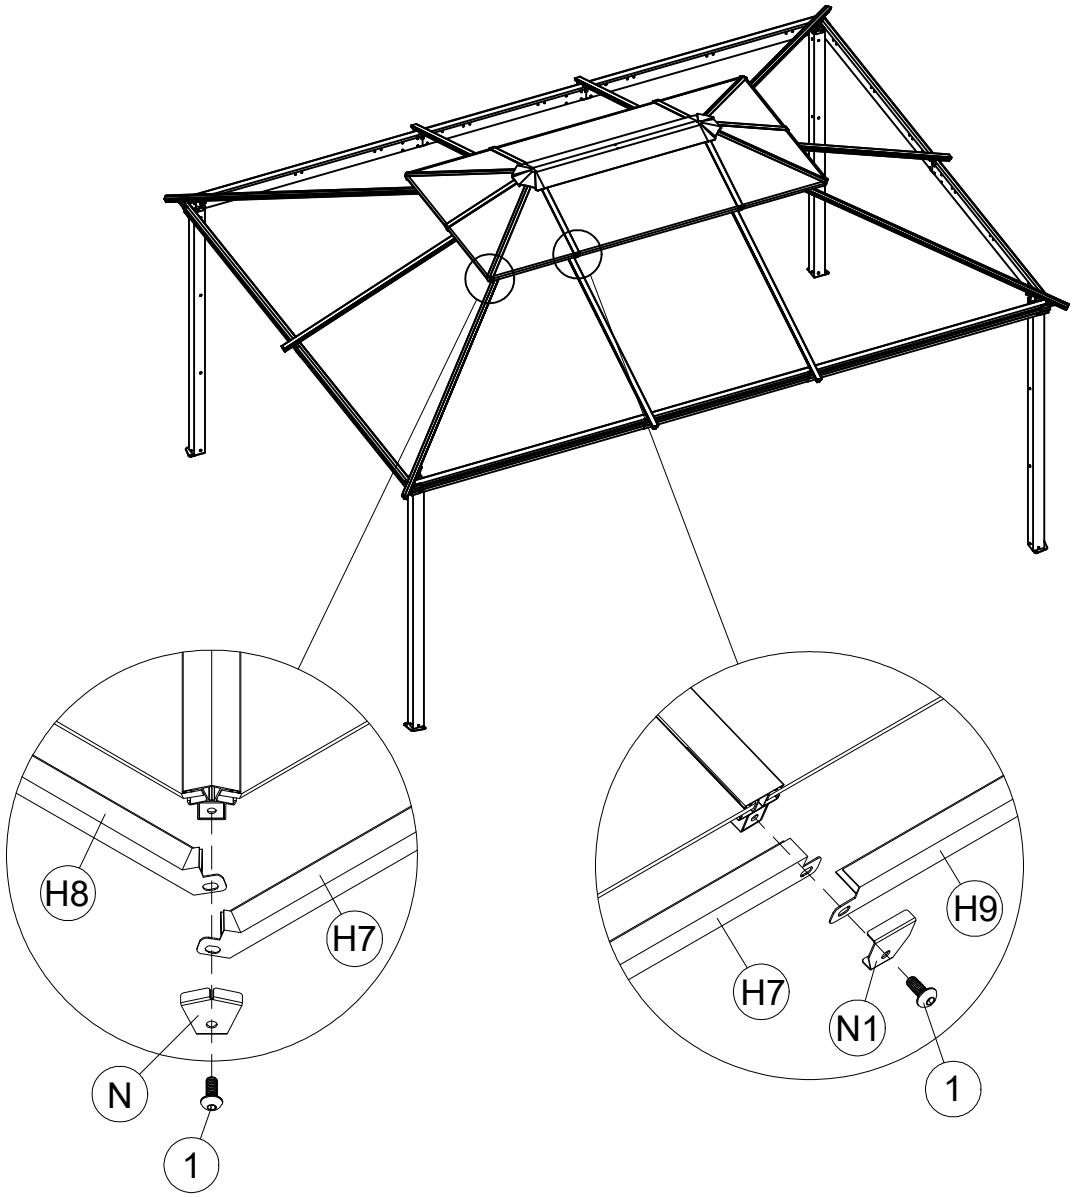

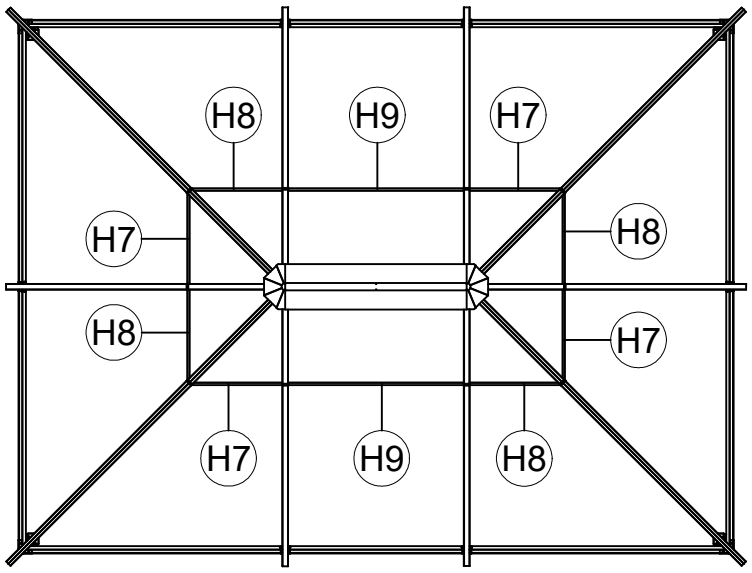


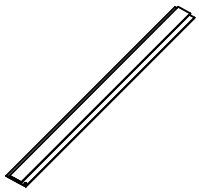


G9 2x

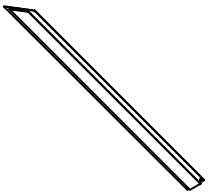


G5 4x

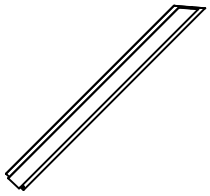


G6 4x

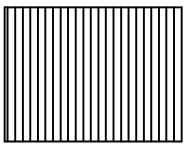


V13 2x

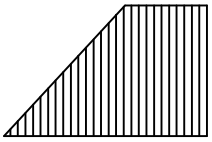


V7 4x

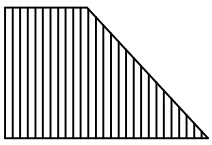



V8 4x

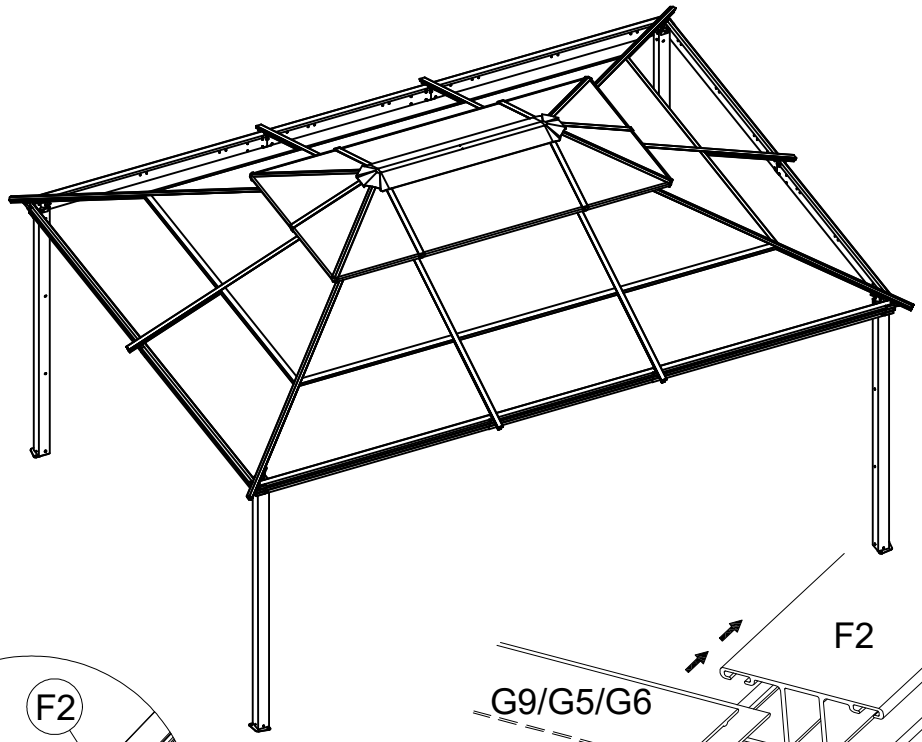

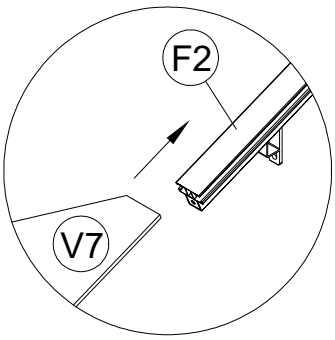


Note: When G5, G6, or G9 are inserted into F2, the wide side must face downward and the narrow side upward; otherwise, it may cause water leakage.

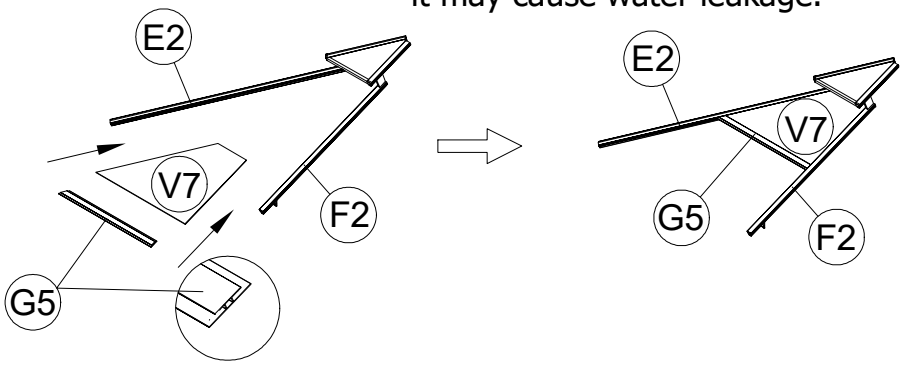


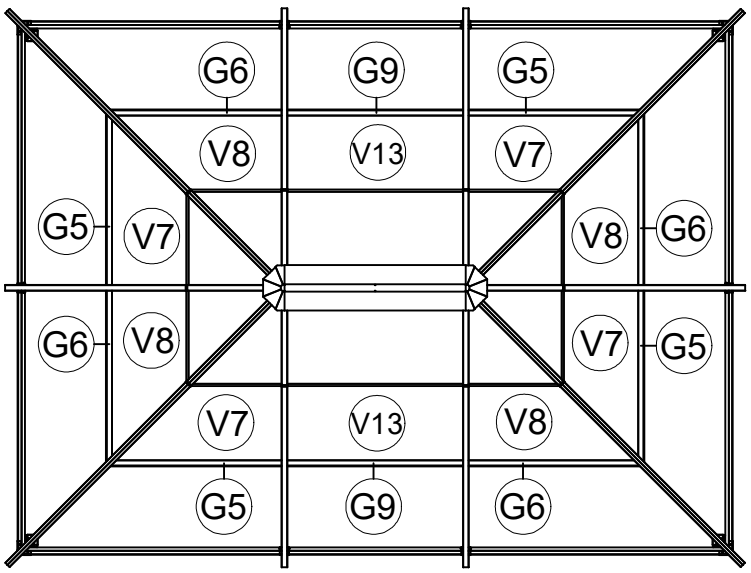


<13>

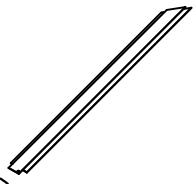


G7 4x

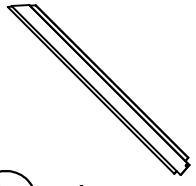


G8 4x

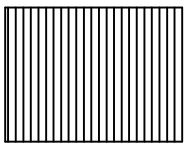


V13 2x

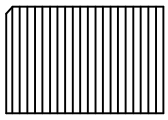


V9 4x



V10 4x





V11 4x





V12 4x

23

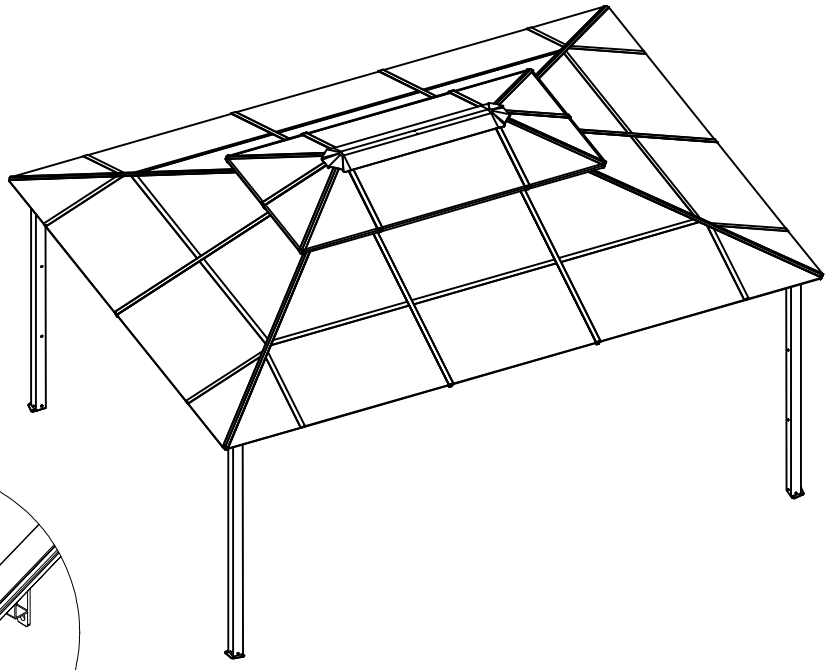

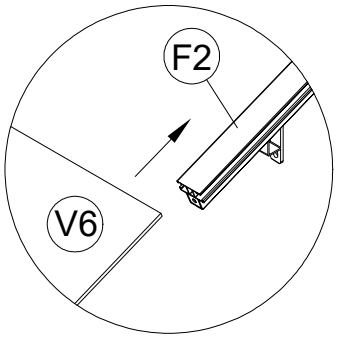

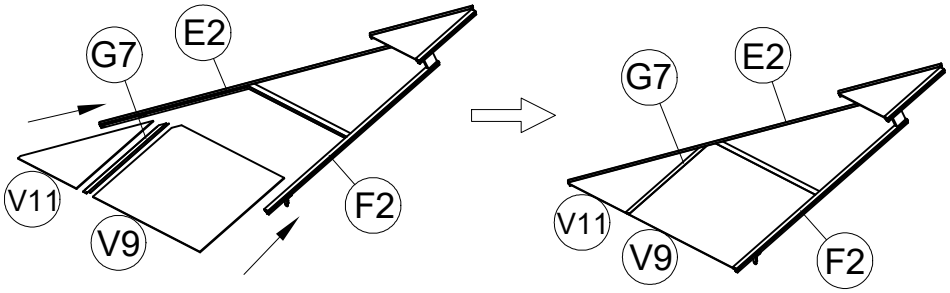

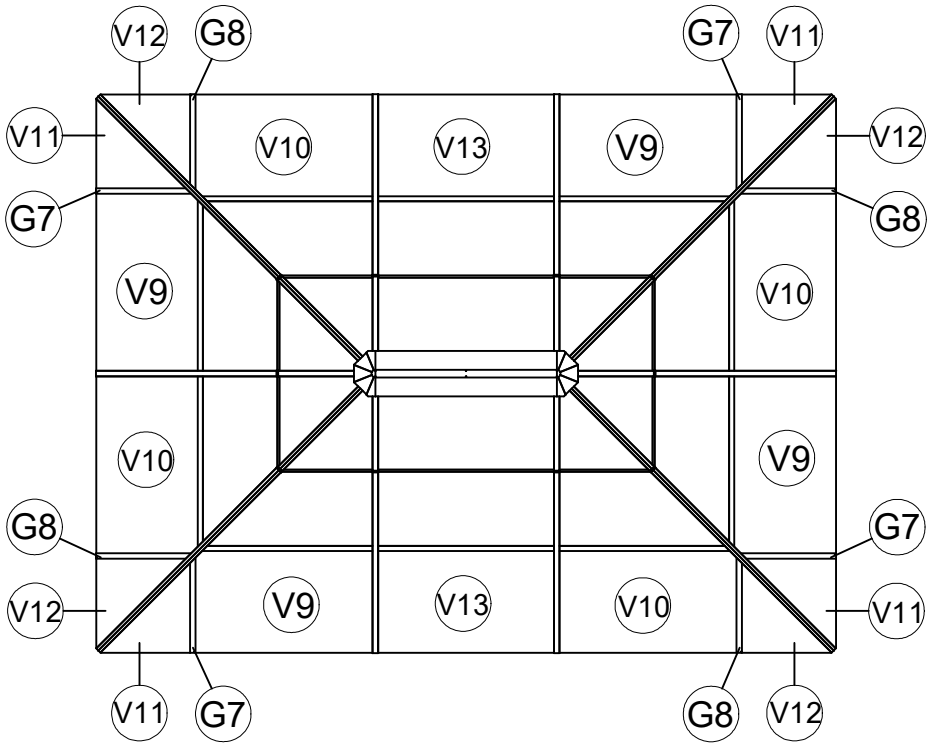




H9 2x



H5 4x



H6 4x



N 4x





N1 6x





M6x15

1 10x

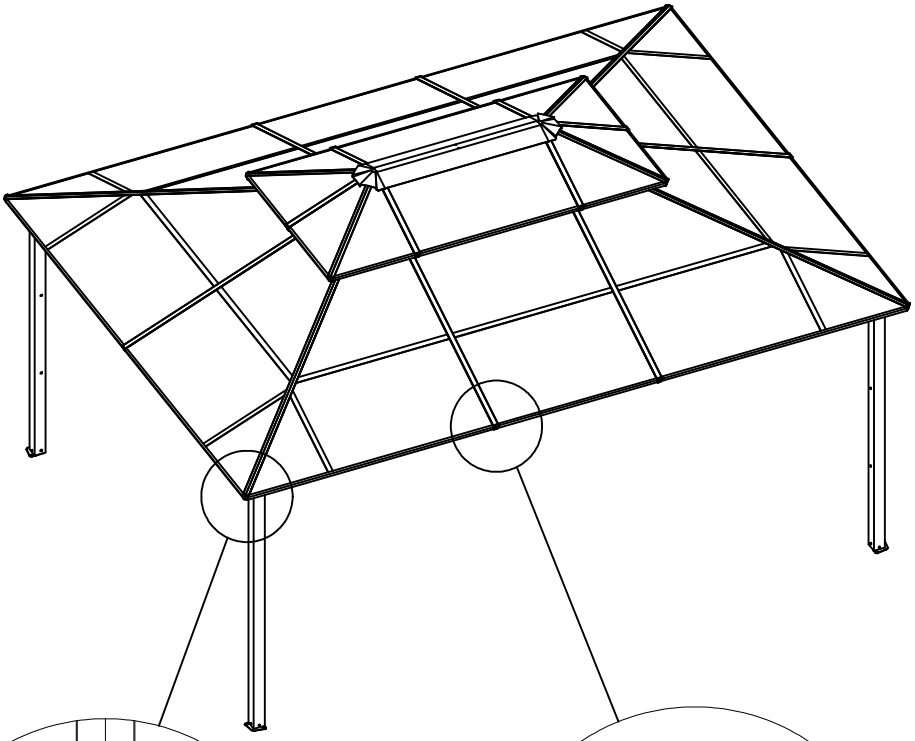


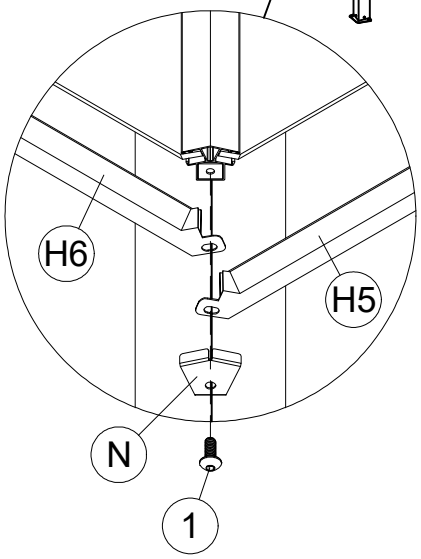


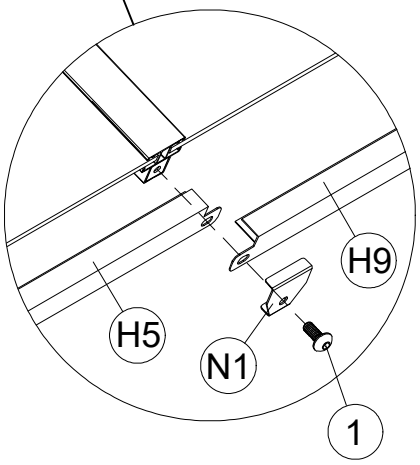

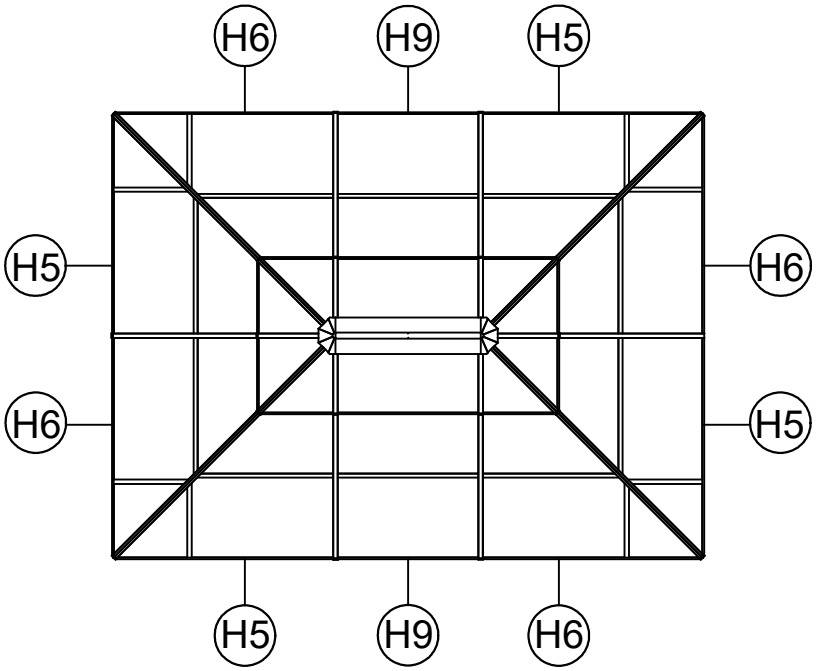



<15>

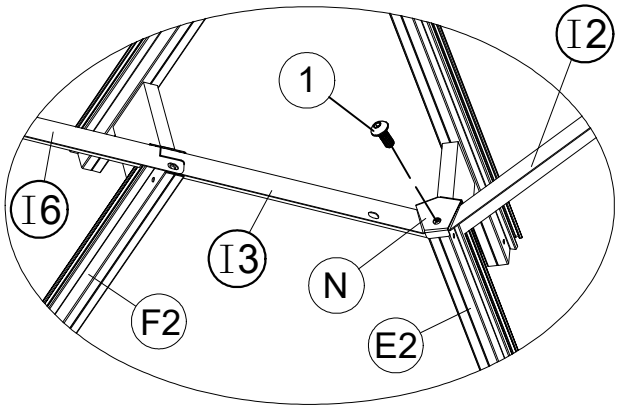

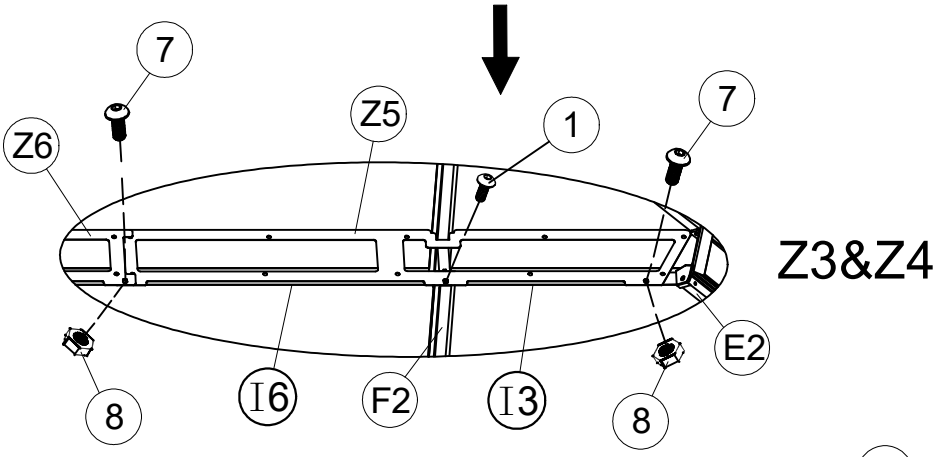

Z3&Z4

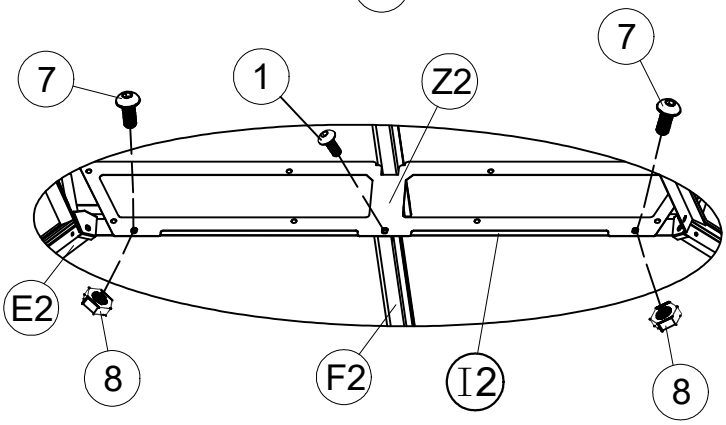

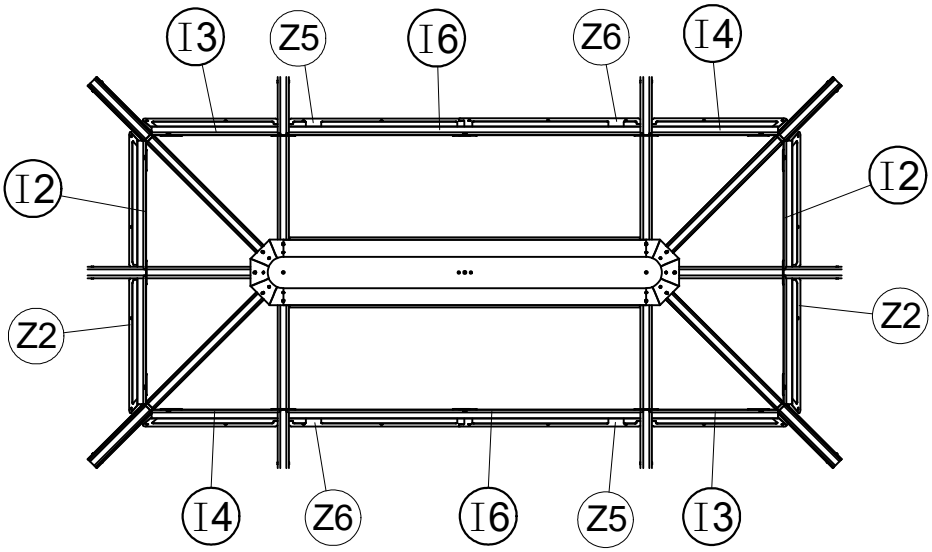

Top view of the roof

I2 2x

I3 2x

I4 2x

I6 2x

N 4x

M6x15
1 10x


Z2 2x

Z5 2x


Z6 2x

M6x10
7 10x


M6
8 10x

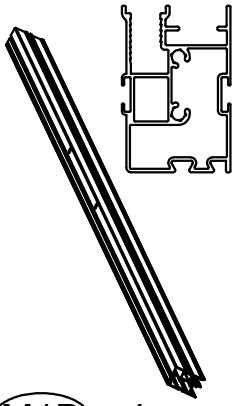


M1B 4x

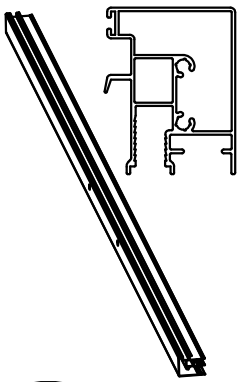


M1C 4x

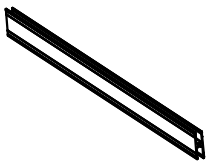

M5G 8x



MS2 4x

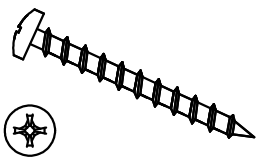



M4x50

11 16x


AB 4x

For component AB, repeat four times.

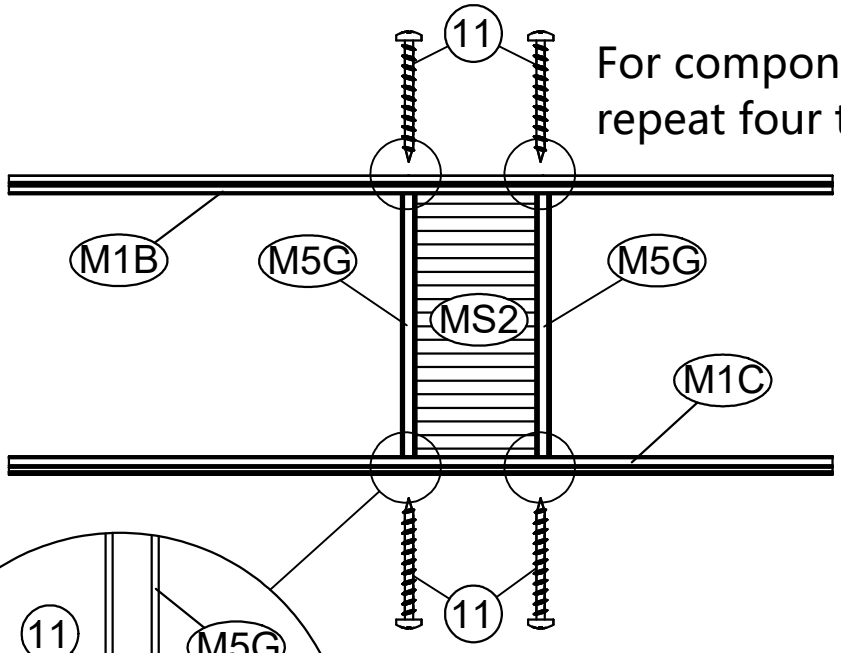

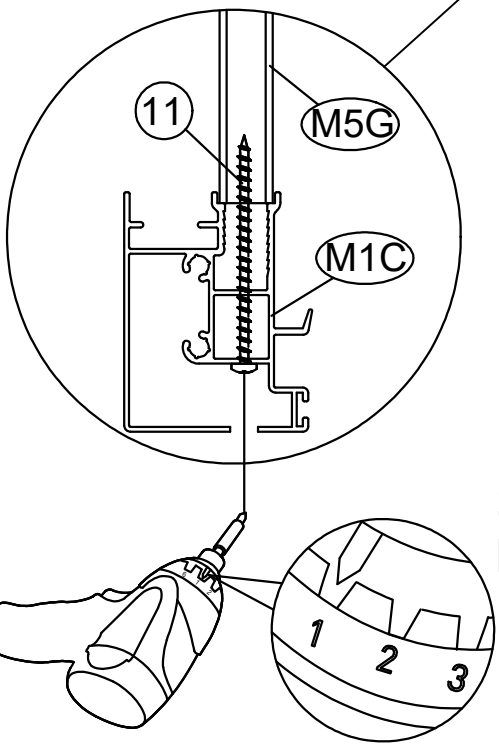


Select the low gear.

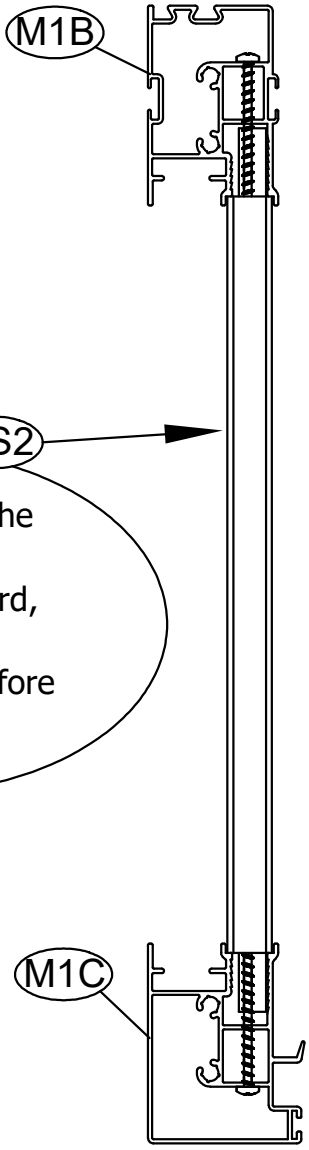


MS2

With the side of the PC panel that has text facing outward, remove the protective film before installation.

The door frame installation template is provided on pages 25 to 29. All following door frames should be installed according to this template.

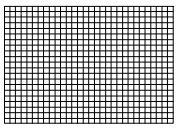

M1S 4x

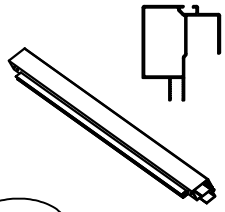

M4K 4x




M4x20


9 16x

<17>

For component AB, repeat four times.


AB 4x

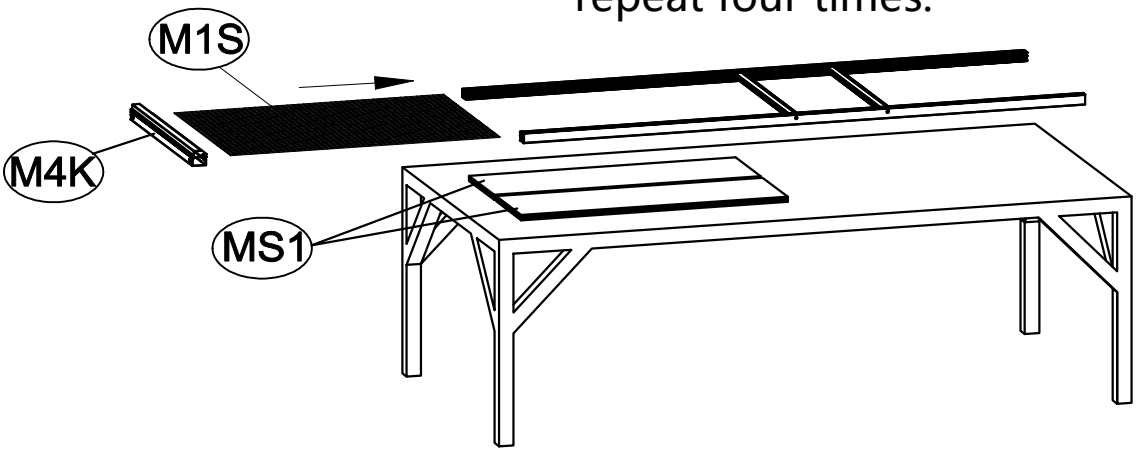

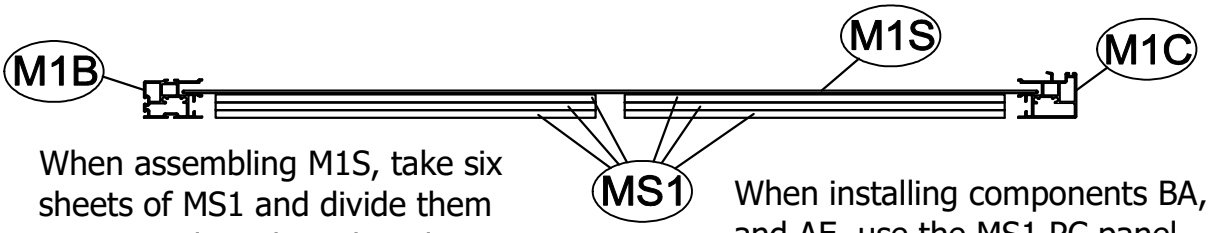

When assembling M1S, take six sheets of MS1 and divide them into two piles. Place the piles under the bottom to lift M1S.

When installing components BA, and AE, use the MS1 PC panel as a pad in the same way.

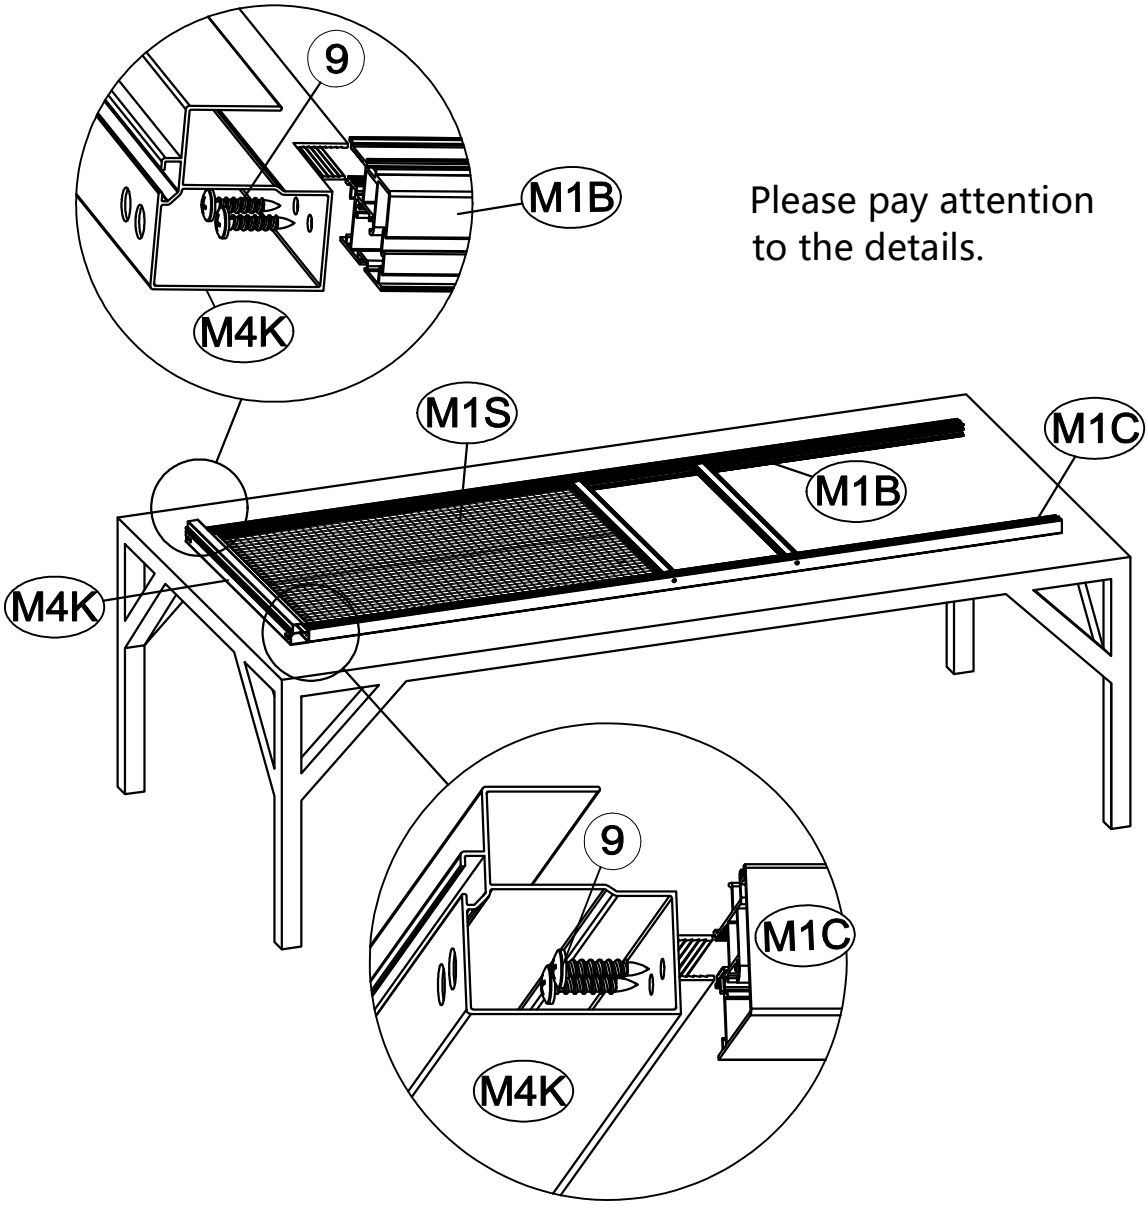


Please pay attention to the details.


<18>

For component AB, repeat four times.

AB 4x

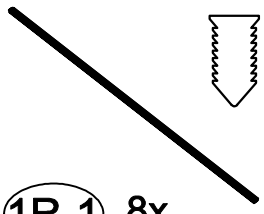



1R-1 8x

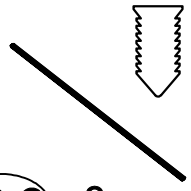



1R-2 8x

Before installing parts 1R-1 and 1R-2, move the mesh by hand to ensure there is enough space around it.

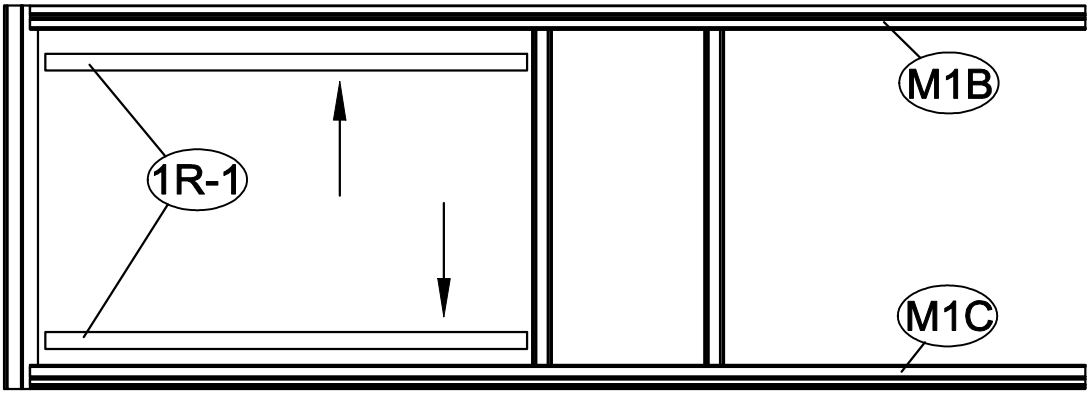

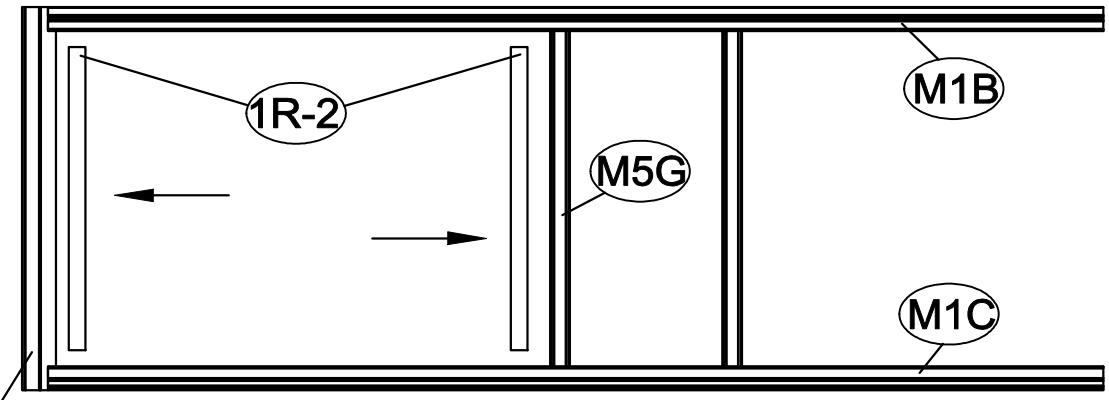


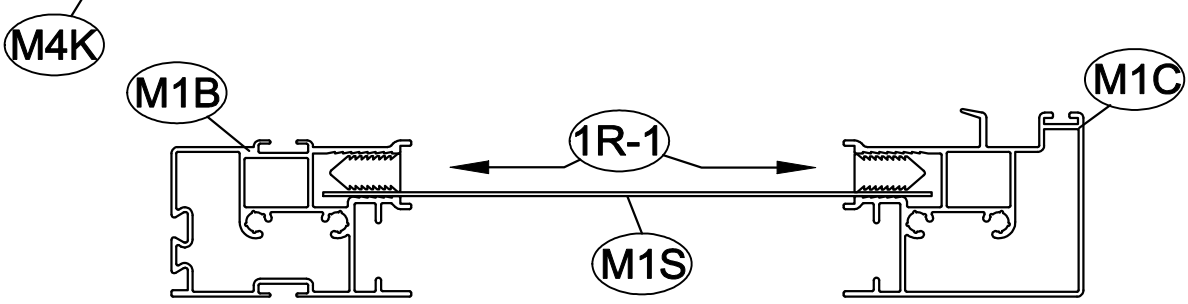

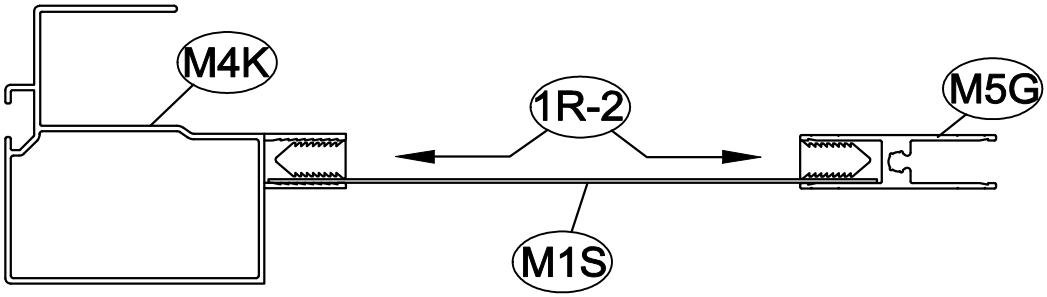

<19>

This picture is provided for subsequent reference.

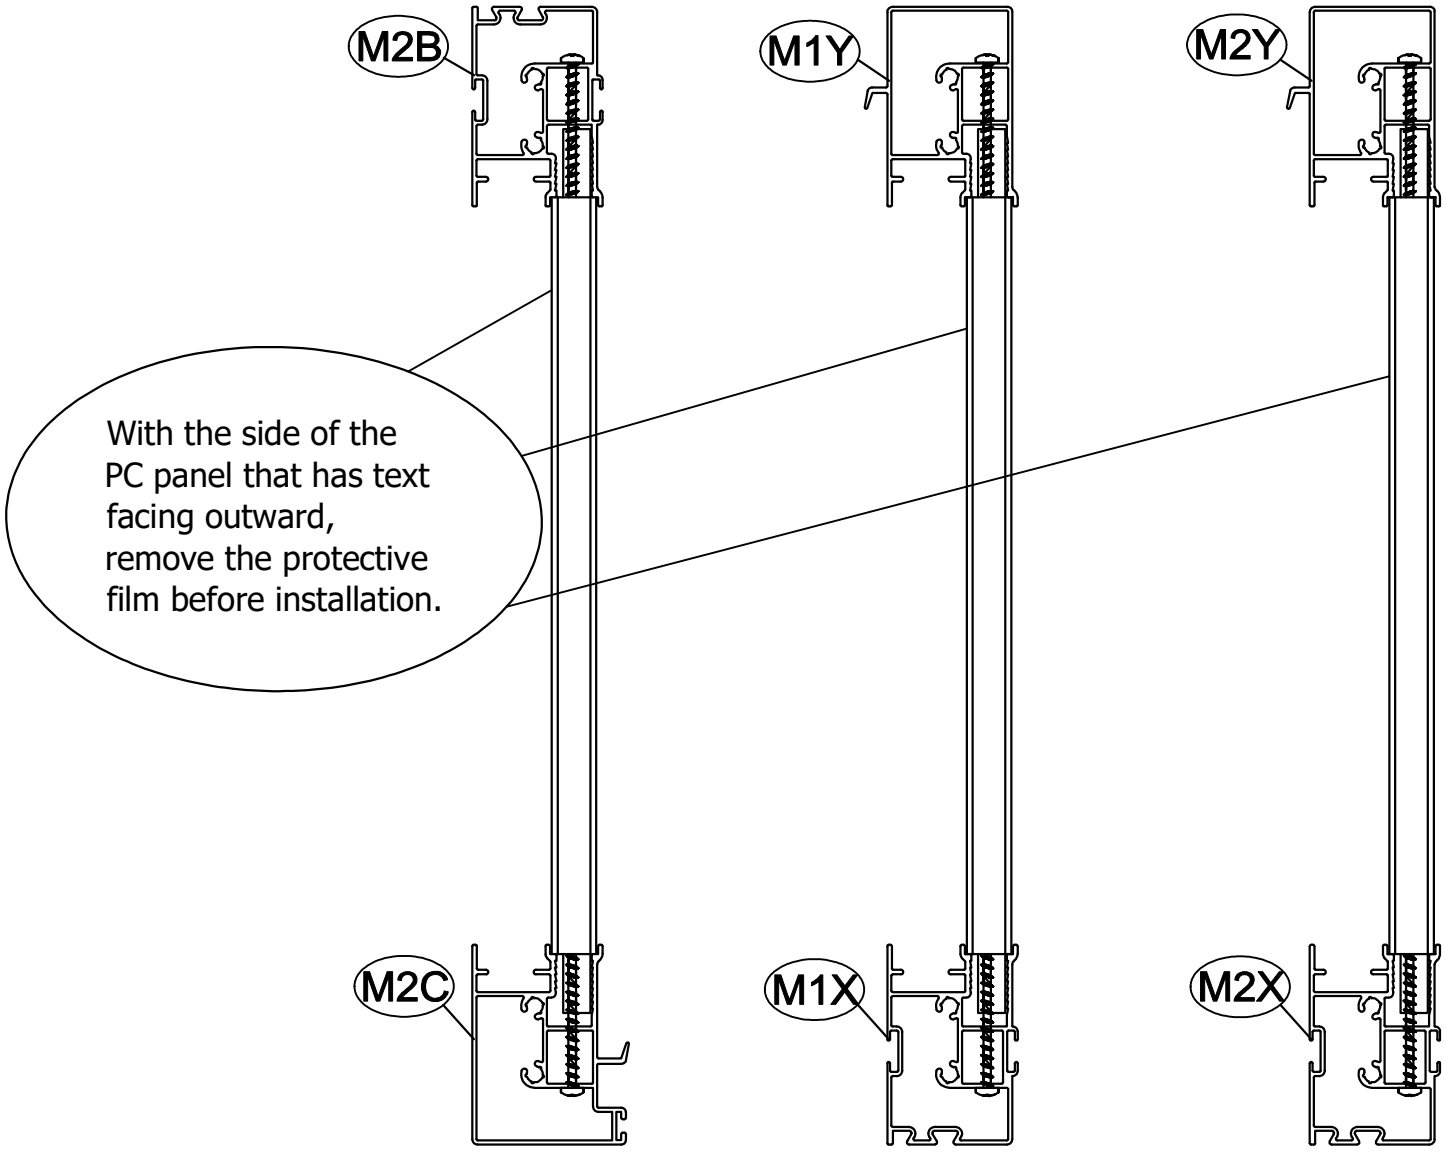


<20>

Door frame BA and AE installation: see pages 25–29.


M4K	4x
1R-1	8x
1R-2	8x
M5G	8x
M1S	4x
MS2	4x
M2B	4x
M2C	4x
11	16x
9	16x

For component BA, repeat four times. BA 4x

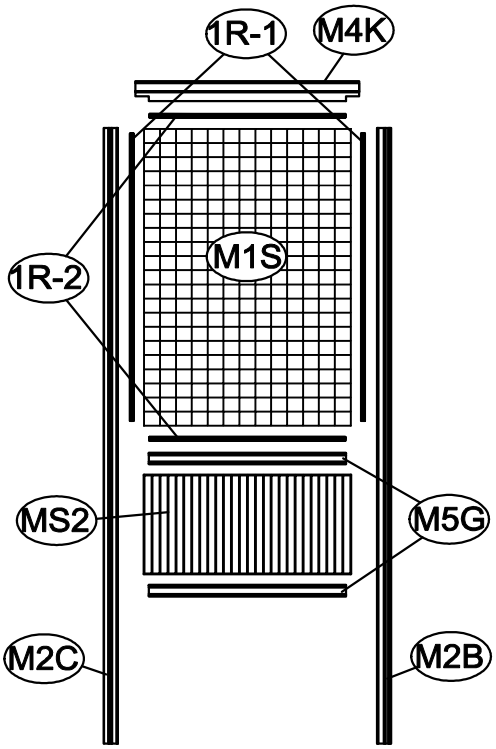


M7K	4x
1R-1	8x
1R-4	8x
M8G	8x
M4S	4x
MS14	4x
M1B	4x
M2B	4x
11	16x
9	16x


For component AE, repeat four times. AE 4x

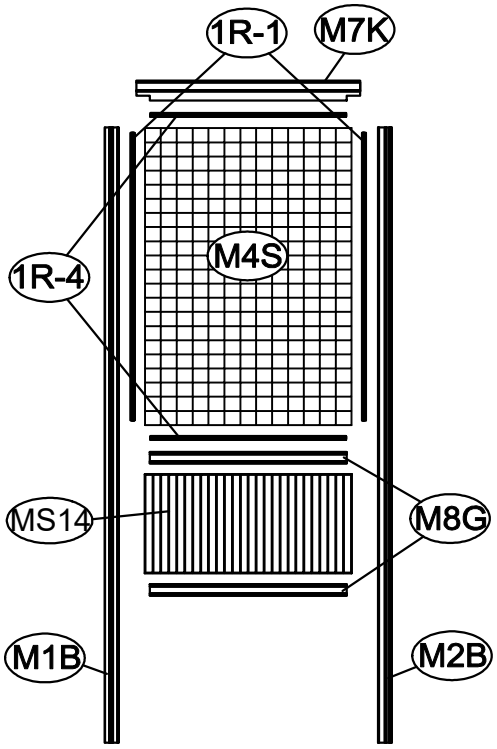


AB and BA are symmetrical components.

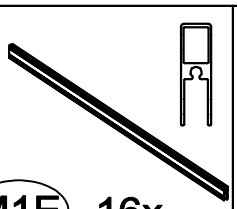


M1E 16x

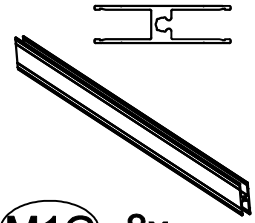


M1G 8x

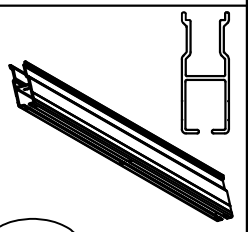

M4L 16x



MS1 16x




M4x35


10 48x

<21>

For component AF, repeat eight times. AF 8x

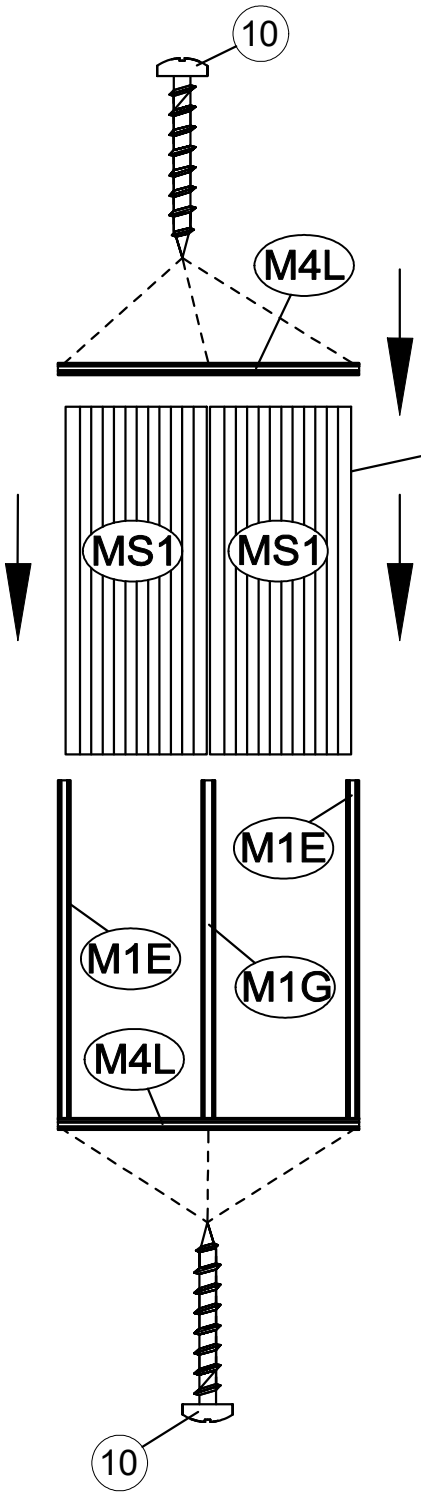


With the side of the PC panel that has text facing outward, remove the protective film before installation. After installation, make sure the front side remains facing outward for the next step.

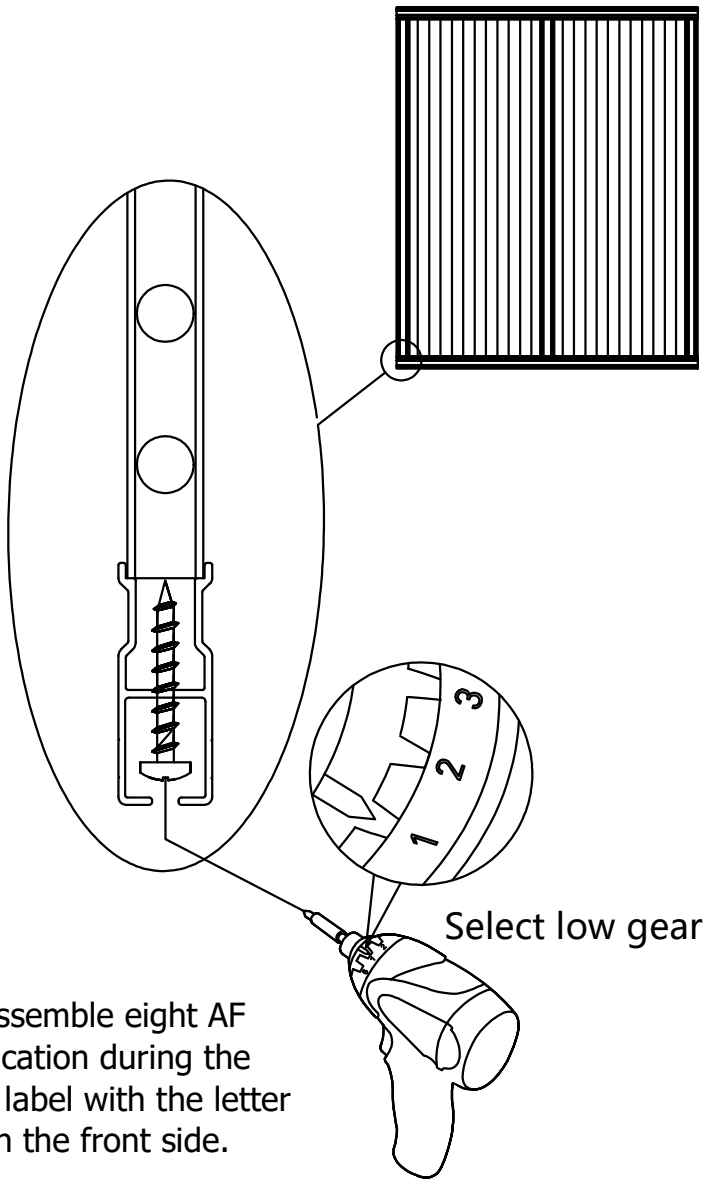


Select low gear


Repeat the previous steps to assemble eight AF components. For easier identification during the following assembly, attach the label with the letter "AF" to a prominent position on the front side.

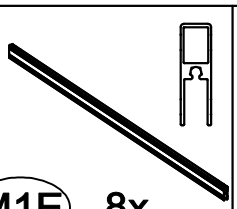


M1E 8x

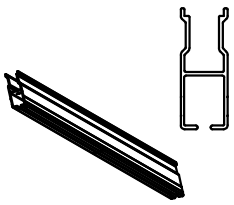

M7L 8x




MS13 4x




M4x35


10 16x


For component AF, repeat four times. AG 4x

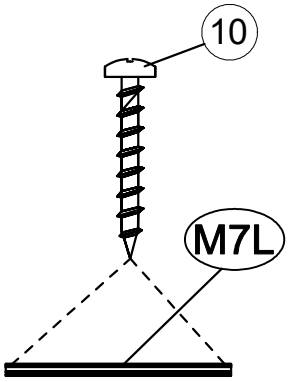

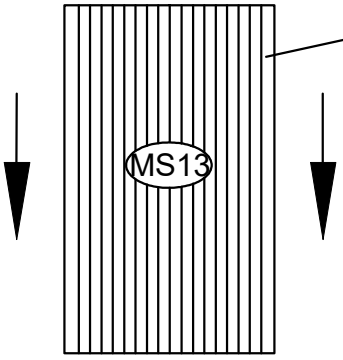


With the side of the PC panel that has text facing outward, remove the protective film before installation. After installation, make sure the front side remains facing outward for the next step.

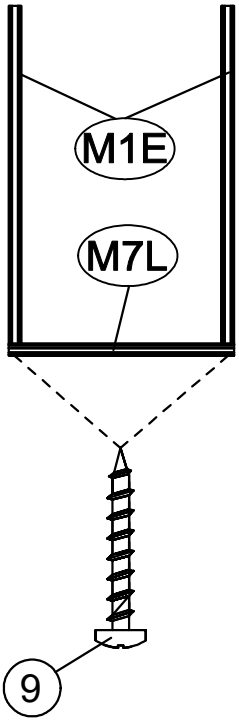

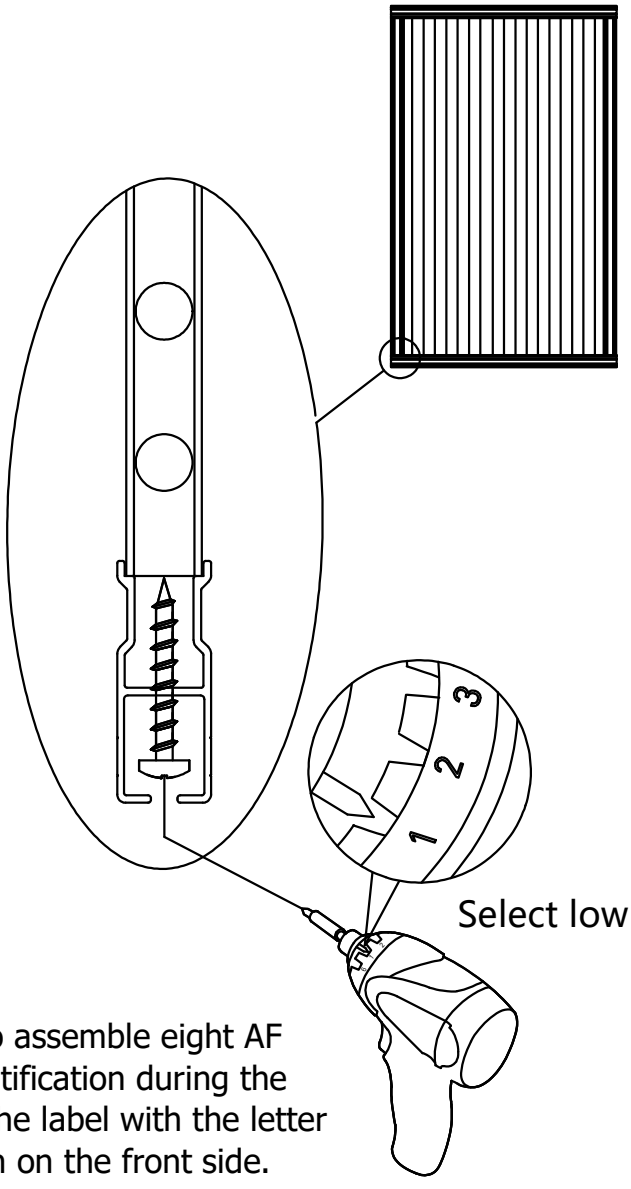

Select low gear


Repeat the previous steps to assemble eight AF components. For easier identification during the following assembly, attach the label with the letter "AG" to a prominent position on the front side.



MD1 48x




MD2 96x




MD3 24x

AF 8x AG 4x

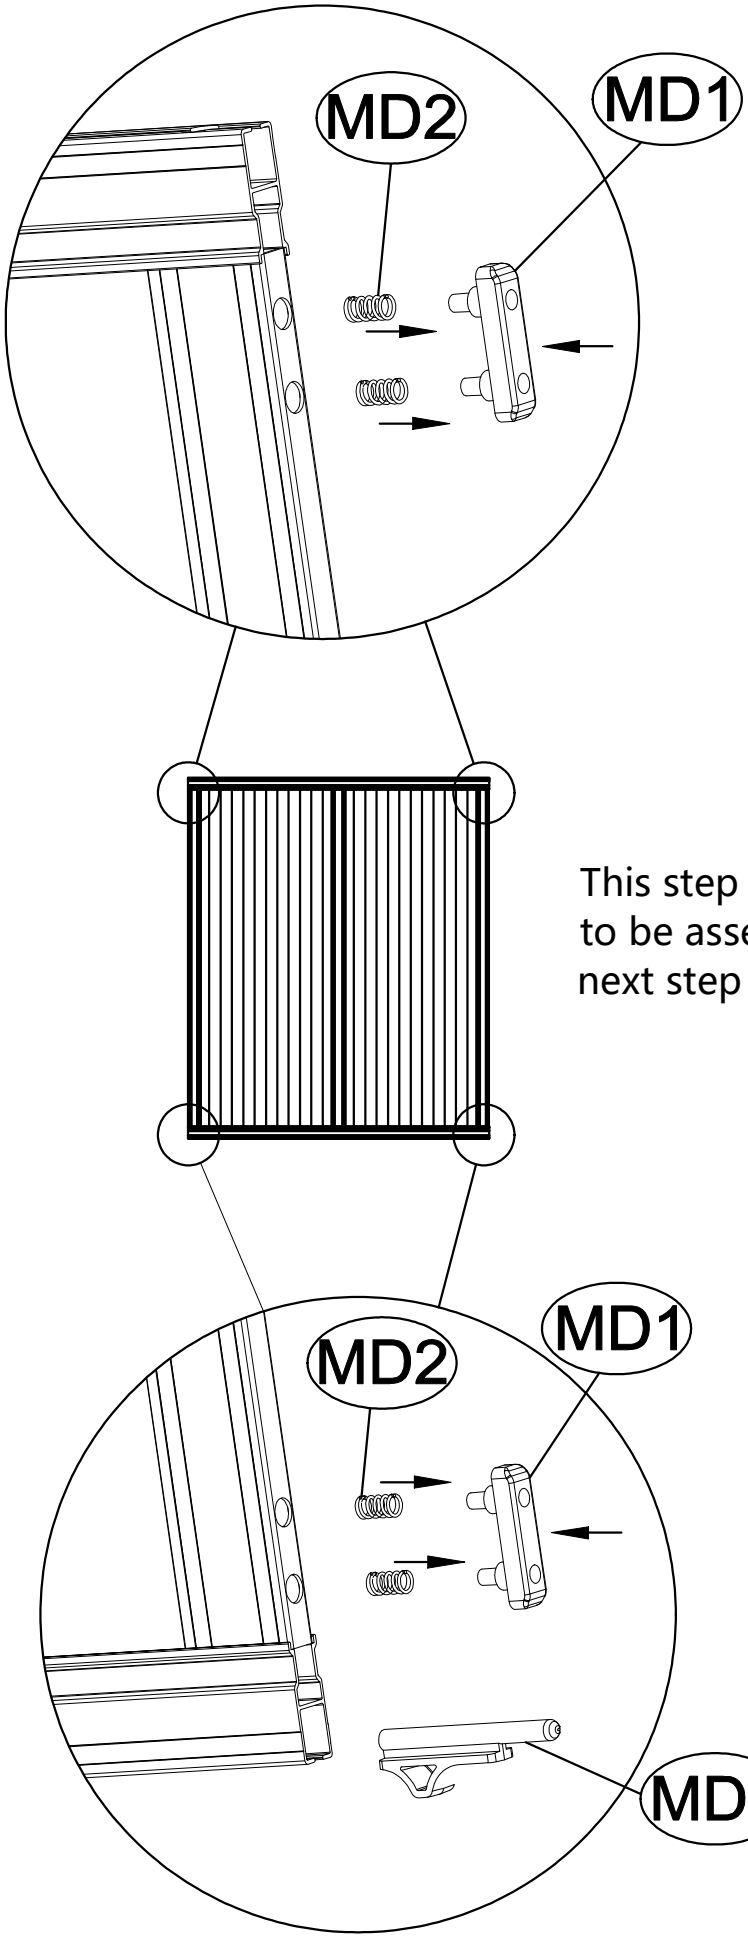


This step is recommended to be assembied with the next step together.

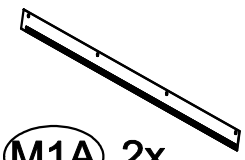


M1A 2x



M2A 2x

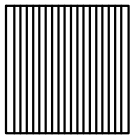

MS3 4x

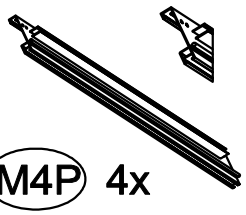

M4P 4x




M4x20


9 16x


<24>

AB 2x

BA 2x

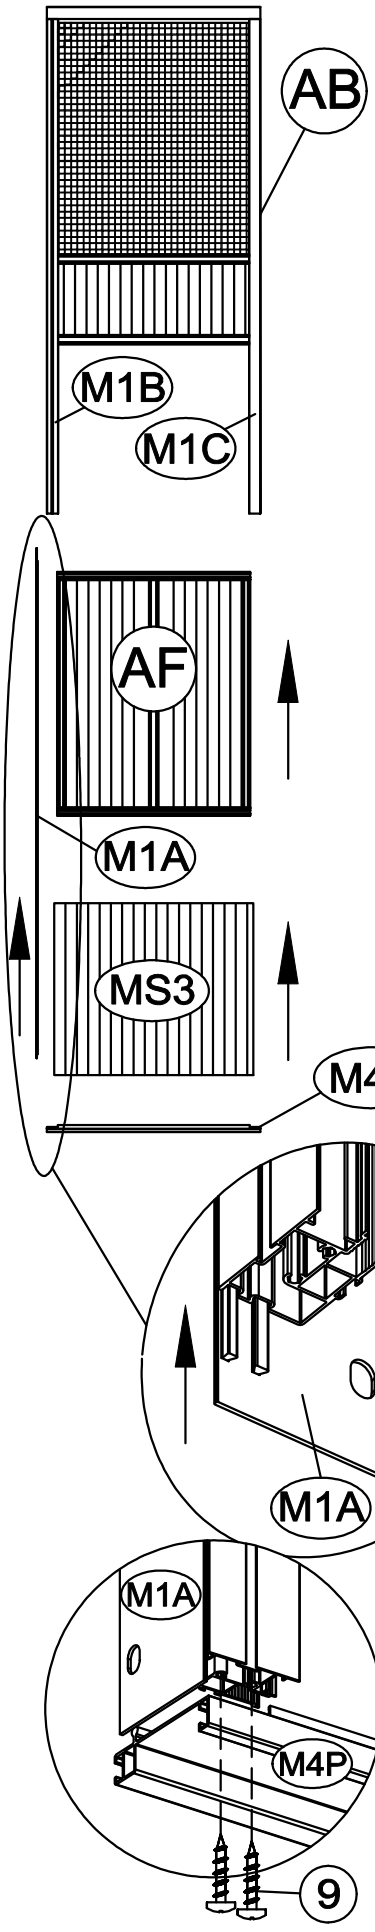


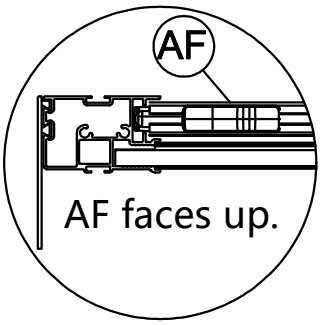

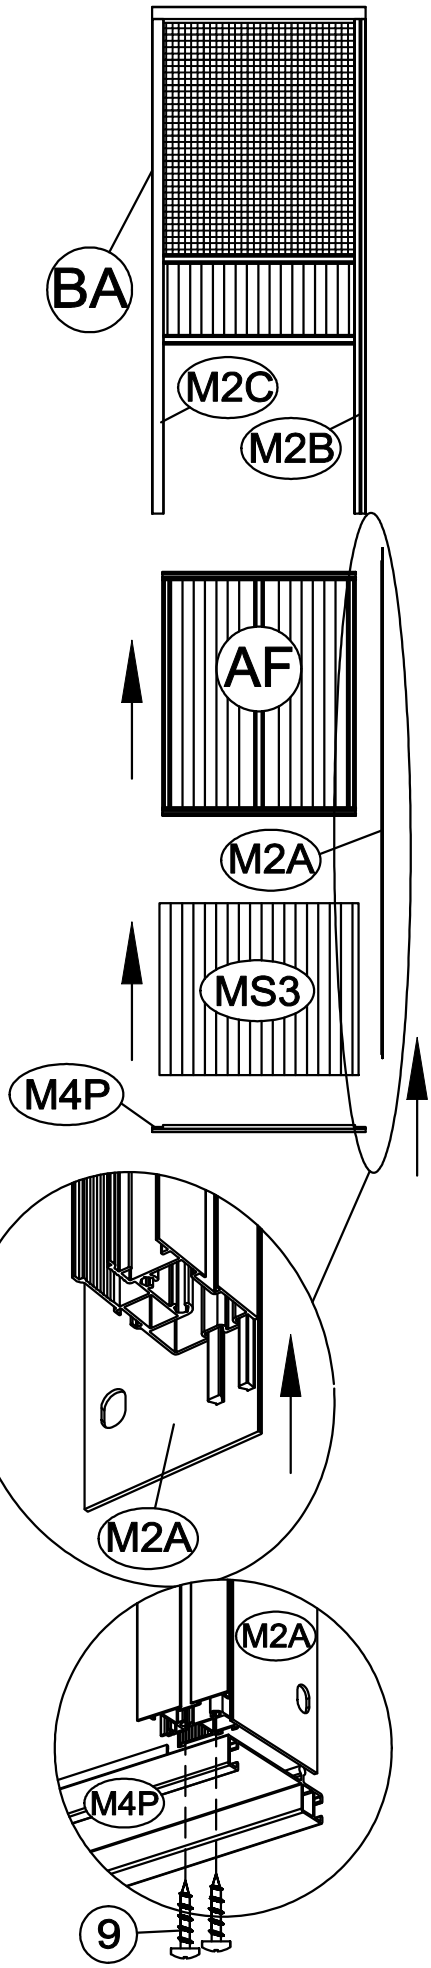


<25>


x2

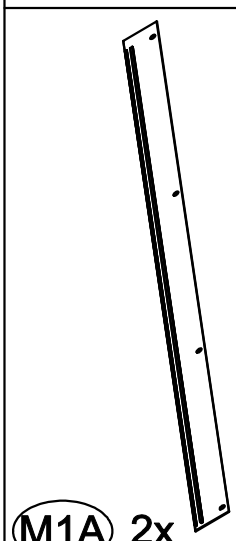


M1A 2x

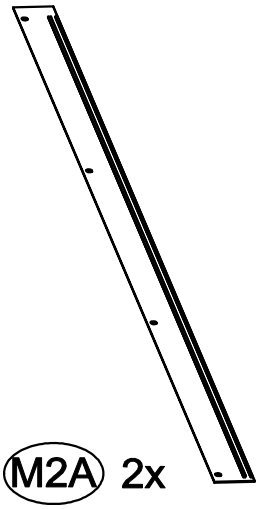

M2A 2x

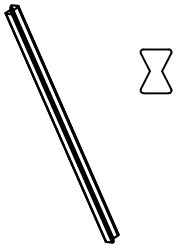

M1Q 4x




12 4x




M5x6

13 16x

35

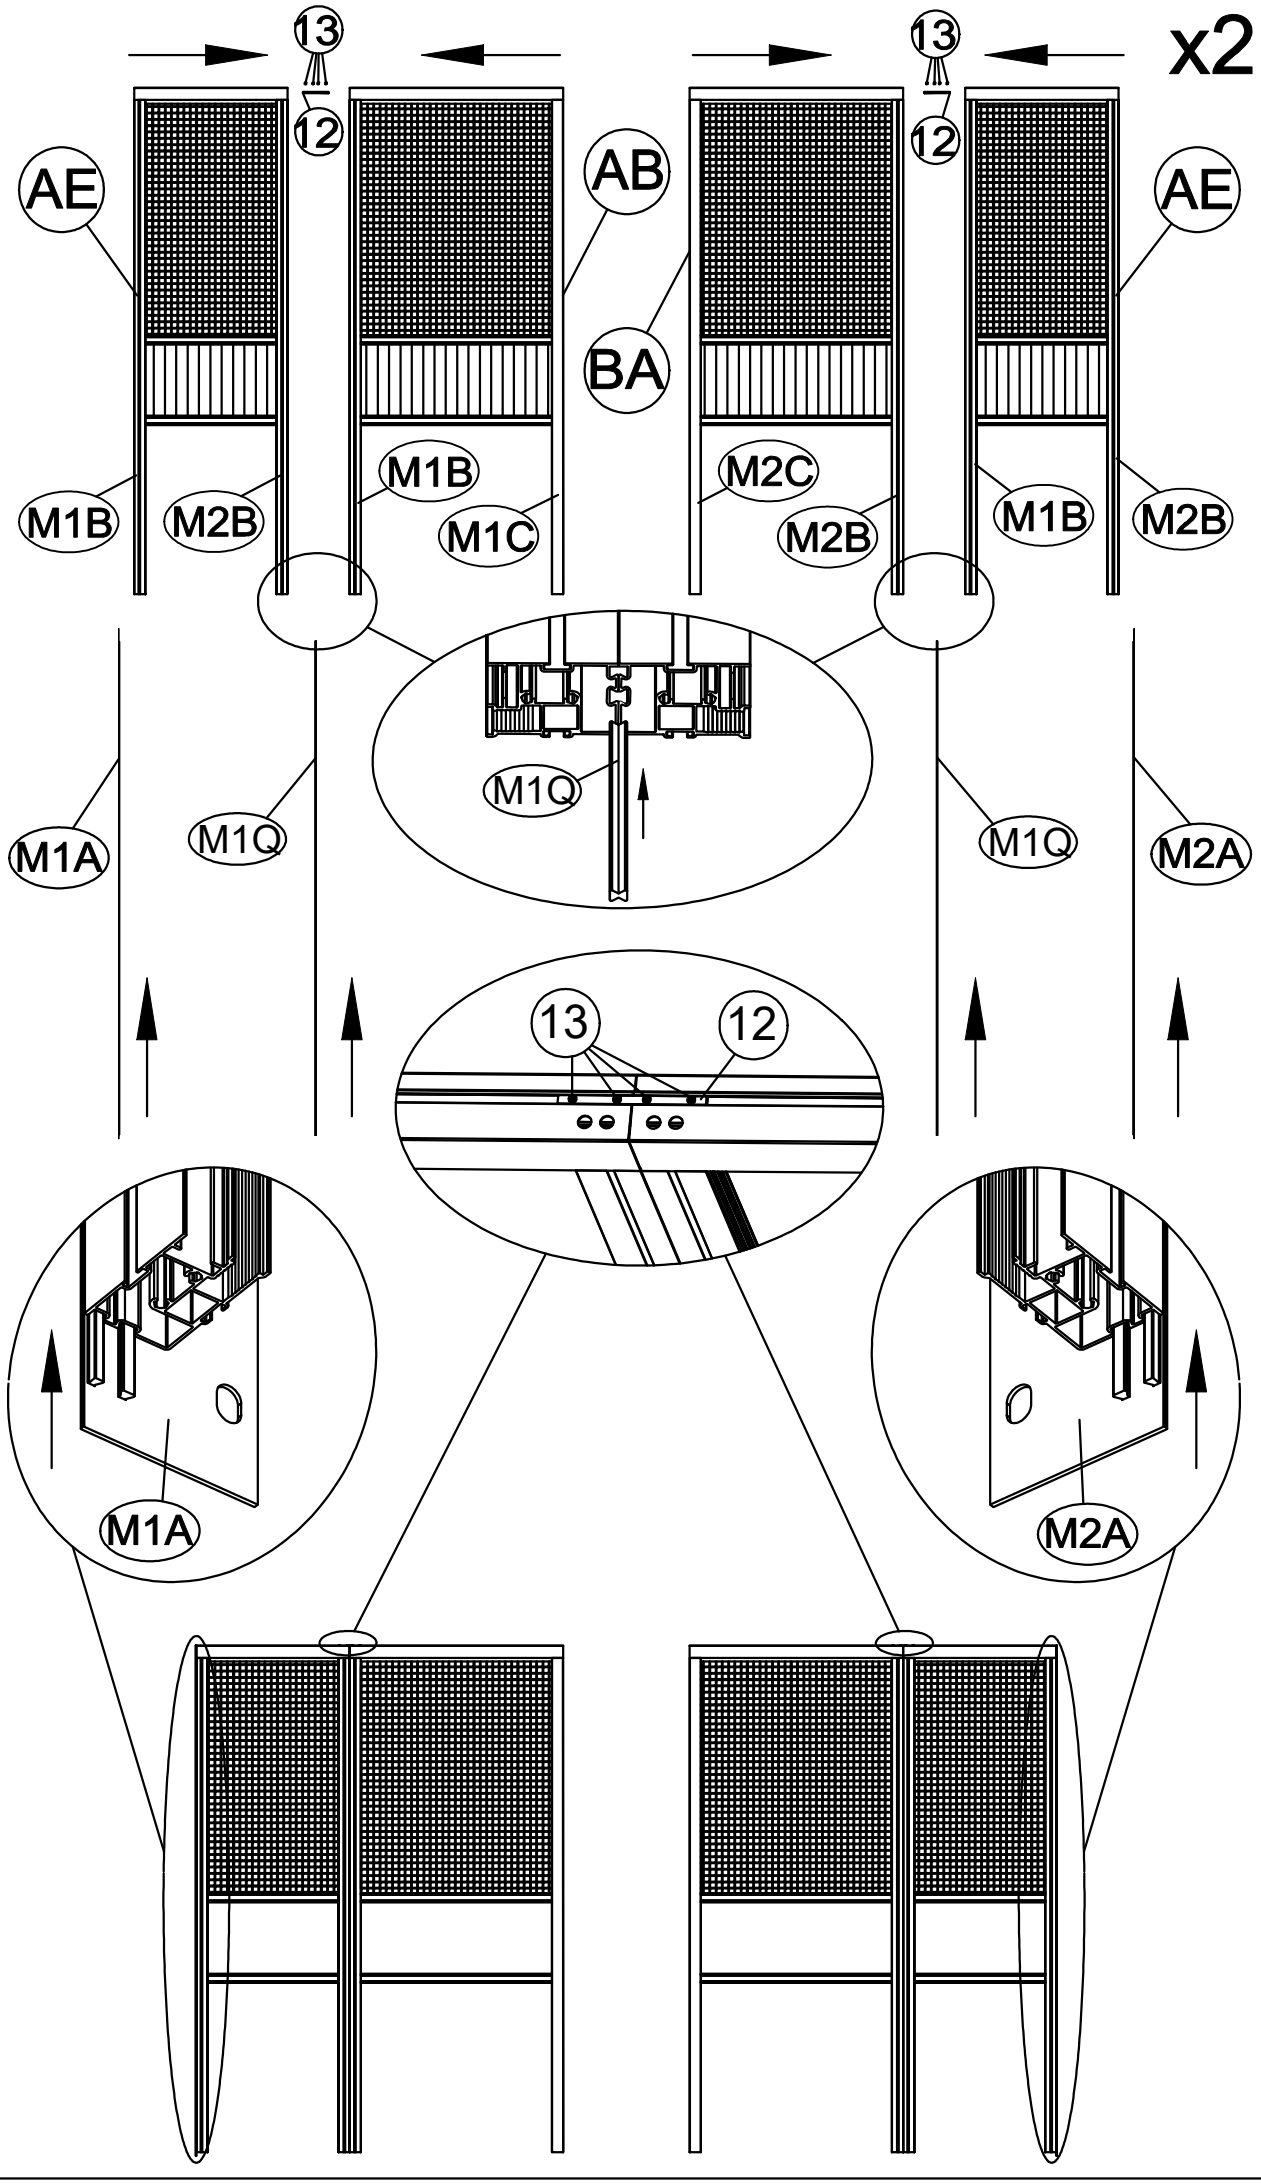




12 8x




M5x6


13 32x




MS15 4x

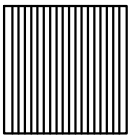

MS3 4x

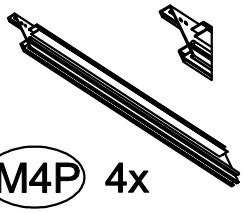

M4P 4x

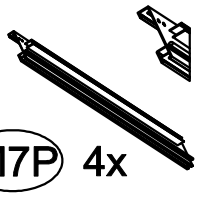


M7P 4x



M4x20


9 32x

x2

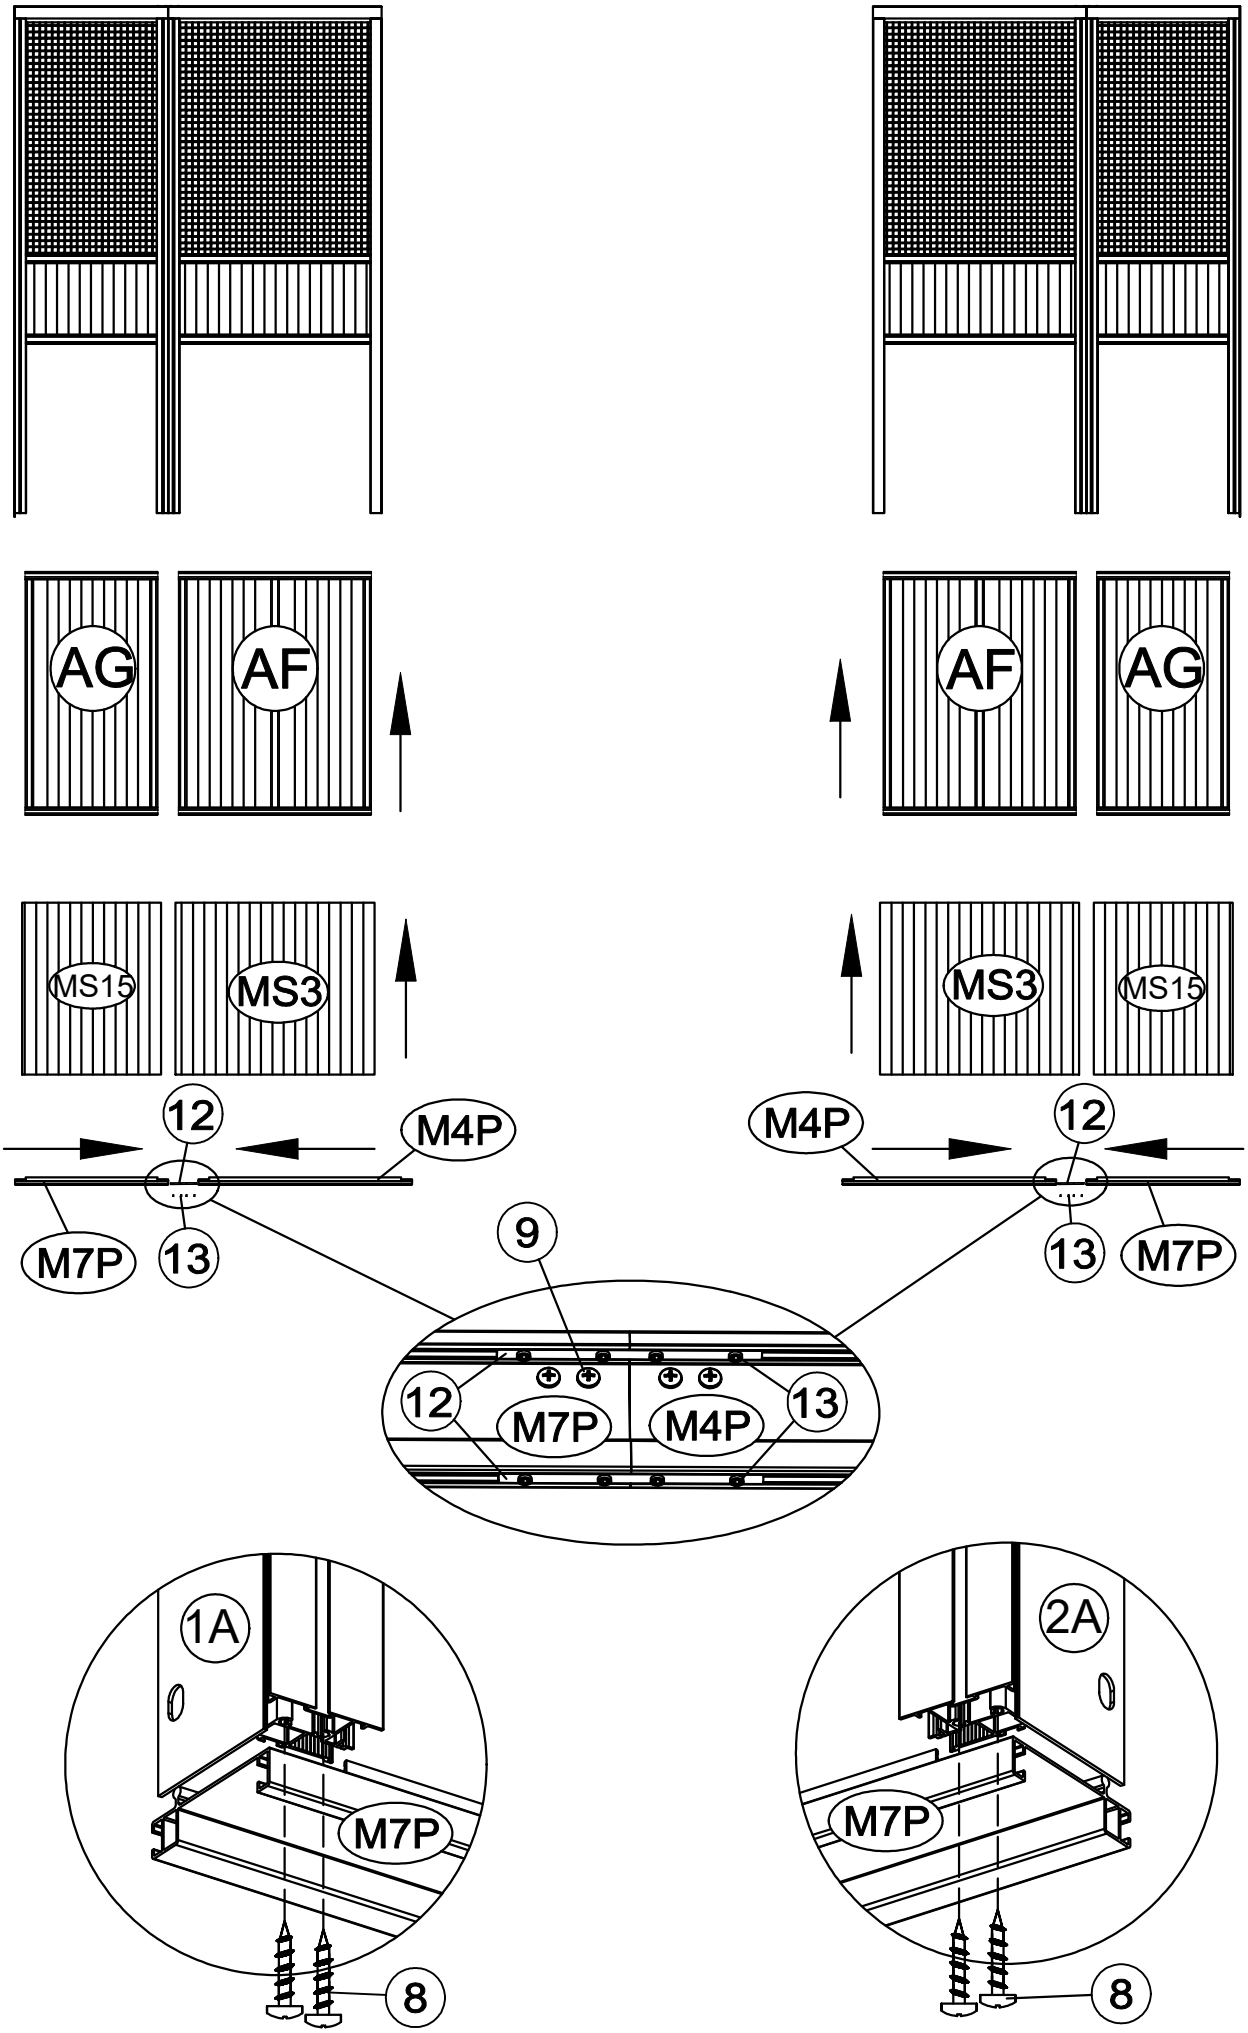


<27>


AD 4x

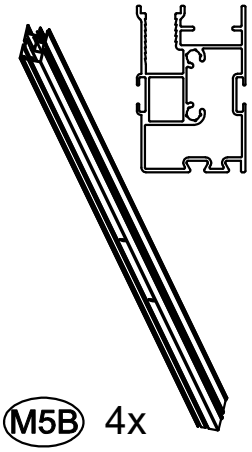


M5B 4x

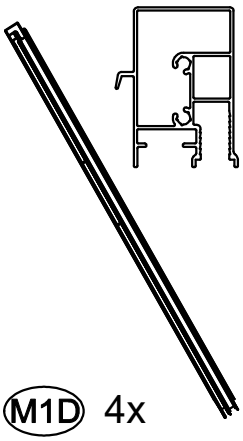


M1D 4x

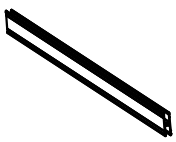

M5G 8x





MS2 4x

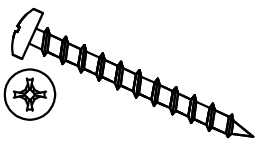


M4x50


11 16x

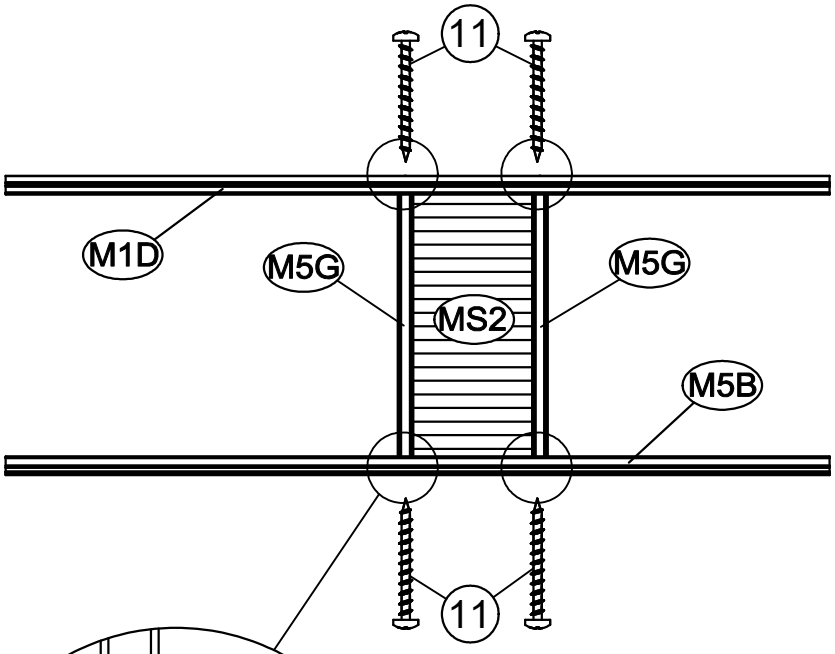

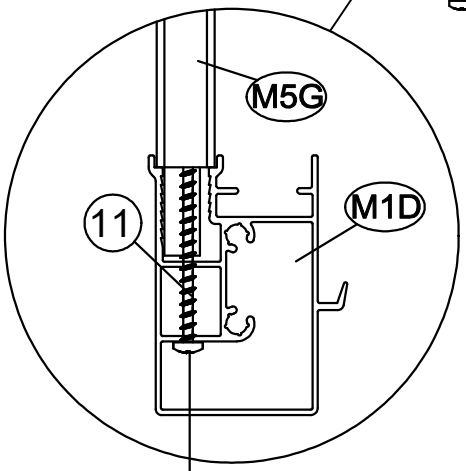

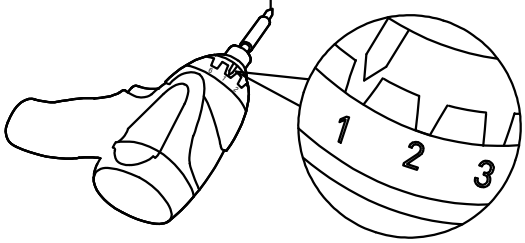


Select the low gear.

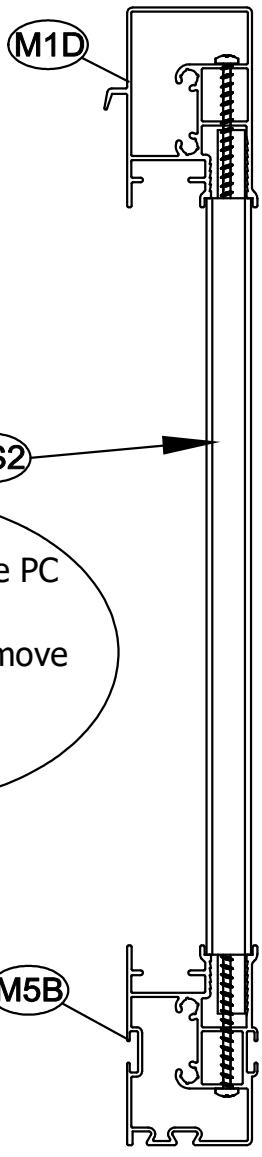


With the side of the PC panel that has text facing outward, remove the protective film before installation.


The door frame installation template on pages 36 to 38 is displayed. All subsequent door frames follow this template.

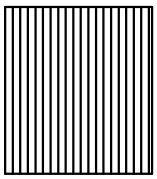


MS20 4x

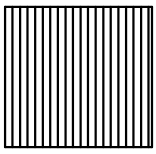


MS4 4x

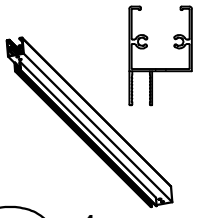

M4H 4x

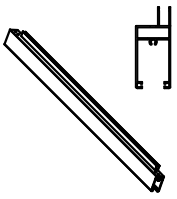


M4M 4x




M4x20

9 32x

AD 4x

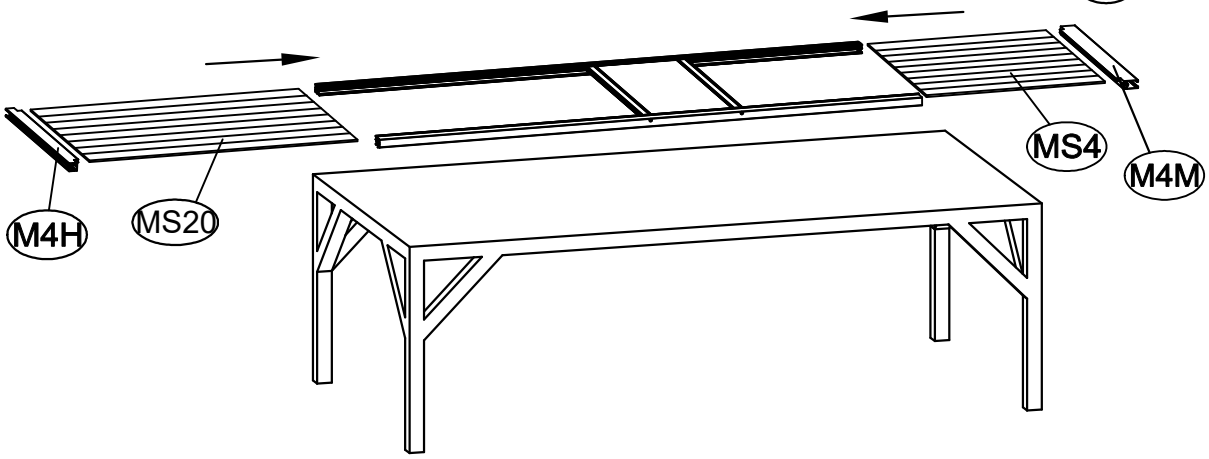

This picture is for reference in the following steps.

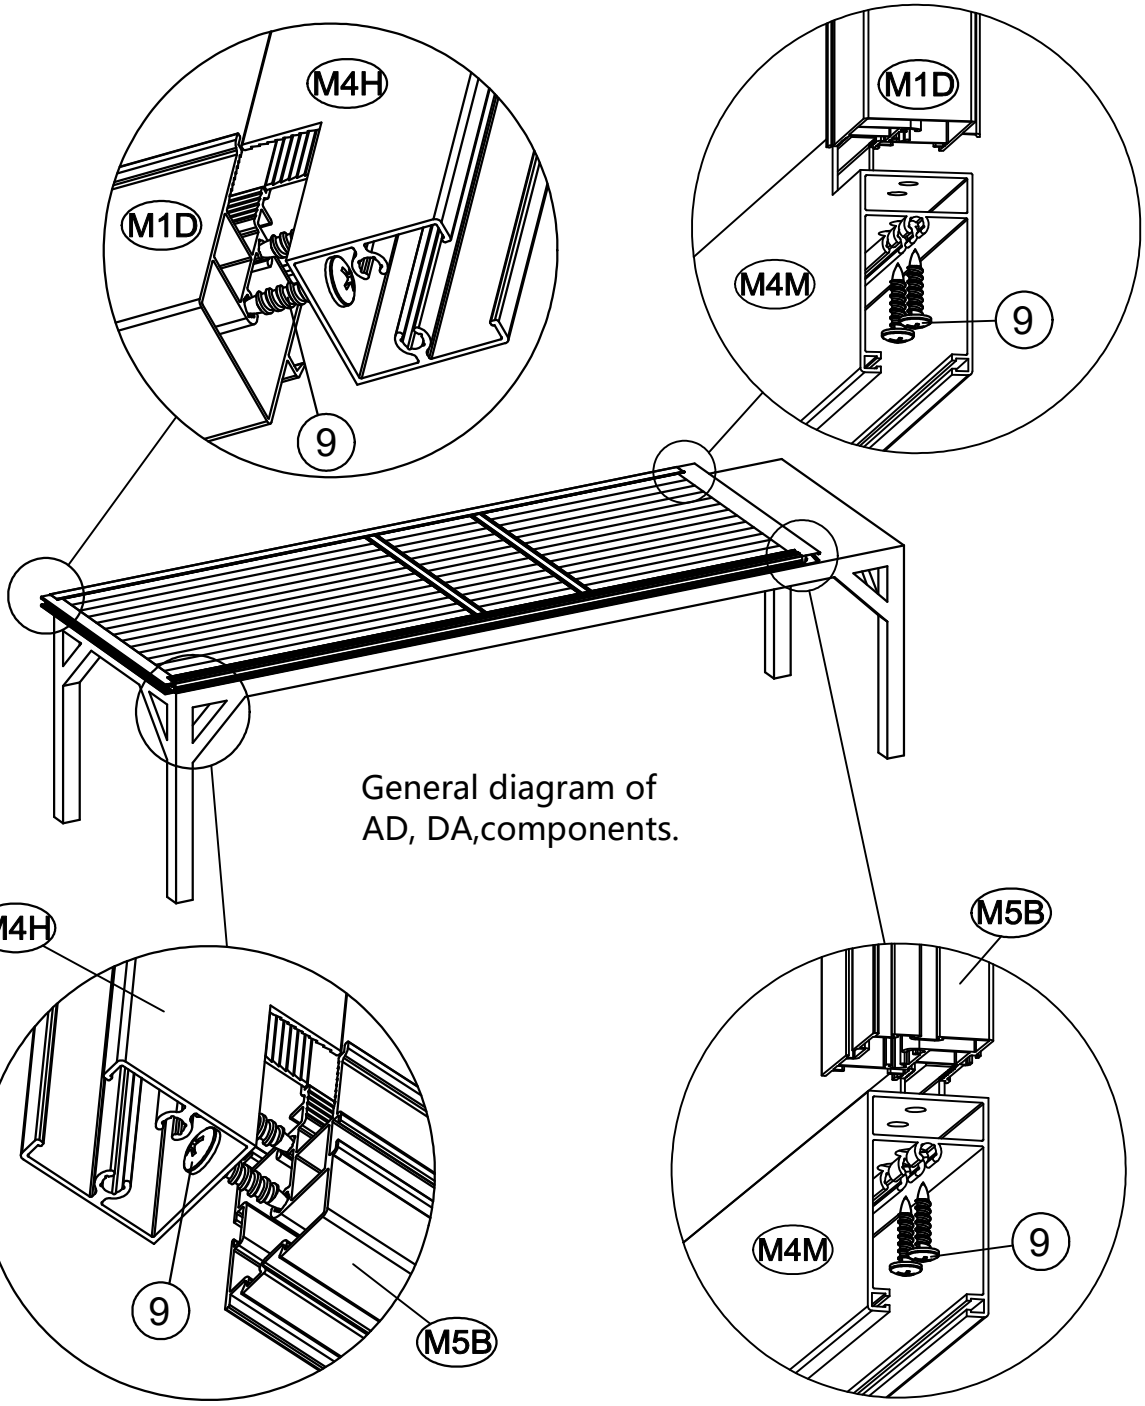


General diagram of AD, DA,components.

<29>

Door frame BA and AE installation: see pages 36–38.

M4H	4x
M4M	4x
M5G	8x
MS20	4x
MS2	4x
MS4	4x
M6B	4x
M2D	4x
11	16x
9	32x


DA 4x

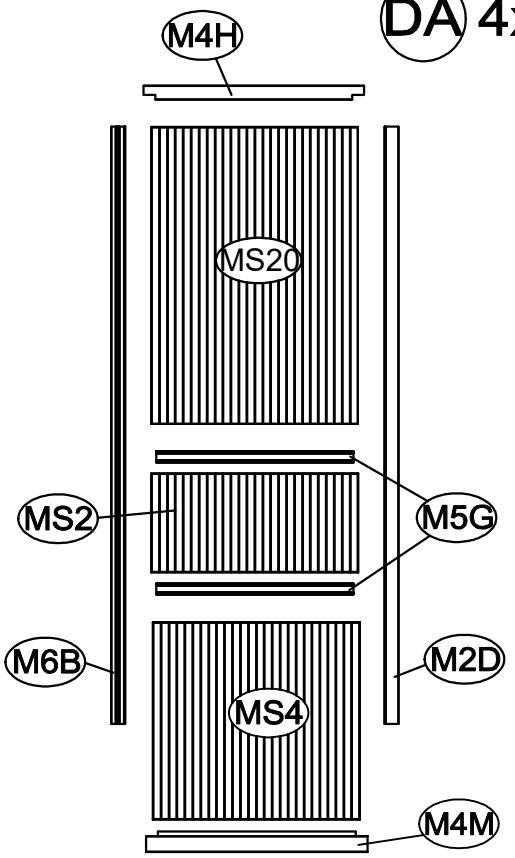


AD and DA are symmetrical components.



MD5 8x



MD4 8x

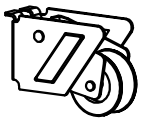


4-1 8x



M4x20


9 16x



M4x35

10 8x

AD 4x

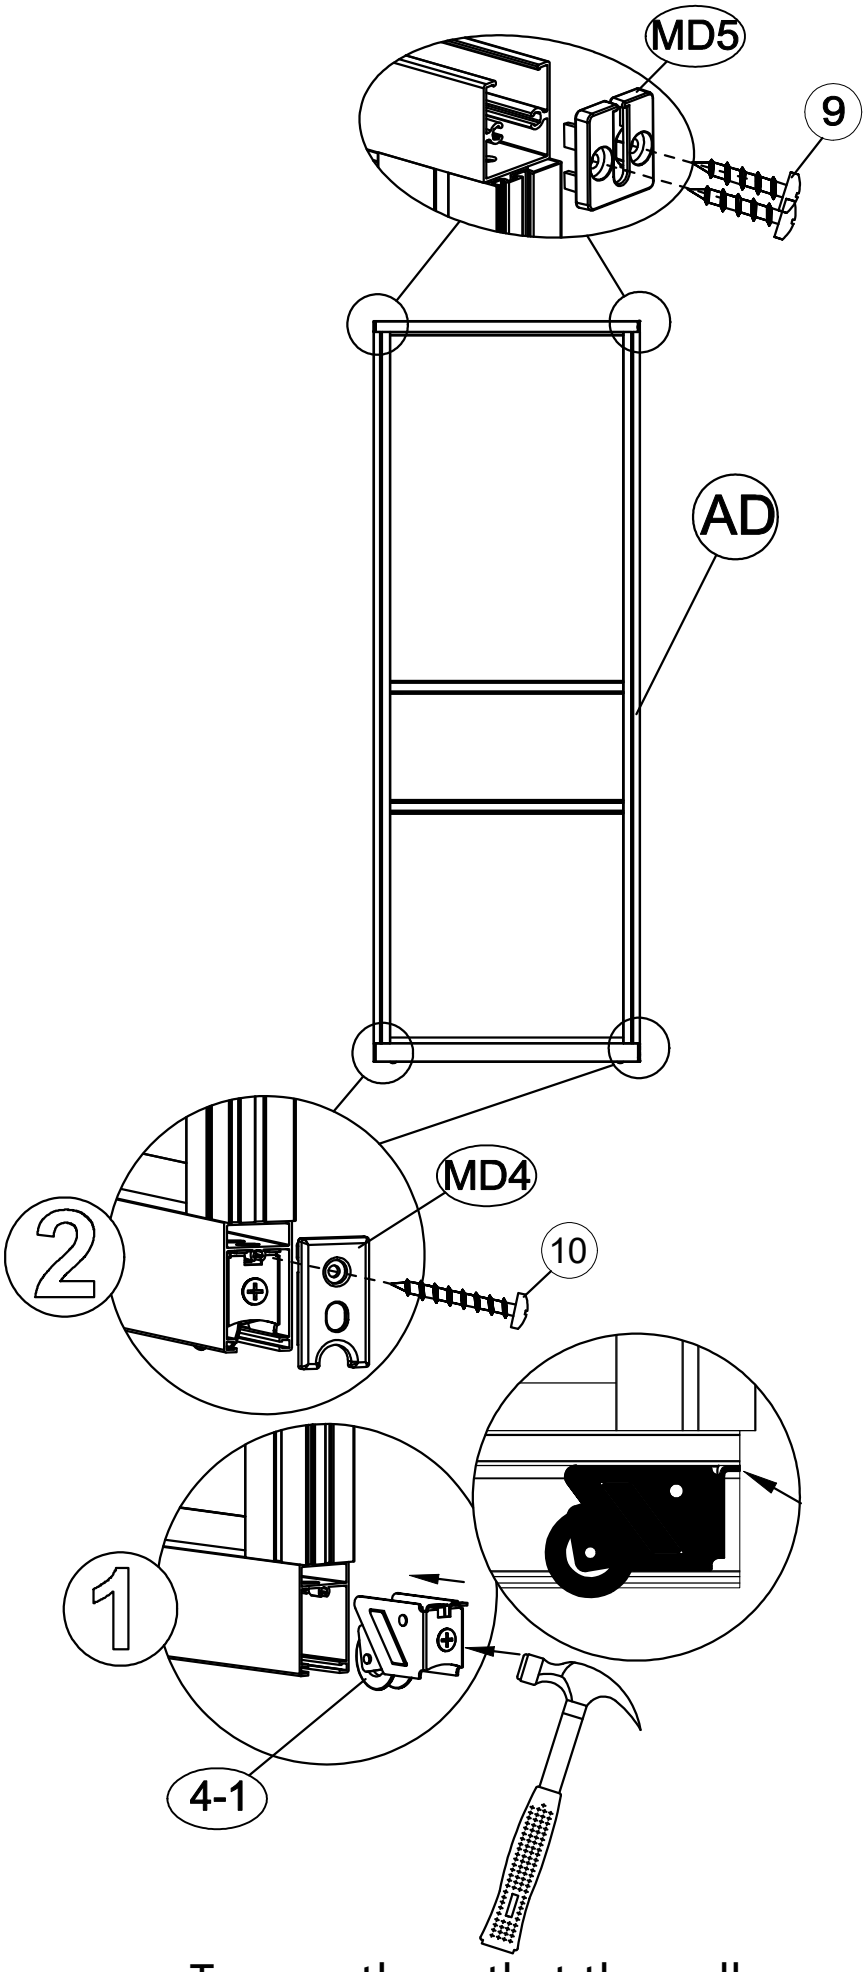


Tap gently so that the pulley is flush with the profile.

<31>

MD4	8x
MD5	8x
4-1	8x
9	16x
10	8x

DA 4x

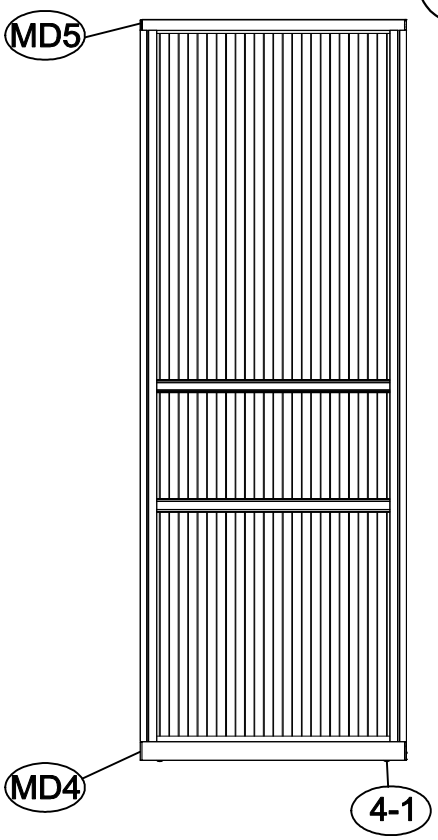


Door frame DA installation: see pages 39–40.

AD and DA are symmetrical components; AE and EA are also symmetrical.




5-1 2x

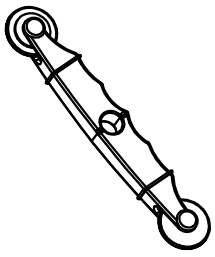


23 1x


Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

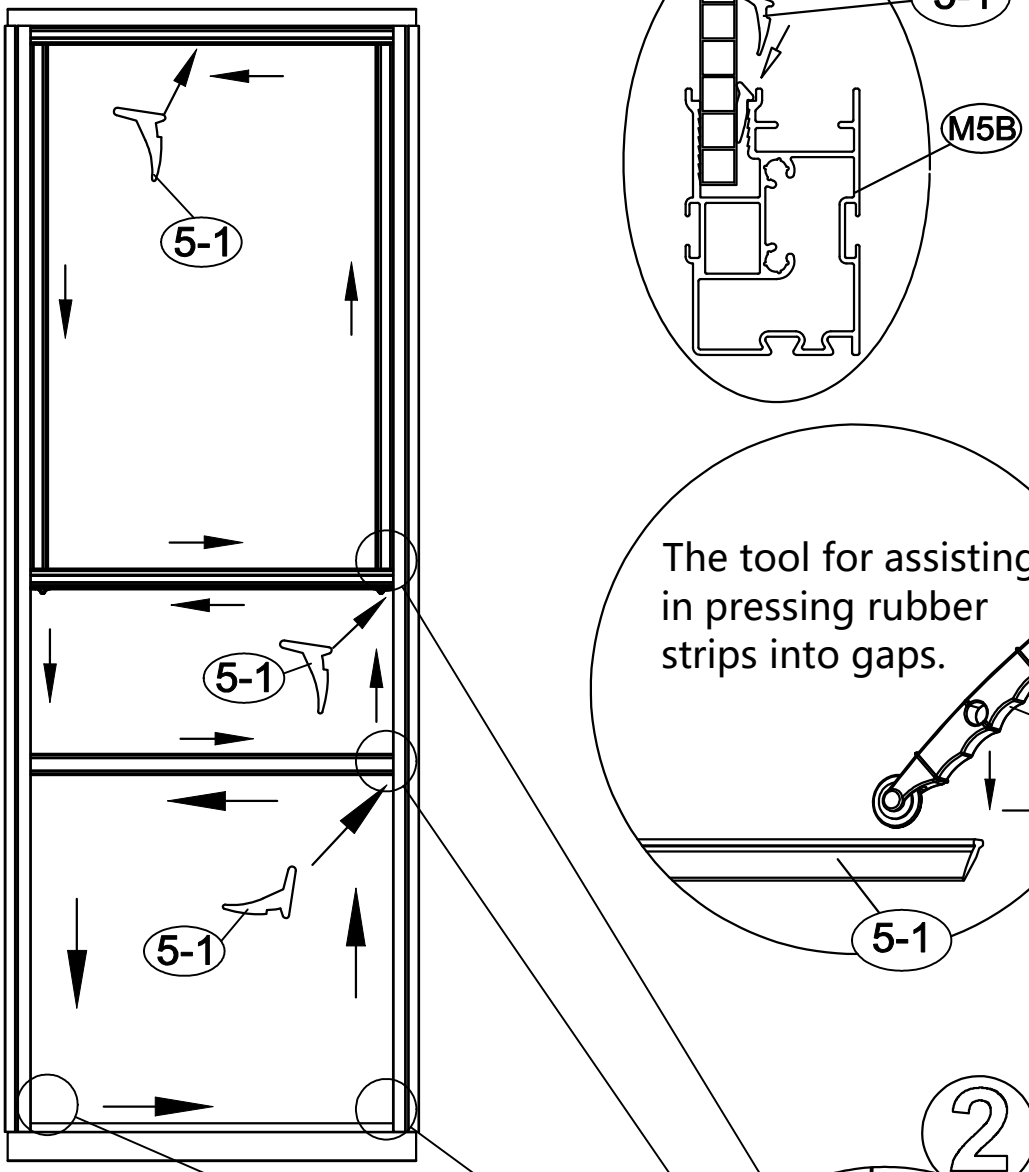


All door frames, AB, BA, AC, CA, AD, DA, AE, EA, follow this method.

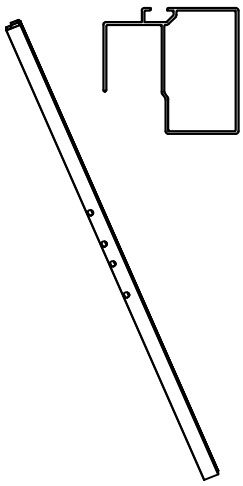

M4V 2x

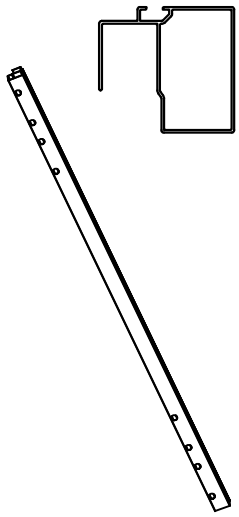


M7V 2x



6.2*11*15

3-1 16x



M6


8 16x





M6x15


1 16x

43

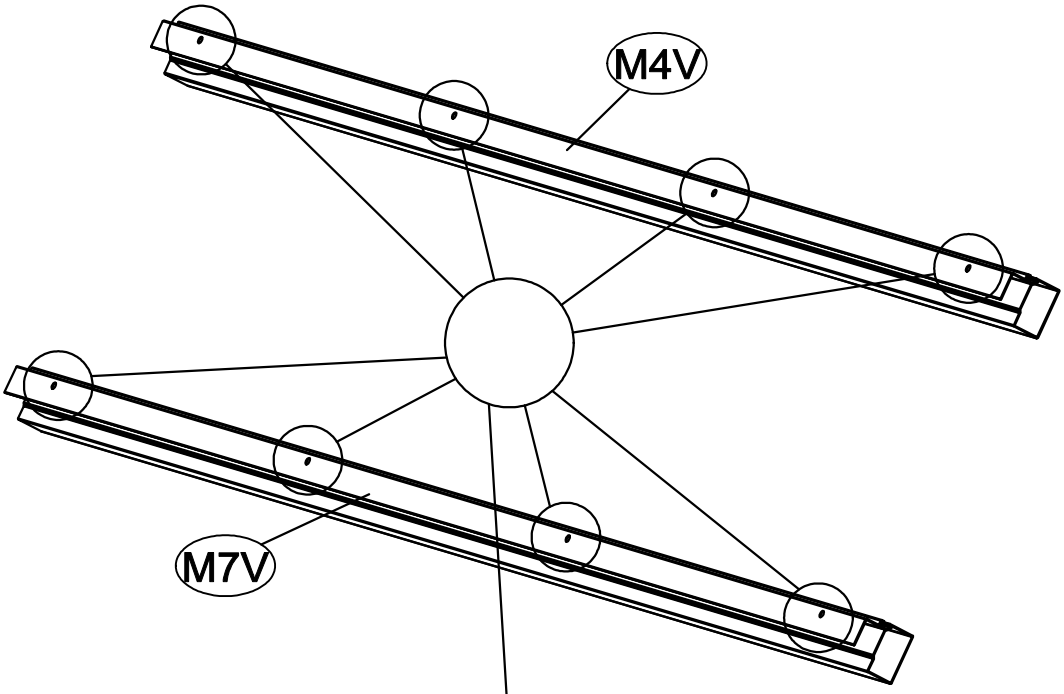

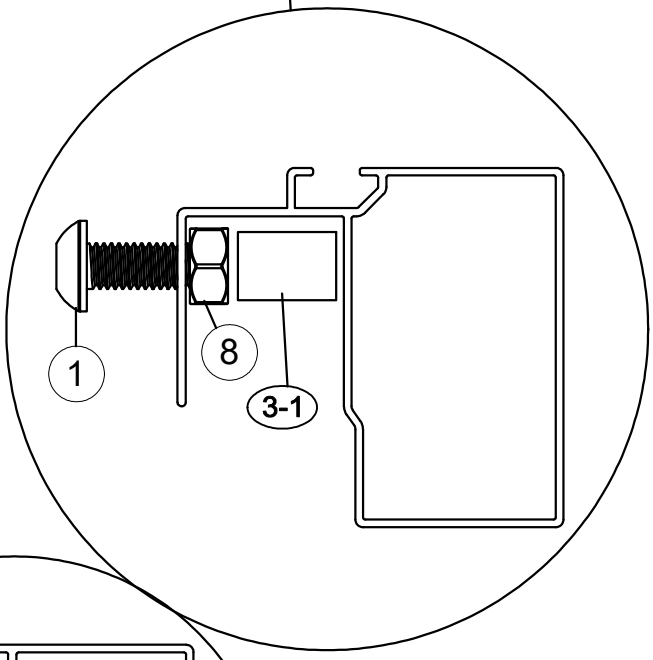

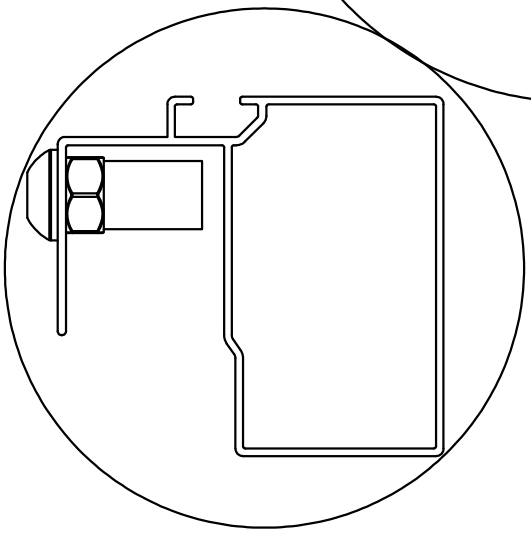

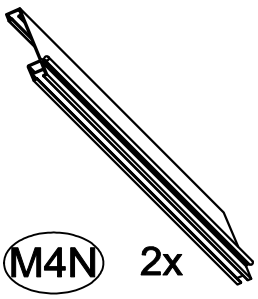

M4N 2x




12 12x




M5*6

13 48x

<34>

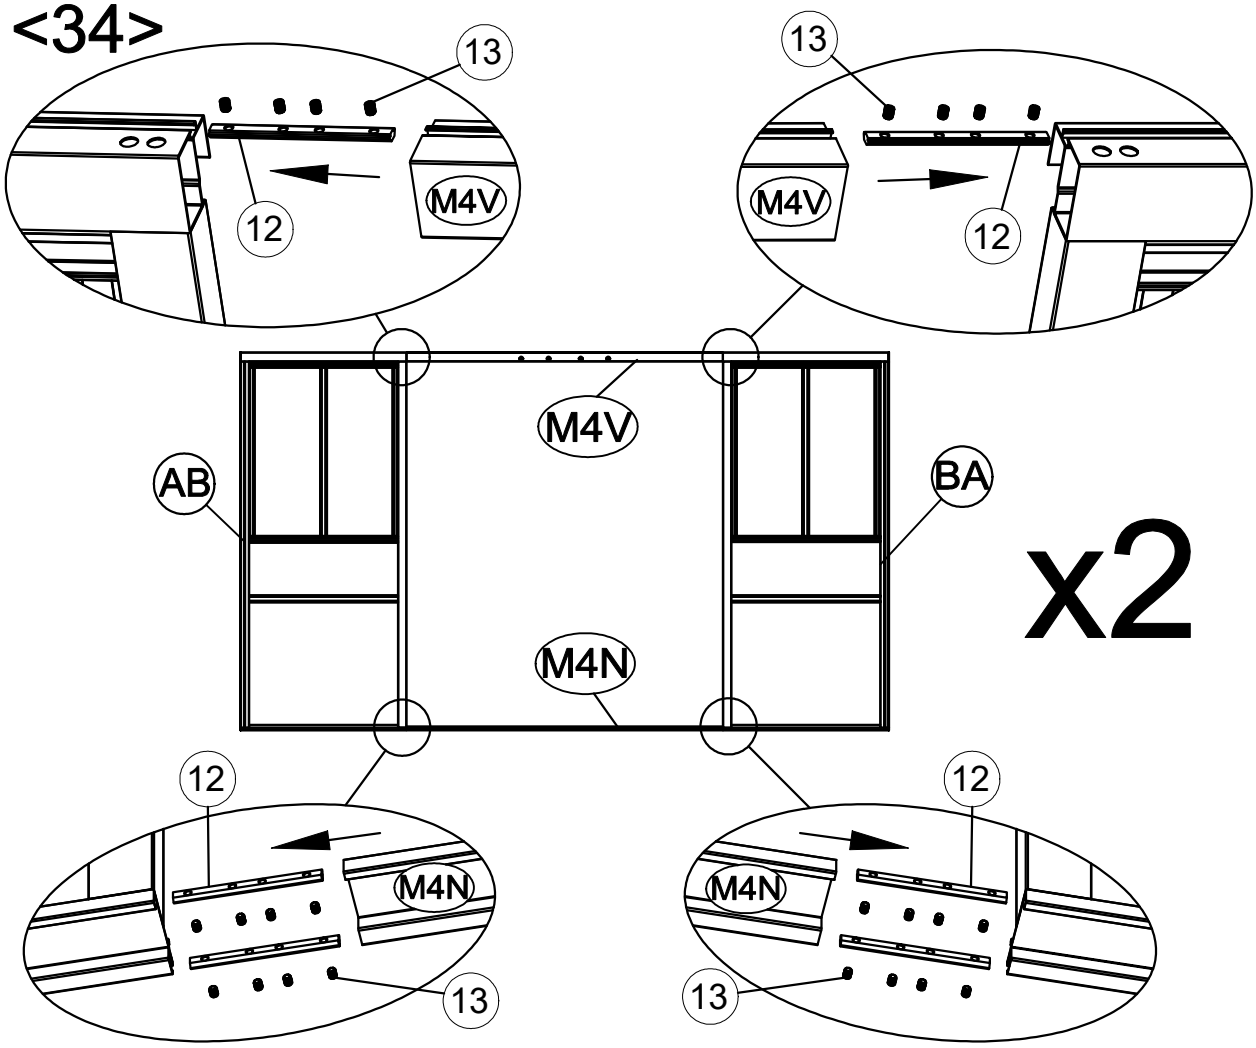

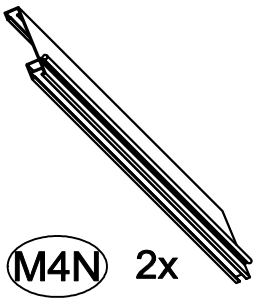

M4N 2x




12 12x





M5*6


13 48x

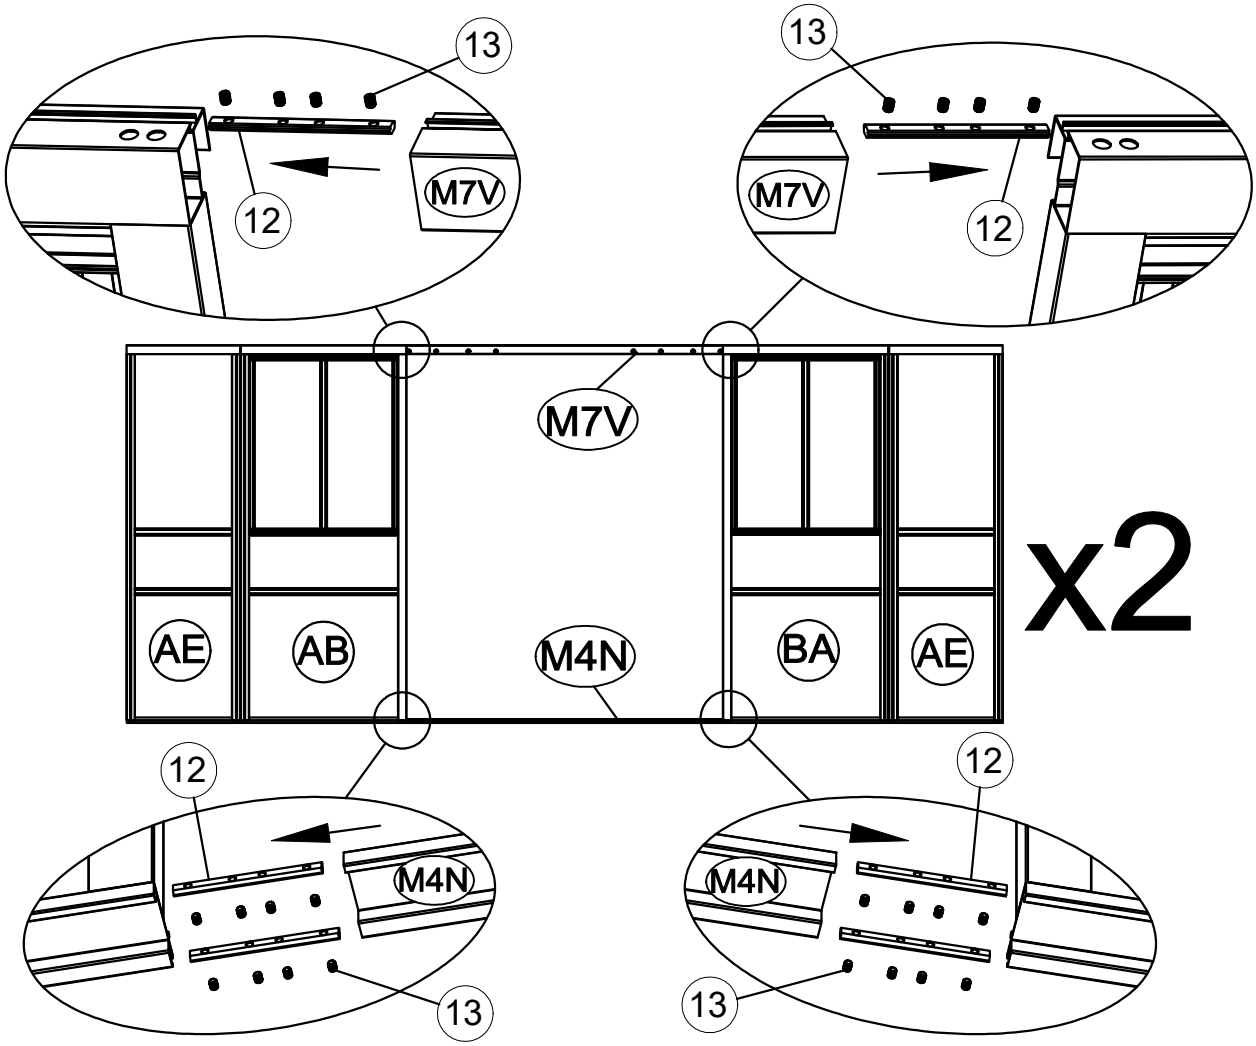



<35>

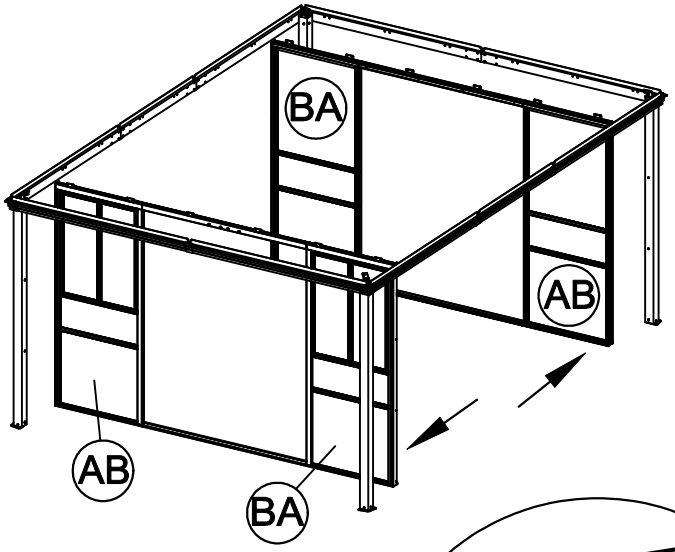

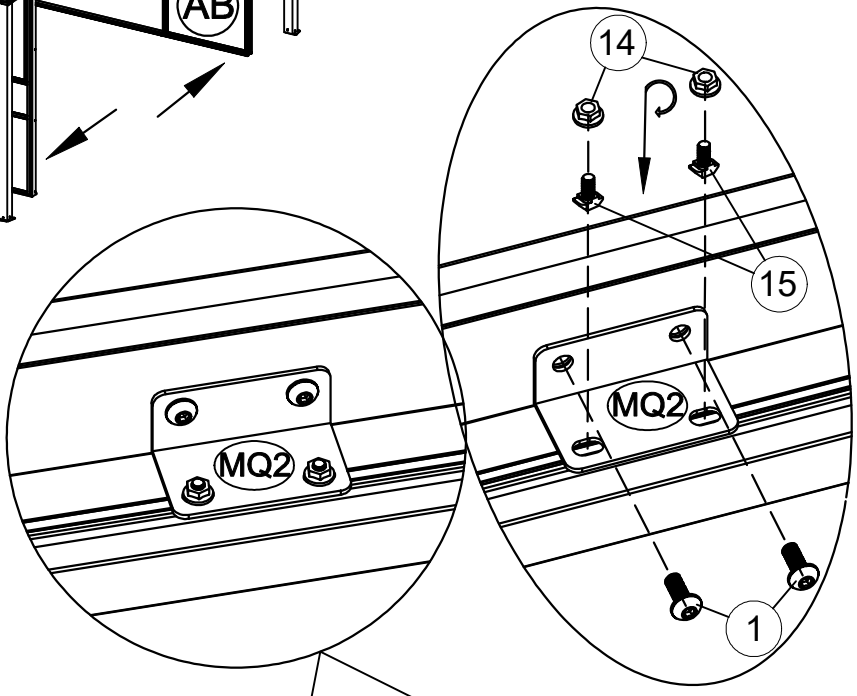


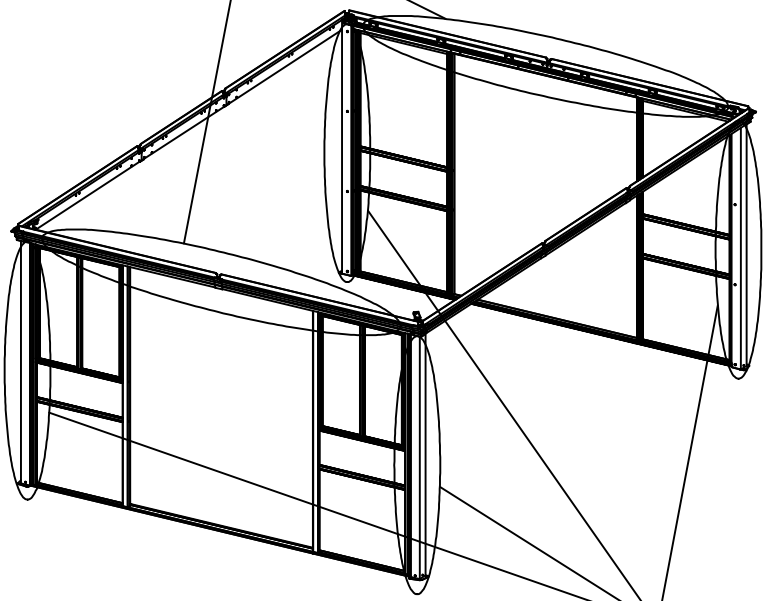

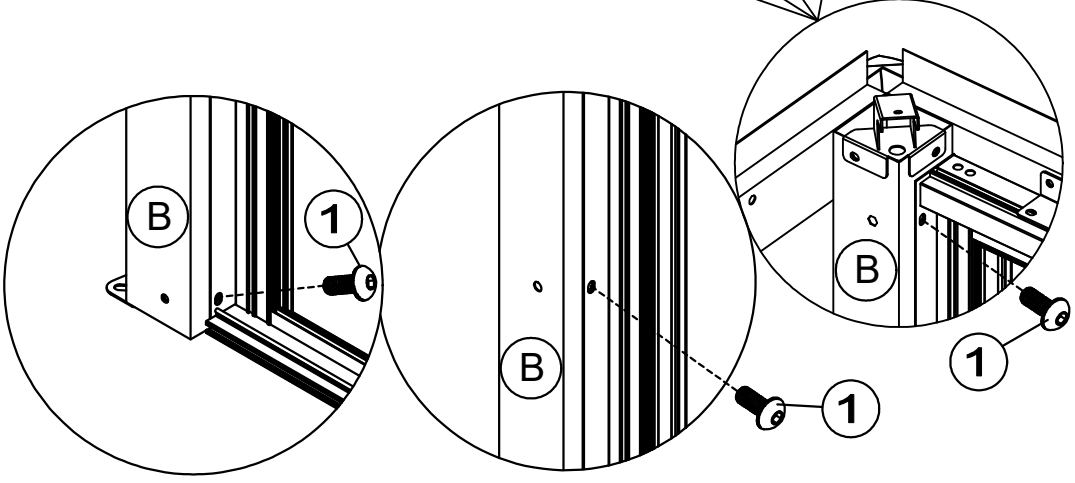



MQ2 12x



M5x12

15 24x




M5


14 24x





M6x15


1 40x

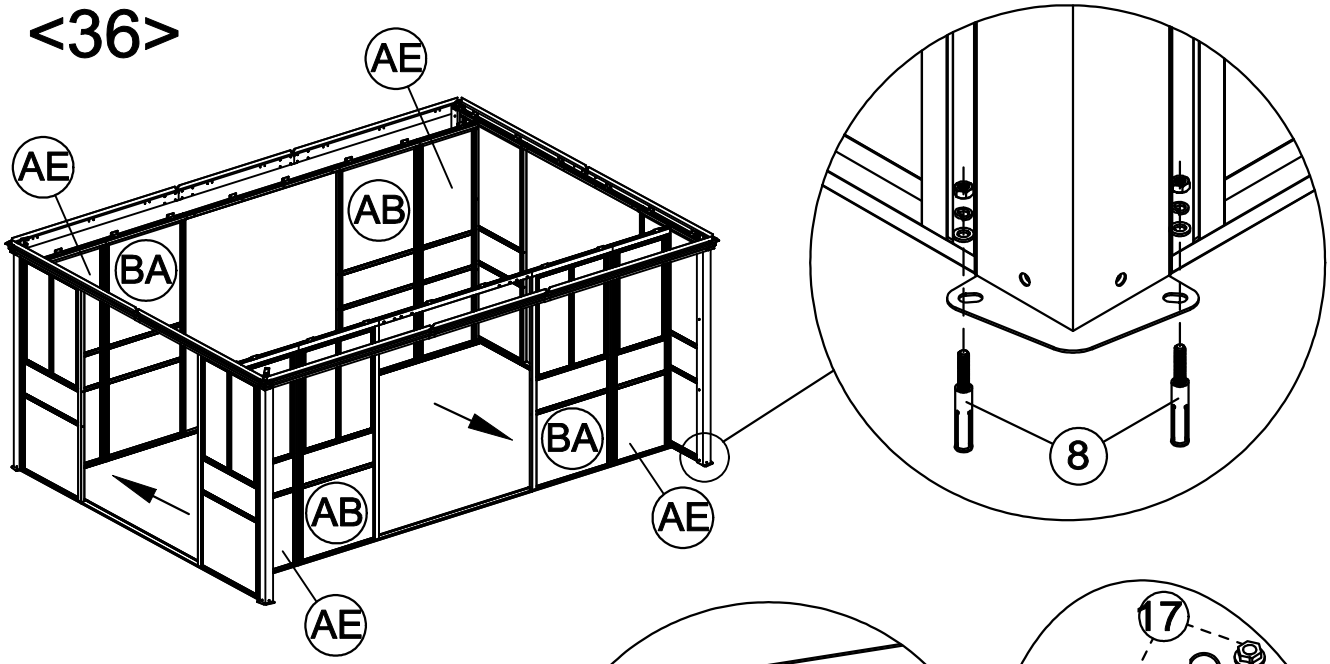

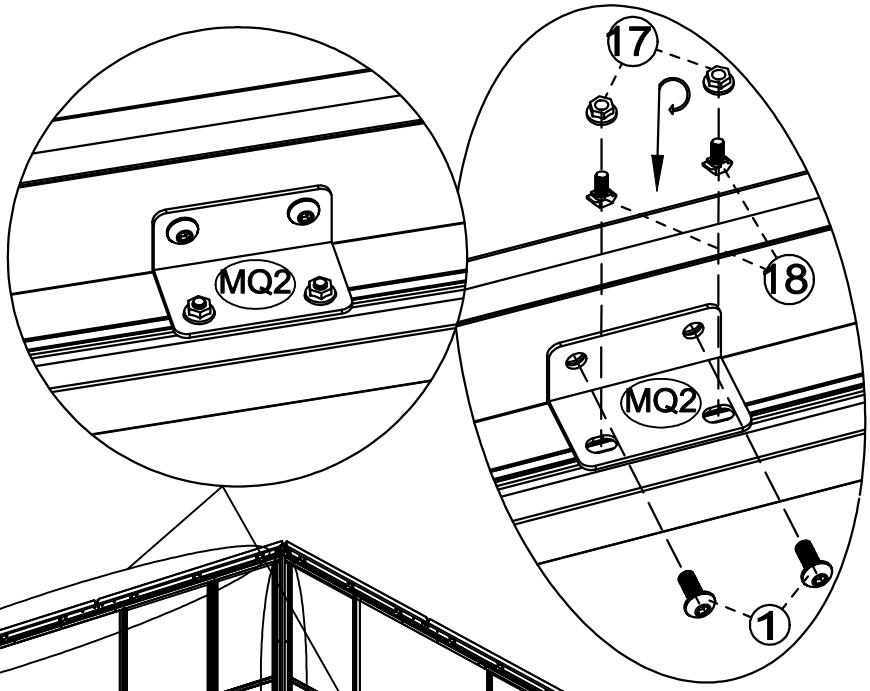


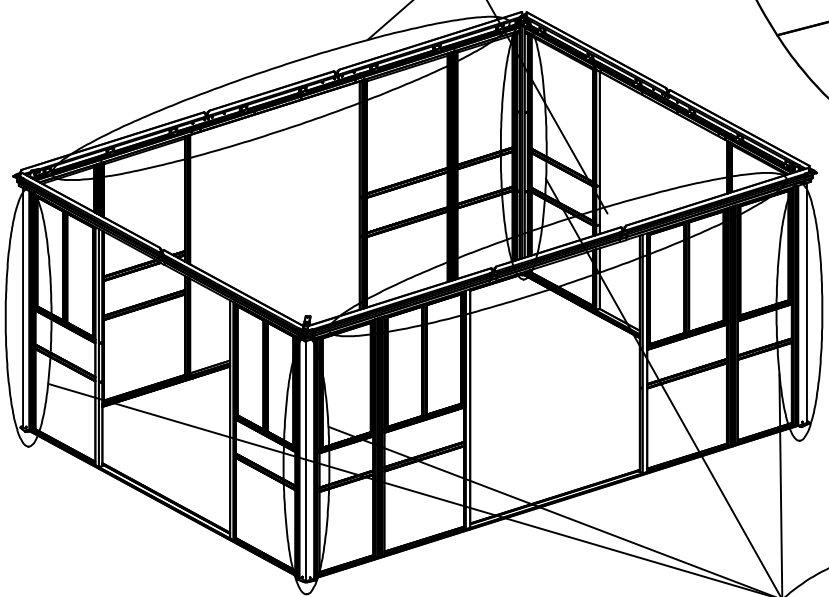

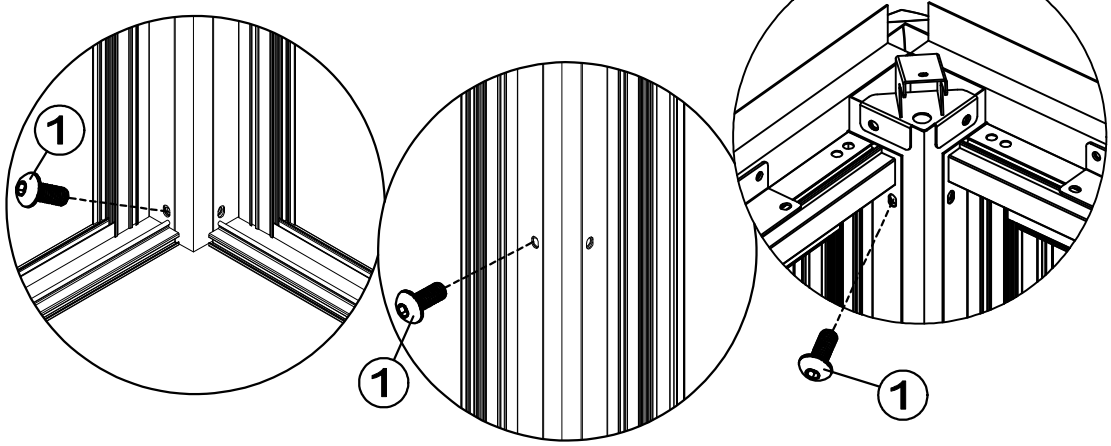


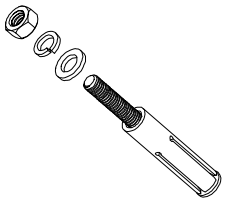

20 8x



MQ2 16x



M5x12

15 32x




M5

14 32x



M6x15

1 48x

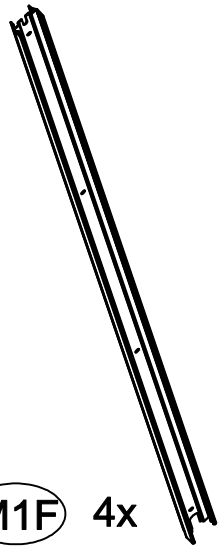

M1F 4x


ST4.8x12


3 16x

<37>

DA 4x

Pay attention to the installation direction of the left and right sides of the door.

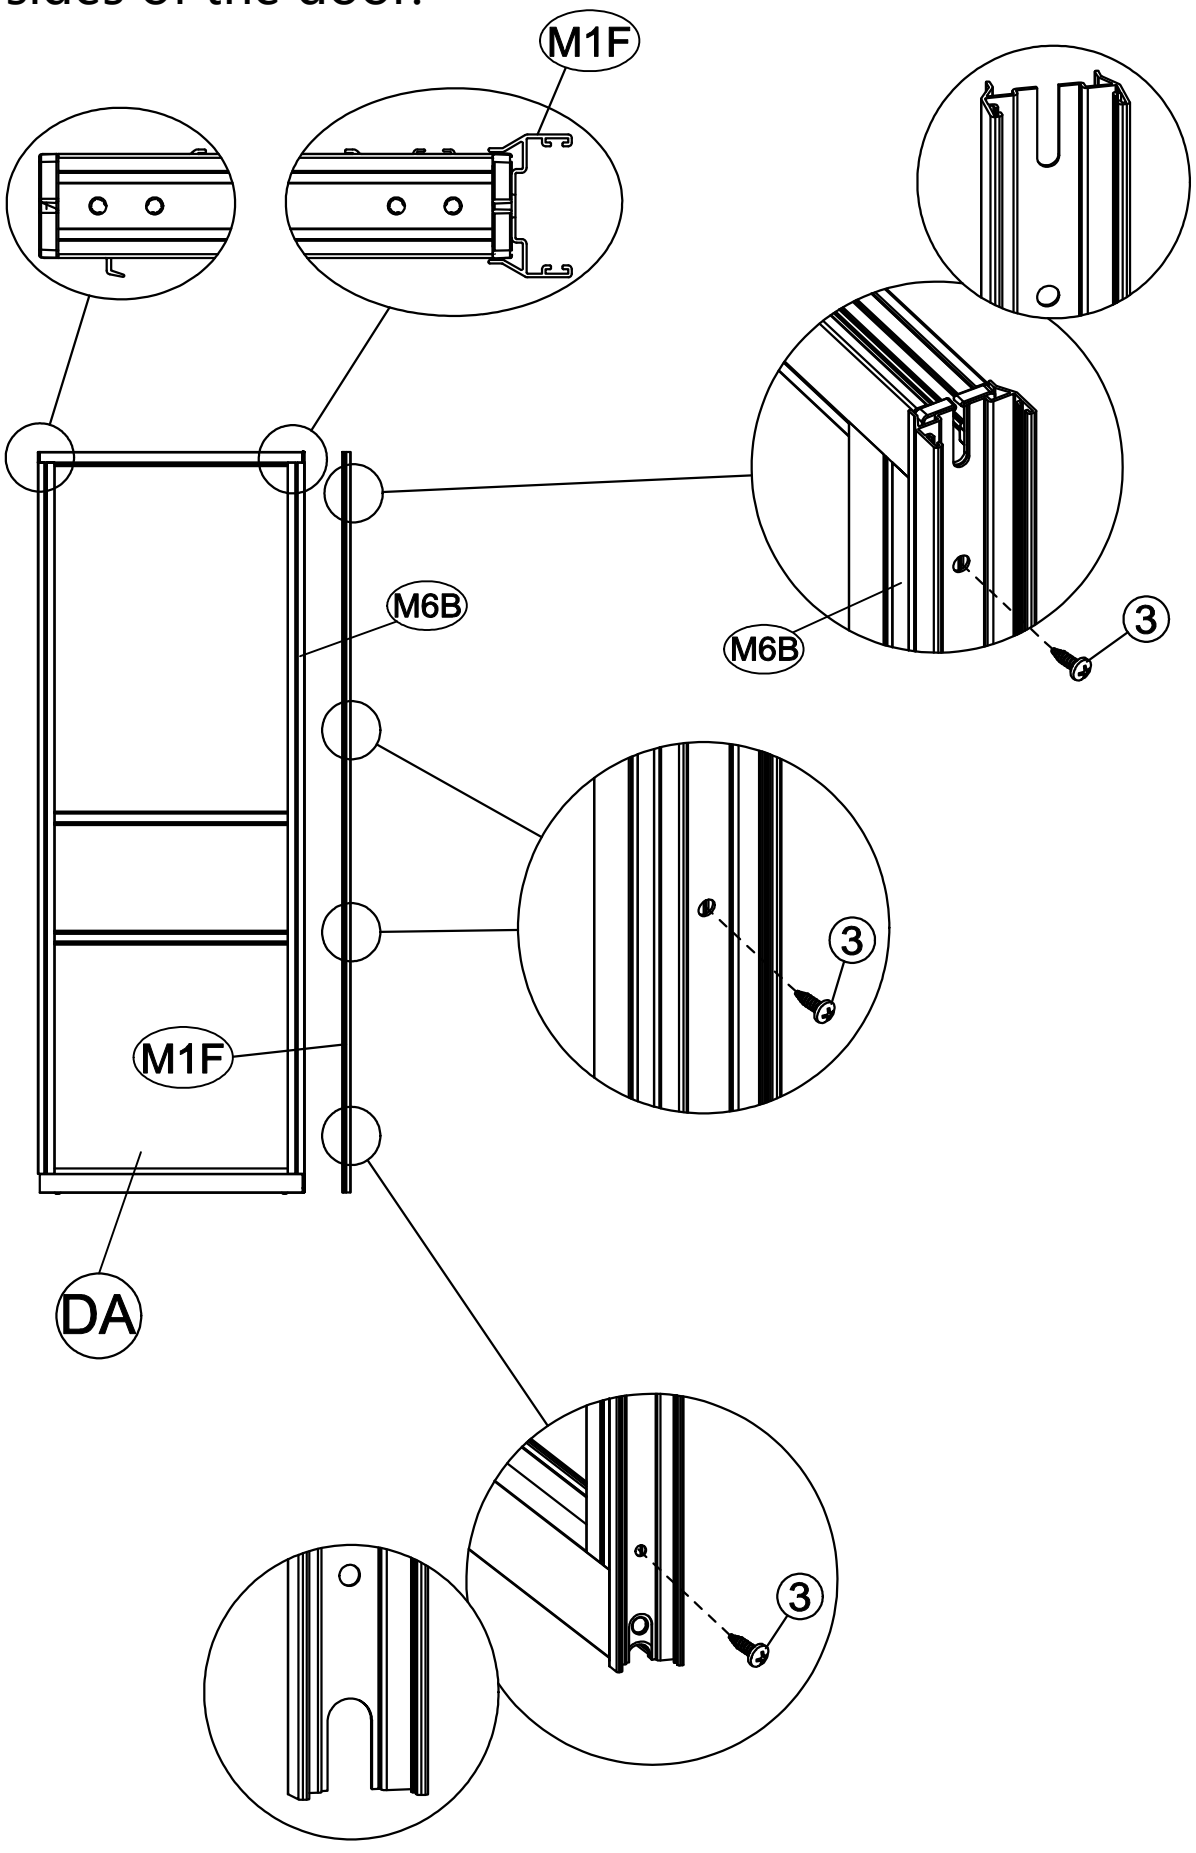




U1 4x



U2 4x




U3 4x




M4x12

22 4x

DA 4x

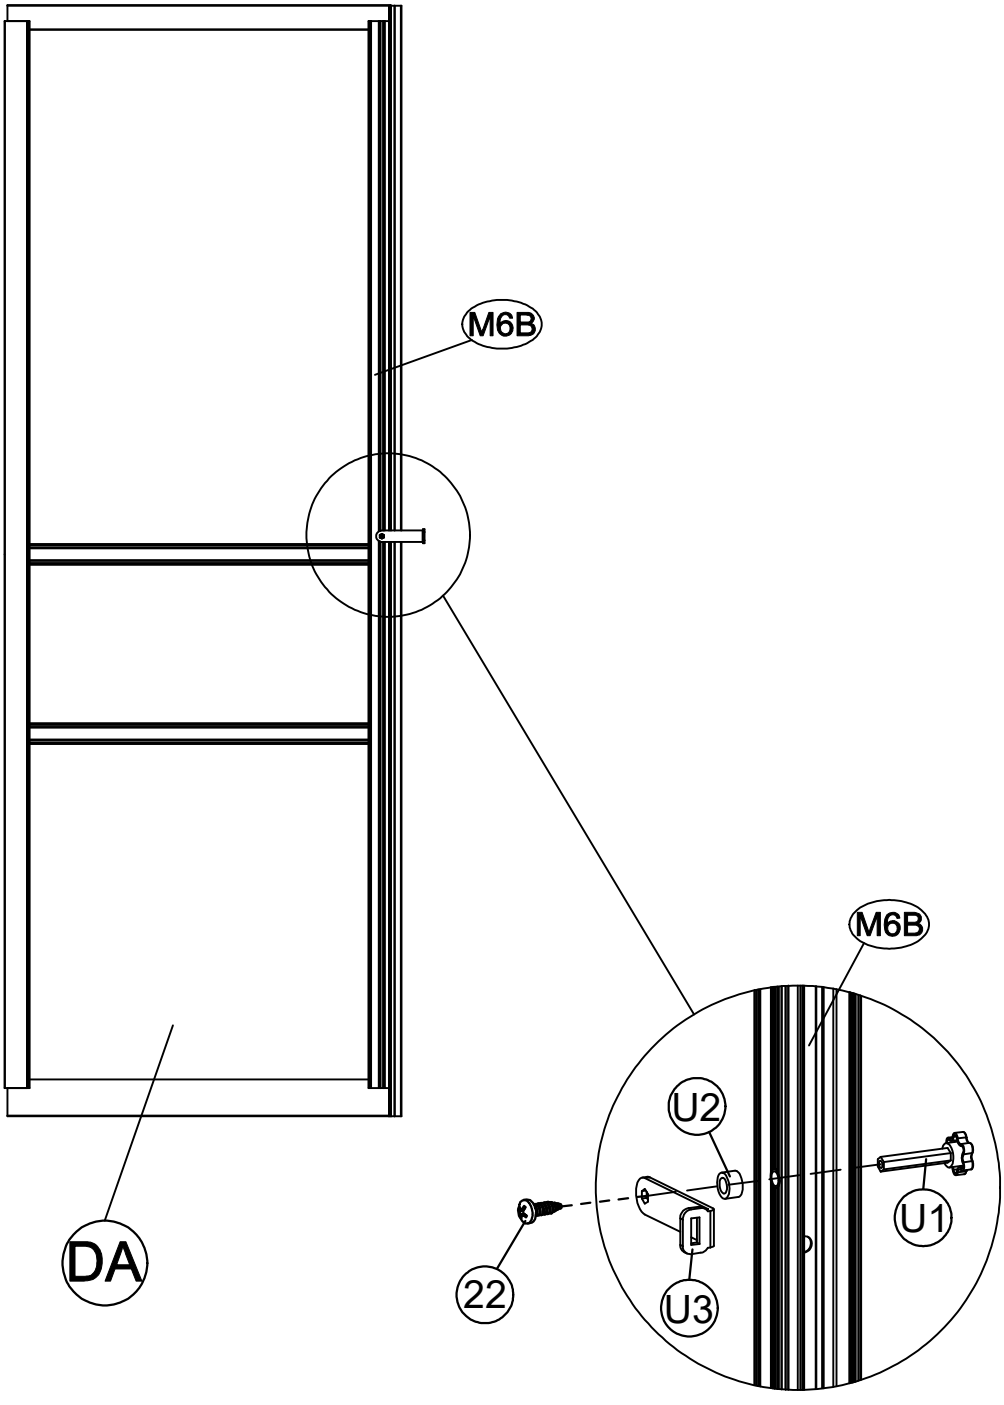



U4 4x




M5x15


21 16x

<39>


AD 4x

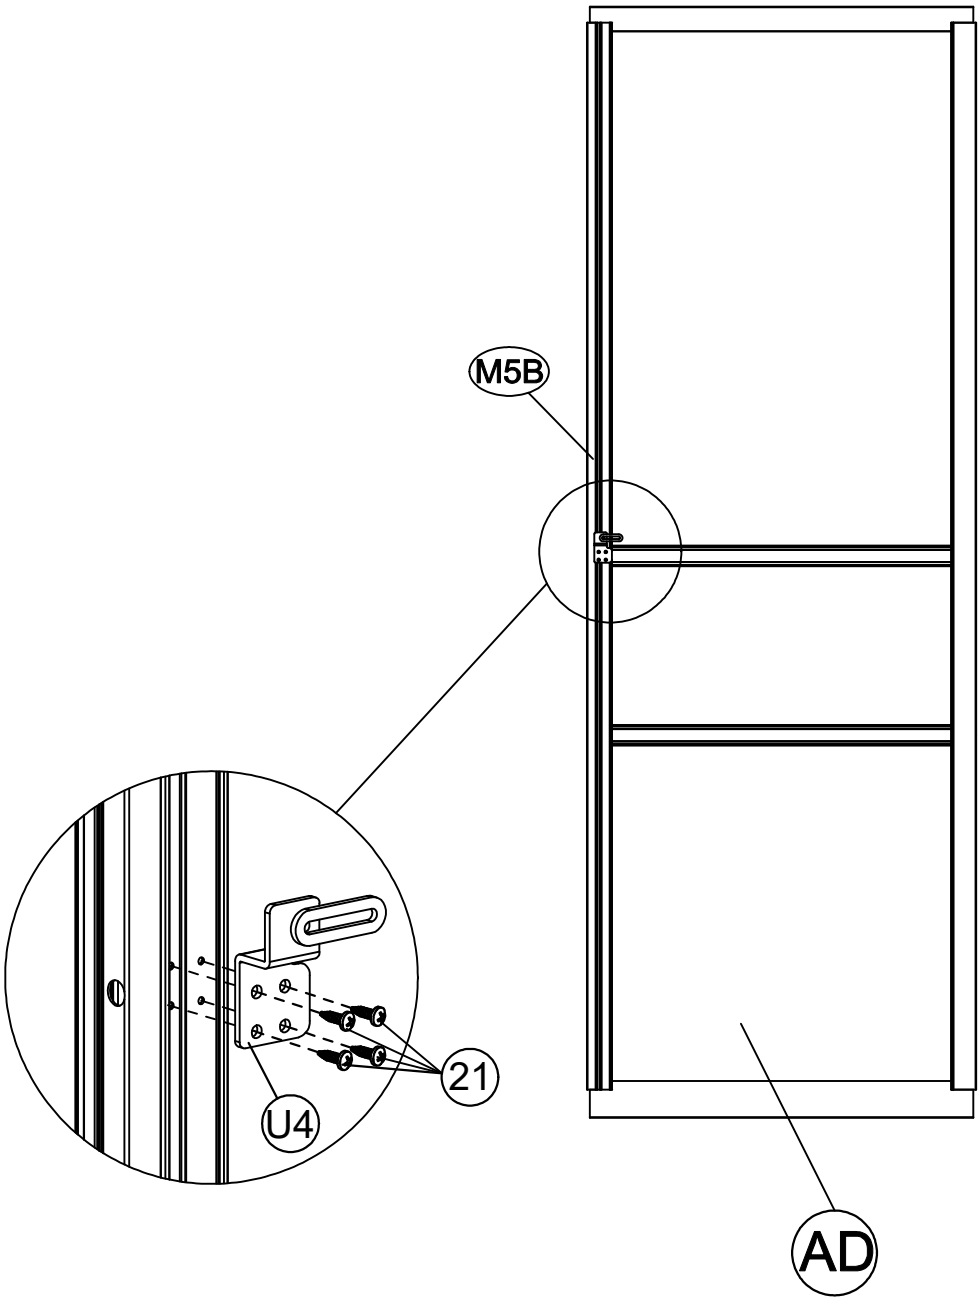

<40>

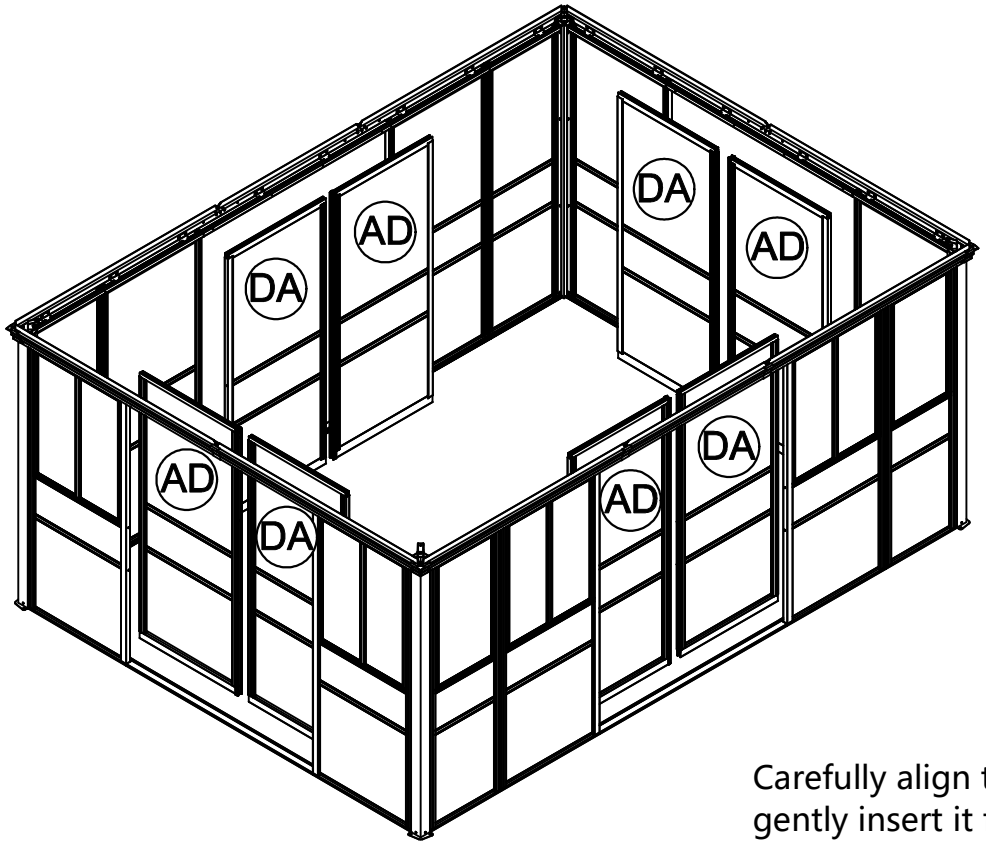


Carefully align the door and gently insert it from the inside into the upper slot.

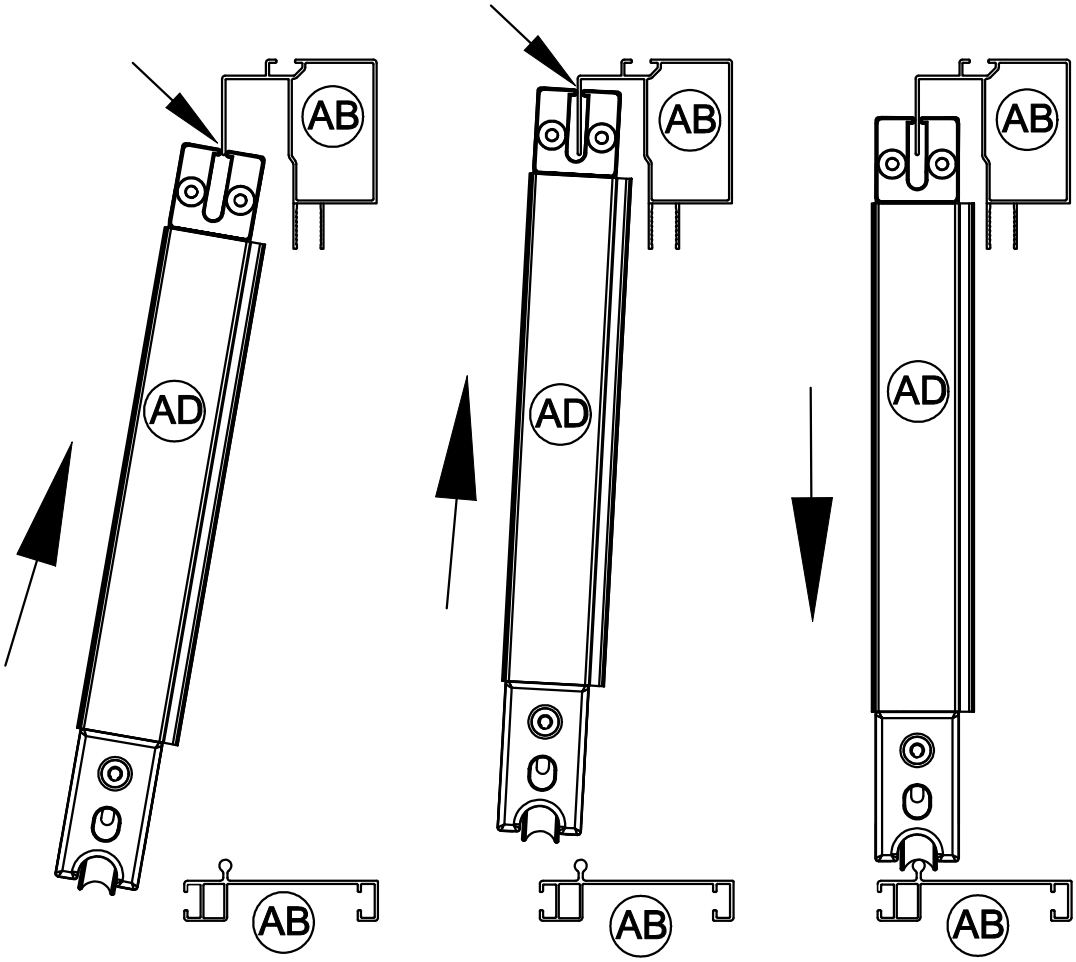


50

Repeat the previous steps for other components.

<41>

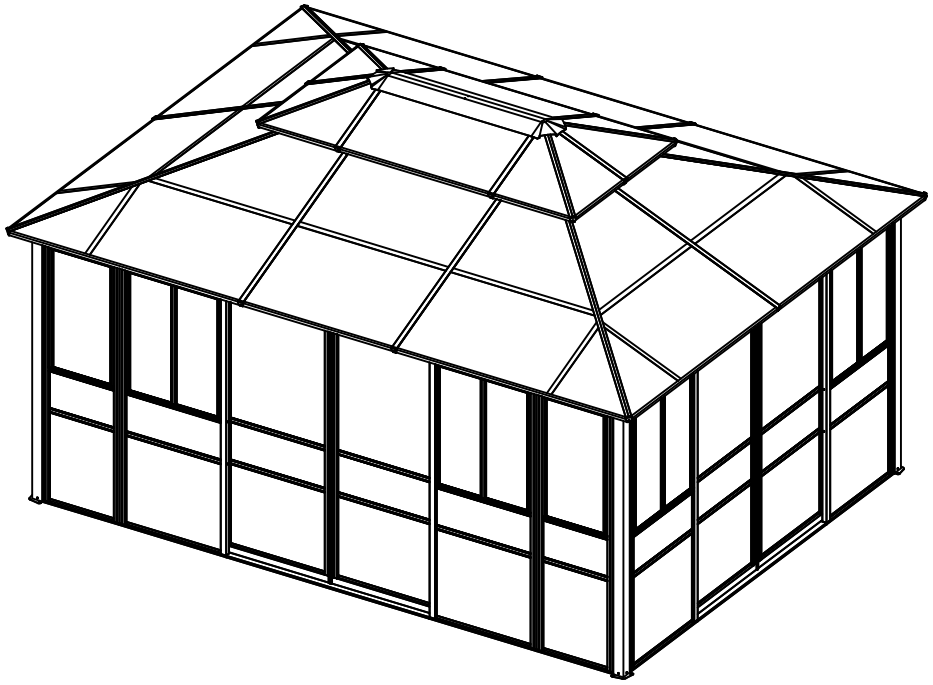

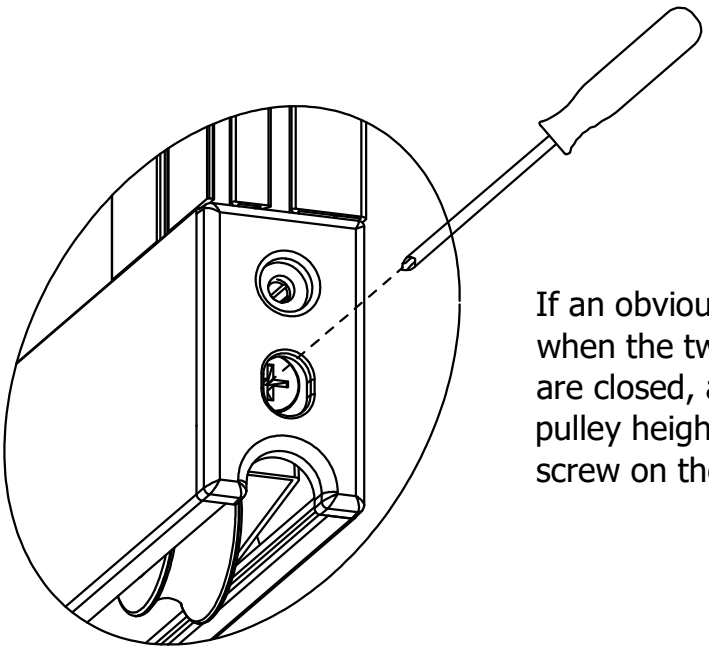

If an obvious gap is found when the two sliding doors are closed, adjust the pulley height using the screw on the pulley.

<42>

