

ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

"DO NOT OVERTIGHT ANY HARDWARE"

WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.

TABLE OF CONTENTS

HARDWARES LIST

PAGE 2 - 3

PARTS LIST

PAGE 4 - 5

PARTS' LOCATION

PAGE 6

ASSEMBLY STEPS

PAGE 7 - 19

ASSEMBLY COMPLETED


PAGE 19

ASSEMBLY TOOLS REQUIRED


1. Screwdriver (not provide)



2. Hammer (not provide)




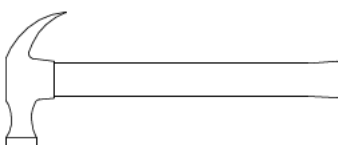


Skip the power drill this time.

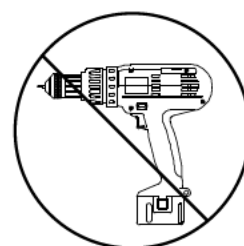



ASSEMBLY INSTRUCTION

HARDWARES LIST

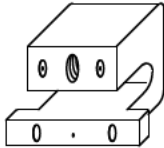ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		28 PCS
B	MINIFIX CAM BOLT		28 PCS
C	WOOD DOWEL (M8 x 25MM)		16 PCS
D	WOOD DOWEL (M6 x 25MM)		16 PCS
E	HANDLE (i)		2 PCS
F	HANDLE (ii)		2 PCS
I	TRUSS M-SCREW (20MM)		2 PCS
L	6/8" NAIL		16 PCS








ASSEMBLY INSTRUCTION

HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
O	LEFT DRAWER SLIDE		2 PCS
P	RIGHT DRAWER SLIDE		2 PCS
Q	CSK SCREW M3 x 10mm		16 PCS
R	PLASTIC STRIP (H SHAPE)		1 PC




ASSEMBLY INSTRUCTION

PARTS LIST

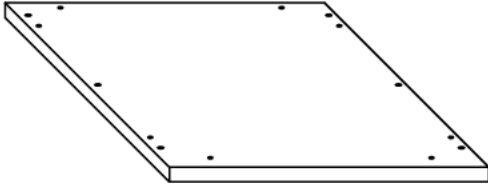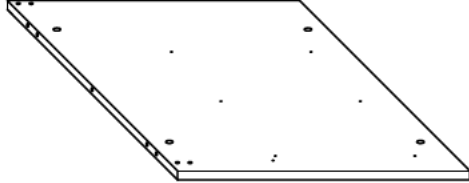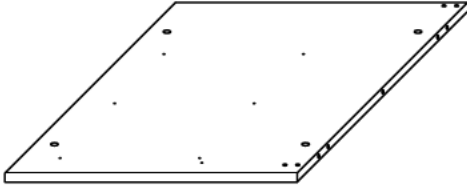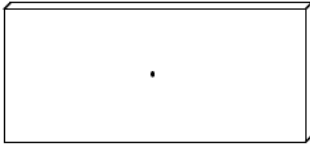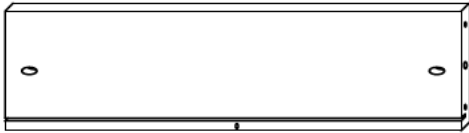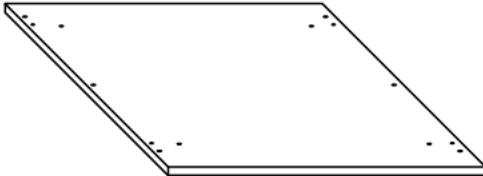ITEM	DESCRIPTION	DRAWING	QTY
N1	TOP PANEL		1 PC
N2	LEFT PANEL		1 PC
N3	RIGHT PANEL		1 PC
N4	TOP SUPPORT RAIL		2 PCS
N6	BACK PANEL		2 PCS
N7	DRAWER HEAD		2 PCS
N8	DRAWER BACK PANEL		2 PCS
N9	DRAWER BOTTOM PANEL		2 PCS
N10	BOTTOM PANEL		1 PC

ASSEMBLY INSTRUCTION


PARTS LIST

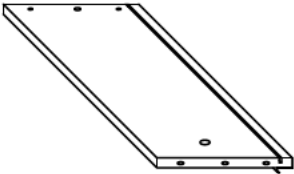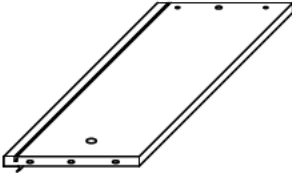ITEM	DESCRIPTION	DRAWING	QTY
19	DRAWER LEFT PANEL		2 PCS
20	DRAWER RIGHT PANEL		2 PCS
21	DRAWER BOTTOM SUPPORT RAIL		2 PCS
22	WOODEN LEG (WITH PLASTIC COVER)		4 PCS


ASSEMBLY INSTRUCTION

PARTS ' LOCATION

NIGHTSTAND x 1 PC

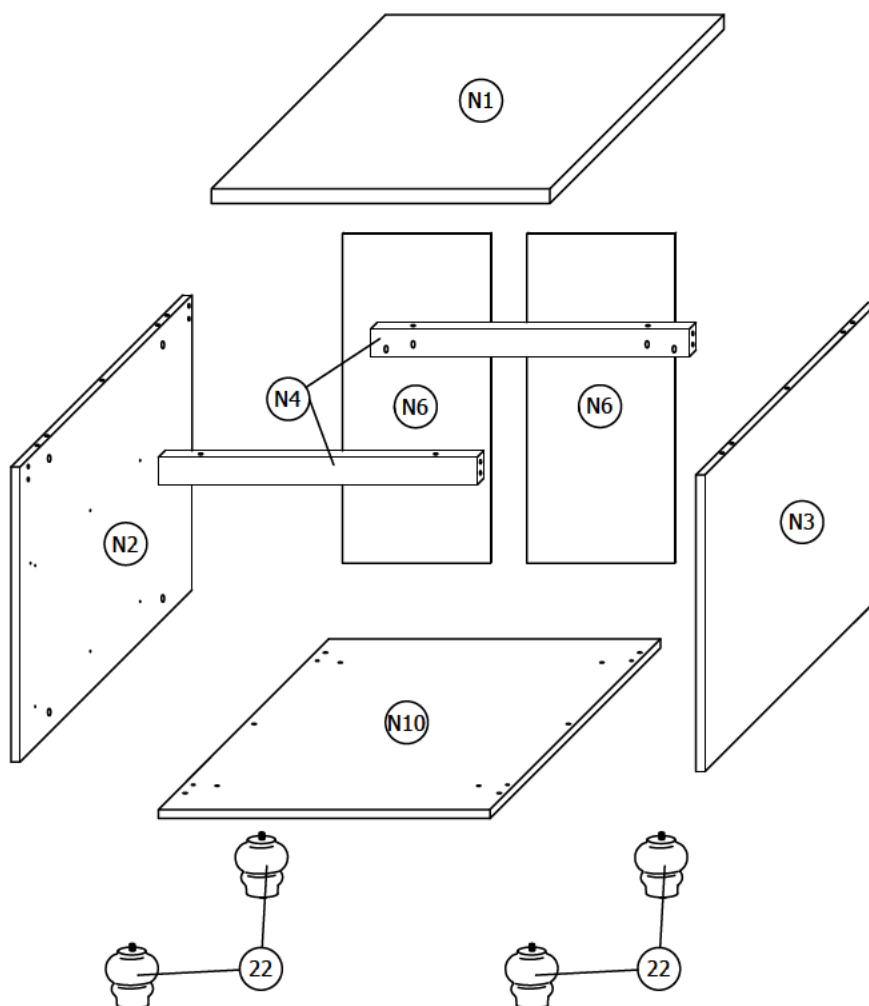

DRAWER x 2 PCS


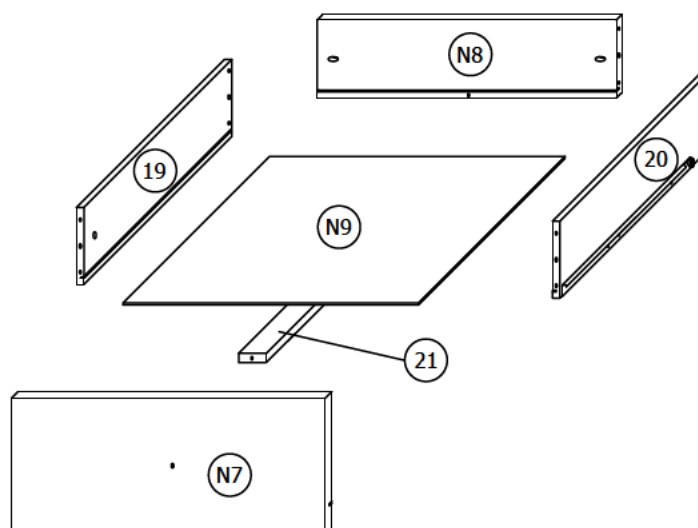


ASSEMBLY INSTRUCTION


ASSEMBLY STEPS

STEP 1

Fix the 2 pieces (O) to the (N2) by using 8 pieces (Q). Then insert 4 pieces (A) and 2 pieces (B) as shown.

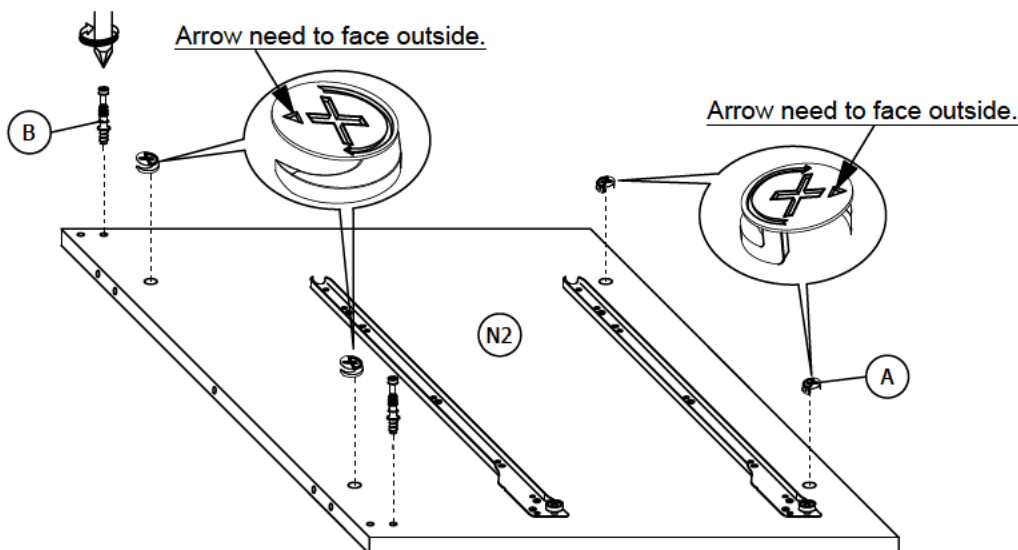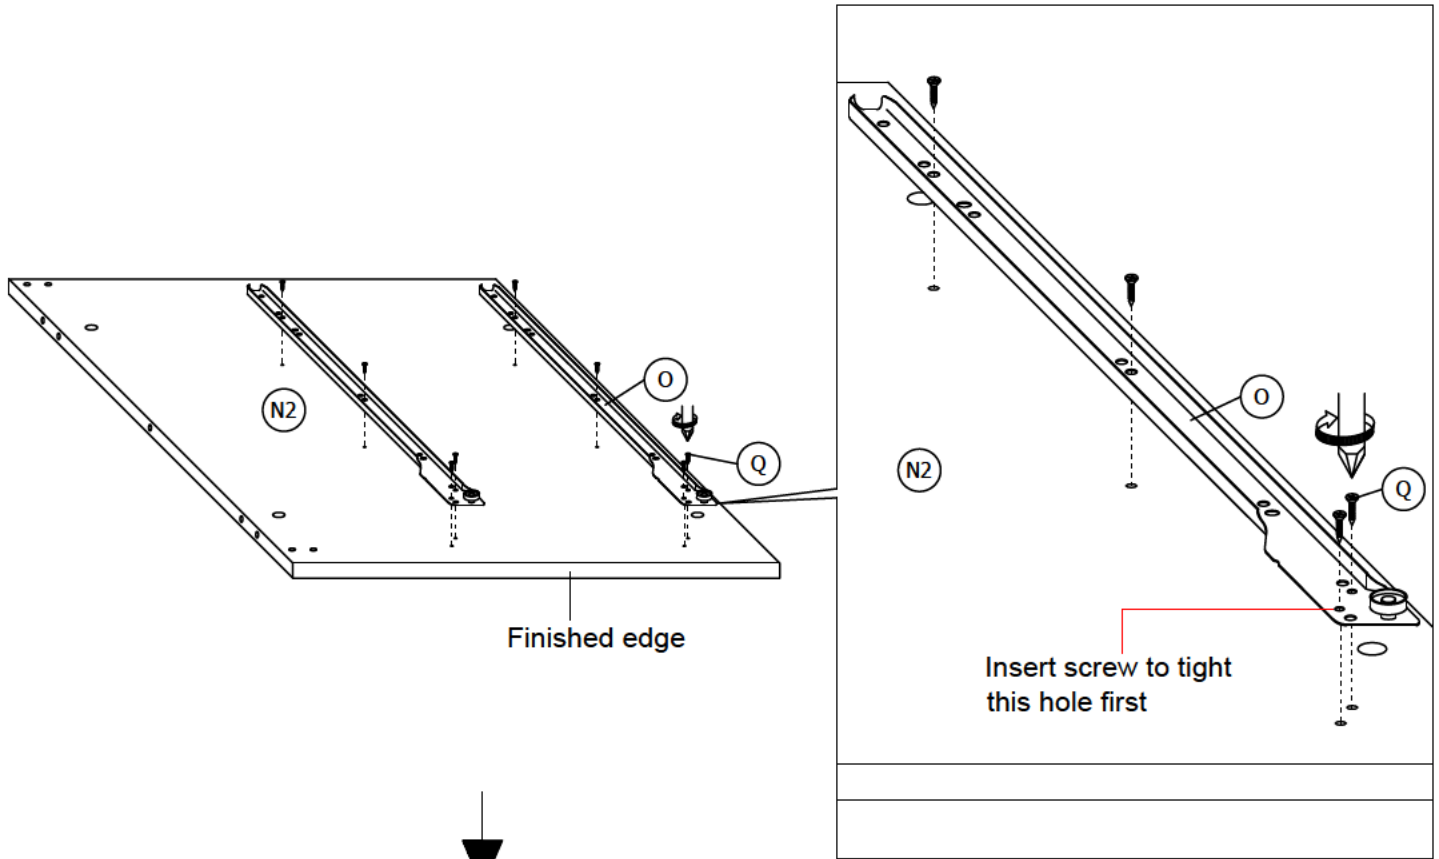



Assembled looks

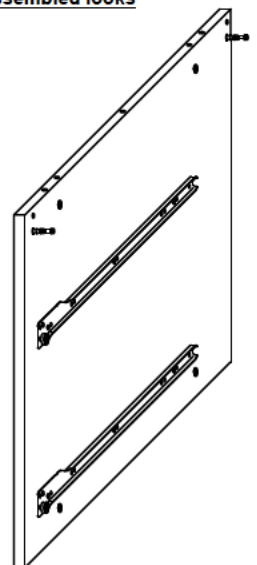


ASSEMBLY INSTRUCTION

STEP 2

Fix the 2 pieces (P) to the (N3) by using the remaining 8 pieces (Q). Then insert 4 pieces (A) and 2 pieces (B) as shown.

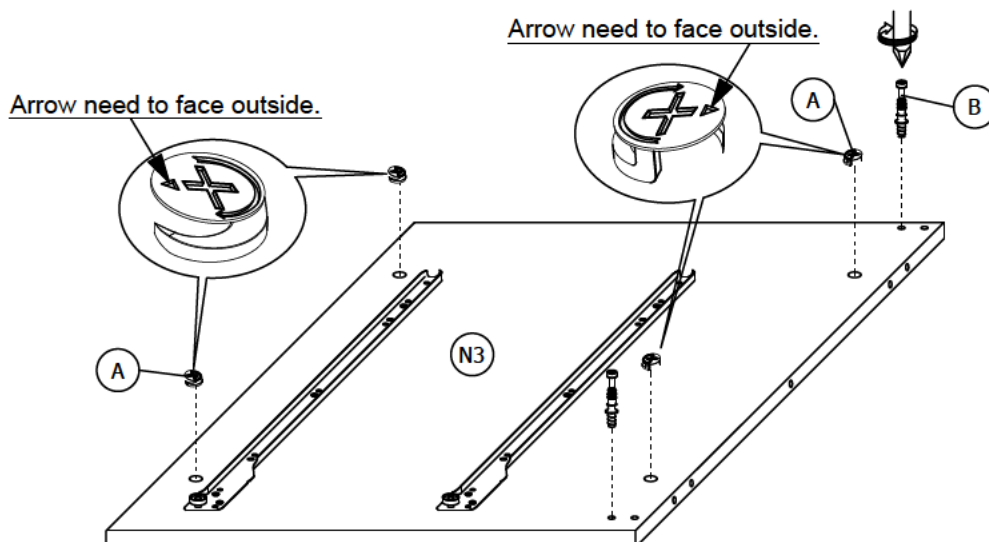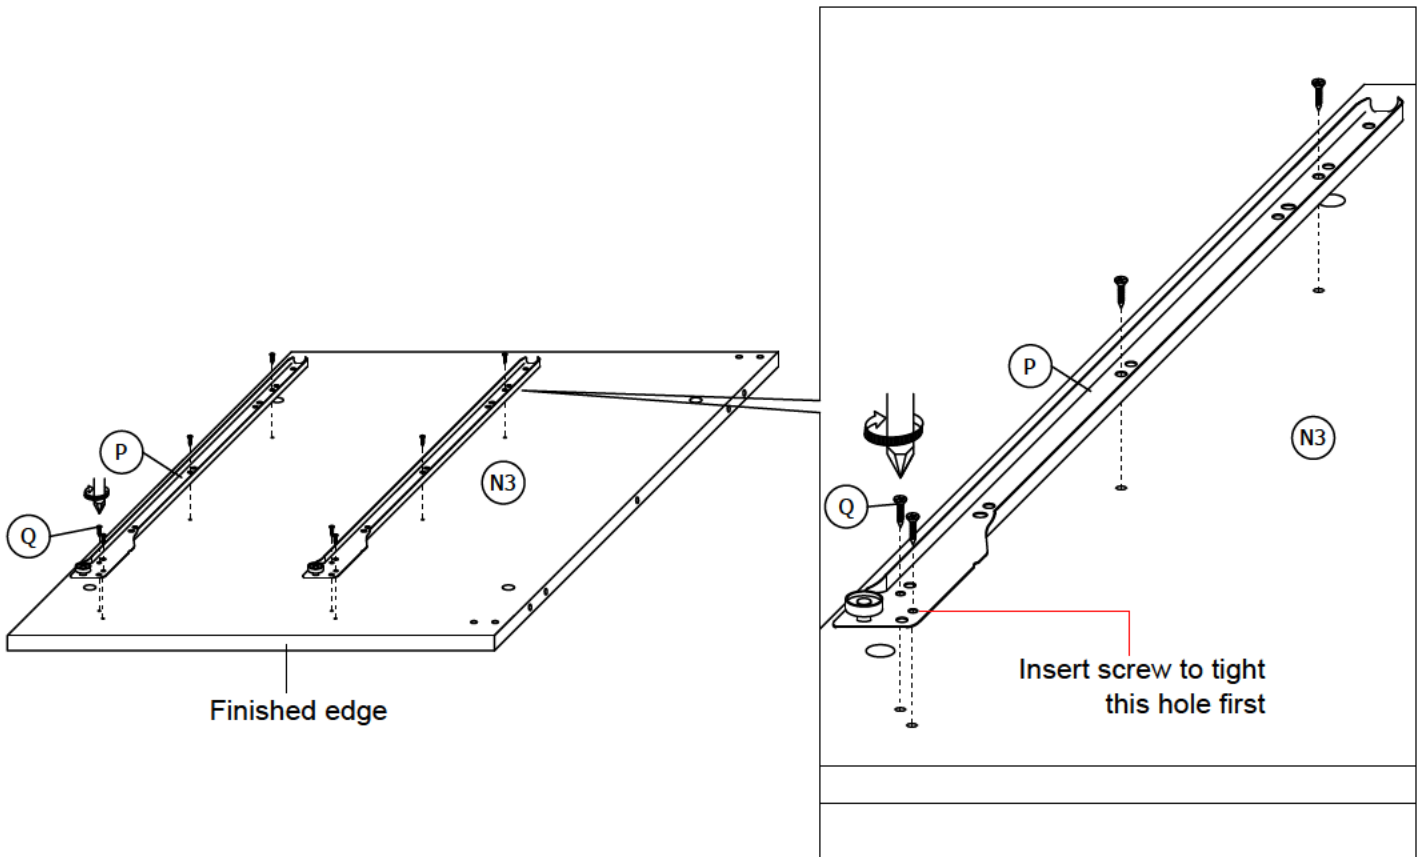

Assembled looks

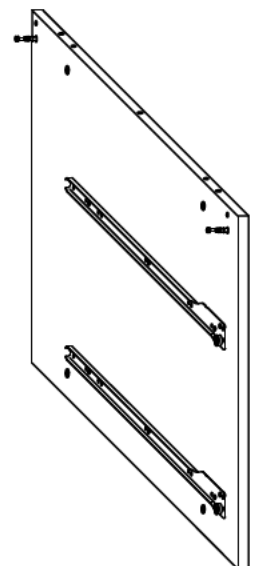


ASSEMBLY INSTRUCTION

STEP 3

Insert 4 pieces (A) and 2 pieces (C) to the (N4) as shown.


x 2

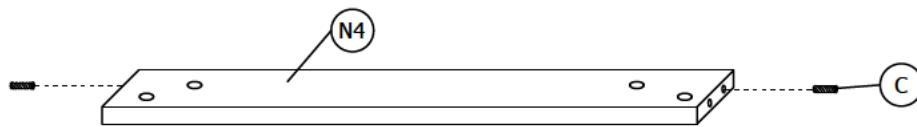

Arrow need to face outside.

Arrow need to face outside.

Arrow need to face outside.

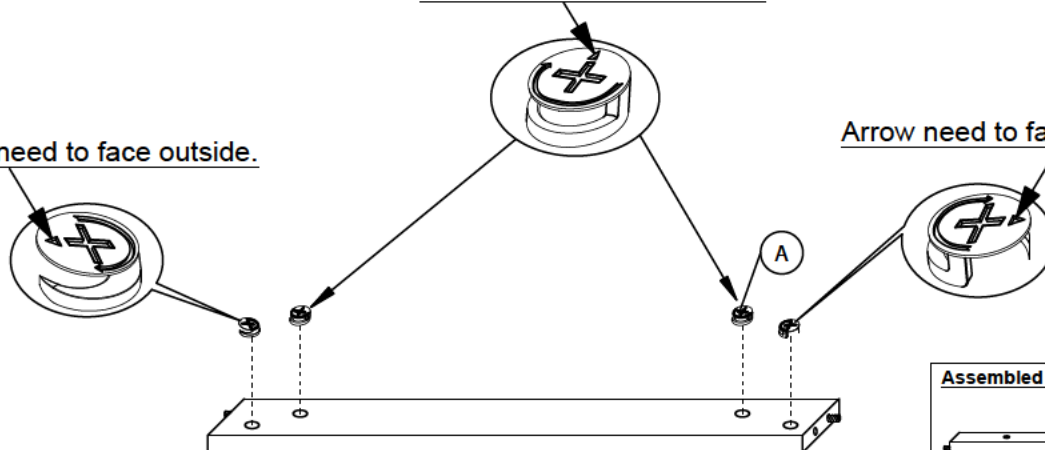


Assembled looks




STEP 4

Insert 8 pieces (B) and 6 pieces (C) to the (N1) as shown.

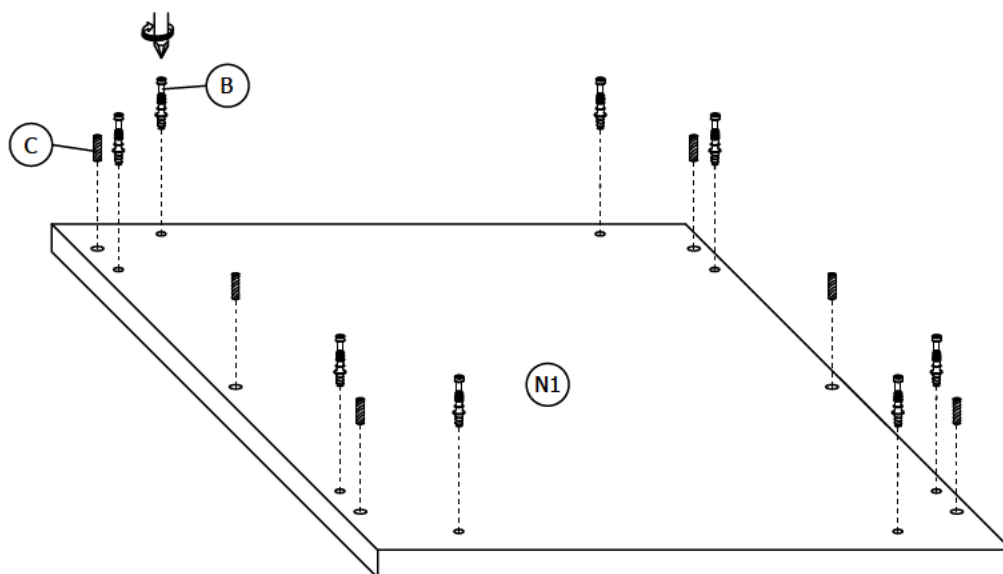


Assembled looks

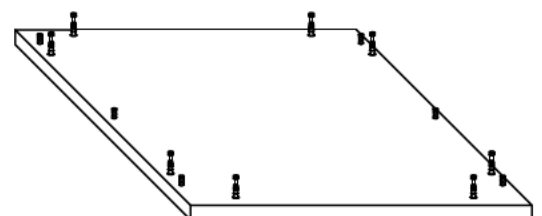

ASSEMBLY INSTRUCTION

STEP 5

Insert 4 pieces (B) and 6 pieces (C) to the (N10) as shown.

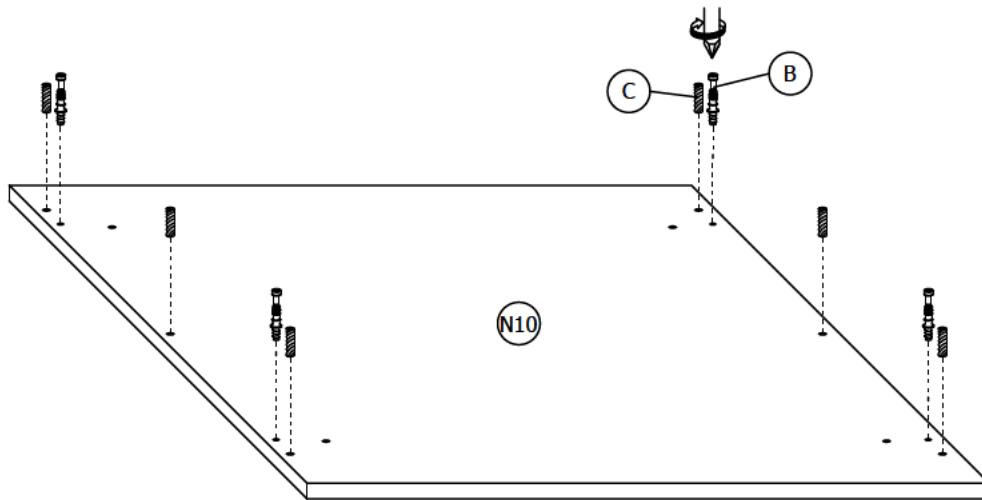


Assembled looks



STEP 6


Combine the (N4) to the (N2) and tighten the 2 pieces (A)-(pre insert in step 3) as shown.

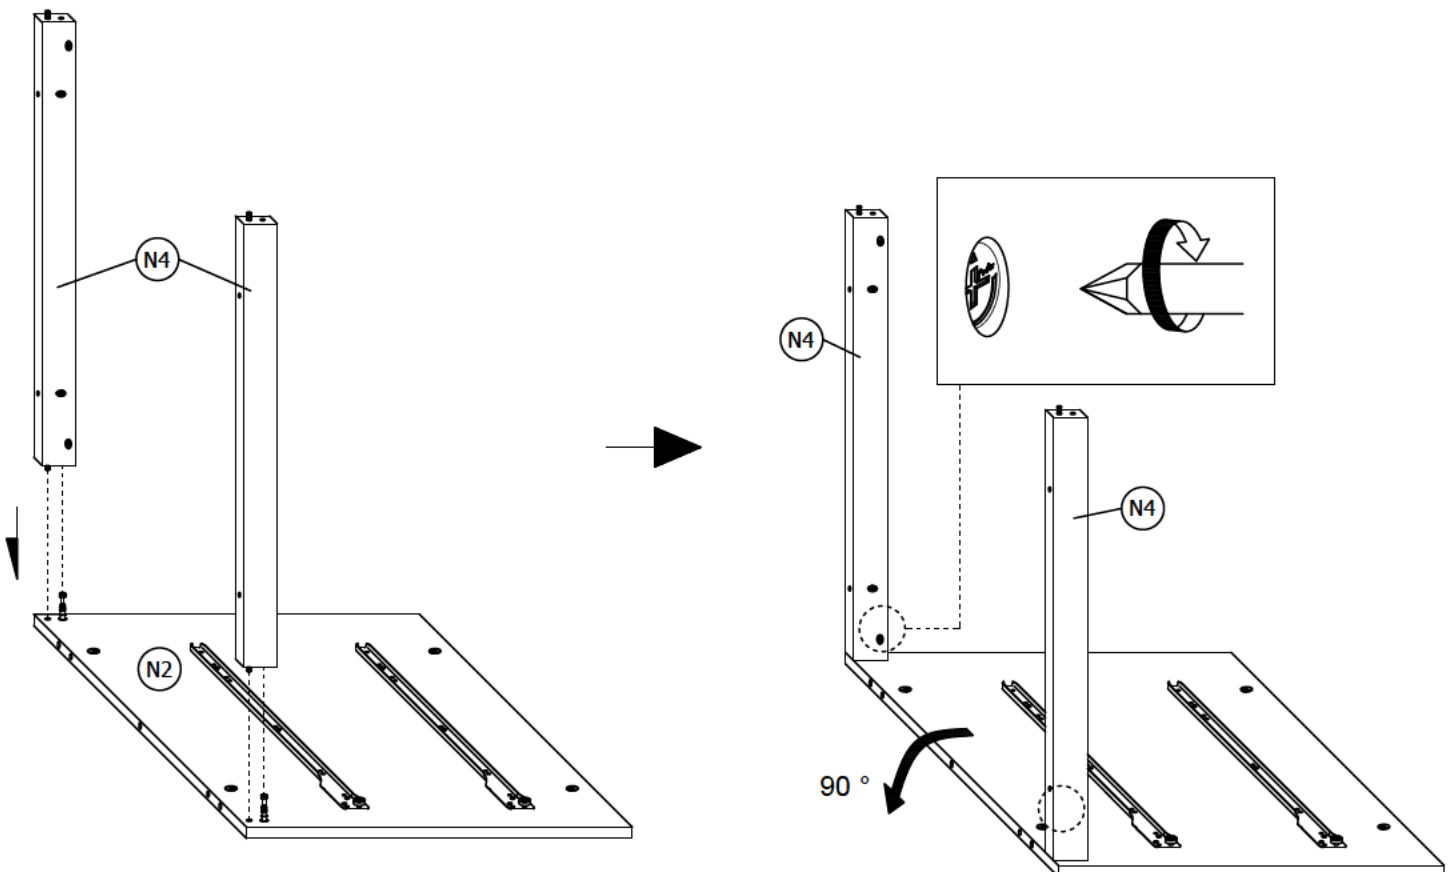

ASSEMBLY INSTRUCTION


STEP 7

Combine the (N3) to the (N4) and tighten the another 2 pieces (A)-(pre insert in step 3) as shown.

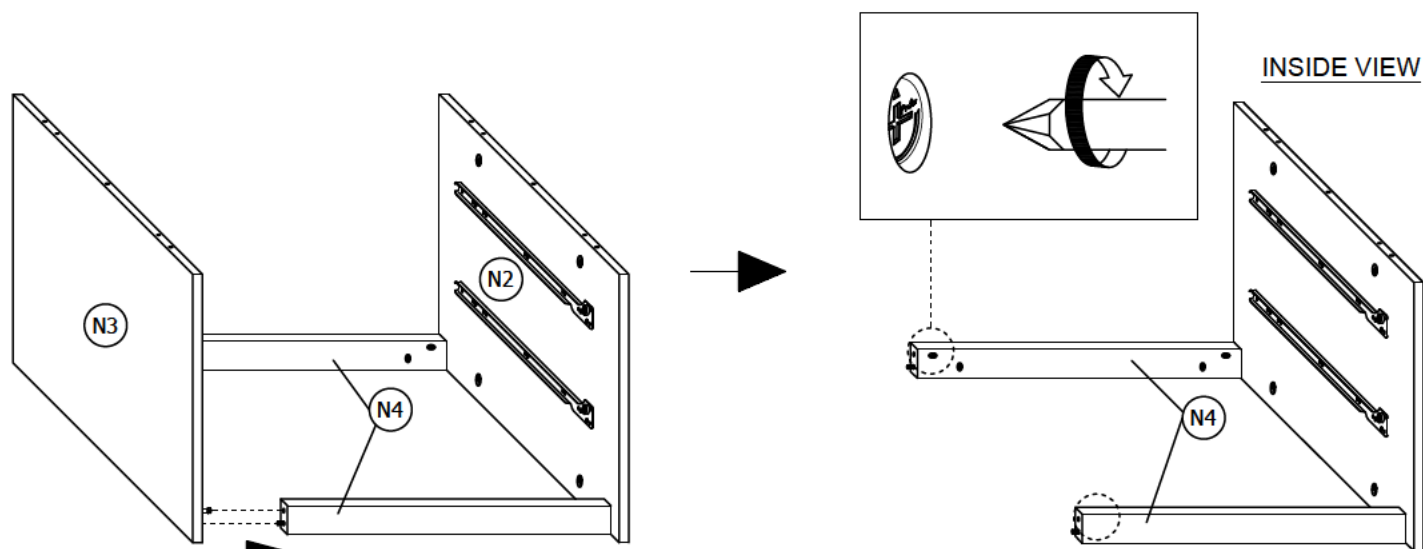

STEP 8


Combine the (N10) to the (N2),(N3) then tighten the 4 pieces (A)-(pre insert in step 1 and 2) as shown.

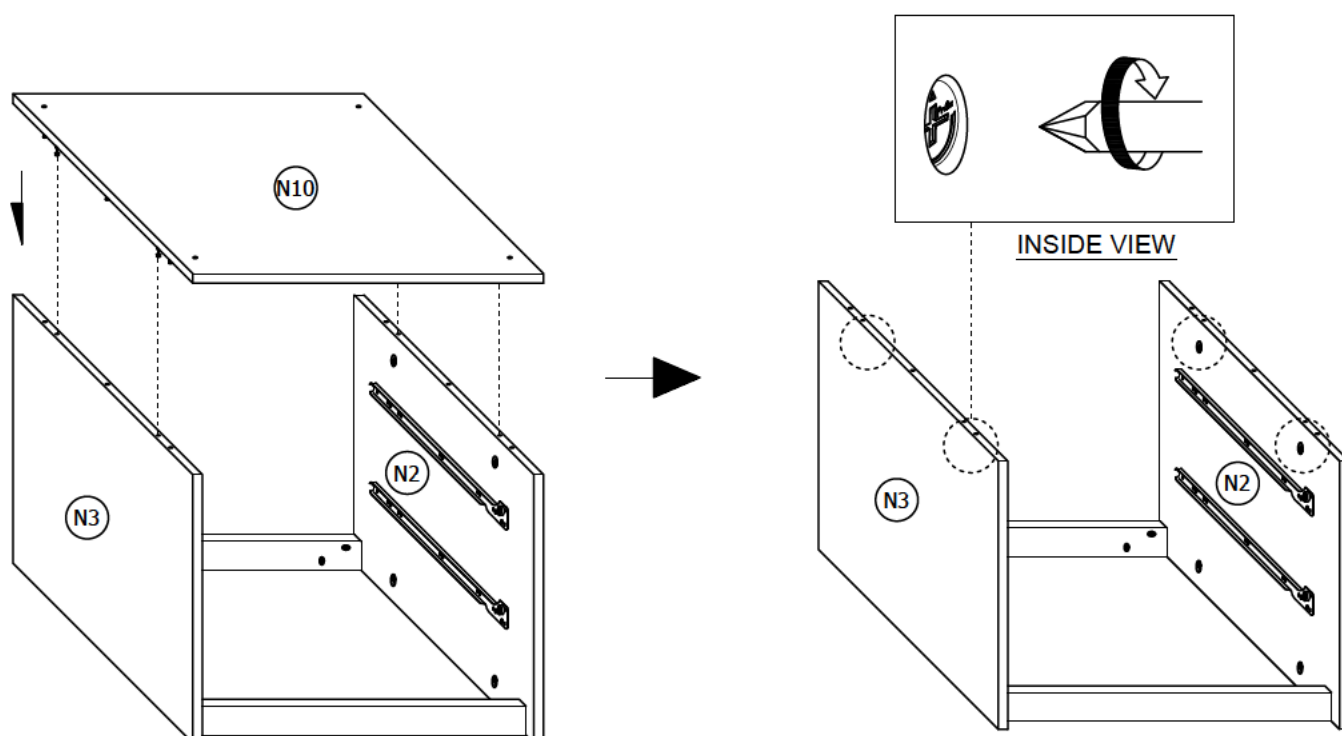

ASSEMBLY INSTRUCTION


STEP 9

Turn (22) clockwise to combine it to the (N10) as shown.

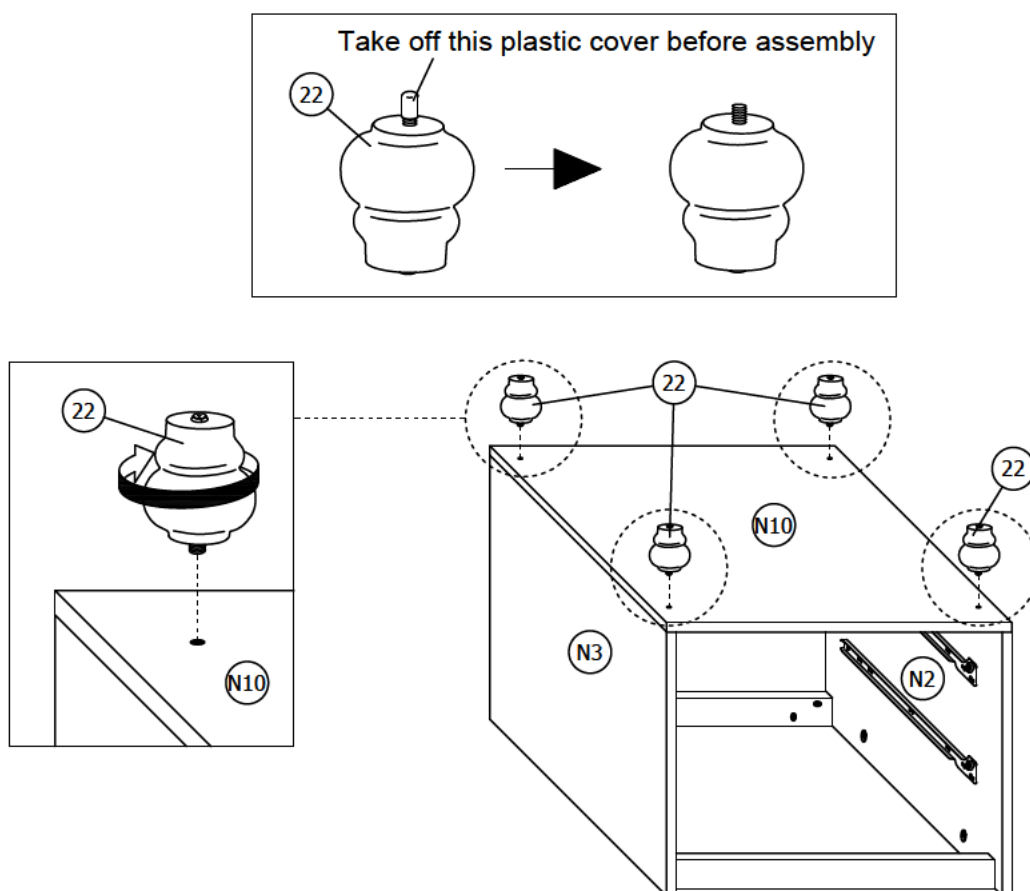

STEP 10


Combine the (N1) to the frame then tighten the remaining 8 pieces (A)-(pre insert in step 1 to 3) as shown.

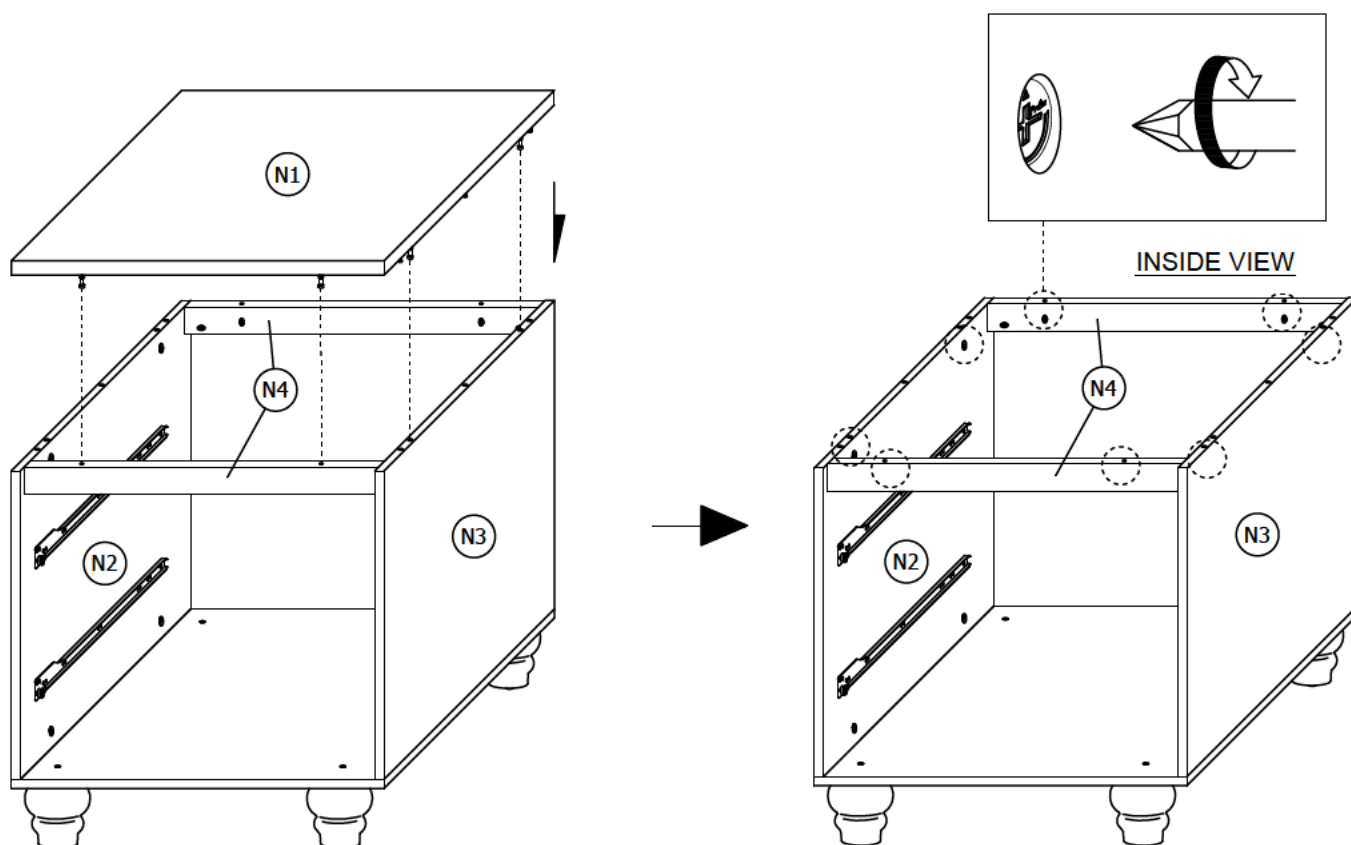

ASSEMBLY INSTRUCTION

STEP 11


Put the (N6) to the gap of (R) as shown. Direction of the side with colored paper must be the same.

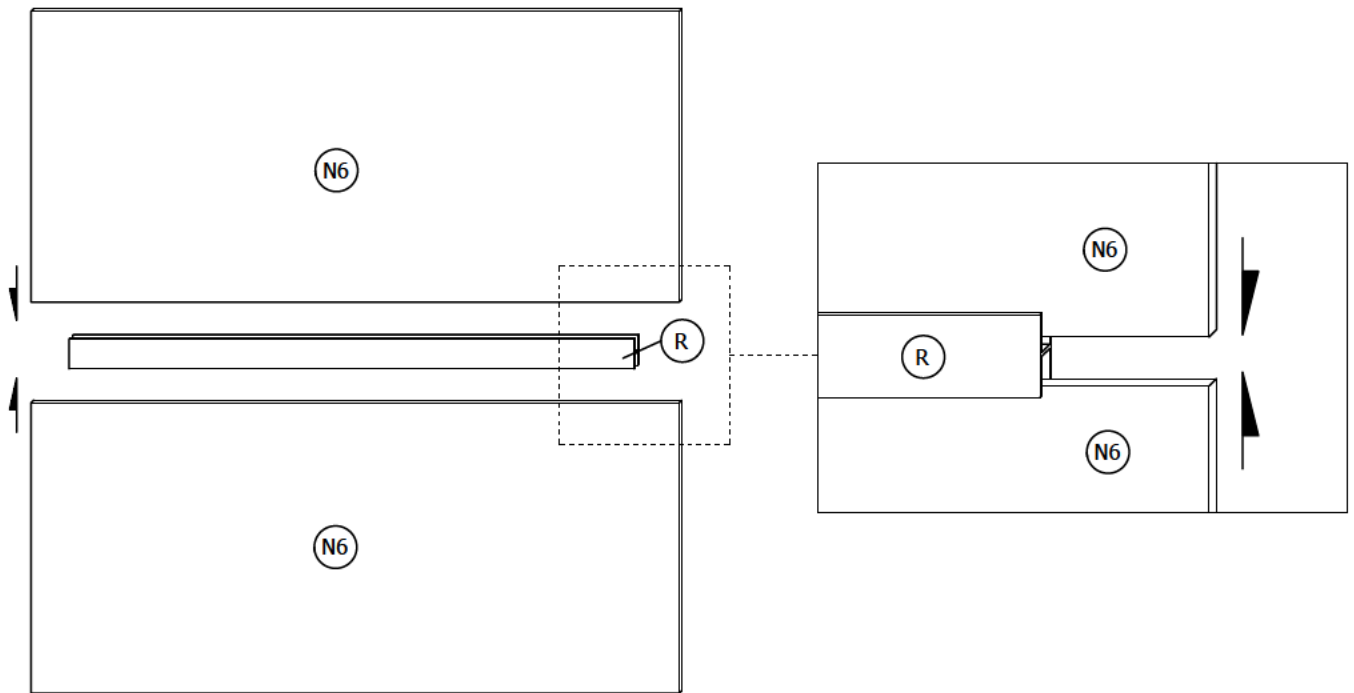

STEP 12

Insert the 16 pieces (L) to fix the (N6) as shown. Colored paper face to outside.


To prevent blocking (N1) and (N10), make sure the (R) at the middle of (N6), do not over high or lower.

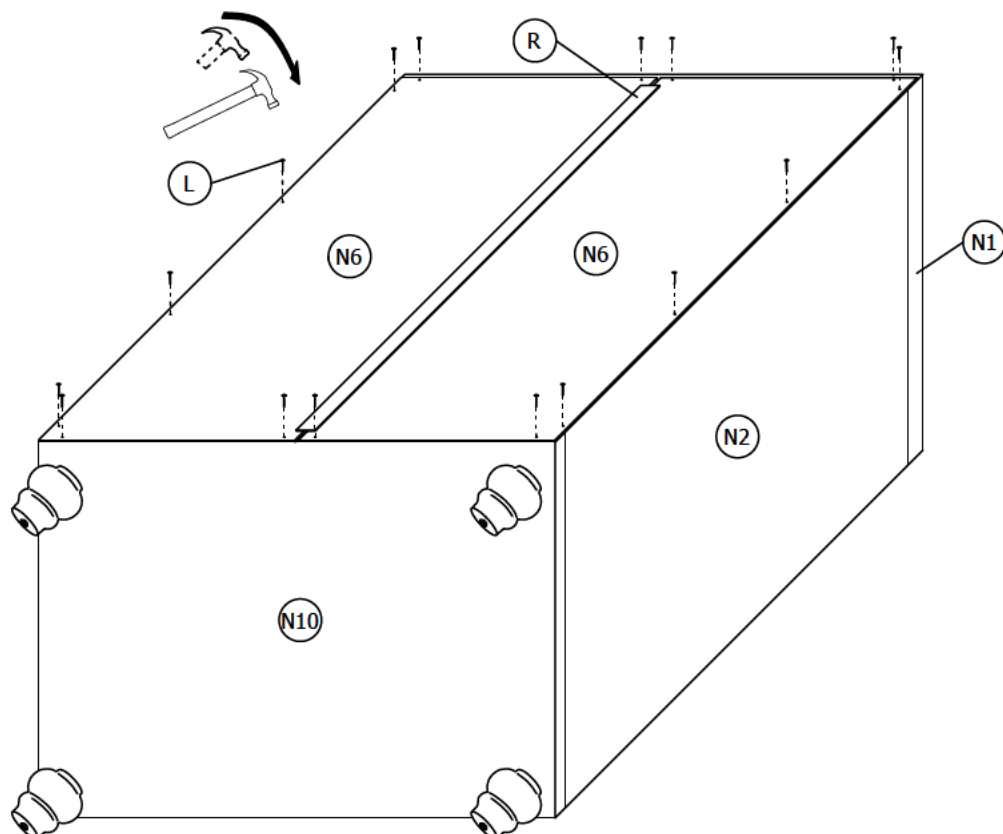


ASSEMBLY INSTRUCTION

STEP 13

Insert 3 pieces (B) to the (N7) as shown.

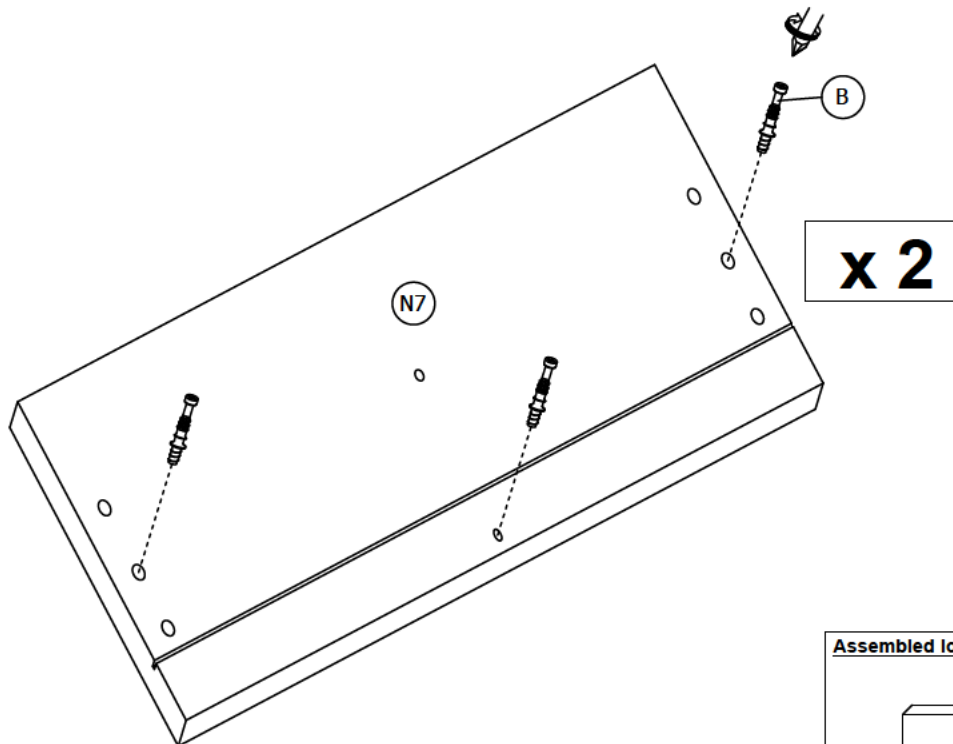


Assembled looks

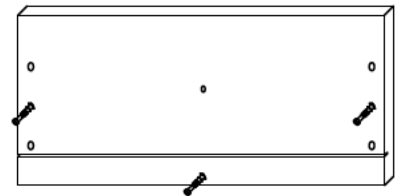


STEP 14

Insert 1 piece (A),(B) and 2 pieces (D) to (19) as shown.

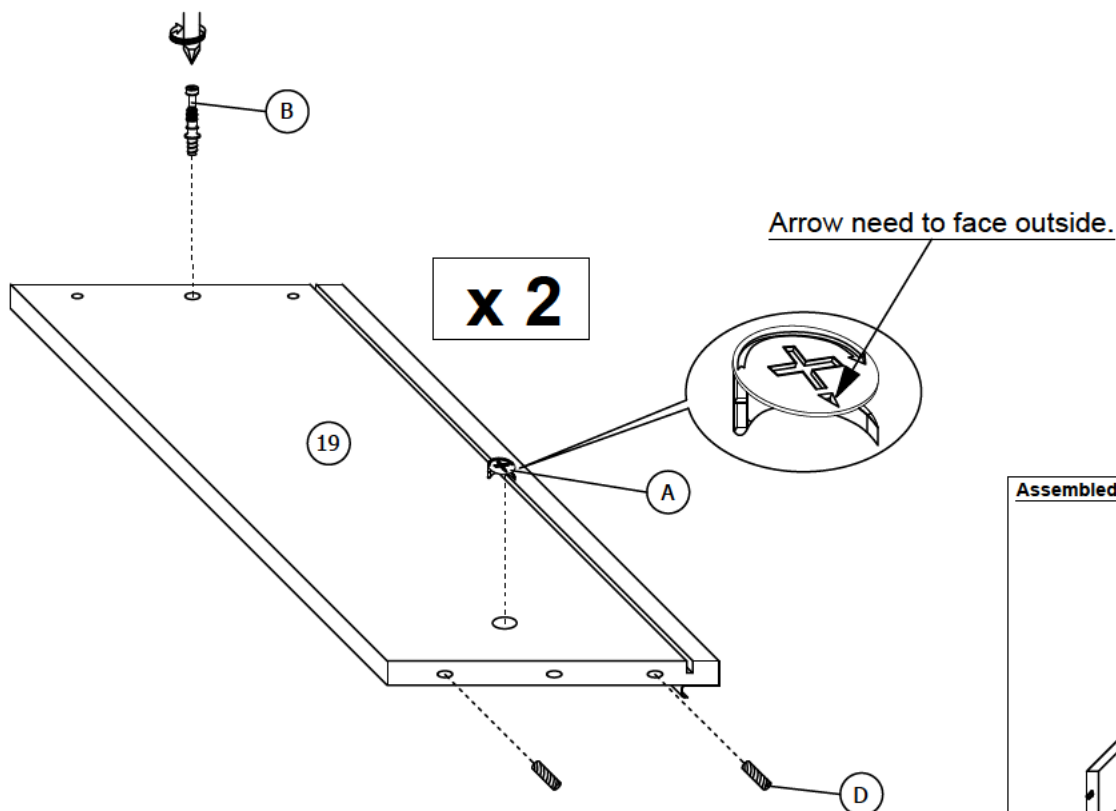


Assembled looks

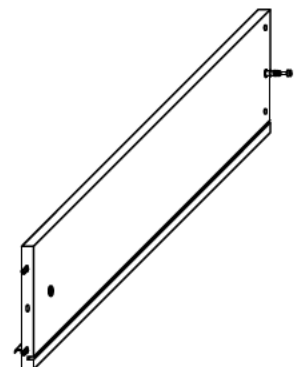

ASSEMBLY INSTRUCTION


STEP 15

Insert 1 piece (A),(B) and 2 pieces (D) to (20) as shown.

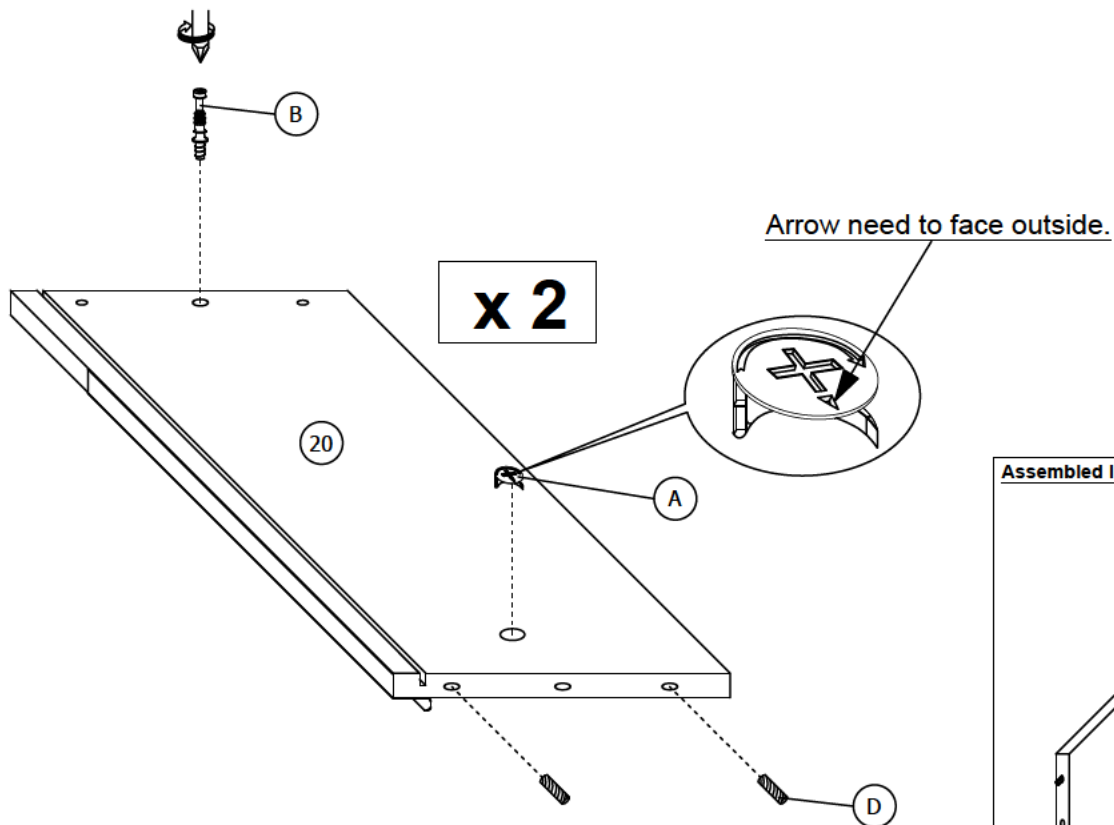

STEP 16

Insert 2 pieces (A) , 1 piece (B) and 4 pieces (D) to (N8) as shown.

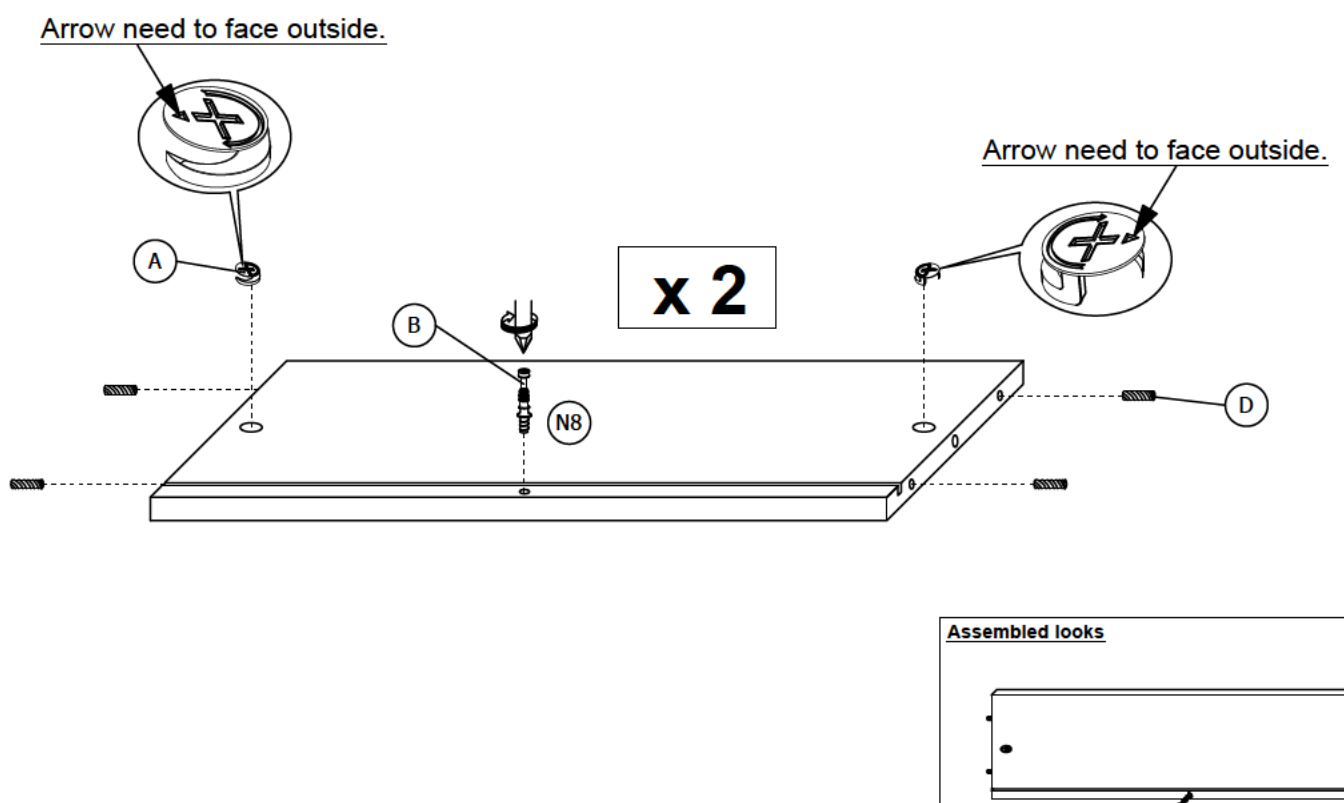

ASSEMBLY INSTRUCTION


STEP 17

Insert 2 pieces (A) to (21) as shown.

Arrow need to face outside.




x 2



Arrow need to face outside.






Assembled looks



STEP 18

Combine the (19) and (20) to the (N8) . Then tighten the 2 pieces (A)-(pre-insert in step 16) as shown.

x 2

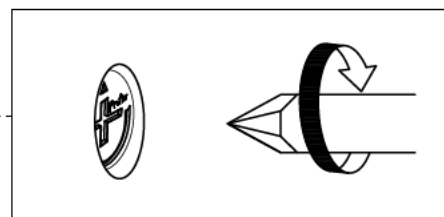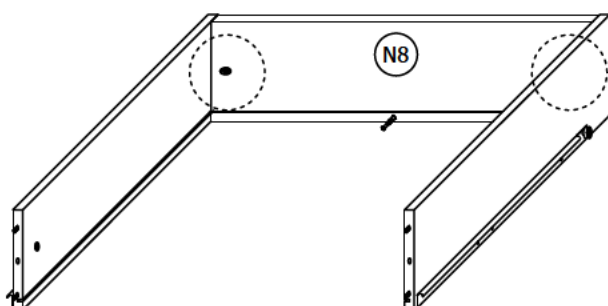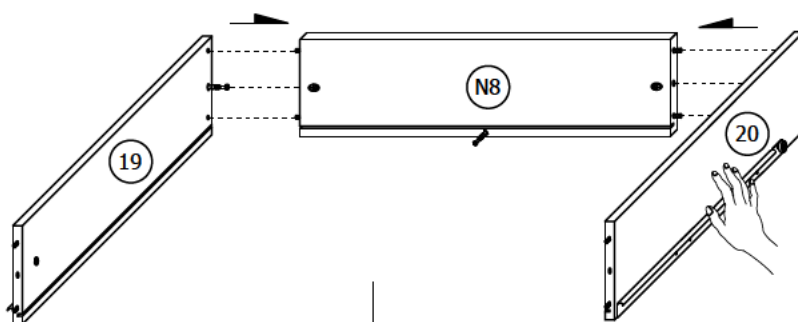


ASSEMBLY INSTRUCTION

STEP 19

Put the (N9) into the gap of (19),(20) and (N8) as shown.


x 2

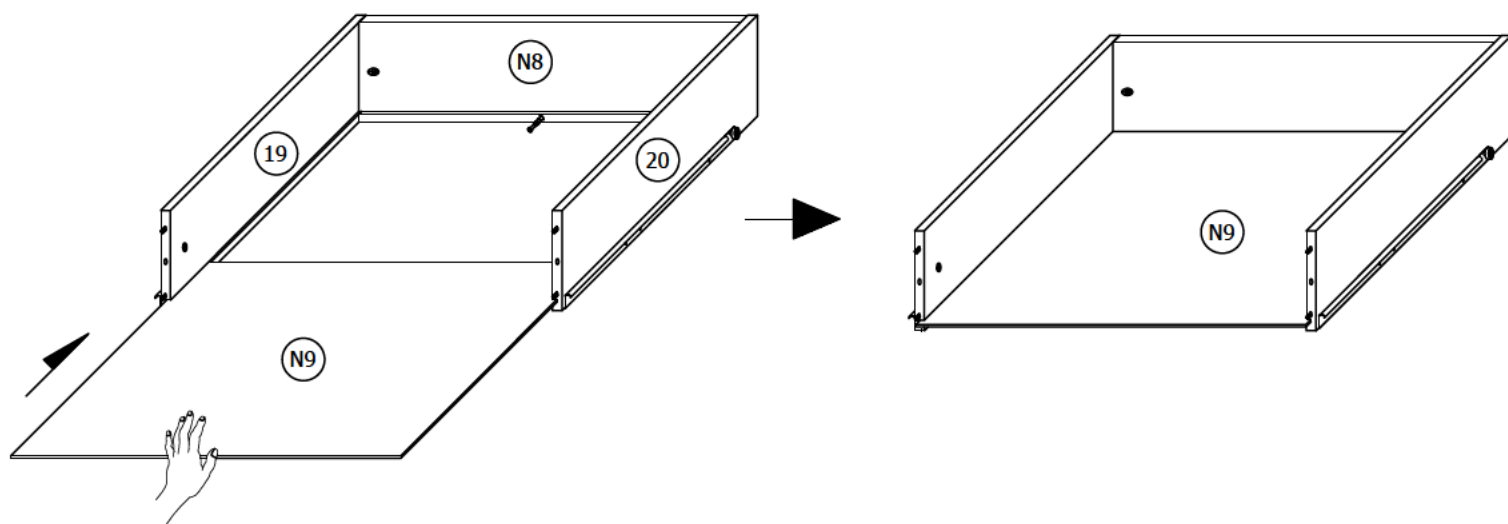

STEP 20

Combine the (21) to the (N8) then tighten the 1 piece (A)-(pre-insert in step 17) as shown.

x 2


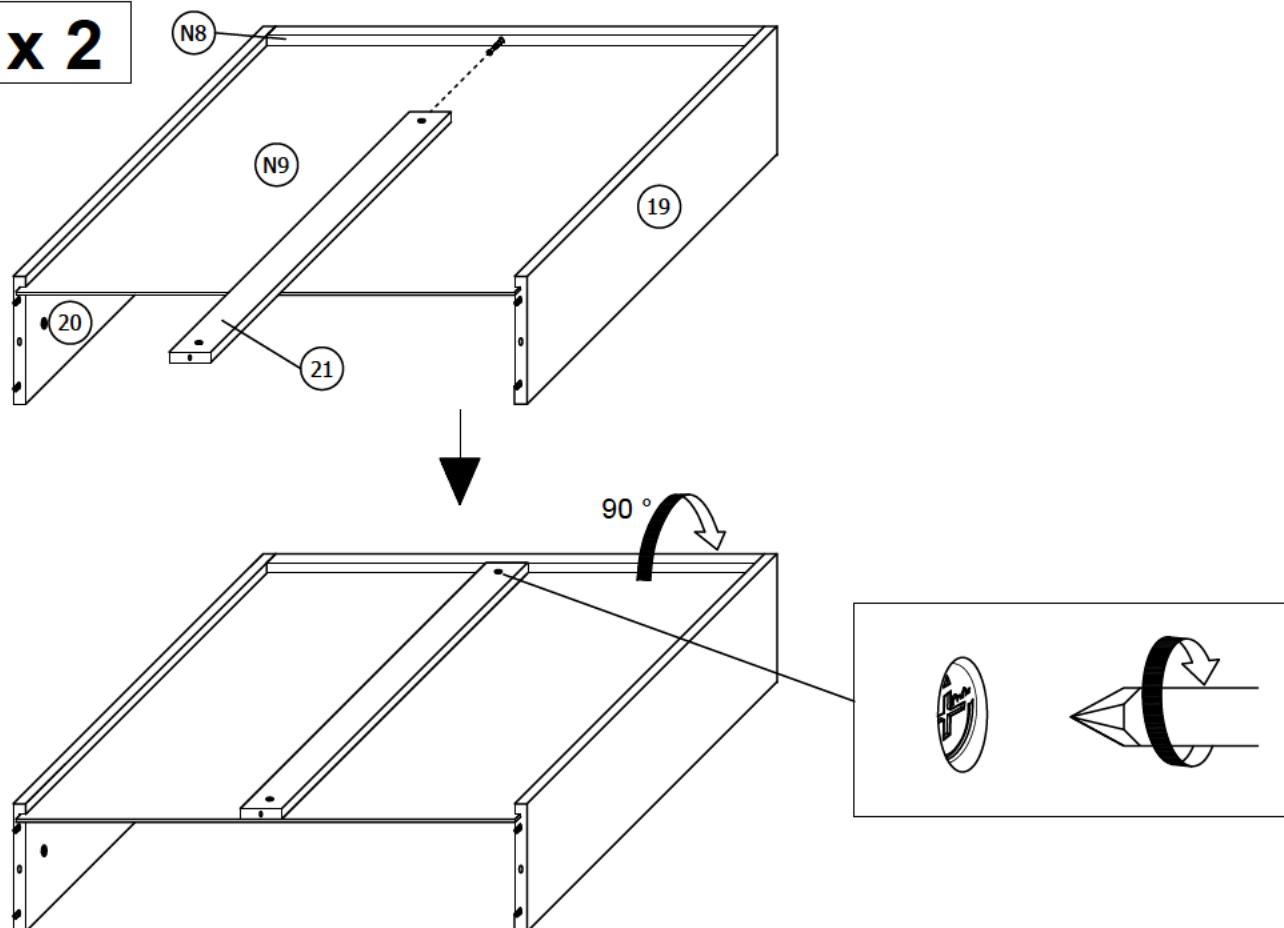


ASSEMBLY INSTRUCTION

STEP 21

Combine the (N7) to the drawer frame. Then tighten the 3 pieces (A)-(pre-insert in step 14,15 and 17) as shown.





x 2

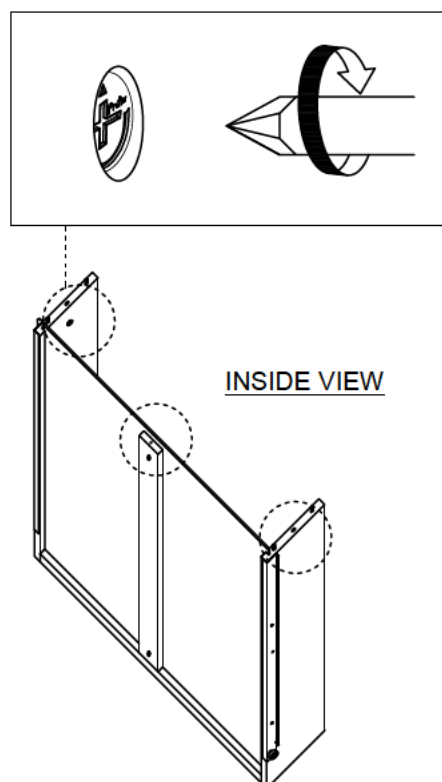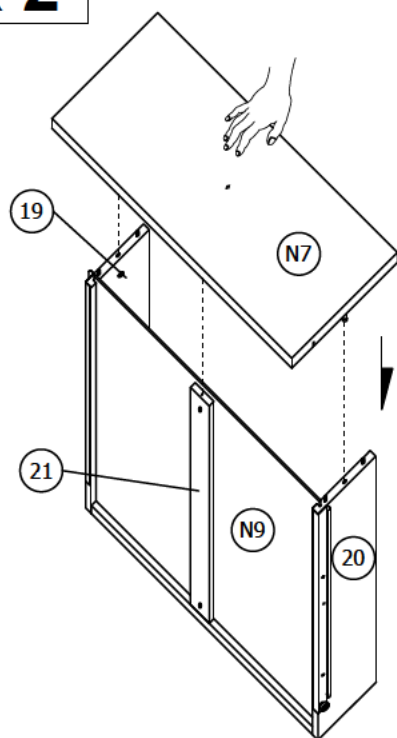

STEP 22

Combine (E),(F) then insert 1 piece (I) to fix as shown (Hole of (E) at upper side).


x 2

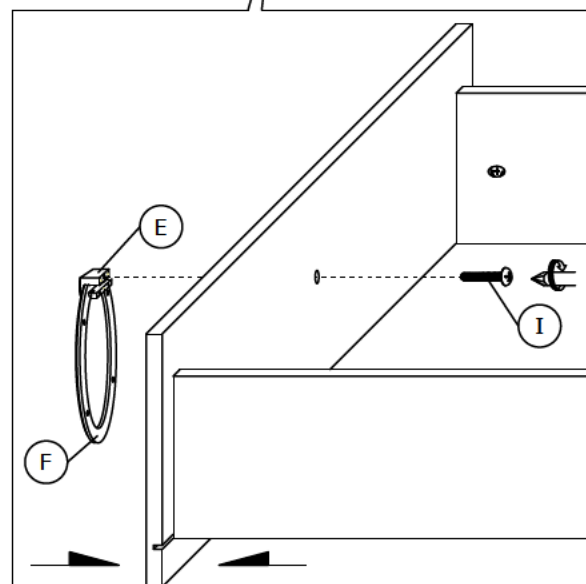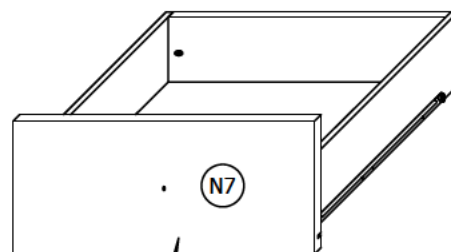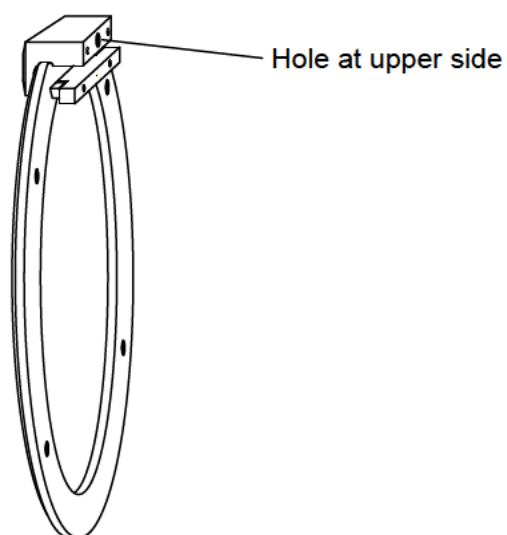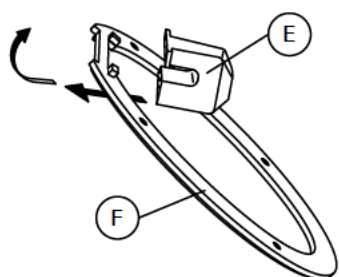


ASSEMBLY INSTRUCTION

STEP 23

Align the position then push the 2 pieces drawer to inside exactly by your hand as shown.

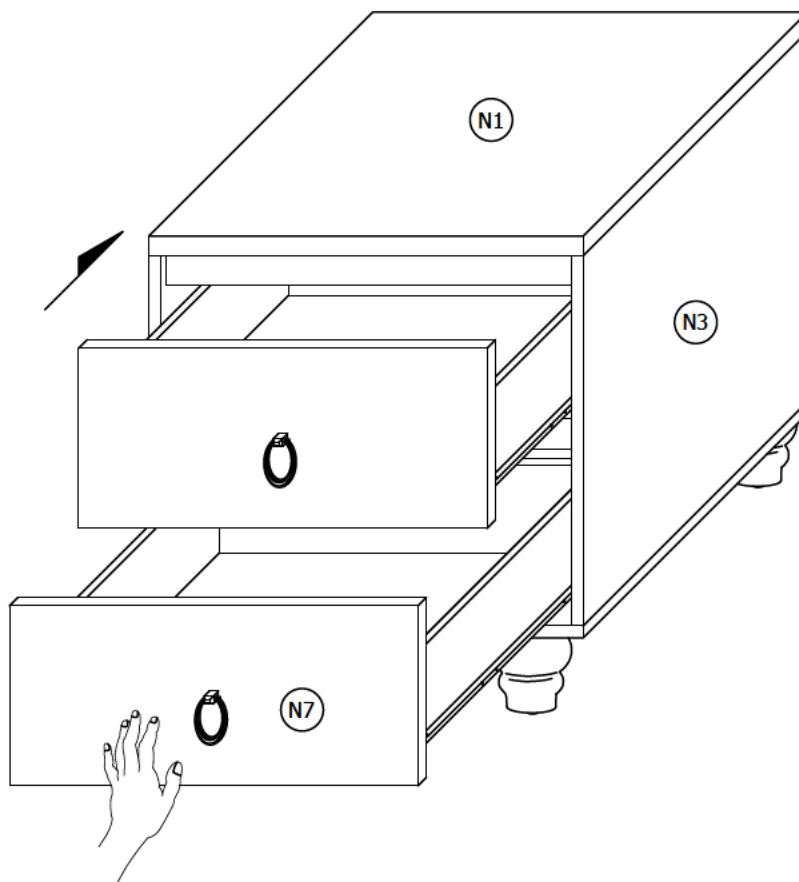

STEP 24

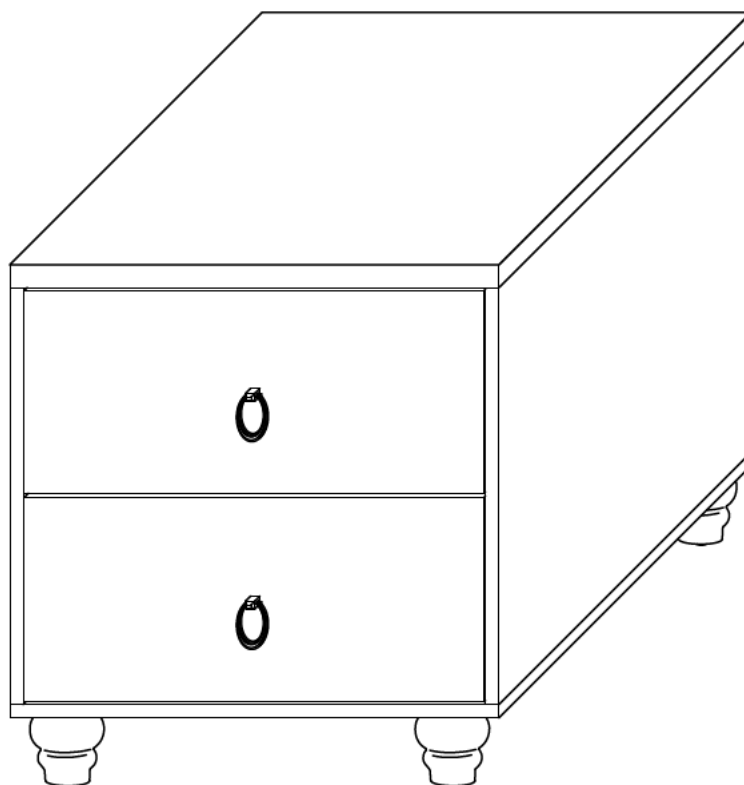

ASSEMBLY COMPLETED