

Installation Instructions



A: mounting screws



B: anchor for concrete wall



C: anchor for dry wall



D: fix the guard bar to glass



E: fix the glass to the bracket




F: adhesive mounting glue



G: supportive tapes

Option A: Adhesive Mounting Instructions

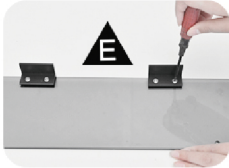

1. Connect brackets with glass and fix it with screw E



2. Mount the guard bar and fix it with screw D



3. Mark the mounting position




4. Take off the glass from brackets



5. Spread glue evenly across the backside of brackets



6. Attach the brackets onto the marked position and apply pressure

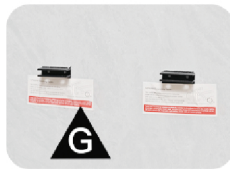


7. Apply provided supportive tapes G to prevent fall



8. Wait 72 hours for adhesive to cure.




9. Insert glass and fix it with screw E again

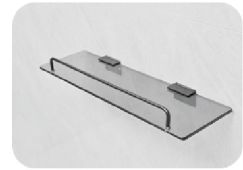


10. Installation complete

Note: The adhesive installation is suitable but not limited to smooth surfaces such as ceramic tiles, smooth marbles, glass, metal, and solid woods. It is NOT recommended for surfaces such as drywall, wallpaper, painted walls, limed walls, rough marbles, concrete walls, and uneven surfaces. We also highly suggest to use the studs behind drywalls for drill mounting (see more details on our homepage).

Option B: Drill Mounting Instructions

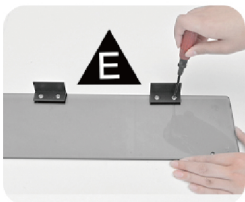


1. Connect brackets with glass and fix it with screw E

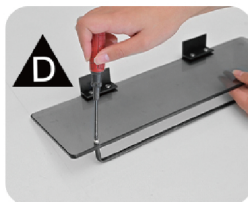

2. Mount the guard bar and fix it with screw D



3. Mark the mounting position

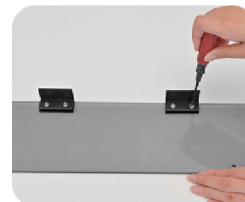


4. Take of the glass from brackets



5. Mark the drill position (the mounting hole at the place where insert glass)



6. Drill 6mm holes in to your indicators

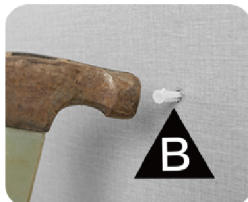


7. Use a hammer to drive anchor in the wall



8. Use screw A to fasten the bracket to the wall



9. Insert glass and fix it with screw E again

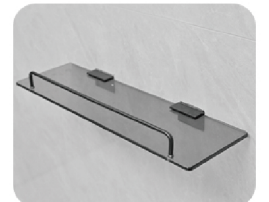

10. Installation complete