
SKU:DSN035BN302B/DSN035GR304B/DSN035PN306B DSN035BL305B/DSN035RN301B 20041

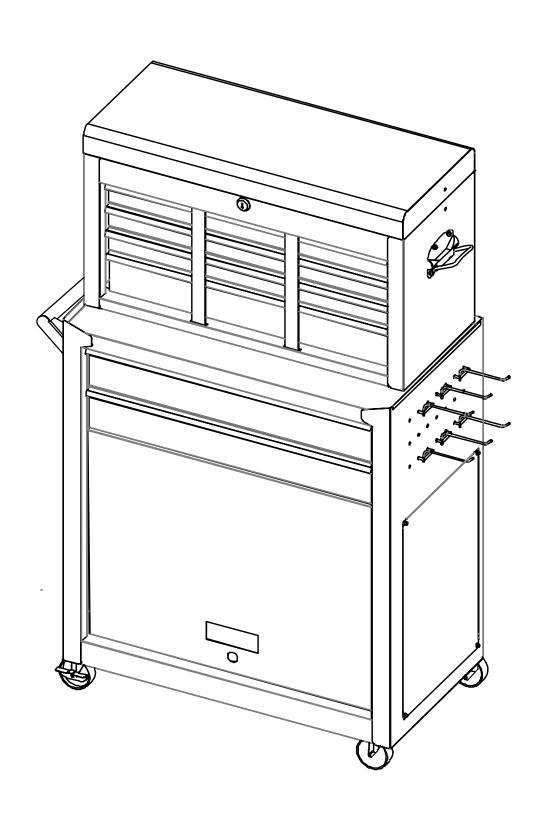

THANK YOU FOR CHOOSING US!

Your new Metal Cabinet has arrived and it will make your life so much easier. That's why we put so much effort into designing it to perfectly fit your needs.

But first things first, we need to install it!


When we say "we", we mean we're going to guide you, step by step. We created this instructions manual so that you won't feel overwhelmed and get your new cabinet up and ready to use in no time! We also know that sometimes things just don't seem to fit, so don't hesitate to drop us a line at help@amrecianoffice.com if you have questions or need help!

Anyways, this cabinet CAN'T WAIT To BE OF SERVICE so let's assemble it!

MISSING A PART? DON'T WORRY, WE GOT YOUR BACK!

Compare the sketch on the next page with your package. Are all the pieces there? However, sometimes errors happen,so if anything is missing just send us an email and we will make sure to fix it!

SKU:DSN035BN302B/DSN035GR304B/DSN035PN306B/DSN035BL305B/DSN035RN301B

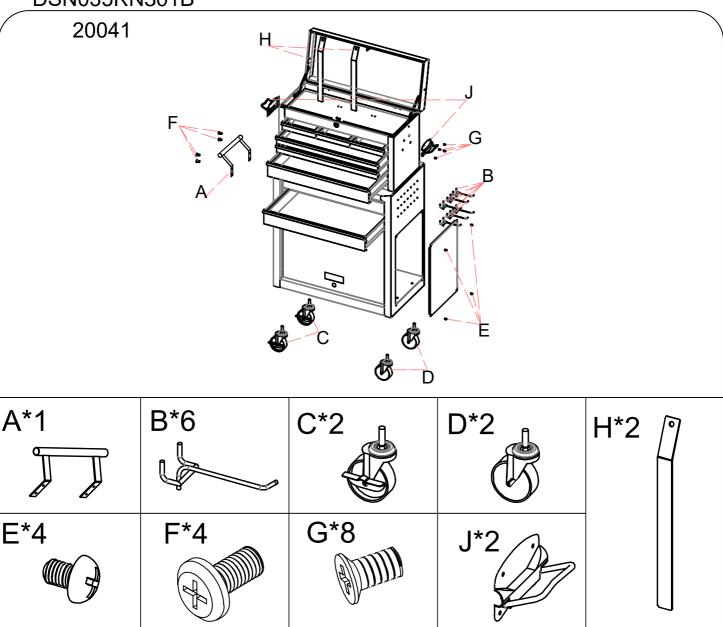


MAINTAINCE&SAFET

- Grease and oil can be removed with most of standard fluids.
- Use high quality bearing grease for casters.
- Lubricate the slides when neede.
- Do not stand on this product.
- Do not towwith power equipment.
- ◆ Do not alter this product in any manner.
- ◆ Do not attach or mount this product to any moving object.


- ♦ Keep the product on a level surface.
- Be careful when opening more than one drawer.
- ◆ When locking the chest, close the drawers before closing the lid for locking bars to work properly.
- ◆ The max. weight for each drawer should be no more than 5kg.
- ◆ The max. weight for chest &cabinet combo, including contents, should be no more than 60kg

Step 1


Loosen the screws "E" on the side panel. Keep the screws pls.

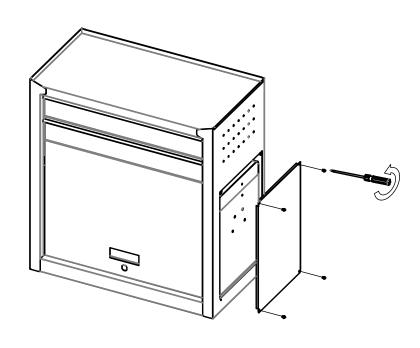


Step 2 Loosen the screw "F" on the bottom panel.

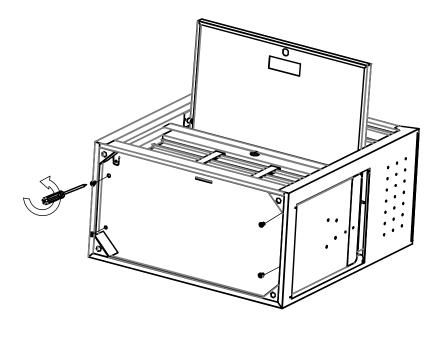


 $Step \ 3 \ {}^{\tiny \text{Take out the upper cabinet.}}$

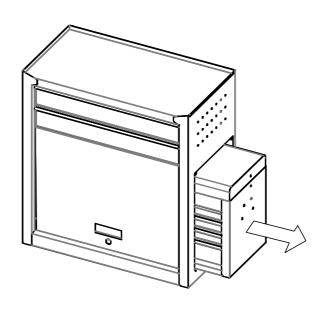


Step 4 Install side panel with screws "E".
Install the wheels. The wheels with brakes should be installed on the side of handle.

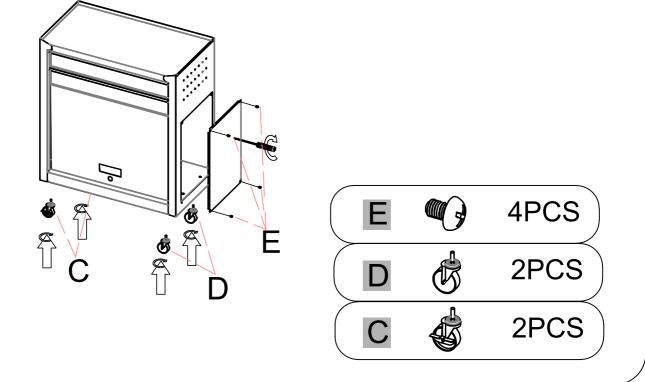

 $Step \ 5 \ {\tt Put \ the \ upper \ cabinet \ on \ top \ of \ the \ base \ cabinet}.$

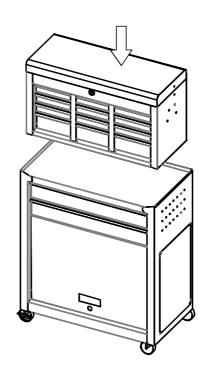

 $Step \ 6 \ \text{Install the metal handles "A" on the left side of the cabinet, the tool hook on the right side of the cabinet, and the annular type handles "J" on both sides of the cabinet above.}$

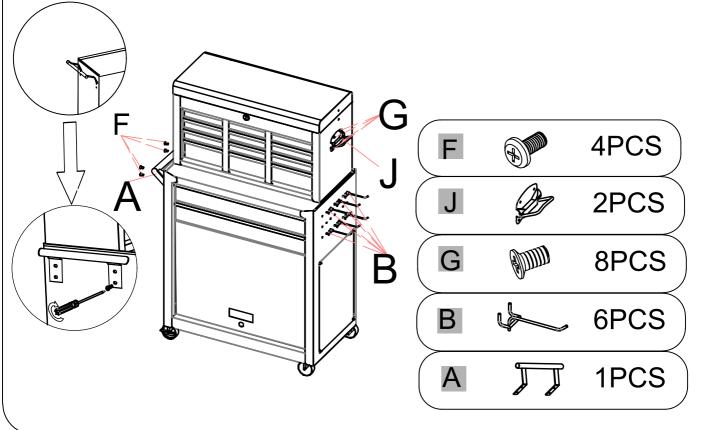

Step 7

Open the top cover and take out the lock plate. Installation completed.

