


Bed Frame

Product ID. QUMDV

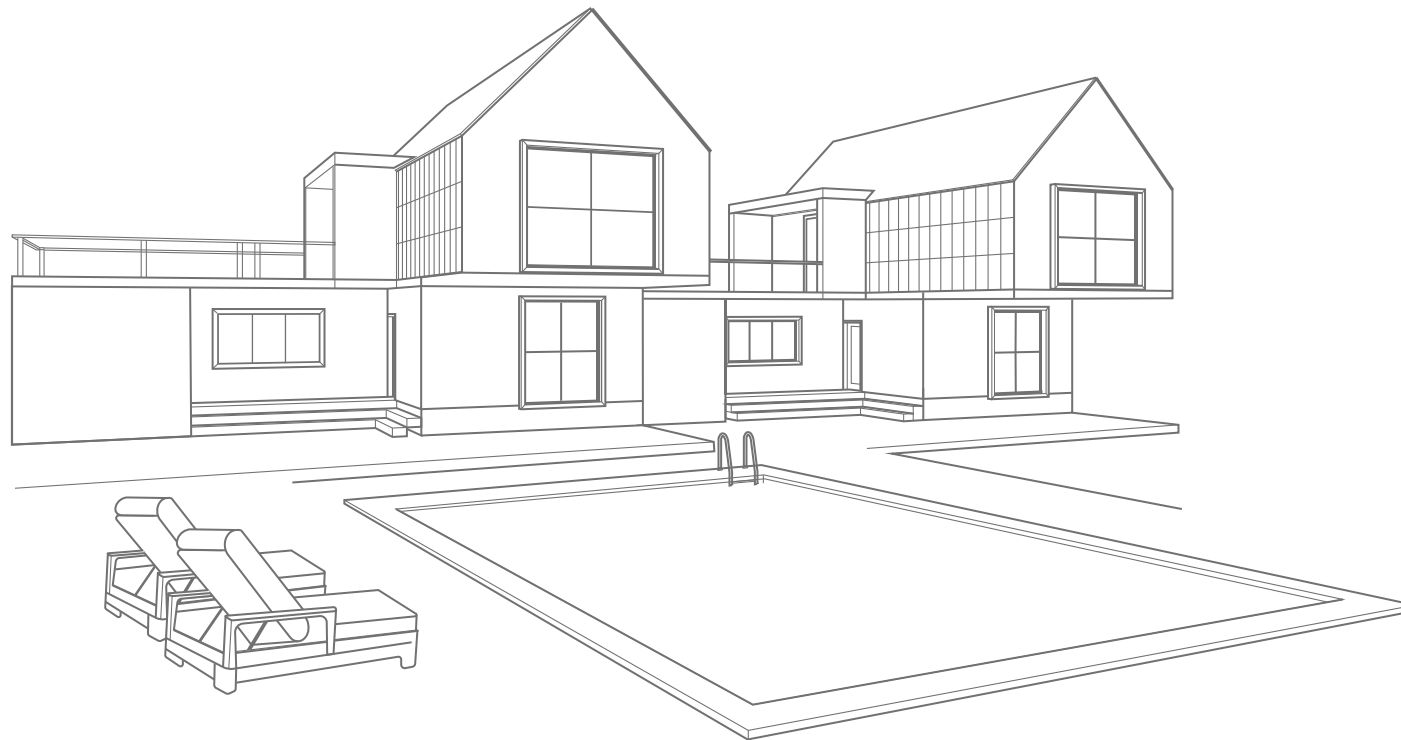

Scan for Support
support@garvee.com




Distributed by
GARVEE.com


V251105YFOU

Assembly Instruction

Hardware parts

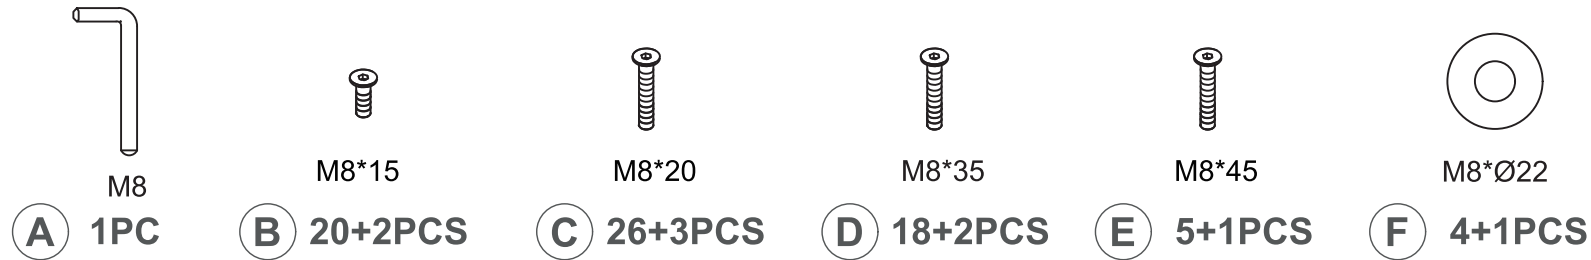


Part list

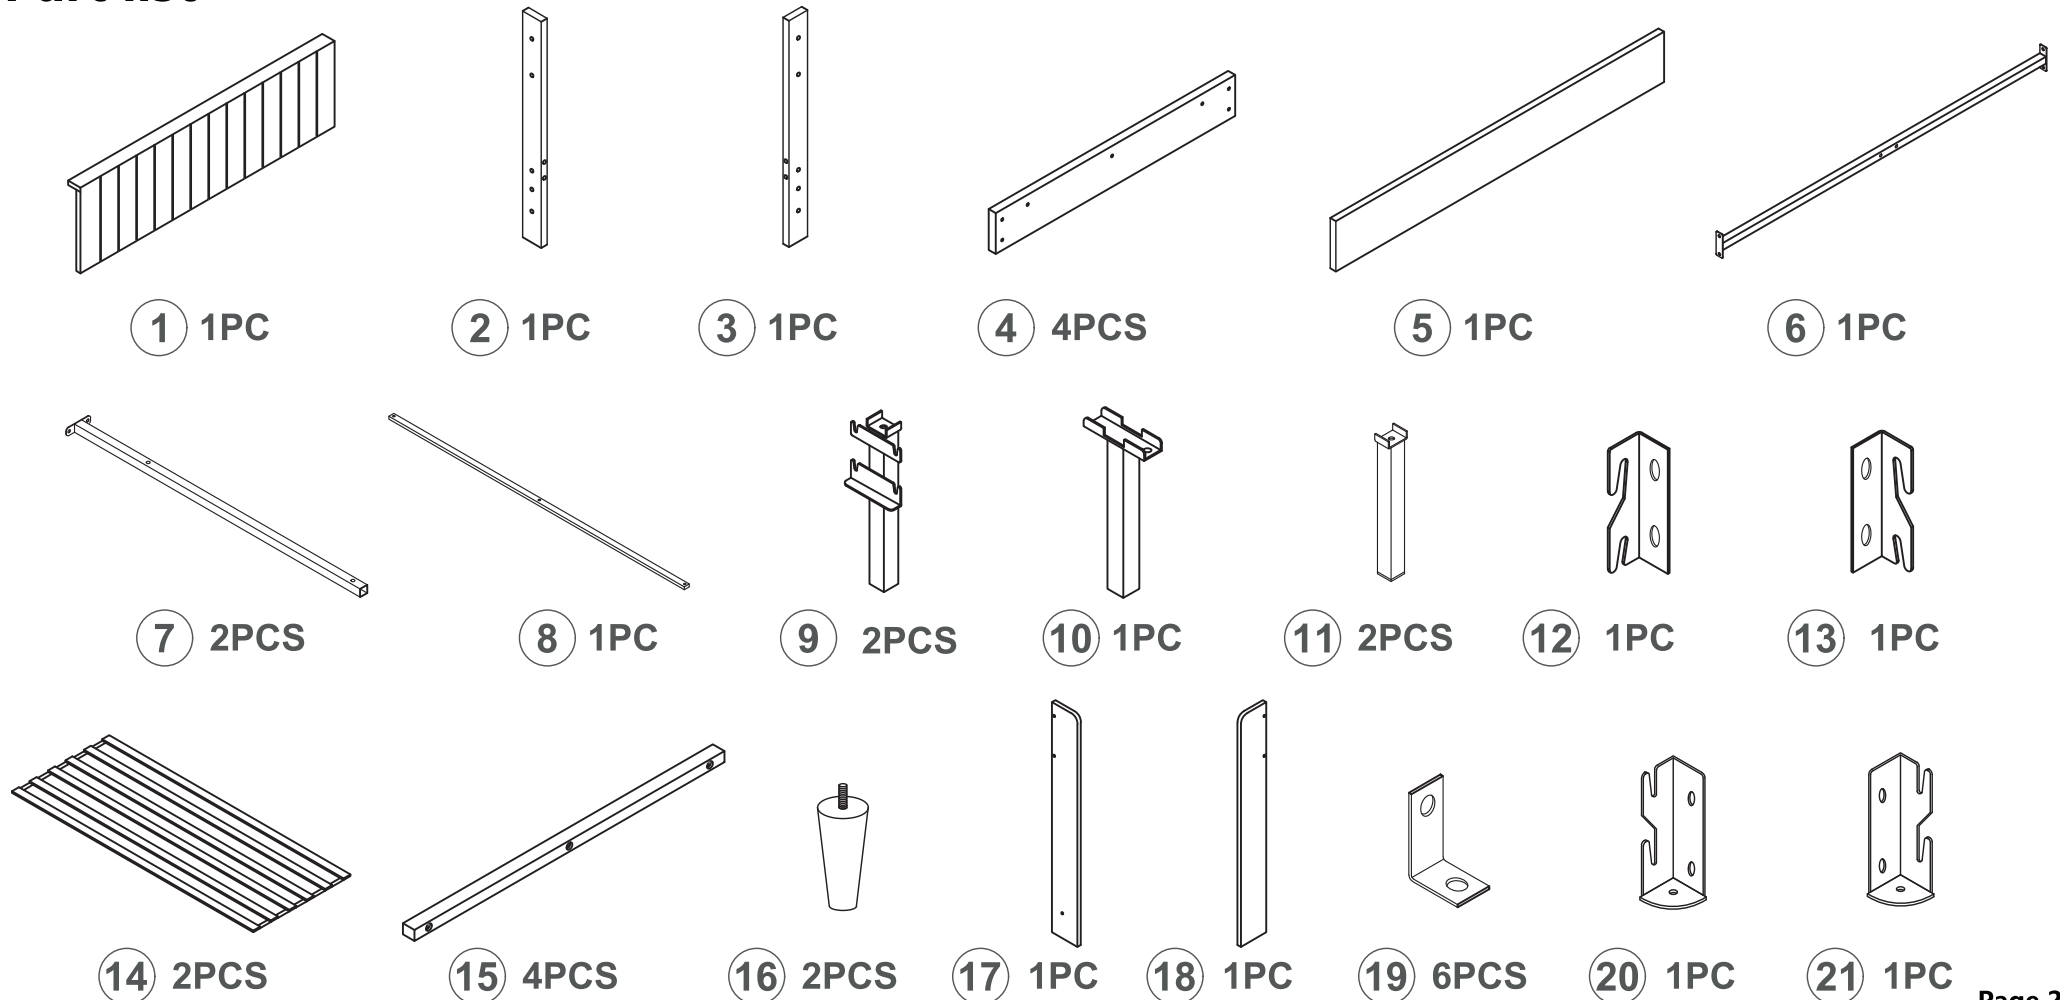

Assembly Instruction

Step:1

 **C** X2PCS
M8*20

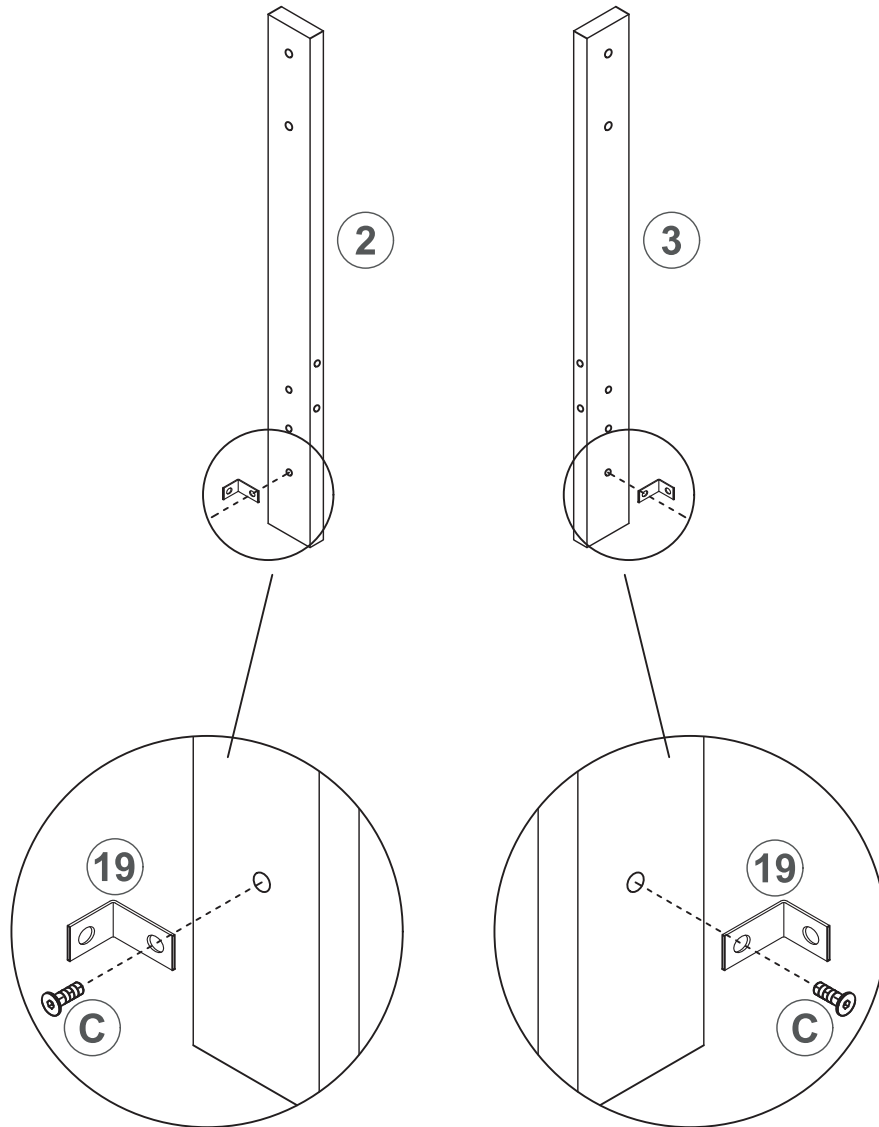


Step:2

 **E** X4PCS
M8*45


 **F** X4PCS
M8*Ø22

 **C** X4PCS
M8*20

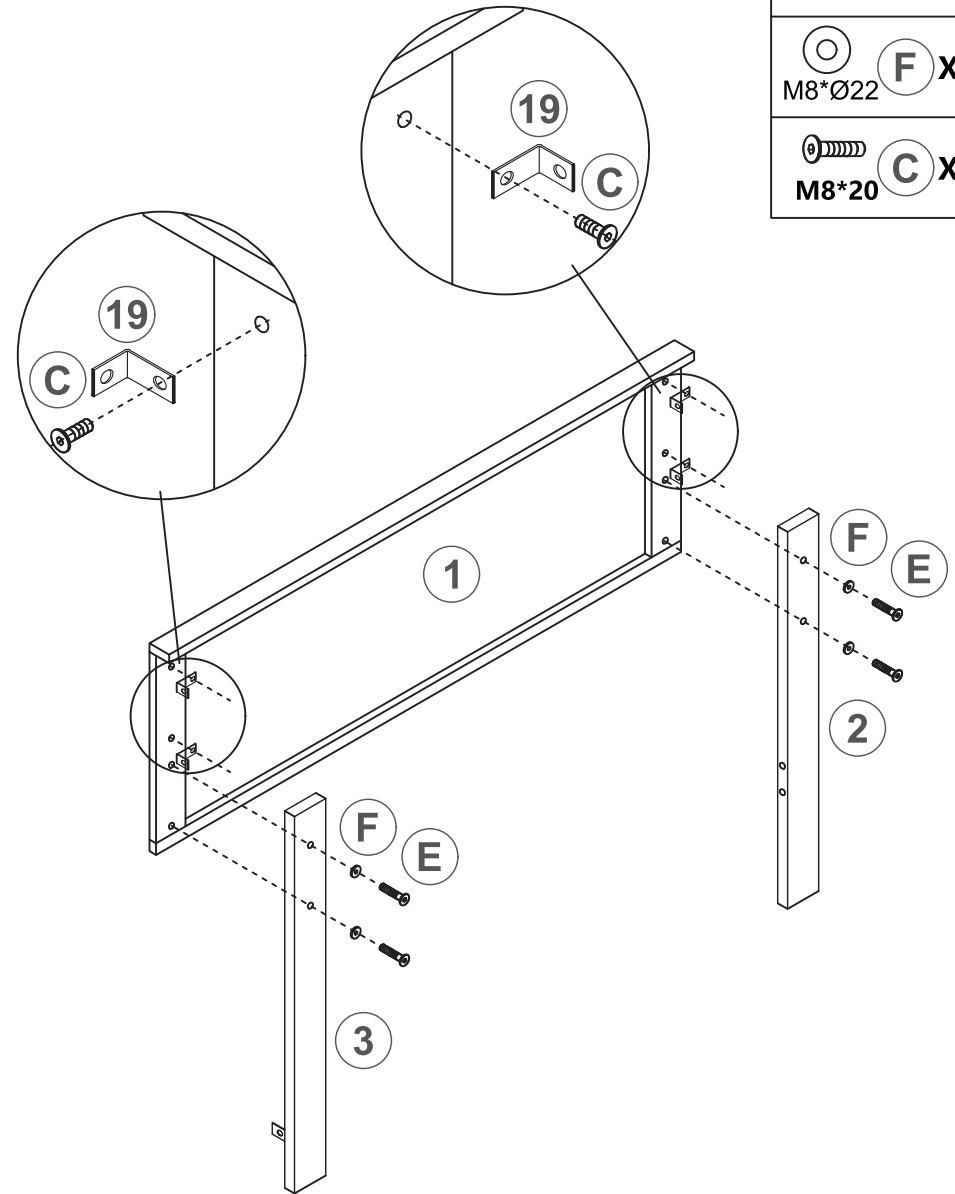

Assembly Instruction


Step:3

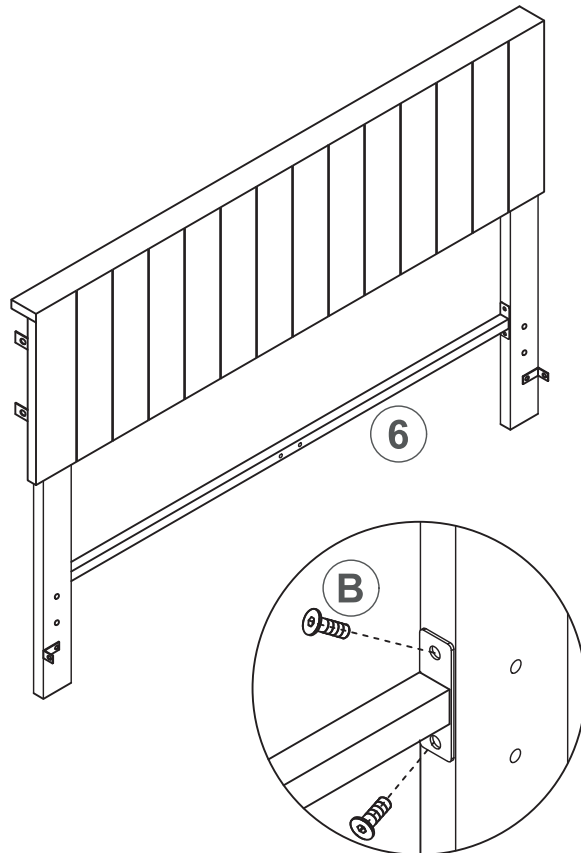

M8*15 (B) X4PCS

Step:4

Black magic veneer facing upwards

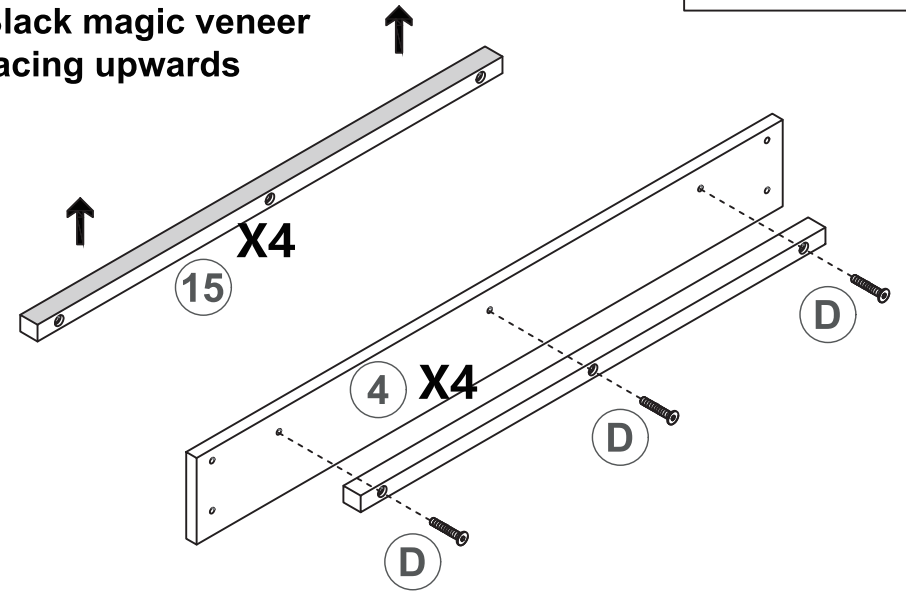


M8*35 (D) X12PCS

Step:4

Four bed sides (4) need to be installed, 2 sets in total

Tips : Don't tighten all the screws. Tighten them at last

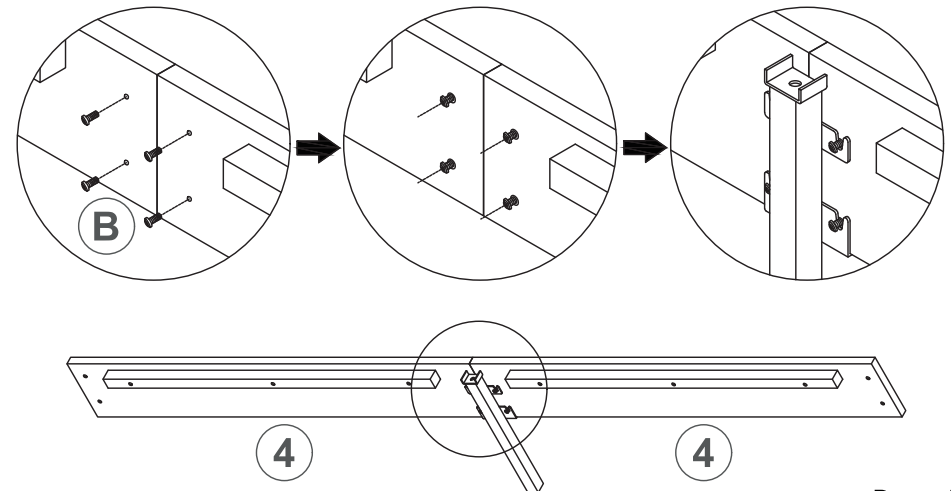


M8*15 (B) X8PCS

Assembly Instruction


Step:5

 **B** X8PCS
M8*15

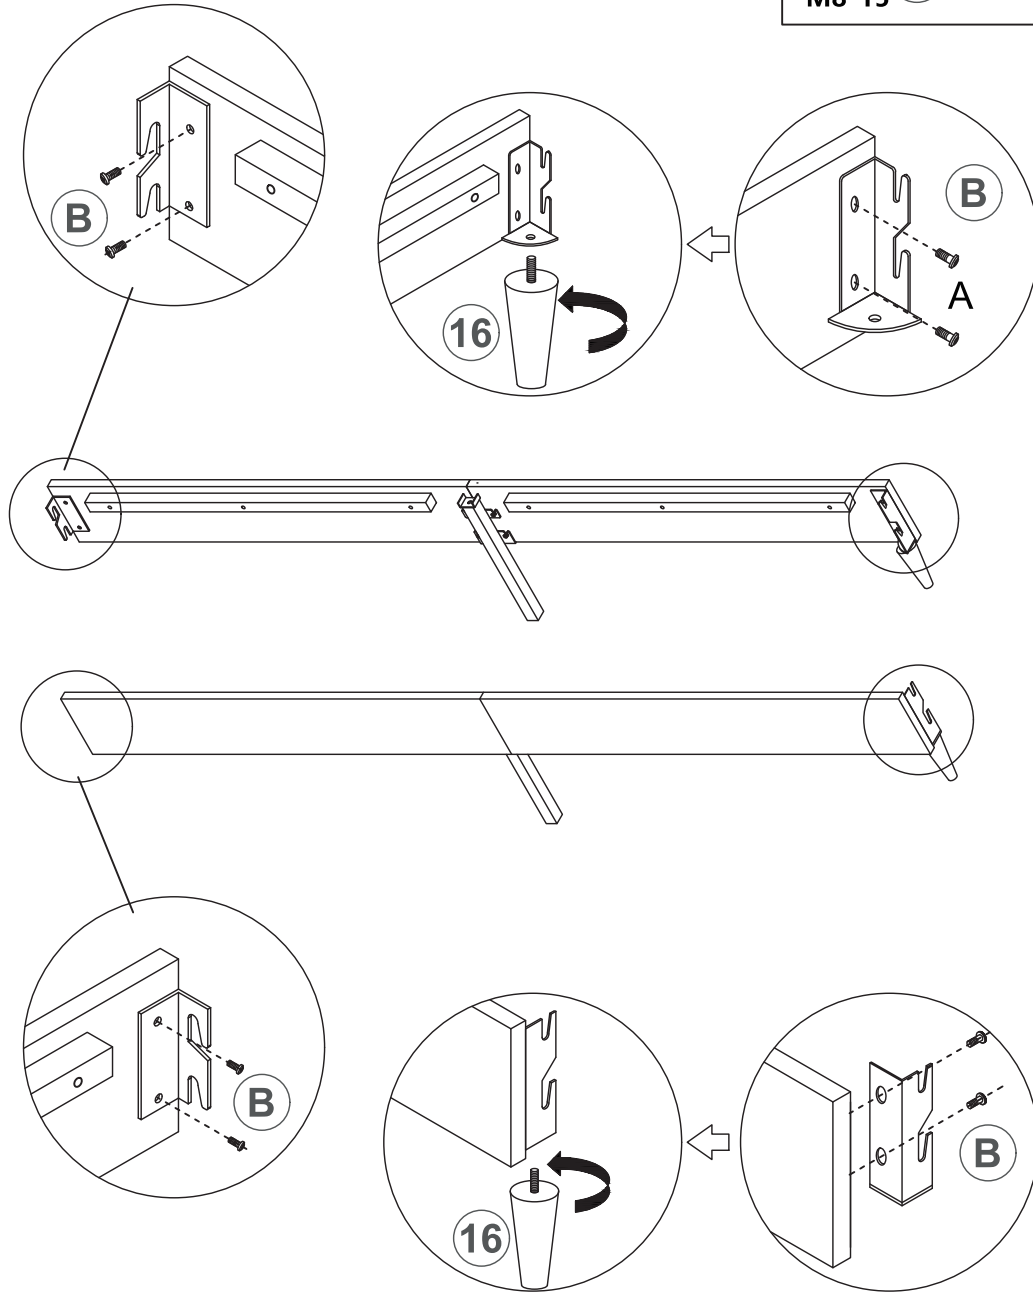

Step:6


 **C** X4PCS
M8*20

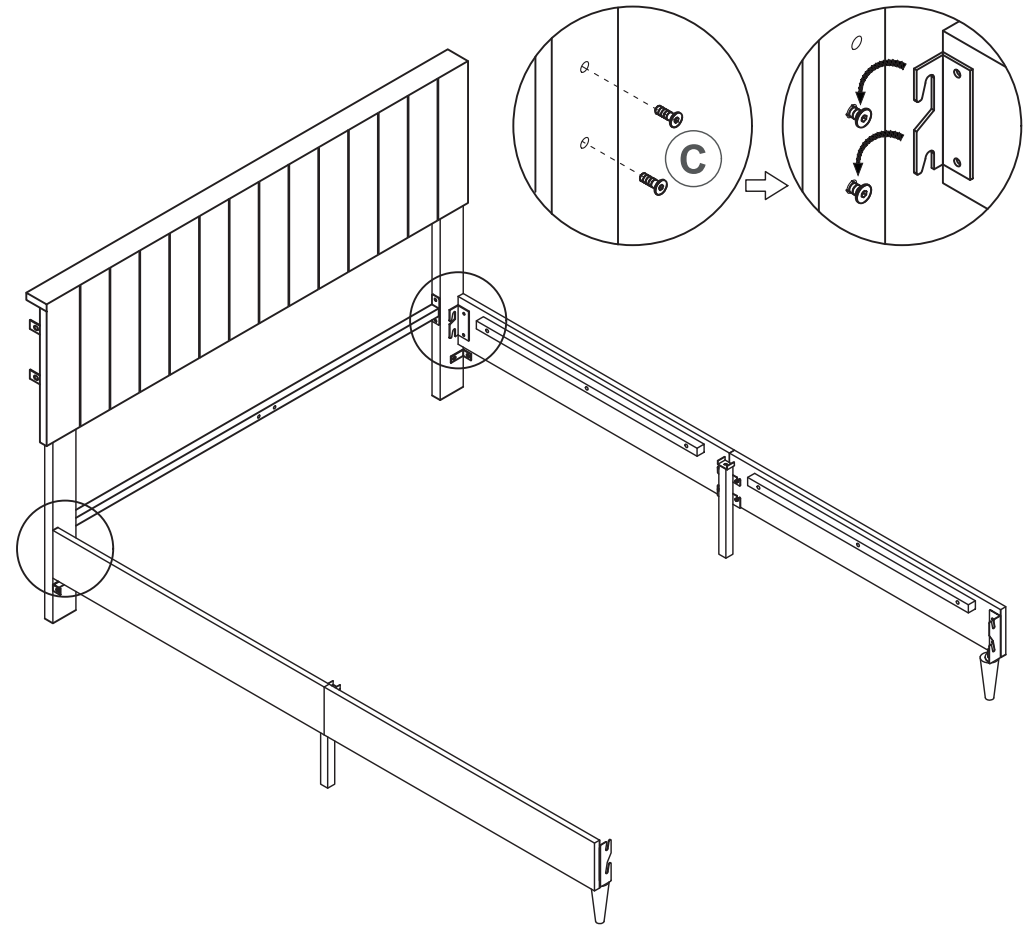

Assembly Instruction


Step:7

 **C** X4PCS
M8*20

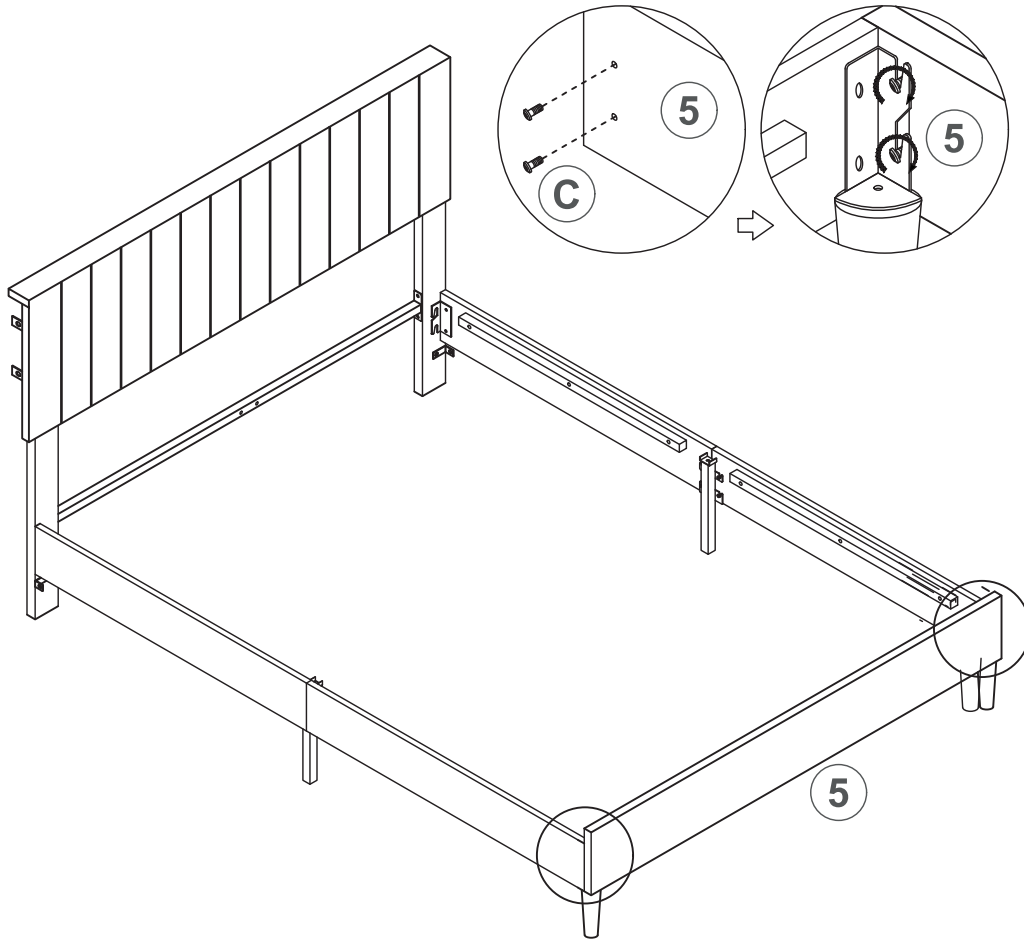

Step:8


 **C** X6PCS
M8*20

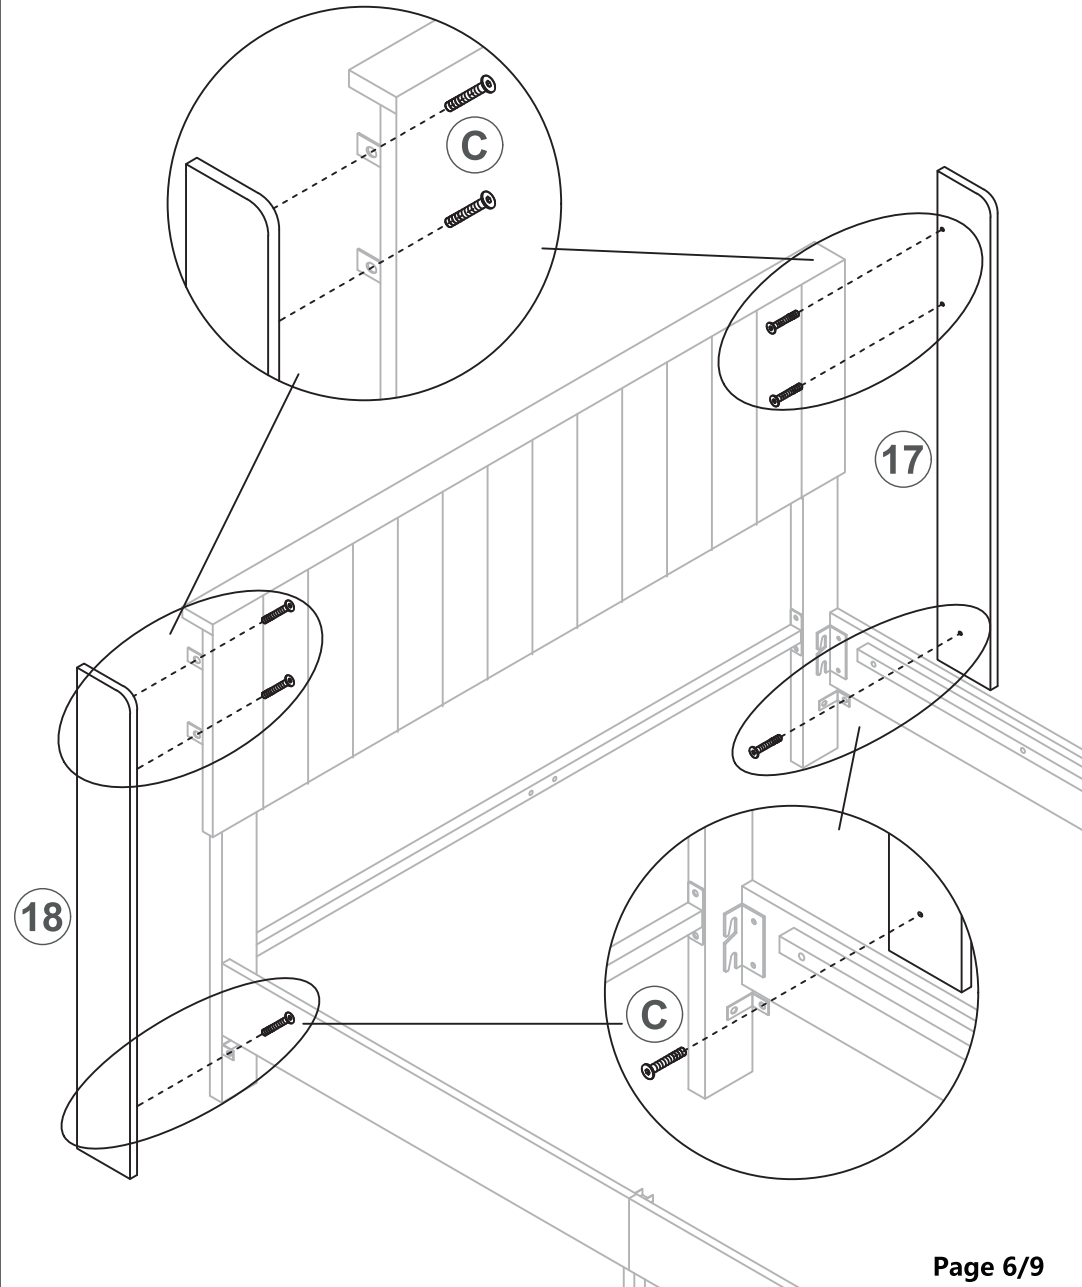


Assembly Instruction

Step:9

 **D** X2PCS
M8*35

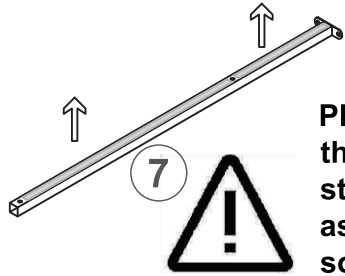


Please be sure to pay attention to the fact that there are mute stickers facing upwards during assembly, and the material feels soft to the touch

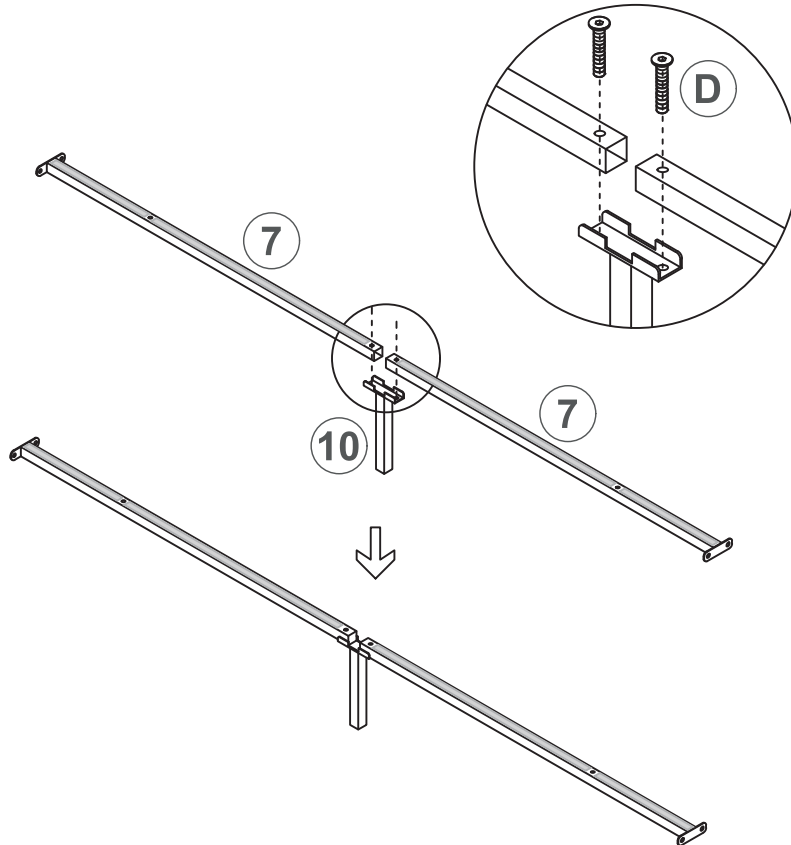

Step:10


 **C** X4PCS
M8*20

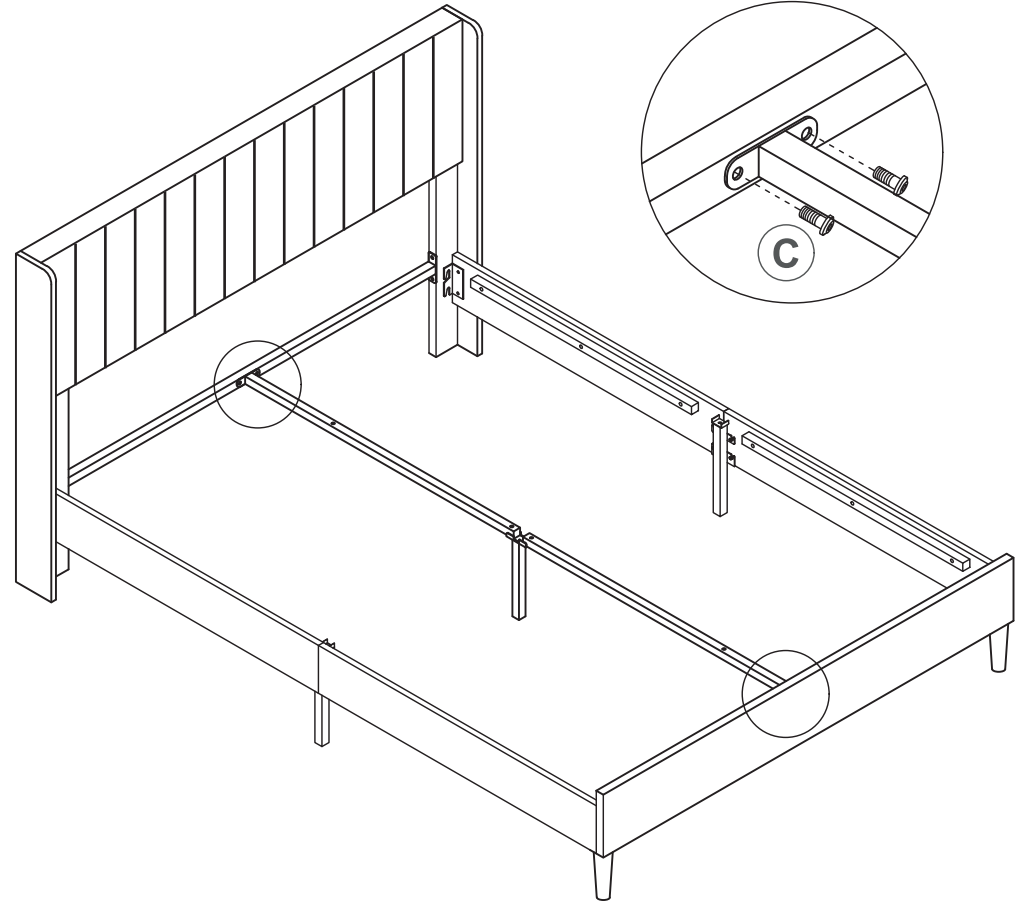

Assembly Instruction

Step:11


 **D** X4PCS
M8*35

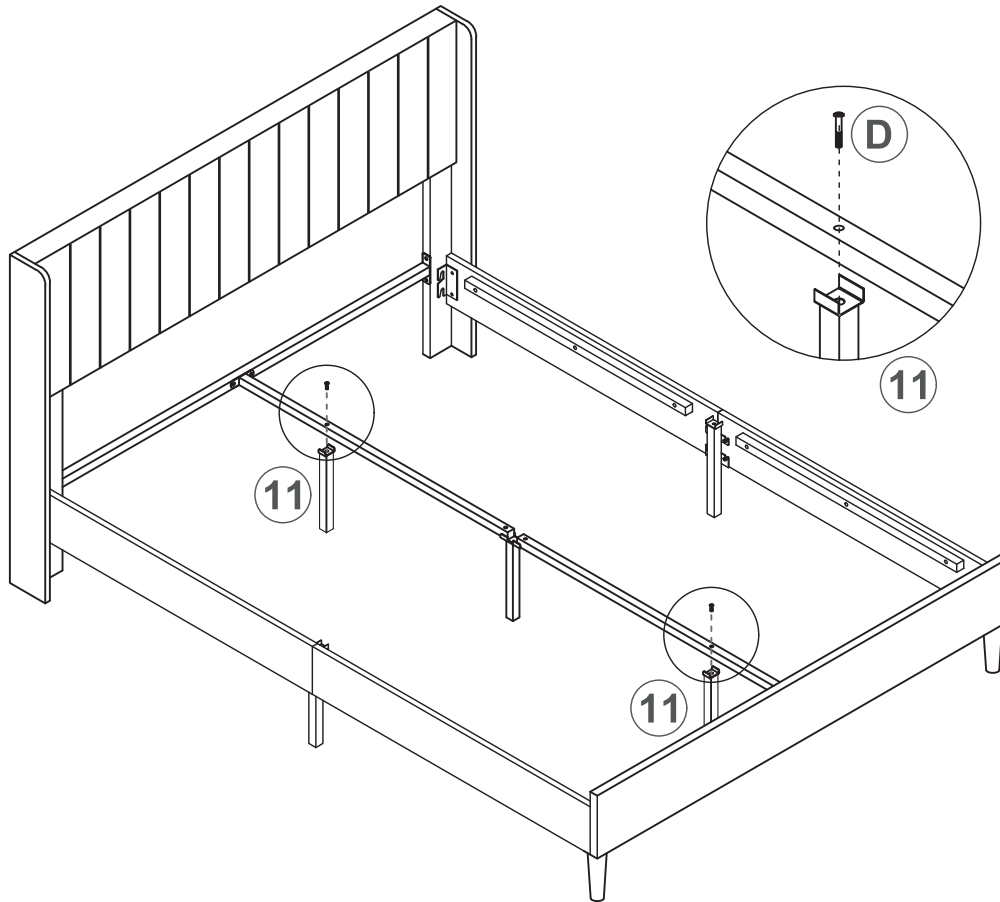

Step:12

 **C** X2PCS
M8*20

 **E** X1PC
M8*45

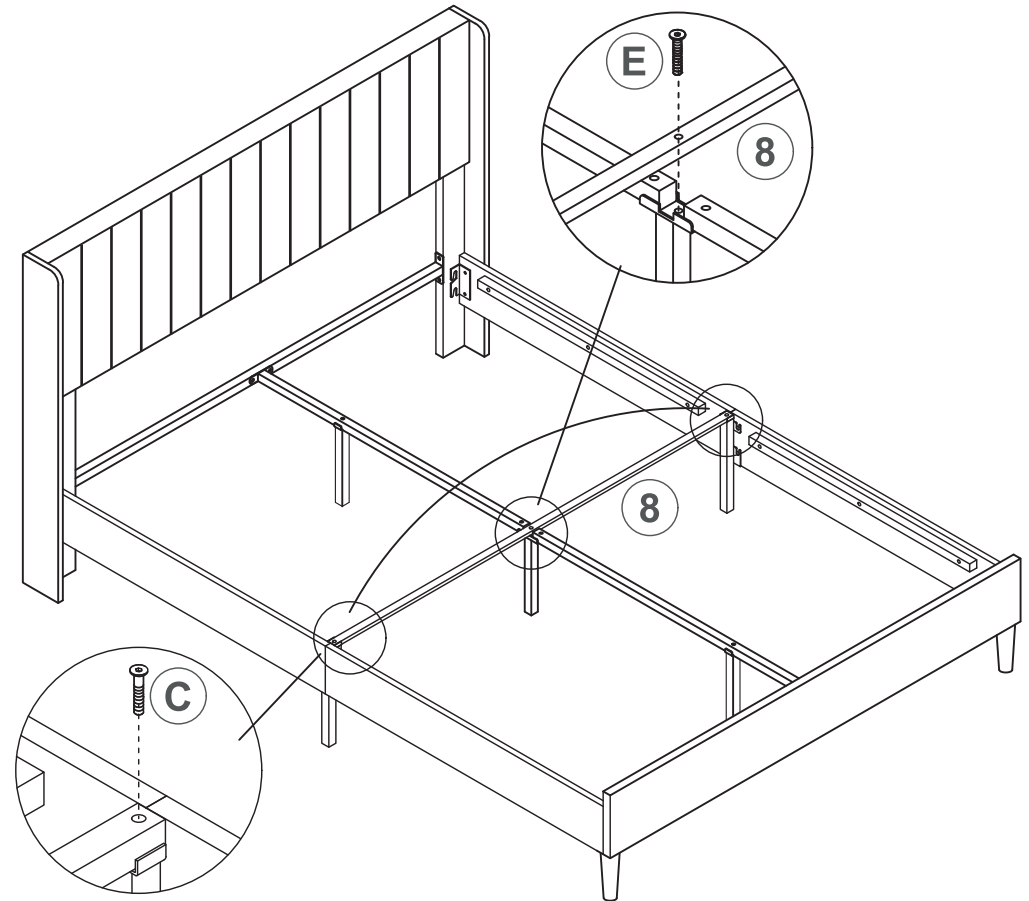

Assembly Instruction

Step:13

