

Incandescent Pendant

PD0751016

INSTALLATION SHEET


START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

Please Note:

- 120V input

1. Remove fixture from its original package.
2. Remove the mounting plate (1c) from within the canopy (2a) by loosening the mounting collar nut (2b)
3. Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package
4. Determine hanging height of fixture by selecting from chain supplied (2d). Remove any unwanted length by opening the last link with chain pliers and install the quick link (2c) to the ends of the chain, after weaving fixture wires through chain and secure quick link (2c) to the screw collar (2e) and fixture body (3a)
5. Make proper electrical connections (**black** to **hot "L"**, **white** to **neutral "N"**, **ground** to **"GND"**) with wire nuts (1b) provided in hardware package
6. Attach fixture cover (3b), followed by shade (3c) to fixture body (3a) and secure with socket nut (3d) by threading clockwise
7. Install bulb (4a) into fixture socket
8. Attach canopy (2a) to mounting plate (1c) by threading mounting collar nut (2b) onto screw collar (2e)

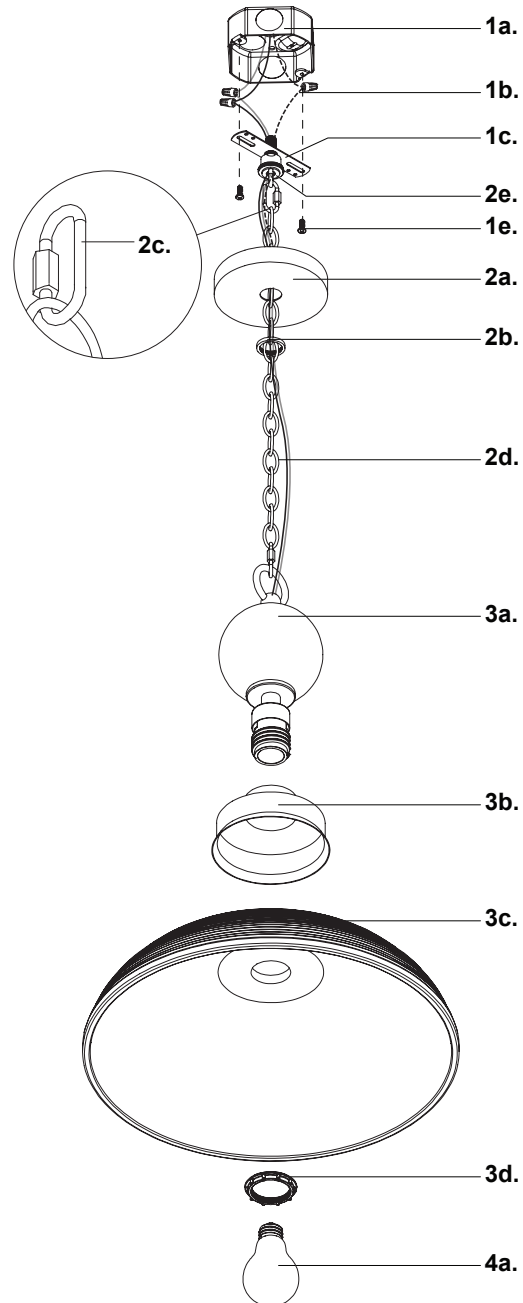

SoModern

T: 1.833.8SO.MDRN (76.6376)

W: www.somodernlighting.com

E: info@somodernlighting.com

Suspension Incandescente

PD0751016

FICHE D'INSTALLATION


COMMENCEZ ICI

- Assurez-vous que l'alimentation électrique est **COMPLÈTEMENT COUPÉE** au niveau du boîtier à fusibles.
- Faites installer votre luminaire par un électricien qualifié et agréé.
- Préparez tout le matériel nécessaire dans un espace dégagé.
- Portez des gants pendant toute la durée de l'installation.
- Lisez attentivement les instructions avant de commencer le montage.
- Conservez cette fiche d'installation pour référence ultérieure.

Remarque :

- Entrée 120 V

1. Retirez le luminaire de son emballage d'origine.
2. Retirez la plaque de montage (1c) de l'auvent (2a) en desserrant l'écrou du collier de montage (2b).
3. Fixez la plaque de montage (1c) au boîtier de jonction électrique (1a) à l'aide des vis fournies (1e) dans le kit de quincaillerie.
4. Déterminez la hauteur de suspension du luminaire en choisissant parmi les chaînes fournies (2d). Retirez toute longueur indésirable en ouvrant le dernier maillon à l'aide d'une pince à chaîne et installez le maillon rapide (2c) aux extrémités de la chaîne, après avoir enfilé les fils du luminaire dans la chaîne et fixé le maillon rapide (2c) au collier à vis (2e) et au corps du luminaire (3a).
5. Effectuez les connexions électriques appropriées (noir à la phase « L », blanc au neutre « N », terre à « GND ») à l'aide des capuchons de connexion (1b) fournis dans le kit de montage.
6. Fixez le cache du luminaire (3b), puis l'abat-jour (3c) au corps du luminaire (3a) et fixez-les à l'aide de l'écrou de douille (3d) en le vissant dans le sens des aiguilles d'une montre.
7. Installez l'ampoule (4a) dans la douille du luminaire.
8. Fixez le cache (2a) à la plaque de montage (1c) en vissant l'écrou à collier de montage (2b) sur le collier à vis (2e).

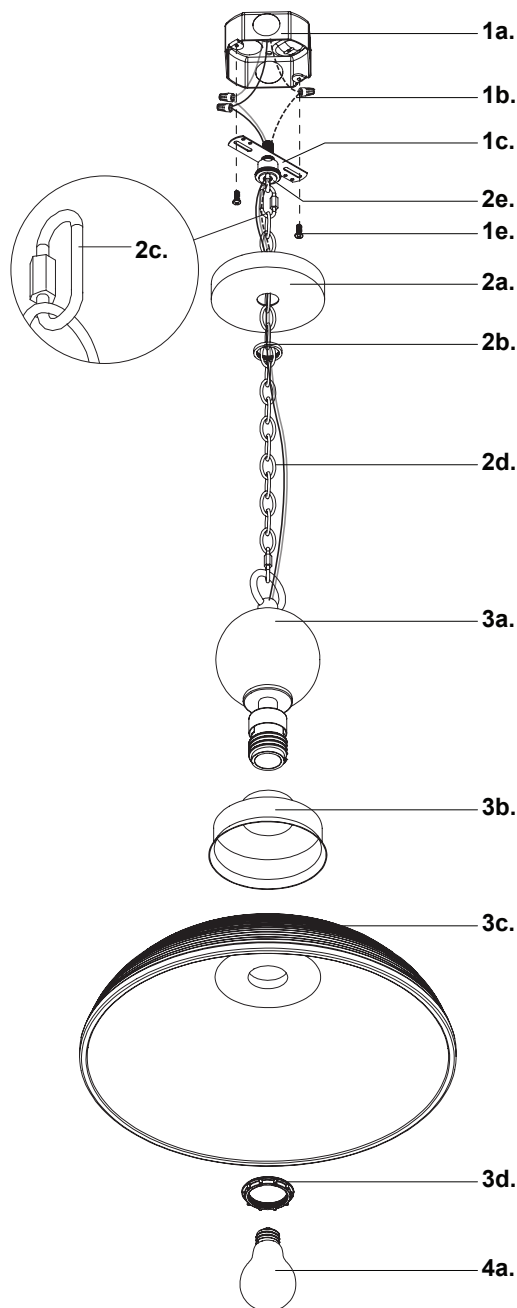

SoModern

T: 1.833.8SO.MDRN (76.6376)

W: www.somodernlighting.com

E: info@somodernlighting.com