


10'x12' HARDTOP GAZEBO

ASSEMBLY MANUAL

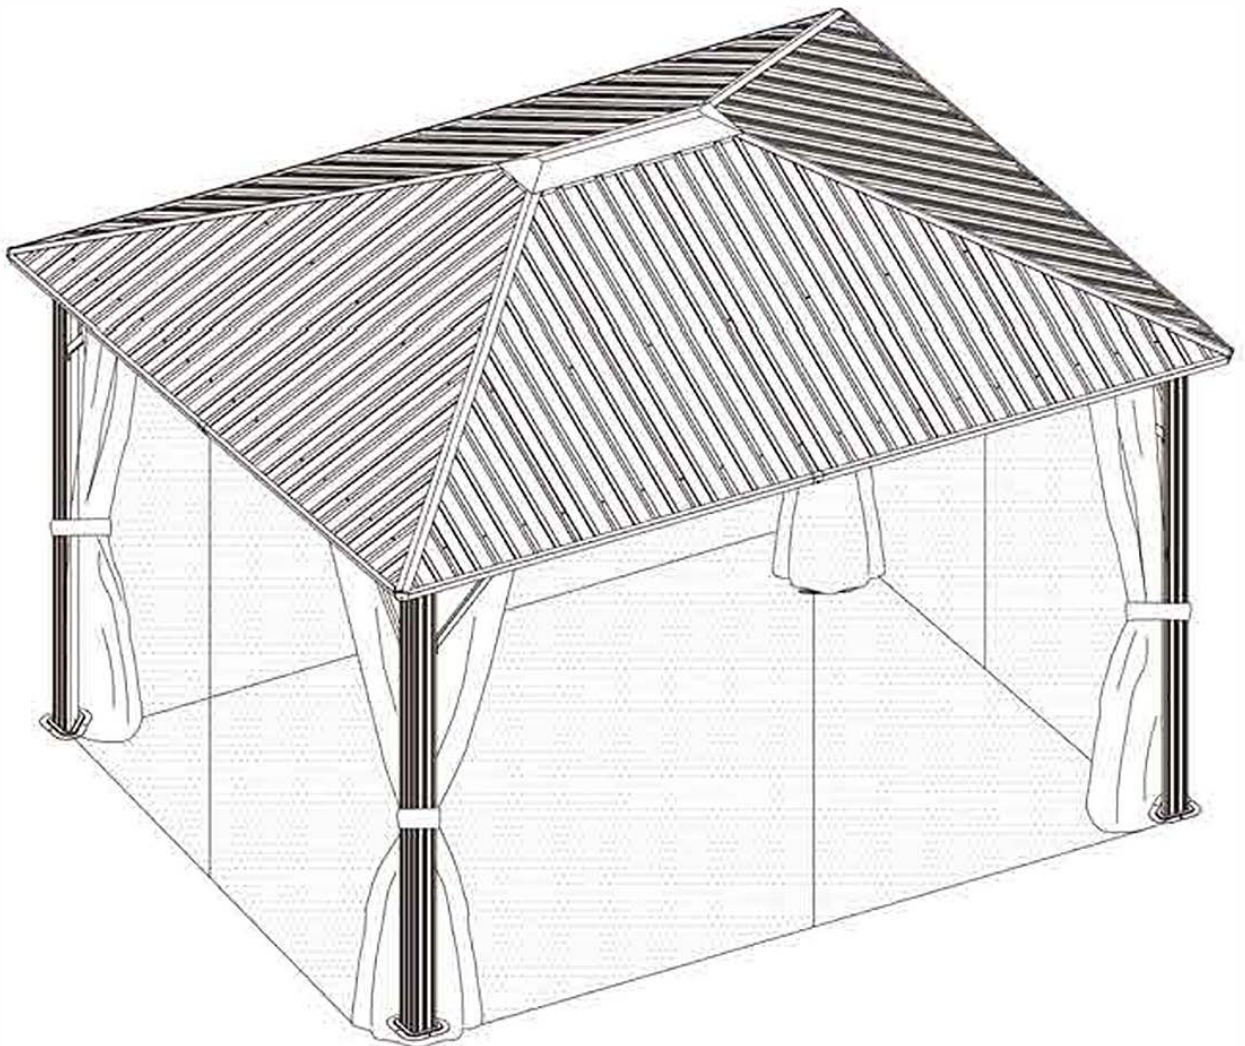



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Use the hex keys in the box.



6. Please use a Phillips screwdriver.




7. Do not fully tighten screws prior to complete assembly.



8. For ease of construction, you may need to use a drill.

Rosana 10x12' ANCHOR BLUEPRINT

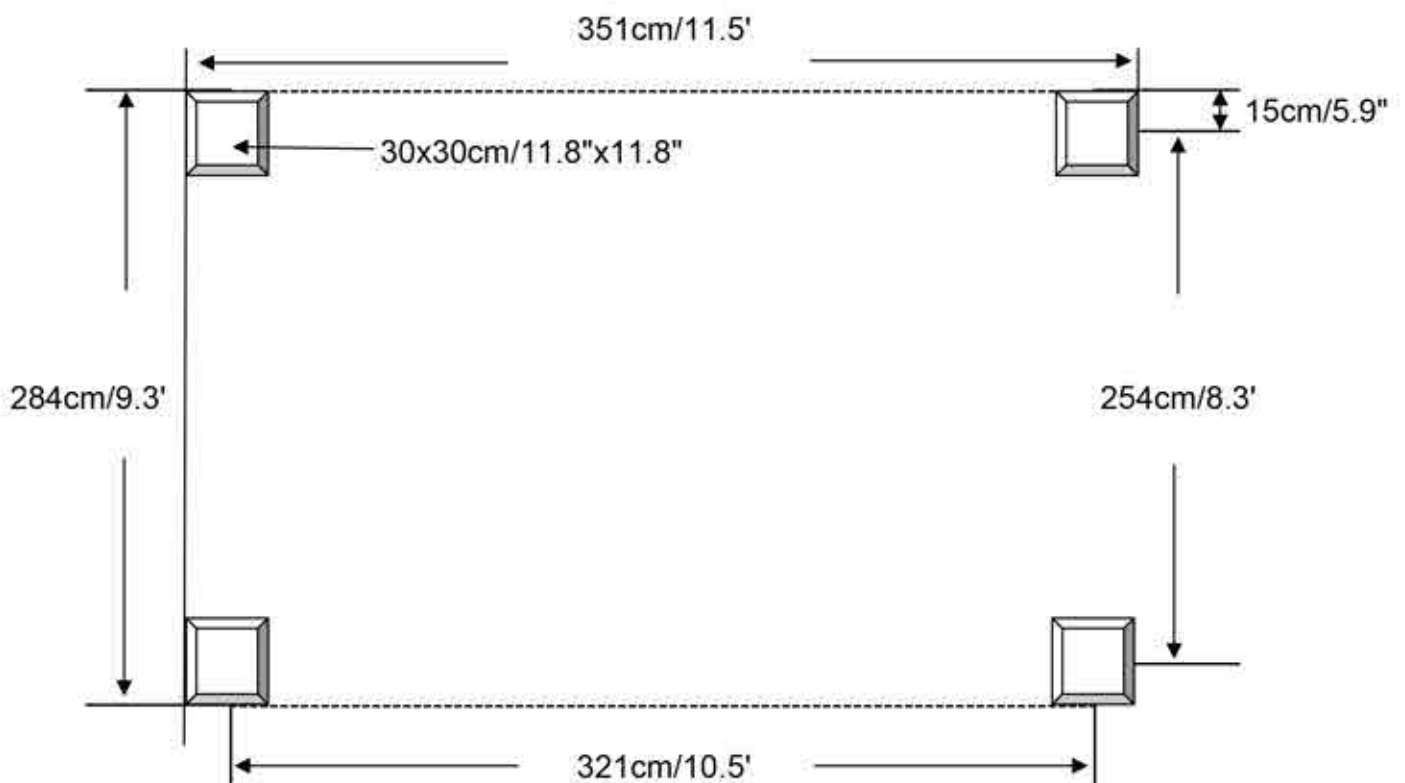



(A) X4



(C) X2



(C1) X2



(C2) X2



(C3) X2



(D) X4



(D1) X4



(E) X2



(E1) X2



(F) X2



(F1) X2



(G) X2



(G1) X2




(H) X2



(H1) X2



(J) X4

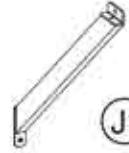

(J1) X4



(B) X4



(K) X104



(L) X4



(M) X4



(N) X1



(N1) X1







(P) X4




(P1) X4

ITEM	DESCRIPTION	QTY
A	Pole	4
C	Beam	2
C1	Beam	2
C2	Beam	2
C3	Beam	2
D	Corner Roof Bar	4
D1	Roof Bar	4
E	Finishing Bar	2
E1	Finishing Bar	2
F	Finishing Bar	2
F1	Finishing Bar	2
G	Solidifying Bar	2
G1	Solidifying Bar	2
H	Solidifying Bar	2
H1	Solidifying Bar	2
J	Corner Solidifying Bar	4
J1	Corner Solidifying Bar	4
B	Base	4
K	Hook	104
L	Joint Cover	4
M	Corner Cover	4
N	Outside Roof Connector	1
N1	Inside Roof Connector	1
P	Finishing End	4
P1	Finishing End	4

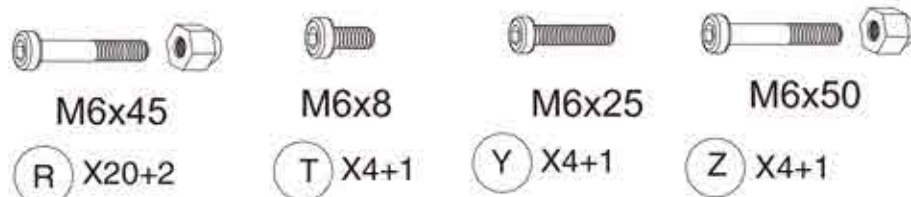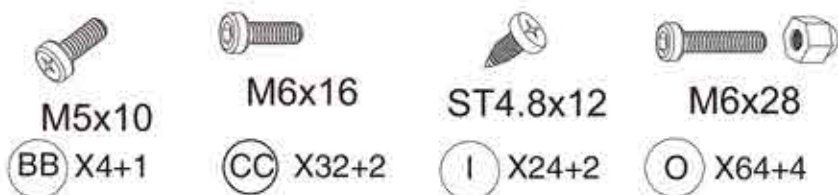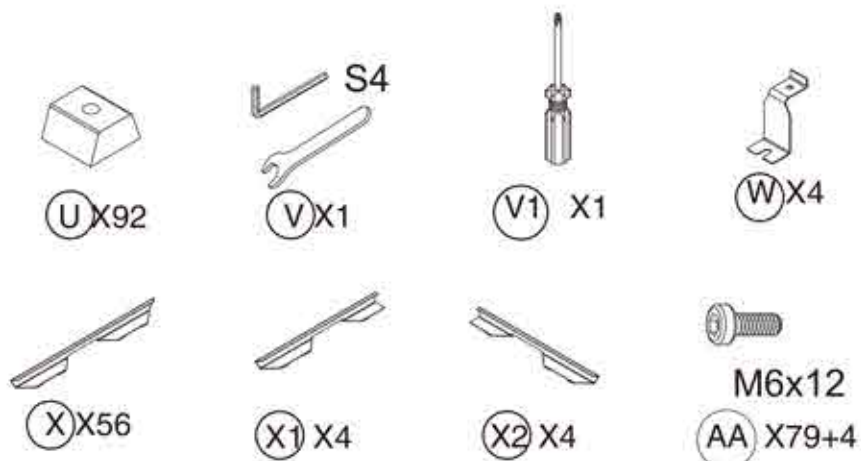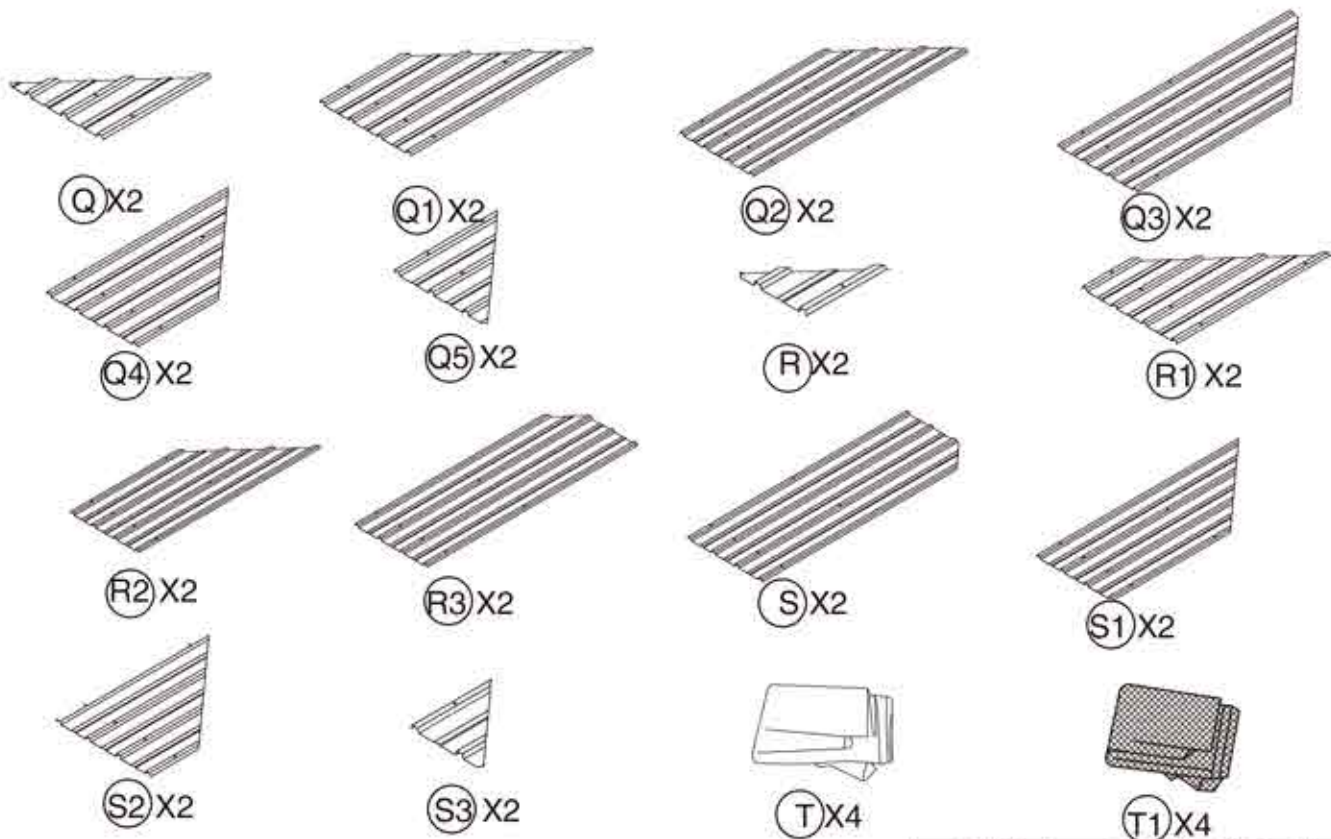


ITEM	DESCRIPTION	QTY
Q	Panels	2
Q1	Panels	2
Q2	Panels	2
Q3	Panels	2
Q4	Panels	2
Q5	Panels	2
R	Panels	2
R1	Panels	2
R2	Panels	2
R3	Panels	2
S	Panels	2
S1	Panels	2
S2	Panels	2
S3	Panels	2
T	Solide Sidewall	4
T1	Mosquito Sidewall	4
U	Spacer	92
V	Allon Key/Wrench	1/1
V1	Screws Driver	1
W	Joint Cover	4
X	Metal Bracket	56
X1	Metal Bracket	4
X2	Metal Bracket	4
AA	Screws	79+4
BB	Screws	4+1
CC	Screws	32+2
I	Screws	24+2
O	Screws	64+4
R	Screws	20+2
T	Screws	4+1
Y	Screws	4+1
Z	Screws	4+1

Parts Required:

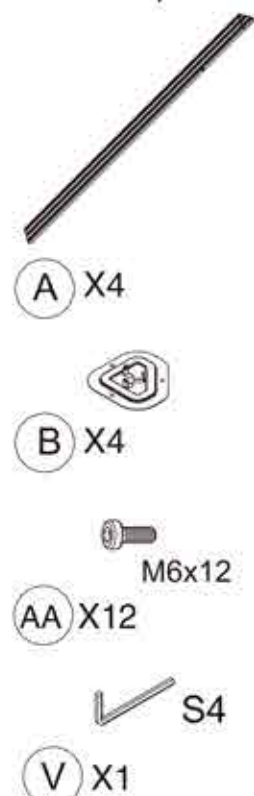


Step 1:



Set up poles (Part A) with stand palettes (Part B) using screws AA as shown in diagram.

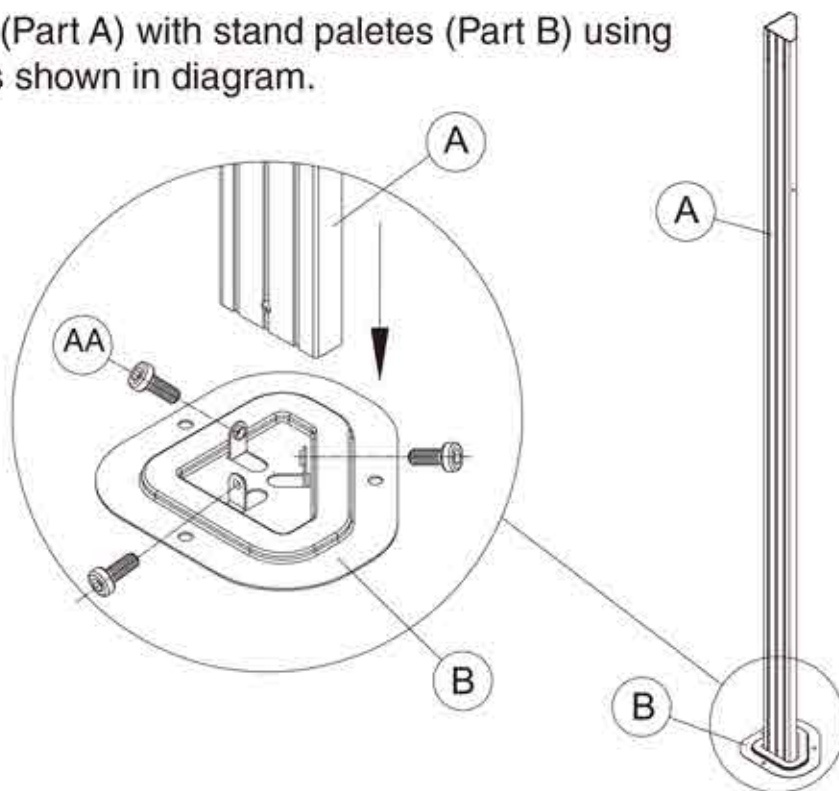

Parts Required:

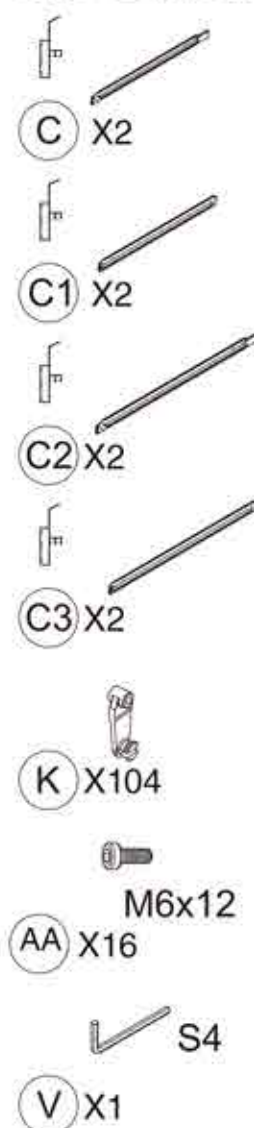

Step 2:

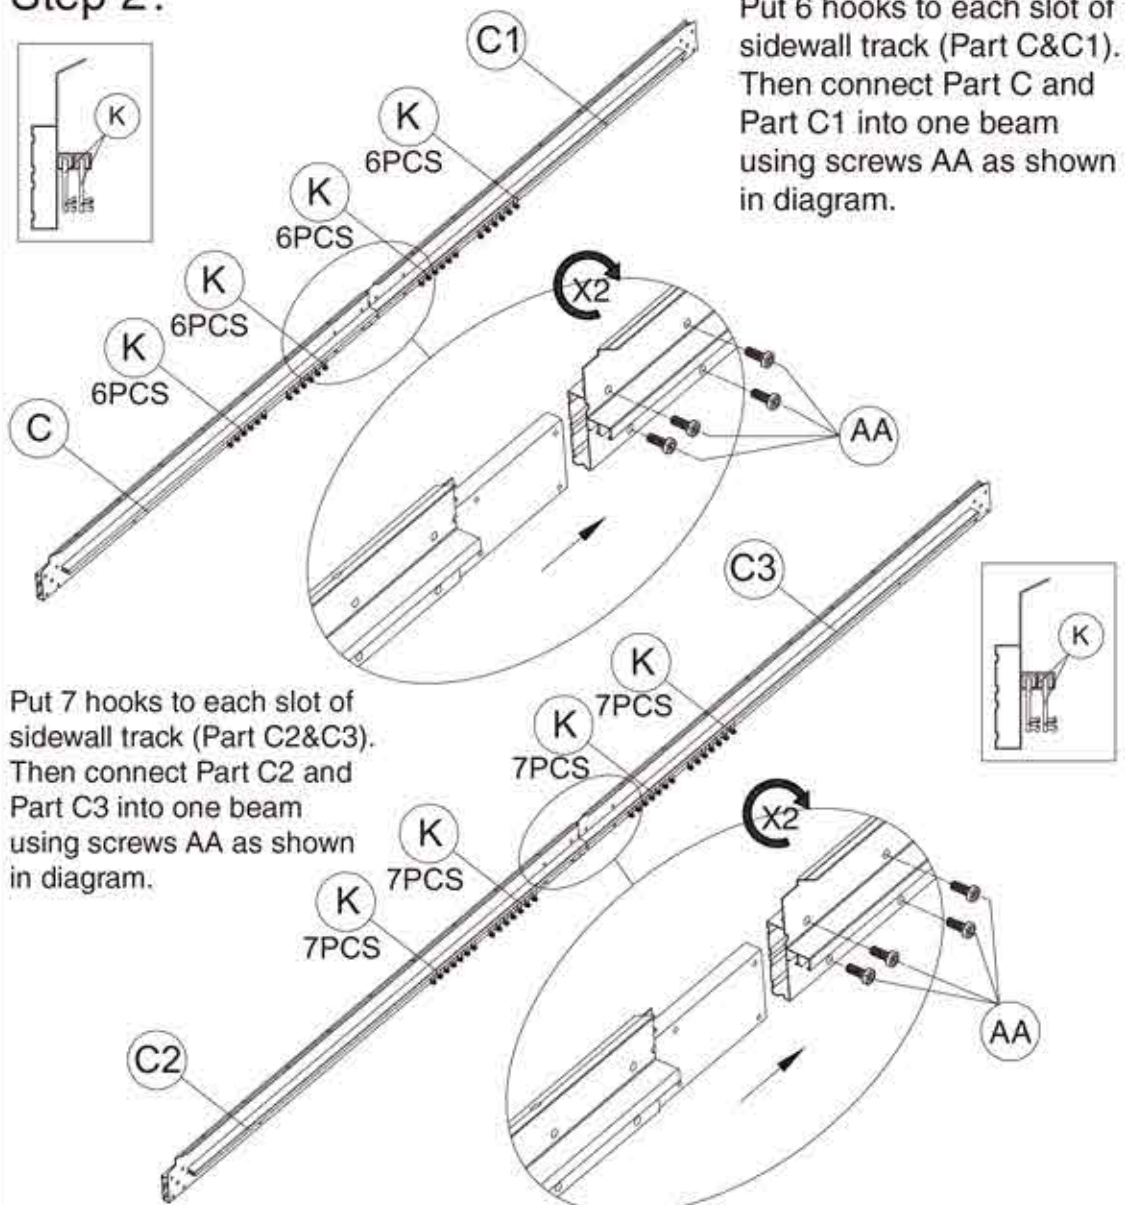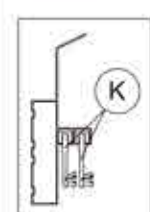

Parts Required:



M6x16


CC X32



S4

V X1

Step 3:

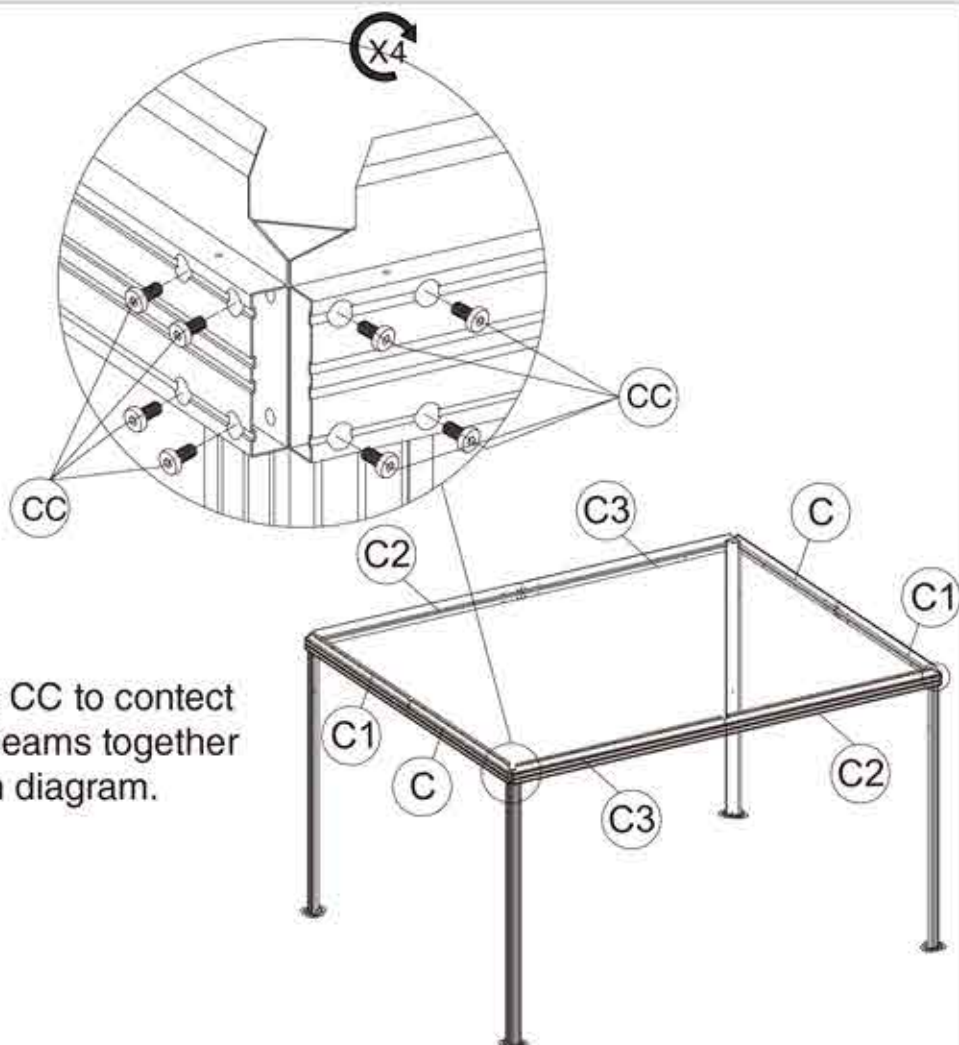

Use screws CC to connect poles and beams together as shown in diagram.

Parts Required:



L X4



M X4



W X4



M5x10

BB X4



ST4.8x12


I X24



V1 X1


Step 4:

Finish connecting beams using corner covers (Part M) and screws I as shown in diagram.

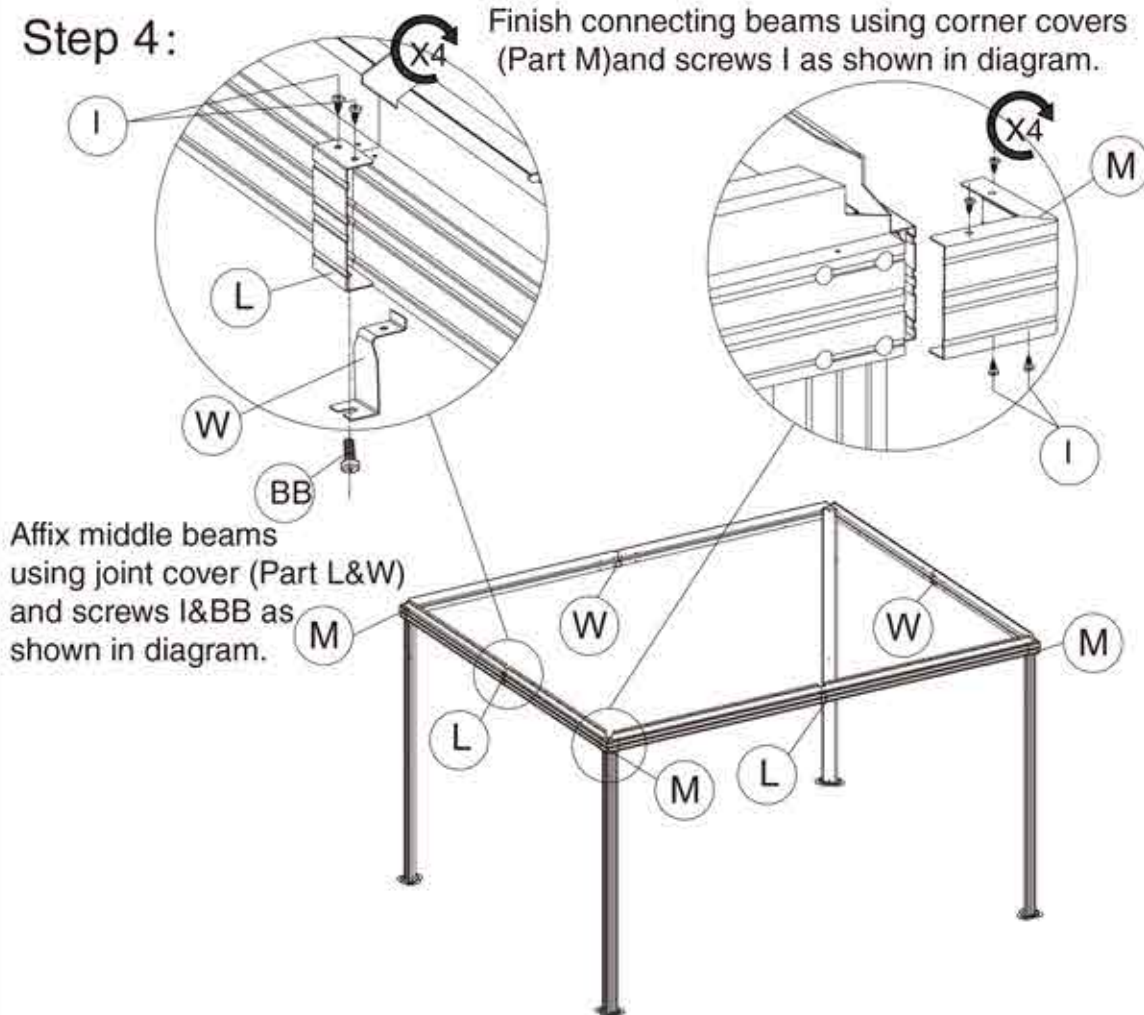


Affix middle beams using joint cover (Part L&W) and screws I&BB as shown in diagram.

Parts Required:

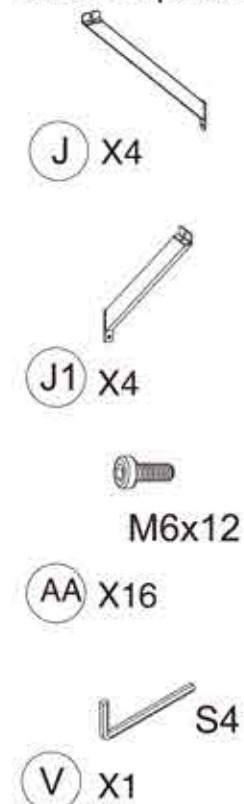

Step 5:

Affix the frame with corner Solidifying Bars (Part J and J1) by using Screws AA as shown in diagram.

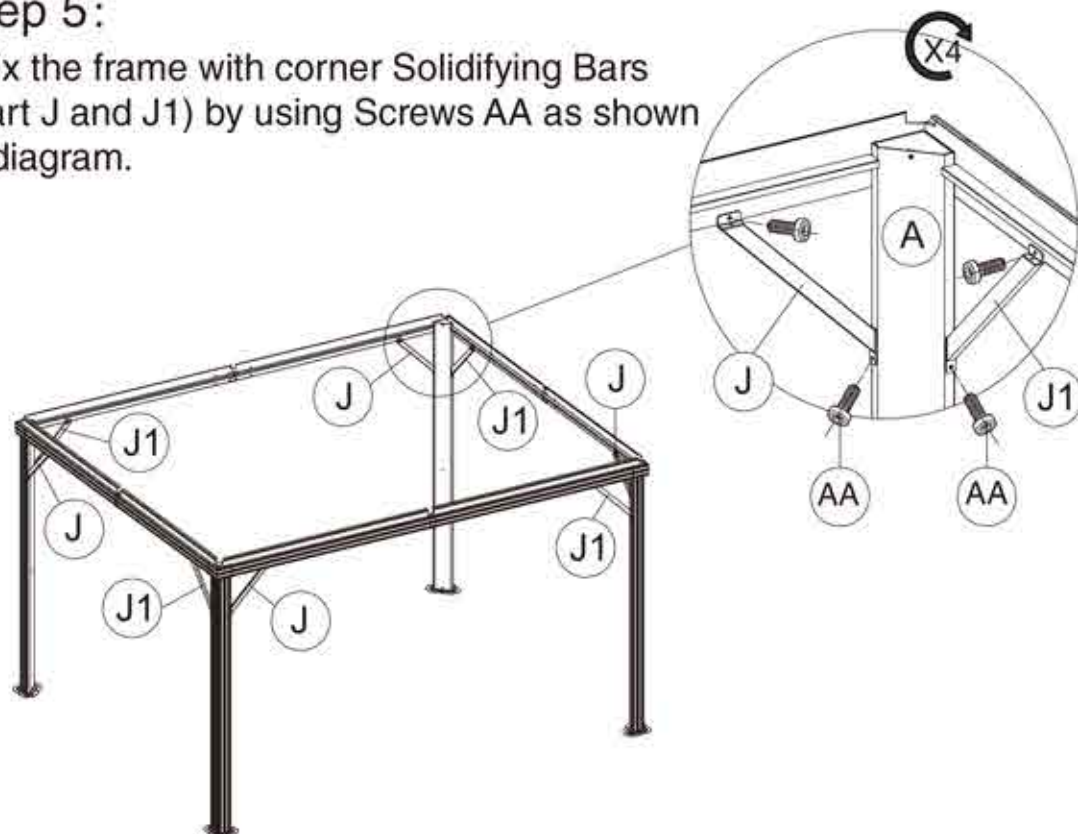


Parts Required:




Step 6:

Set up roof frame.

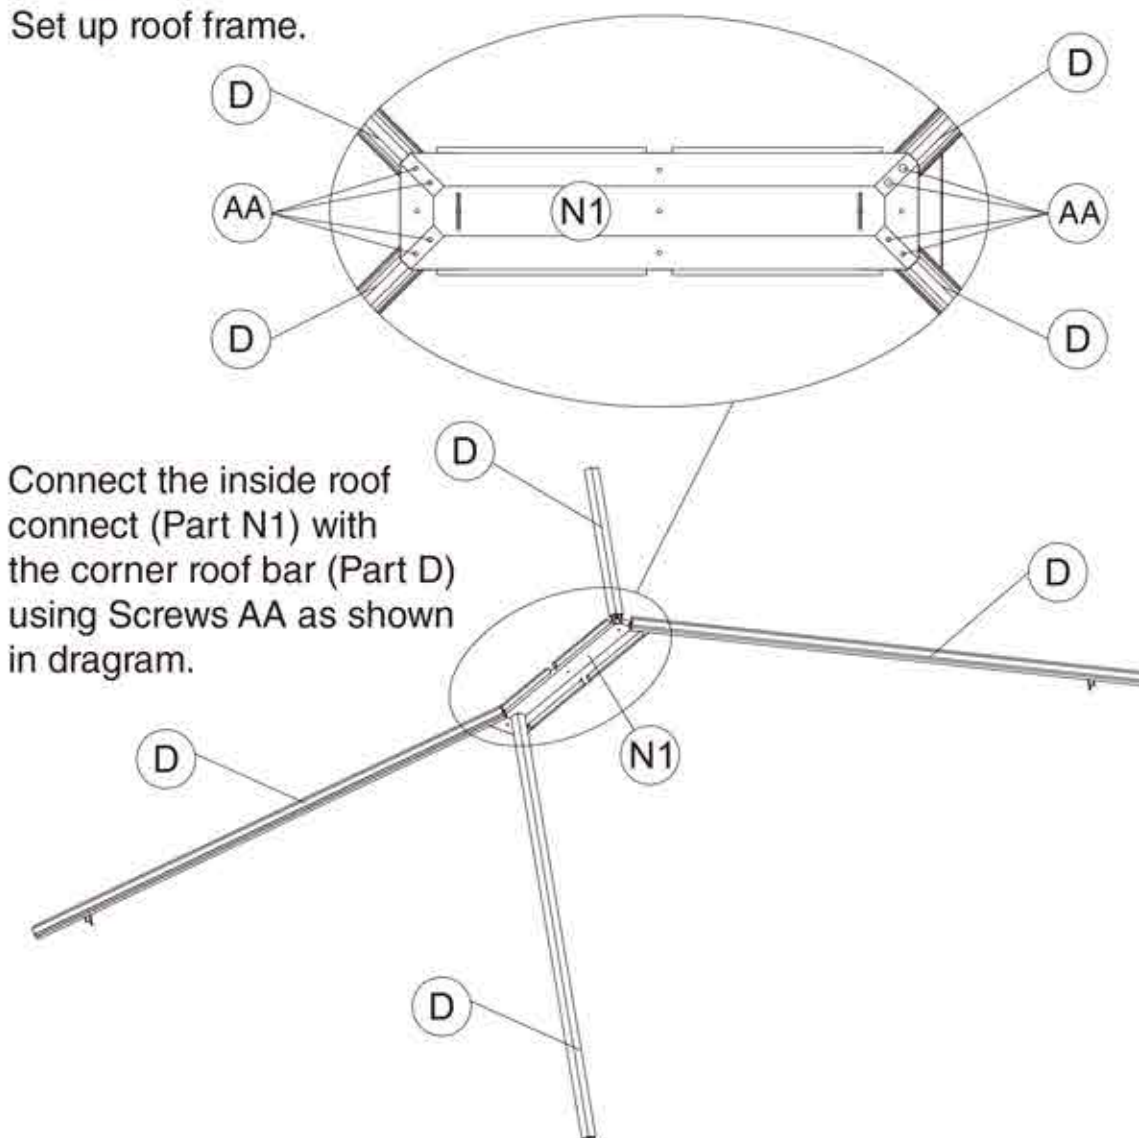

Parts Required:

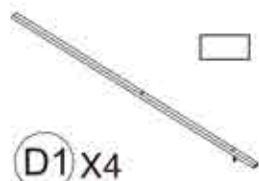

D1 X4



M6x12

AA X12




S4

V X1

Step 7:

Attach roof bar (Part D1) to inside roof connector using screws AA as shown in diagram.

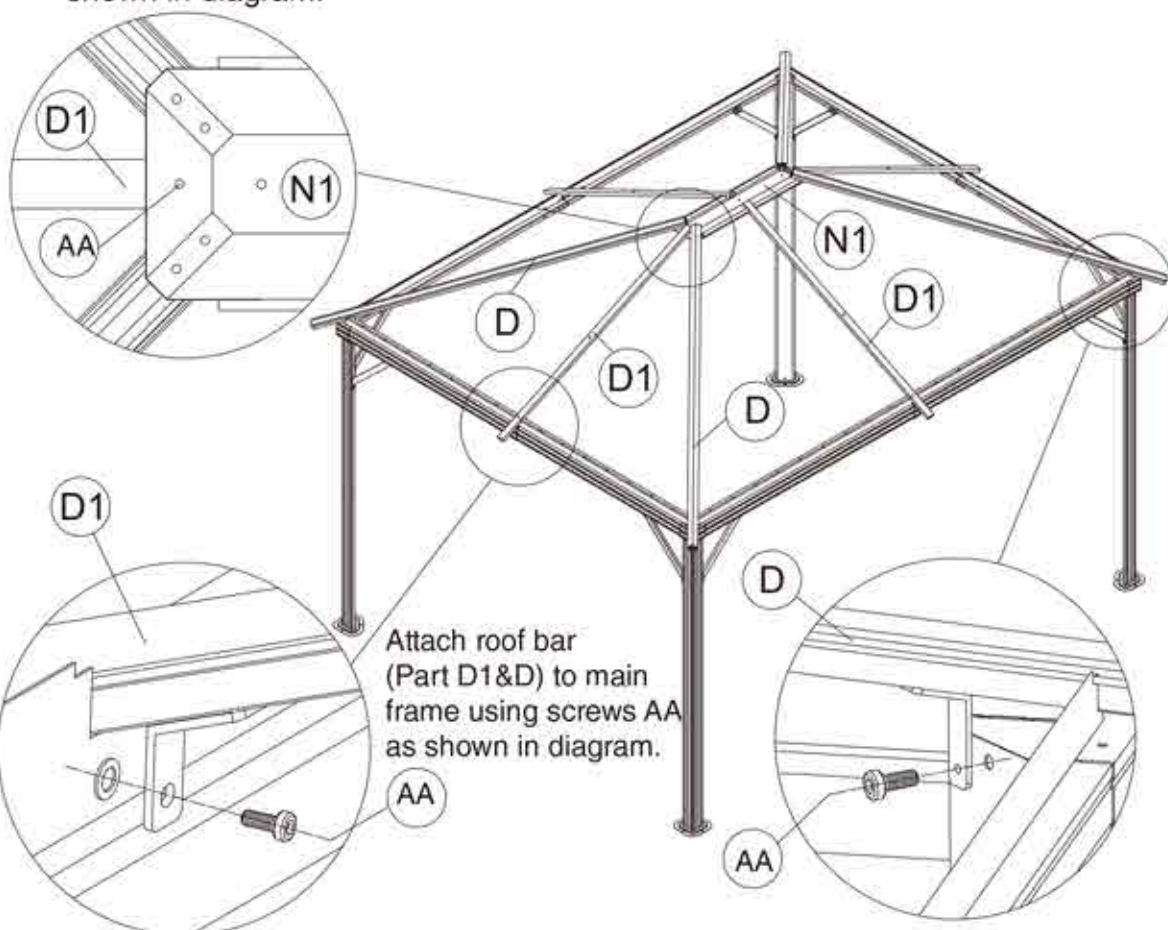

Parts Required:



N X1



M6x12

AA X3




S4

V X1

Step 8:

Connect outside roof connector (Part N) to inside roof connector (Part N1) using screw AA as shown in diagram.

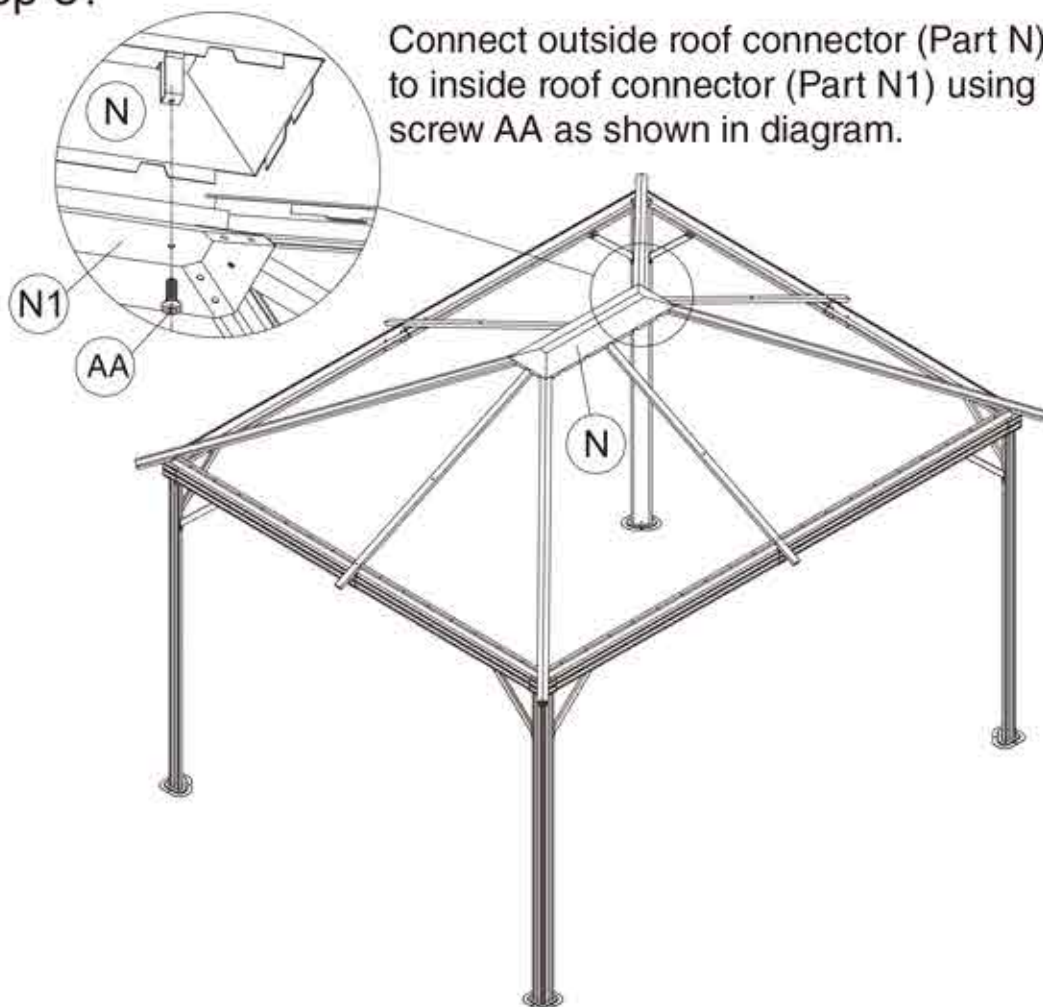

Parts Required:



(G) X2



(G1) X2



(H) X2



(H1) X2



M6x12

(AA) X4



M6x8

(T) X4




S4

(V) X1

Step 9:

Affix solidifying bars (Part G & G1) to roof bar (Part D1) and corner roof bar (Part D) using screw (AA&T) as shown in diagram.

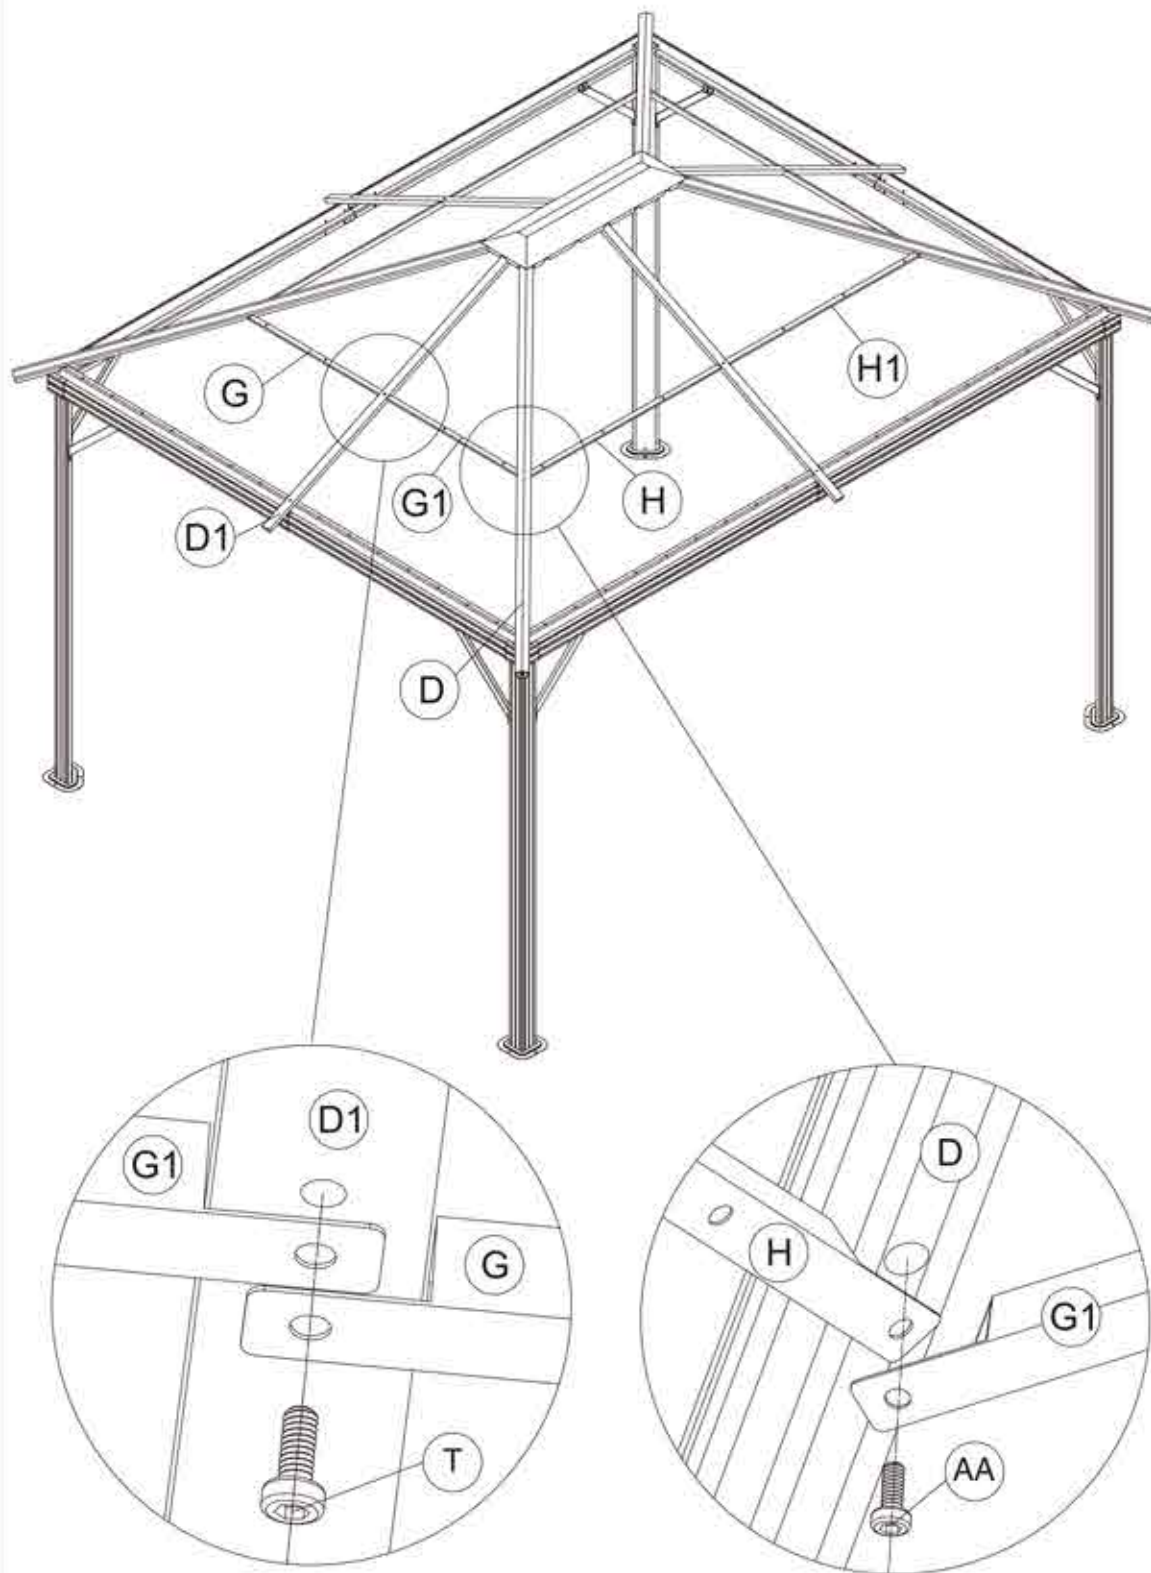

Parts Required:



Q X2



Q1 X2



Q2 X2



Q3 X2



Q4 X2



Q5 X2



X X28





X1 X2



X2 X2

Step 10:

Cover metal bracket (Part X,X1&X2) to roof panels as shown in diagram.

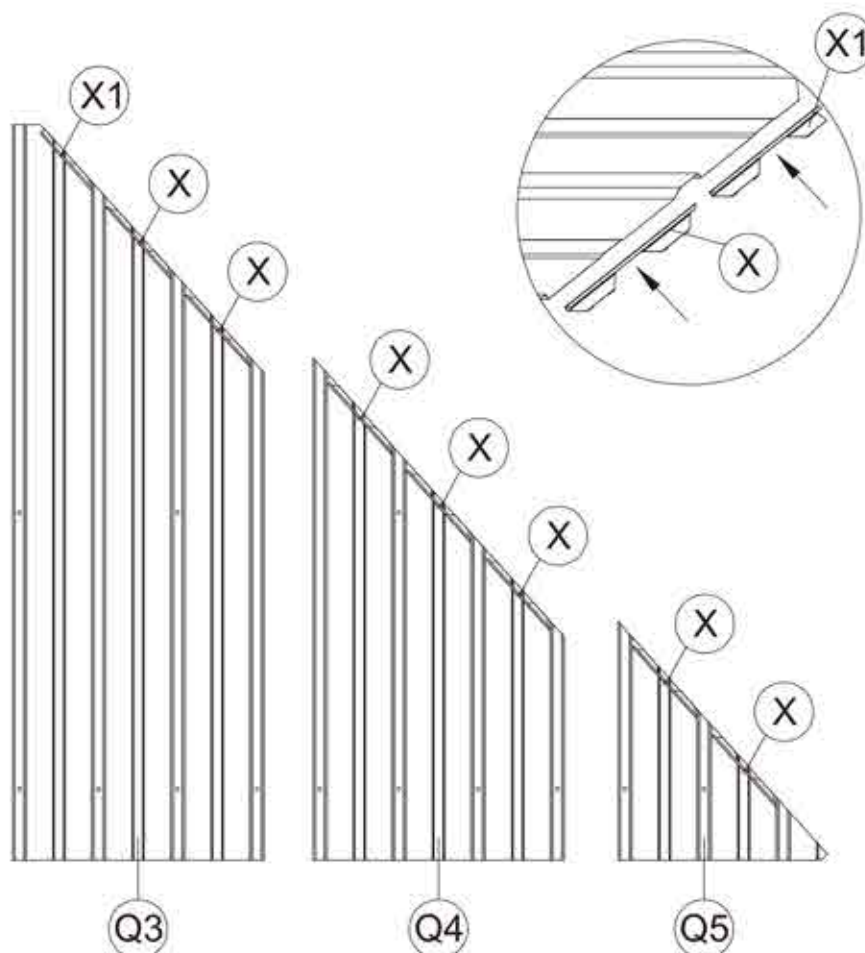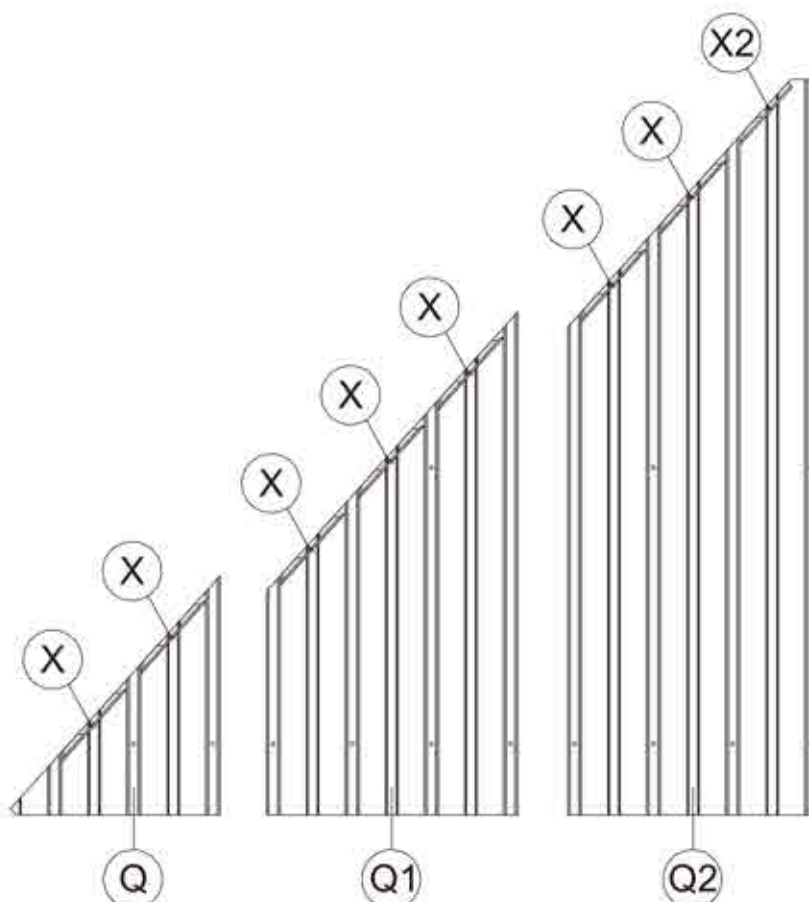

Step 11 :

Parts Required:



(R) X2



(R1) X2



(R2) X2



(R3) X2



(S) X2



(S1) X2





(S2) X2



(S3) X2



(X) X28

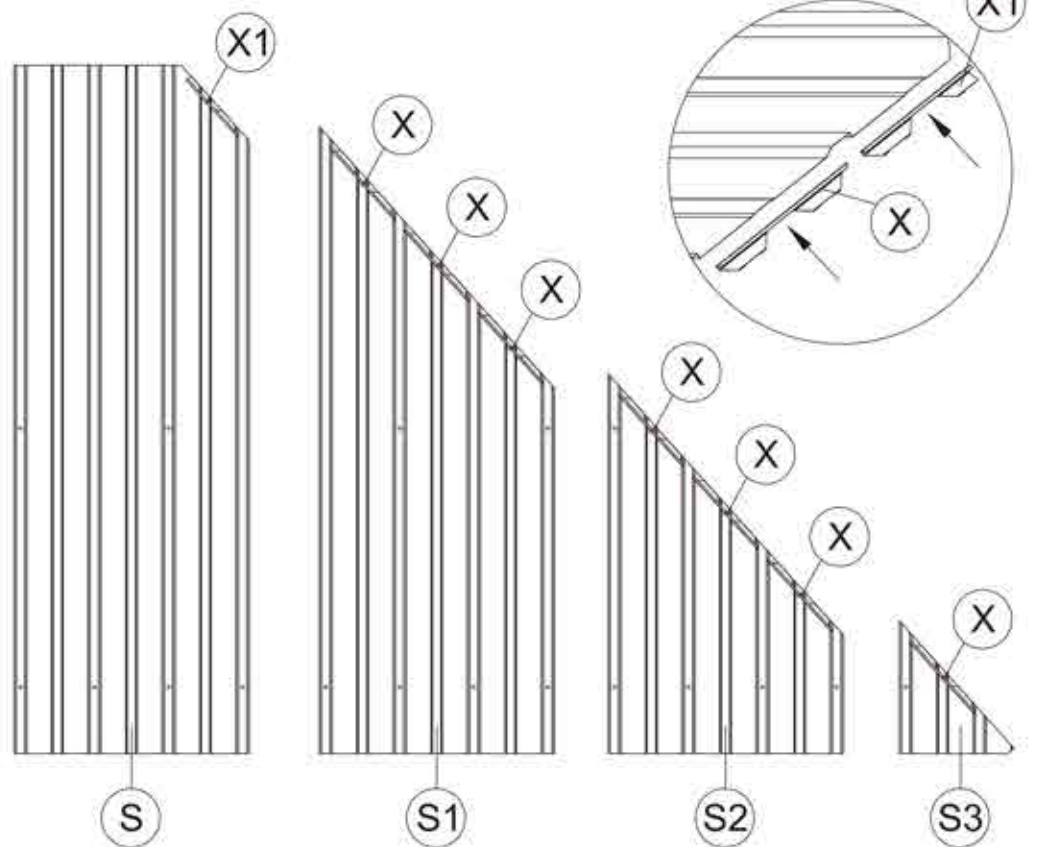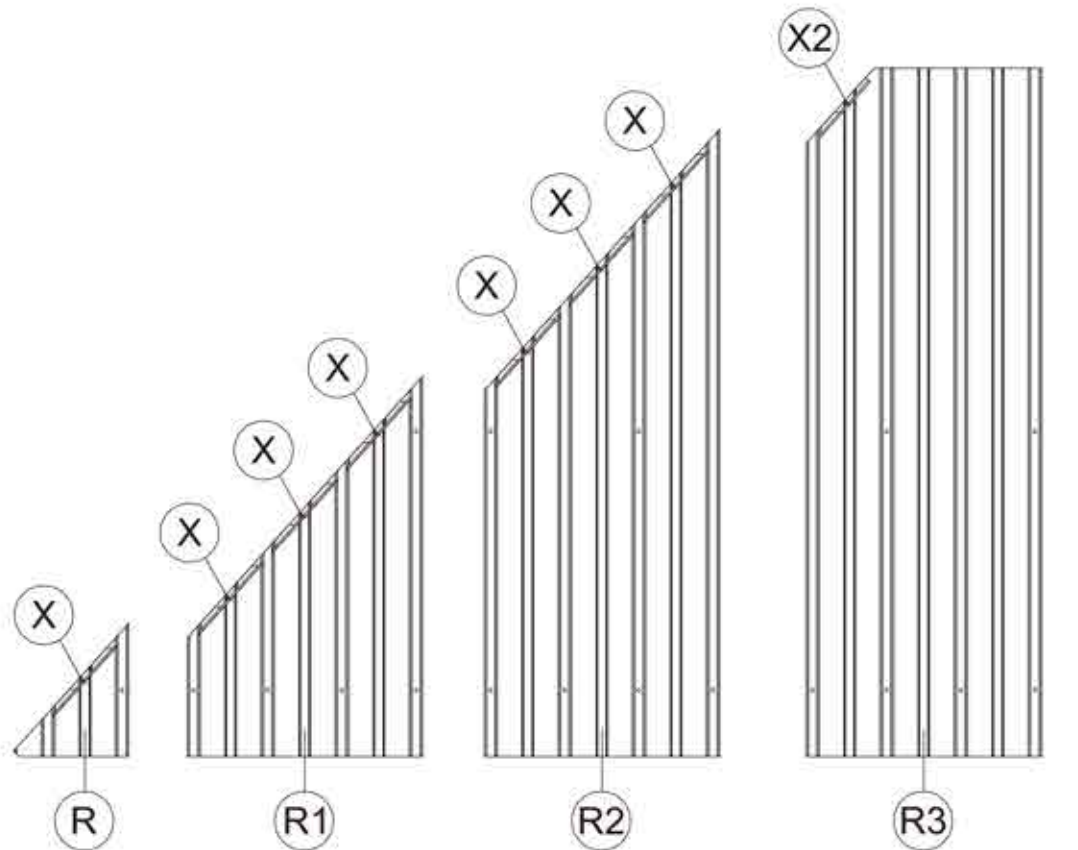


(X1) X2



(X2) X2

Step 12:

Overall roof assembly.

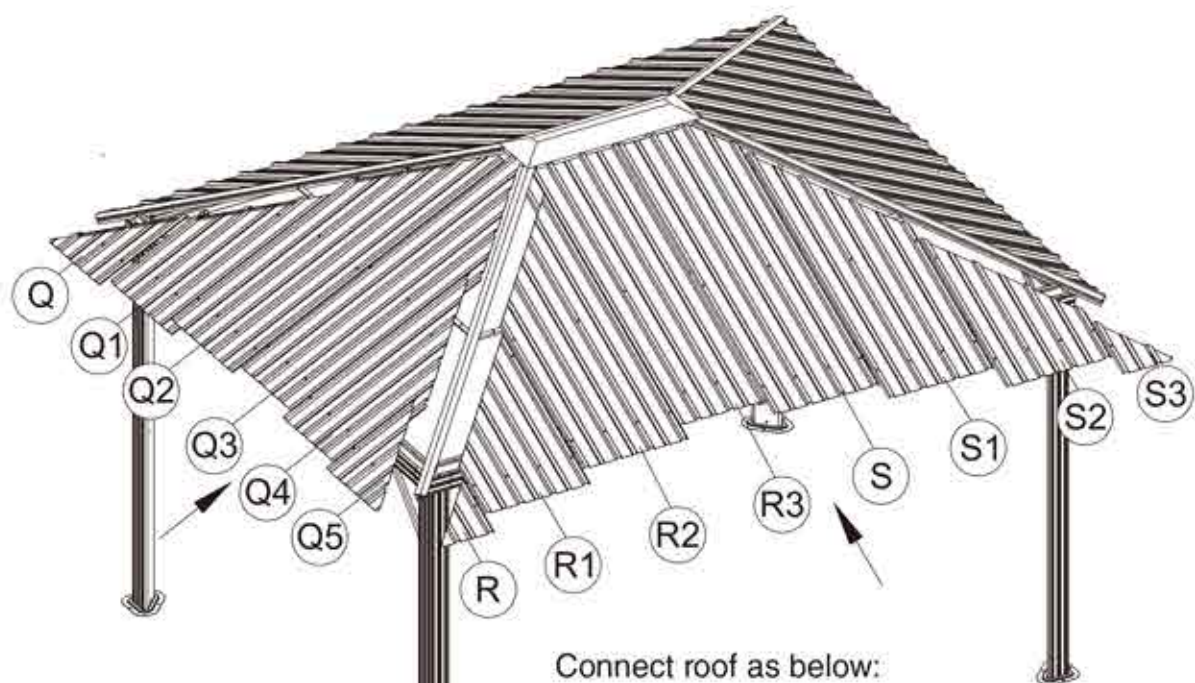

Connect roof as below:

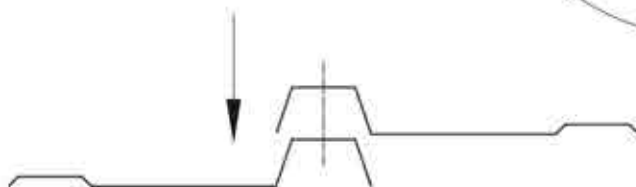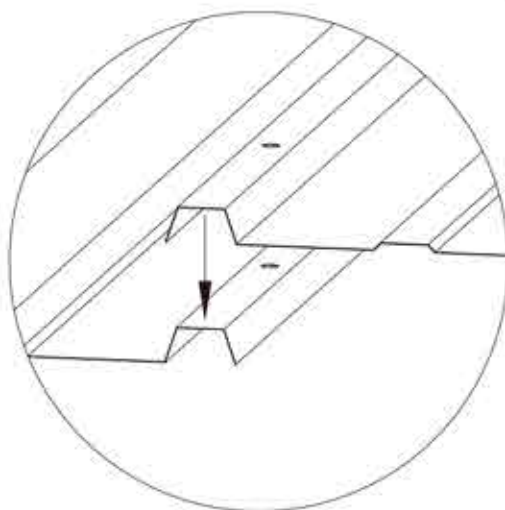

Parts Required:



U 100x



M6x28

O 64x



M6x45

R 28x



M6x25

Y 4x



M6x50

Z 4x




S4

V 1x

Step 13: Affix roof panels using screws and spacer (Part U) as shown in diagram.




Parts Required:

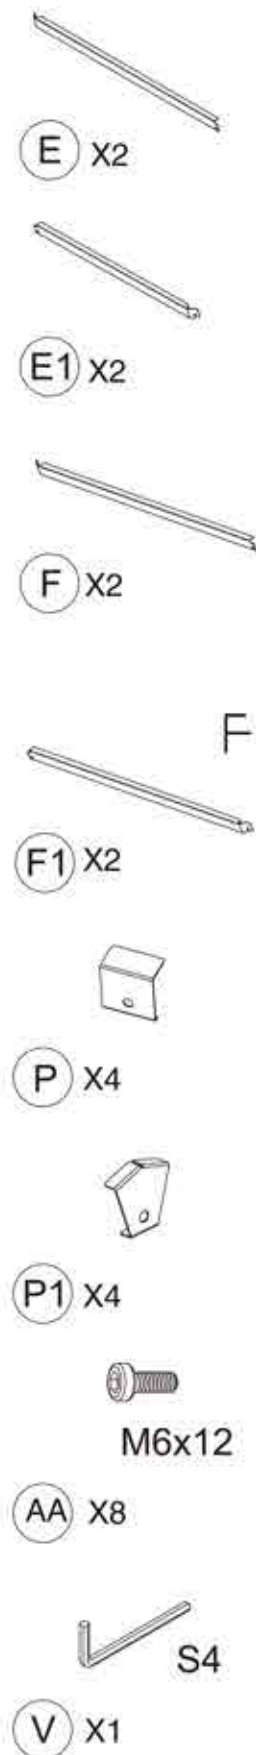

Step 14:


Attach finishing bars (Part E & E1) by (Part P & P1) using screws AA to roof bar and corner roof bar as shown in diagram.

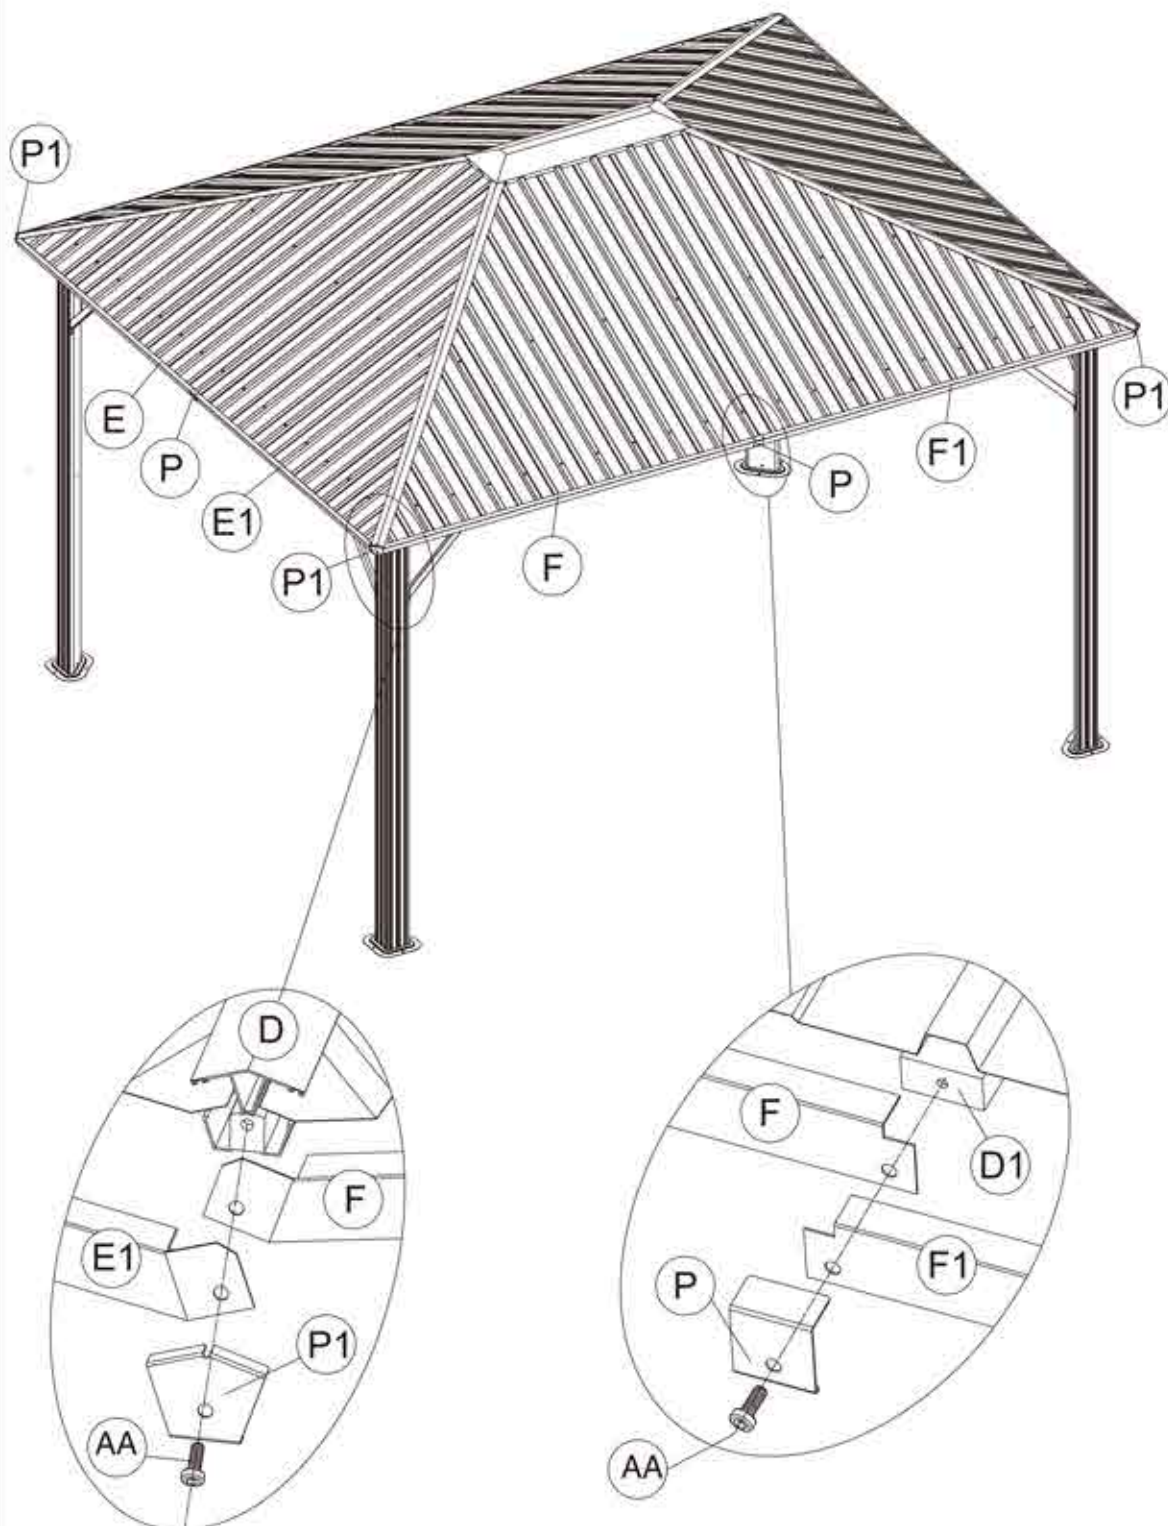

Parts Required:



(K) 48x






(T) 4x






(T1) 4x

Step 15: Hang up solid sidewall as shown in diagram.

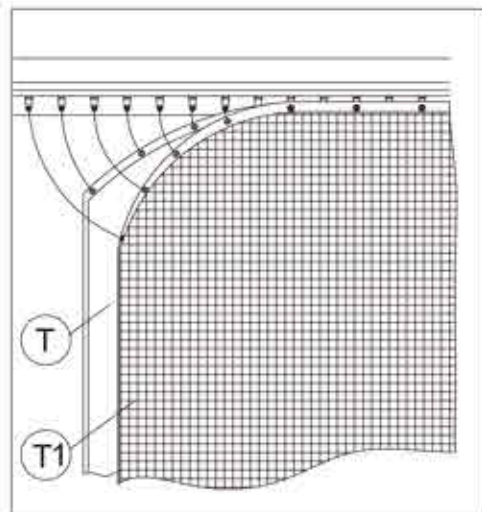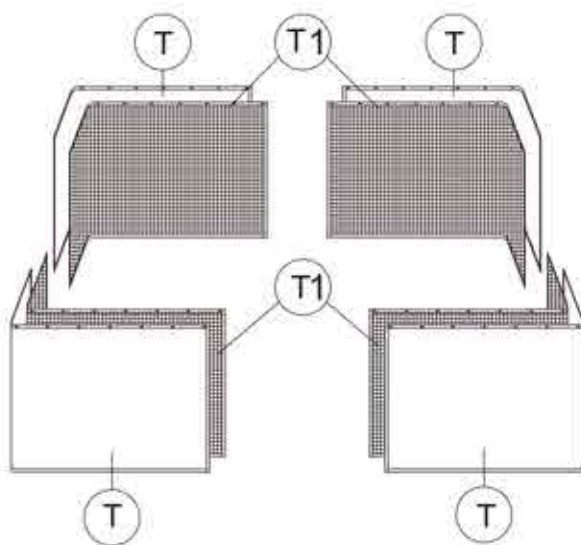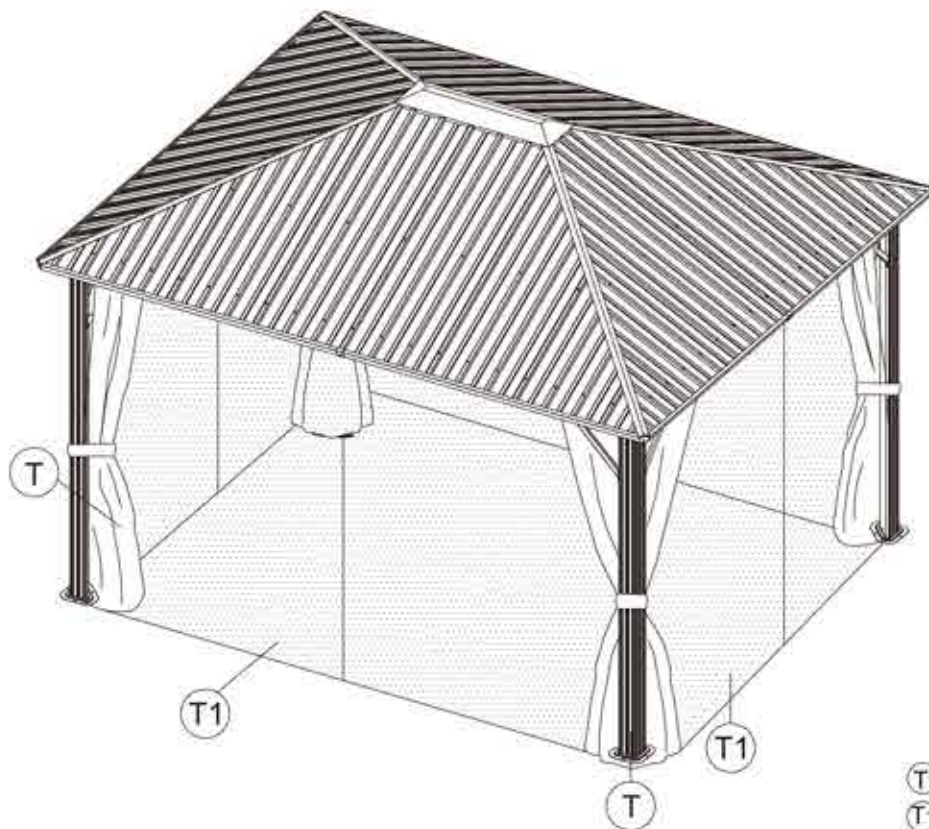


Attention: Change hook: take out Part W and Part K into the slot.

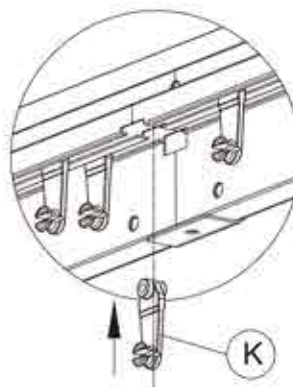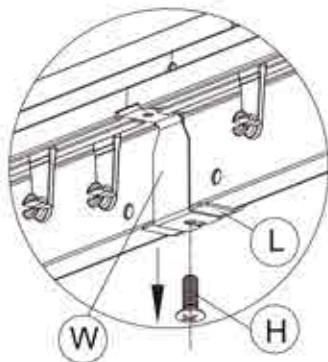



In the end check all screws are fixed tightly before using.

Parts Required:




X4


Step 16: There are three ways to secure your netting and curtains to the legs using the include 4 ties.

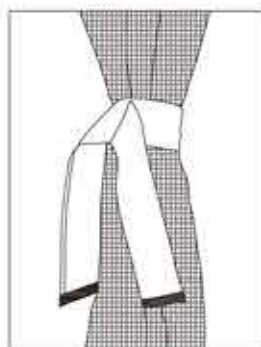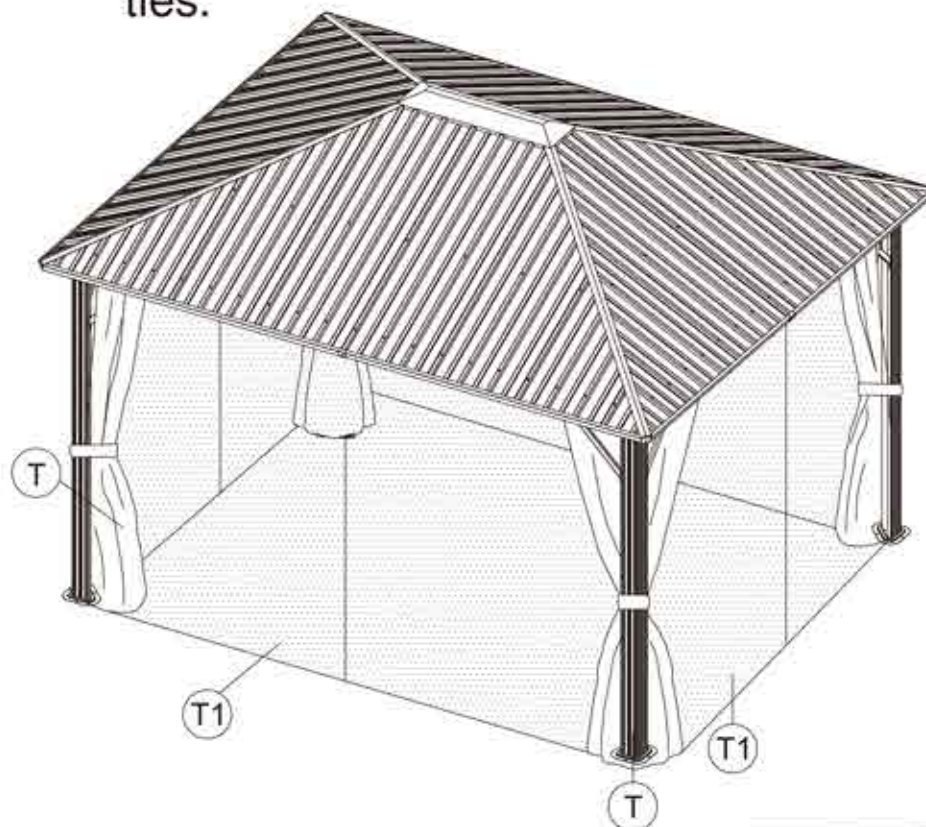

1.) Securing just the netting.

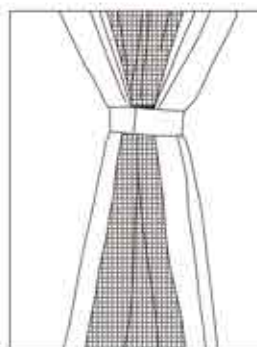

2.) Securing netting and curtains.

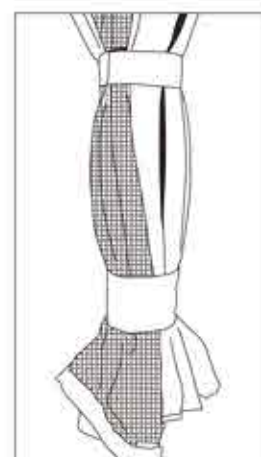

3.) Use all ties for winding conditions.