










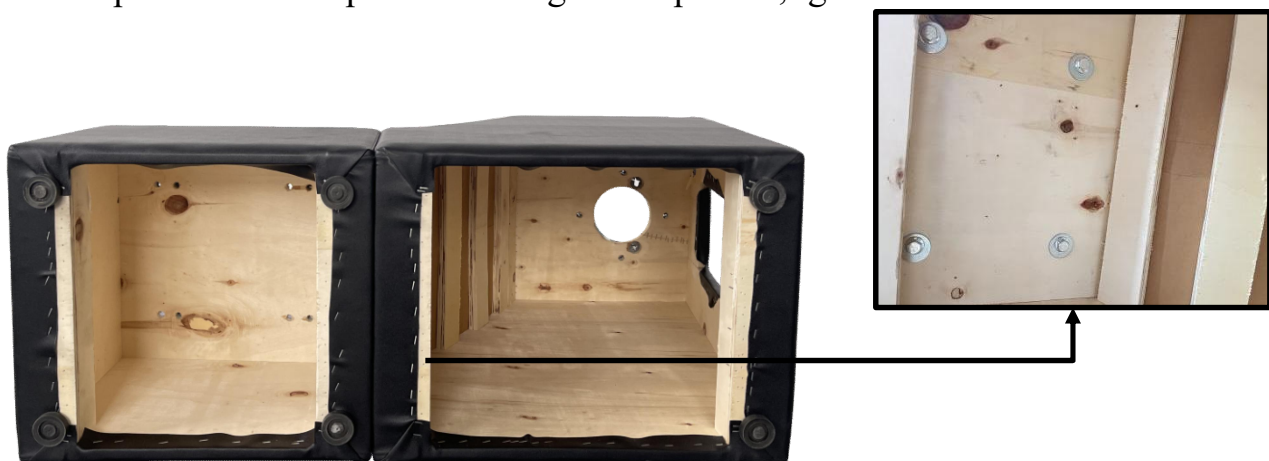
# Shampoo Chair Instruction



**Step 1:** Check all parts you received

Part List				
				
A . (1pc)	B . (1pc)	C . (2pcs)	D . (1pc)	
				
E . (1pc)	F . (1pc)	G . (1pc)	H .(1pc)	
				
I . (1pc)	J . (1pc)	K . (1pc)	M . (1pc)	
				
N . (1pc)	O . (1pc)	P . (1pc)	Q . (1pc)	R . (1pc)
				
S.(1pc)	T.(4pcs)			

**Step 2:** Unscrew the 4bolts previously assembled on the part “D” ,use those bolts to connect part “D” and part “F” together as picture,tighten.



**Step 3:** Unscrew the 8 screws previously assembled on the armrest “C” (2pcs),assemble 4pcs corner “T” to armrest,tighten.



**Step 4:** Unscrew the 14 screws previously assembled on the cushion “B” , assemble armrest “C” to the cushion by 8 screws,tighten.




**Step 5:** Assemble backrest “A” to the cushion “B” by 2 screws which unscrewed by step 4,tighten.




**Step 6:** Assemble assembled chair to the part “D” by 4 screws which unscrewed by step 4,tighten.




**Step 7:**Place rubber ring “M” in pipe “I” , then put down water pipe “I” on the bottom of filler in ceramic basin “E” , remove 4pcs nuts and washers of the ceramic bowl .

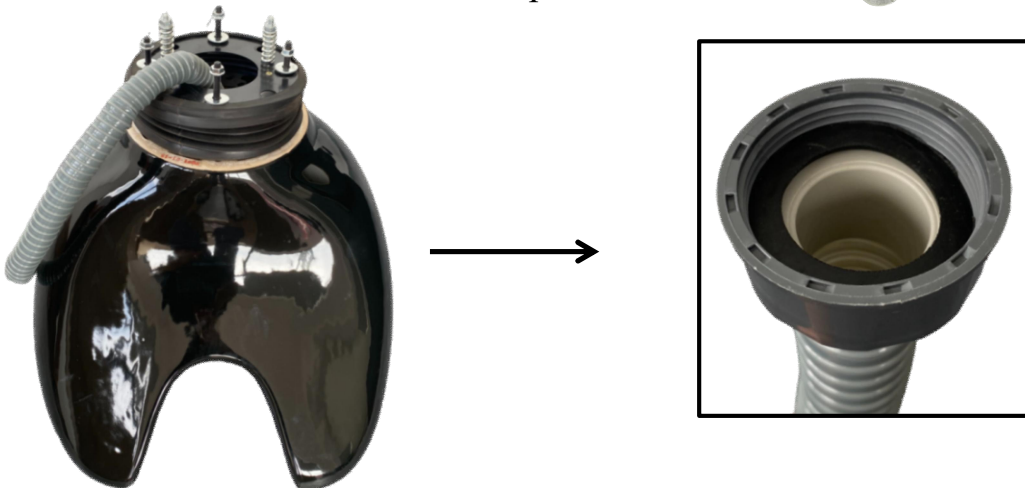


**Step 8:**Put basin into part “F” ,pry off the sliver cover on the Part “B” with a screwdriver and unscrew the screws to remove the cover under the part “F” and reattach the screws that have been removed from the ceramic basin by step 6,close the cover and install the screw lids on the screws.

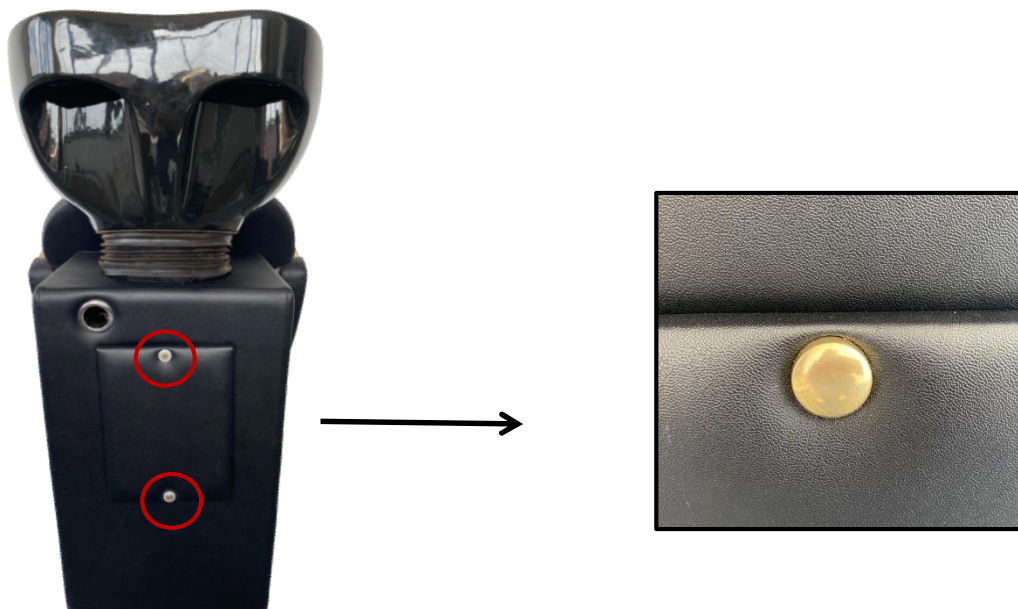


**Step 9:** Unscrew the nut preinstalled on Part “H” , and install it on Part “G” , and install water pipe “N” and “K” on it according to the picture, tighten.

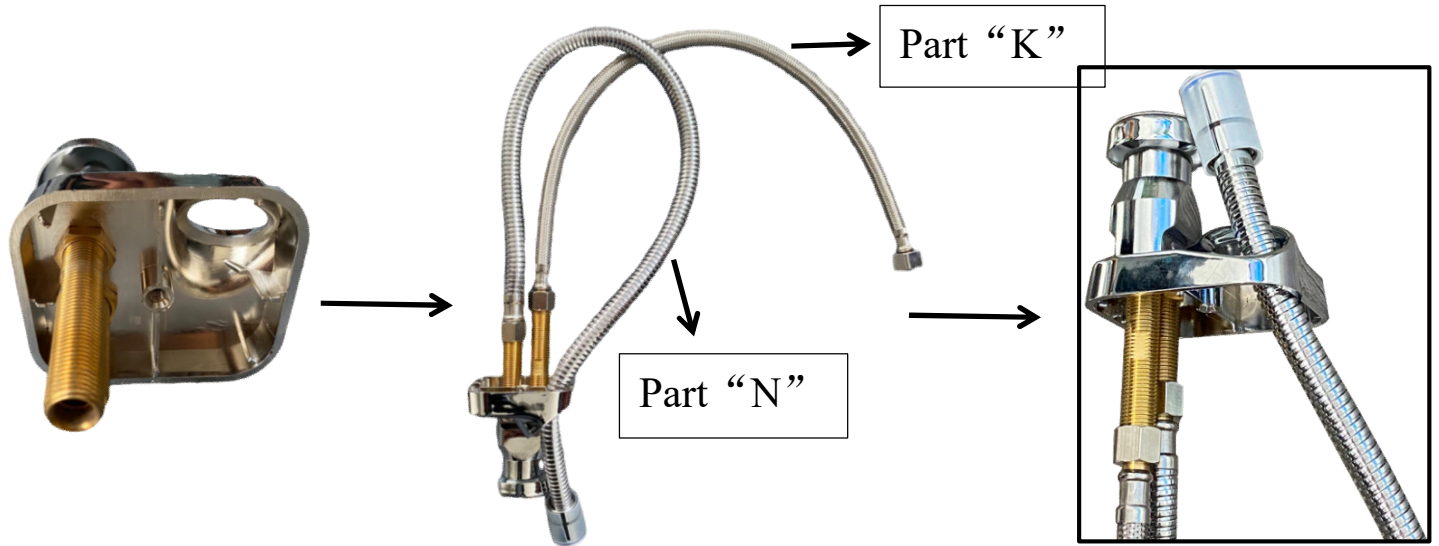


**Step 10:** Install the water fittings in the following steps.

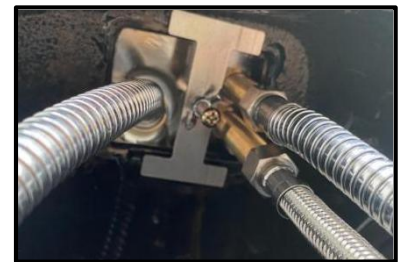

① Use Parts “Q” and “R” to fix Part “G” and ceramic basin as picture, tighten.

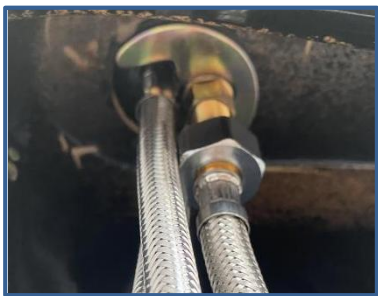

② Loosen nuts on faucet “J” and take gasket  out, put Part faucet into the hole of bowls, tighten by the nut and gasket. Connect the pipe “K” to the faucet and tighten.

③ Install shower head “S” onto pipe “N”, install the funnel “P” , headrest “O” as shown.

