
2 Pcs Corner Sofa

If you have any questions about the product, please feel free to contact us.

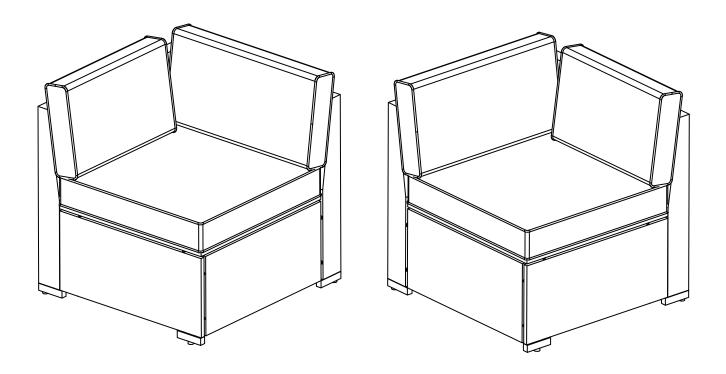



Please retain these instructions for future reference.

Dear Customer

Thank you for your purchase.

When you receive the product, please make sure that all the parts are intace.

Then please browse the entire installation manual before assembly.

If problem occur unsatisfactorily as follows

- A. The outer box is damaged
- **B** . The product is damaged / bent / cracked while you open the box
- C . The parts / accessories / assembly tools are missing
- **D**. The product is hard to assemble
- **E**. The instructions are not clear and can not be referred
- **F** . The product has functional problems
- **G**. Other aspects that you are not satisfied with

Please do not hesitate to contact us for help. Our team with factory direct after-sales service will reply within 24 hours and will do our best to resolve the problem for you.

HARDWARE LIST


Hardware List				
1	2	3	4	5
0)			000	
M6*25 mm Bolt	M6*30 mm Bolt	Ф6*12 Washer	Floor Mat	L Floor Mat
16 pc	28 pc	28 pc	2 pc	6 pc
6				
Hex Wrench				
1 pc				


PART LIST

Parts List				
G		J	K	
(Side Panel)	(Left Armrest)	(Right Armrest)	(Left Backrest)	(Right Backrest)
2 pc	1 pc	1 pc	1 pc	1 pc
M	N		P	Q (2) (2) (3)
(Left Seat Panell)	(Right Seat Panel)	(Front Panel Left)	(Front Panel Right)	(Seat Cushion)
1 pc	1 pc	1 pc	1 pc	2 pc
(Back Cushion)	(Back Cushion)			
2 pc	2 pc			


- Please ensure that all accessories are complete before starting the installation.
 Due to the variety of accessories, many accessories may be glued together, please check carefully
 If any accessories are missing or damaged, please contact the seller immediately.

STEP 1 Left Armrest Sofa

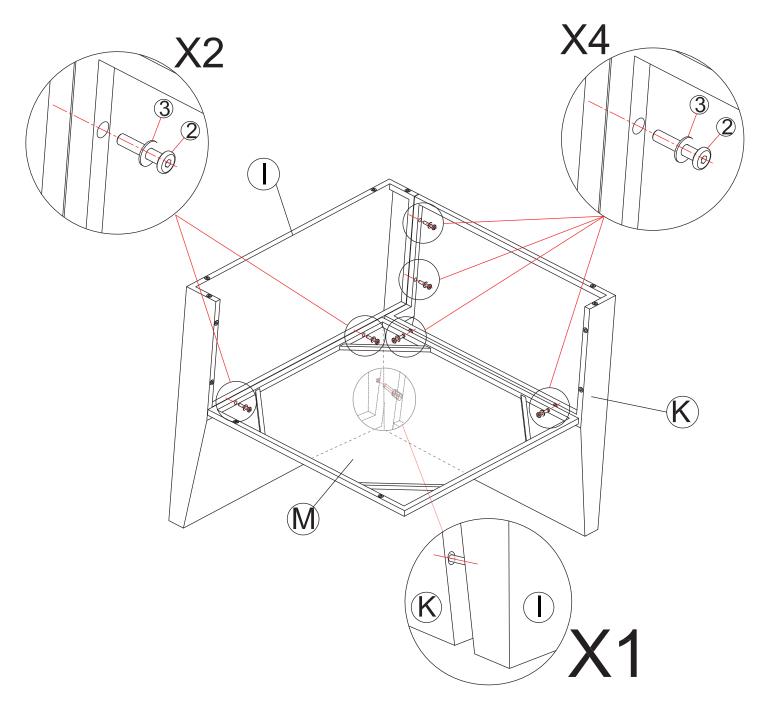

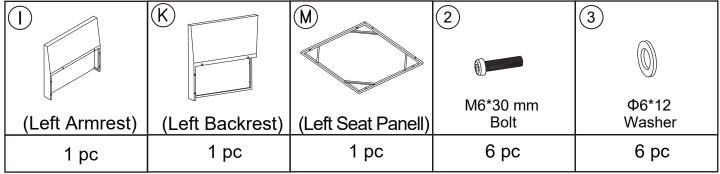


STEP 2 Left Armrest Sofa

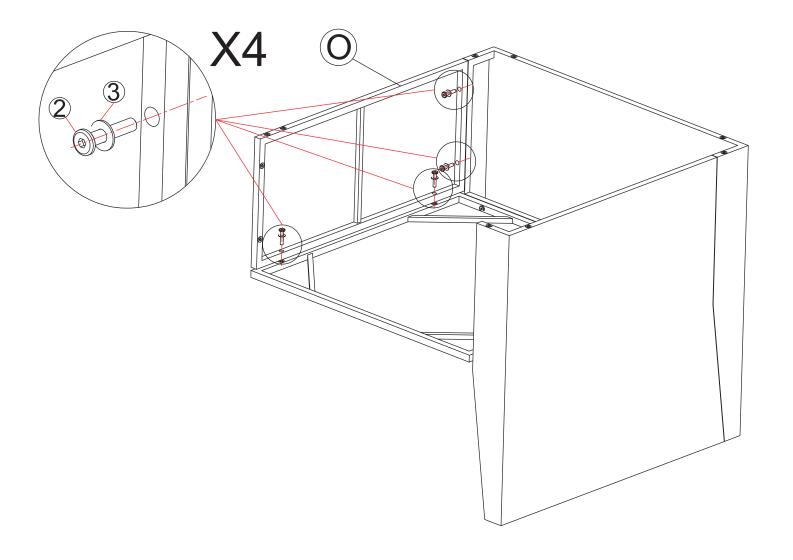


0	2	3
(Front Panel Left)	M6*30 mm Bolt	Ф6*12 Washer
1 pc	4 pc	4 pc

STEP 3 Left Armrest Sofa

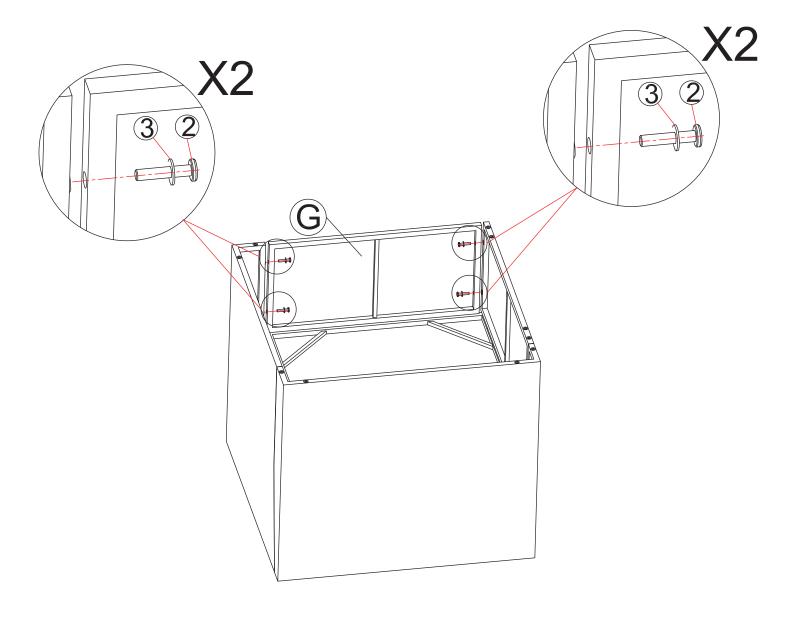


G	2	3
(Side Panel)	M6*30 mm Bolt	Ф6*12 Washer
1 pc	4 pc	4 pc


STEP 4 Left Armrest Sofa

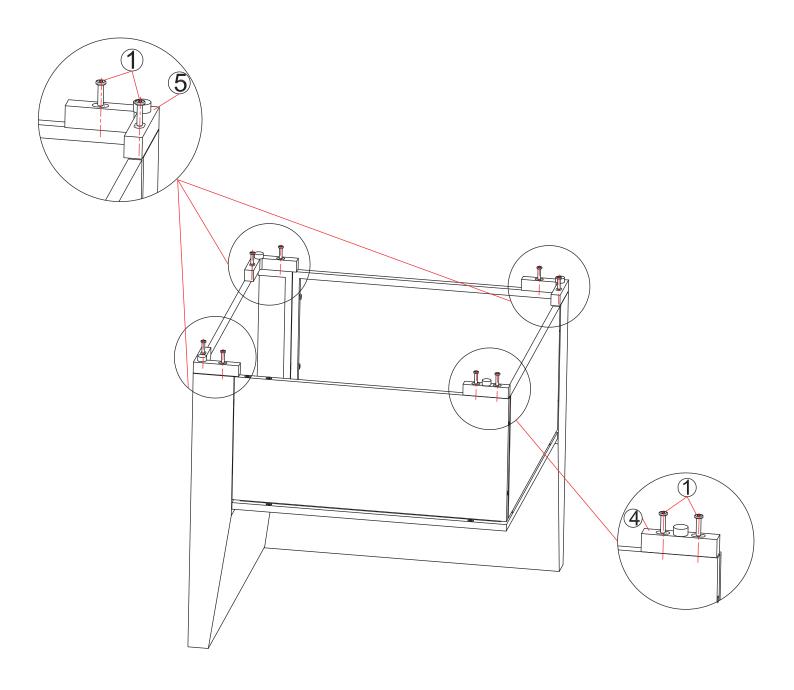


1	4	(5)
0	000	
M6*25 mm Bolt	Floor Mat	L Floor Mat
8 pc	1 pc	3 pc

STEP 5 Left Armrest Sofa

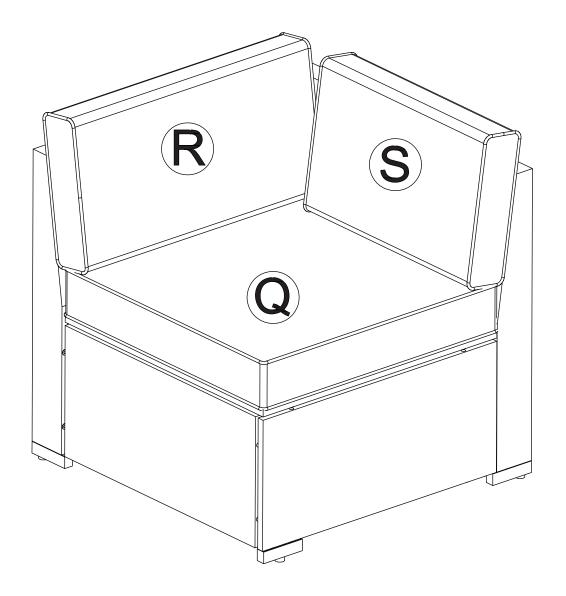

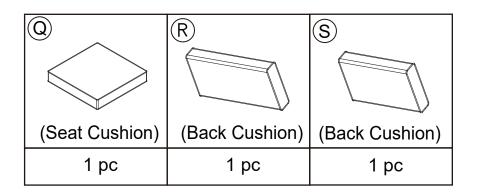



STEP 6 Right Armrest Sofa

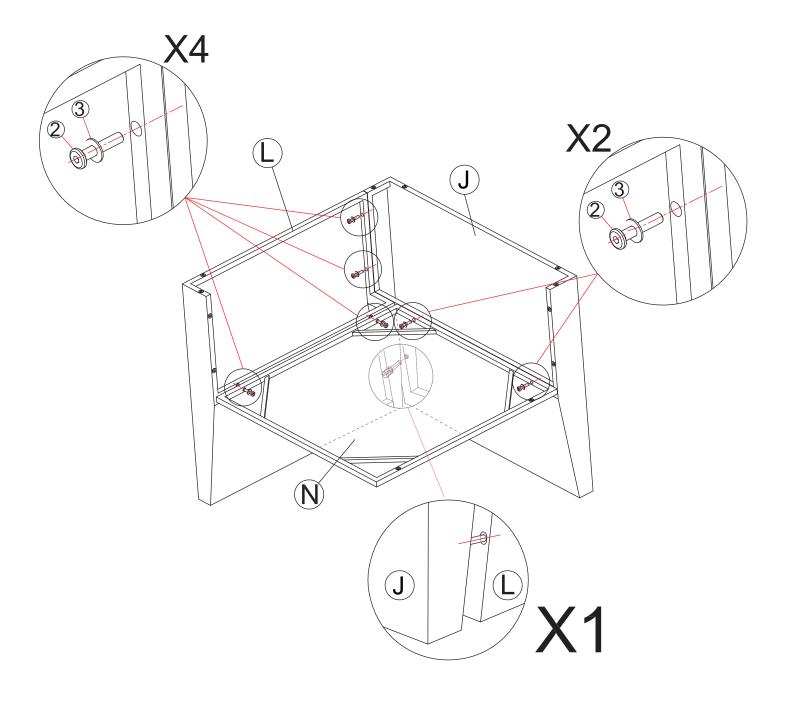


		N	M6*30 mm	З Ф6*12
(Right Armrest)	(Right Backrest)	(Right Seat Panel)	Bolt	Washer
1 pc	1 pc	1 pc	6 pc	6 pc

STEP 7 Right Armrest Sofa

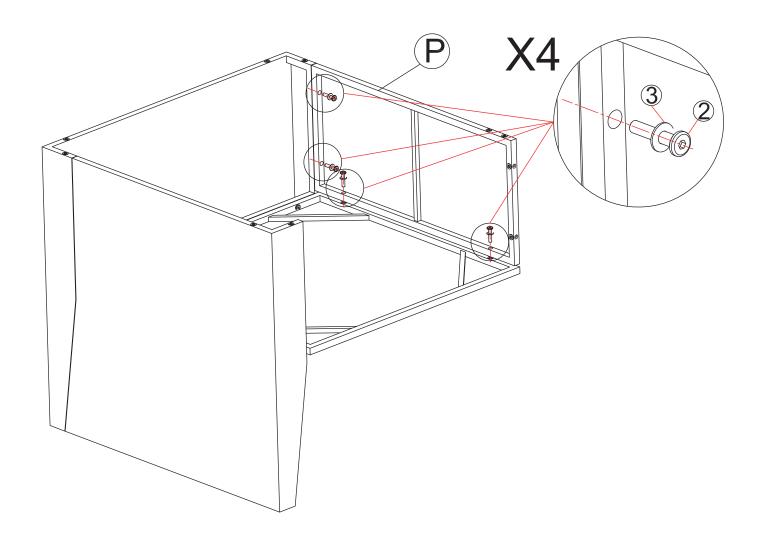

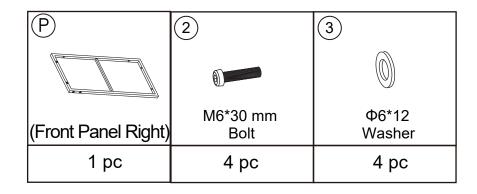


STEP 8 Right Armrest Sofa

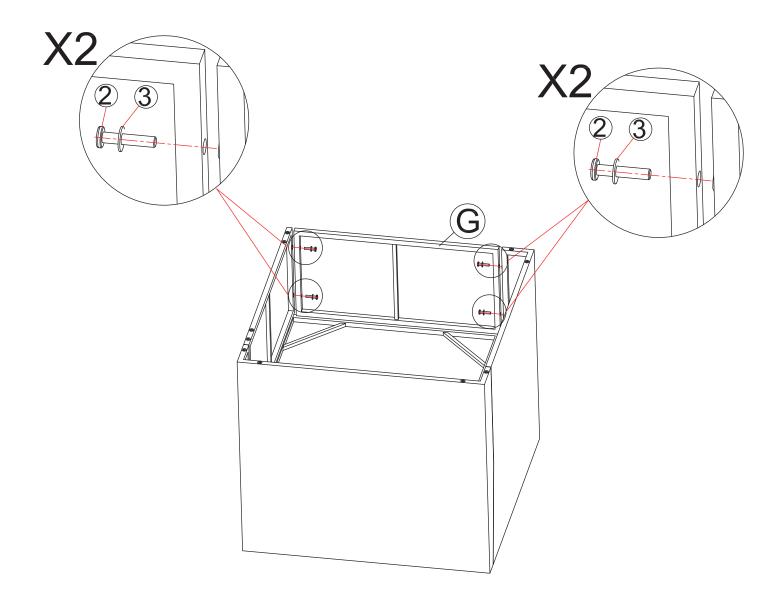

G	2	3
	0	
(Side Panel)	M6*30 mm Bolt	Ф6*12 Washer
1 pc	4 pc	4 pc

STEP 9 Right Armrest Sofa

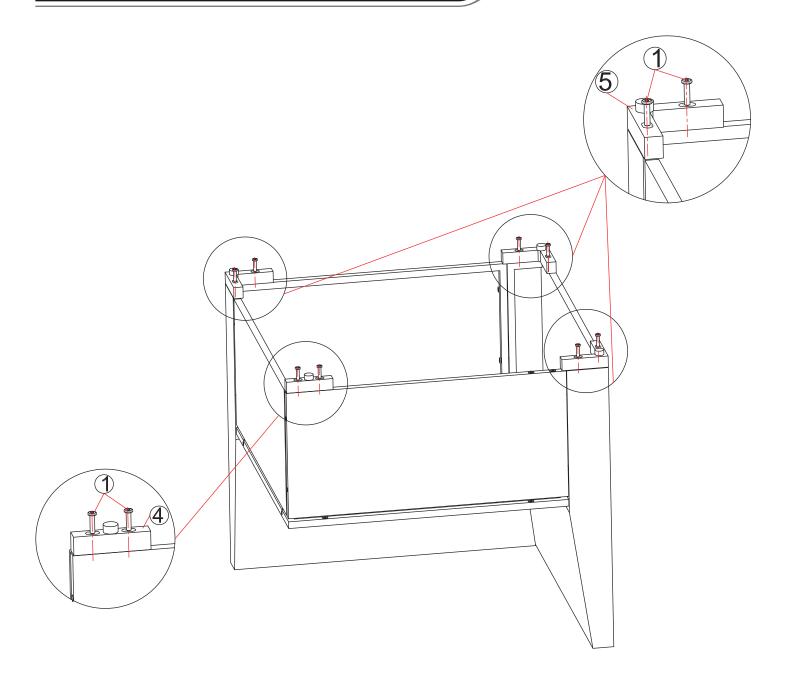

1	4	5
	000	
M6*25 mm Bolt	Floor Mat	L Floor Mat
8 pc	1 pc	3 pc

STEP 10 Right Armrest Sofa

