








ASSEMBLY INSTRUCTION


Accessories List

 A Left Sofa base(1)	 B Middle Sofa base(2)	 C Right Sofa base(1)	 D Left Backrest(1)	 E Middle Backrest(2)
 F Right Backrest(1)	 G Left Armrest(1)	 H Right Armrest(1)	 I Cushion Package (4)	 J Seat cushion(4)
 K Back cushion(4)	 L Left Hand pillow(1)	 M Right Hand pillow(1)	 N Waist Pillow (2)	 O Leg(16)
 P Plastic Washer (16)	 Q Metal Clip (6)			


STEP1:Remove the backrest, seat cushion, back cushion , hand pillow, pillow and legs from the bottom of the sofa base.

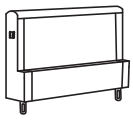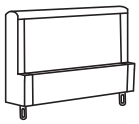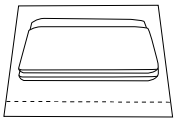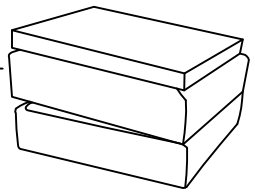


STEP2:Inster the armrest into the sofa base.

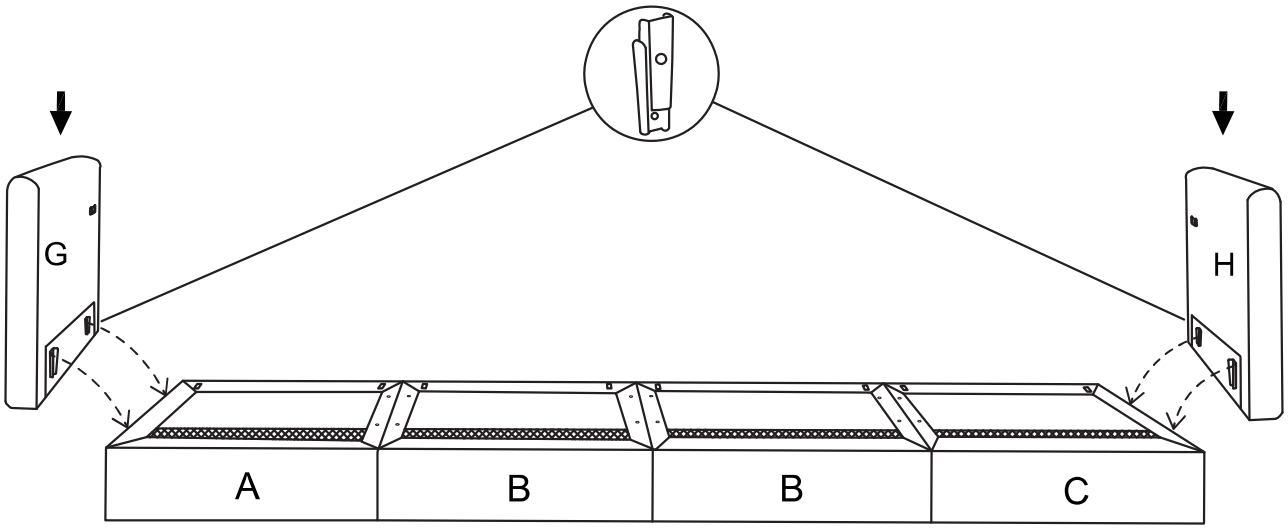


STEP3: Insert the backrest into the sofa base.

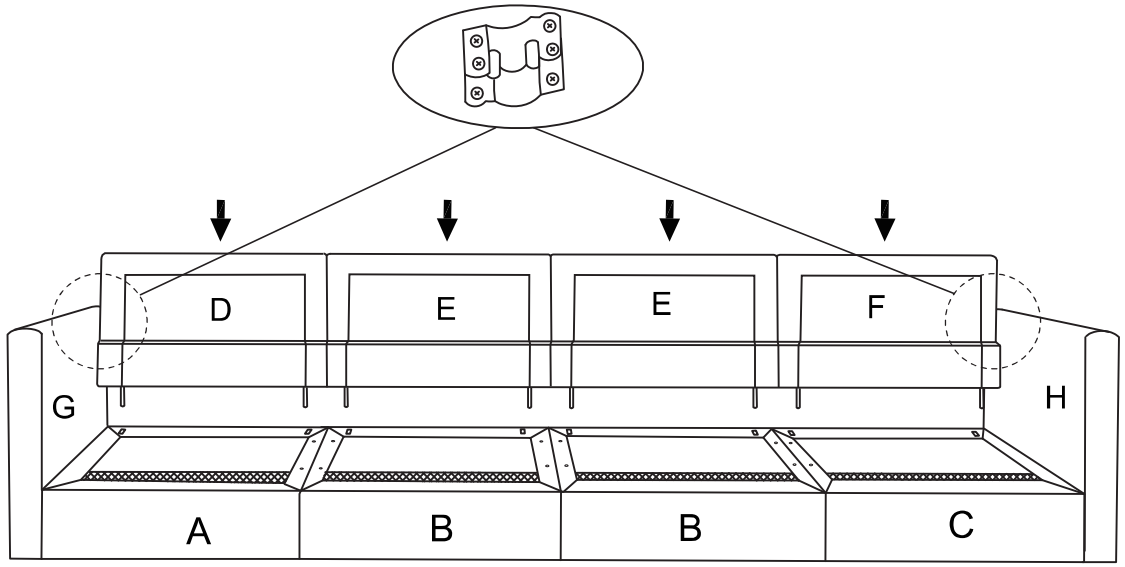


STEP4: Screw the legs clockwise.Gentle Remainder: There are only 2 holes for the legs at the bottom of the corner seats because the other 2 Legs should be installed to the armrest.

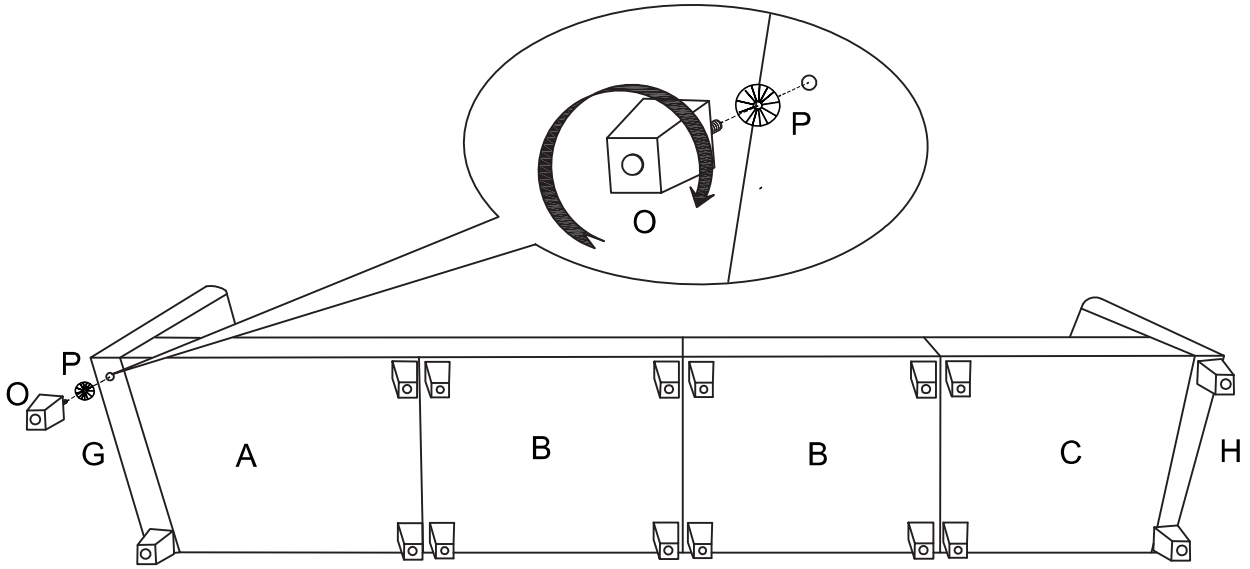


STEP5: Connect the seats with the Metal Clips (Q).

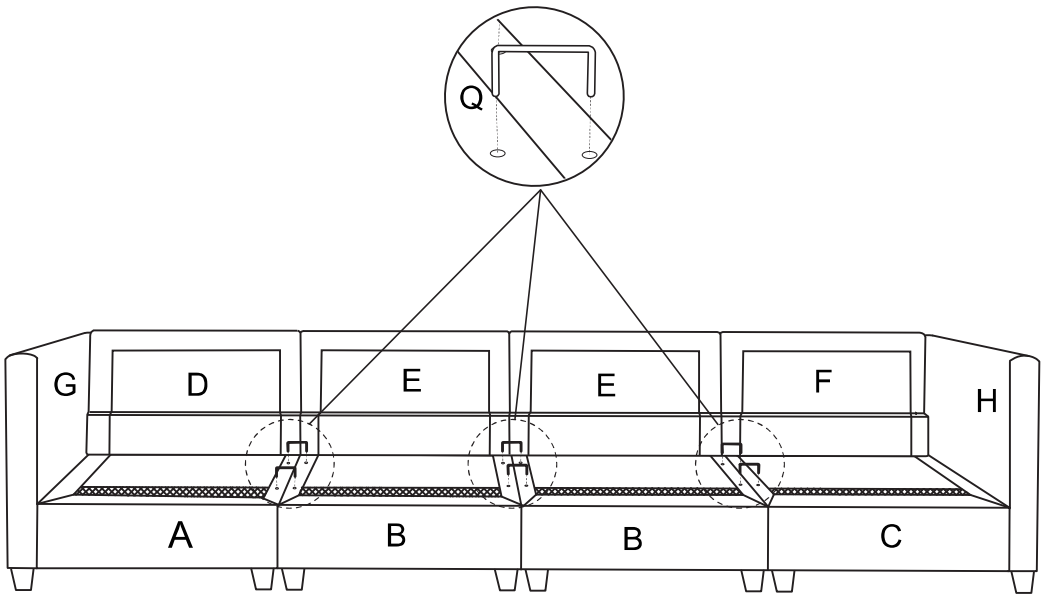

STEP6: Cut the cushion packages,remove four seat cushions and back cushions.
Full decompression may take up to 72 hours.

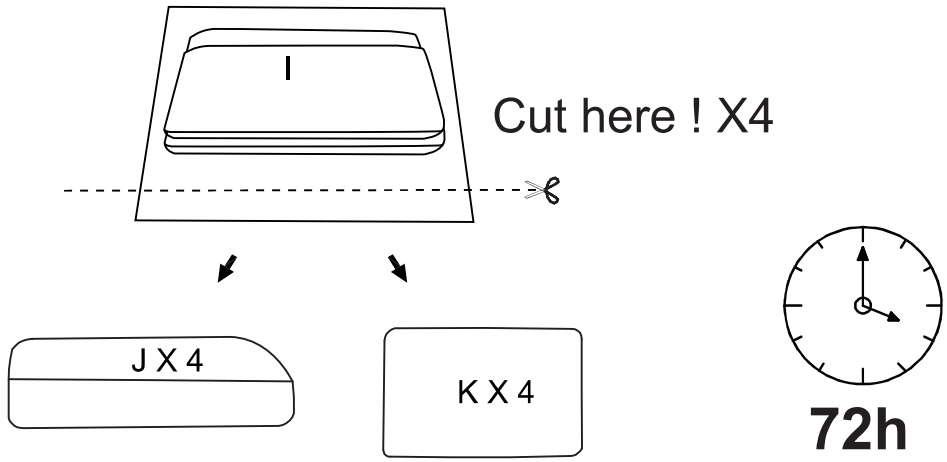

STEP7: Put the seat cushions, back cushions and armrest pillows on the sofa in turn,then put the waist pillows on the seat.

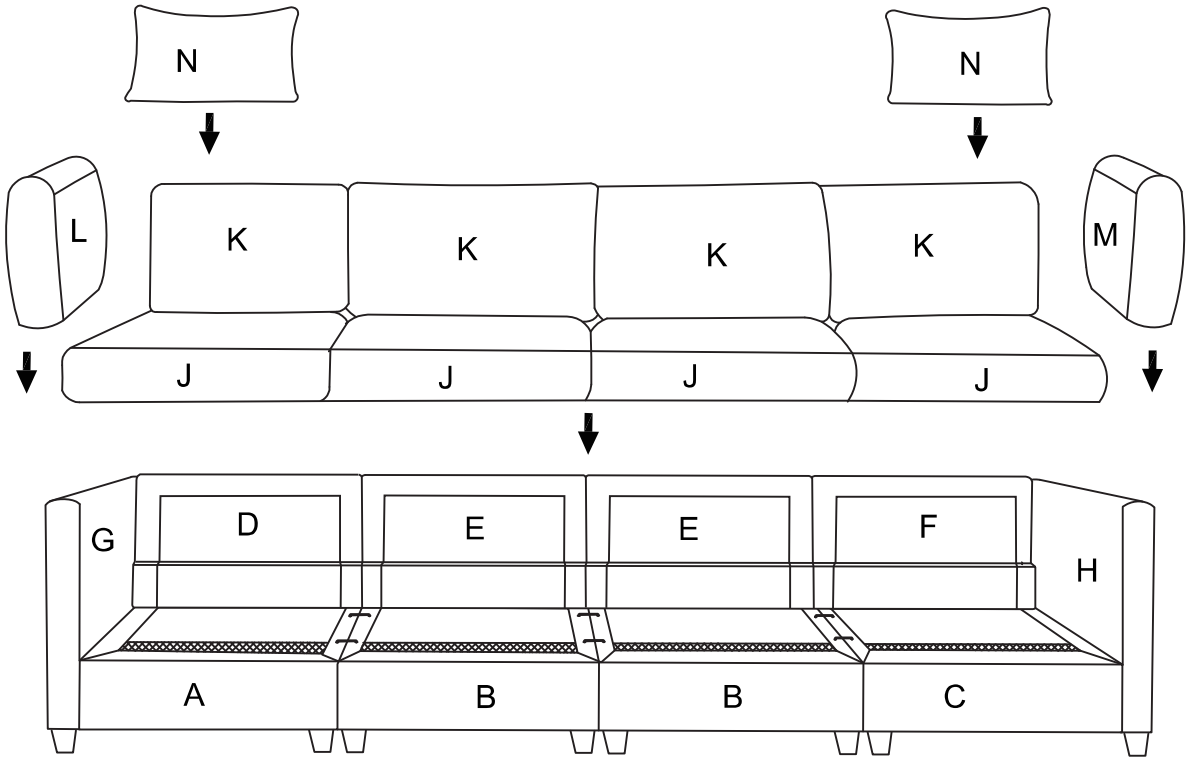

Complete

