

IMPORTANT SAFETY INFORMATION



WARNING

Units must be assembled with the instructions, parts and hardware provided. Improper assembly or use could cause structural failure, instability, tip over, and/or serious injury.

Las unidades deben ser ensambladas de acuerdo a las instrucciones y usando el herraje incluido. El ensamblado incorrecto puede causar un fallo estructural, inestabilidad, o que la unidad se derrumbe, causando posibles heridas personales.



Les unités doivent être assemblées avec les instructions et les matériels donnés. Si vous ne le construisez pas correctement ceci pourrait causer des dommages structuraux, instabilité, se renverser et blesser quelqu'un.




WARNING

Do not move unit when loaded. Doing so could cause instability, product collapse, tip over, and/or serious injury.




Installation procedure details

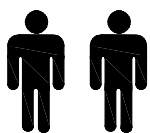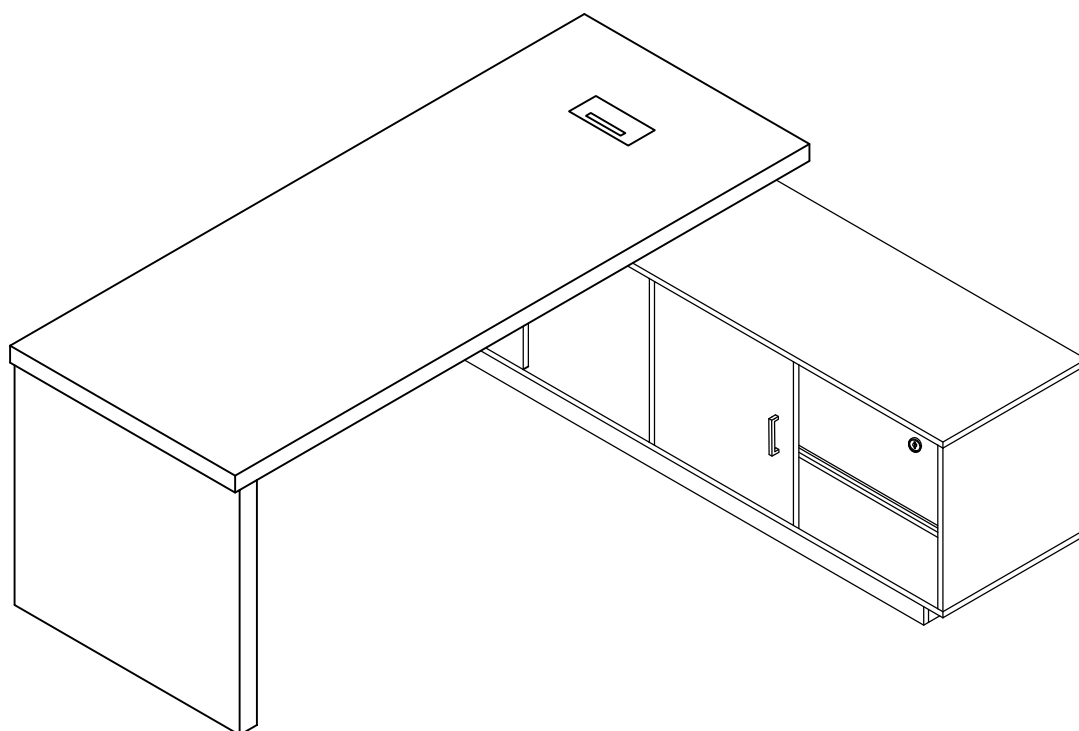


1 PERS.

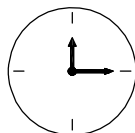


60 MIN

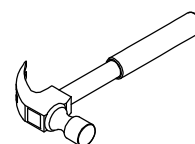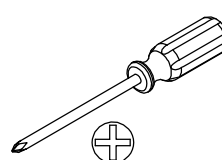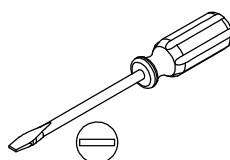


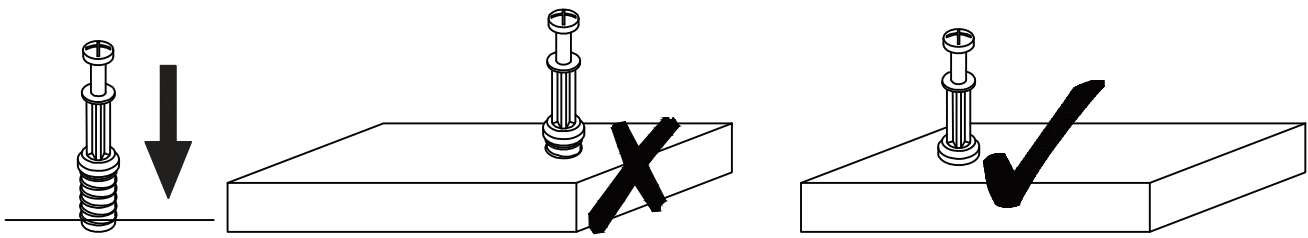

When inserting screw A into the screw hole, it should be perpendicular to the panel and hammered into the shoulder position with a small hammer, taking care not to be too tight or too loose

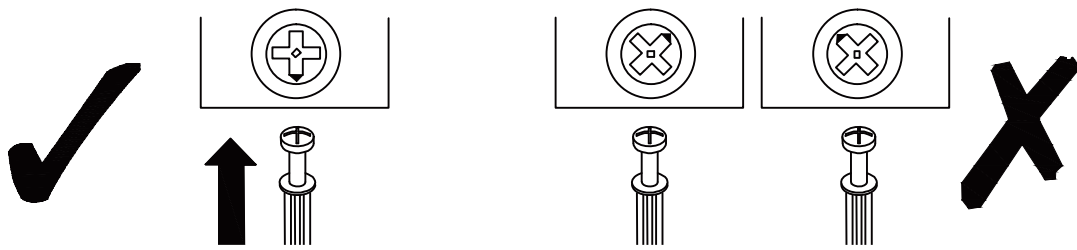



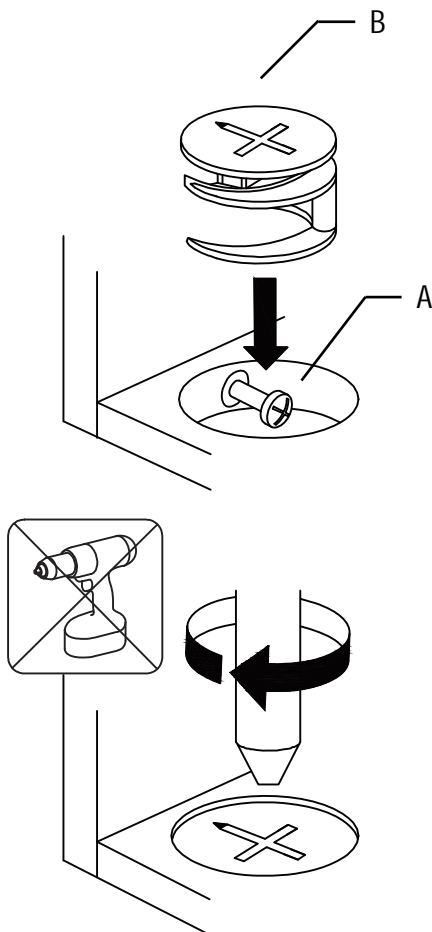


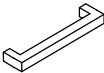





When screw A and screw B are connected, refer to the example for the correct starting position of B




When the two panels are linked through A and B, pay attention to: A screw needs to be inserted into the slot of B card, adjusted to the correct position, and then rotated clockwise to lock (the two panels can be linked tightly).

Hardware parts

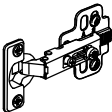
A		B		C		D		G	
									
H		I		J		K		L	
									
M									
									

Procedure For installing the right auxiliary cabinet

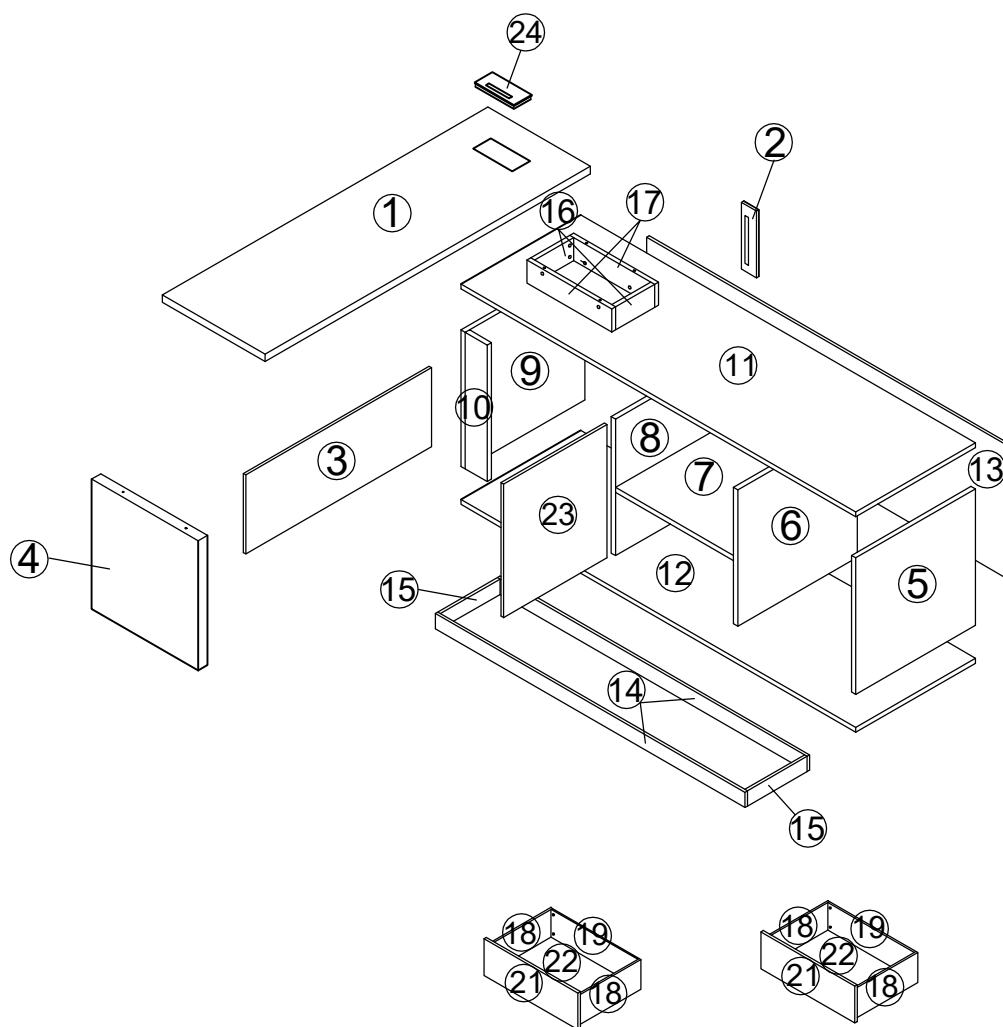


Installation procedure

1

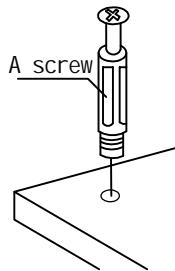


It is recommended to drive A screw into the plate with a screw hole before installation

2

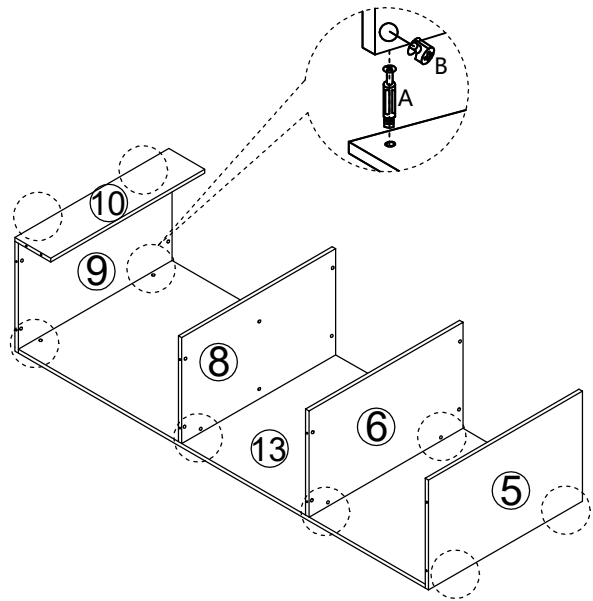


Install side cabinet partitions and backplanes

3

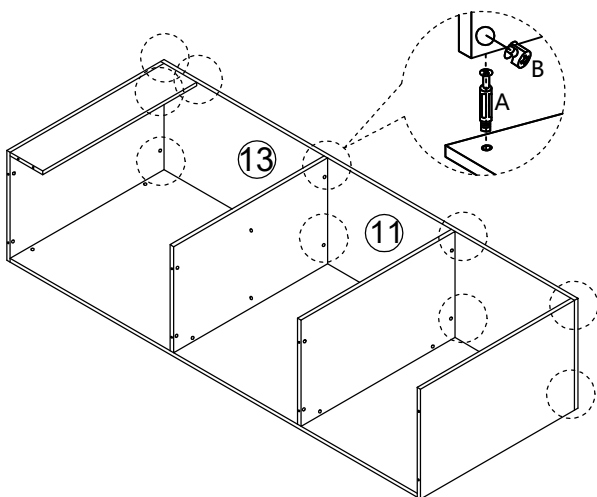


Install the top of the side cabinet

4

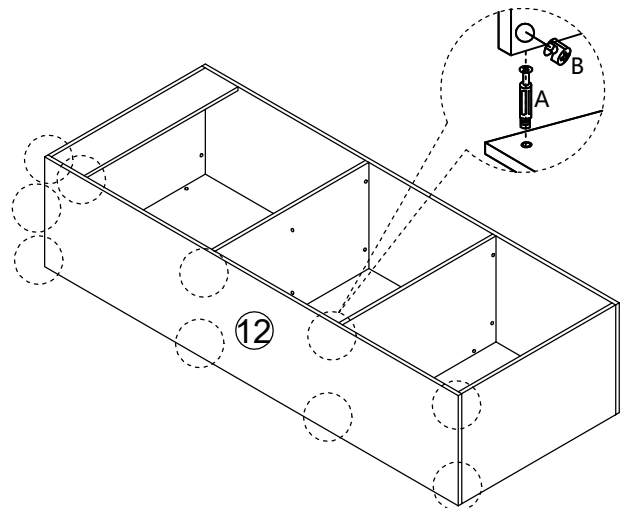


Install the bottom of the side cabinet

5

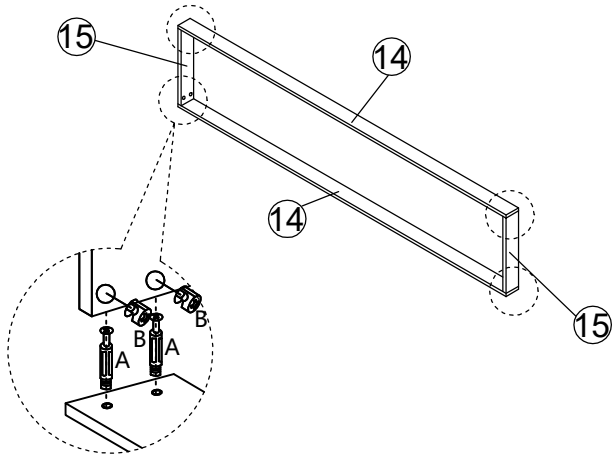


Assemble side cabinet support feet

6

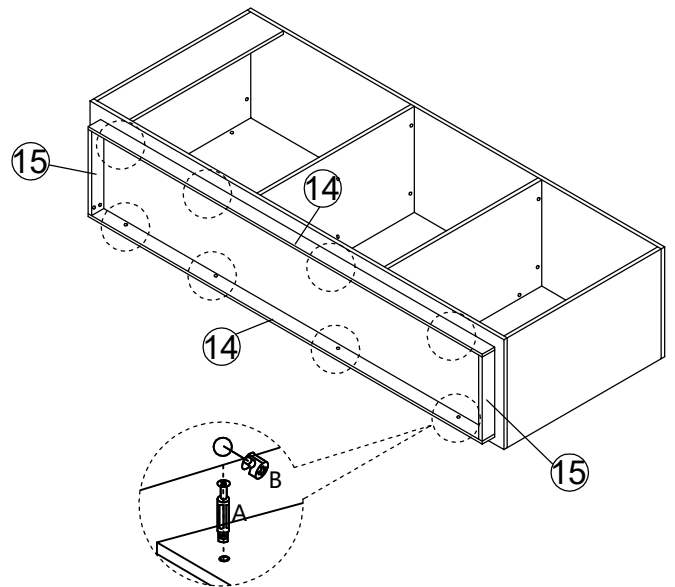


Install the foot of the side cabinet to the bottom of the side cabinet

7

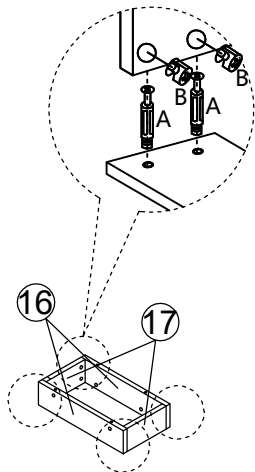


Assemble the top support part of the side cabinet

8

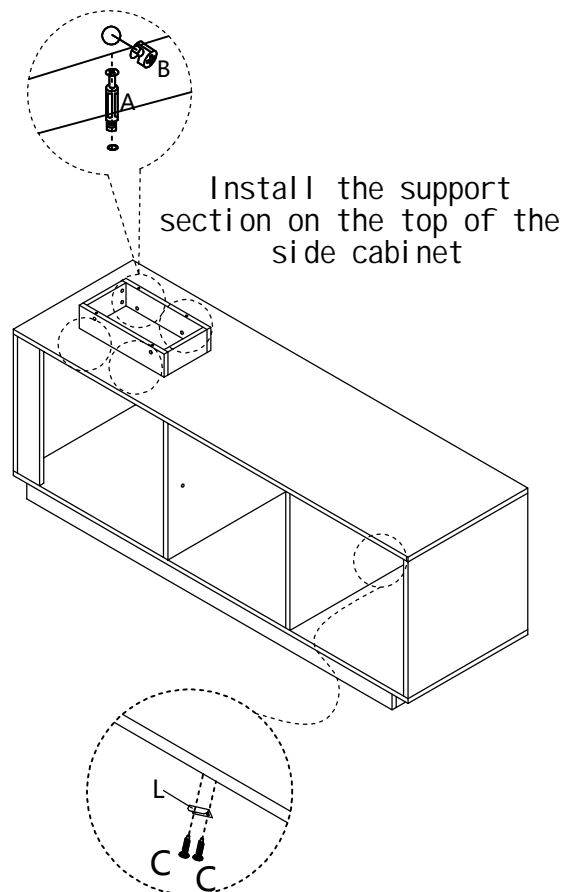


Install the support section on the top of the side cabinet

9

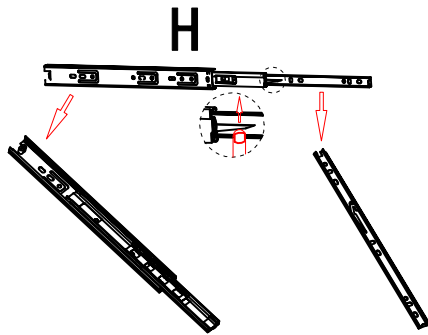


10

Install the drawer slide

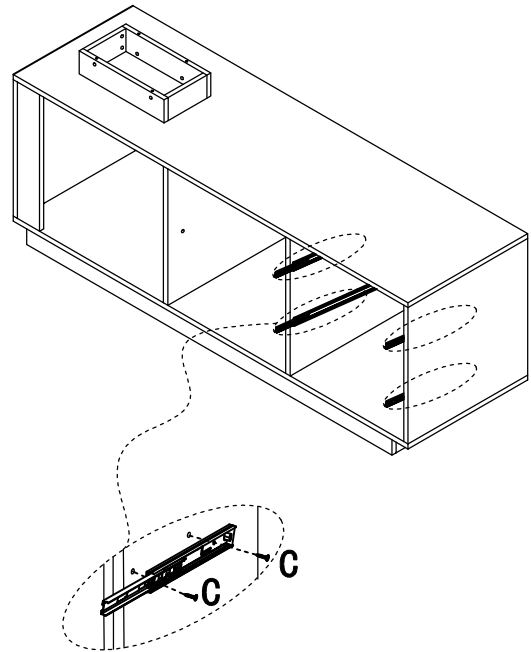


11

Assemble the drawer

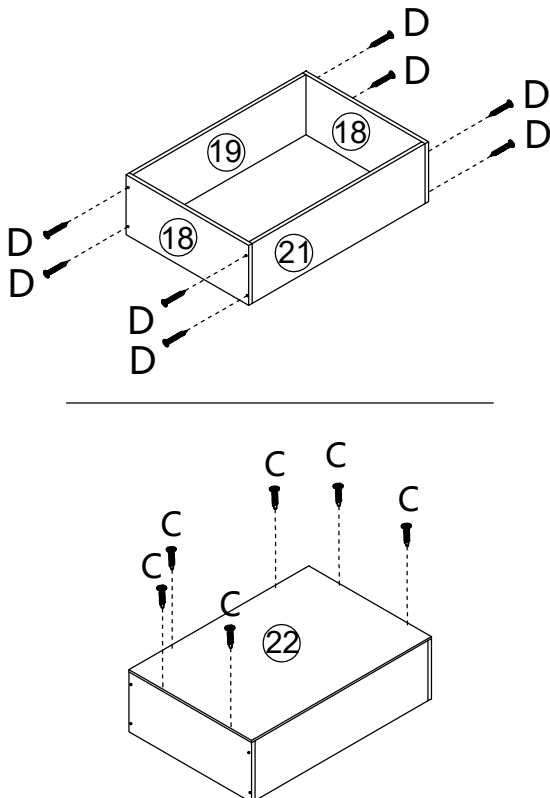


12

Assemble the drawer panel and combination lock

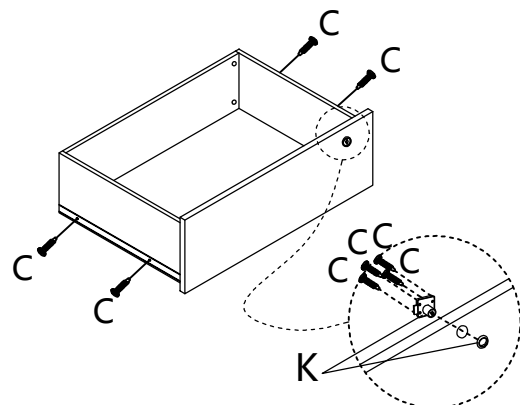


13

Install the assembled drawer

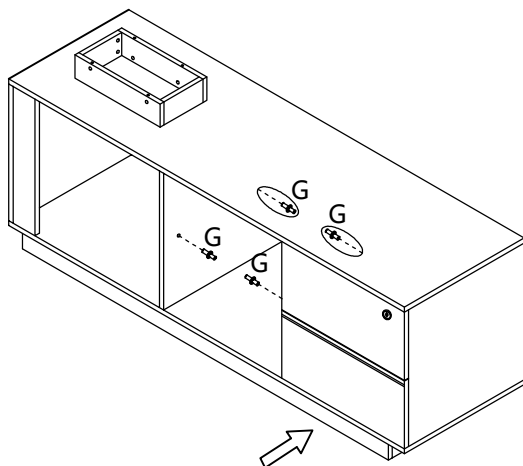


Install G (for placing divider)
in position shown

14

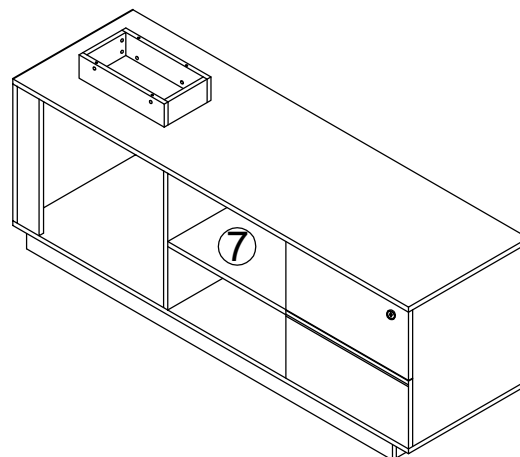


Spacer placement

15

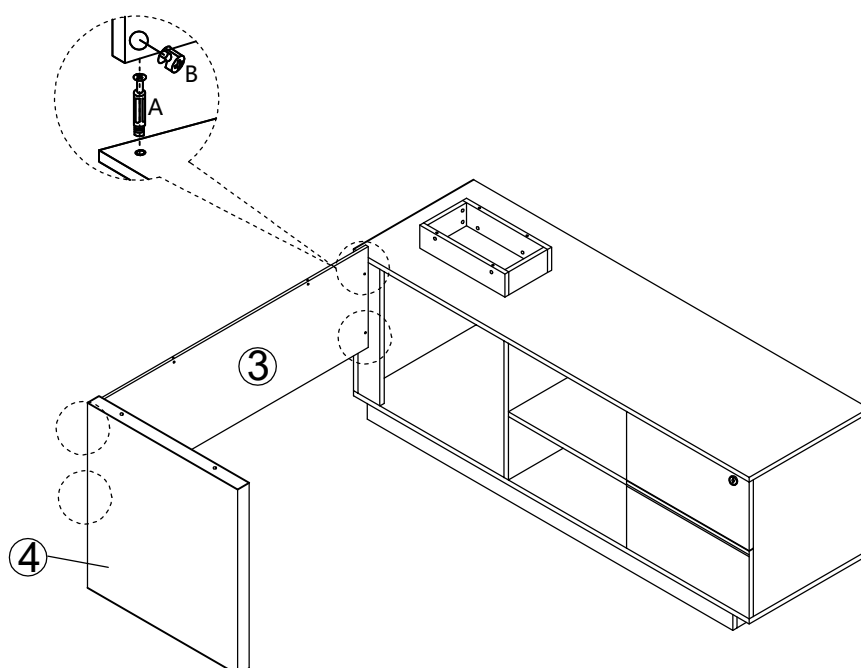


Install the front baffle and side supports

16

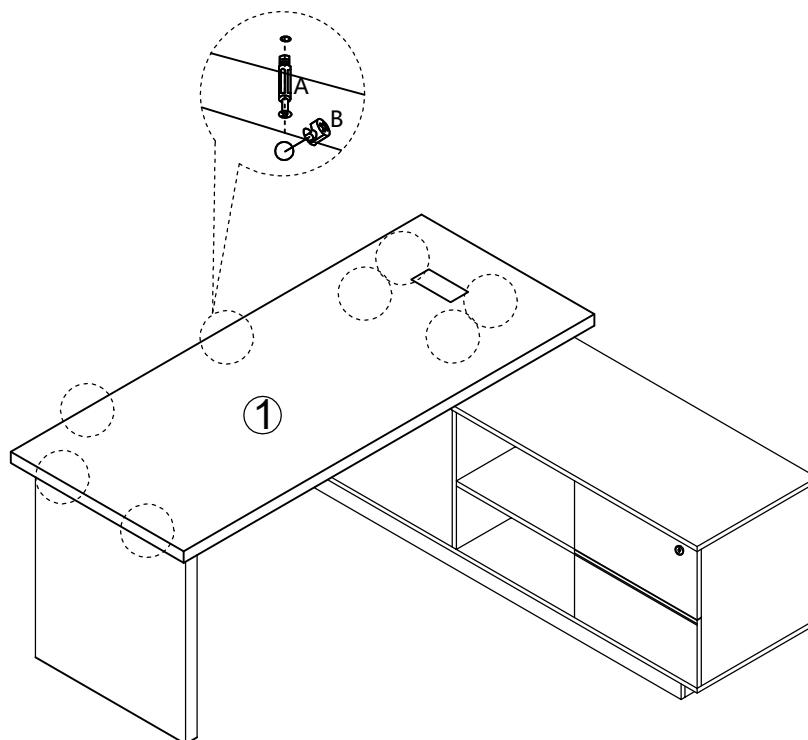





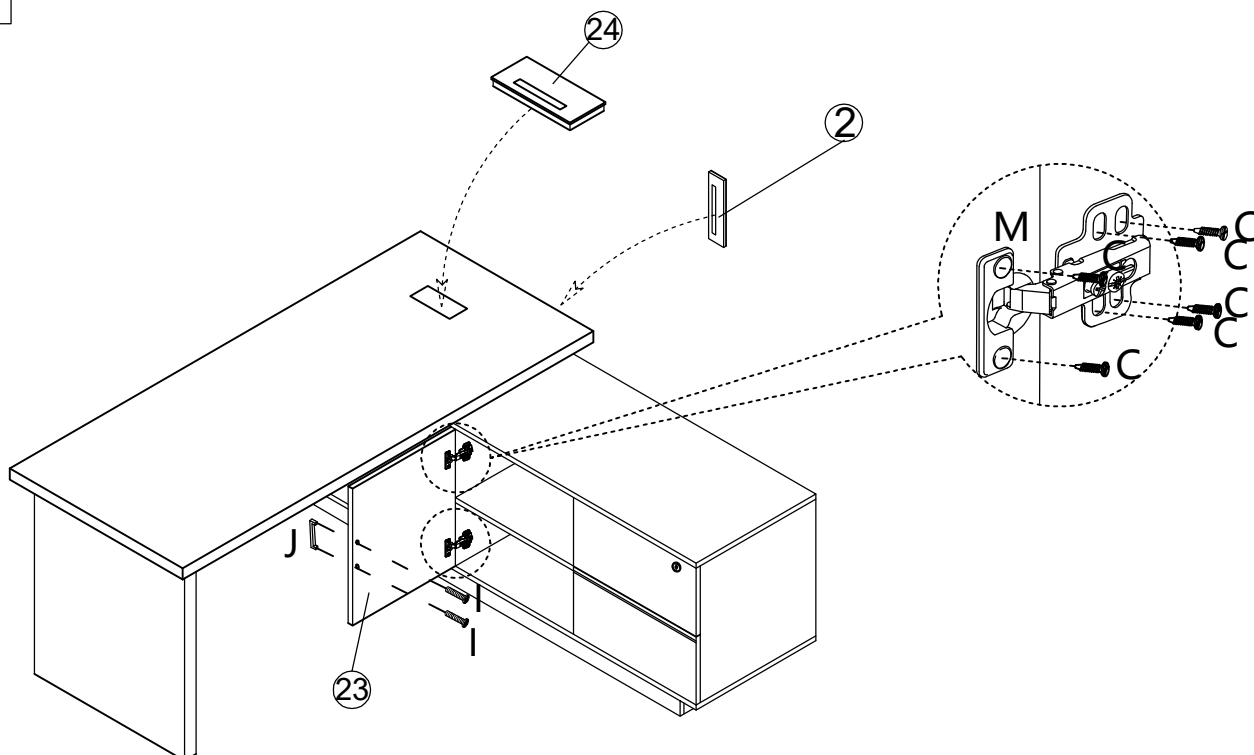






Place the desktop and link it through the AB component

17




Install the main engine vent and cable box, secure the door hinge and handle

Hardware parts


A		B		C		D		G	
									
H		I		J		K		L	
									
M									
									

Procedure For installing the left auxiliary cabinet

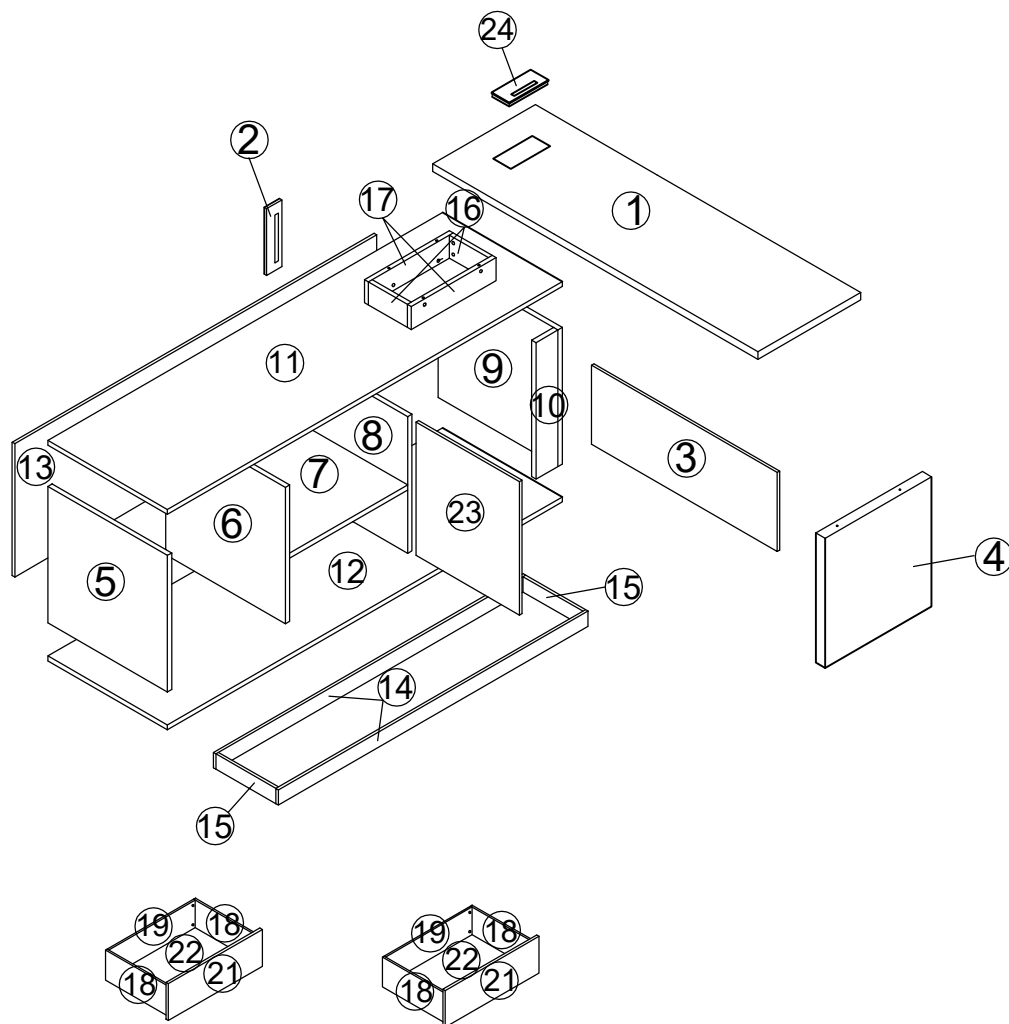


Installation procedure

1

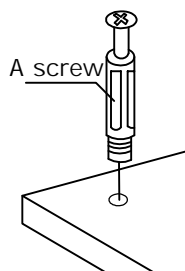


2

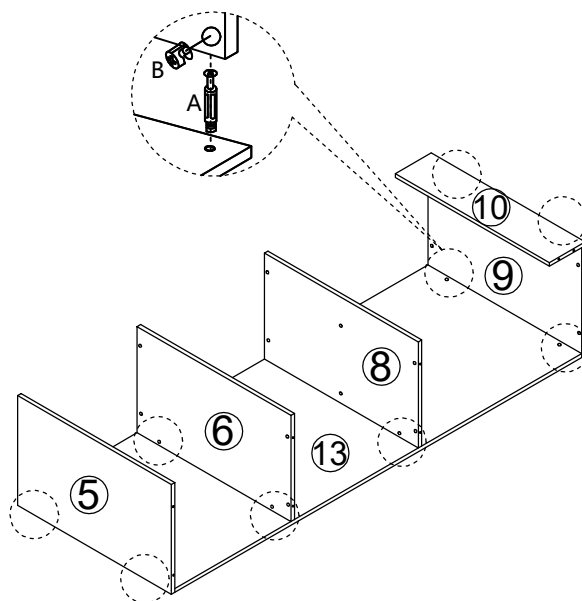


Install side cabinet partitions and backplanes

3

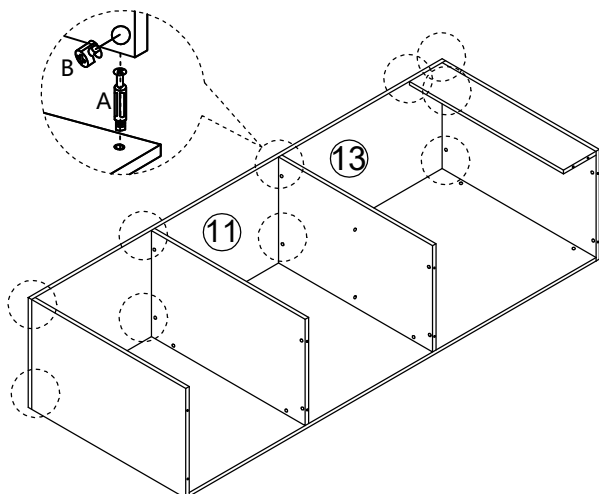


Install the top of the side cabinet

4

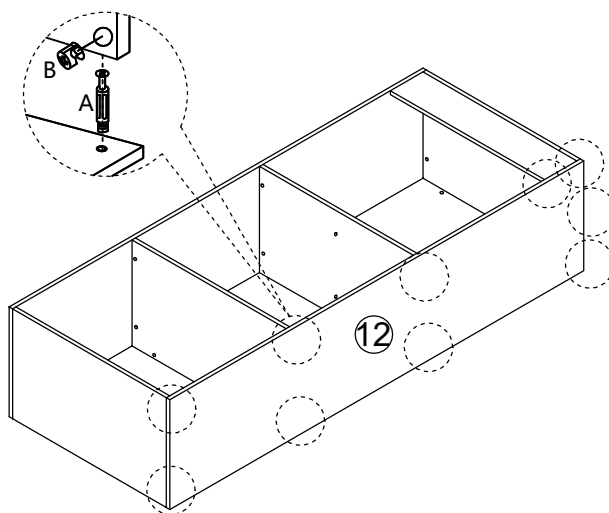


Install the bottom of the side cabinet

5

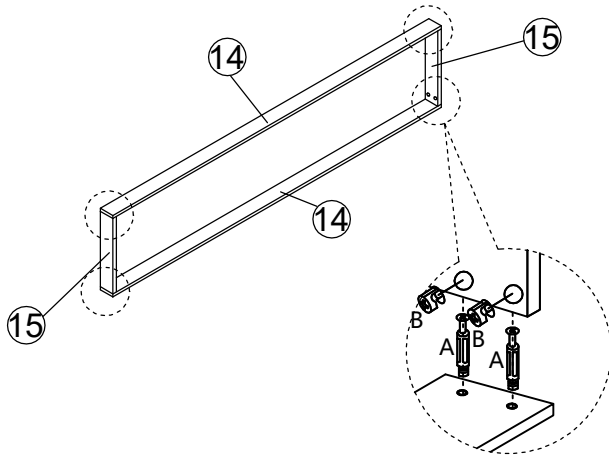


Assemble side cabinet support_feet

6

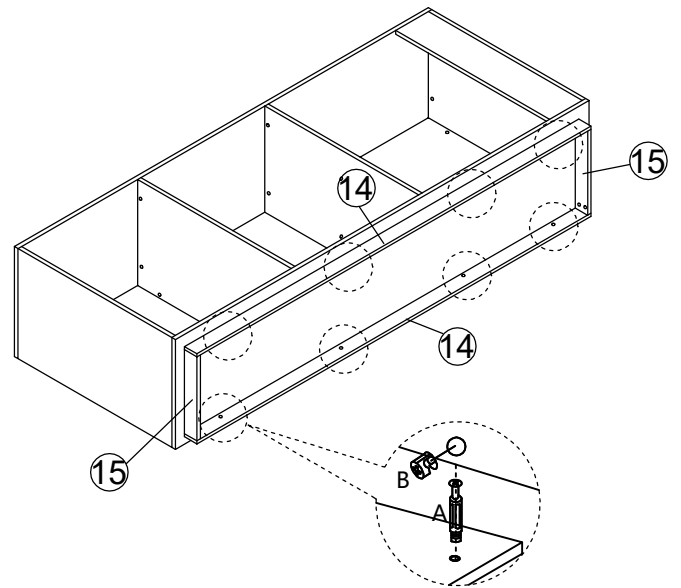


Install the foot of the side cabinet to the bottom of the side cabinet

7

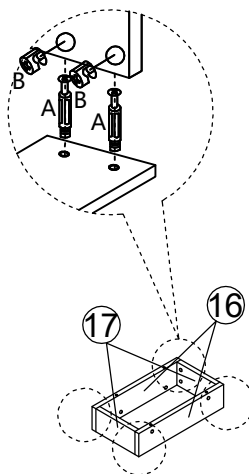


Assemble the top support part of the side cabinet

8

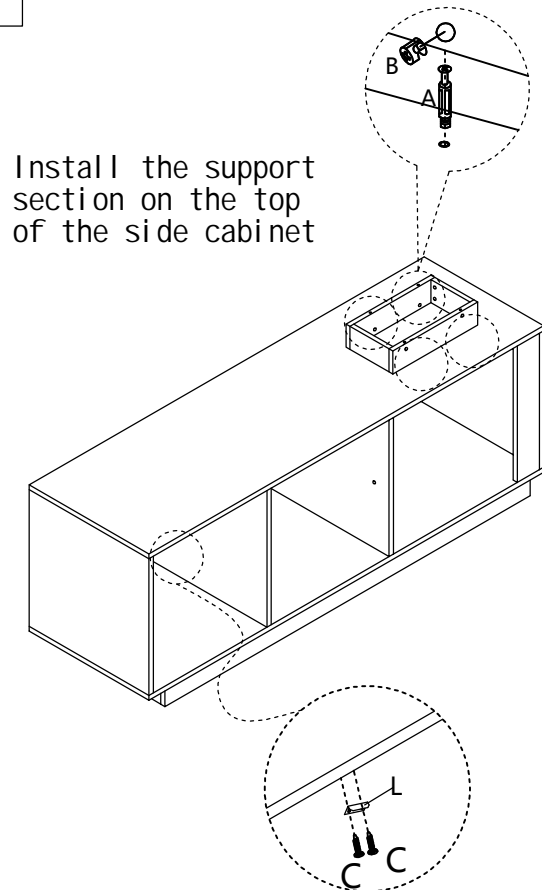


Install the support section on the top of the side cabinet

9

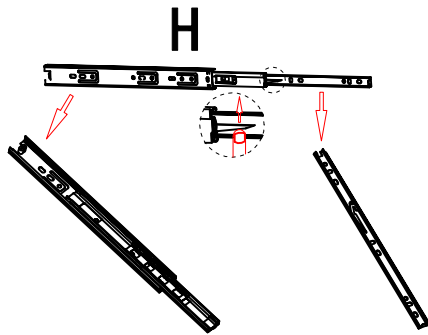


10

Install the drawer slide

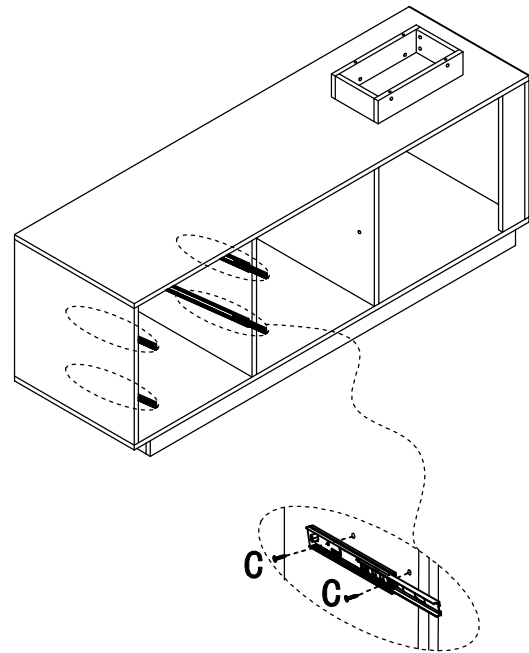


11

Assemble the drawer

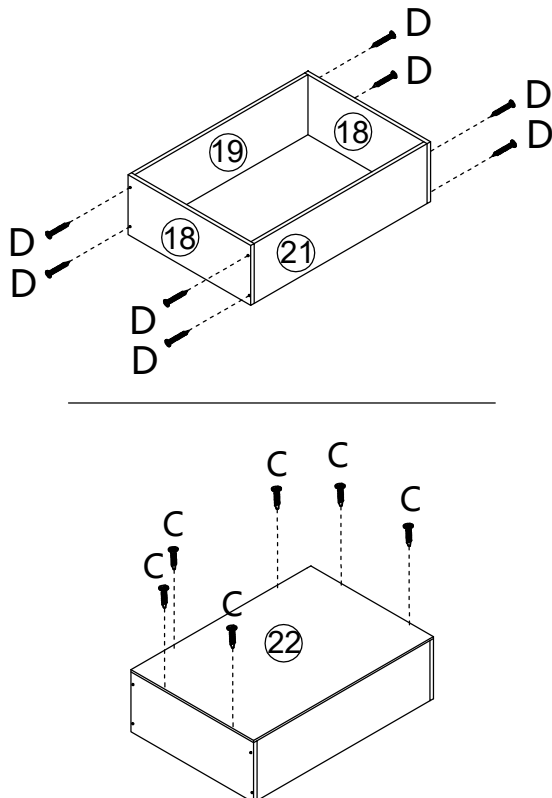


12


Assemble the drawer panel and combination lock

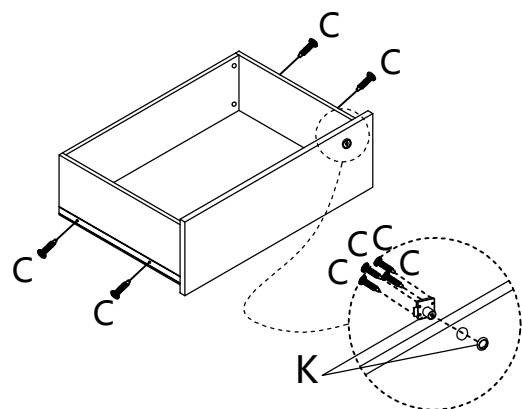


13

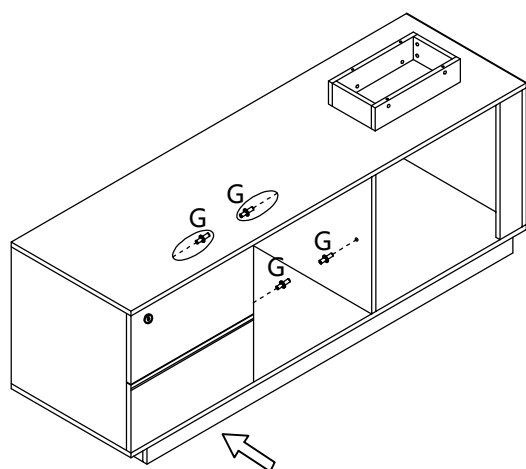

14

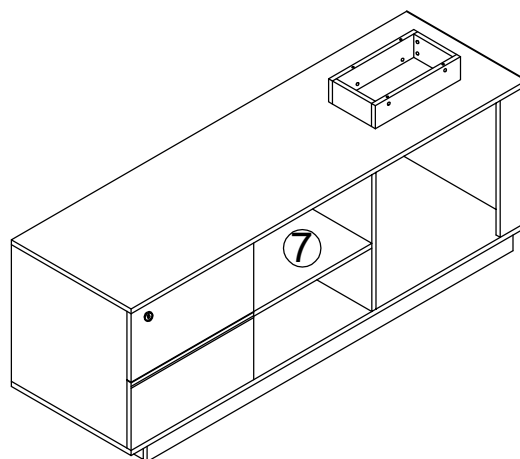


15

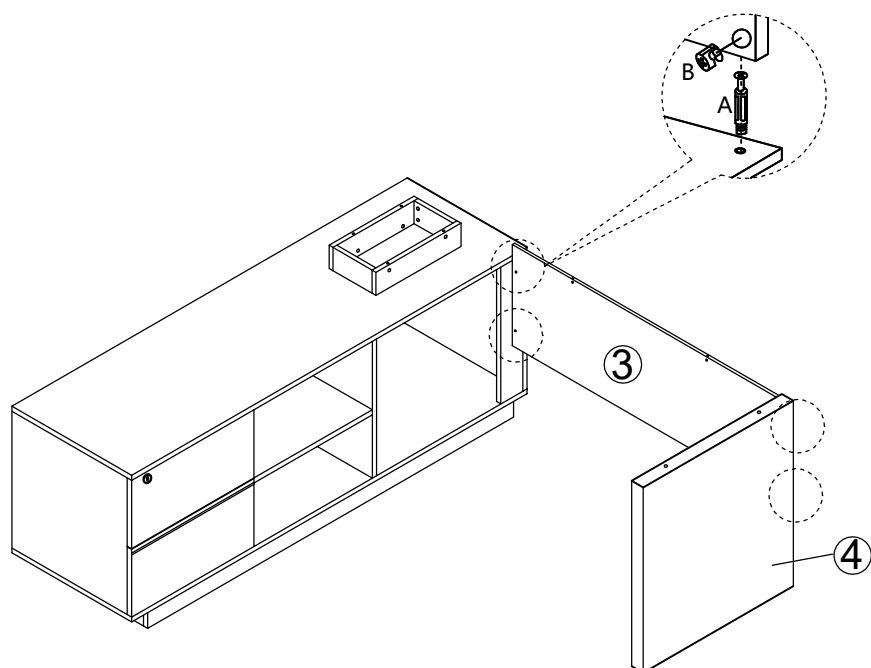


Install the front baffle and side supports

16

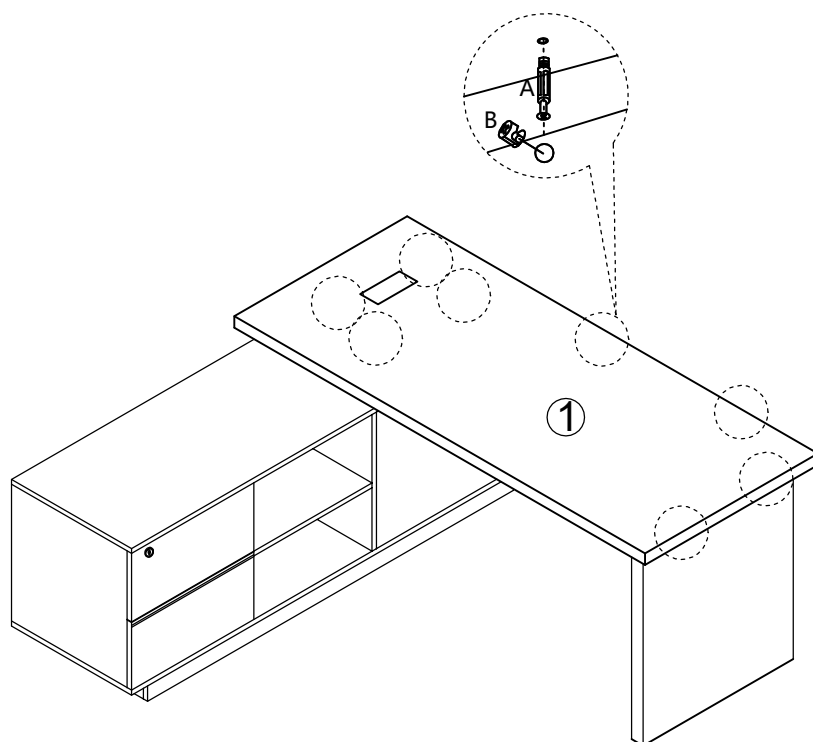

Place the desktop and link it through the AB component

17

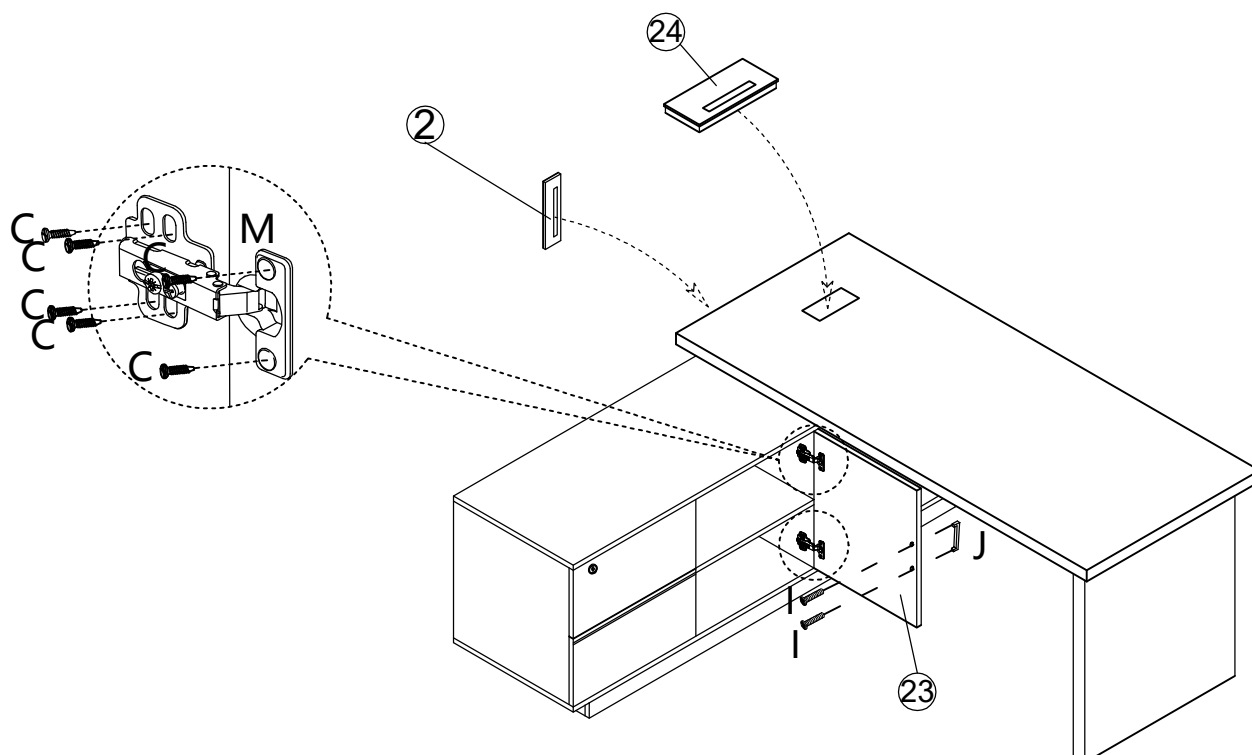

Install the main engine vent and cable box, secure the door hinge and handle