


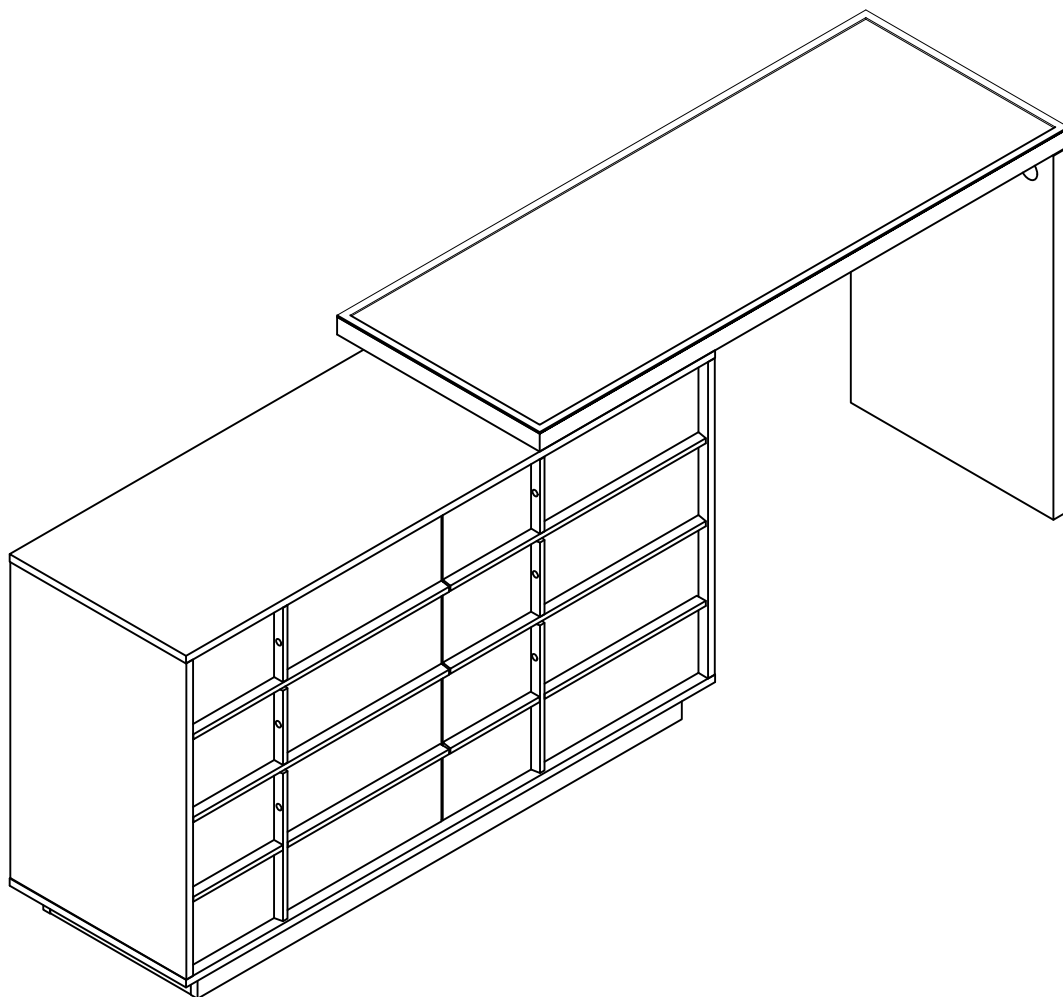
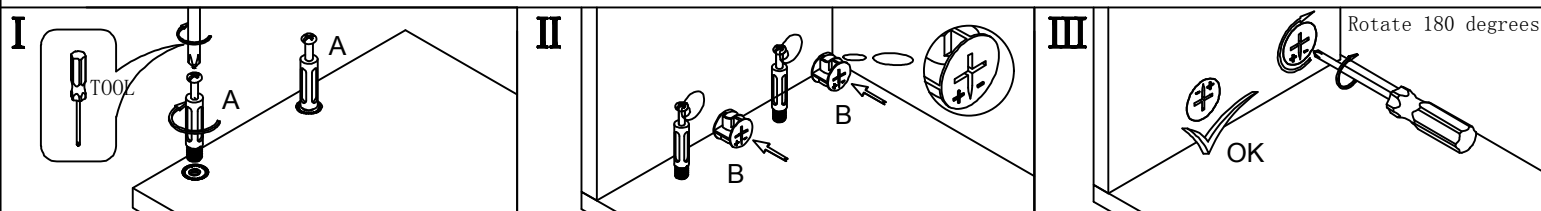




























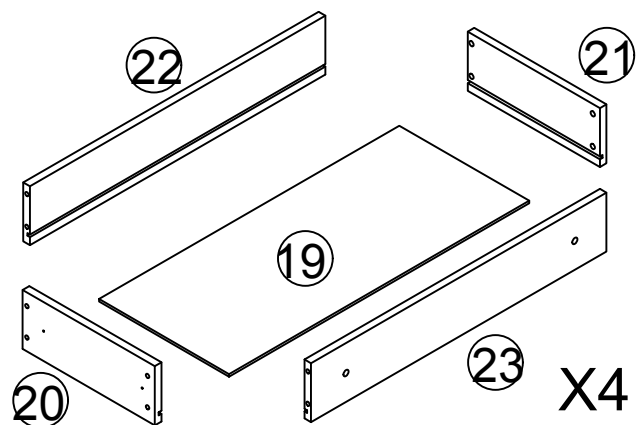


Disassembly and installation of accessories

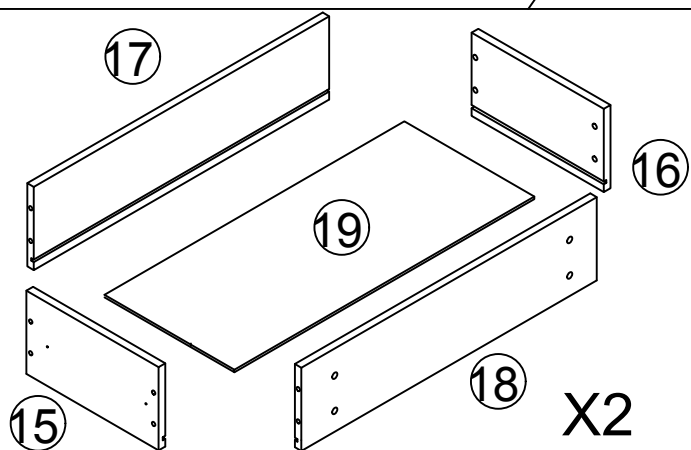








A 59+3 Ø6*35mm	B 59+3 Ø15*11.5mm	C 14 Ø8*40mm	D 72+3 M3.5*12mm	E 2 Ø6*38mm	F 4PCS M6*35mm	G 12 12"
H 16 M3.5*16mm	I 10 	J 8 	K 1 	L 32 M4*25mm	M 2 M8	N 2 M8
O 2 M8*75mm	P 1 	Q 48+2 M4*40mm	R 48+2 Ø10*10mm	S 16 M6*20mm	T 2 	V 2

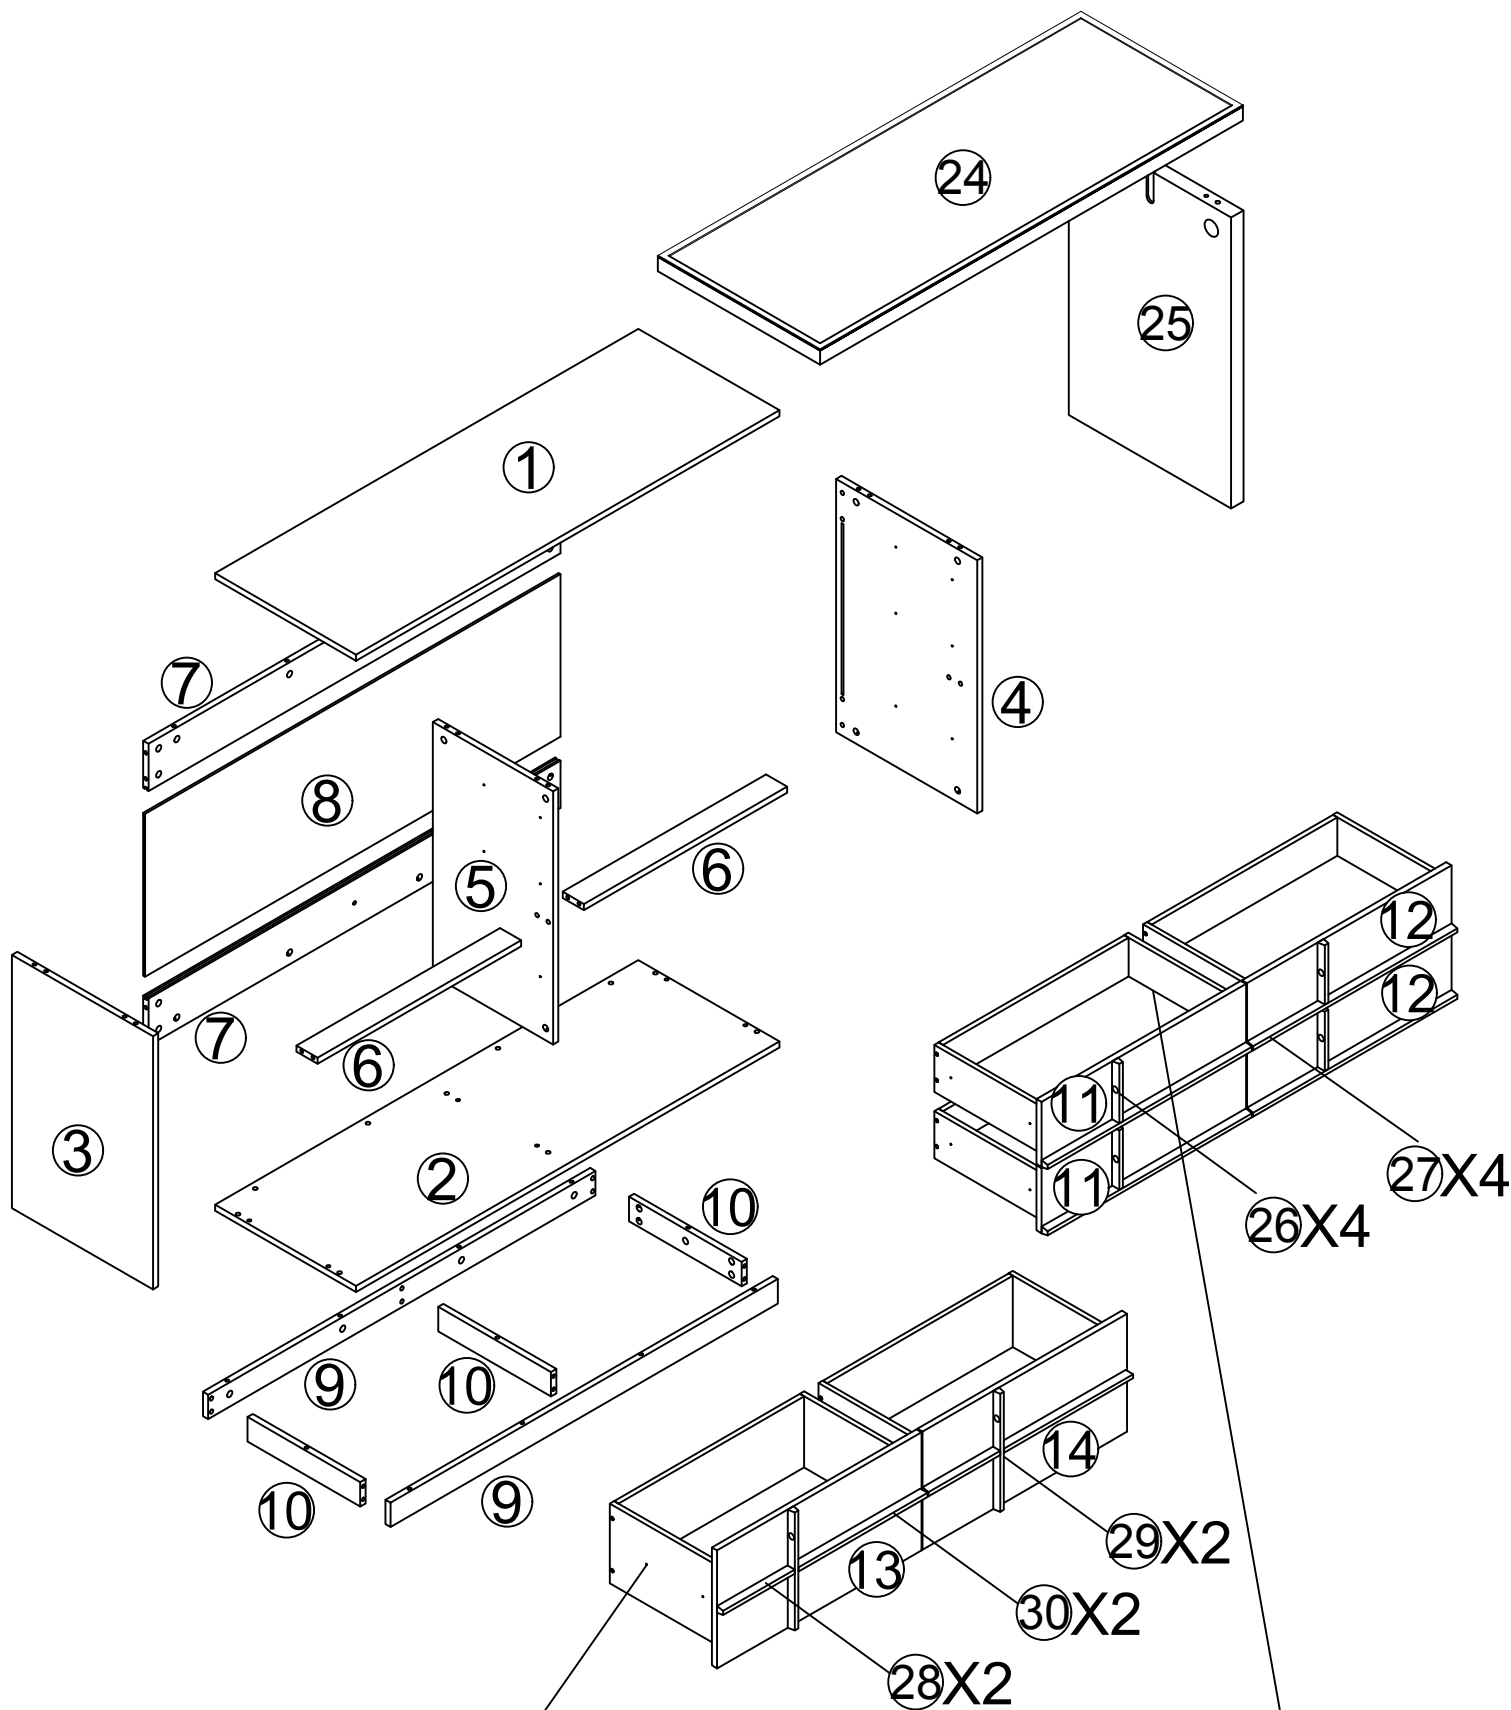

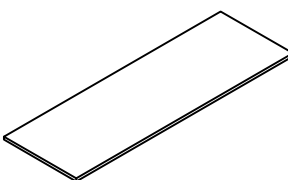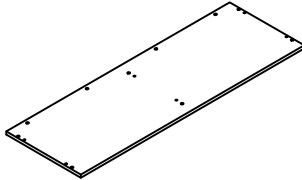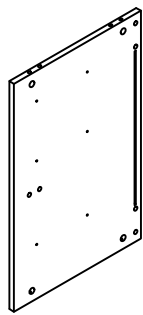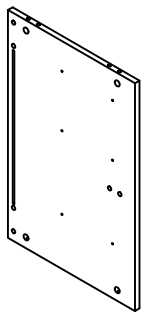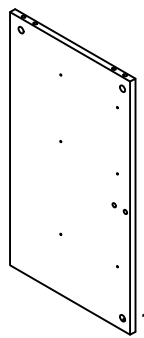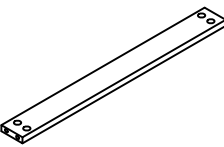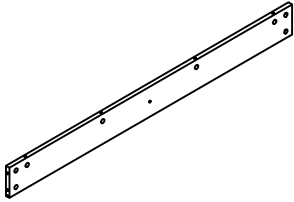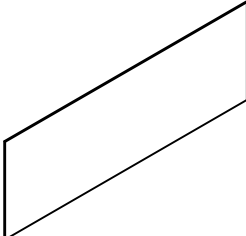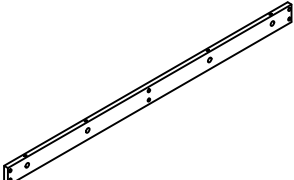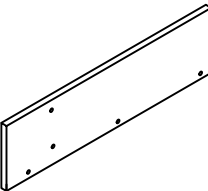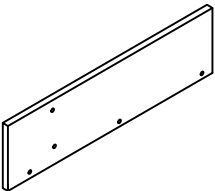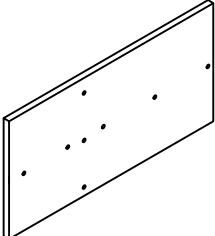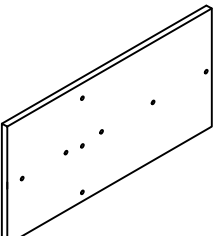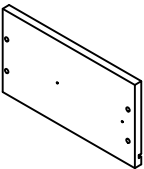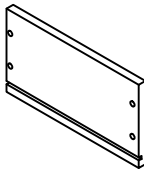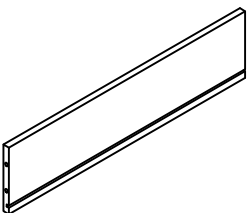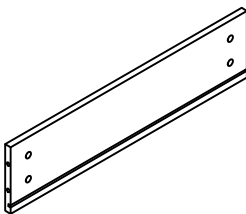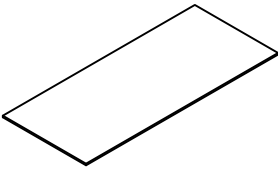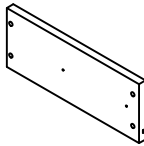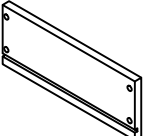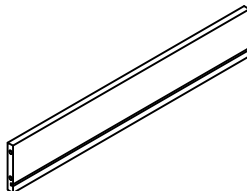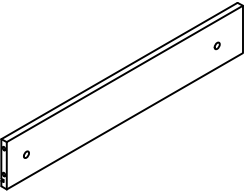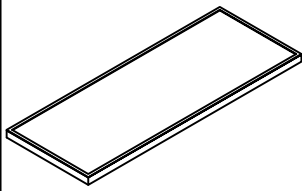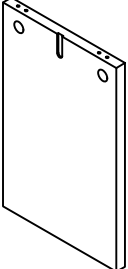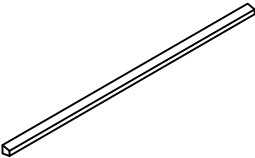1  1PCS	2  1PCS	3  1PCS	4  1PCS	5  1PCS
6  2PCS	7  2PCS	8  1PCS	9  2PCS	10  3PCS
11  2PCS	12  2PCS	13  1PCS	14  1PCS	15  2PCS
16  2PCS	17  2PCS	18  2PCS	19  6PCS	20  4PCS
21  4PCS	22  4PCS	23  4PCS	24  1PCS	25  1PCS
26  4PCS	27  4PCS	28  2PCS	29  2PCS	30  2PCS




STEP 1

Make sure the screws are loose before pressing

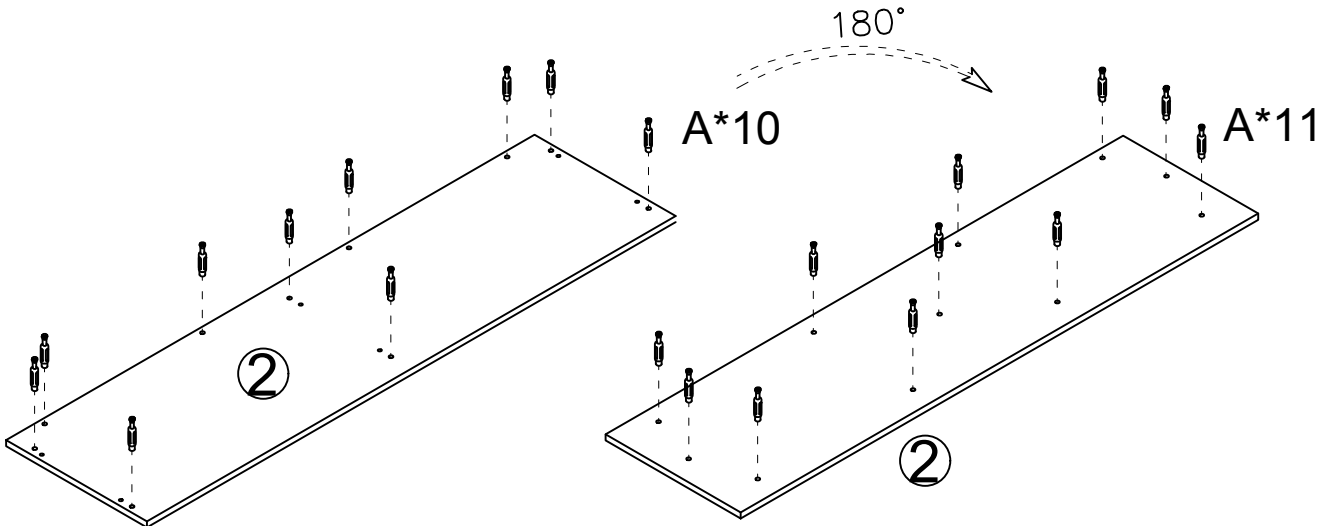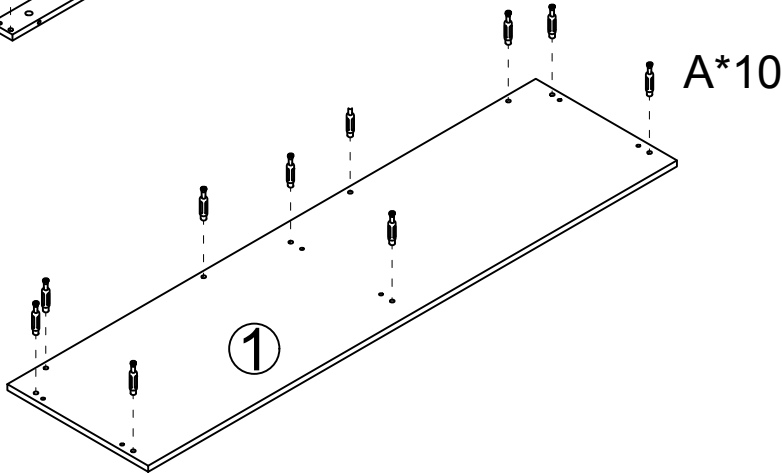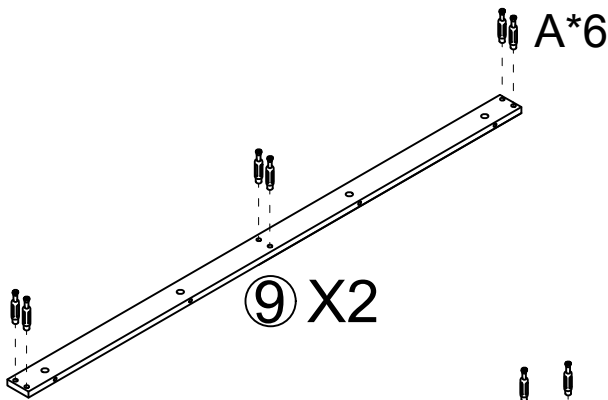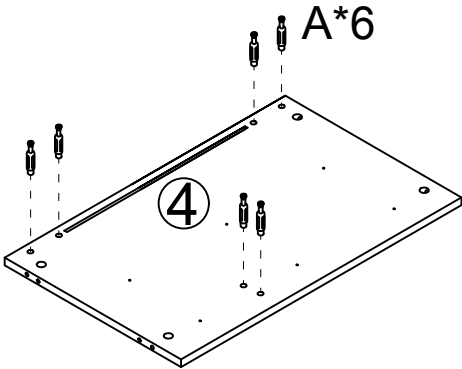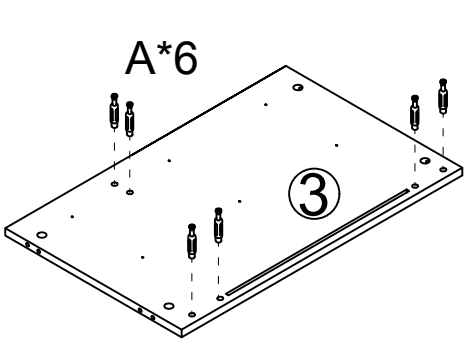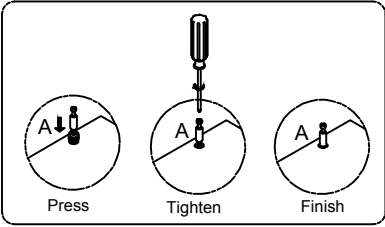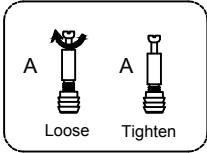


A	55PCS
	
Ø6*35mm	



STEP 2

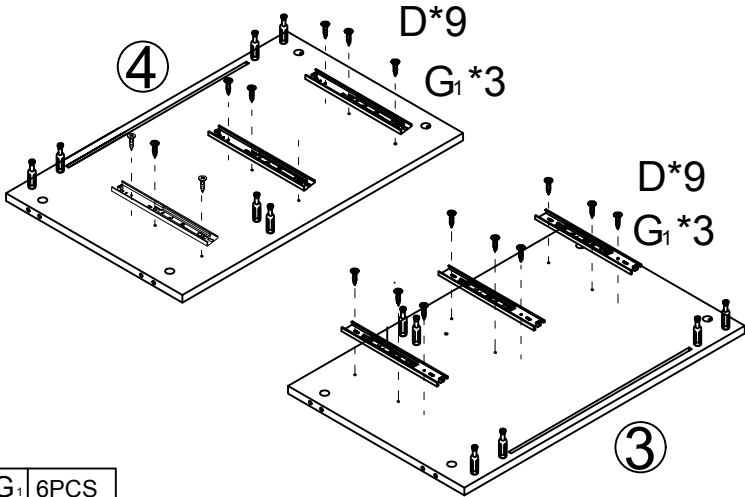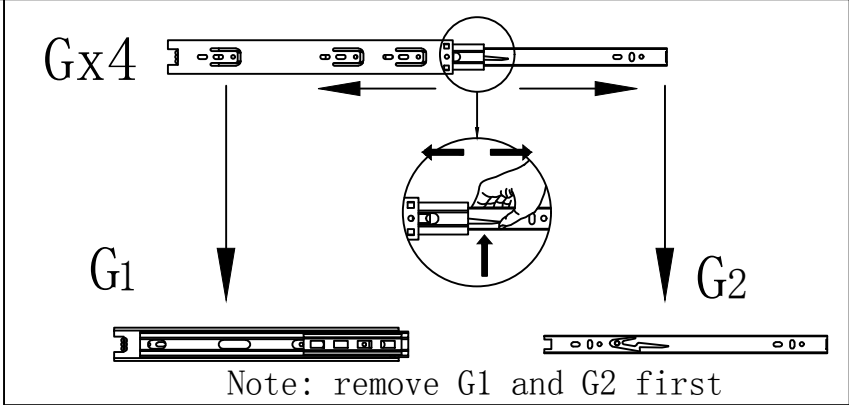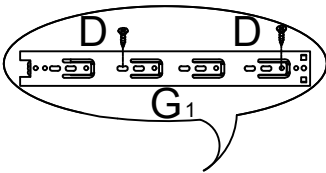


D 18PCS	G ₁ 6PCS
	
M3.5*12mm	12"





STEP 3

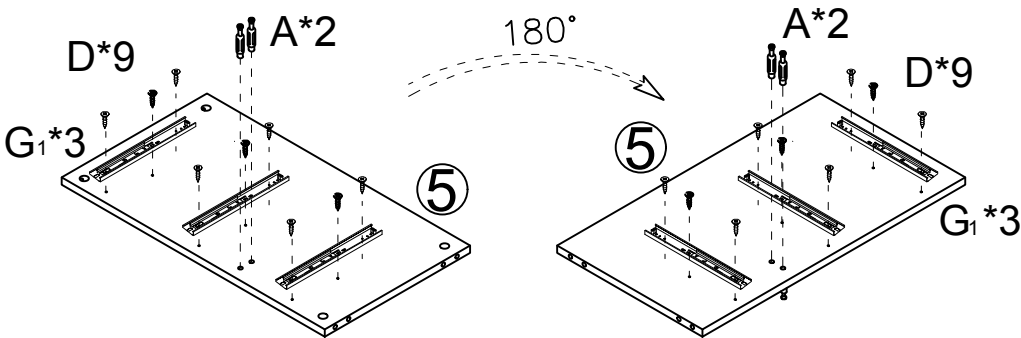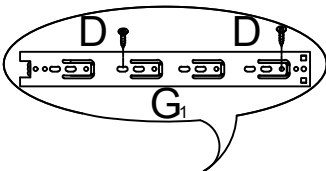

D 18PCS	G ₁ 6PCS	A 4PCS
		
M3.5*12mm	12"	Ø6*35mm





STEP 4

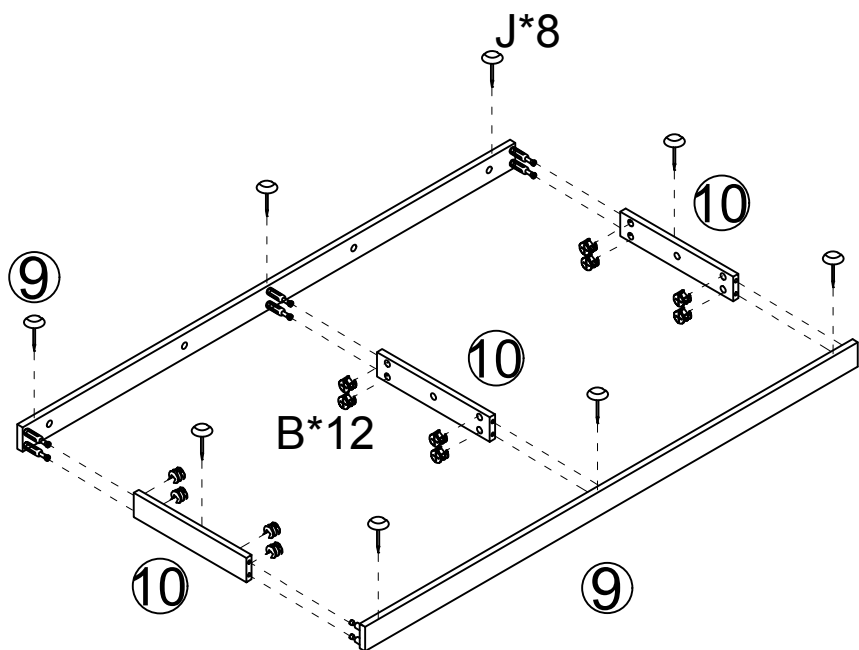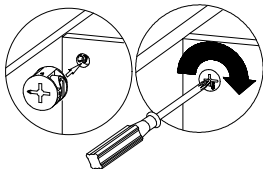


B	12PCS	J	8PCS
			
Ø 15*11.5mm			

STEP 5

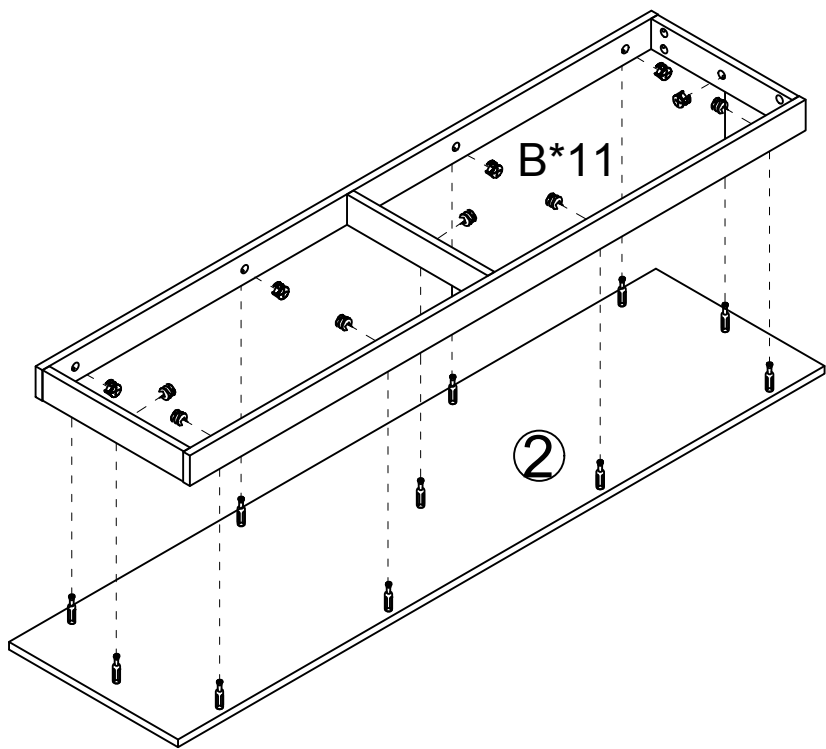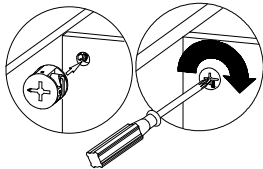


B	11PCS
	
Ø 15*11.5mm	

STEP 6

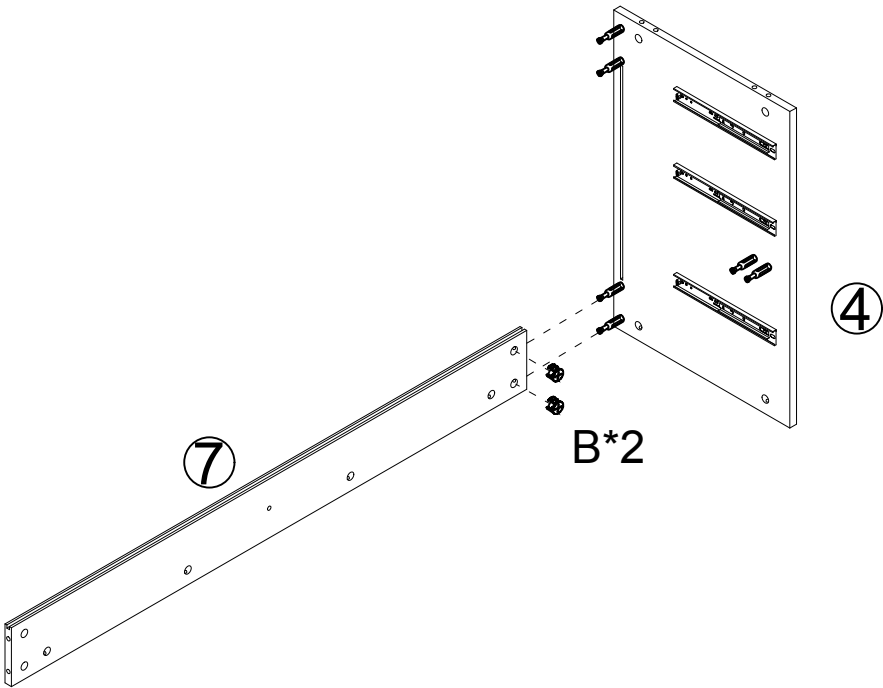


B	2PCS
	
Ø 15*11.5mm	

STEP 7

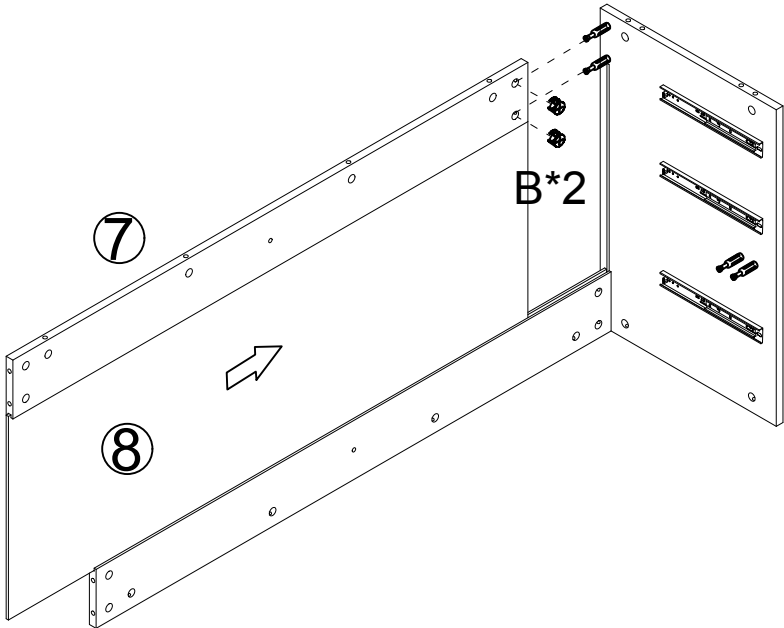


B	2PCS
	
Ø 15*11.5mm	

STEP 8

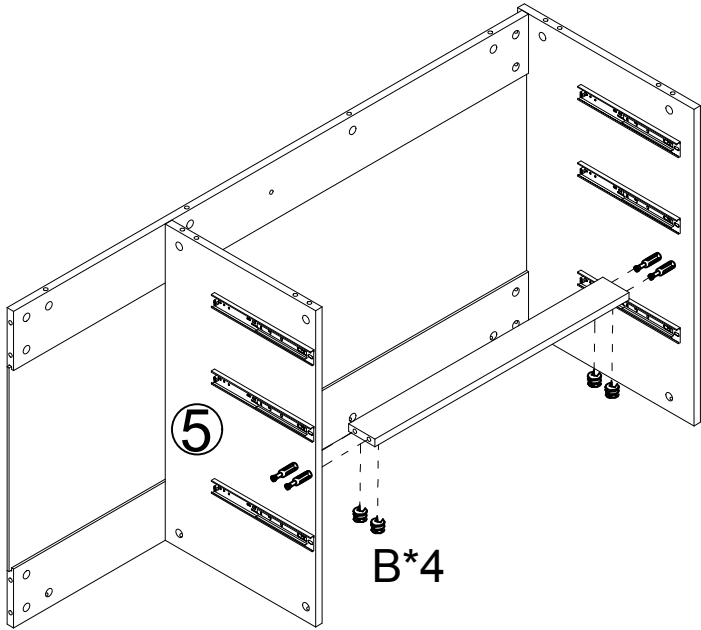


B	4PCS
	
Ø 15*11.5mm	

STEP 9

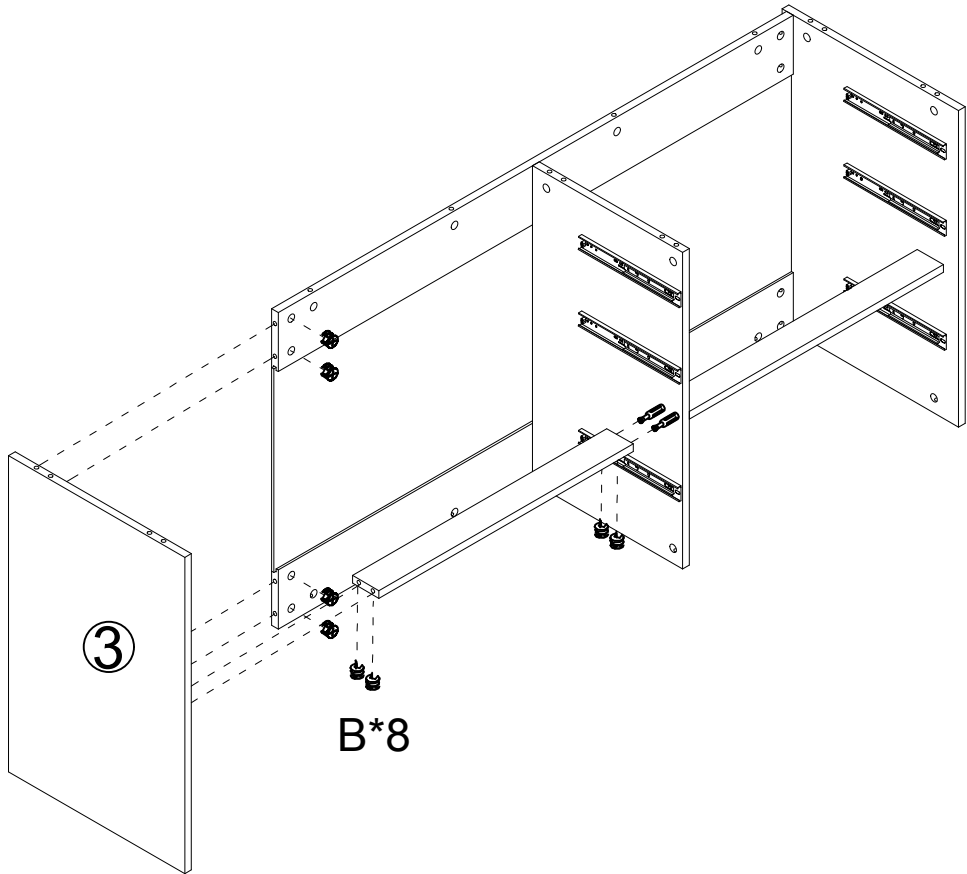


B	8PCS
	
Ø 15*11.5mm	

STEP 10

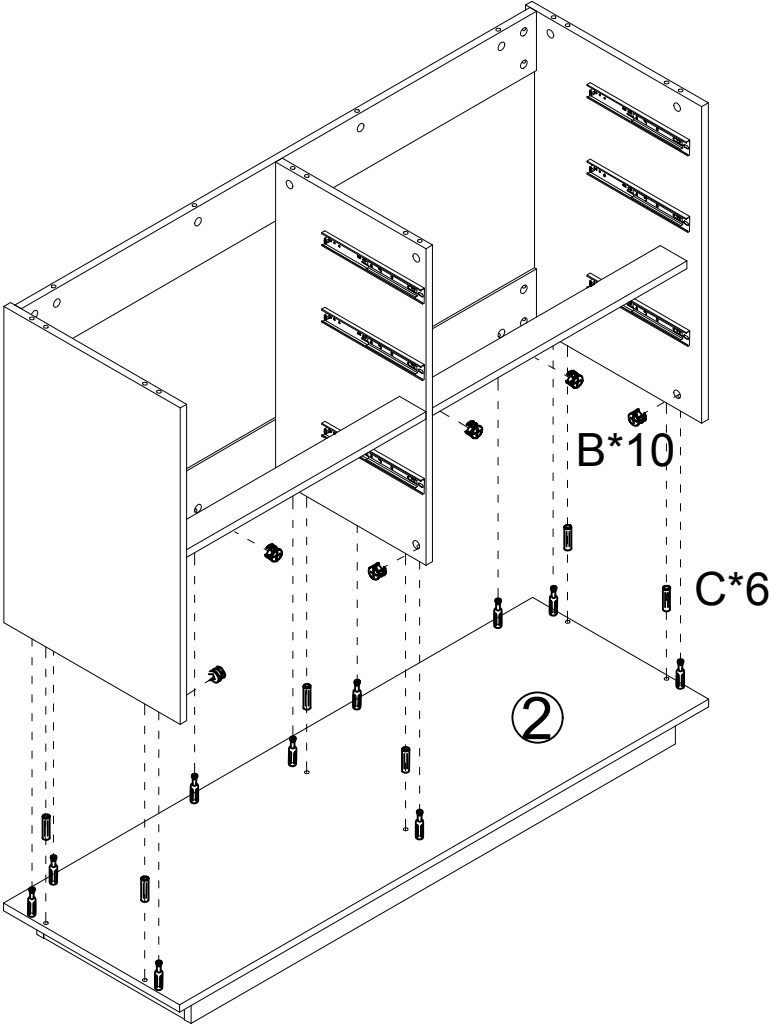



B	10PCS	C	6PCS
			
Ø 15*11.5mm		Ø8*40mm	

STEP 11

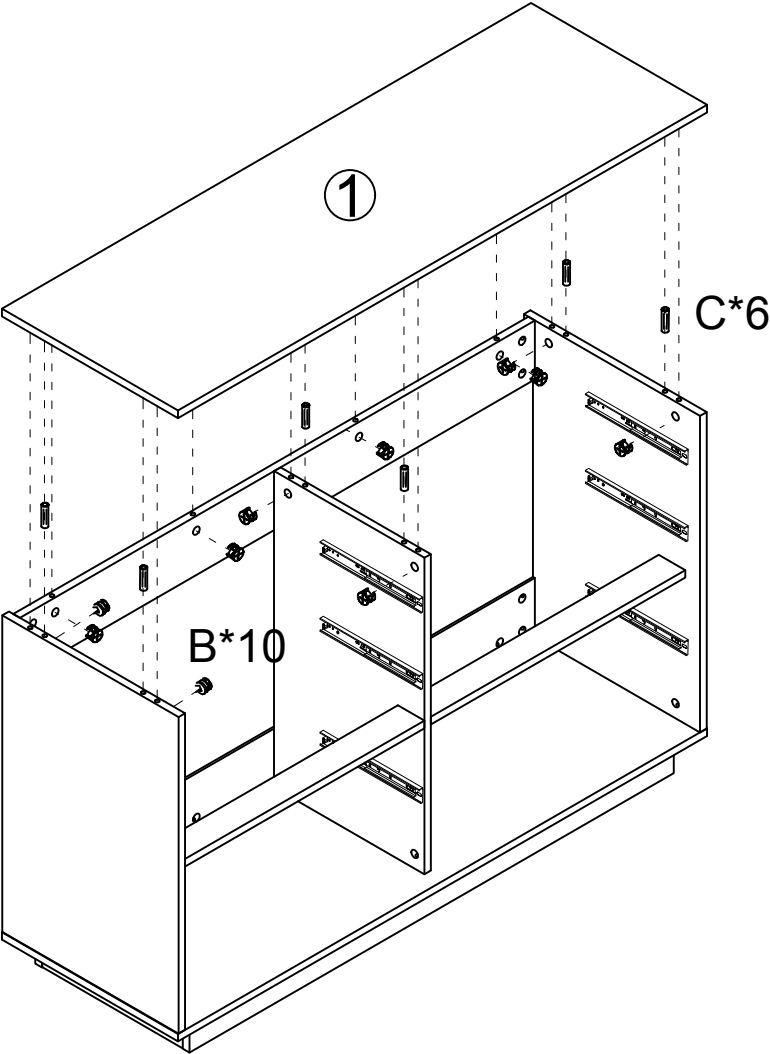


B	10PCS	C	6PCS
			
Ø 15*11.5mm		Ø8*40mm	

STEP 12

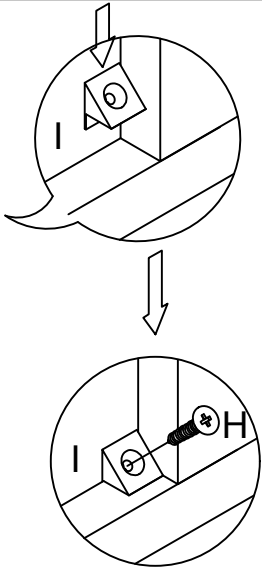
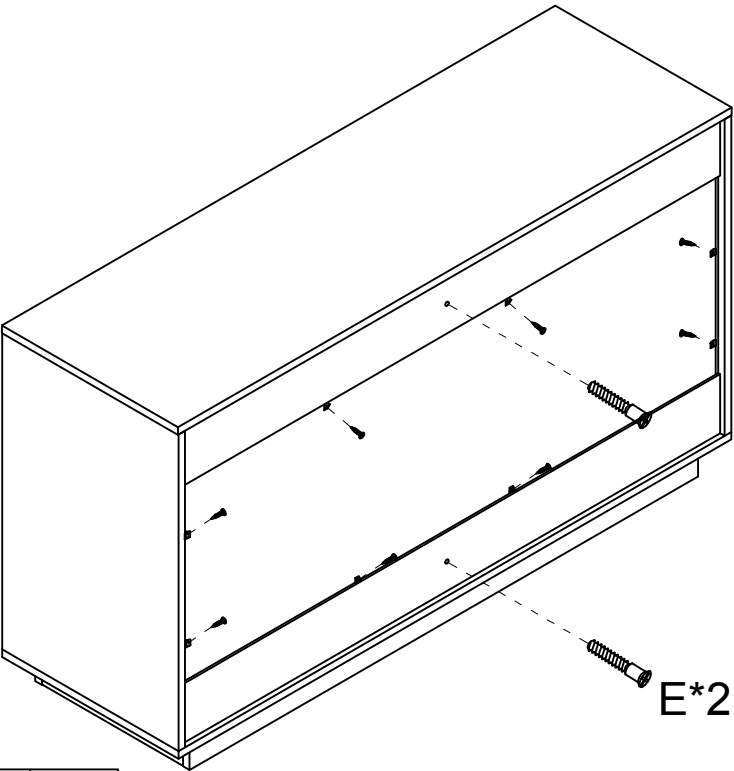


E 2PCS	H 8PCS	I 8PCS
		
Ø6*38mm	M3.5*16mm	





STEP 13

oblique angle

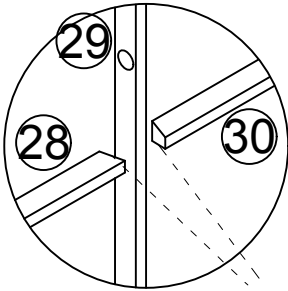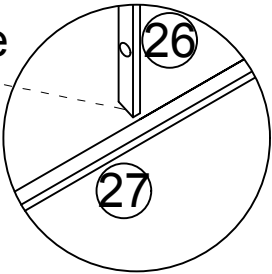


oblique angle

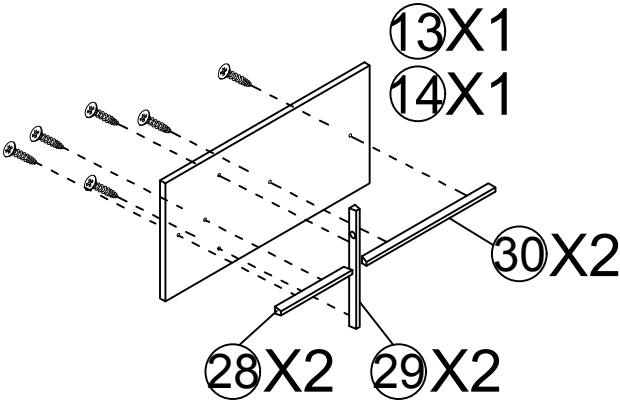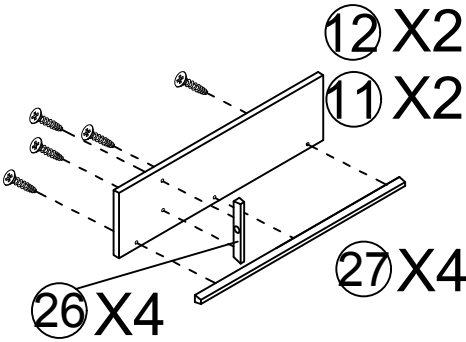


L 32


M4*25mm




STEP 14

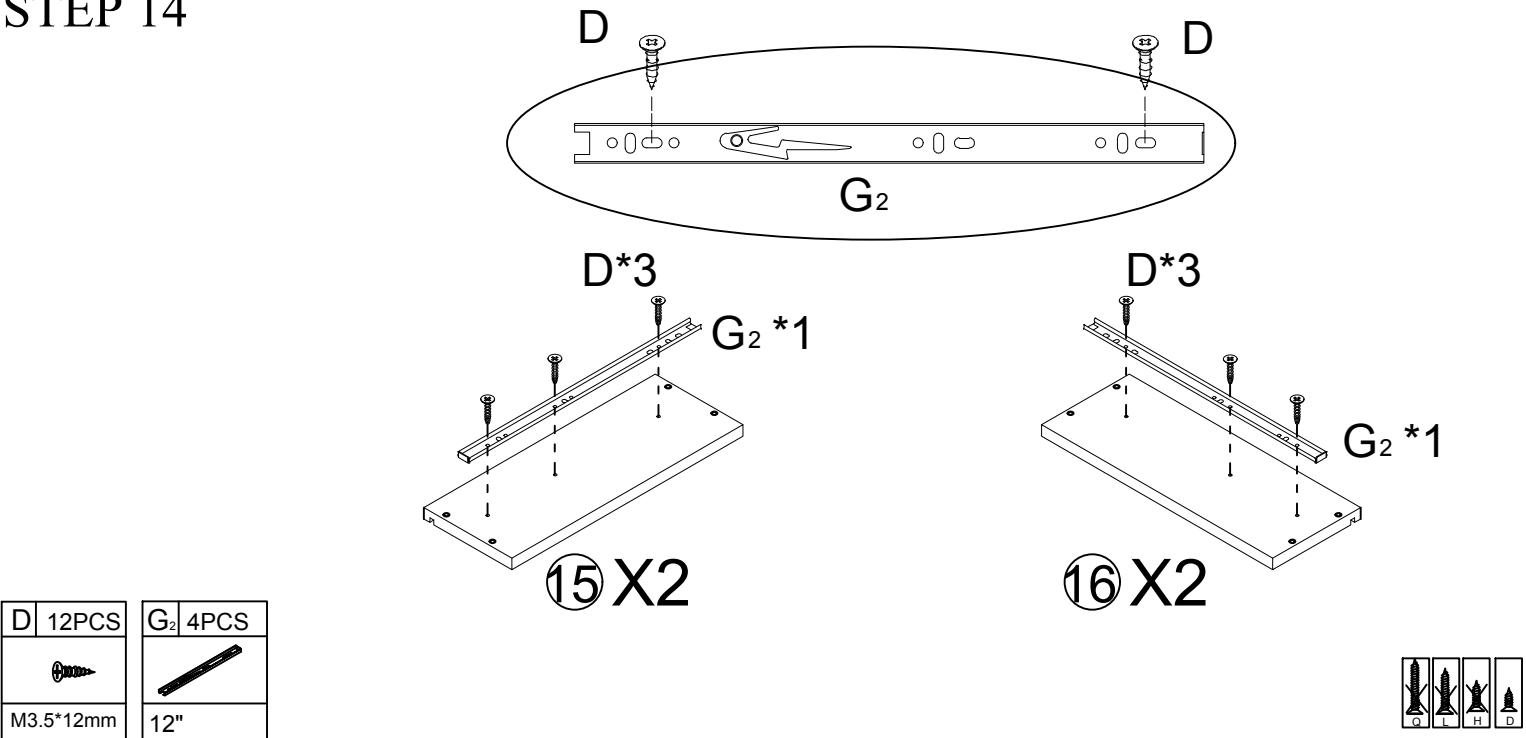


STEP 15

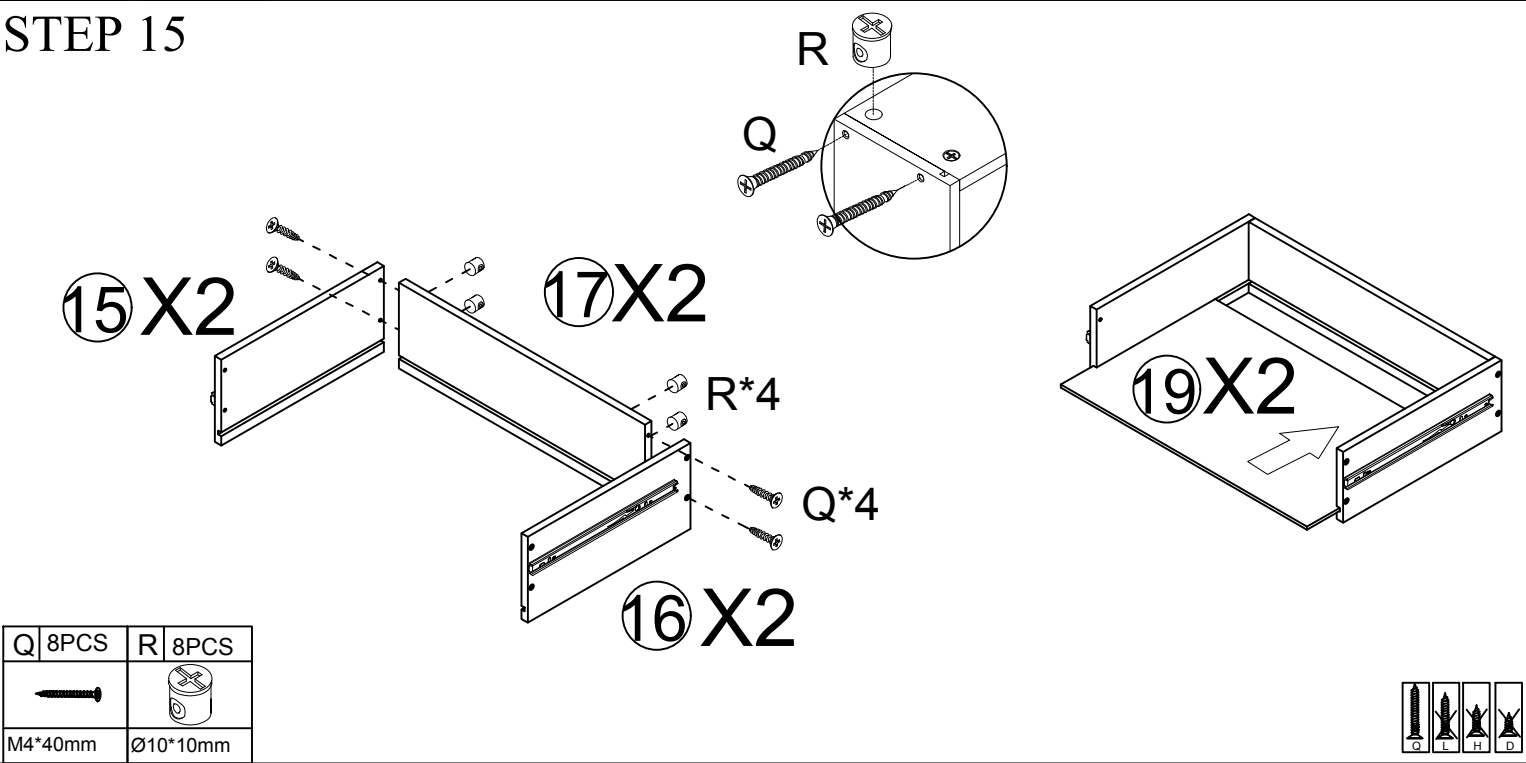


STEP 16

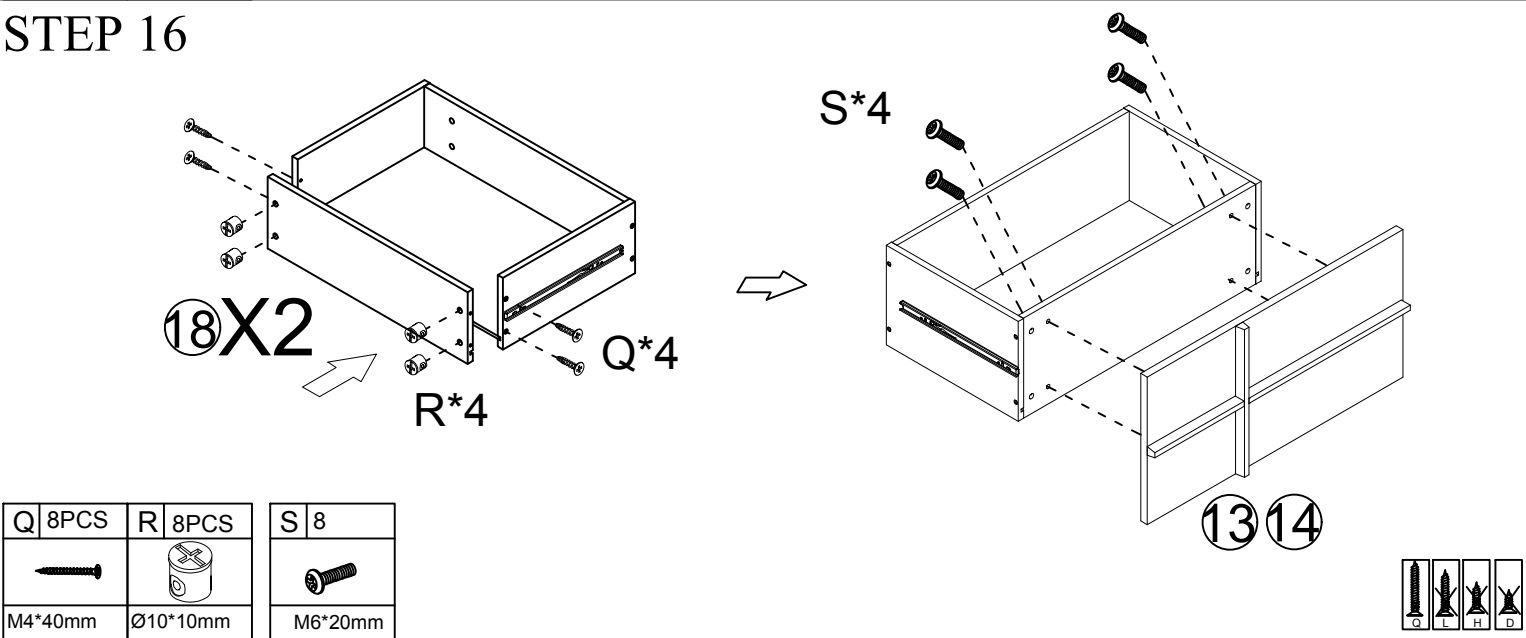


STEP 17

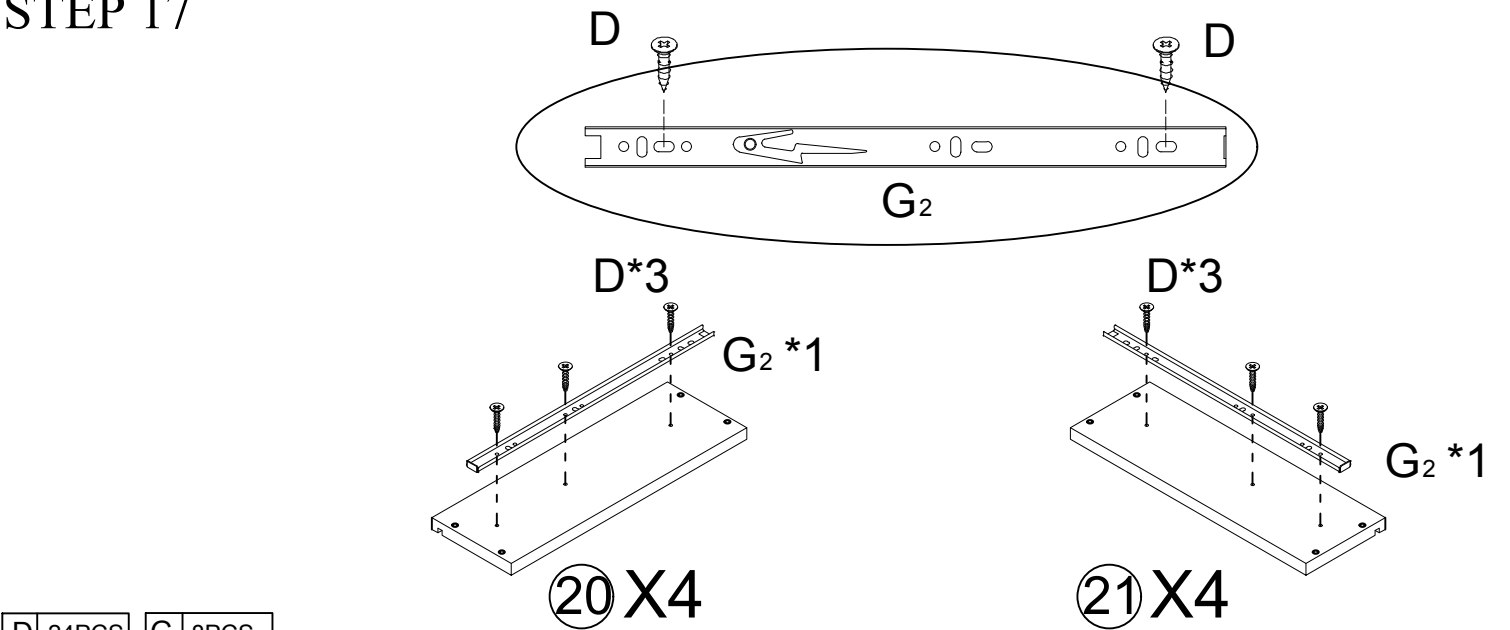


D	24PCS	G ₂	8PCS
			
M3.5*12mm		12"	




STEP 18

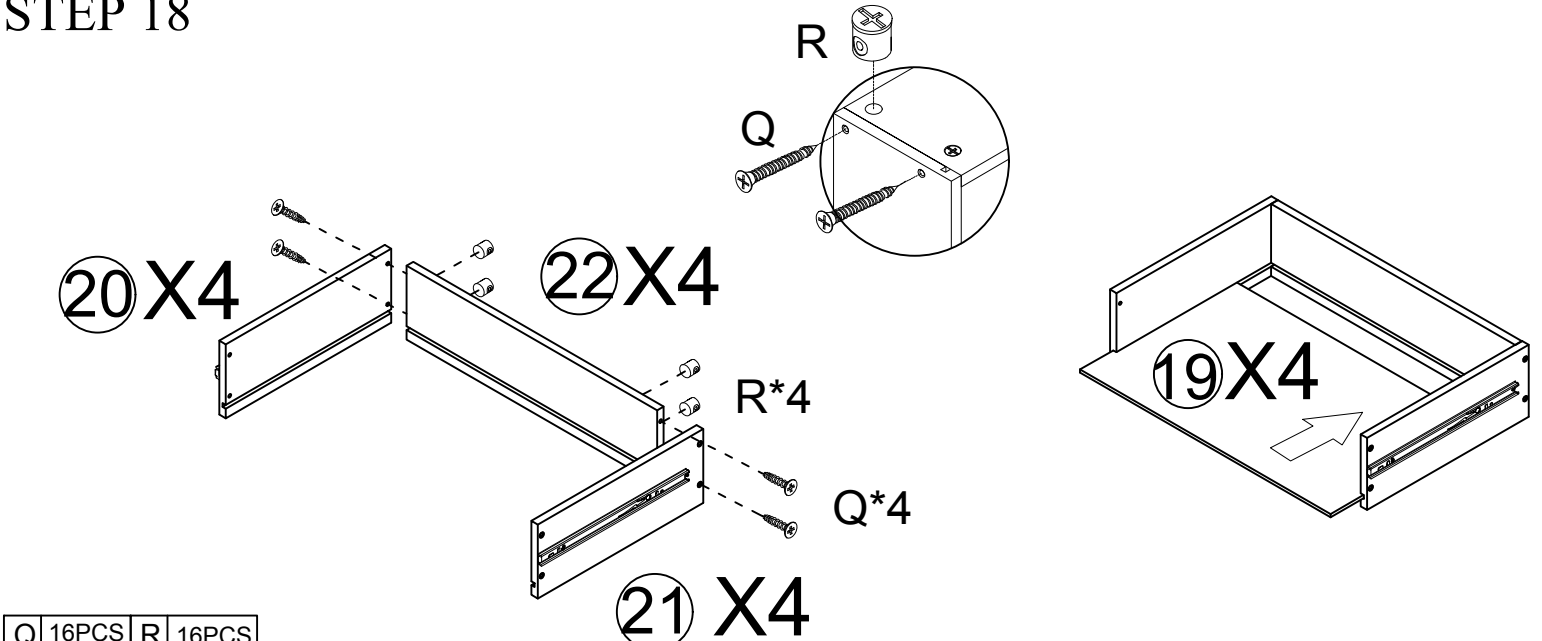

Q	16PCS	R	16PCS
			
M4*40mm		Ø10*10mm	




STEP 19

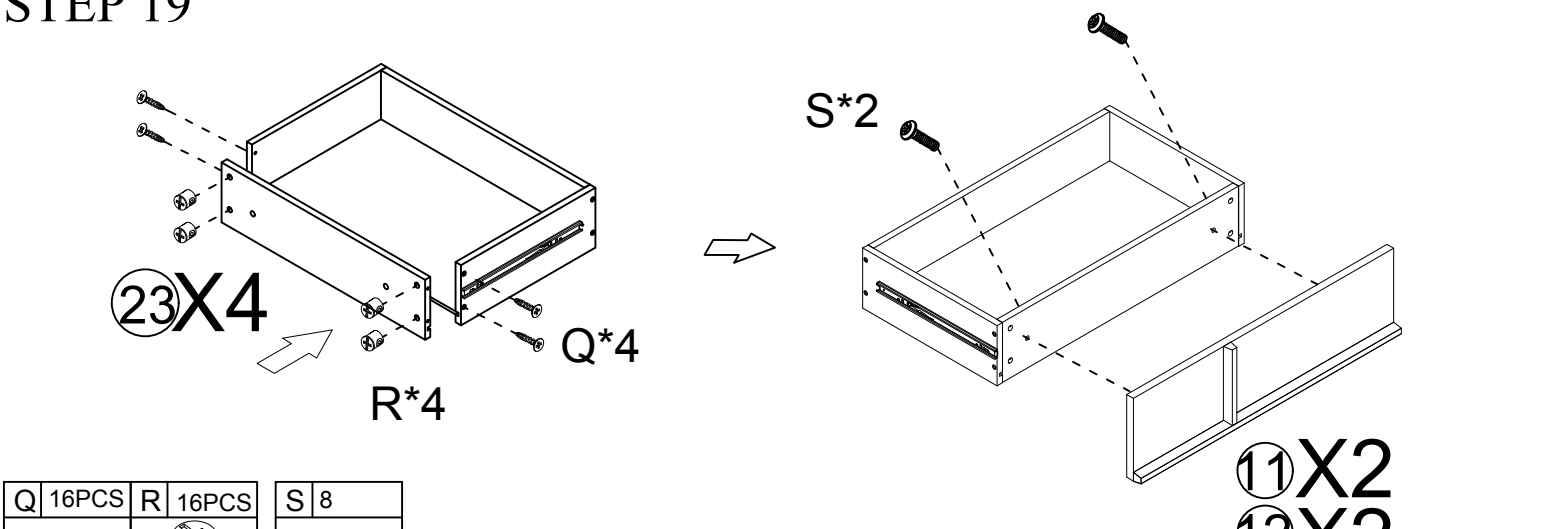


Q	16PCS	R	16PCS	S	8
					
M4*40mm		Ø10*10mm		M6*20mm	




STEP 20

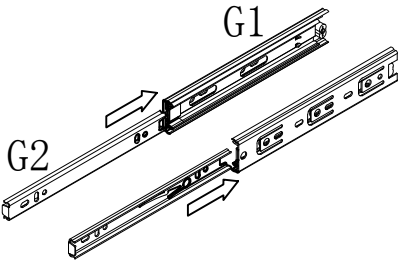


Note: align G1 with G2
and push it in

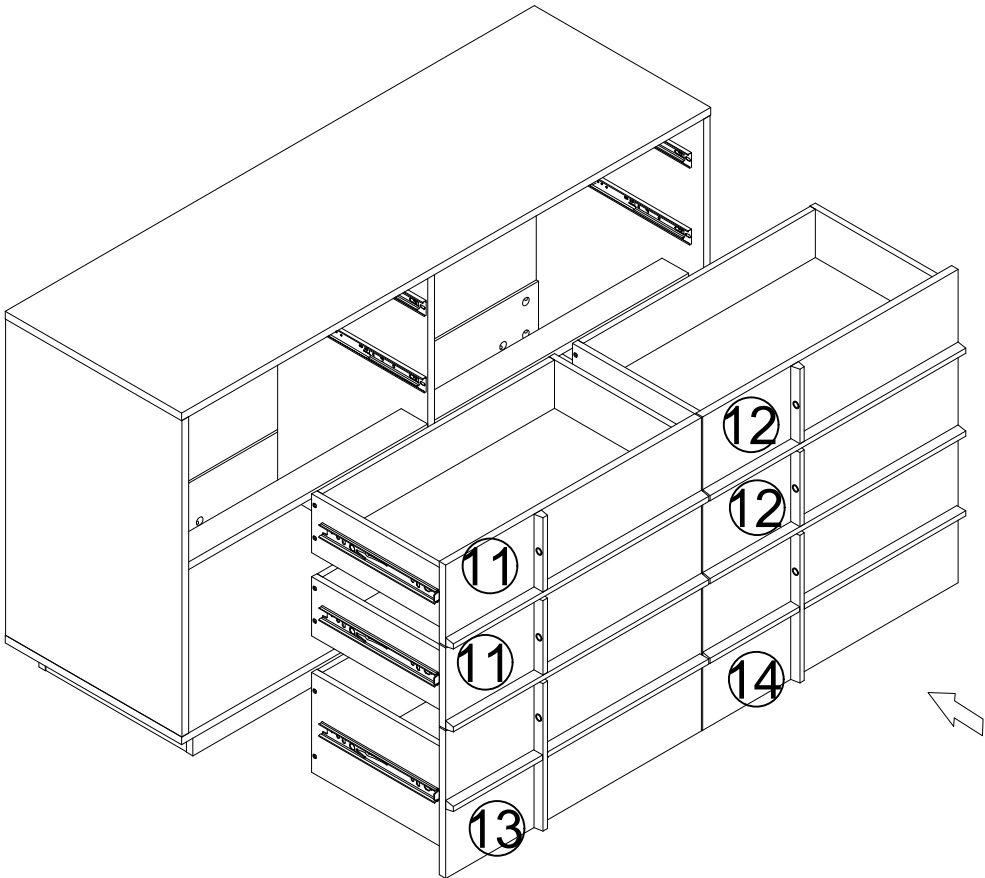


STEP 21

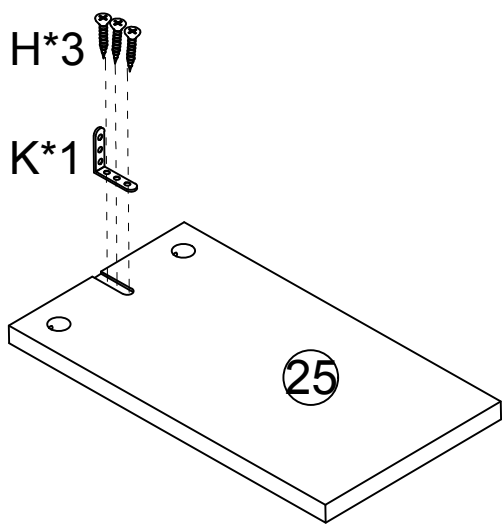

K	1PCS	H	2PCS
			
		M4*25mm	




STEP 22

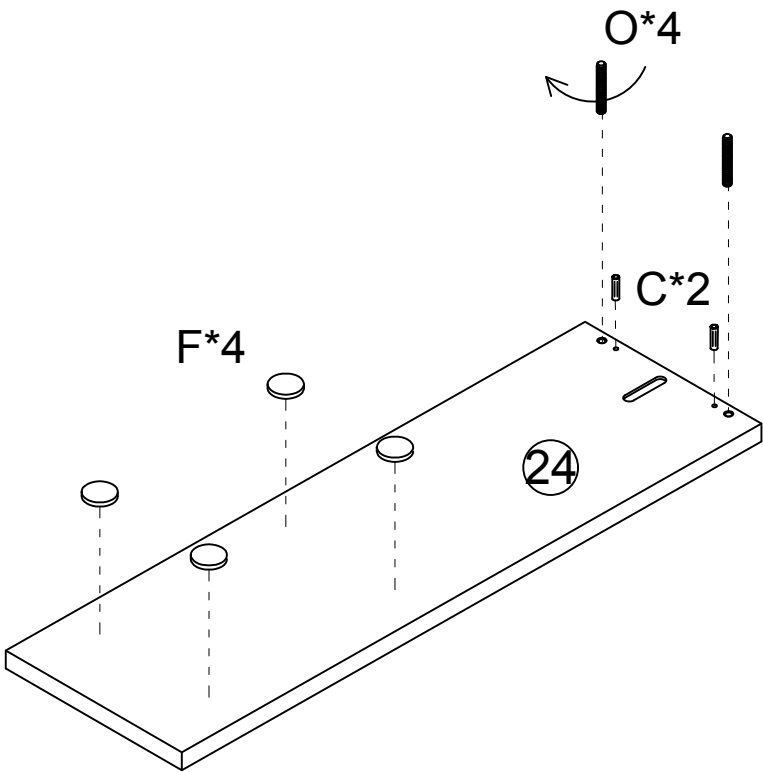


C	2	F	4	O	2
					
Ø8*40mm		Ø40*3mm		M8*75mm	

STEP 23

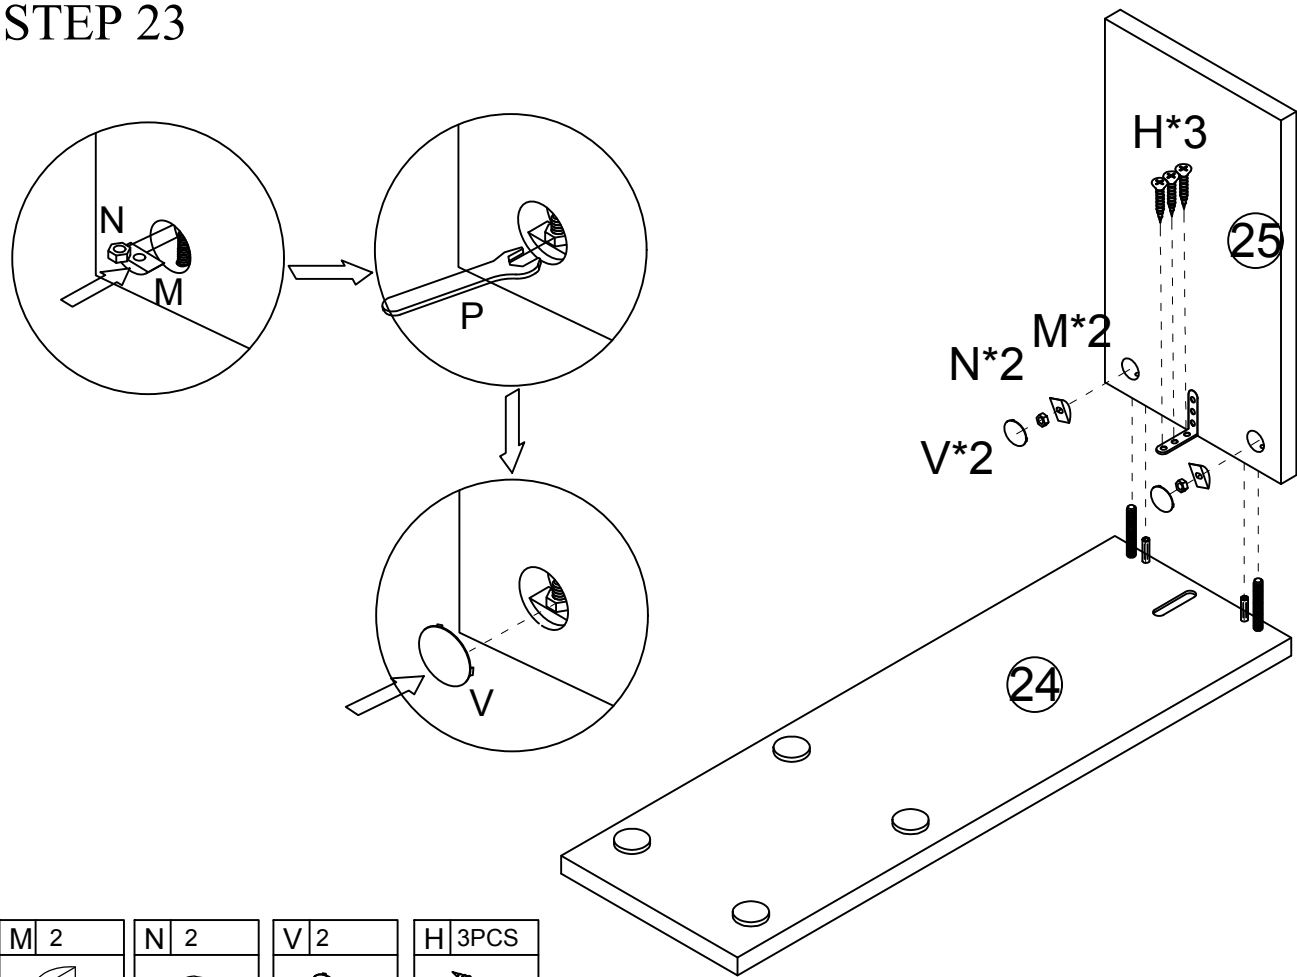

M 2	N 2	V 2	H 3PCS
			
M8	M8		M3.5*16mm



STEP 24

