

ASSEMBLY INSTRUCTION



File Cabinet

INTRODUCTION











Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.











PRECAUTIONS

1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.



- * Please be sure to follow the installation steps in the manual to avoid unnecessary losses caused by improper installation.
- * If you need further assistance, please contact the customer service online.

Parts List

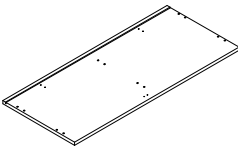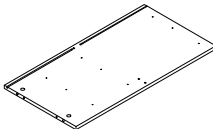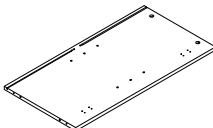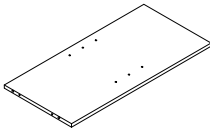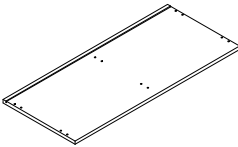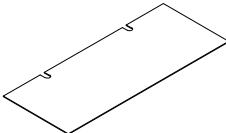
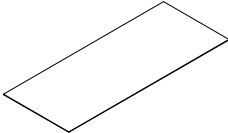
ID	Parts	QTY
1		1
2		1
3		1
4		1
5		1
6		1
7		1
8		1
9		1
10		1

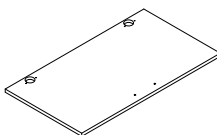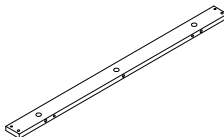





ID	Parts	QTY
11		1
12		2
13		2
14		2
15		2
16		2
17		2
18		3
19		1
20		1

Parts List


ID	Parts	QTY
21		1
22		1

Hardware List

ID	Parts	QTY
A	Ø6*33.5mm 	40+4
B	Ø15*9.5mm 	40+4
C	Ø6*30mm 	26+2
D		1
E	Ø3.5*12mm 	38+3
F	Ø5*50mm 	6+1
G		4
H		4
I		2
J	Ø4*14mm 	12+1

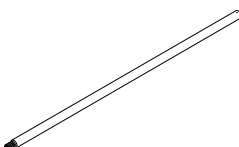ID	Parts	QTY
K		4
L	M4*19mm 	8
M	Ø4*38mm 	12+1
N		2
O		12+1
P		28+2
Q		1
R	 Ø3*15mm 	12+1
S1x2	Ø4x12mm  Ø6x30mm  Ø4x35mm 	1 SET
S2x4		
S3x2		
S4x2		
CL		
CR		
DL		
DR		3 SET

Parts List

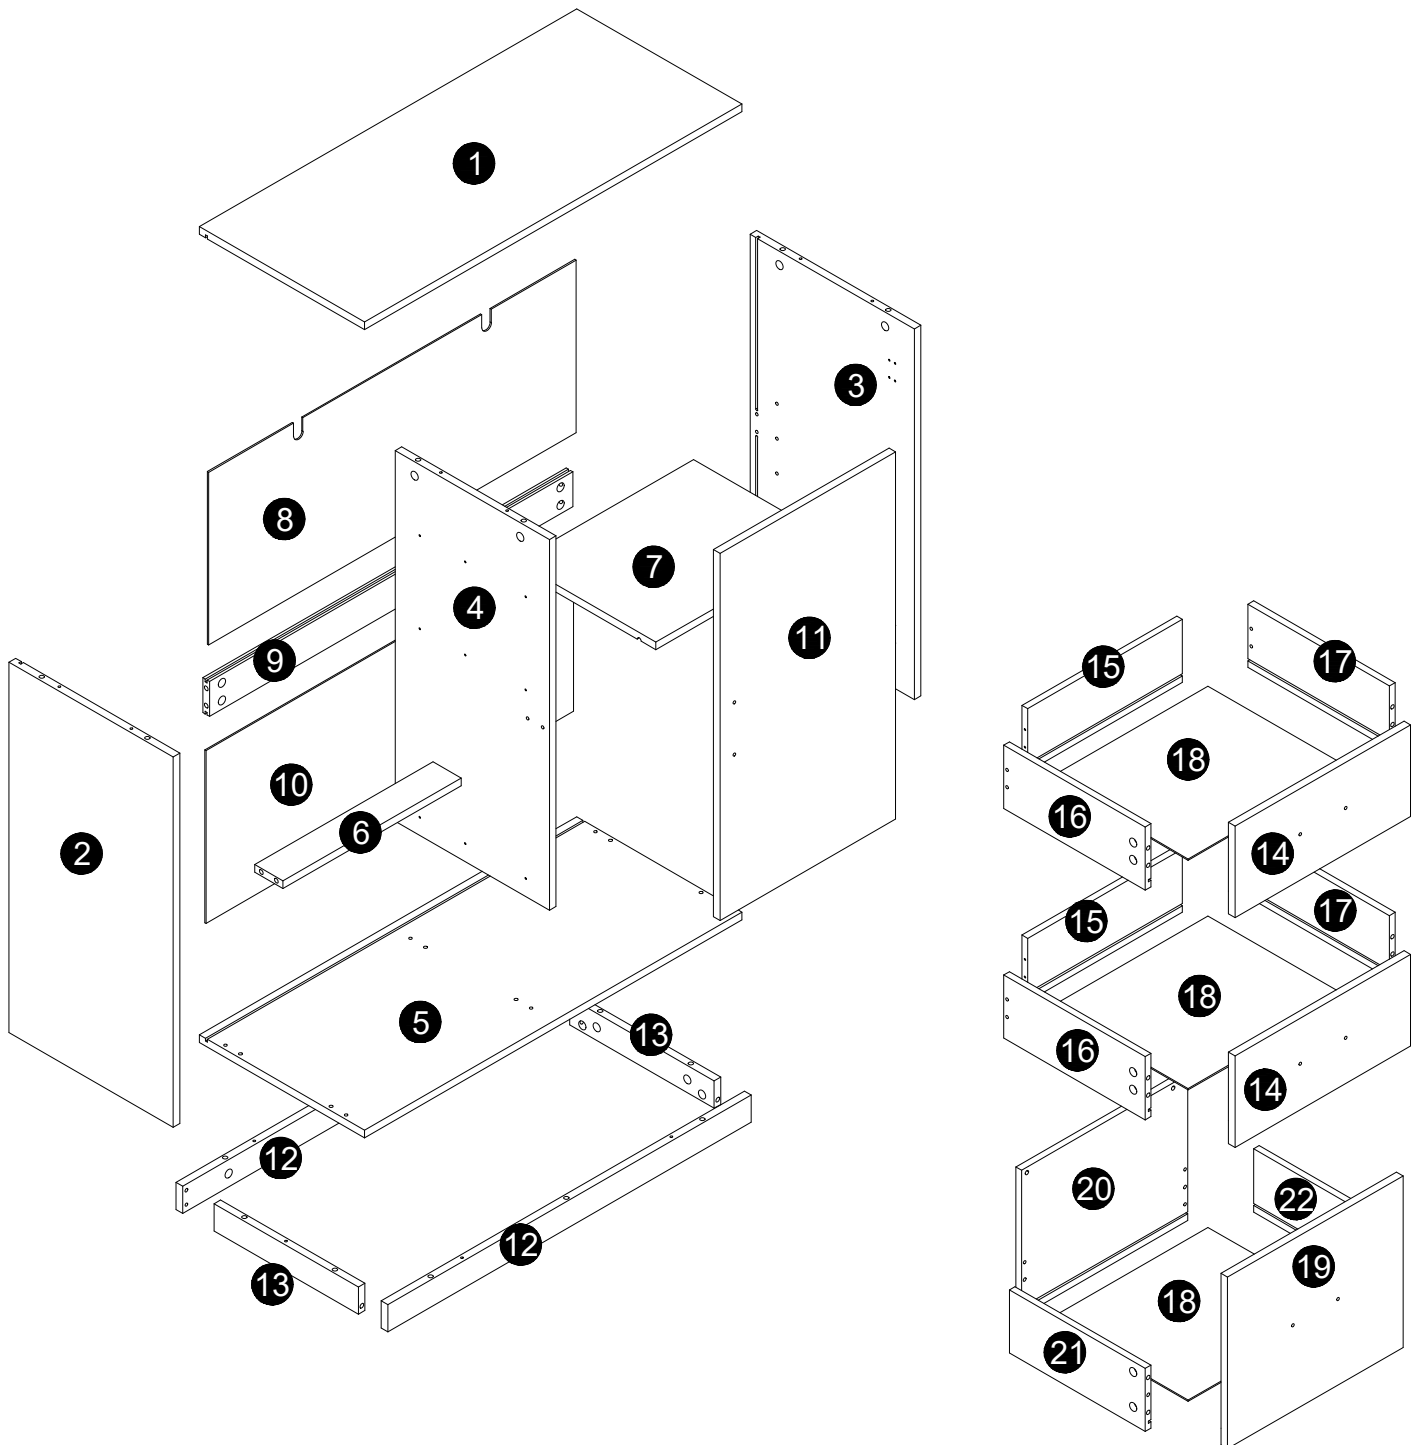


STEP 1

CL **CL** X3



CR **CR** X3

 **E** X18

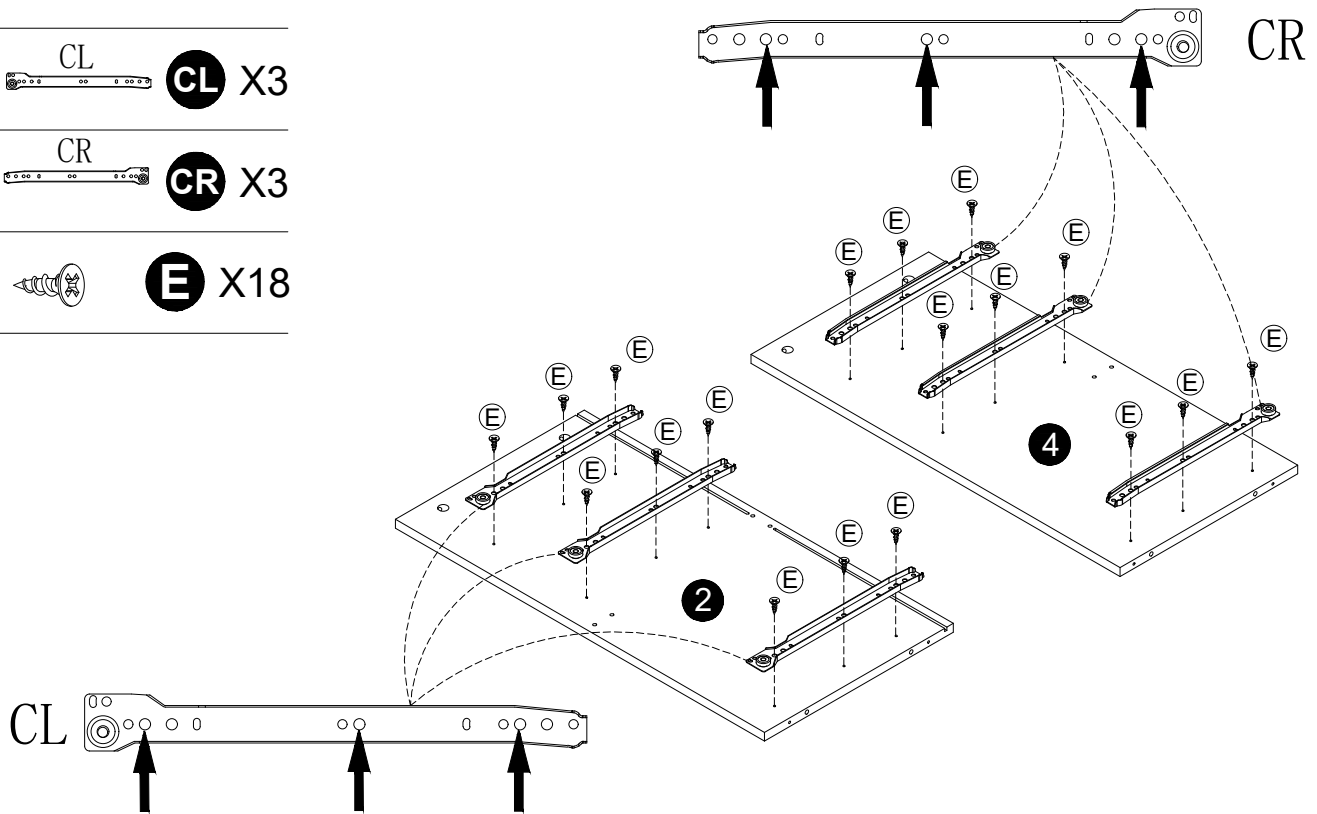




STEP 2

 **A** X6

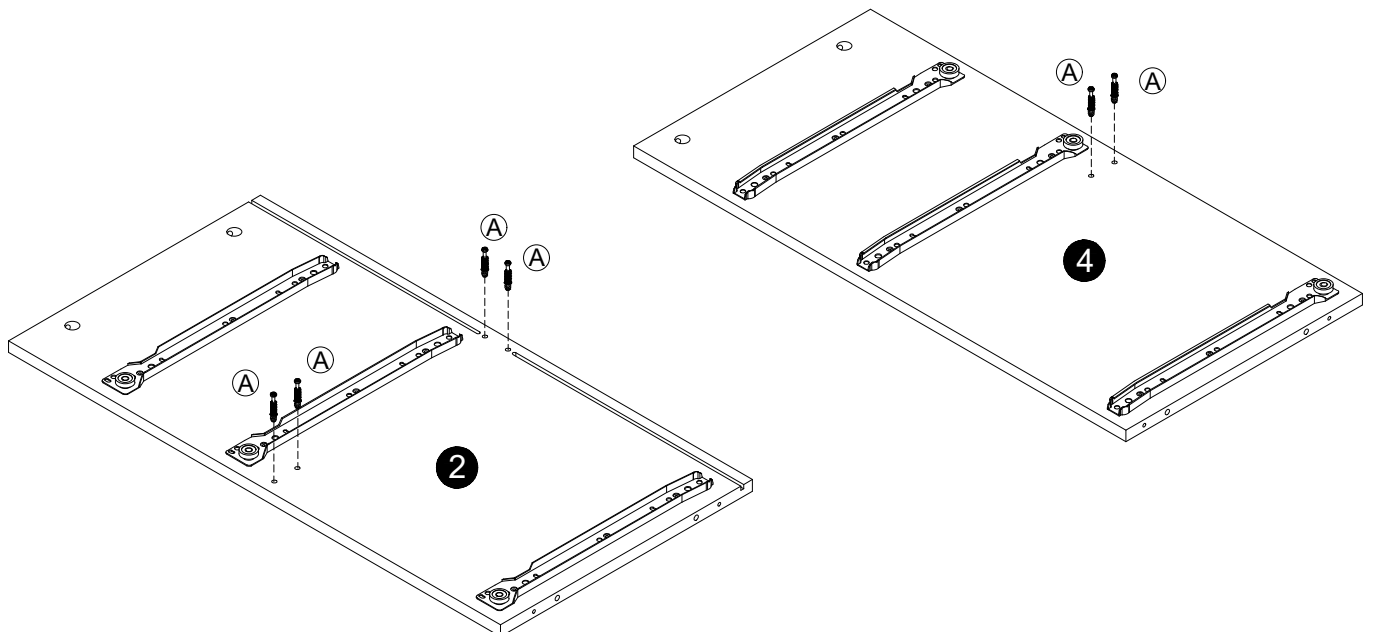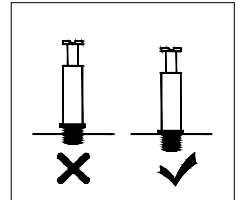



STEP 3

 **A** X12

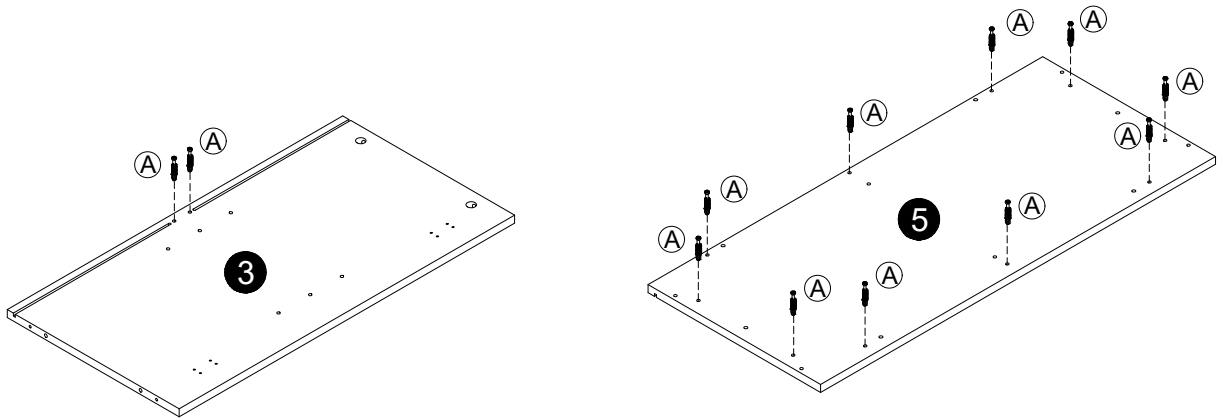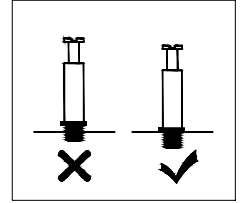

STEP 4



 **B** X2

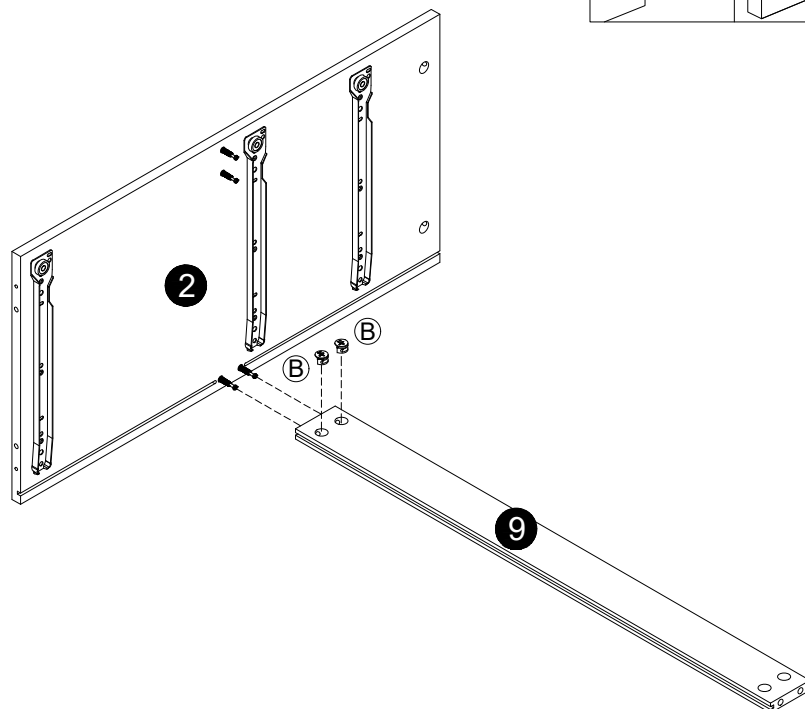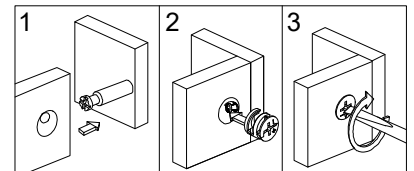

STEP 5



(B) X4

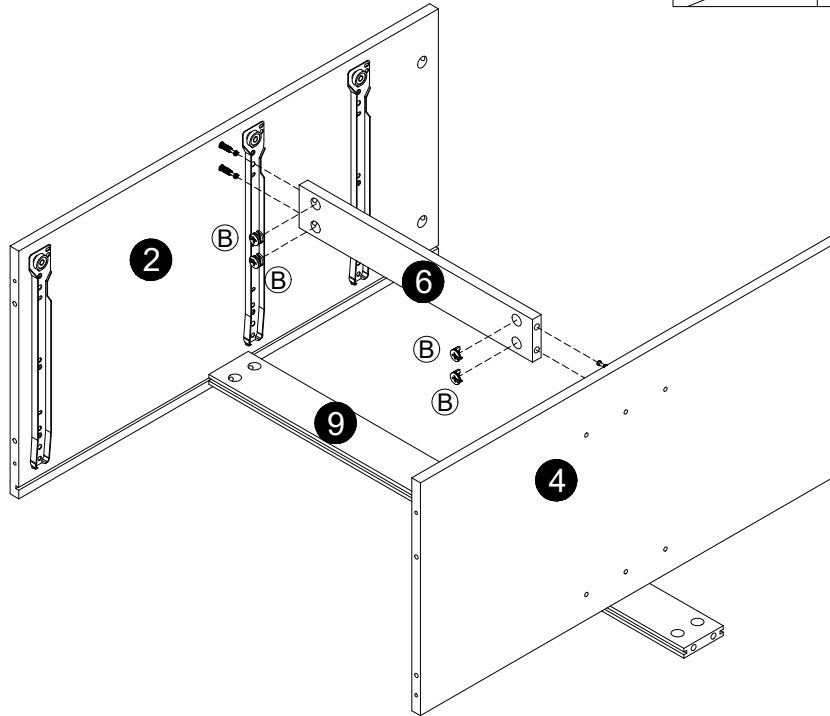
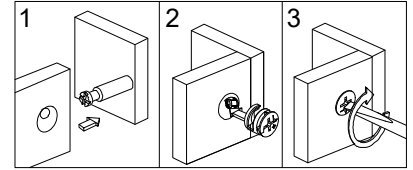


CAUTION: Heavy! You may need assistance with this step

STEP 6




(B) X2

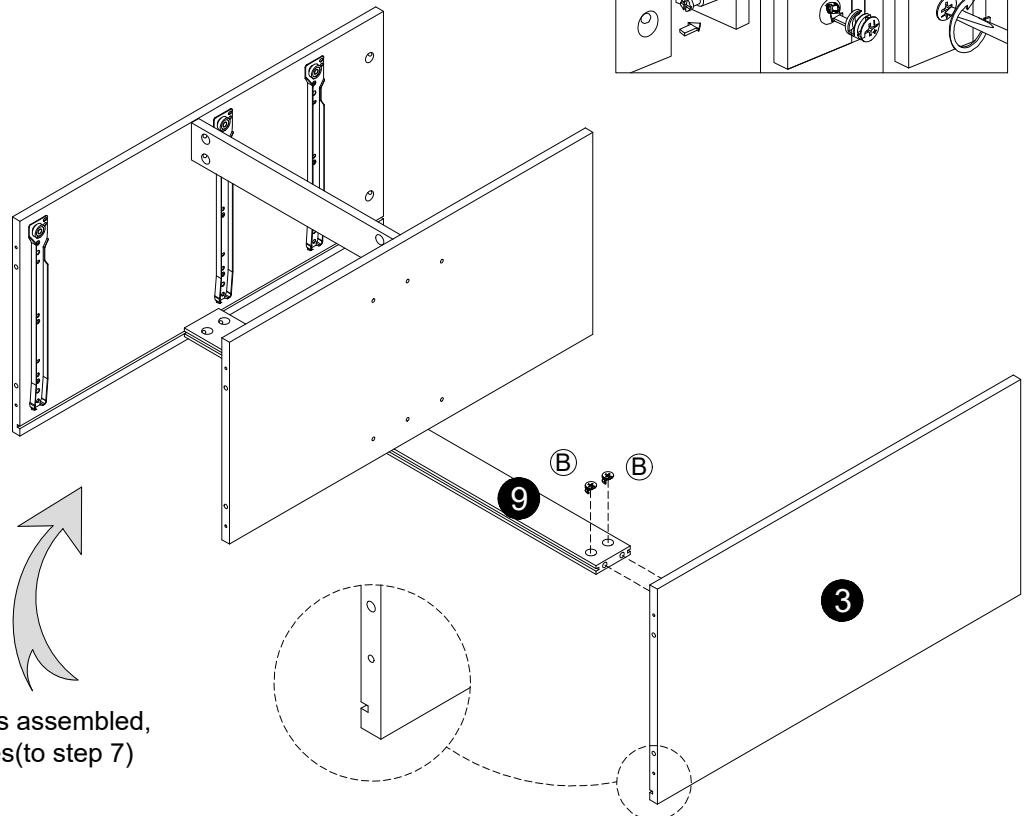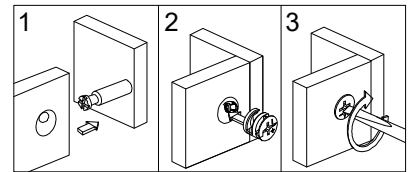


After this step is assembled,
flip it 90 degrees(to step 7)

STEP 7

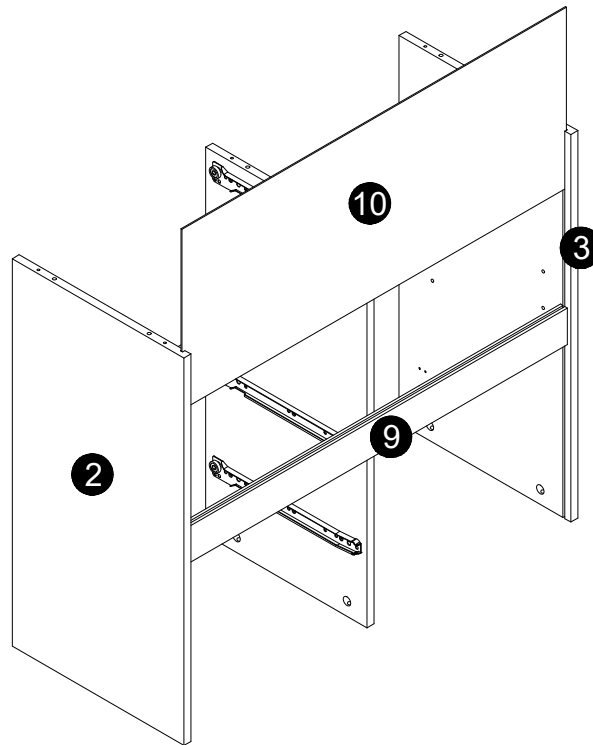


STEP 8



F X6



C X6

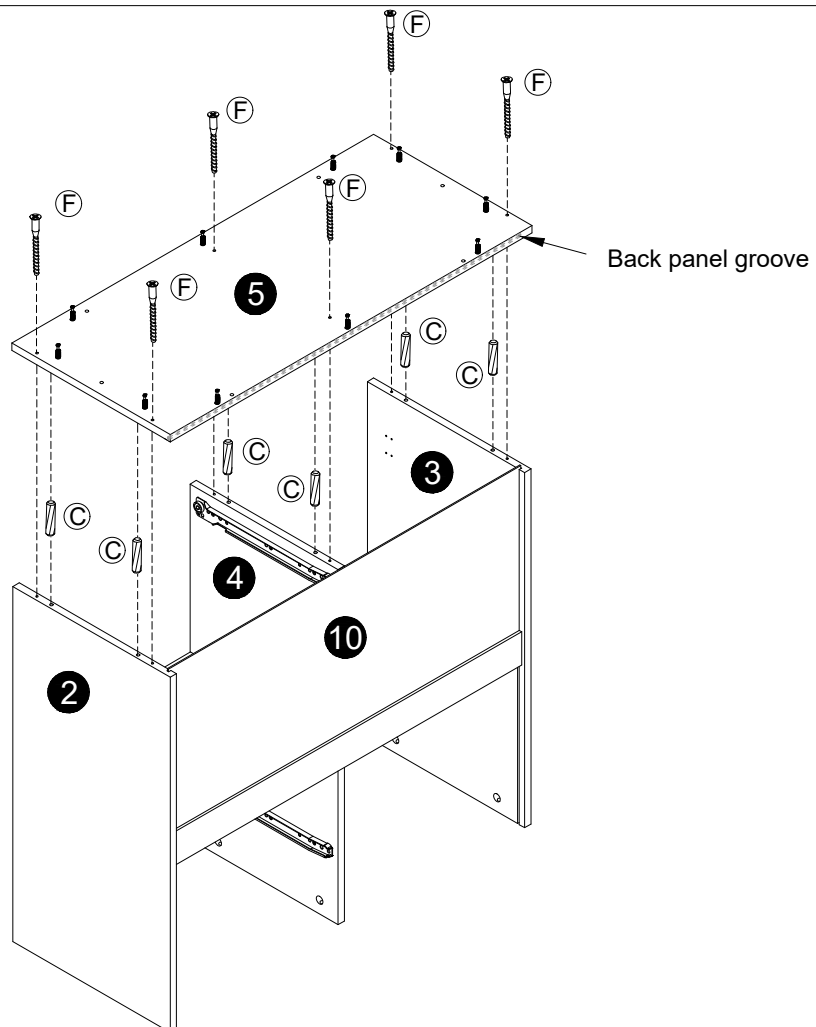


STEP 9

 **A** X10

 **D** X1


 **E** X2

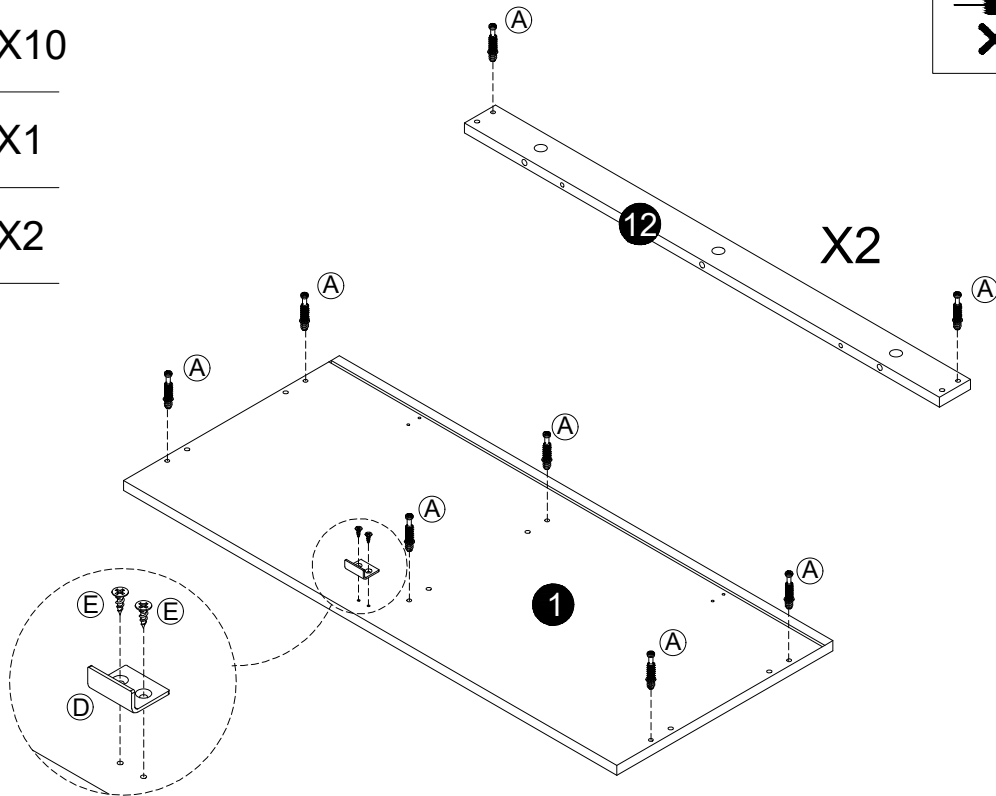

STEP 10

 **U1** X2


 **U2** X4

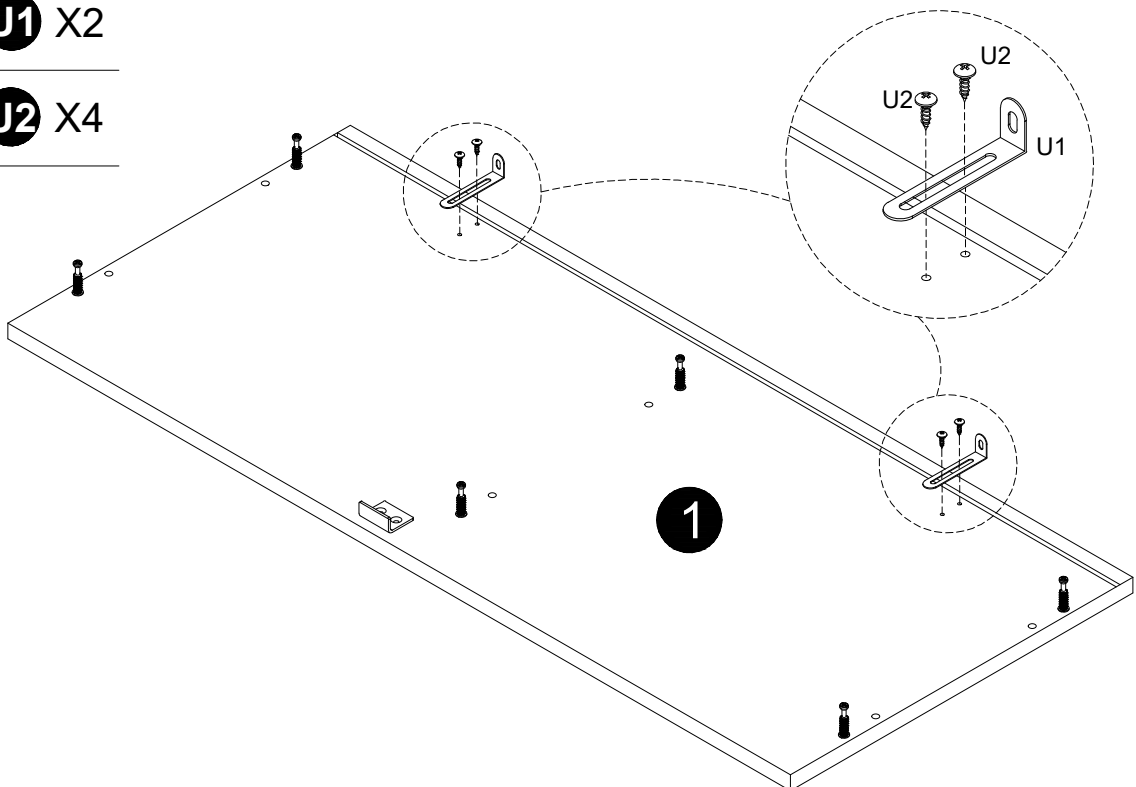



STEP 11



(B) X4




(C) X4

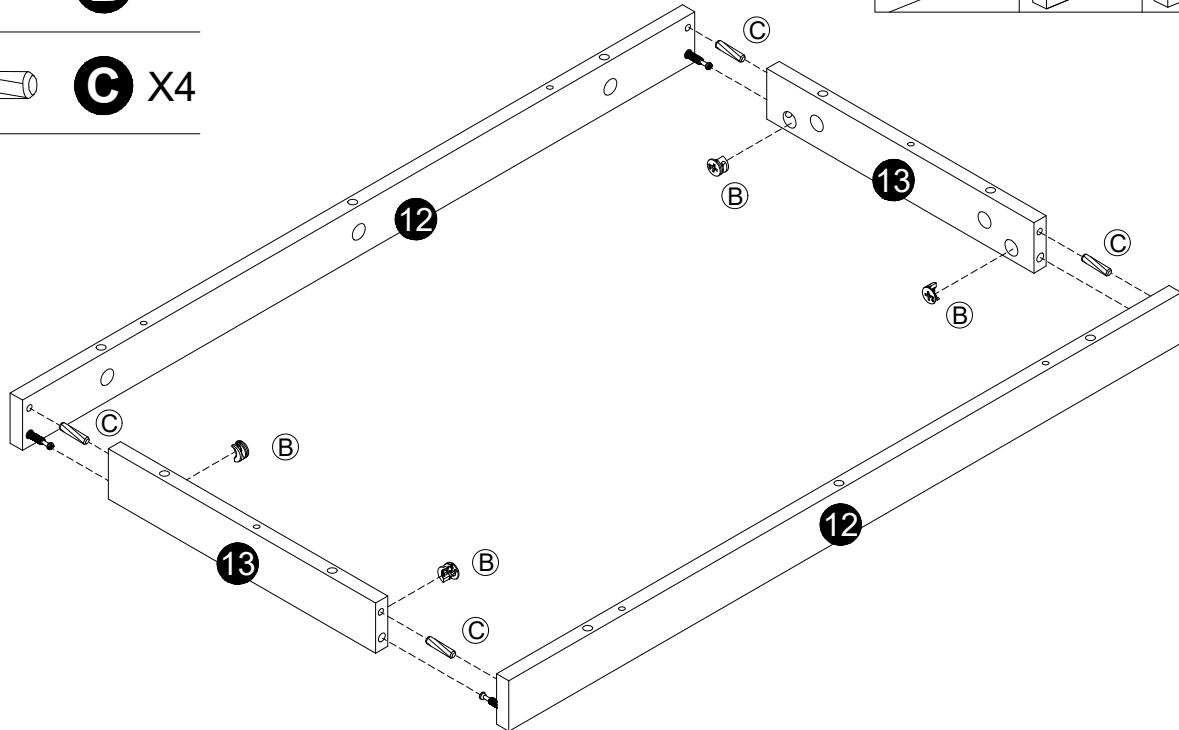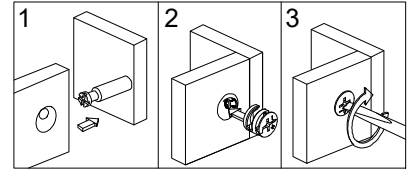



STEP 12



(B) X10




(C) X6

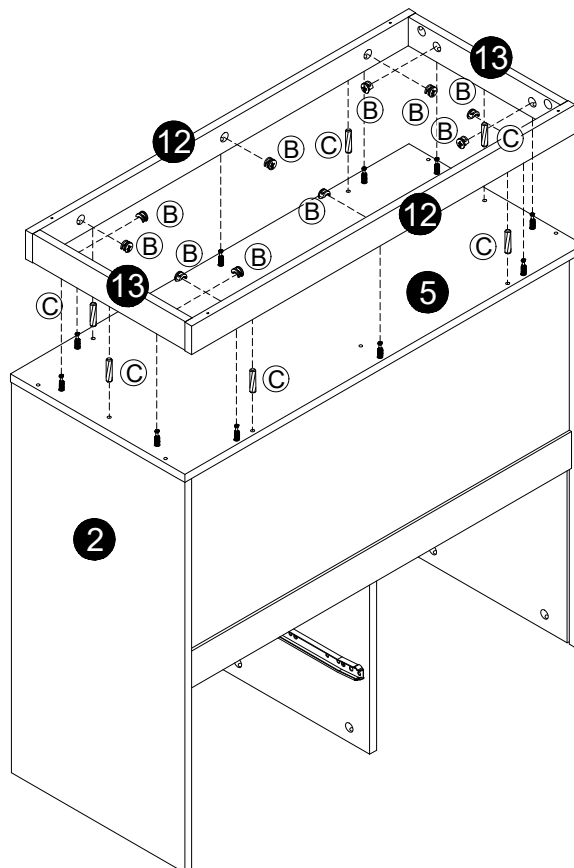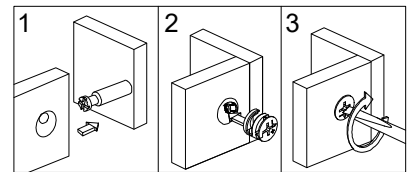

STEP 13




G X4

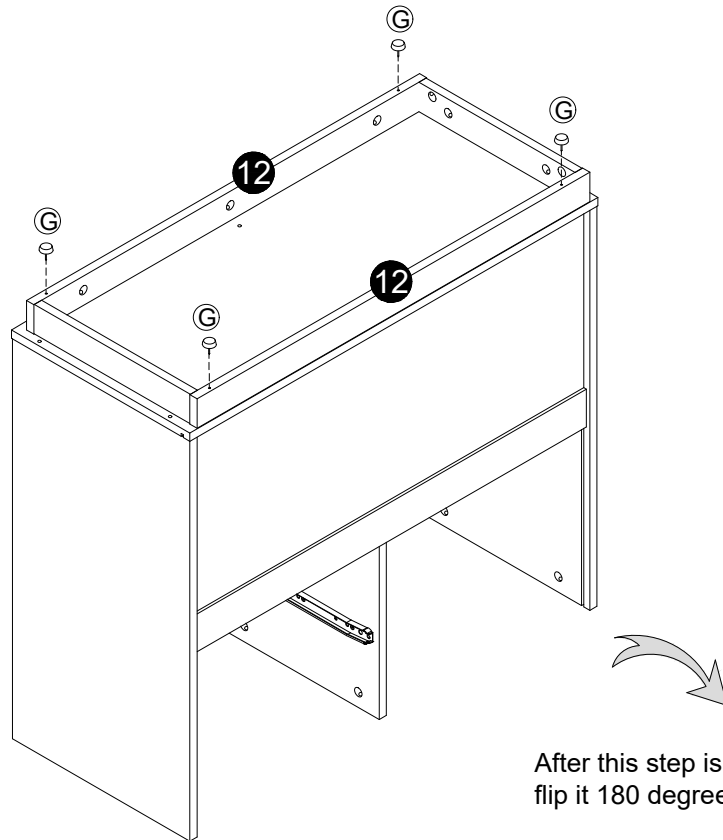

After this step is assembled,
flip it 180 degrees(to step 13)

STEP 14

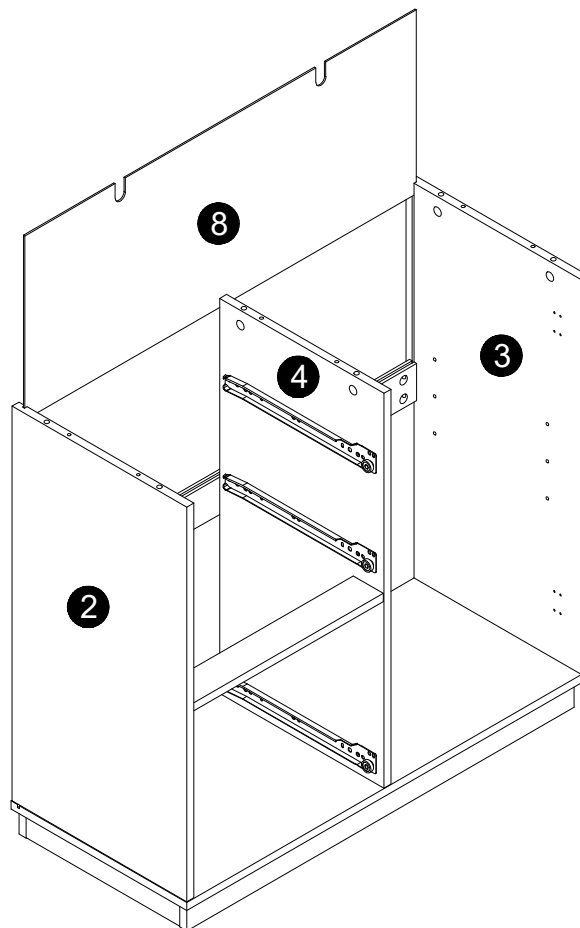

STEP 15




(B) X6



(C) X6


Back panel groove

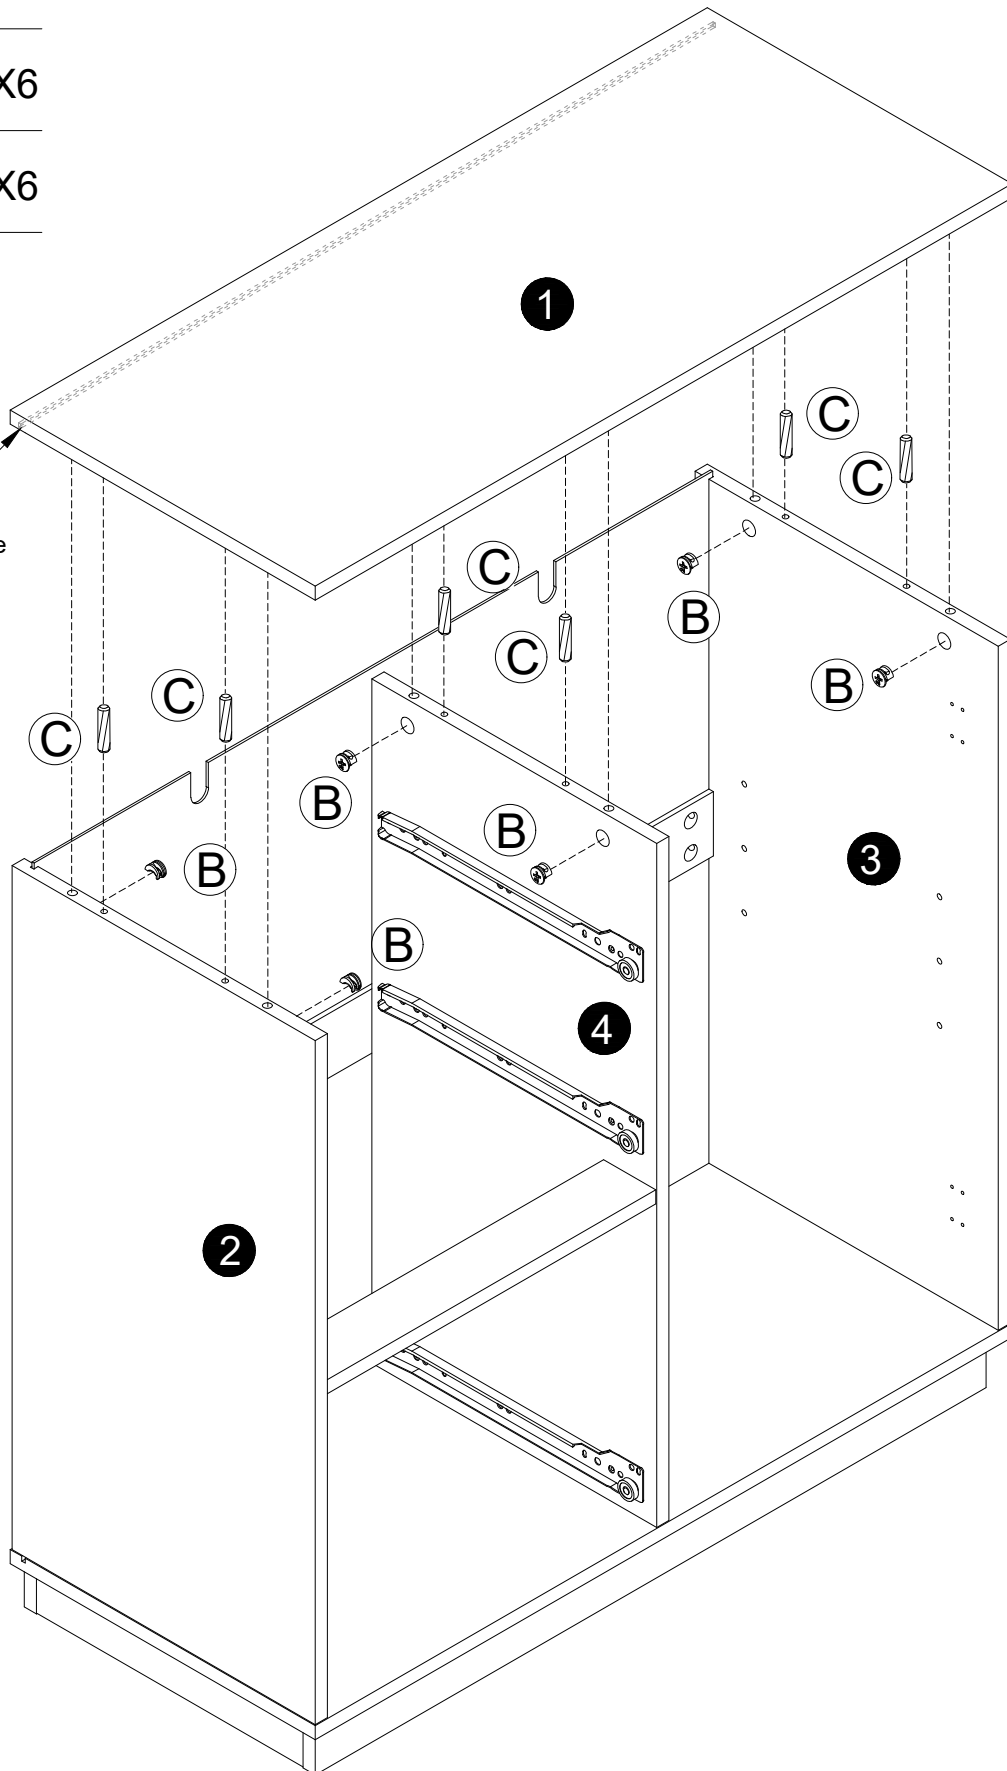


STEP 16



H X4

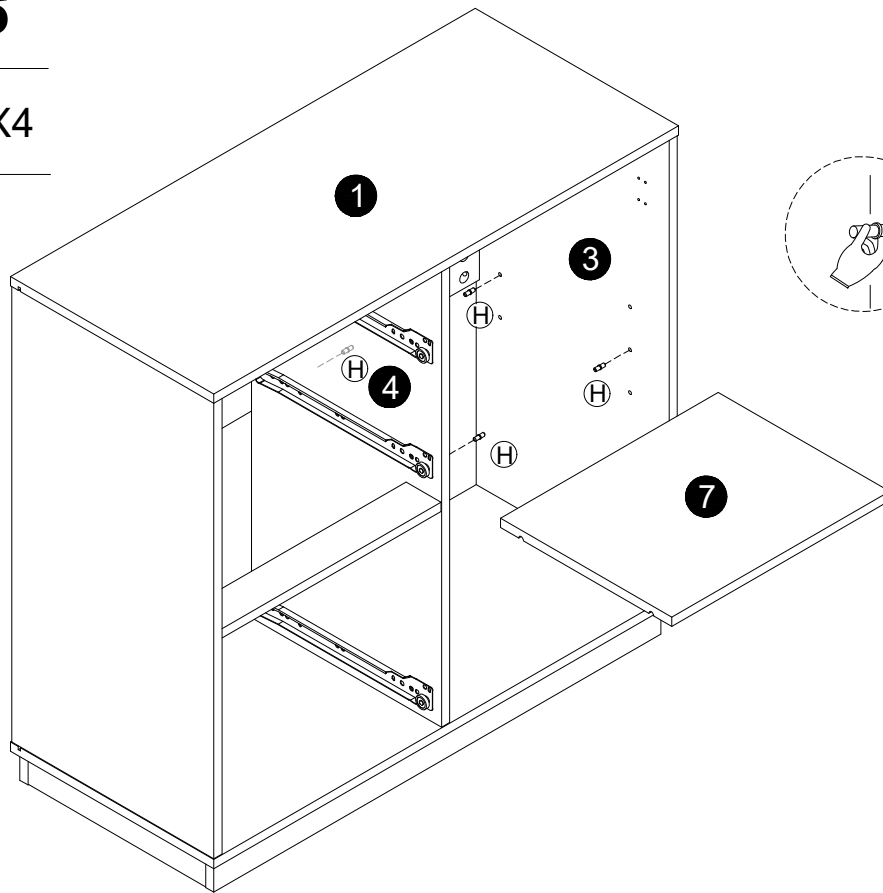


STEP 17



I X2




J X4

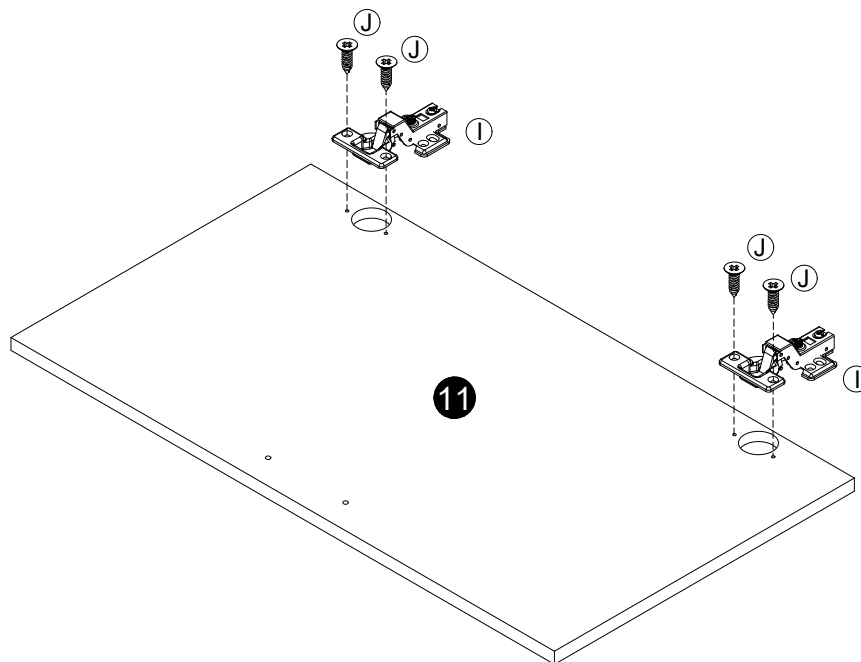

STEP 18




J X8







K X1



L X2

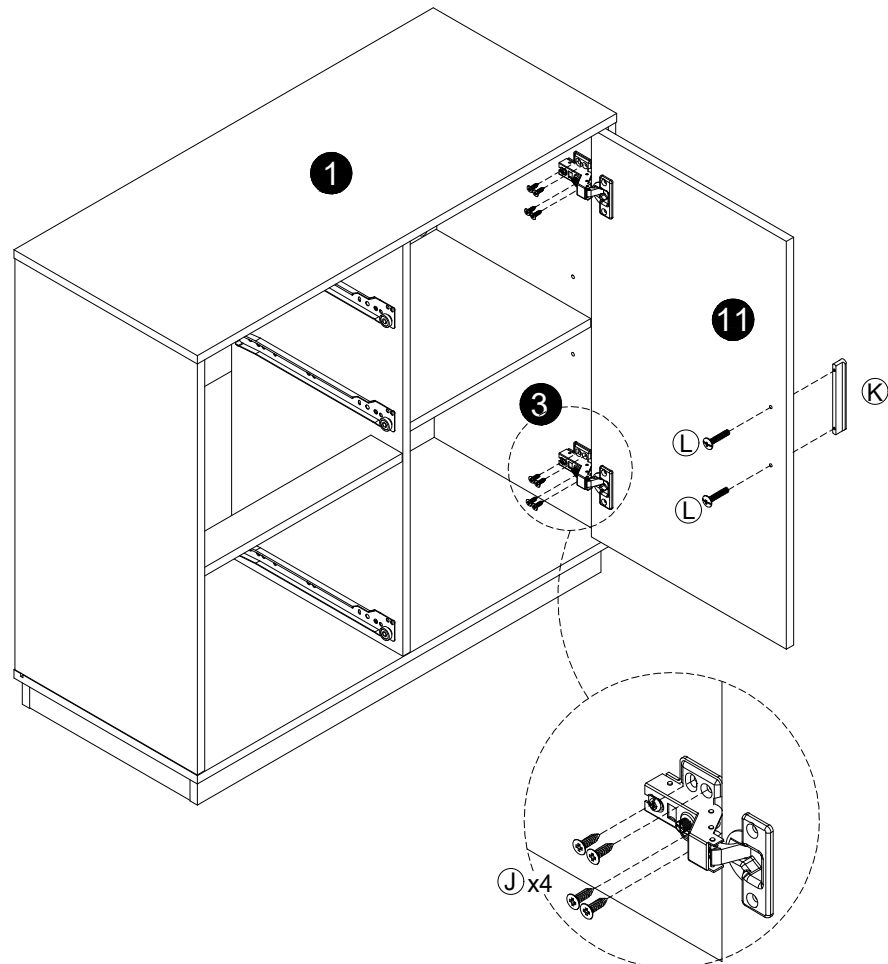




When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

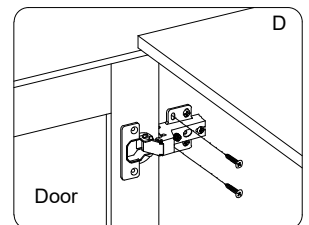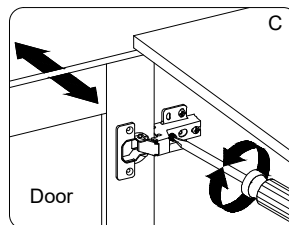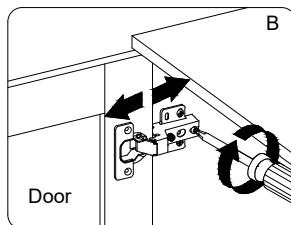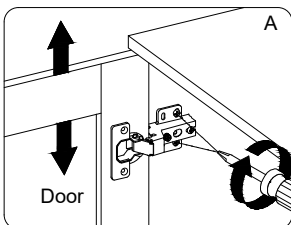


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment is finished, please tighten the screws, refer to step (D)



STEP 19

 **A** X12

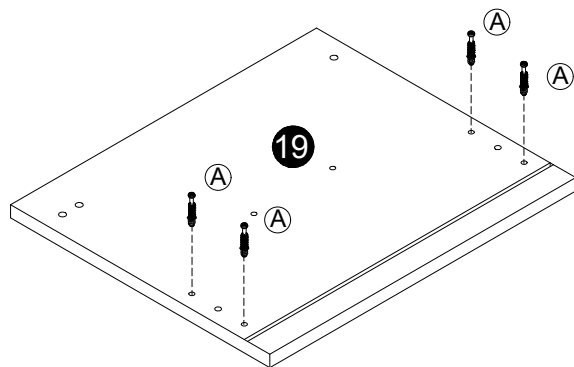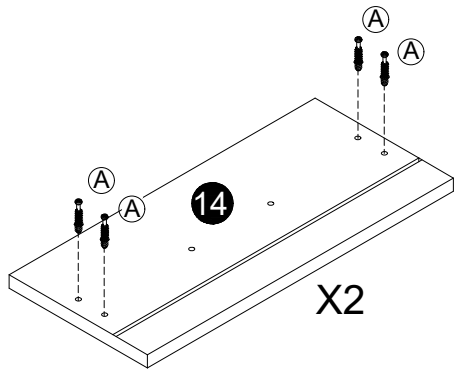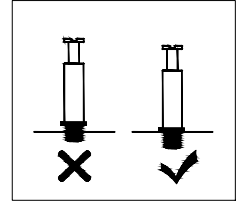

STEP 20



 **M** X8

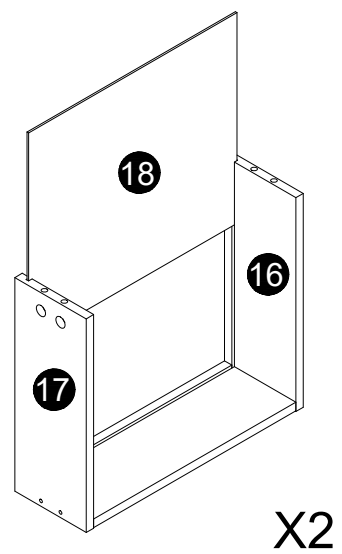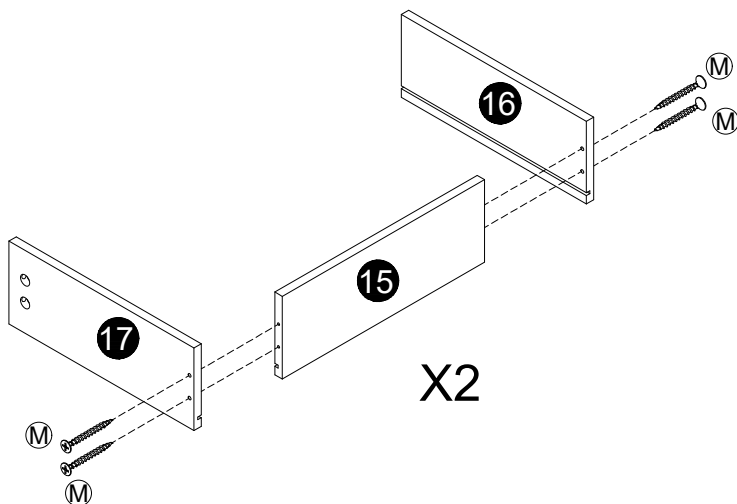

STEP 21




(B) X8

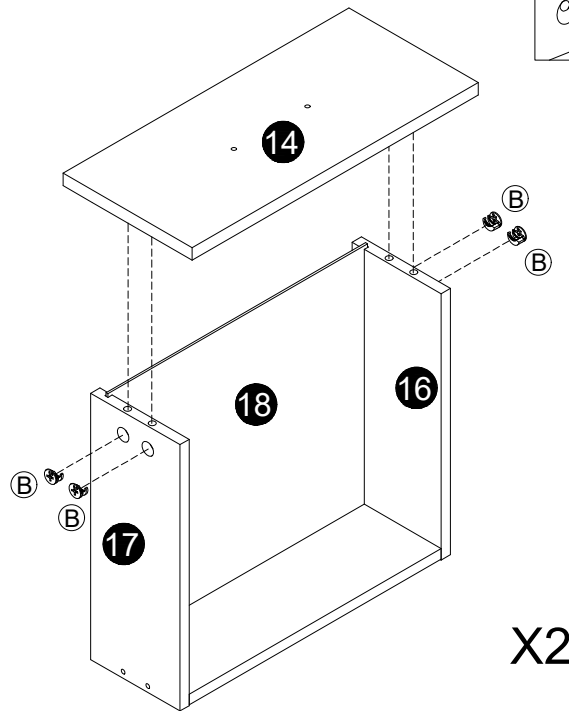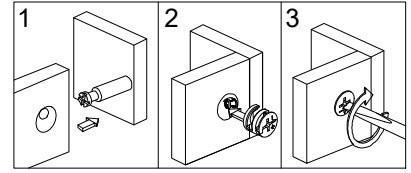



STEP 22





(B) X4





(C) X2

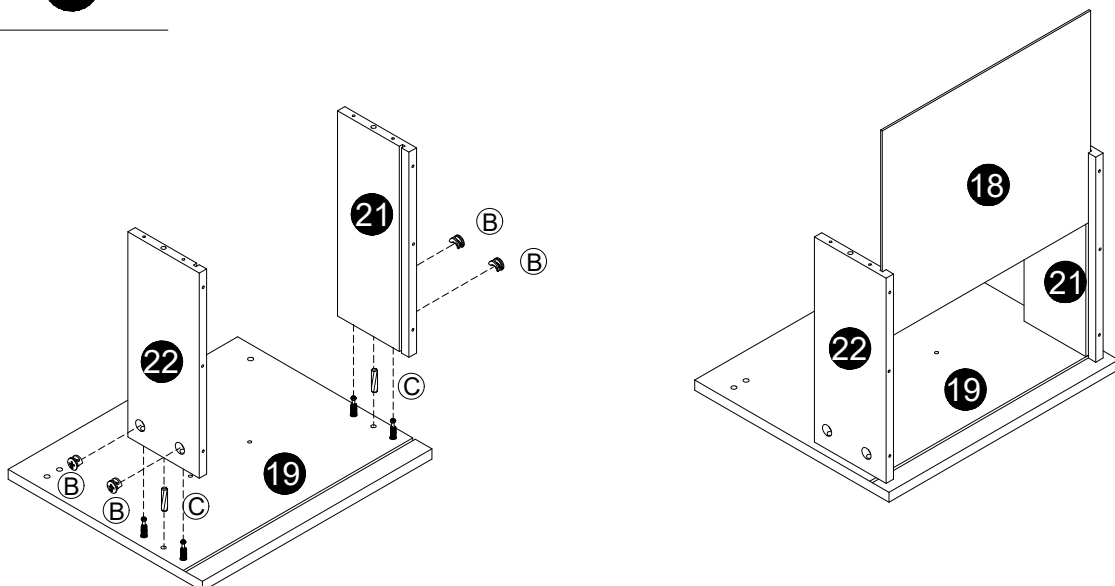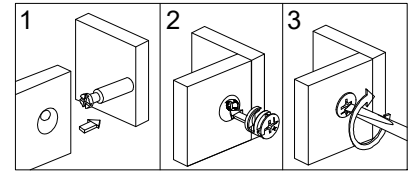



STEP 23

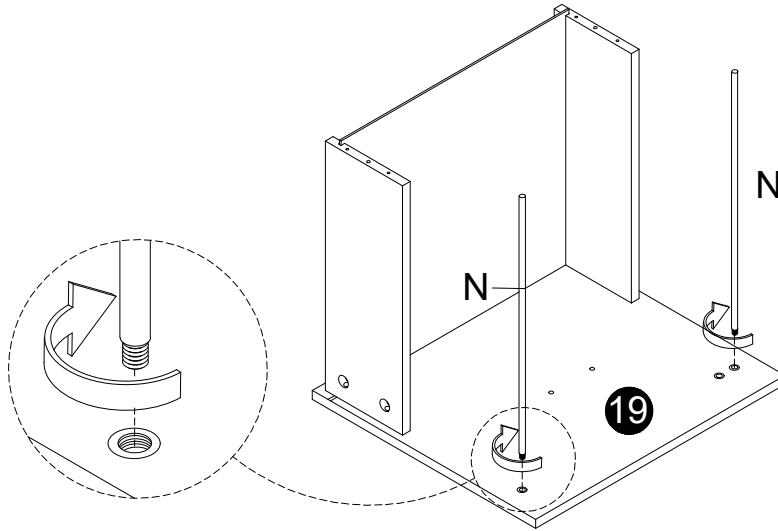


STEP 24

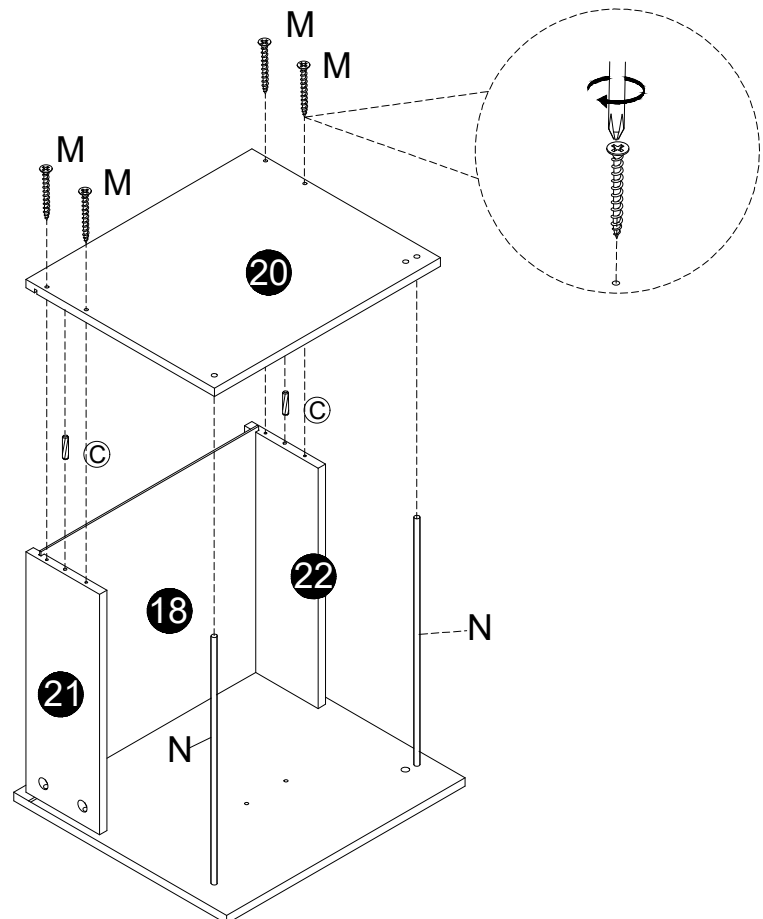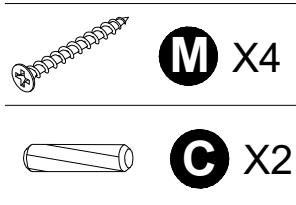


STEP 25

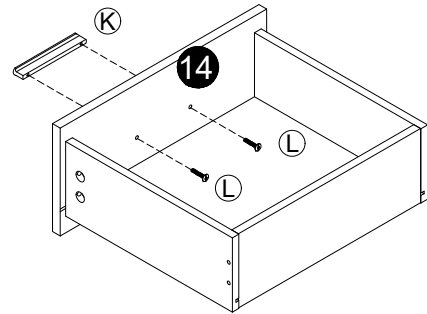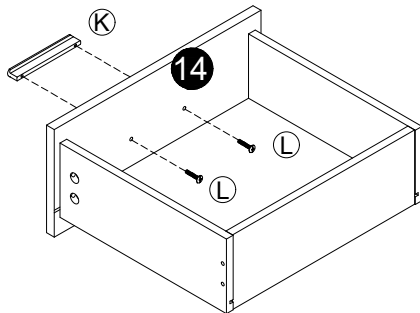


STEP 26

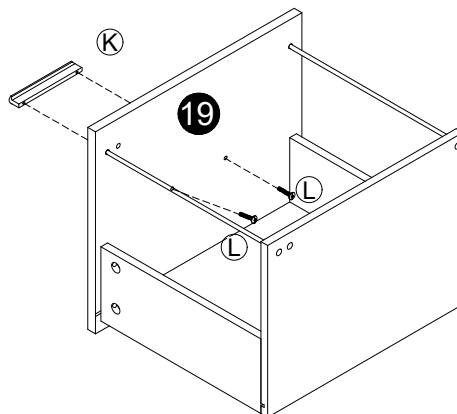

STEP 27

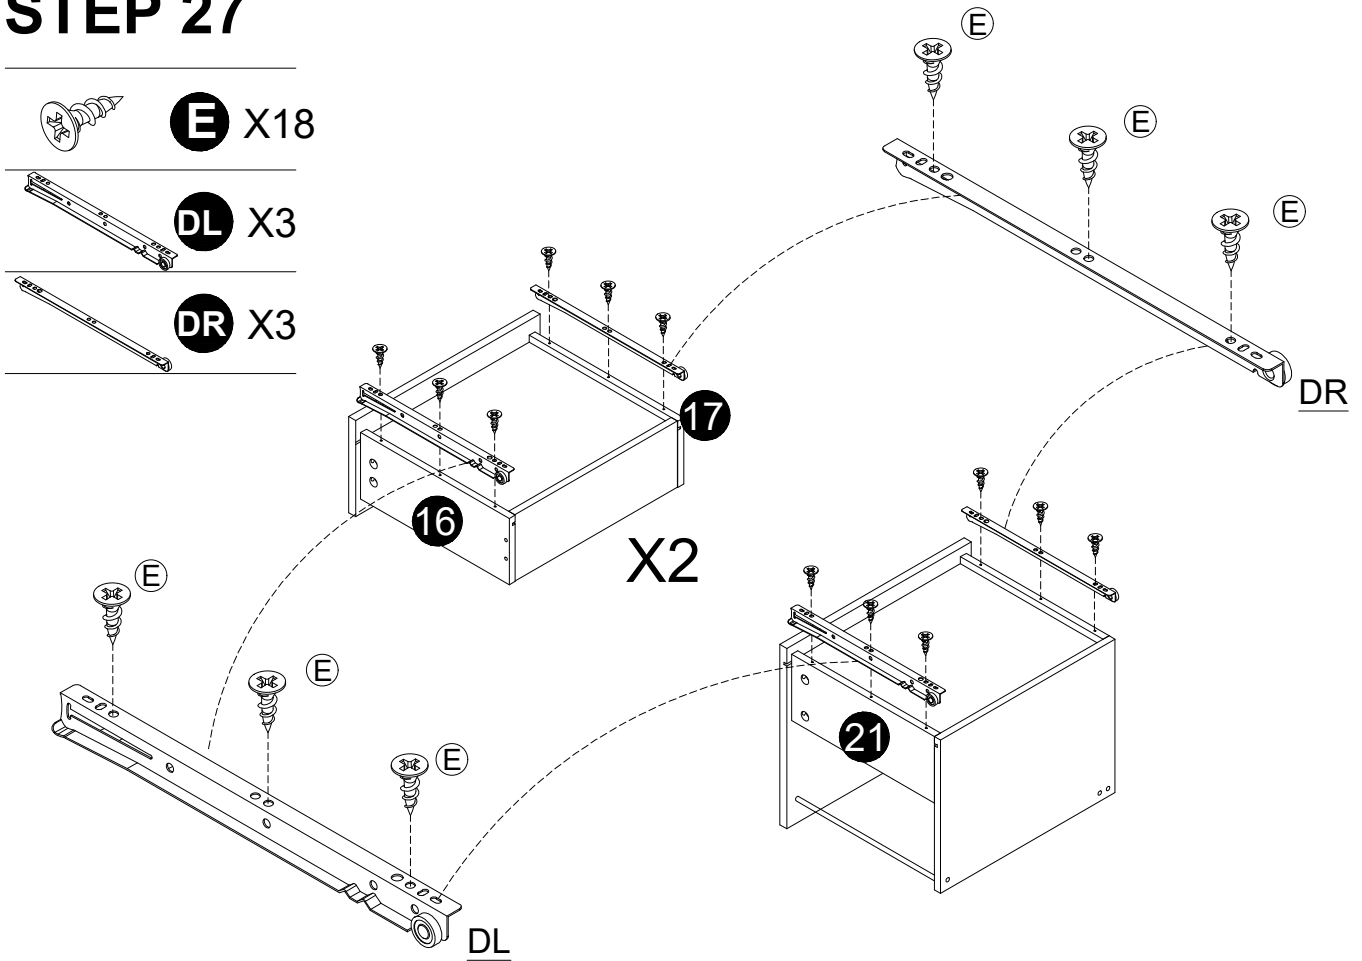


STEP 28

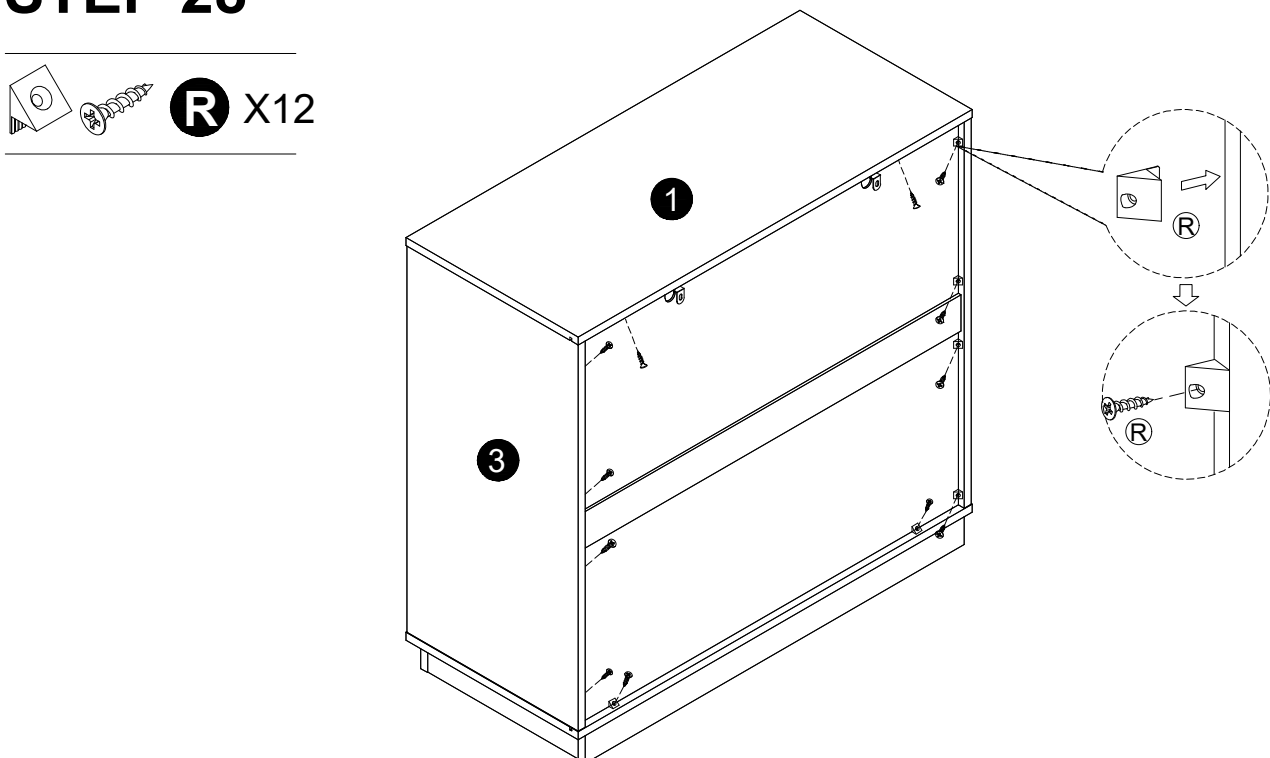


STEP 29



U3 X2




U4 X2

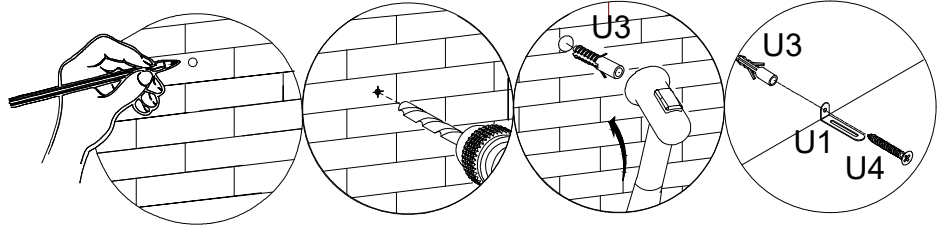


Step1: Determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: Drill the hole and then fixed the tacke (U3) on the wall.

Step 3: Use screw (U4) to fix the pat L (U1) on the wall.

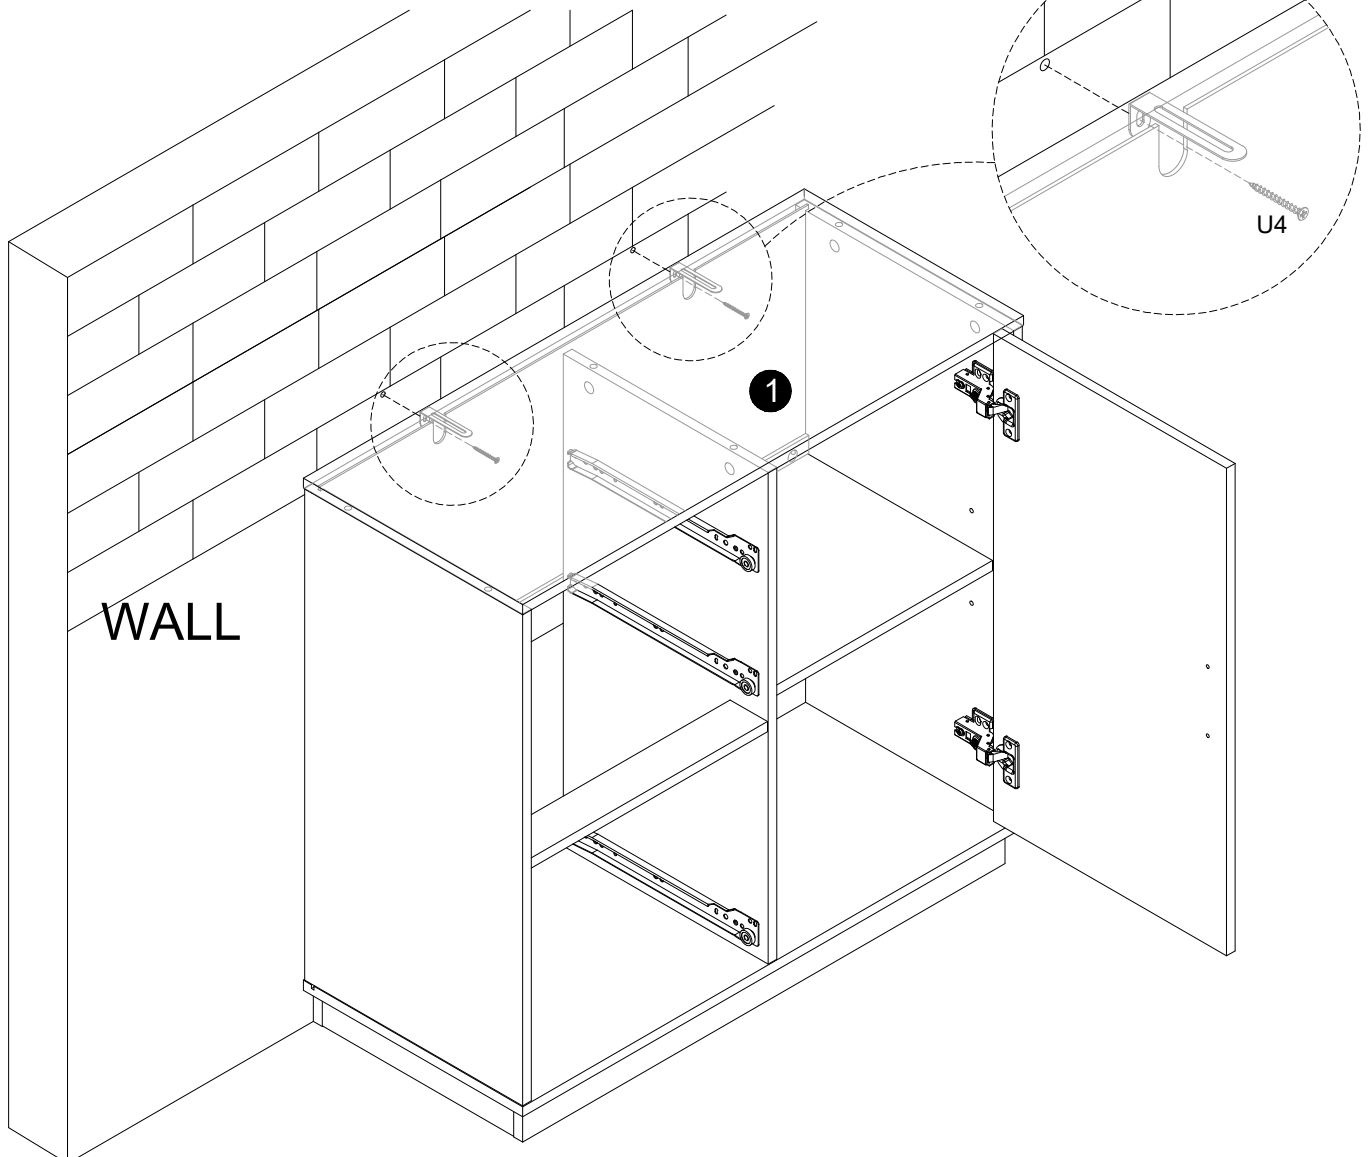


STEP 30

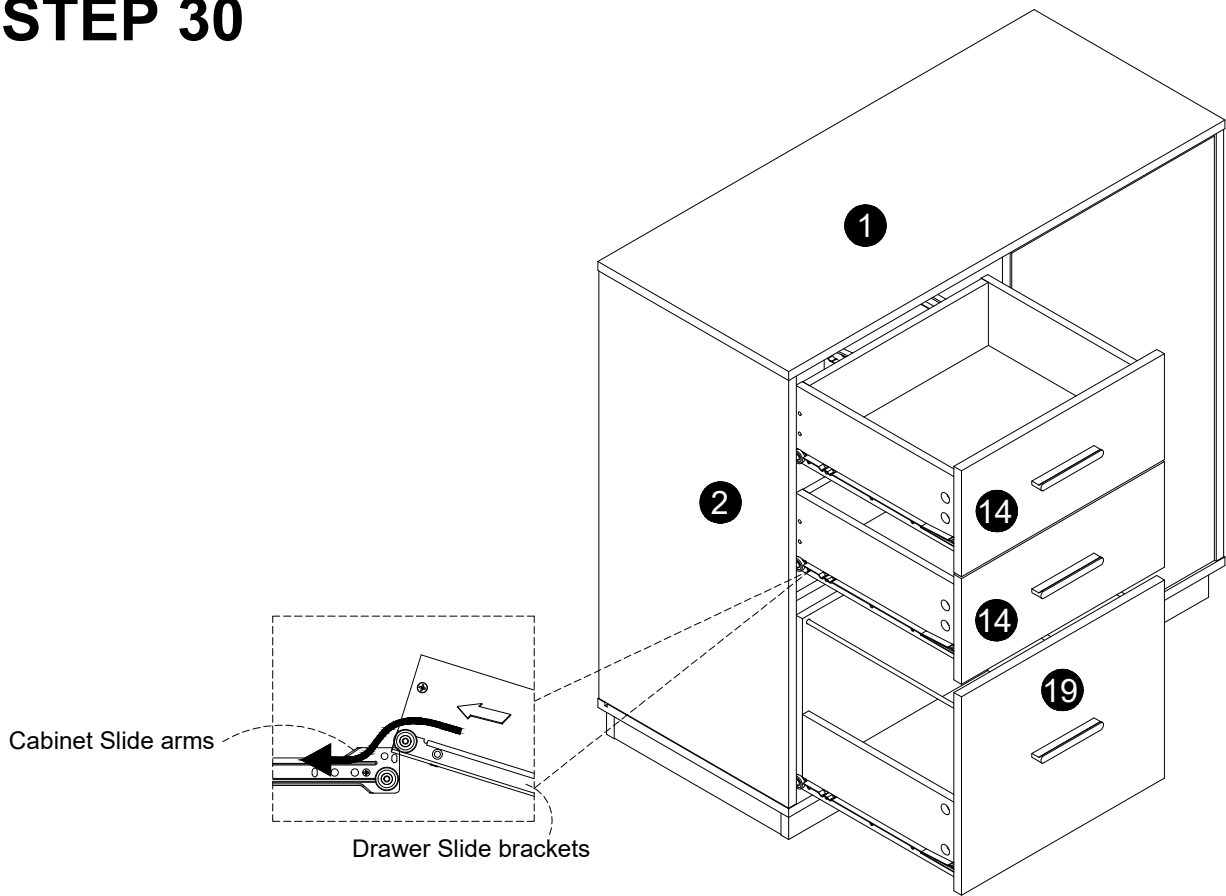



STEP 31



WARNING

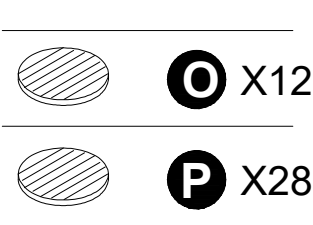

Note: For two-tone cabinets, match the stickers with the colors.

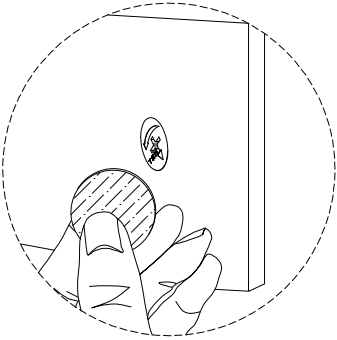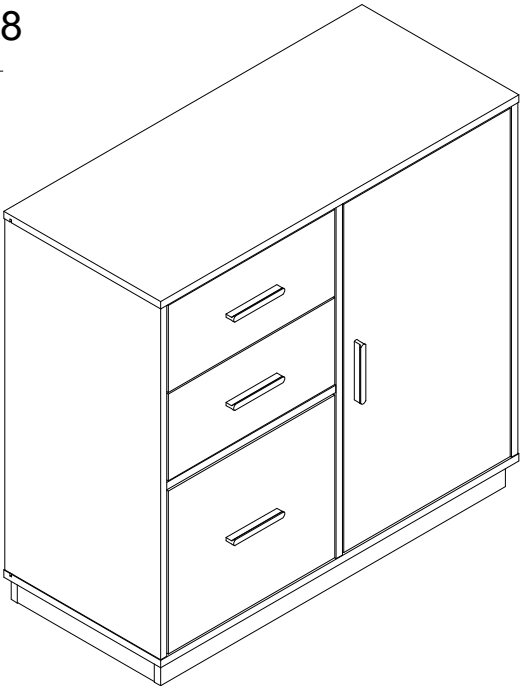



After-Sales Service Hotline: (800) 661-5928