








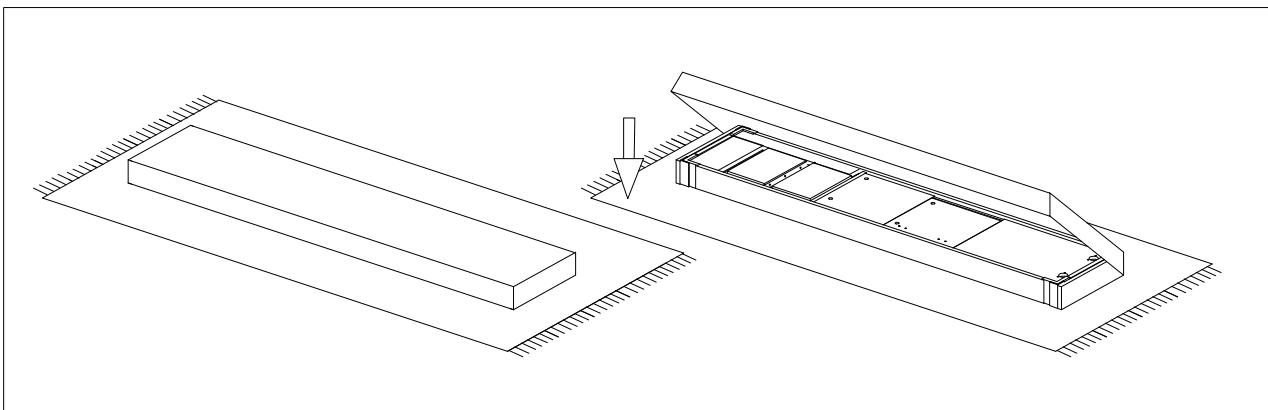



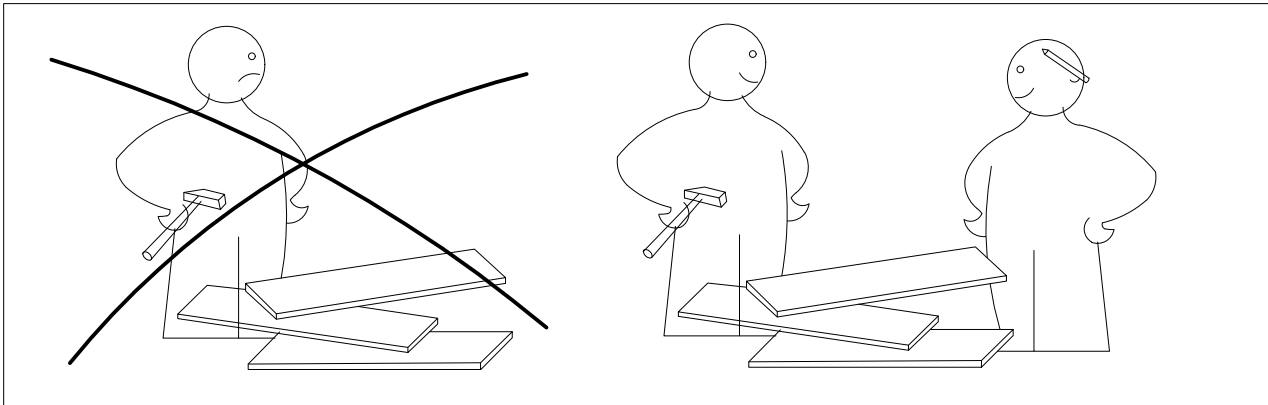





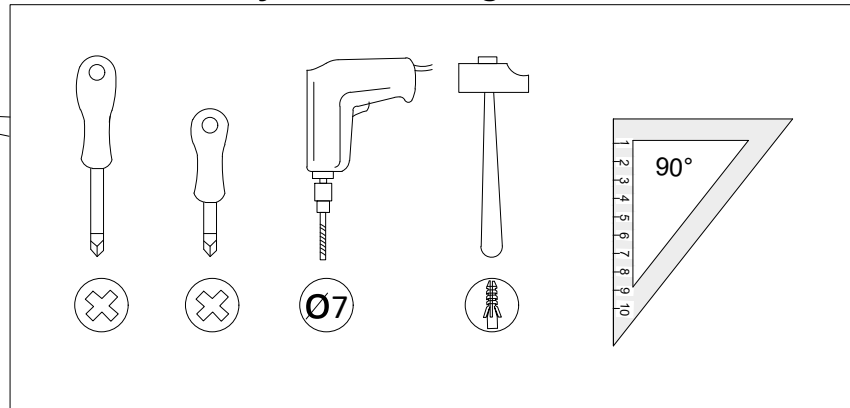



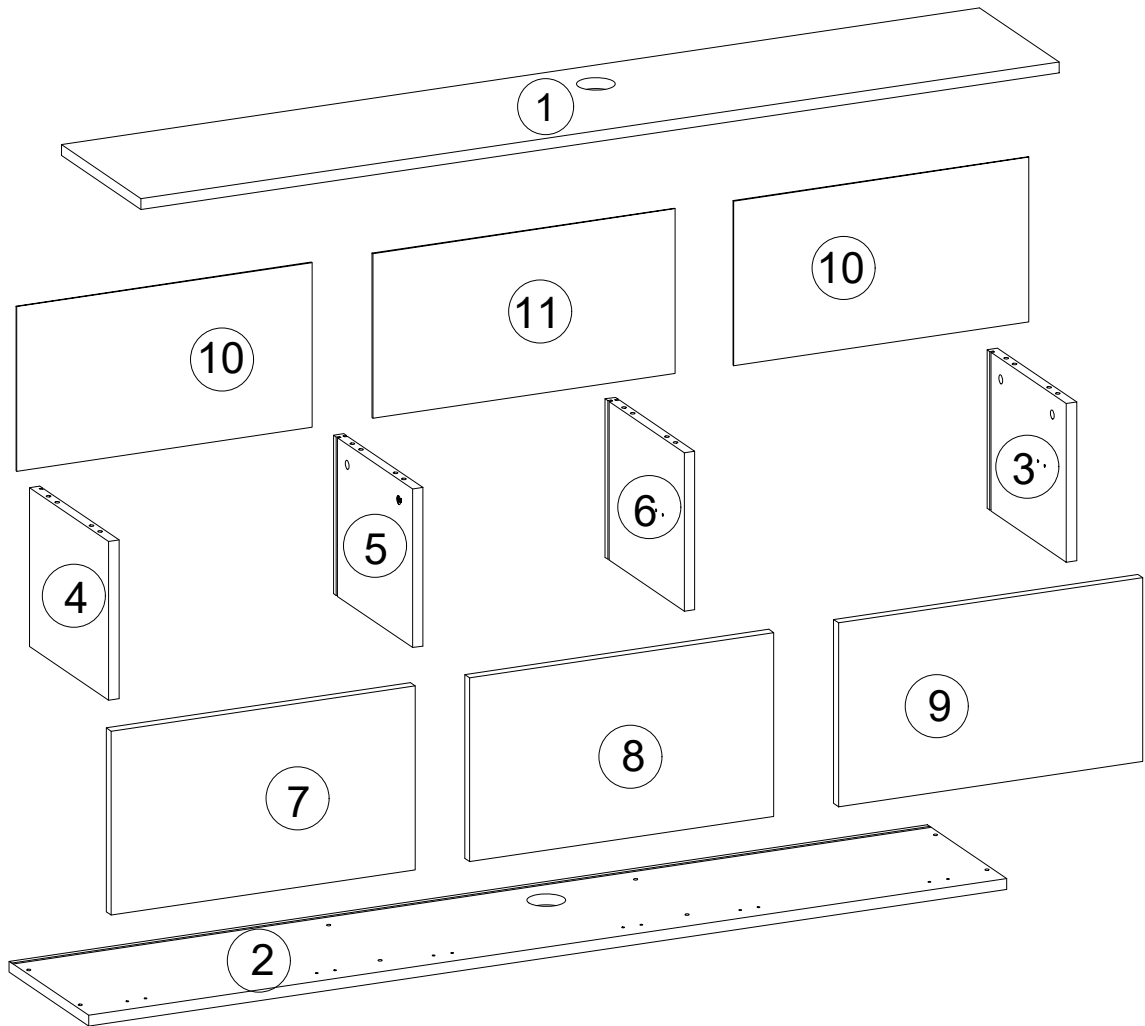
**Use the drill only for wall fixing**




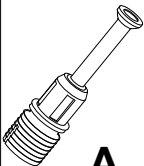







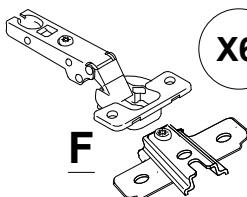
# HARDWARE SET


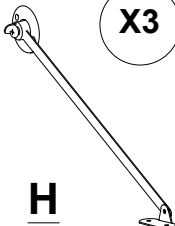
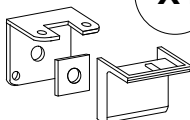
<div><div>A</div><div></div><div>X8</div><div></div><div>X8</div><div><div>A</div><div>A1</div></div></div>	<div><div>B</div><div></div><div>X4</div><div><div>B</div></div></div>	<div><div>C</div><div></div><div>X56</div><div><div>C</div></div></div>	<div><div>D</div><div></div><div>X8</div><div><div>D</div></div></div>
<div><div>E</div><div></div><div>X12</div><div><div>E</div></div></div>	<div><div>F</div><div></div><div>X6</div><div><div>F</div></div></div>	<div><div></div><div>X1</div><div><div></div><div>G</div></div></div>	<div><div></div><div>X3</div><div><div>H</div></div></div>
<div><div>L</div><div></div><div>X4</div><div></div><div>X4</div><div></div><div>X4</div><div></div><div>X4</div><div><div>L</div><div>L1</div><div>L2</div><div>L3</div></div></div>			
<div><div>M</div><div></div><div>X1</div><div></div><div>X8</div><div><div>M</div><div>N</div></div></div>	<div><div>R</div><div></div><div>X3</div><div><div></div></div></div>	<div><div></div><div>X1</div><div><div>SPARE</div></div></div>	



No	a*b(mm)	a*b(inches)	Pcs
1	1600x296	63x11 5/8	1
2	1600x296	63x11 5/8	1
3	264x295	10 3/8x11 5/8	1
4	264x295	10 3/8x11 5/8	1
5	264x295	10 3/8x11 5/8	1
6	264x295	10 3/8x11 5/8	1
7	530x306	20 7/8x12	1
8	530x306	20 7/8x12	1
9	530x306	20 7/8x12	1
10	515x274	20 1/4x10 3/4	2
11	525x274	20 5/8x10 3/4	1



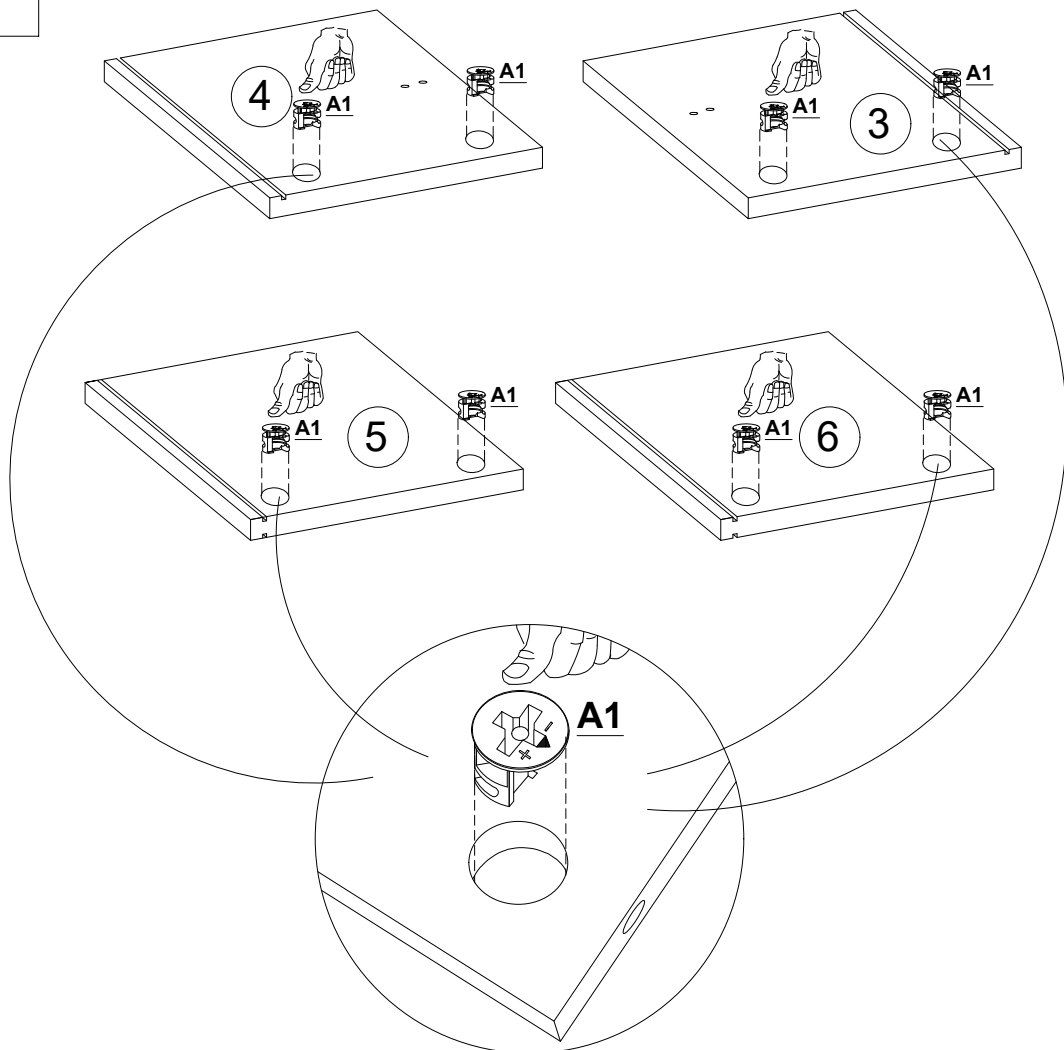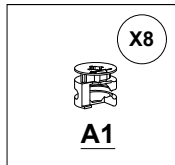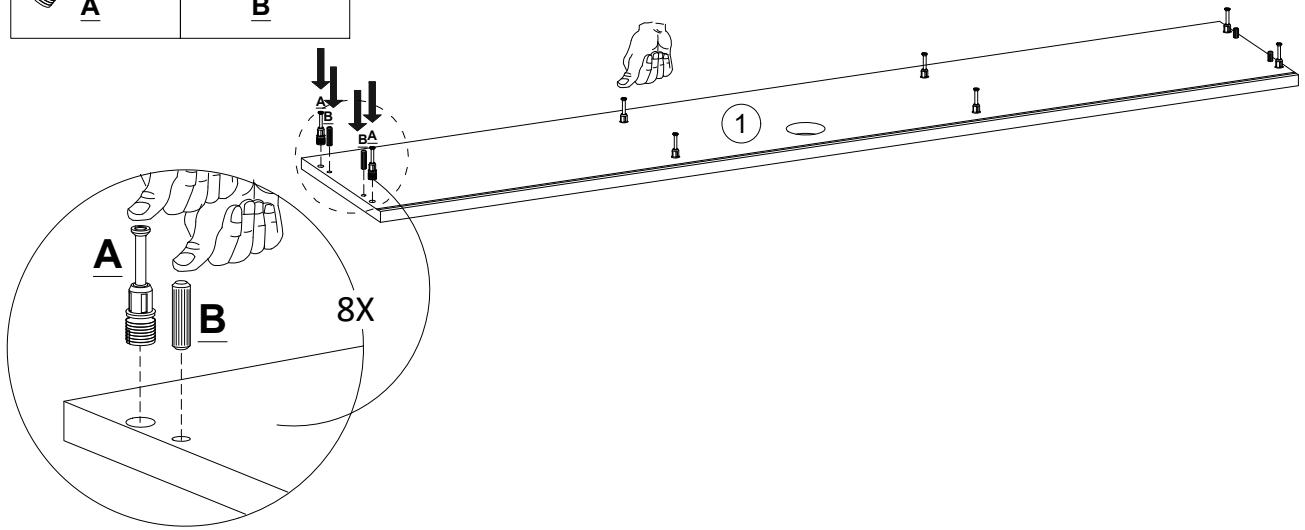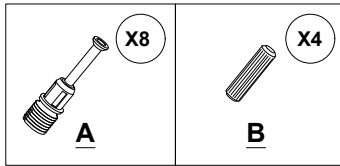


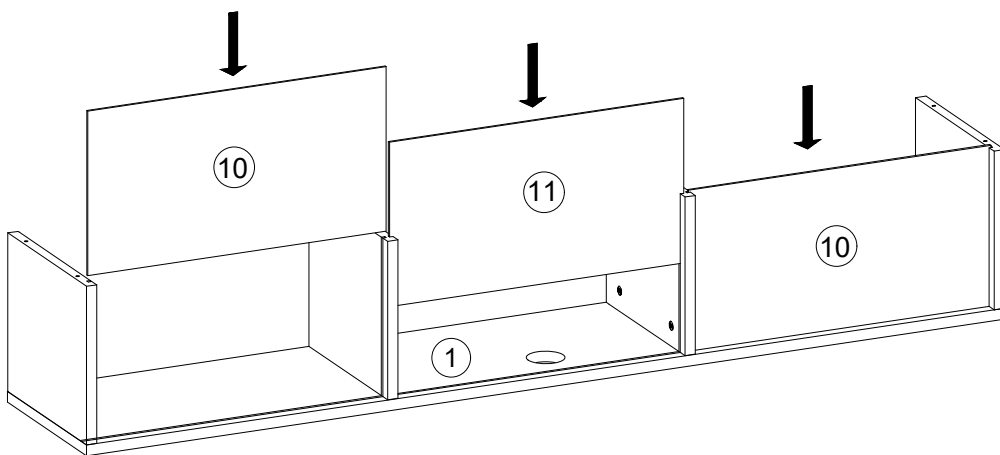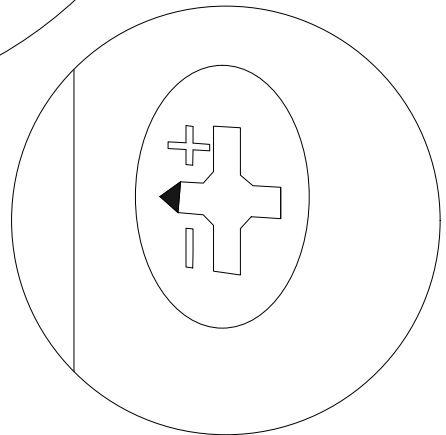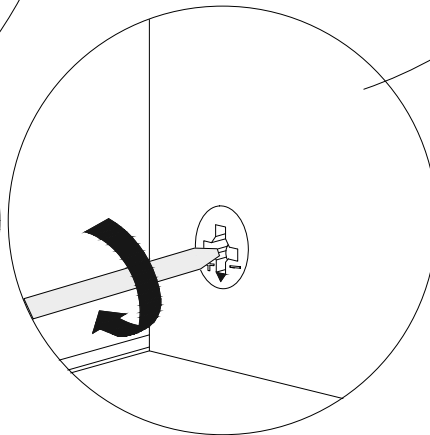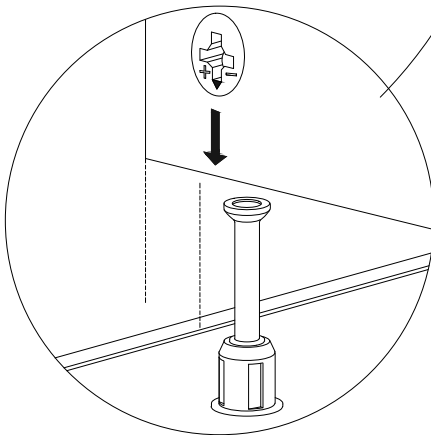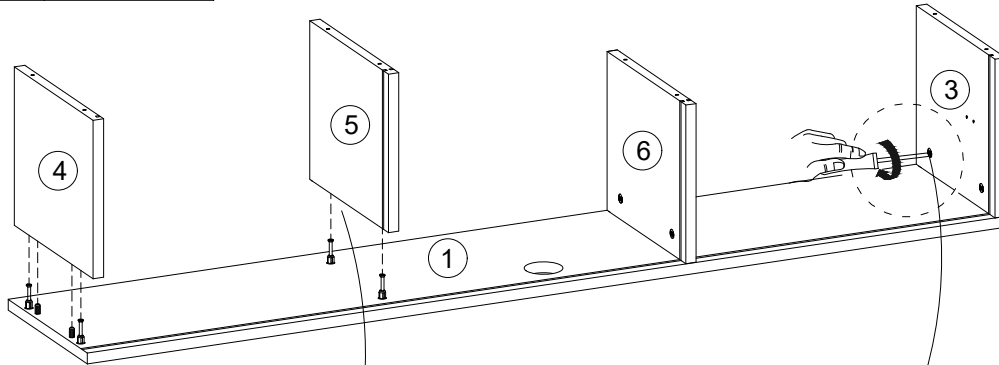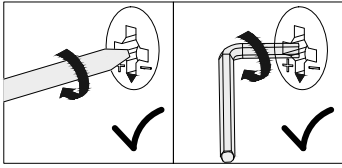








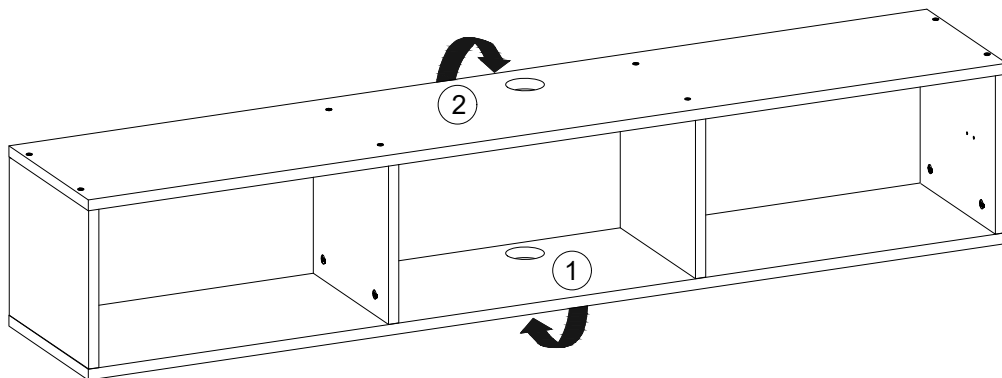
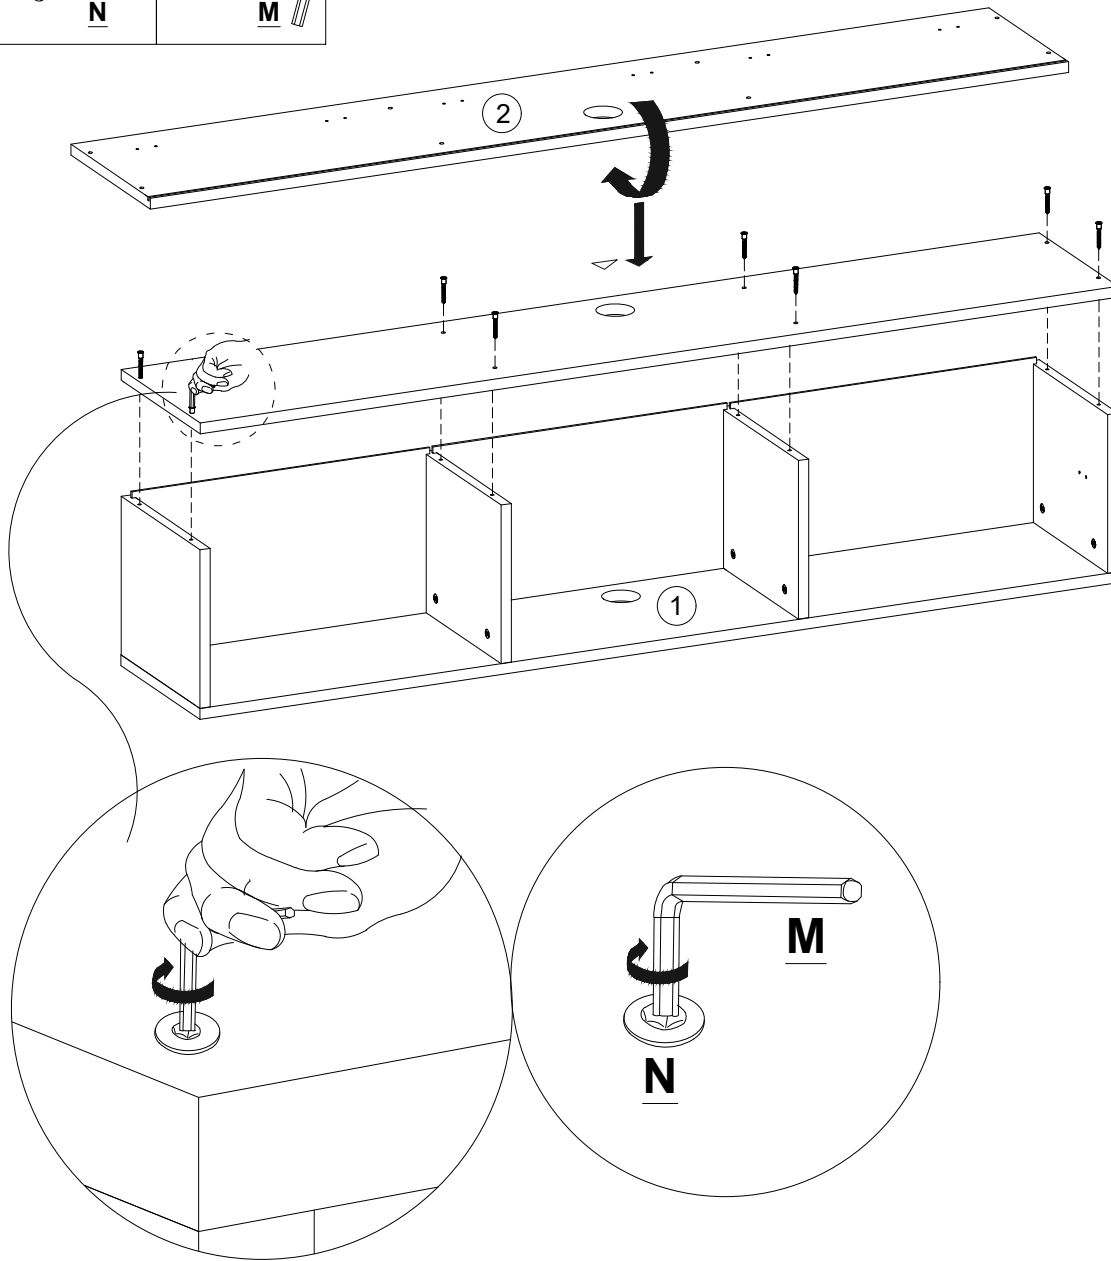
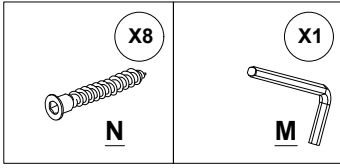


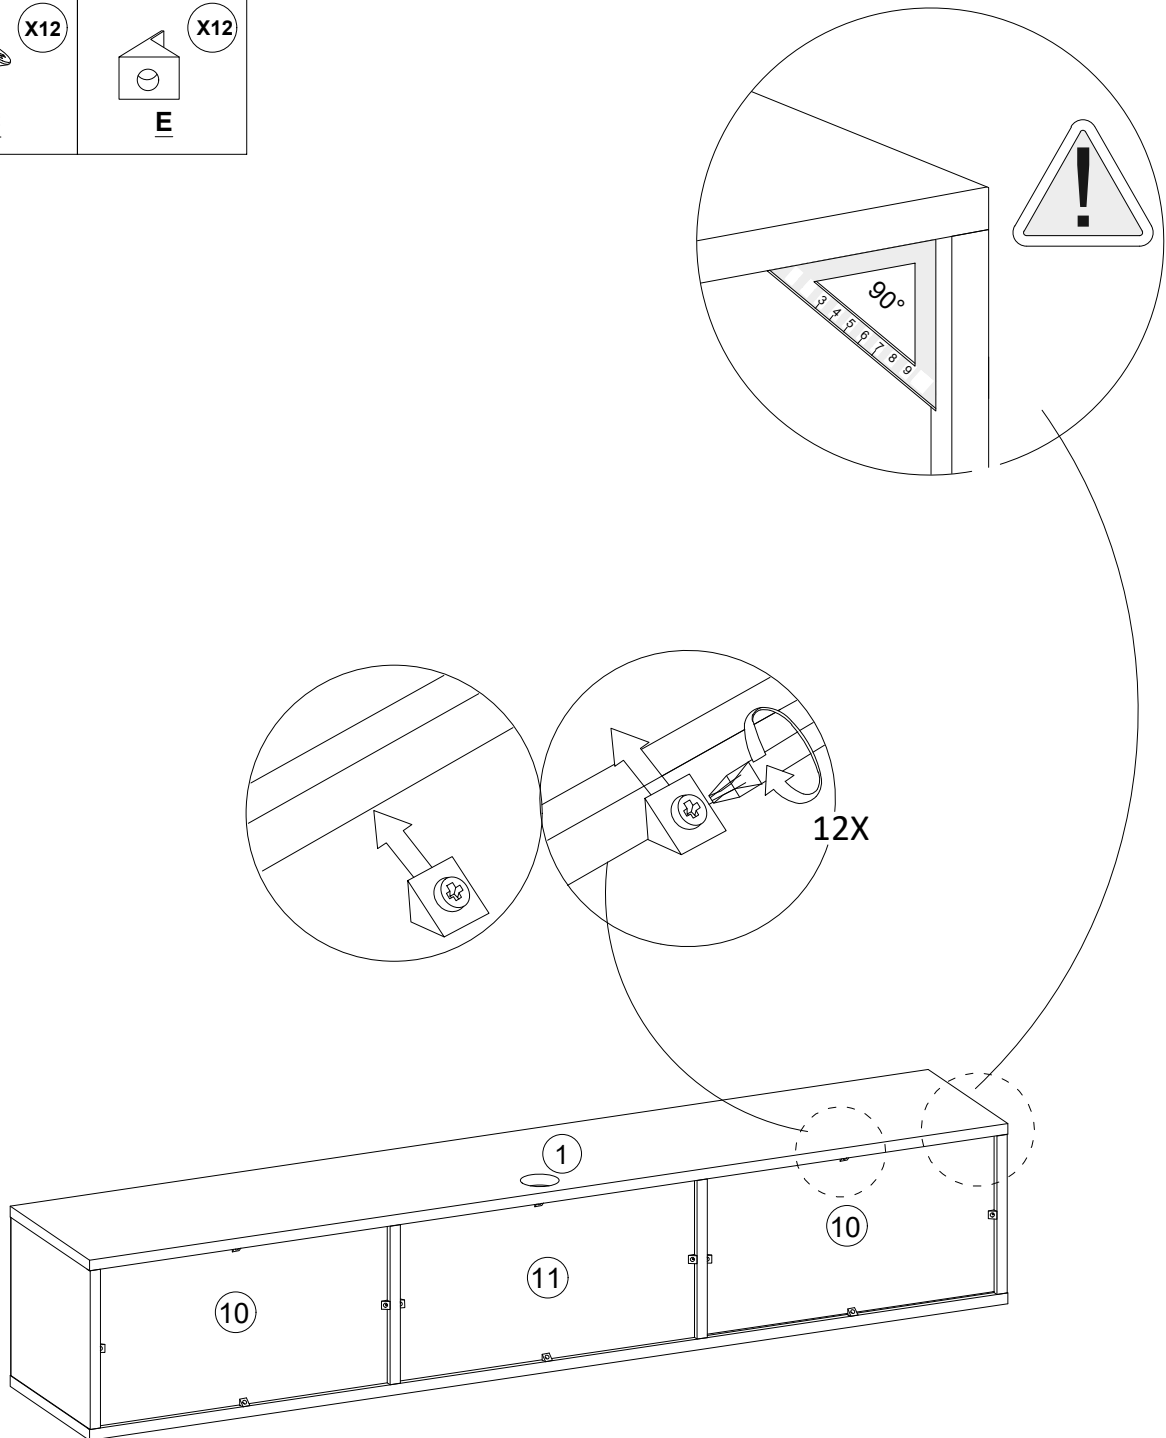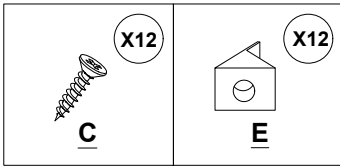








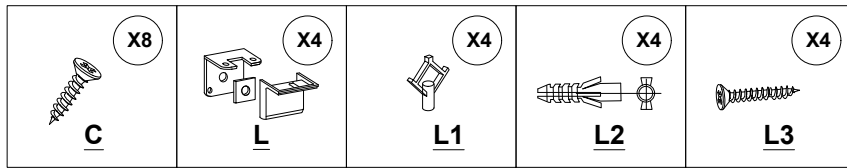


## DRYWALL

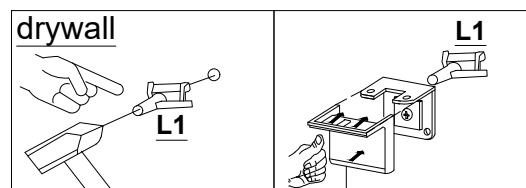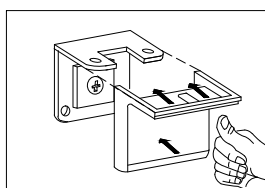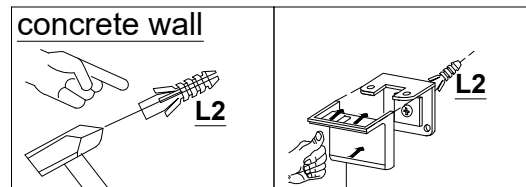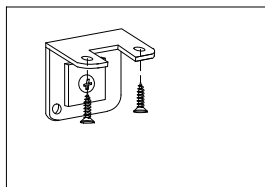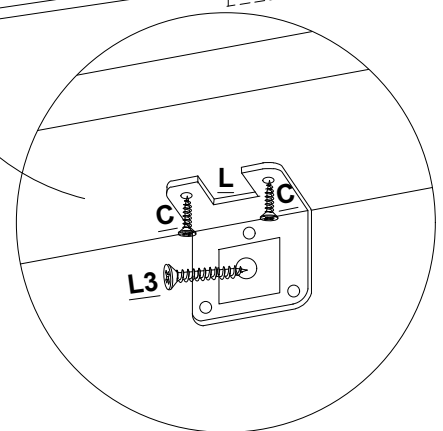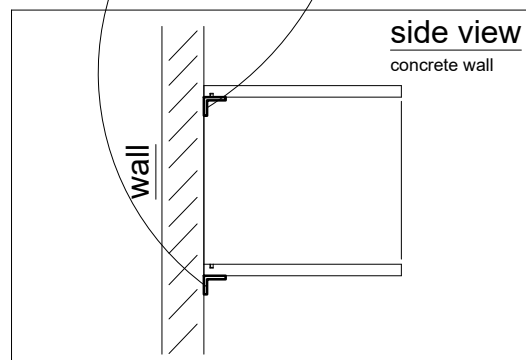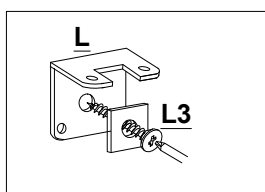
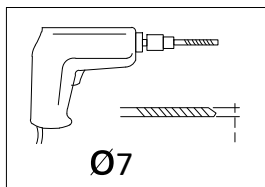
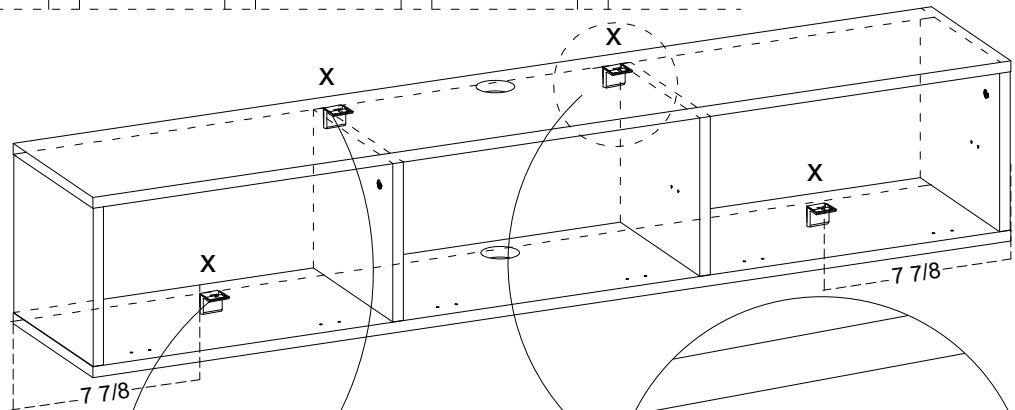
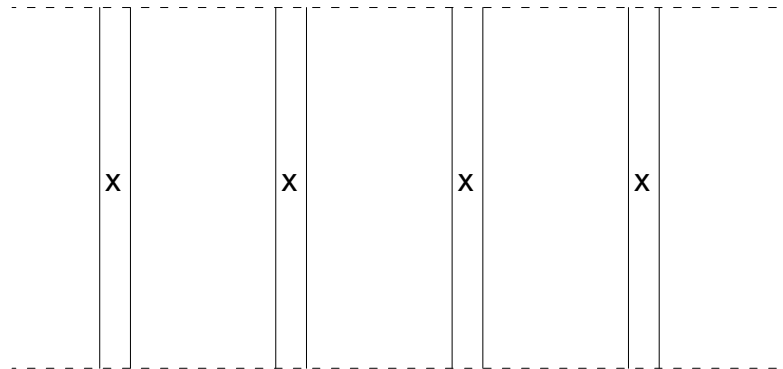


or

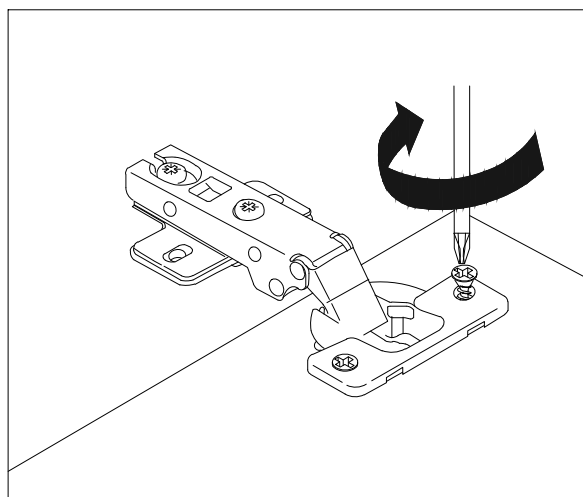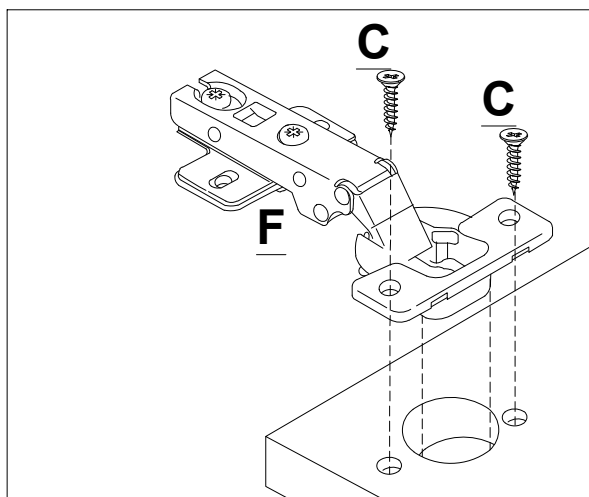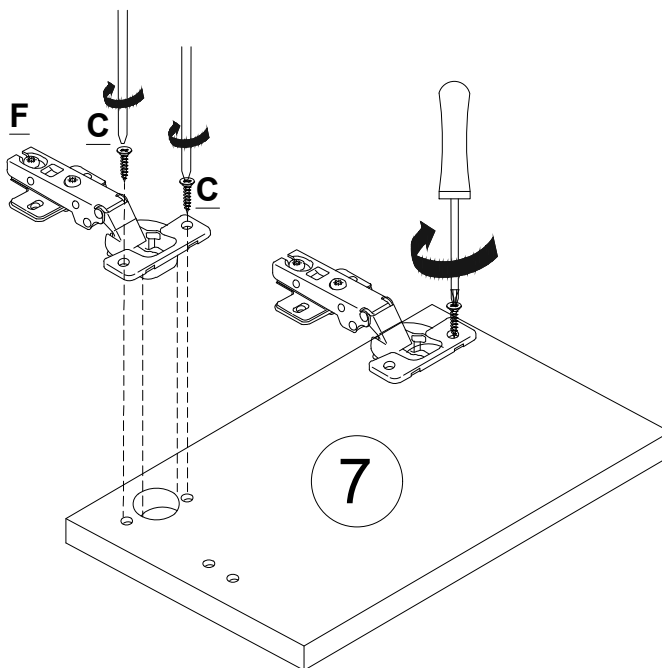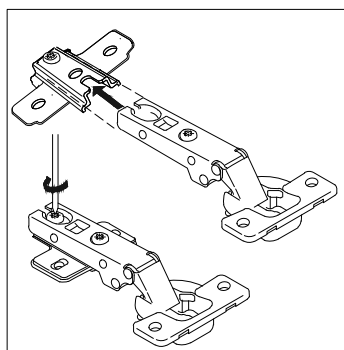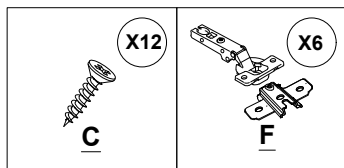

**\*Apply this process to all doors**

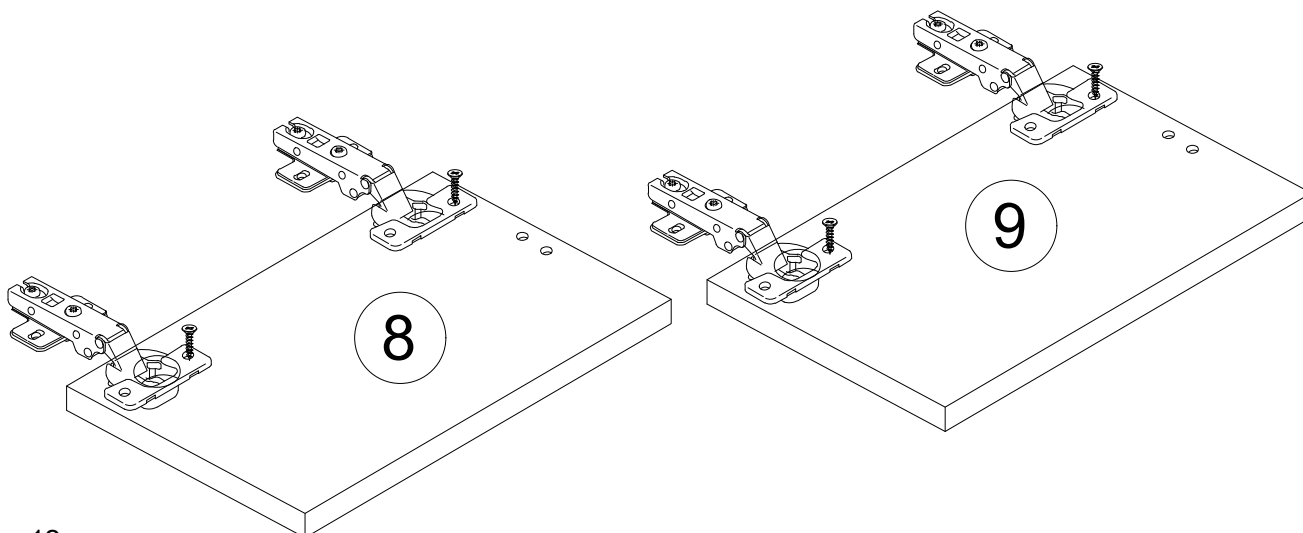

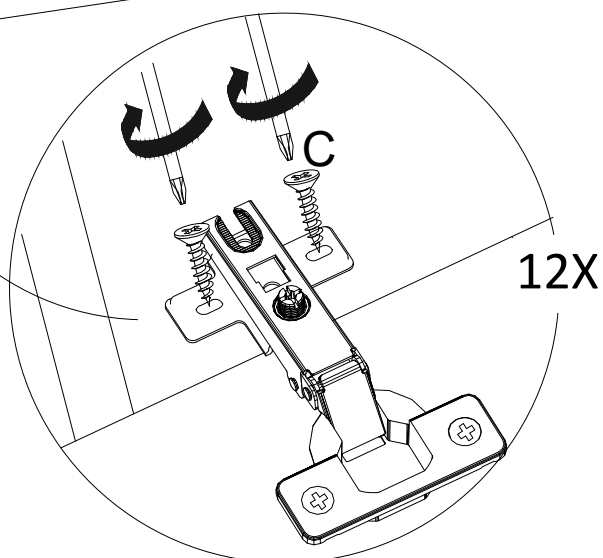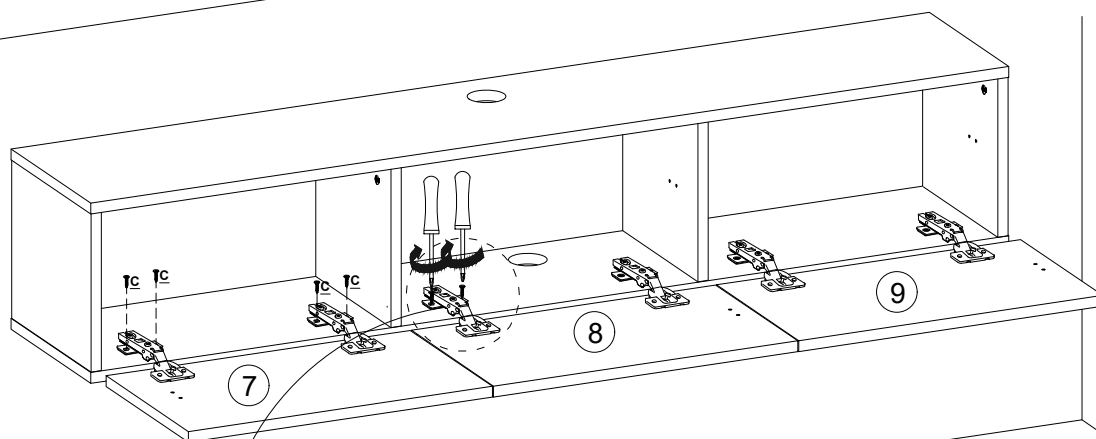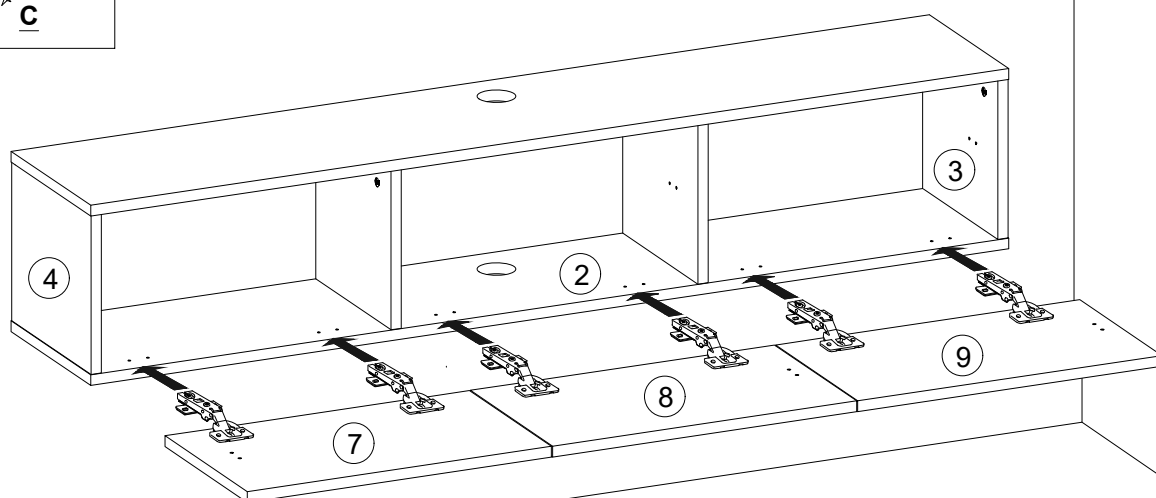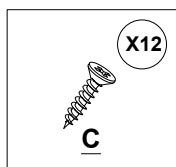


**\*Apply this process to all hinges**




# Door Adjustments

**F**


**Left-Right**

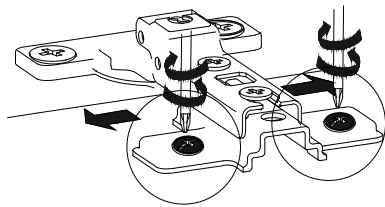


**use this screw**

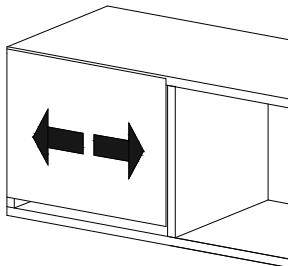


**Back and Forth**

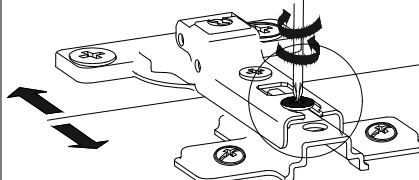


**use this screw**



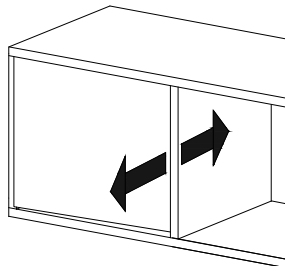


**Up-Down**

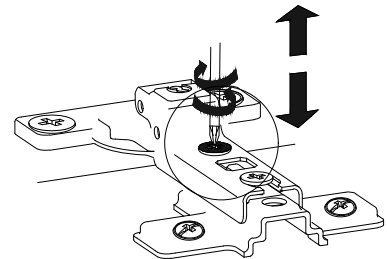


**use this screw**

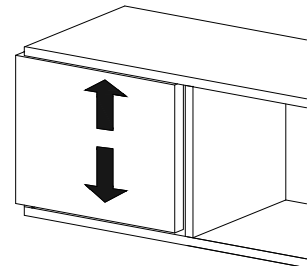

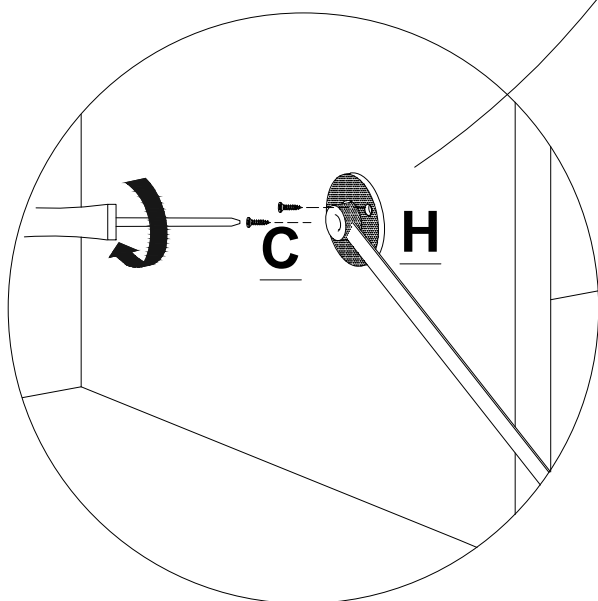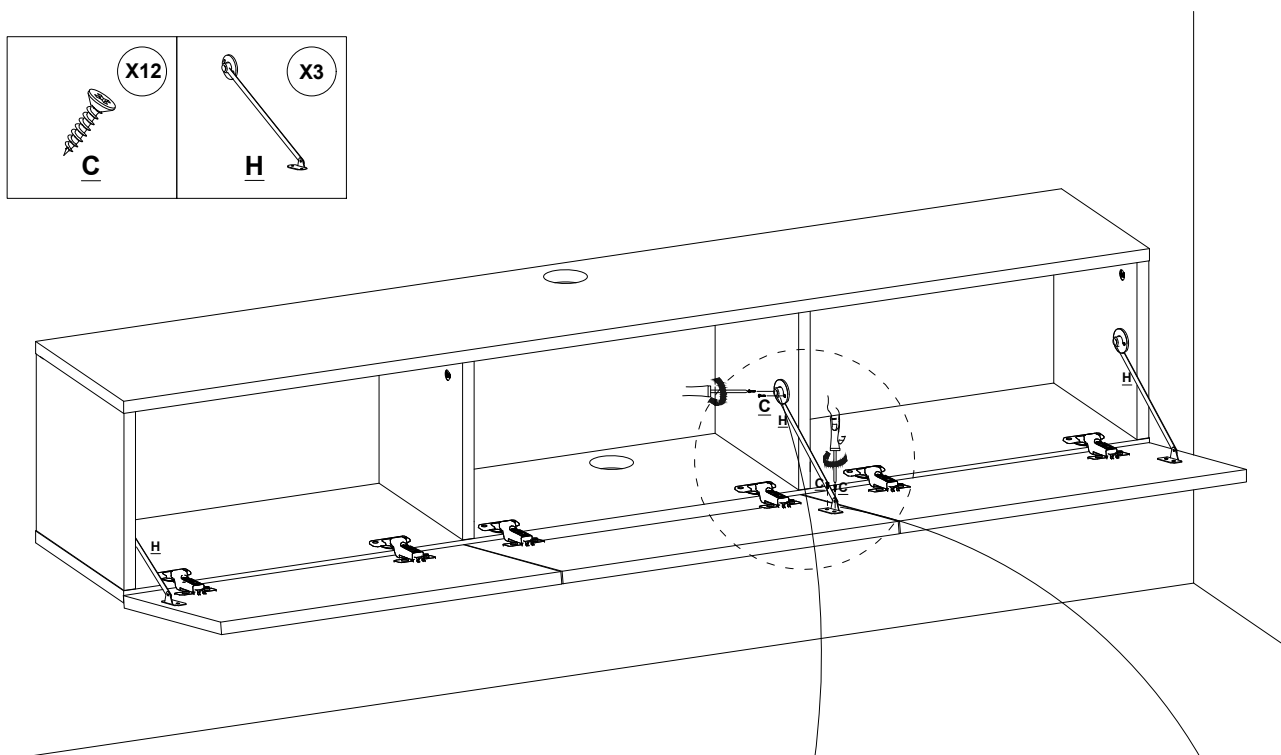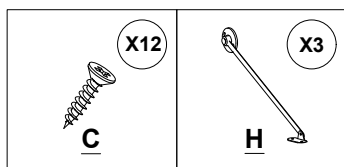

**STEP 1**

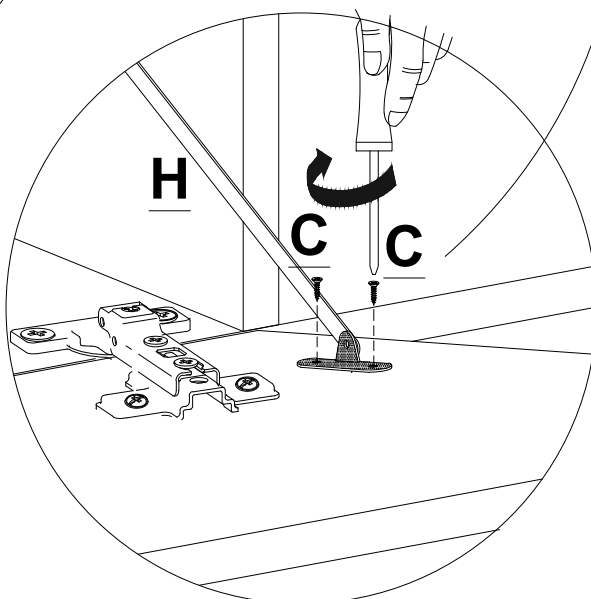

**STEP 2**

