

Solid Desk	
Model	Meter Desk

Meter Desk


Hardware List

[illegible]


Desk Installation Diagram

Step 1: Install the front and back feet.



Hardware: A, B, C, D, E.

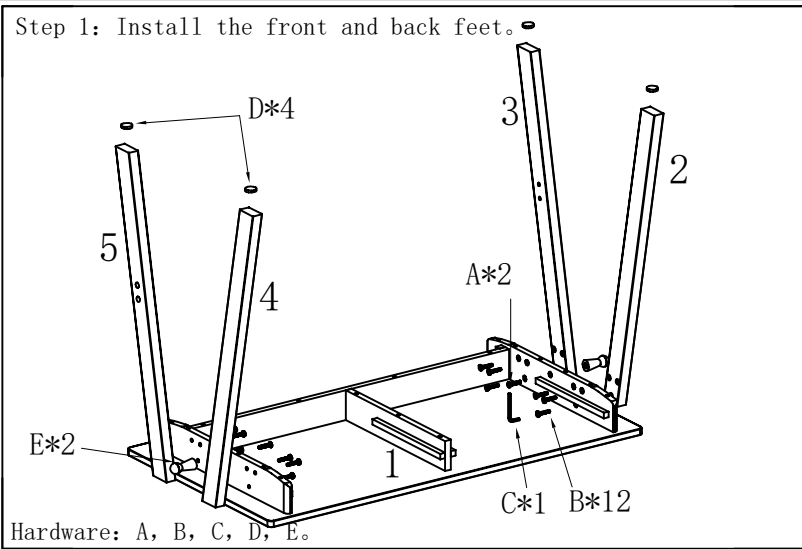

Step 3: Place the left and right drawers.

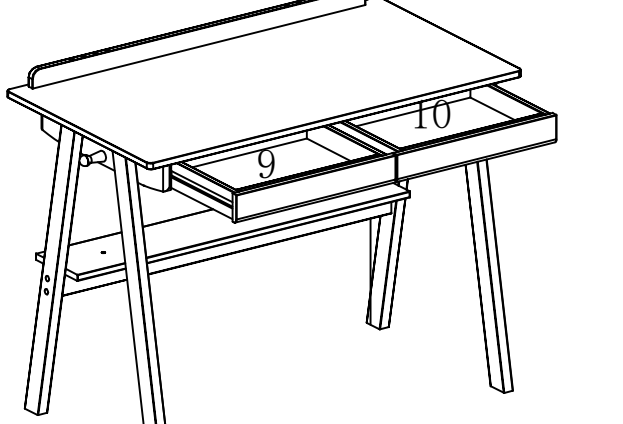


Step 3: Place the left and right drawers.

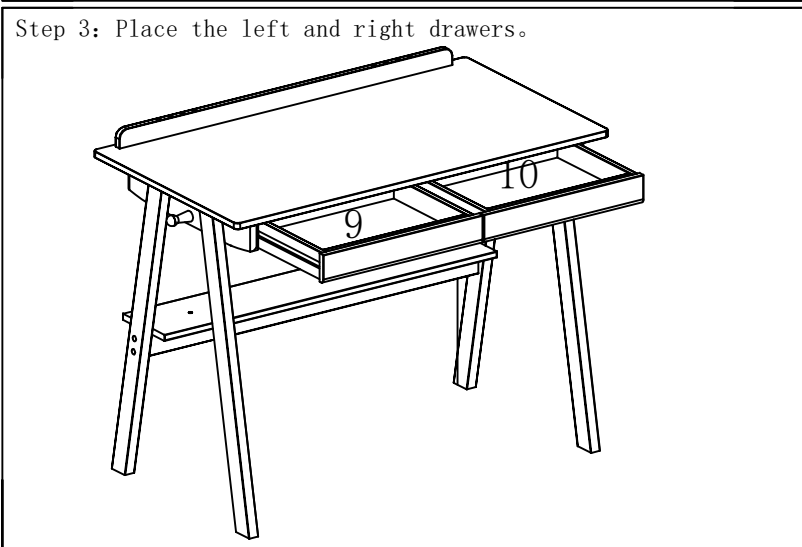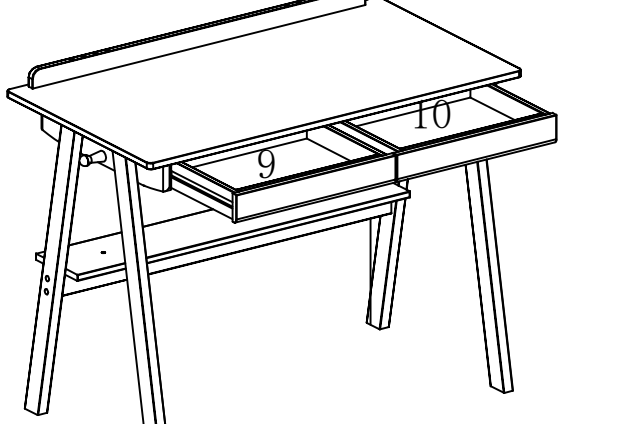


Step 2: Install the bottom brace and Storage board and trim strip.

The diagram shows the assembly of the bottom section of the stool. A long wooden board, labeled '8', is being attached to the underside of the seat. Below the seat, a horizontal wooden brace, labeled '7', is being installed between the legs. A trim strip, labeled '6', is being attached to the bottom of the legs. Hardware 'B' (screws) and 'C' (corner braces) are indicated by arrows pointing to the assembly points. The label 'C*1' points to a corner brace on the left leg, and 'B*9' points to a screw on the brace. The label 'L' with an equals sign points to the trim strip on the left leg.



Hardware: B, C.

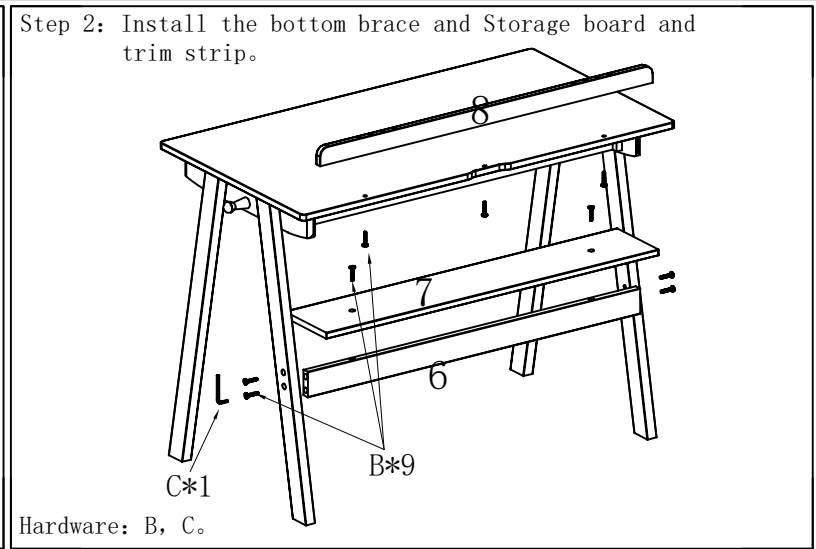

Step 4: Complete the installation.

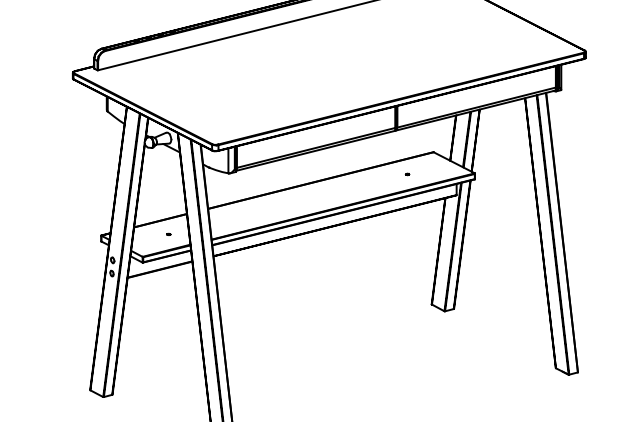A line drawing of a wooden table with a shelf and a backrest. The table has four legs, a rectangular top, and a shelf underneath. A backrest is attached to the top edge. The drawing is a simple line art illustration.

Step 4: Complete the installation.

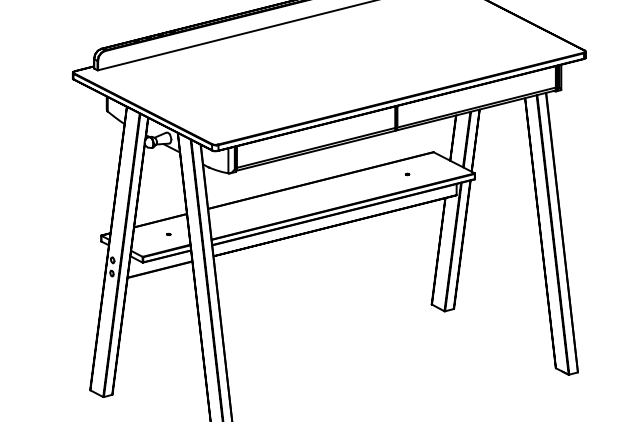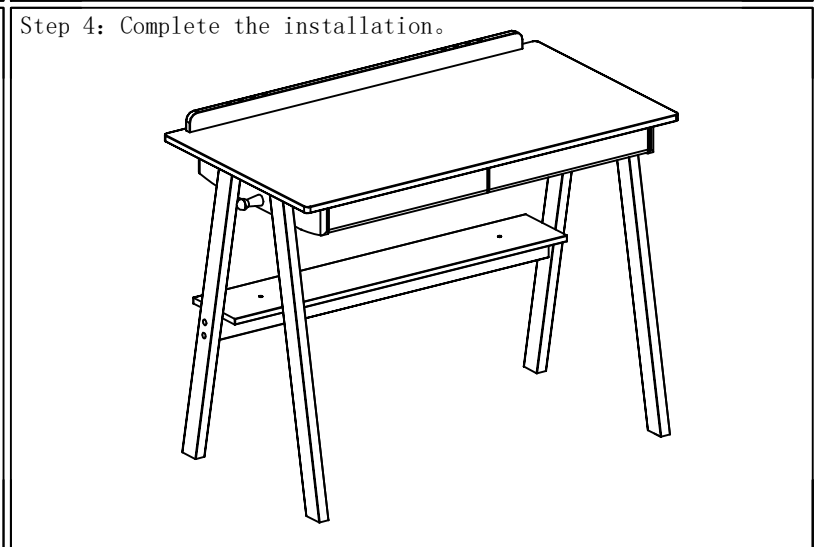A line drawing of a wooden table with a shelf and a backrest. The table has four legs, a rectangular top, and a shelf underneath. A backrest is attached to the top edge. The drawing is a simple line art illustration.

Hardware list	A Phillips Pan Head Screws		C Hex Wrench		E Solid Wood Hook	
	 2PCS		 1PCS		 2PCS	
	B Flat Hex Head Screws		D Plush Washer		F	
	 21pcs		 4PCS			