


Storage Cabinet

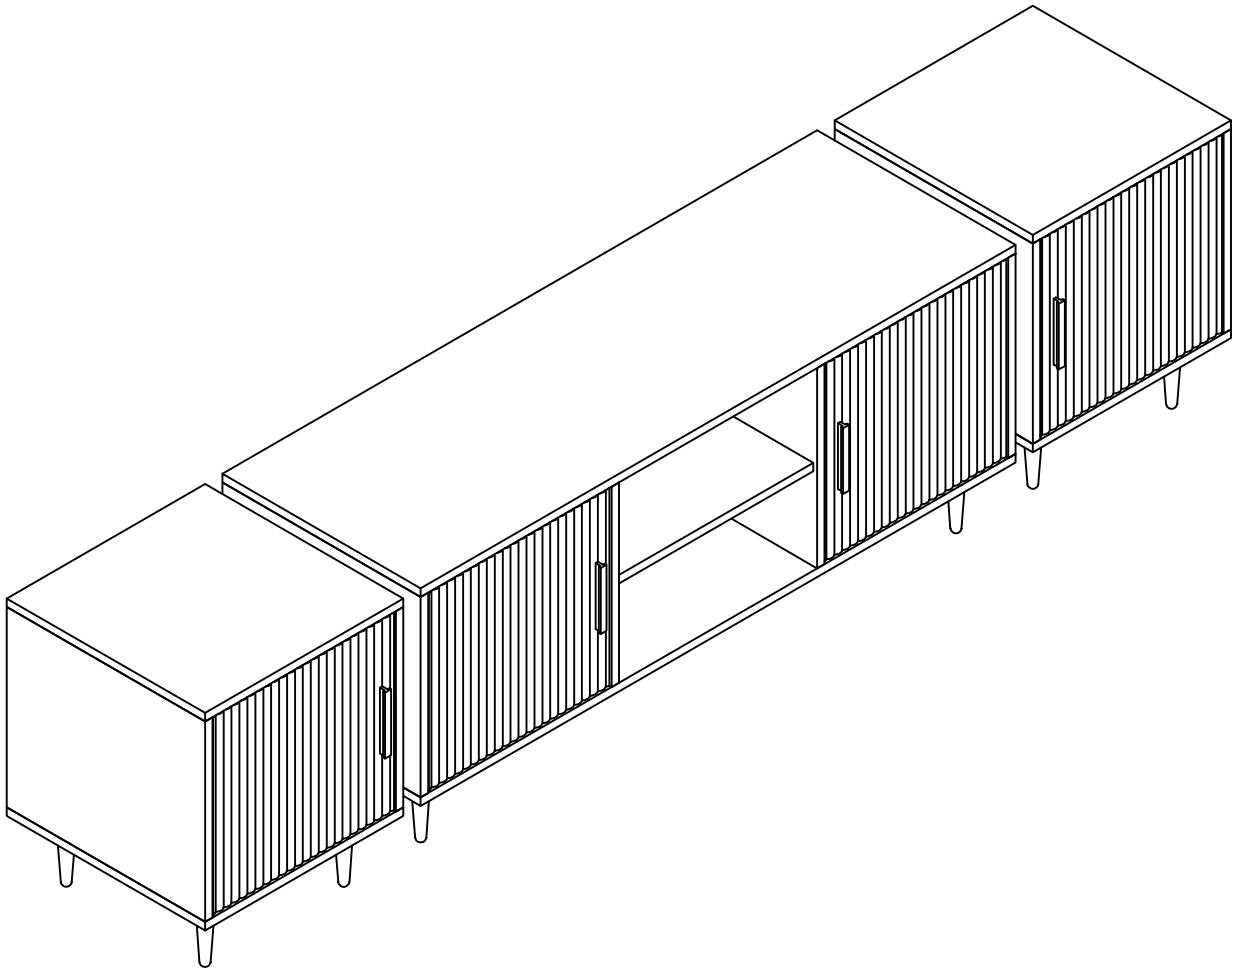

Made in China


WARNING

Serious or fatal injury may occur from unexpected assembly or use.





1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.











 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.

Parts List (EN) / Teile Liste (DE)




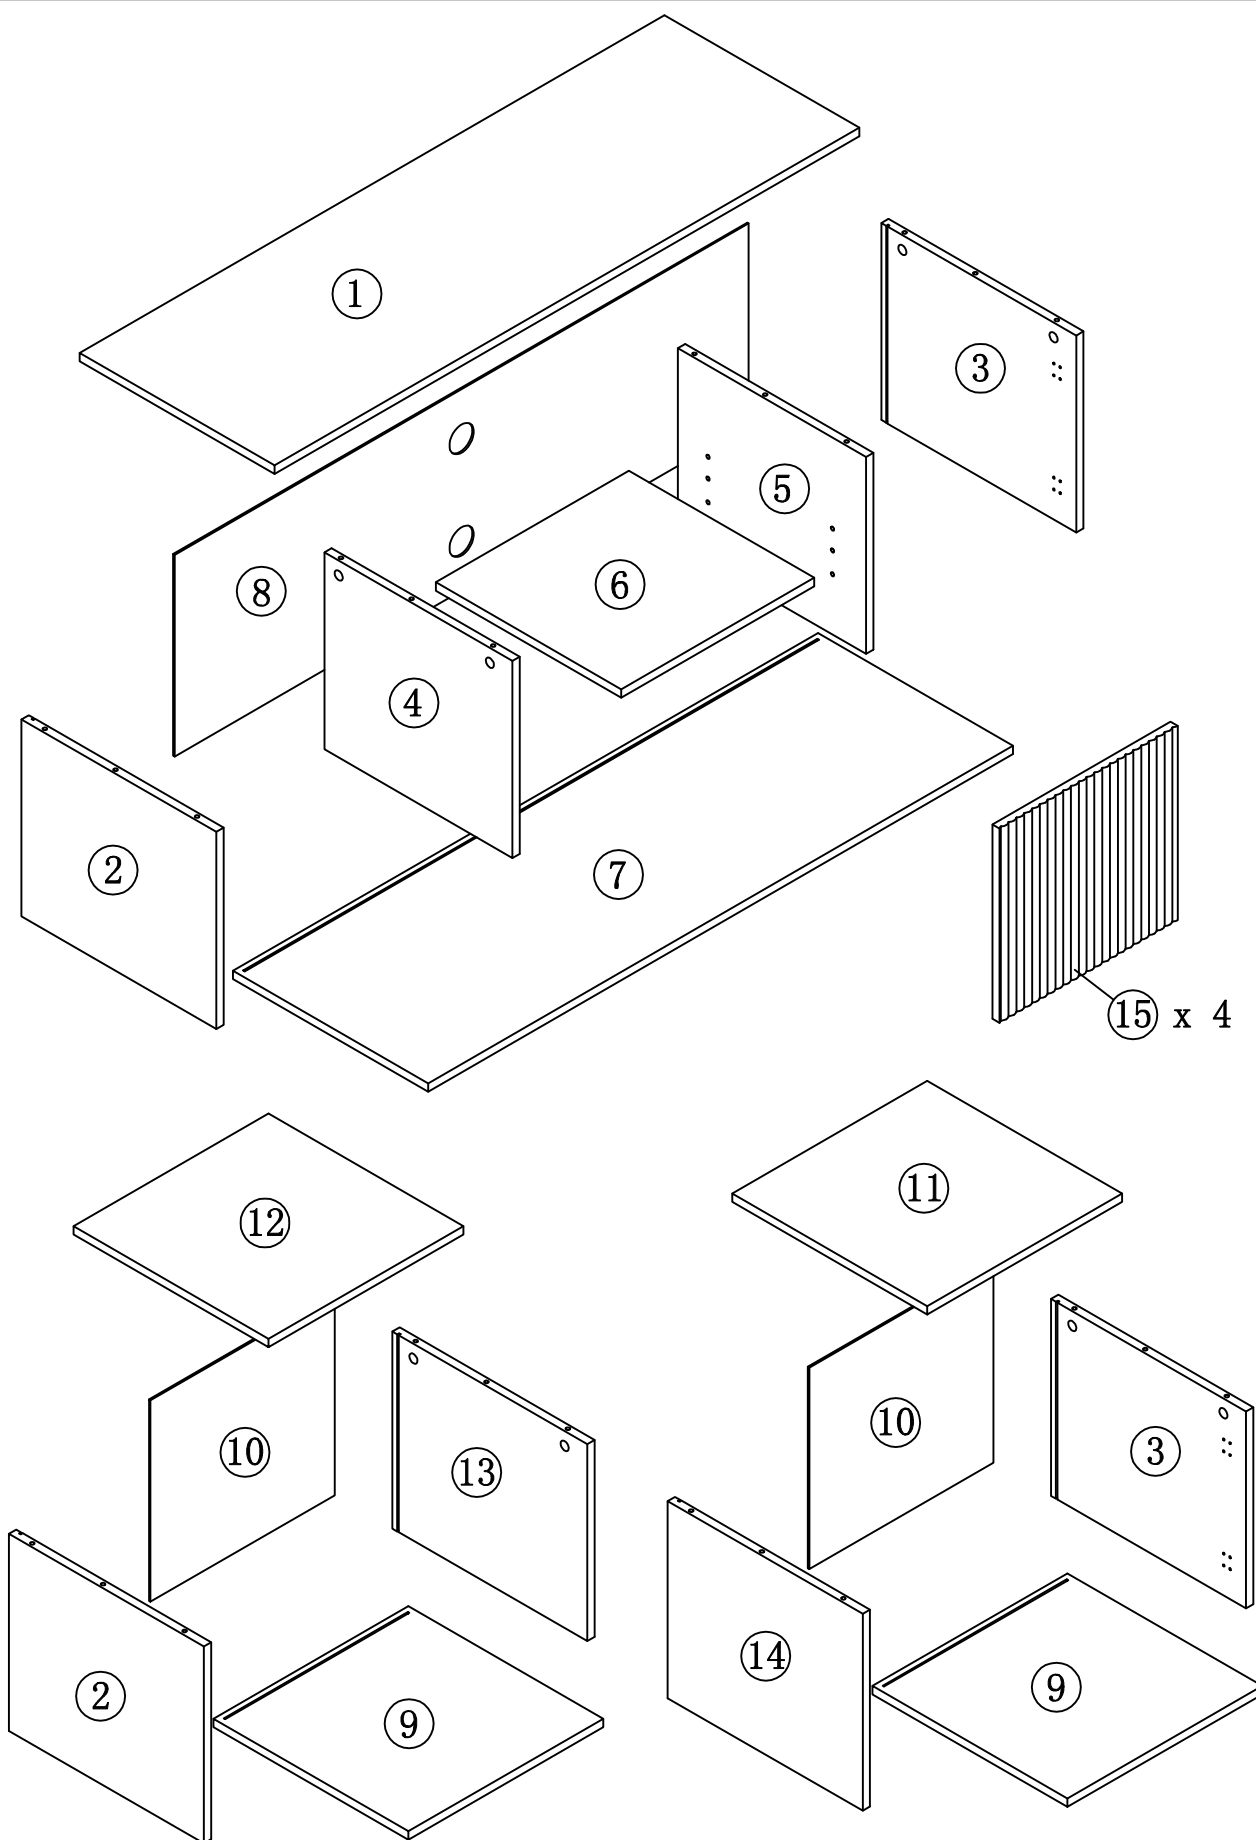


Parts List(EN)/Teile Liste(DE)

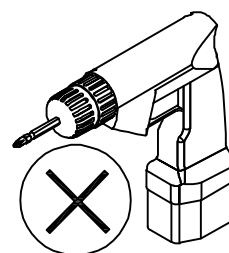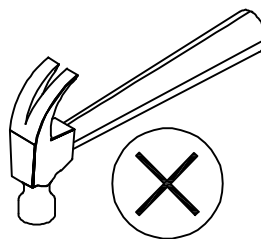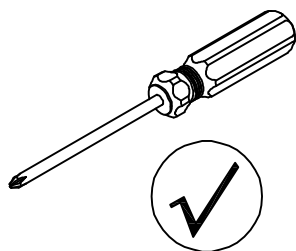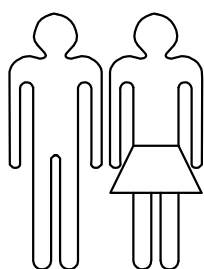


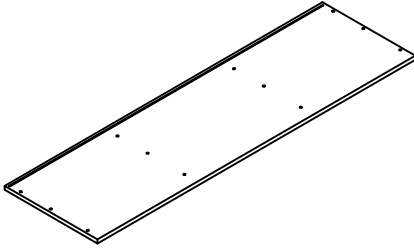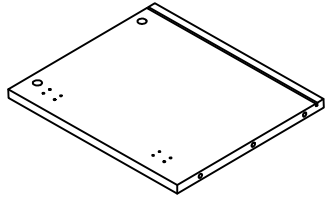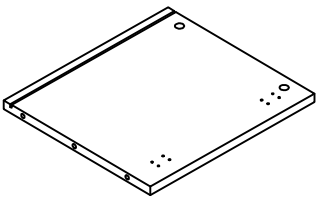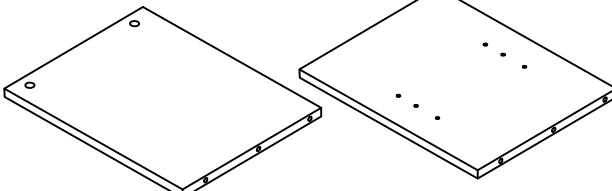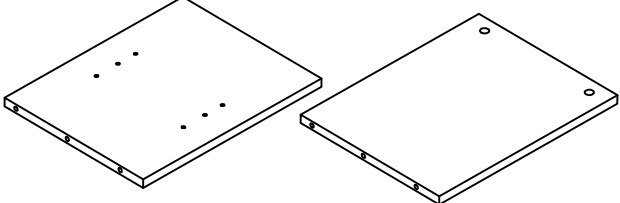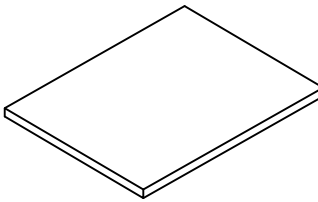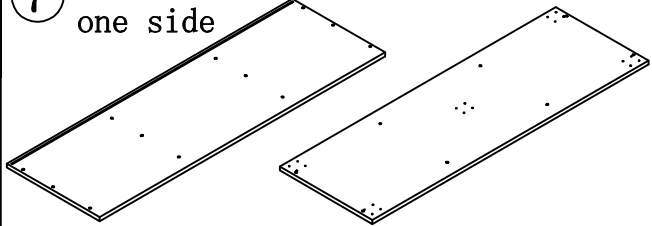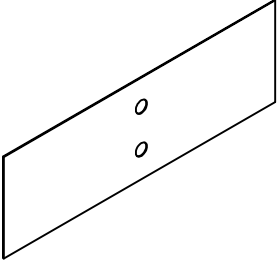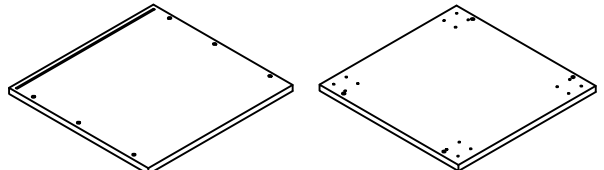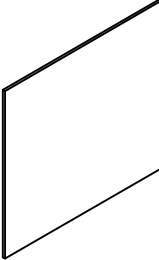①  1200*400*15mm 1PC	②  350*400*15mm 2PCS
③  350*400*15mm 2PCS	④ one side the other side  350*384*15mm 1PC
⑤ one side the other side  350*384*15mm 1PC	⑥  396*378*15mm 1PC
⑦ one side the other side  1200*400*15mm 1PC	⑧  1178*358*3mm 1PC
⑨ one side the other side  400*400*15mm 2PCS	⑩  358*378*3mm 2PCS

Parts List (EN) / Teile Liste (DE)

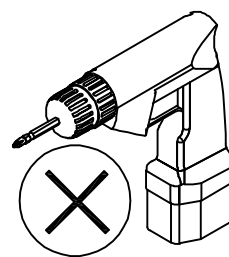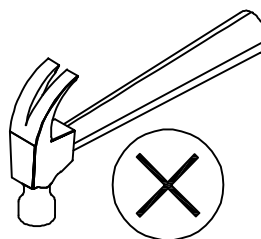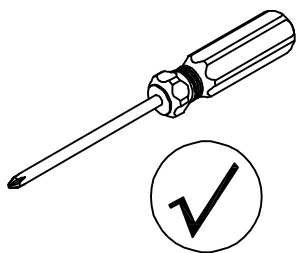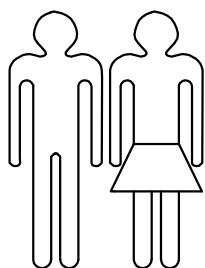


11

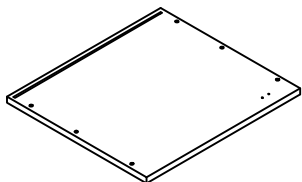

400*400*15mm

1PC


12

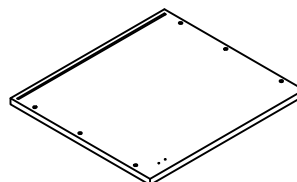

400*400*15mm

1PC


13

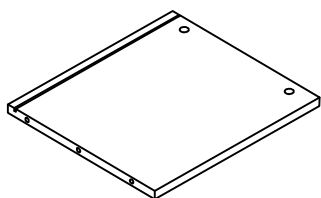

350*400*15mm

1PC


14

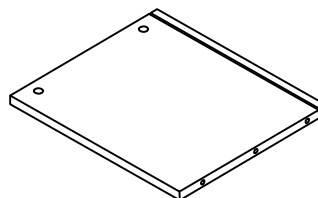

350*400*15mm

1PC





15










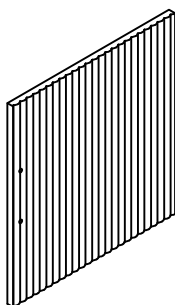


345*365*15mm

4PCS



Hardware List (EN) / Teile Liste (DE)

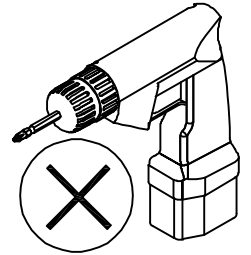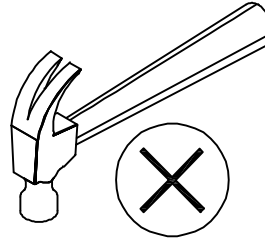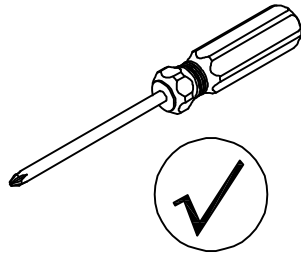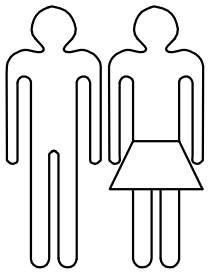


A  Ø15*9mm 16PCS	B  Ø6*29mm 16PCS	C  Ø8*30mm 16PCS	D  M4*20mm 8PCS
E  Ø96mm 4PCS	F  Ø3*15mm 72PCS	G  Ø26mm 8PCS	H  Ø7*50mm 16PCS
I  Ø20mm 16PCS	J  29*14*9mm 4PCS	K  11*11*15mm 16PCS	L  M4 1PC
M  120mm 12PCS	N  116mm 1PC	O  Ø4*14mm 52PCS	P  Ø6*17mm 4PCS

Assembly (EN) /Montageschritte (DE)


CAM BOLT INSTALLATION AS BELOW:

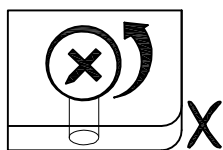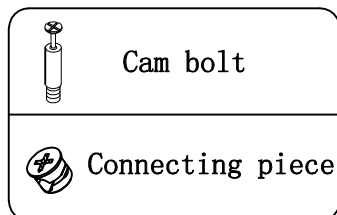


Rotate connecting piece if found in the position illustrated above.

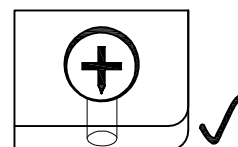

Correct orientation to
receive bilts.

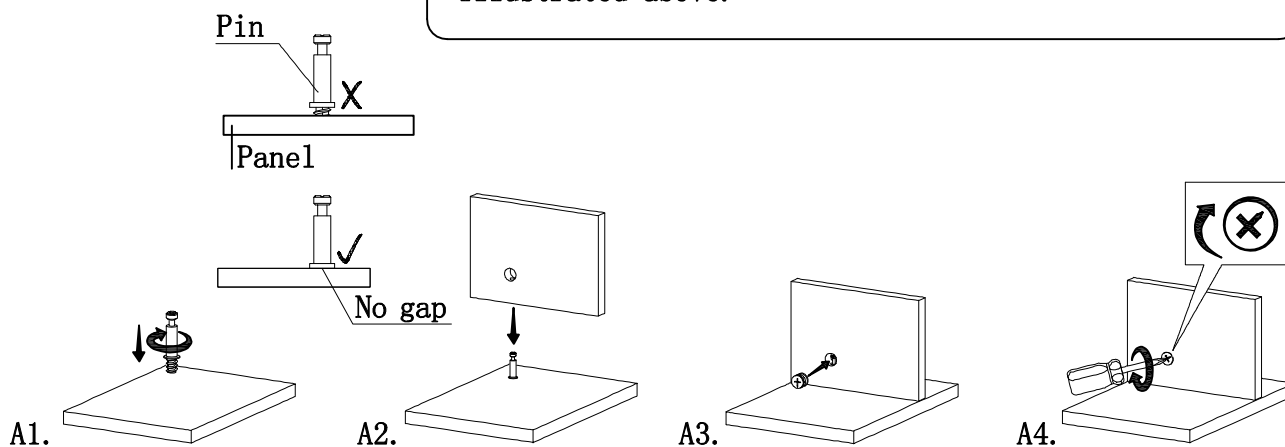


STEP 1

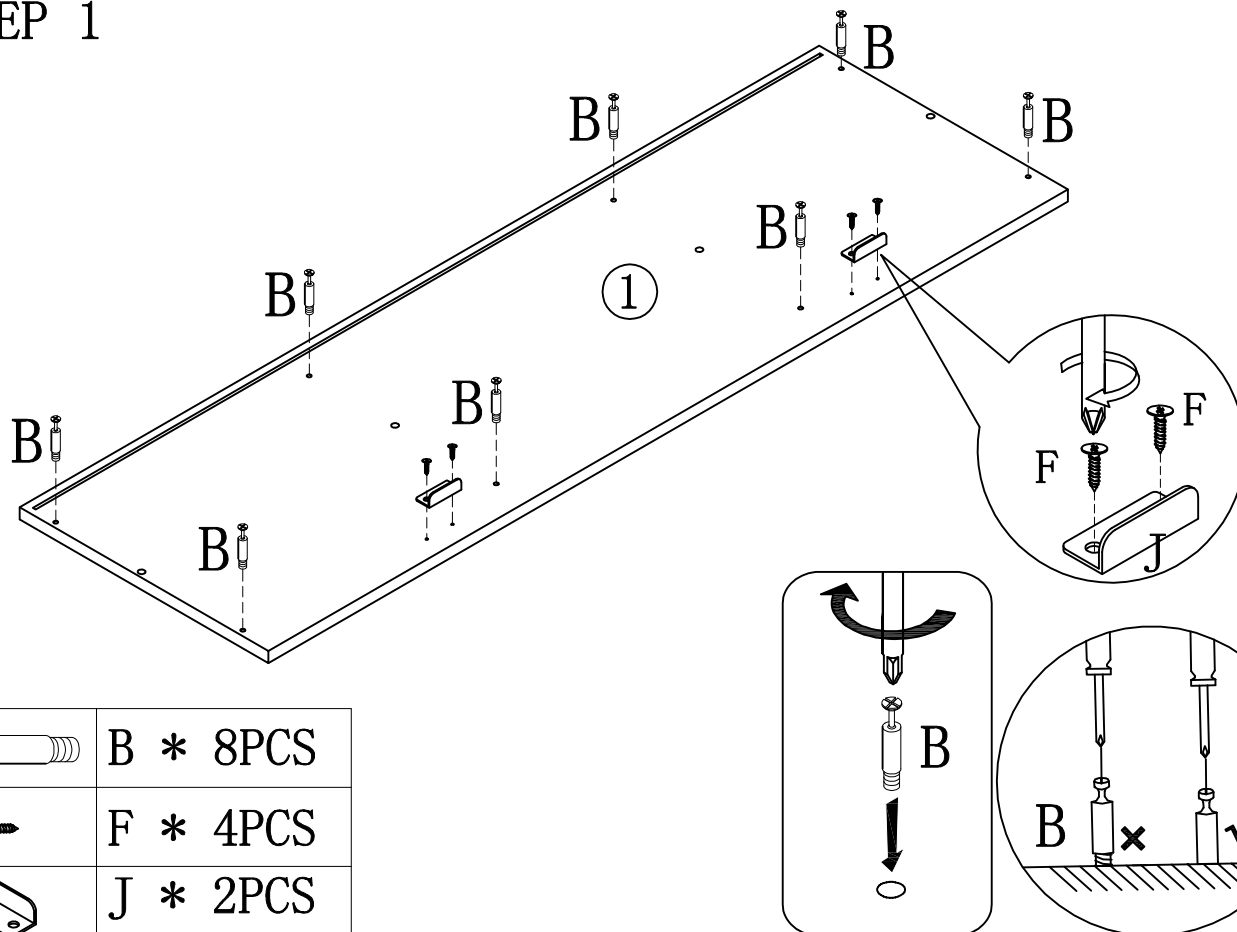

	B * 8PCS
	F * 4PCS
	J * 2PCS


STEP 2

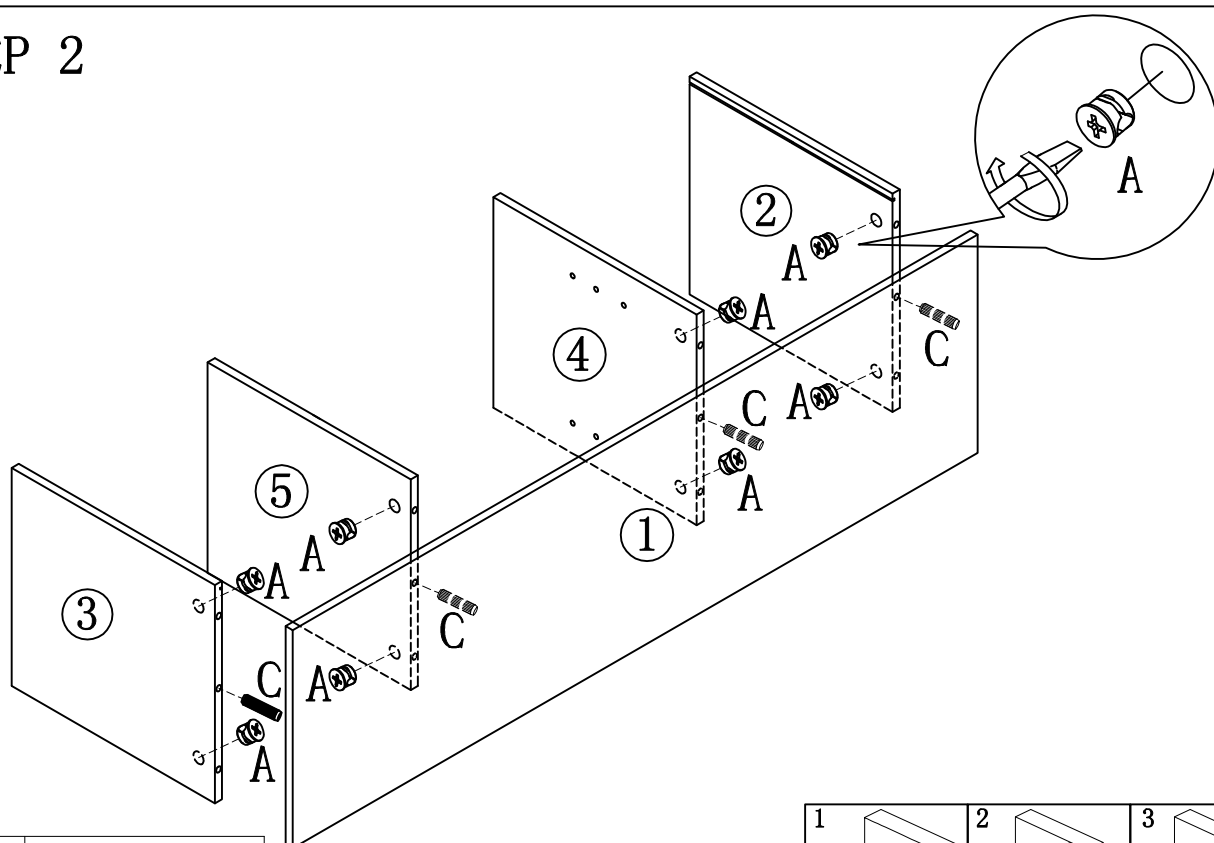

C * 4PCS




A * 8PCS

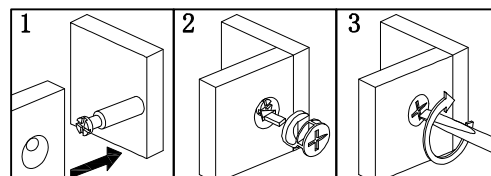

STEP 3



Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

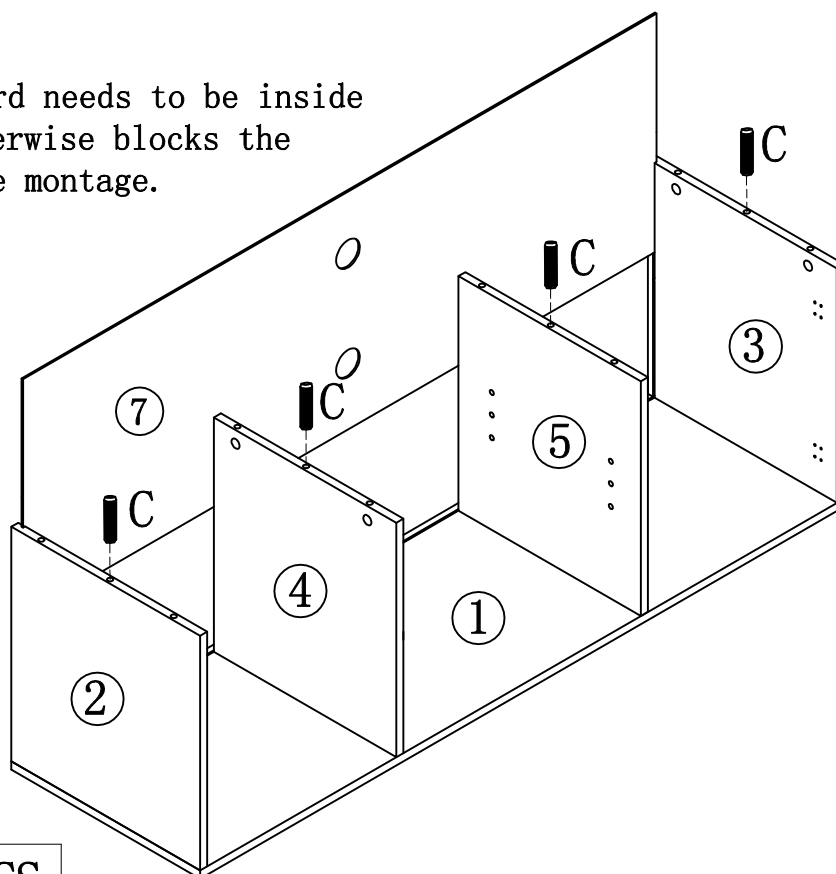

C * 4PCS

Assembly (EN) /Montageschritte (DE)

STEP 4


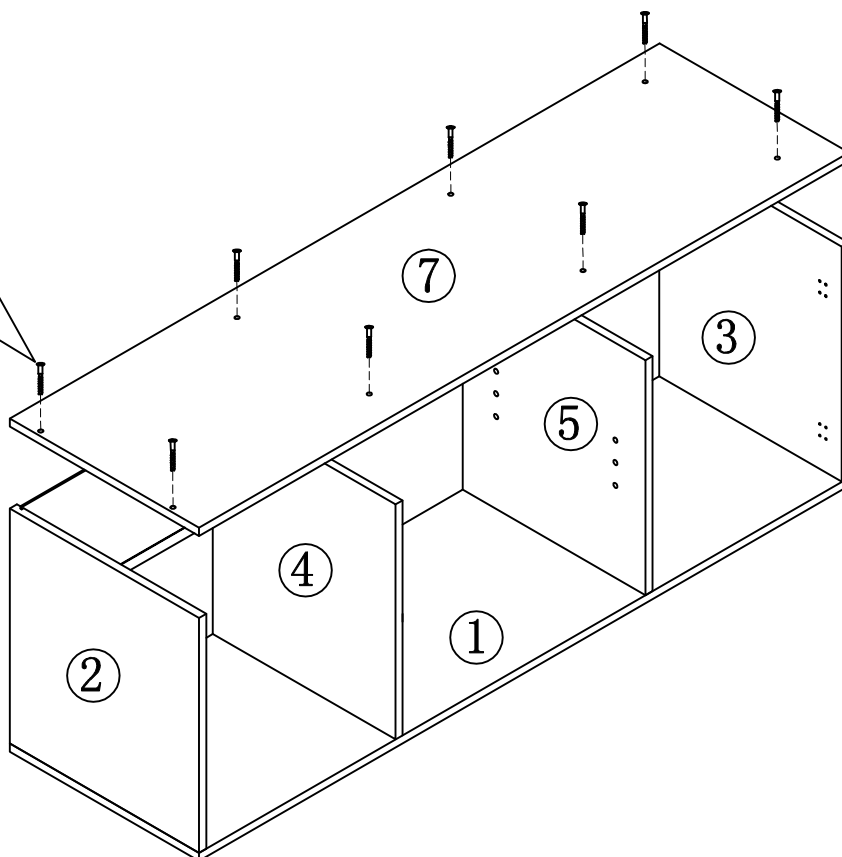
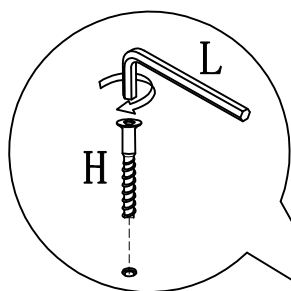


H * 8PCS



L * 1PC

STEP 5

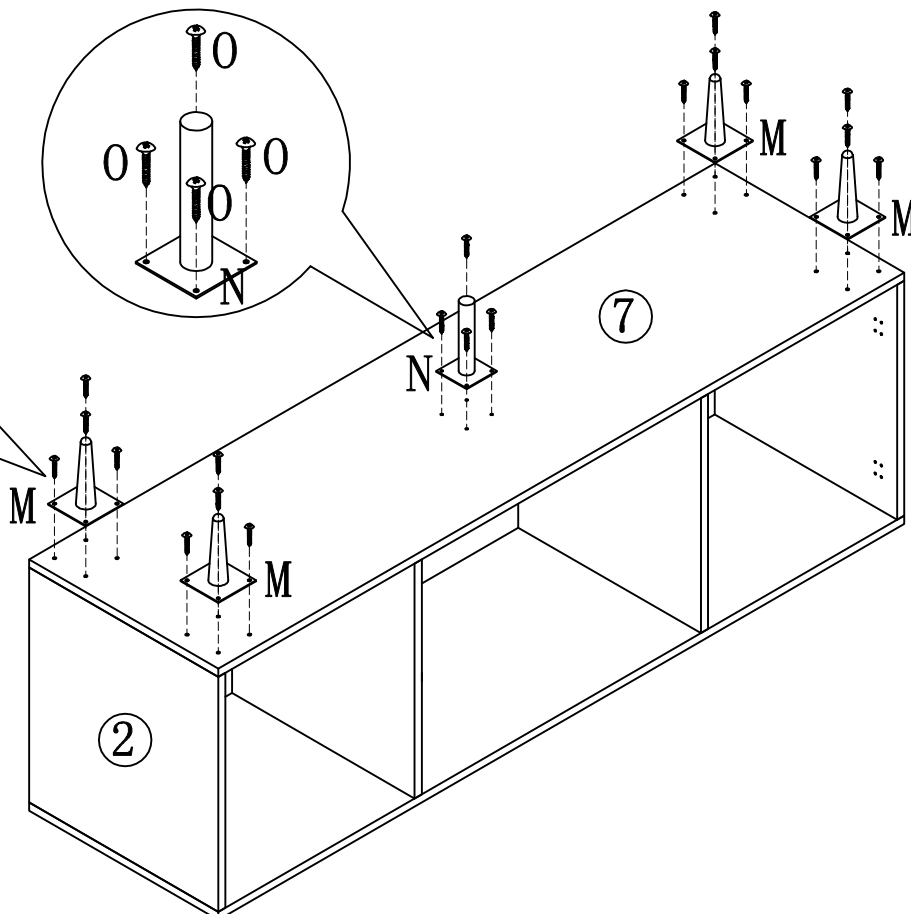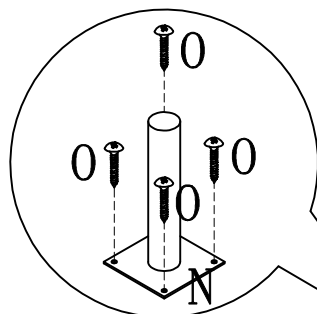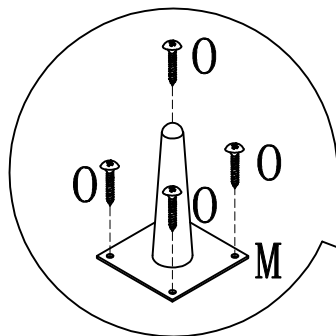

M * 4PCS




N * 1PC




O * 20PCS

STEP 6

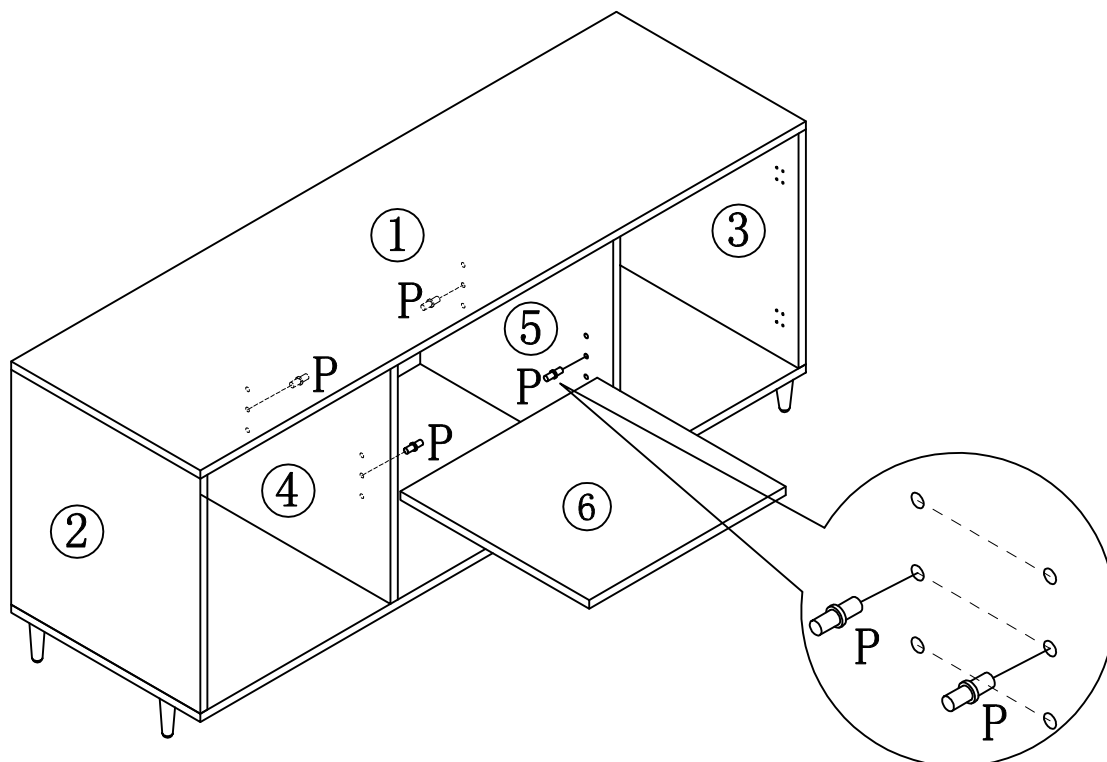

P * 4PCS

STEP 7

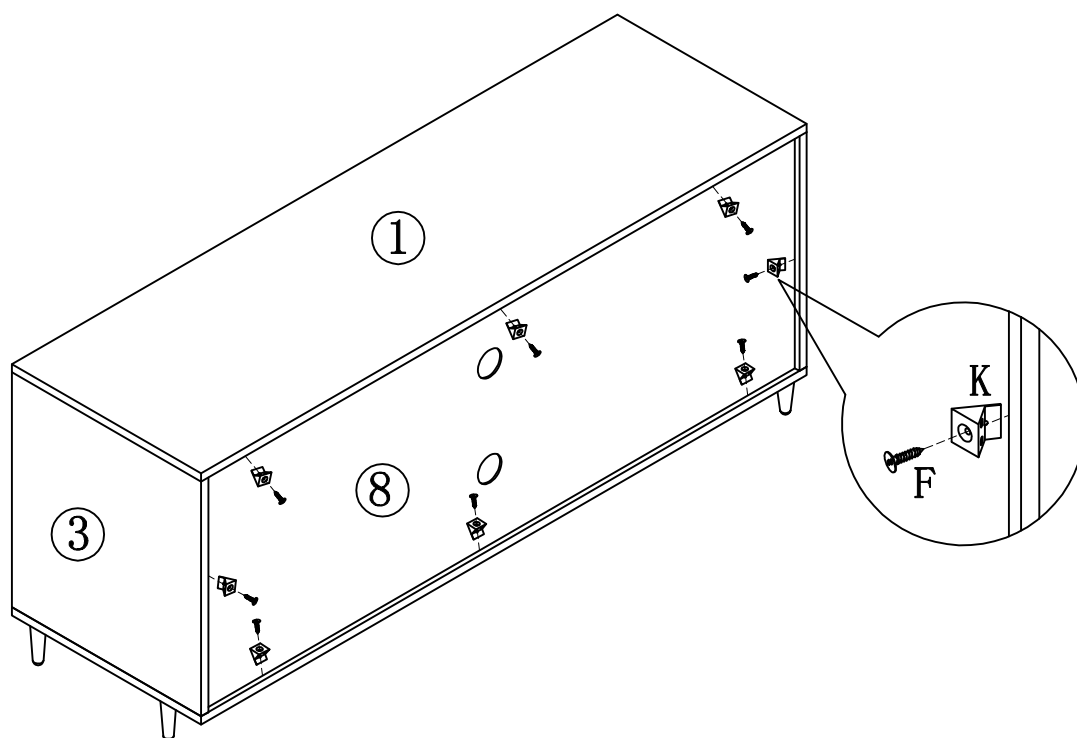


K * 8PCS




F * 8PCS

Assembly (EN) /Montageschritte (DE)





STEP 8

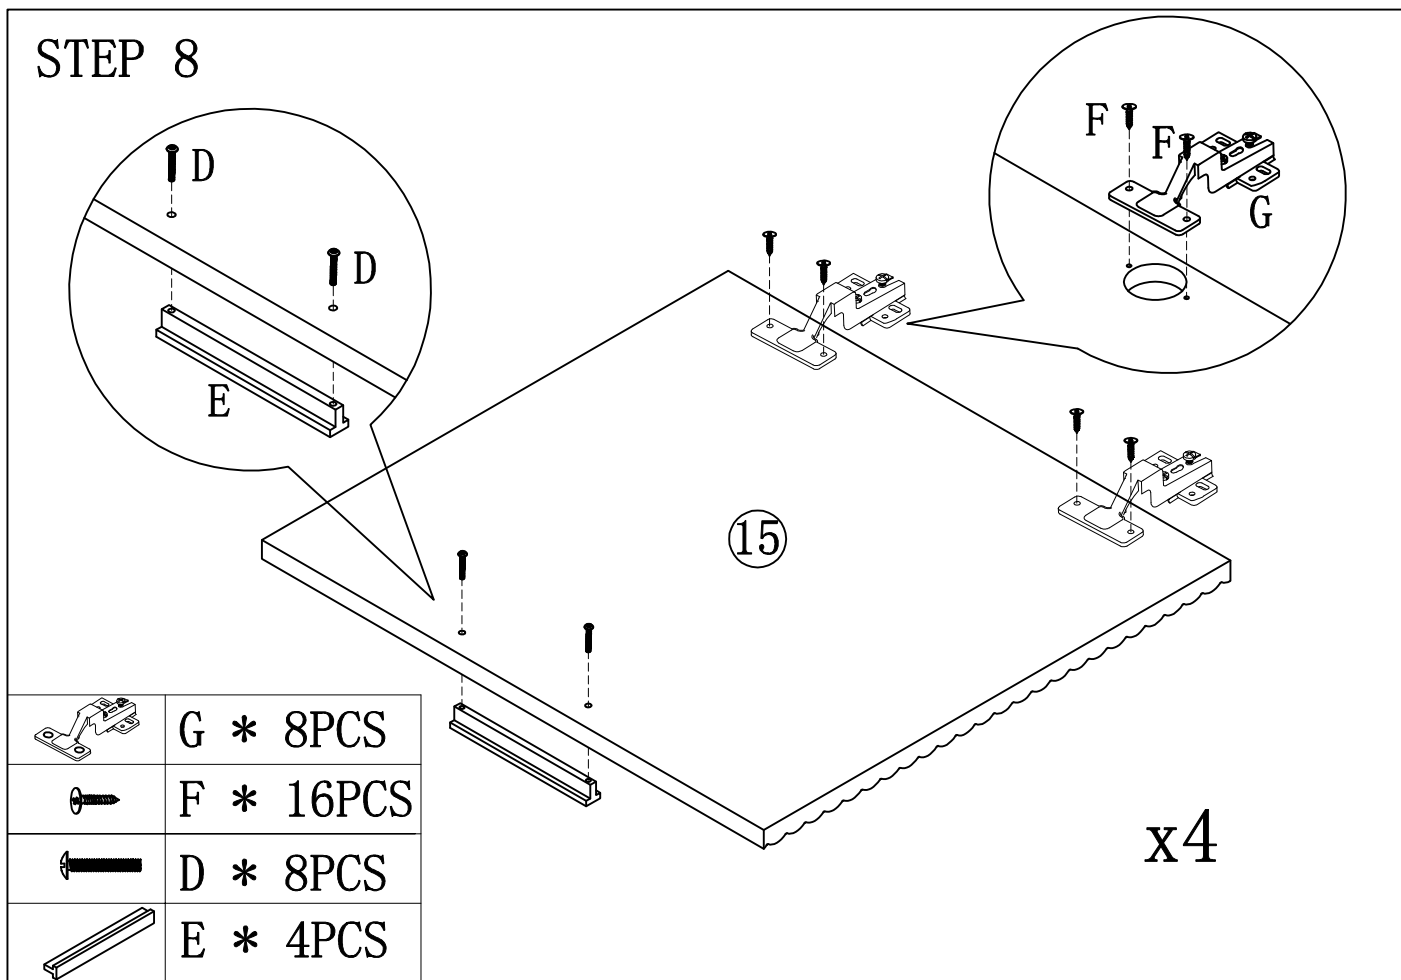


STEP 9

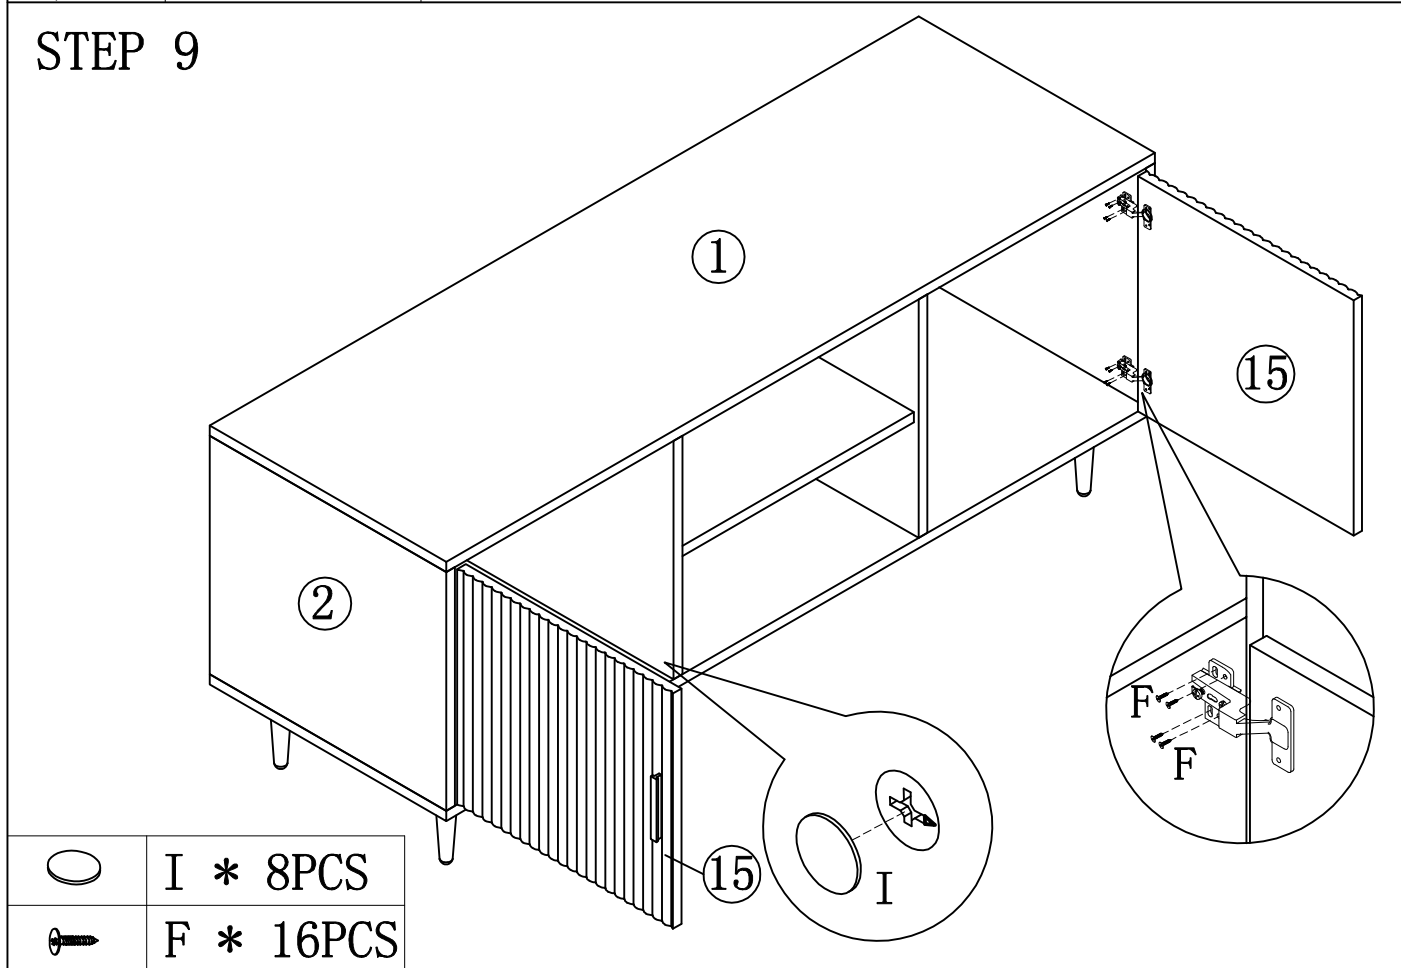


STEP 10

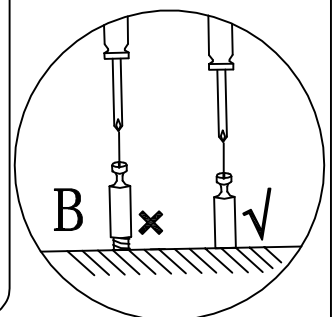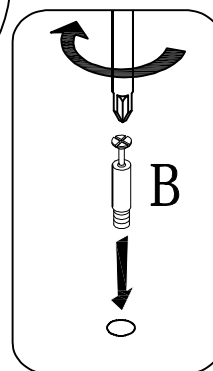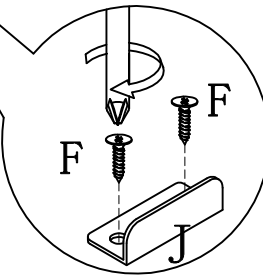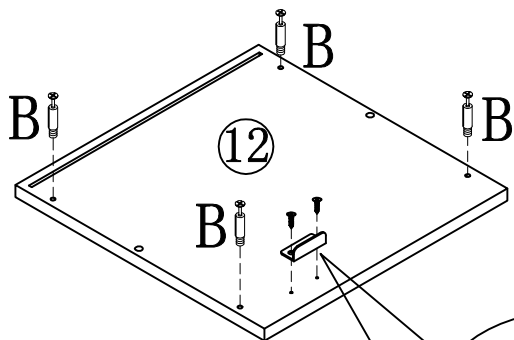


	B * 4PCS
	F * 2PCS
	J * 1PC

STEP 11

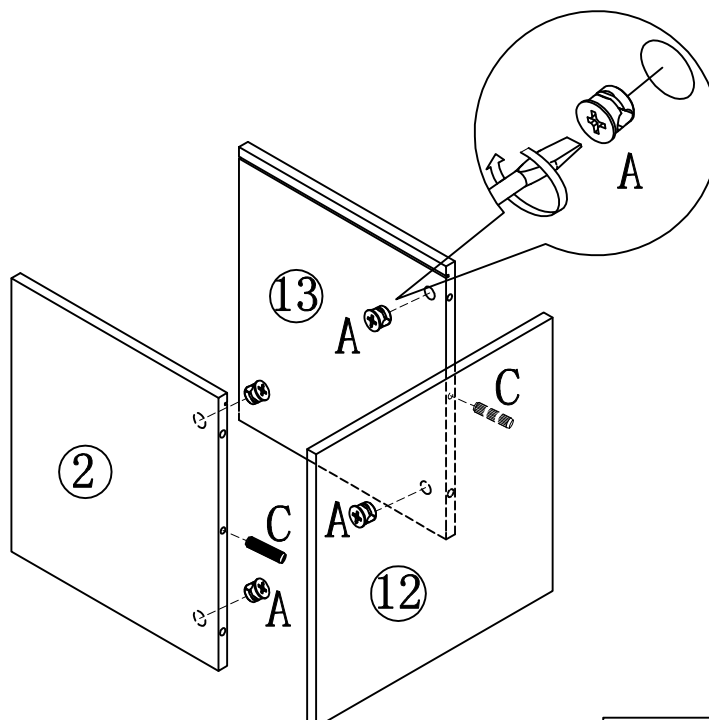


	C * 2PCS
	A * 4PCS

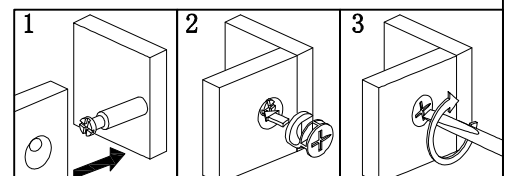

Assembly (EN) /Montageschritte (DE)


STEP 12

Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

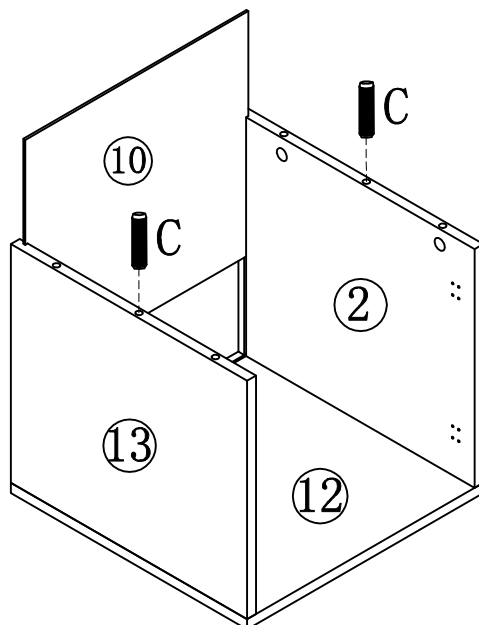

C * 2PCS

STEP 13

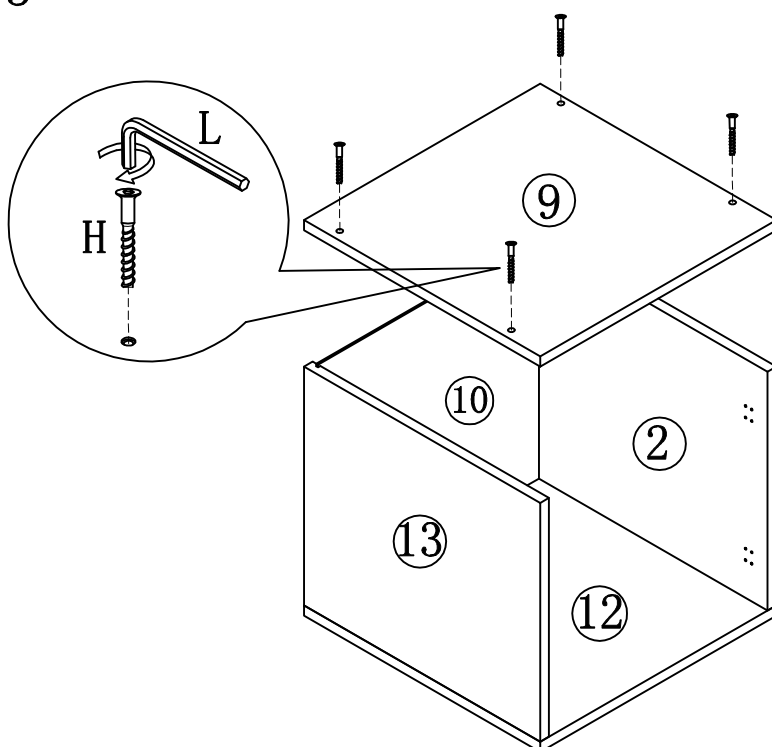


H * 4PCS



L * 1PC

STEP 14

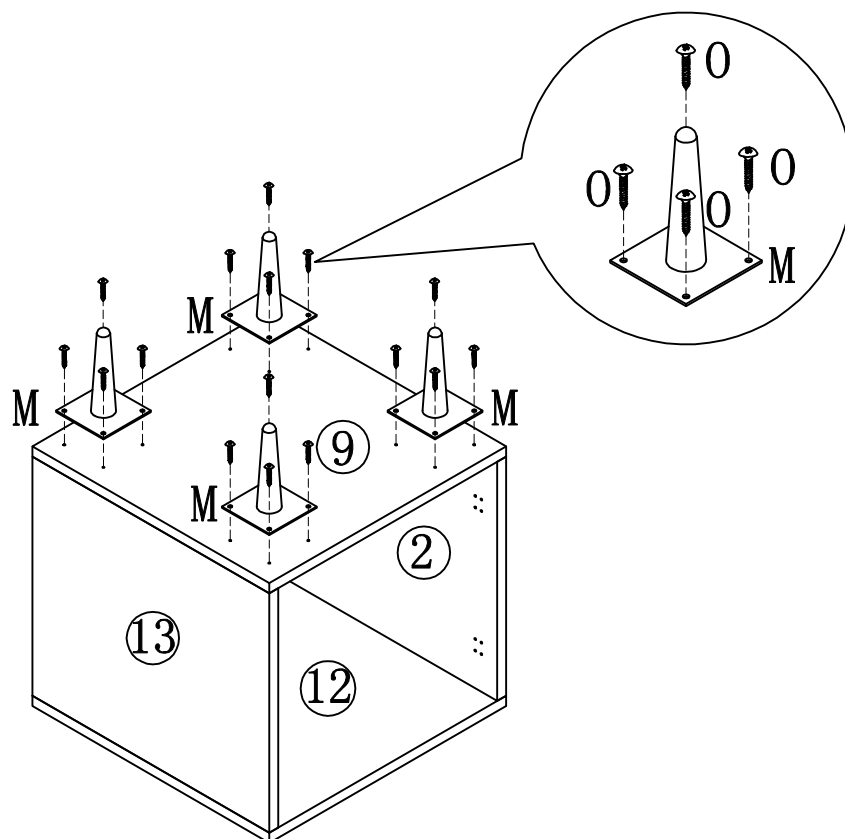


M * 4PCS



0 * 16PCS

STEP 15

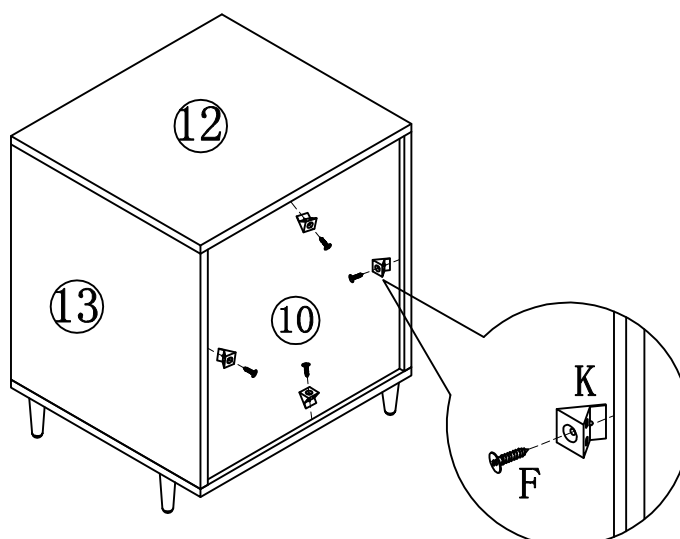


K * 4PCS




F * 4PCS

STEP 16


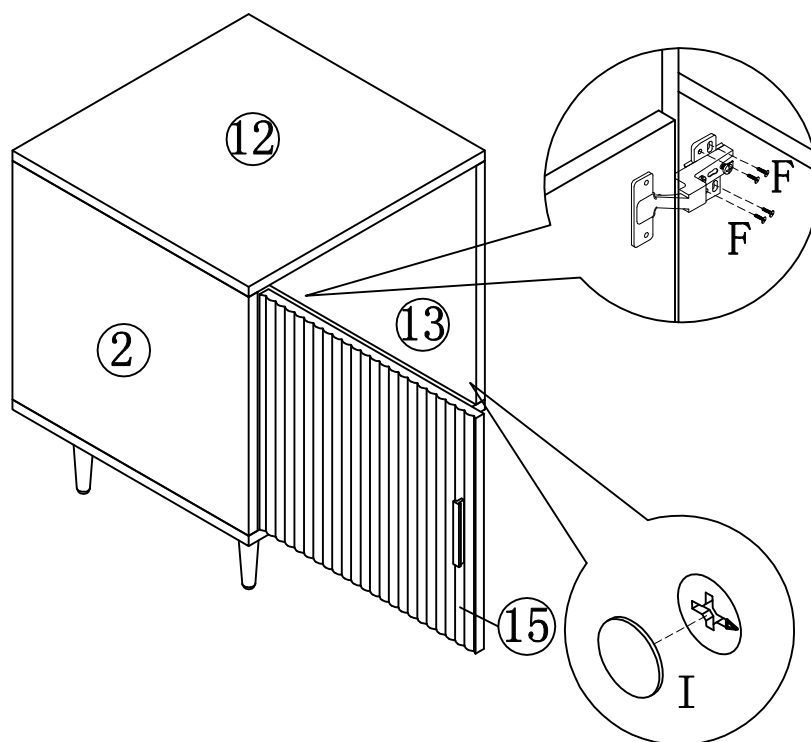


	I * 4PCS
	F * 8PCS


STEP 17

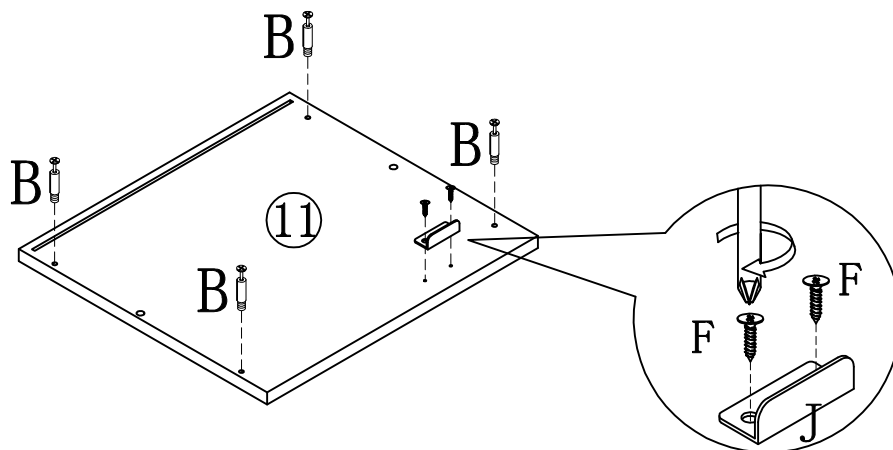


	B * 4PCS
	F * 2PCS
	J * 1PC

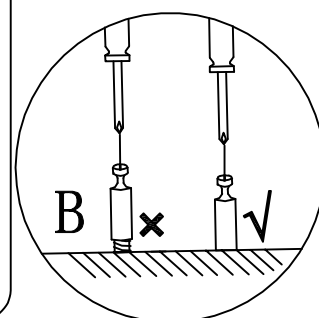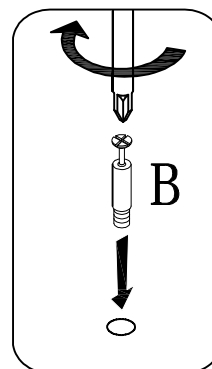

STEP 18

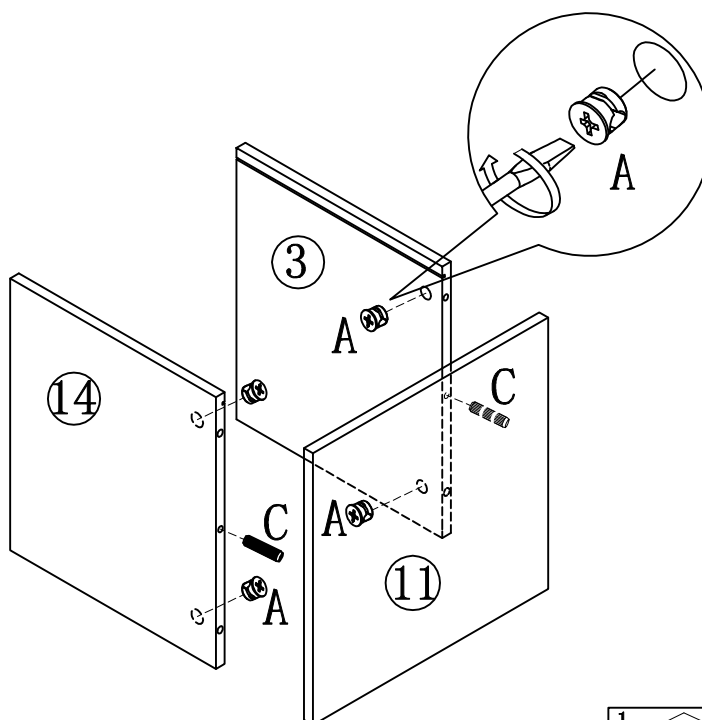


	C * 2PCS
	A * 4PCS

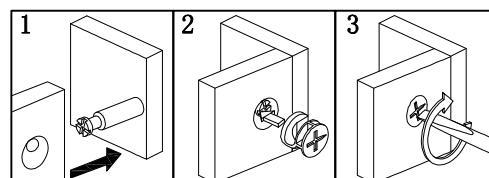


STEP 19

Thin back board needs to be inside the slot, otherwise blocks the opposite plate montage.

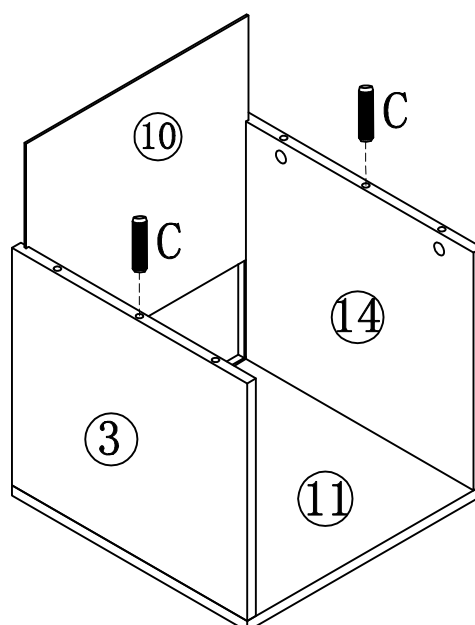


	C * 2PCS
---	----------

STEP 20

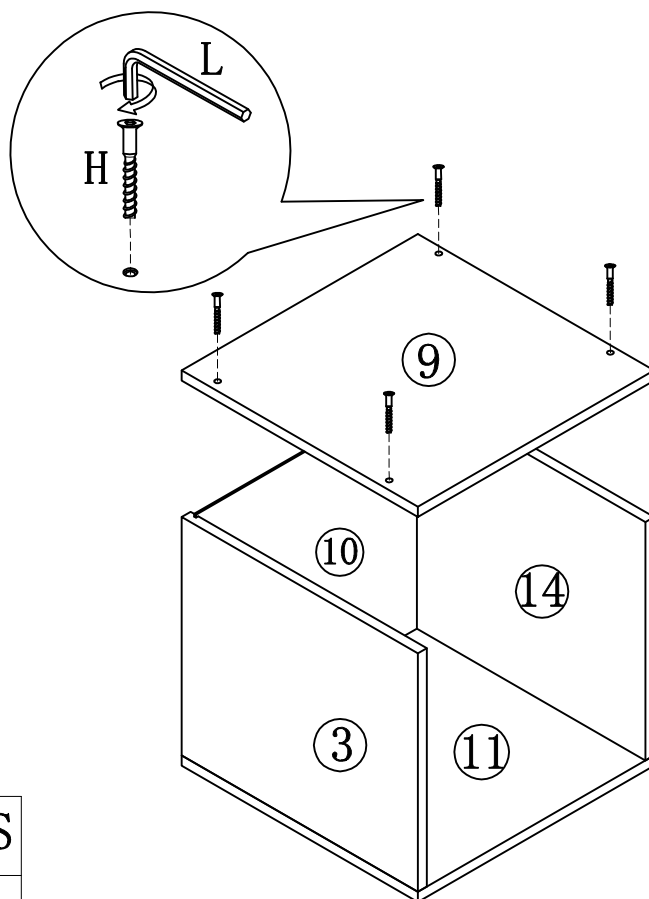


	H * 4PCS
	L * 1PC

STEP 21

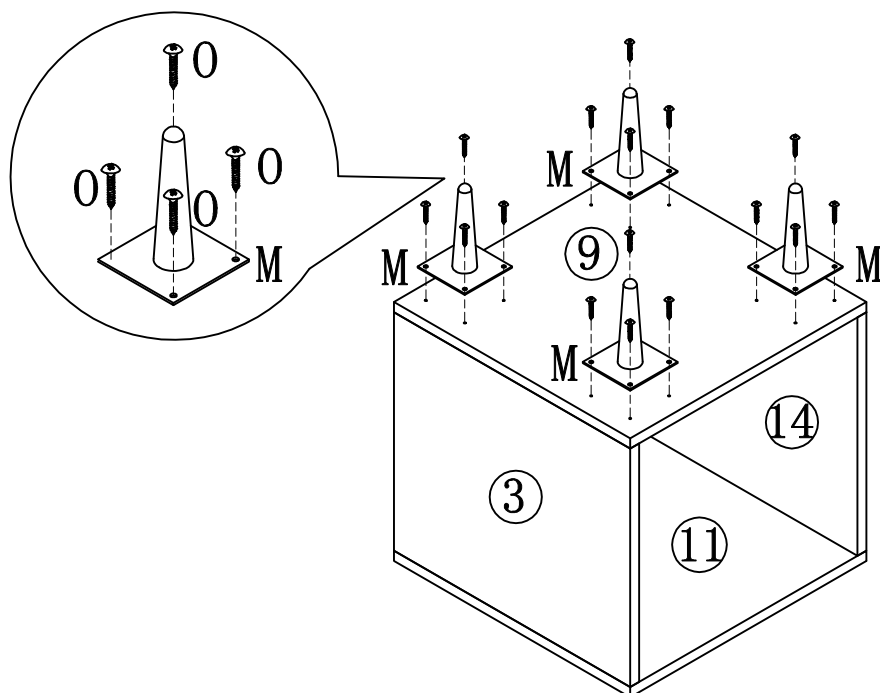


	M * 4PCS
	O * 16PCS

STEP 22

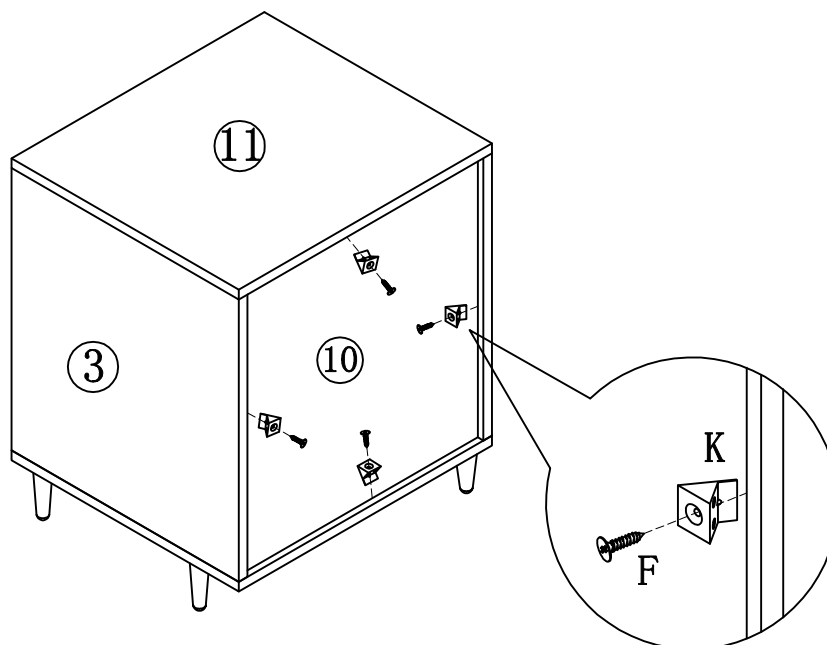

	K * 4PCS
	F * 4PCS

STEP 23

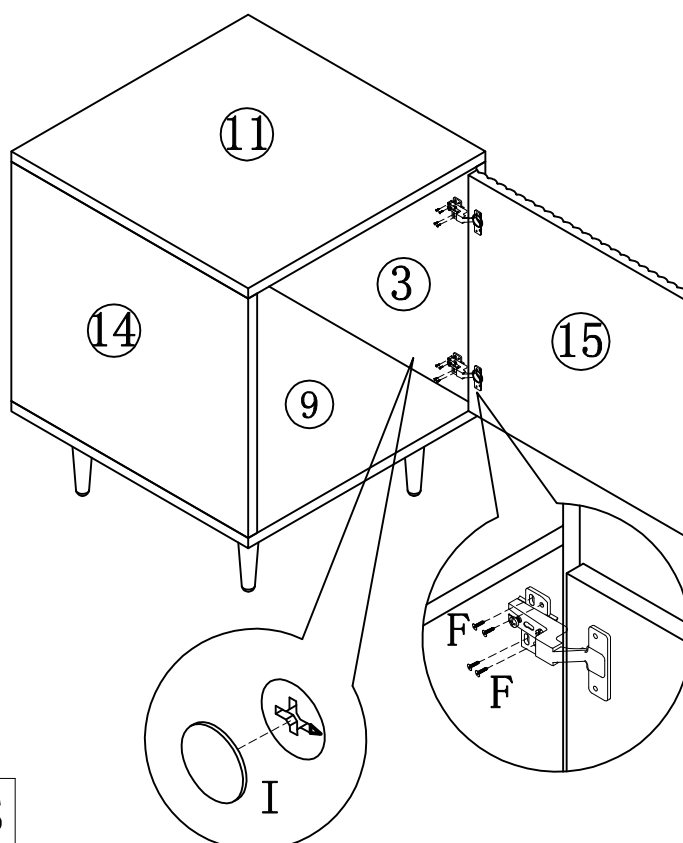


	I * 4PCS
	F * 8PCS

Assembly (EN) / Montageschritte (DE)




NOTE : If you notice that the cabinet doors are not properly aligned, such as significant gaps or vertical or horizontal misalignment, please adhere to the following adjustment instructions.

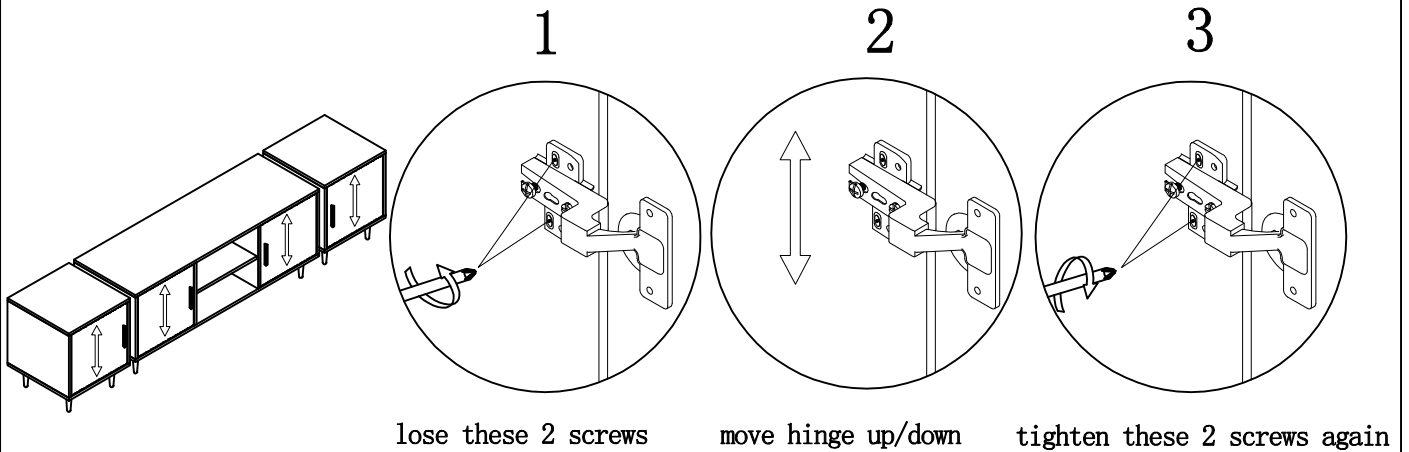

lose these 2 screws

move hinge up/down


tighten these 2 screws again

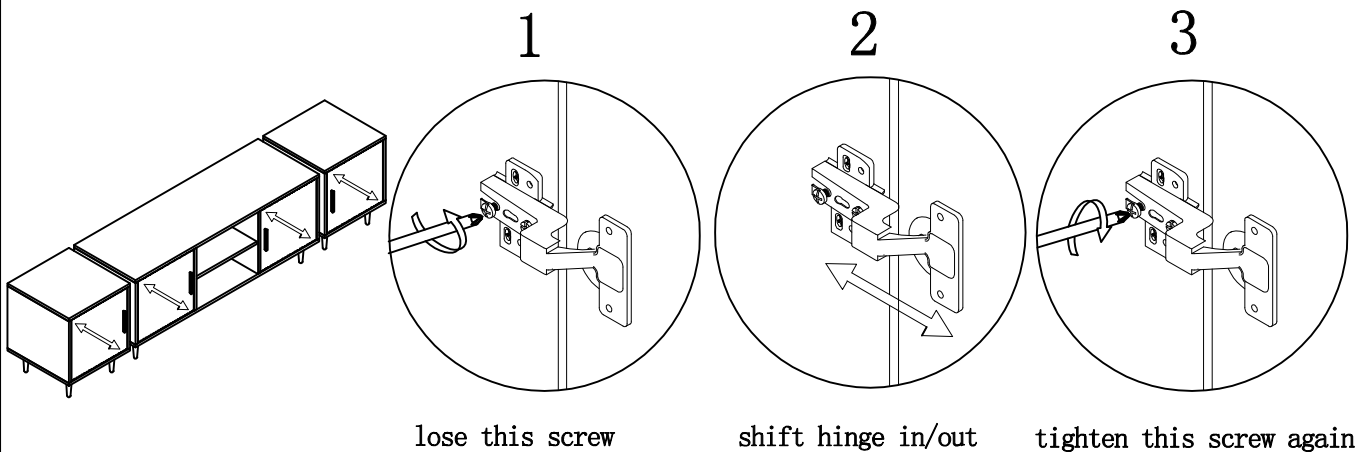

lose this screw

shift hinge in/out

tighten this screw again

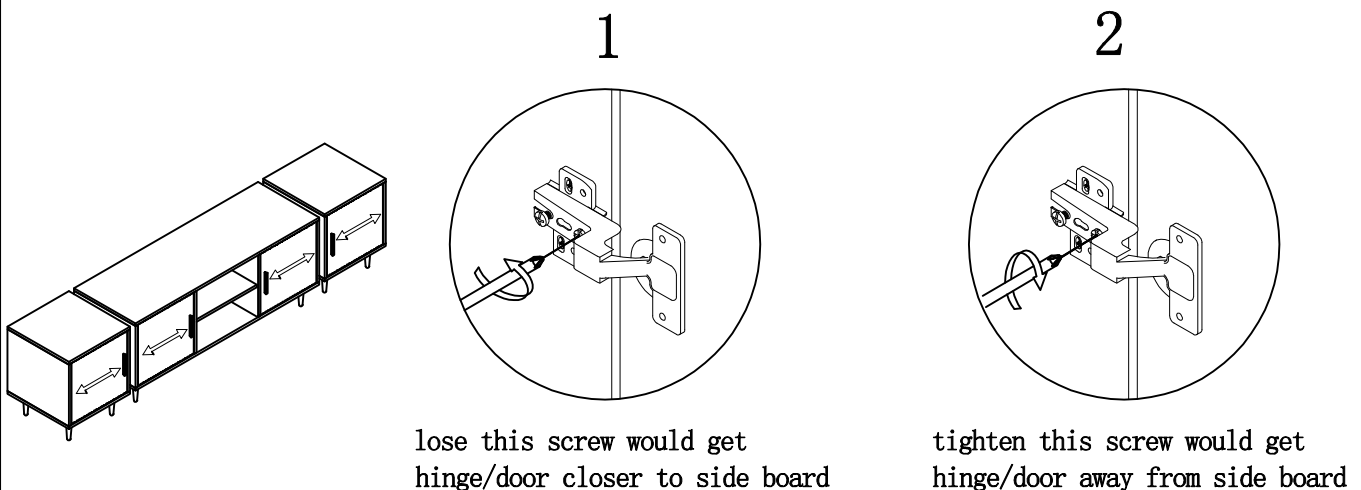

lose this screw would get hinge/door closer to side board

tighten this screw would get hinge/door away from side board

STEP 24

