
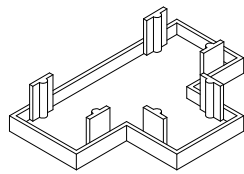
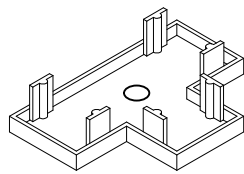
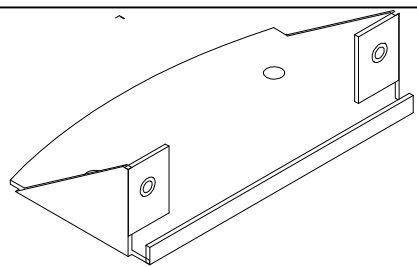

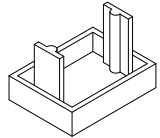
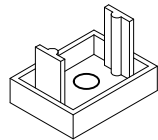
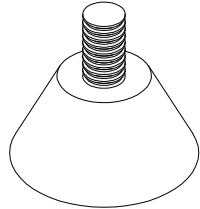
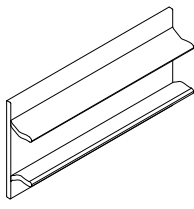
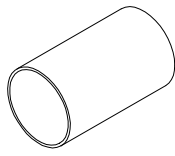


Installation guide


| | |
|--------------------|---|
| T-shaped interface |  |
| T-joint |  |
| corbel |  |
| Self-tapping yarn |  |
| Side joint |  |
| pleurocrus |  |
| Adjustable foot |  |
| Side banding |  |
| Cylindrical tube |  |

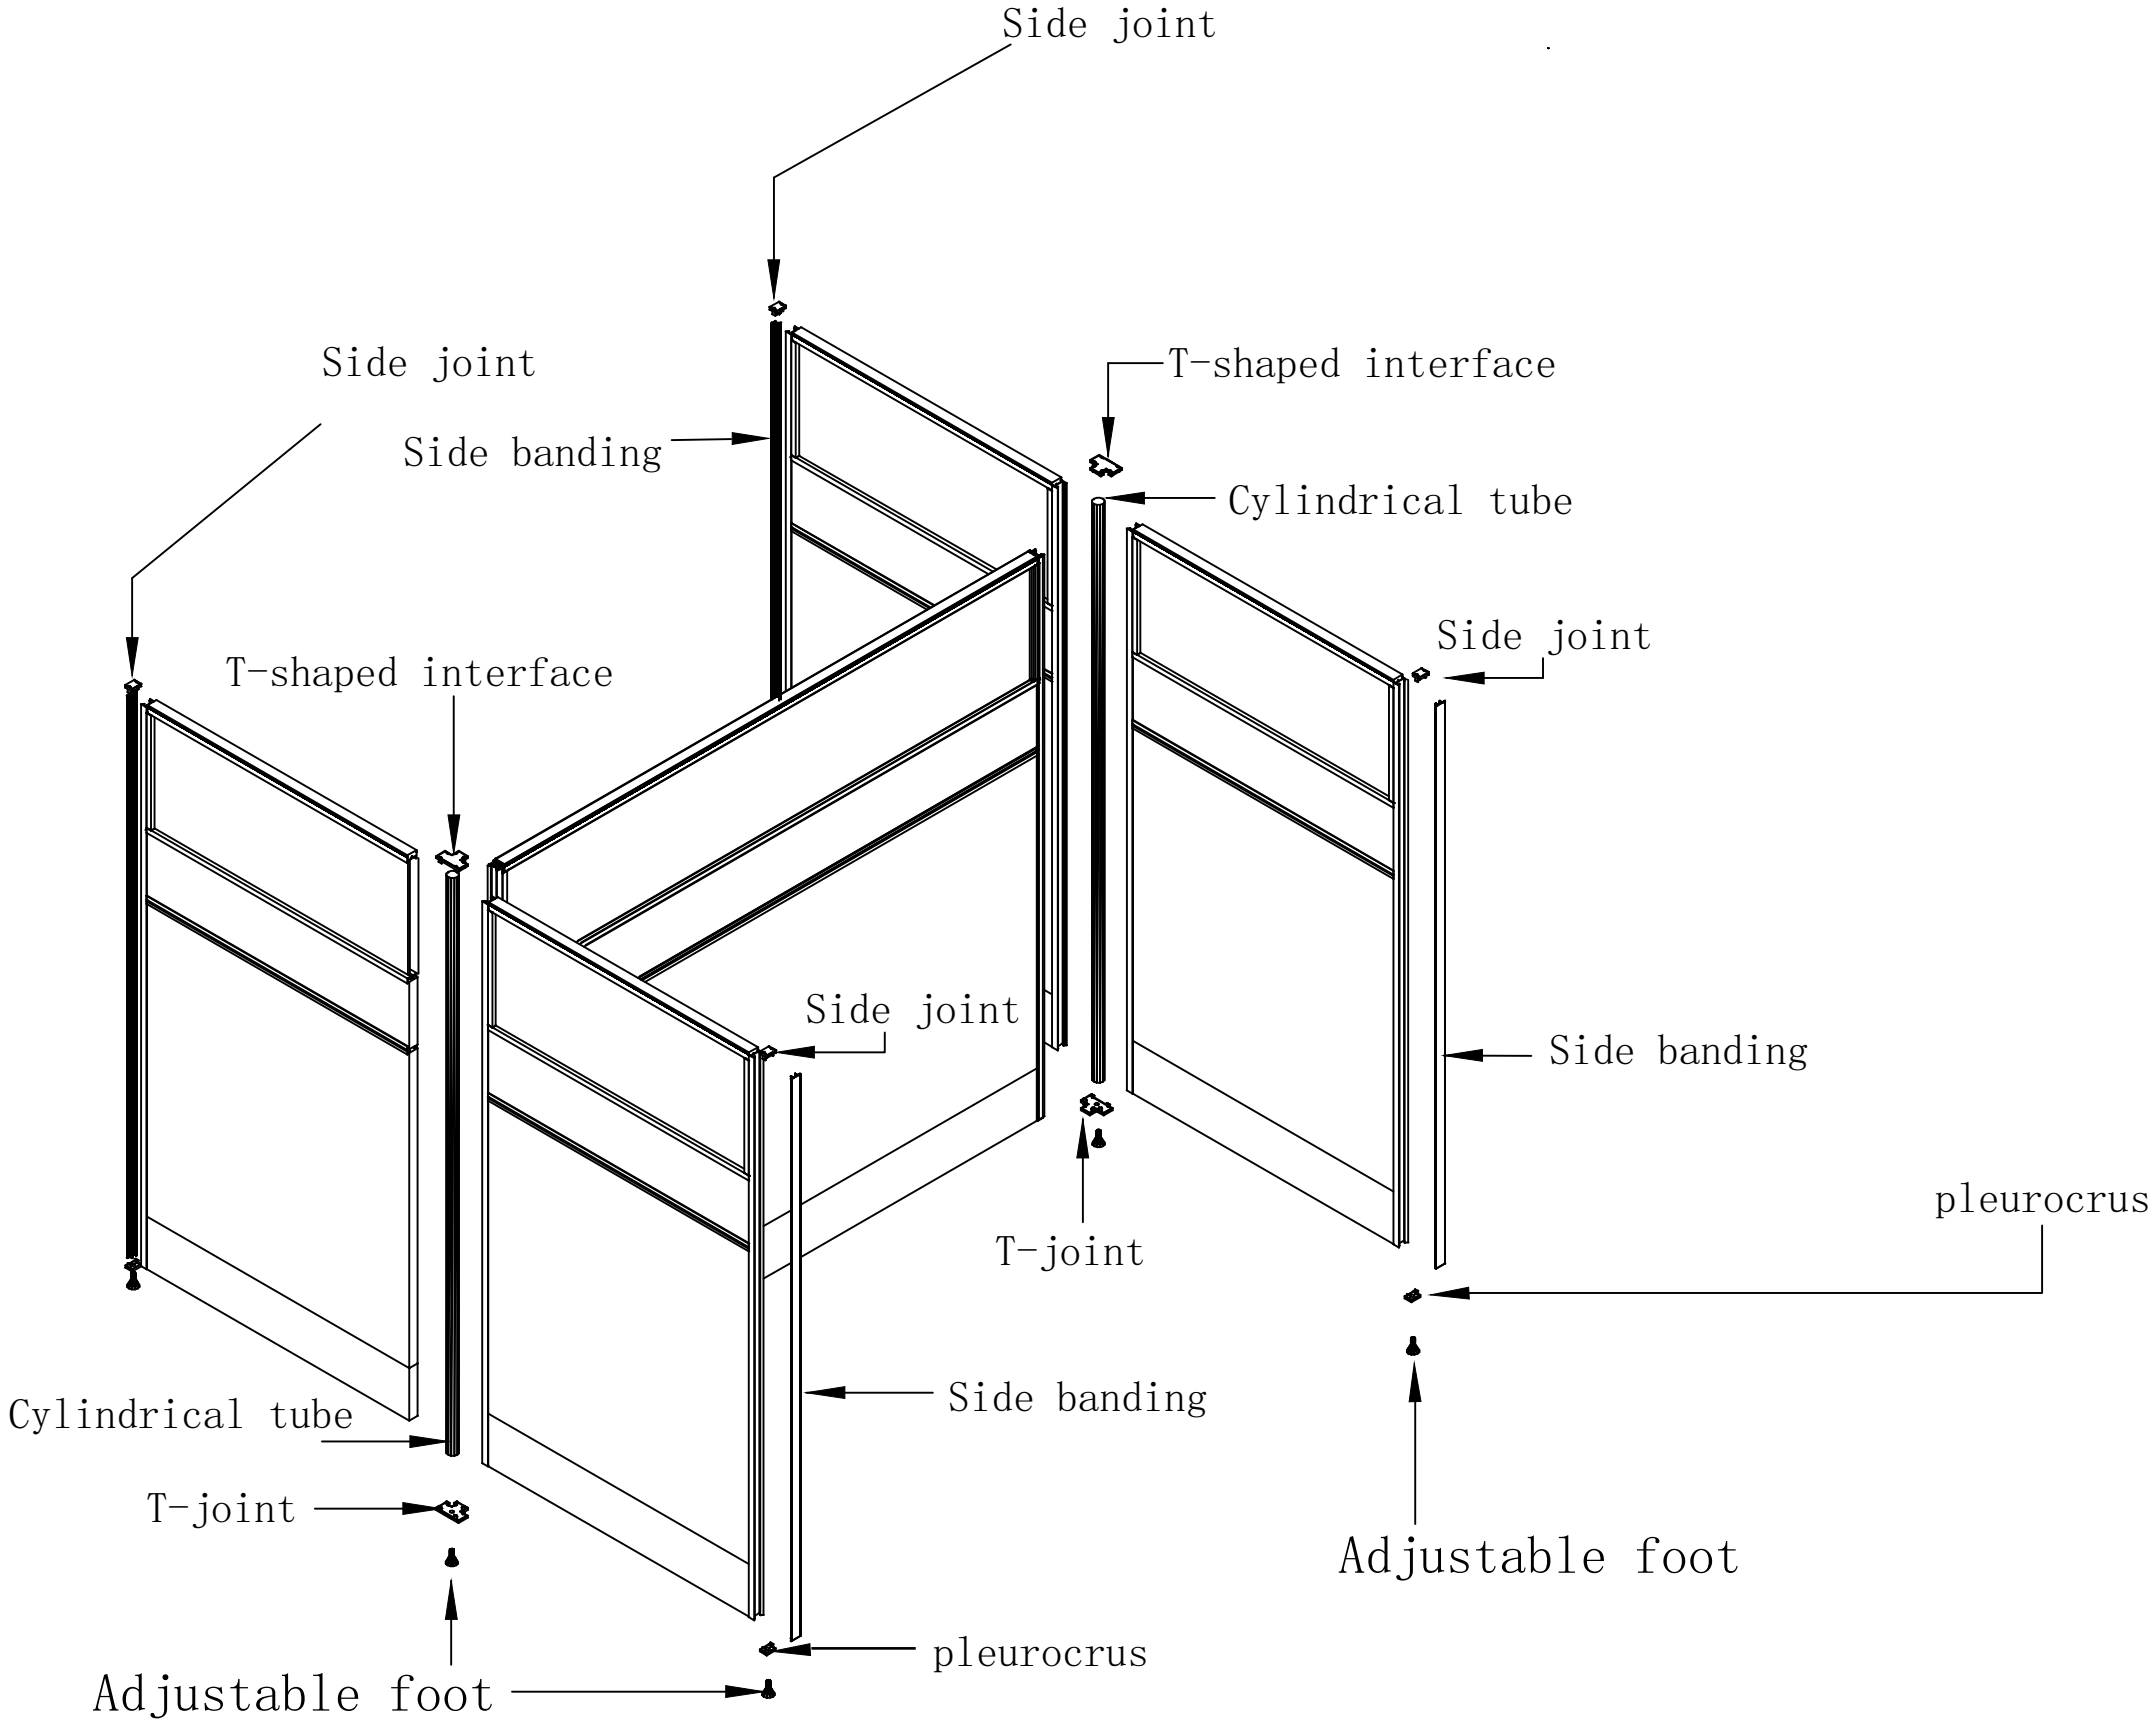


Step 1

Step 2

The bracket arm is adjusted and fixed on the screen plate with self-tapping.

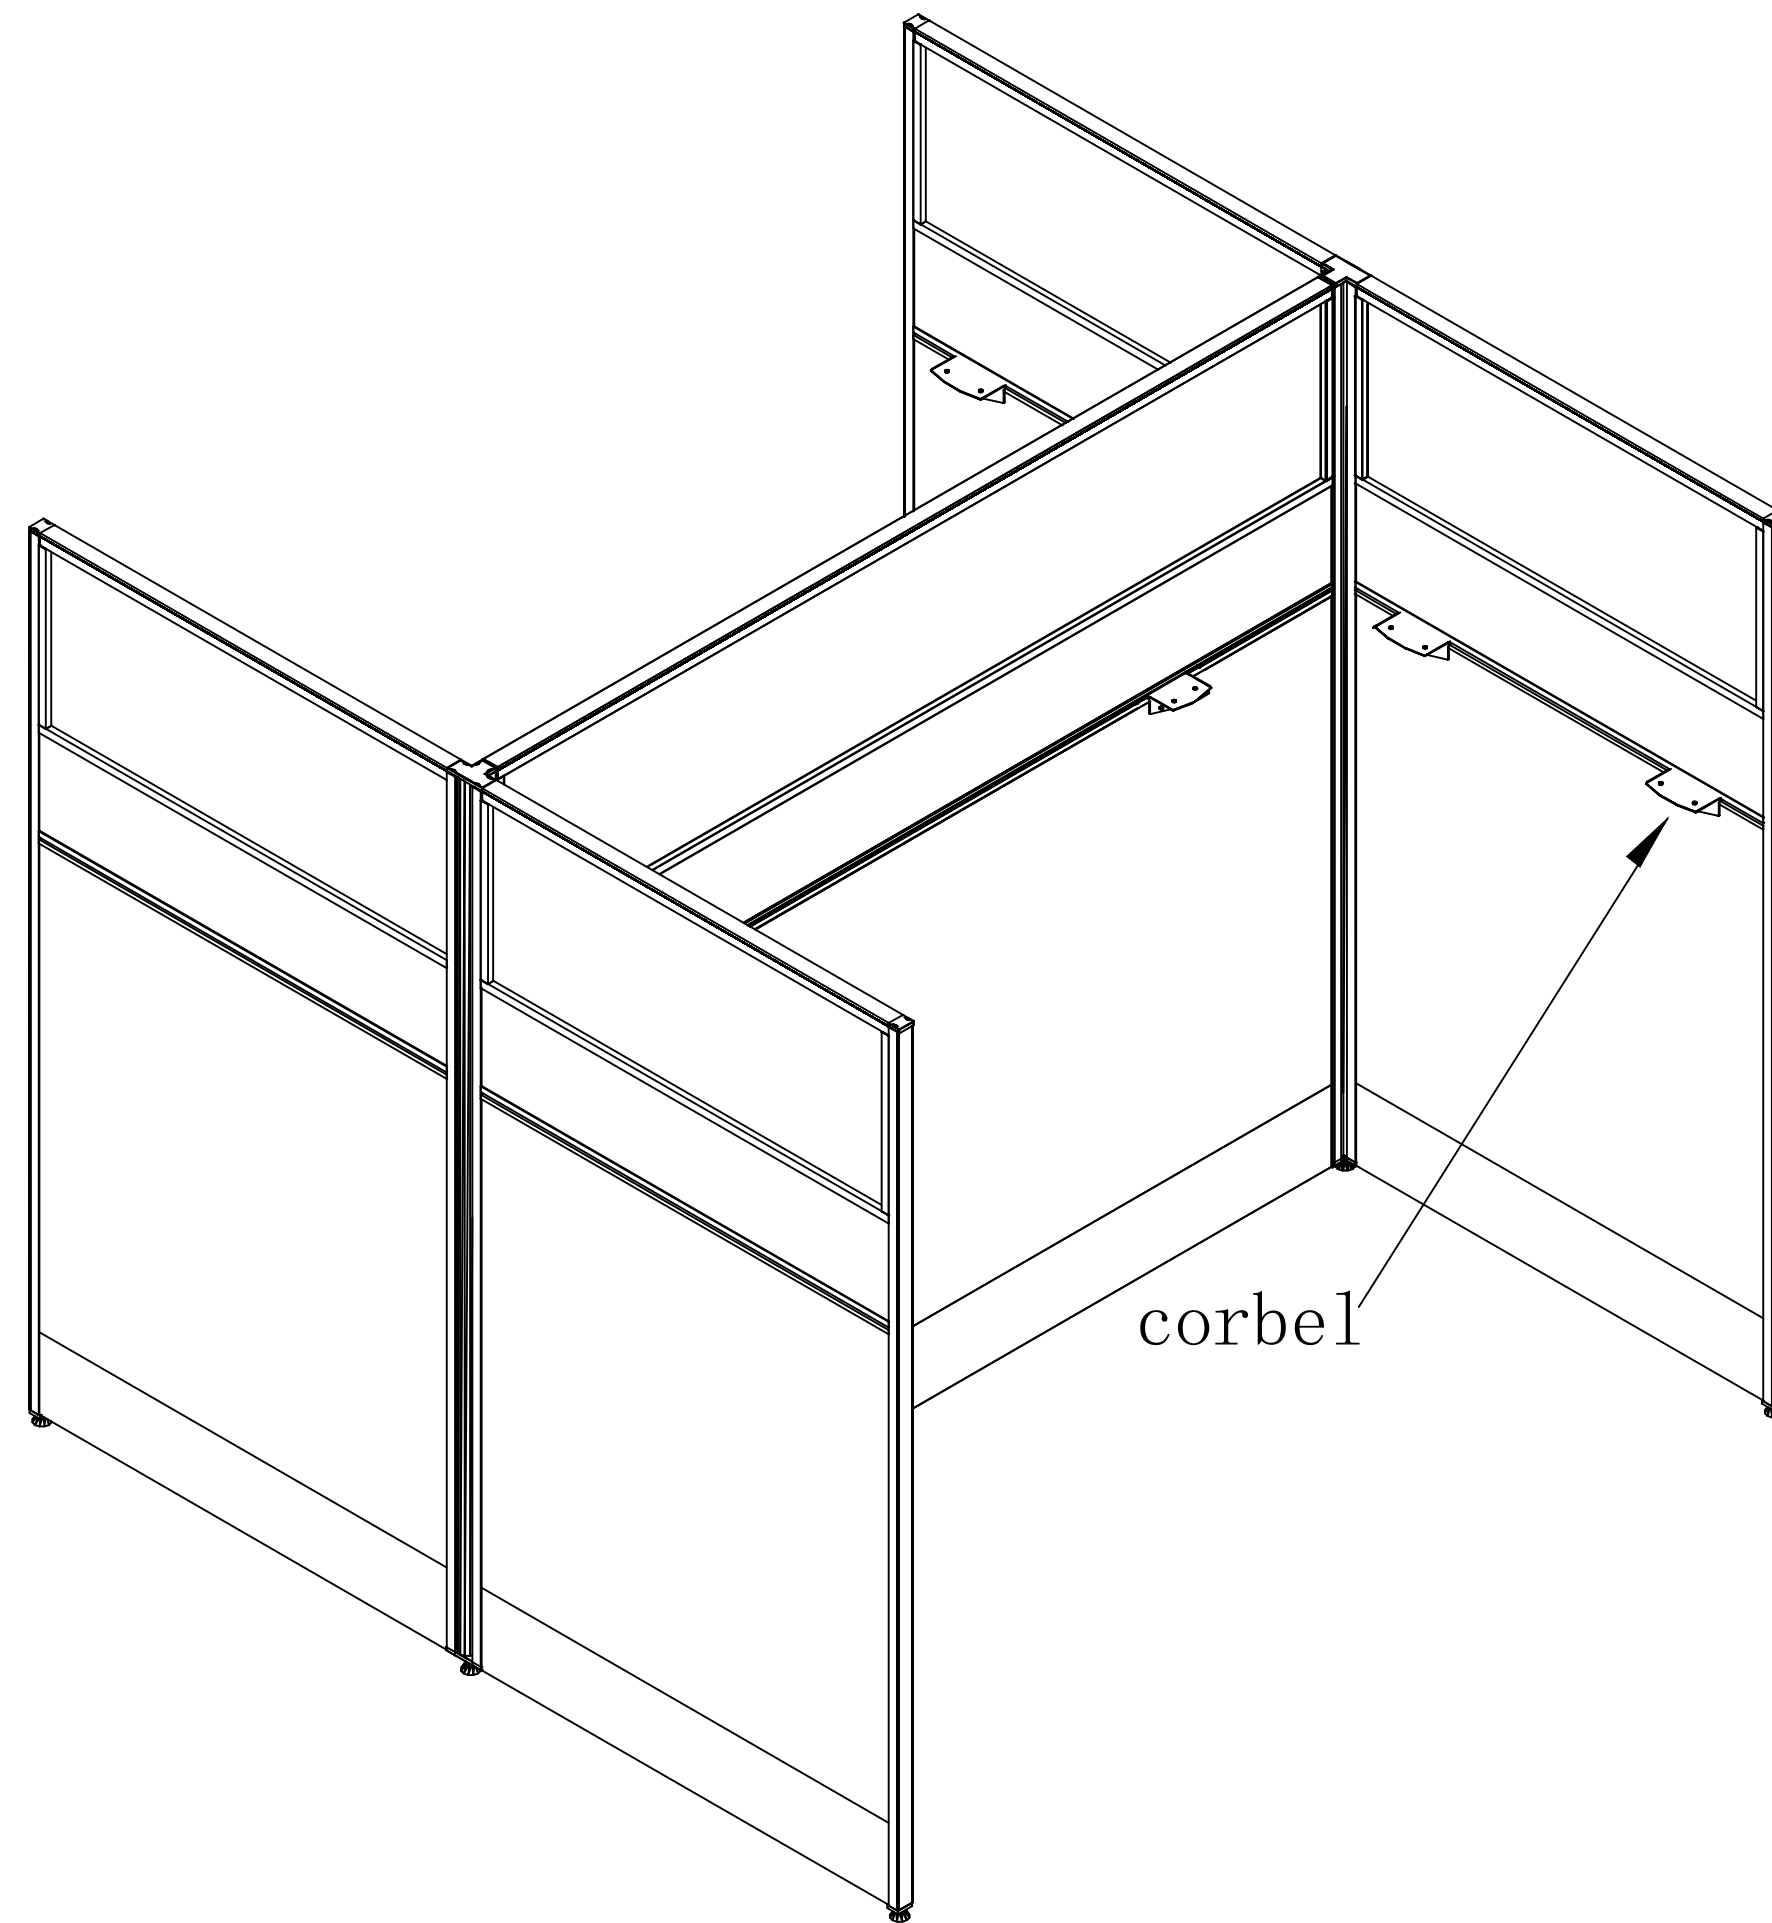

Step 3

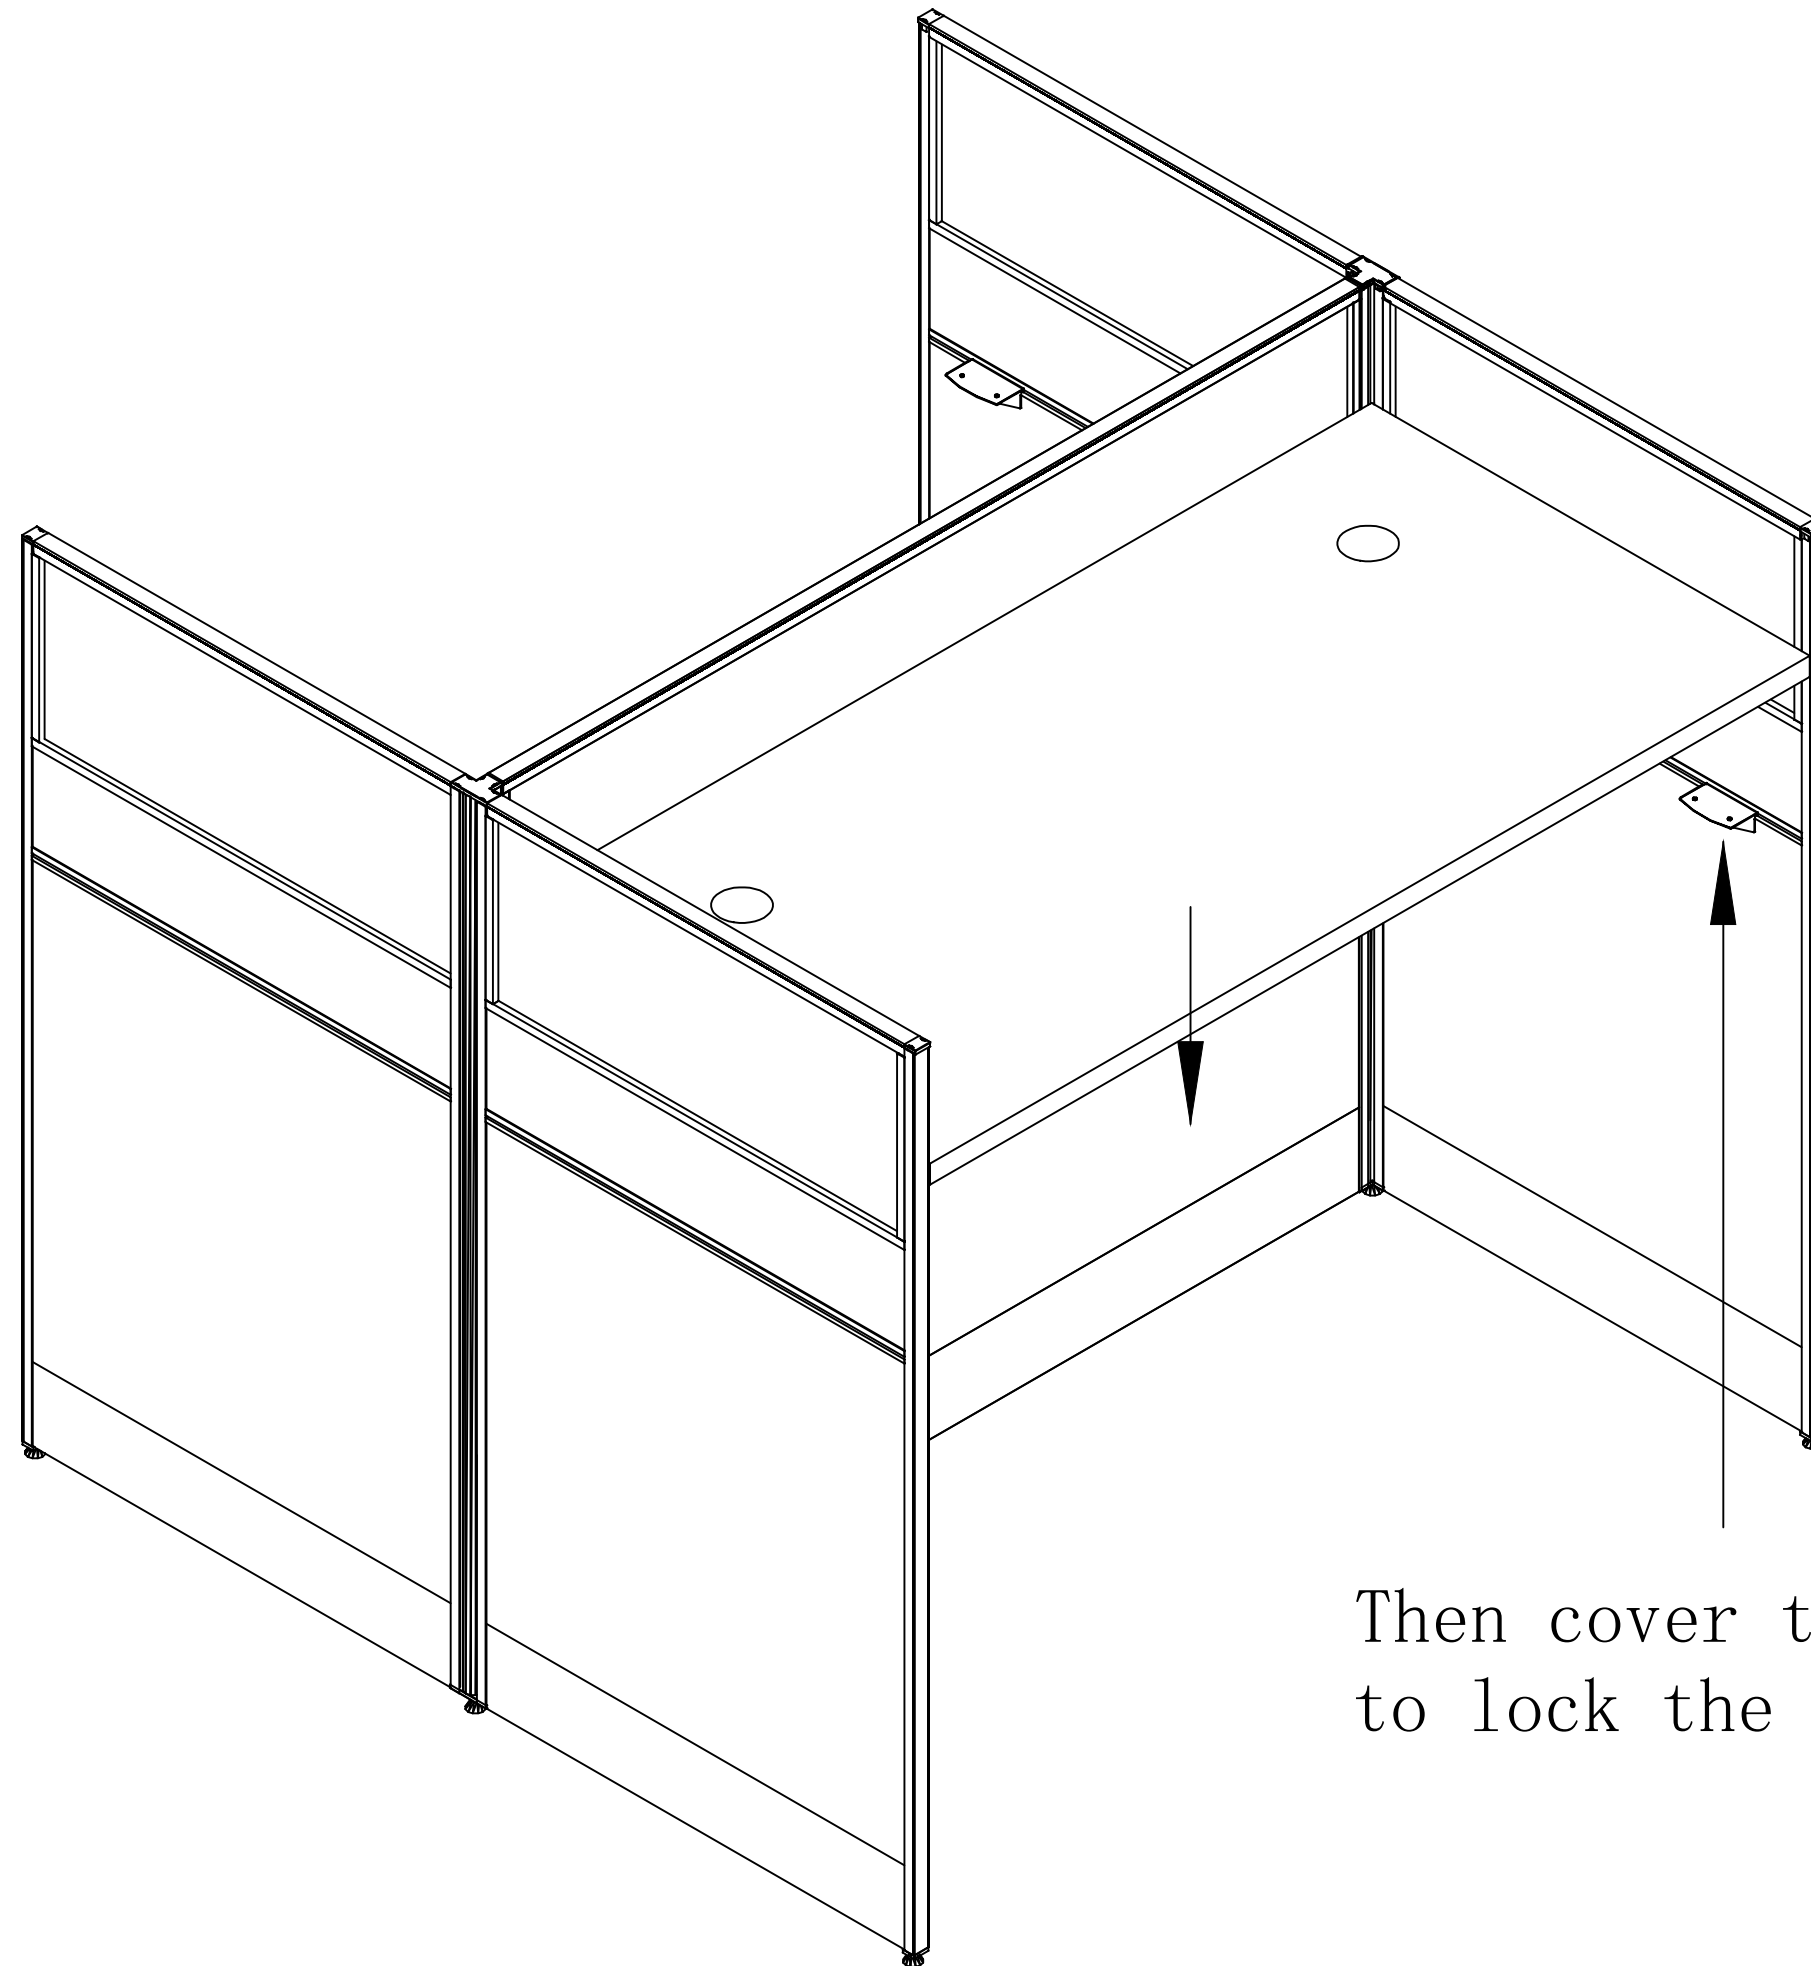

Then cover the table panel and self-tapping screws to lock the countertop.