
260717

Assembly Instruction


US-CBN281A

Group A

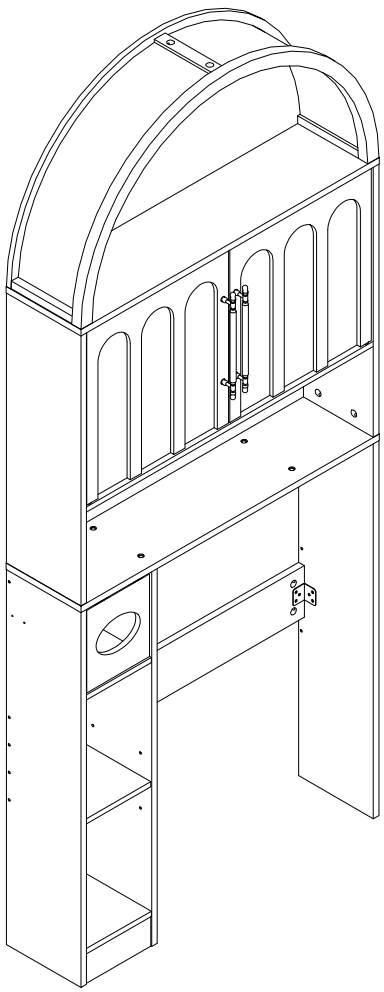

OR

Group B

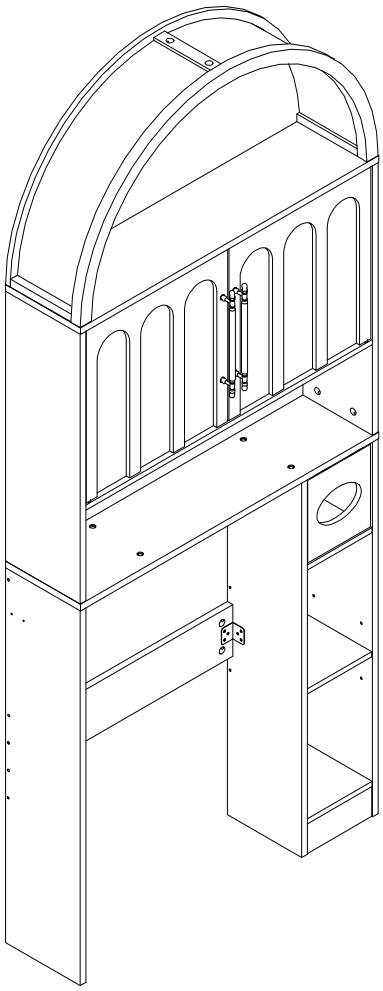

EN

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Keep this manual for future reference. If the product is transferred to another owner, please pass this manual along with it.
- This summary may not include every detail of all variations and assembly steps. If you need further information or assistance, please contact us.


Notes

- For indoor use only. This product must be assembled and used according to this manual. Personal injury or product damage may occur if the product is used for unintended purposes or altered from its original design. We are not responsible for injury or damage caused by incorrect assembly, misuse, or unauthorized modifications.
- Avoid prolonged exposure to moisture or damp environments to help prevent mildew.
- Keep the product away from open flames, heat sources, and direct sunlight.
- Do not place hot items directly on the product surface.
- If any parts are missing or damaged, stop assembly immediately and contact us.
- Assemble the item on a clean, soft, flat surface. Do not place unprotected parts directly on the floor to avoid damage.
- Do not stand or sit on the panels.
- Wear gloves during assembly or disassembly to help protect your hands from sharp edges.
- Match each part and piece of hardware with the part numbers shown in this manual.
- If the part does not match the fitting, please check the piece as specified in this manual.
- During assembly, loosely install all screws into the corresponding pre-drilled holes first, then tighten them one by one.
- Periodically check that all screws remain tight during use. Retighten if needed to maintain structural stability.
- If water or other liquid is spilled on the surface, wipe it clean immediately with a dry cloth.
- Keep the product away from sharp objects and corrosive substances to prevent damage.
- Place the item on a level, stable surface during use.


Warnings

- During assembly, keep all small parts out of the reach of children. Small parts may be fatal if swallowed or inhaled.
- Children should not climb on or play with the product to avoid tipping over the furniture and causing serious injury.
- To avoid the risk of suffocation, keep all packaging materials, including plastic bags, film, and foam, away from babies and children.
- Do not use or store sharp objects near the product to prevent injury.
- Do not shake or move the product violently during use, as this may cause it to tip over.


Parts List(EN)

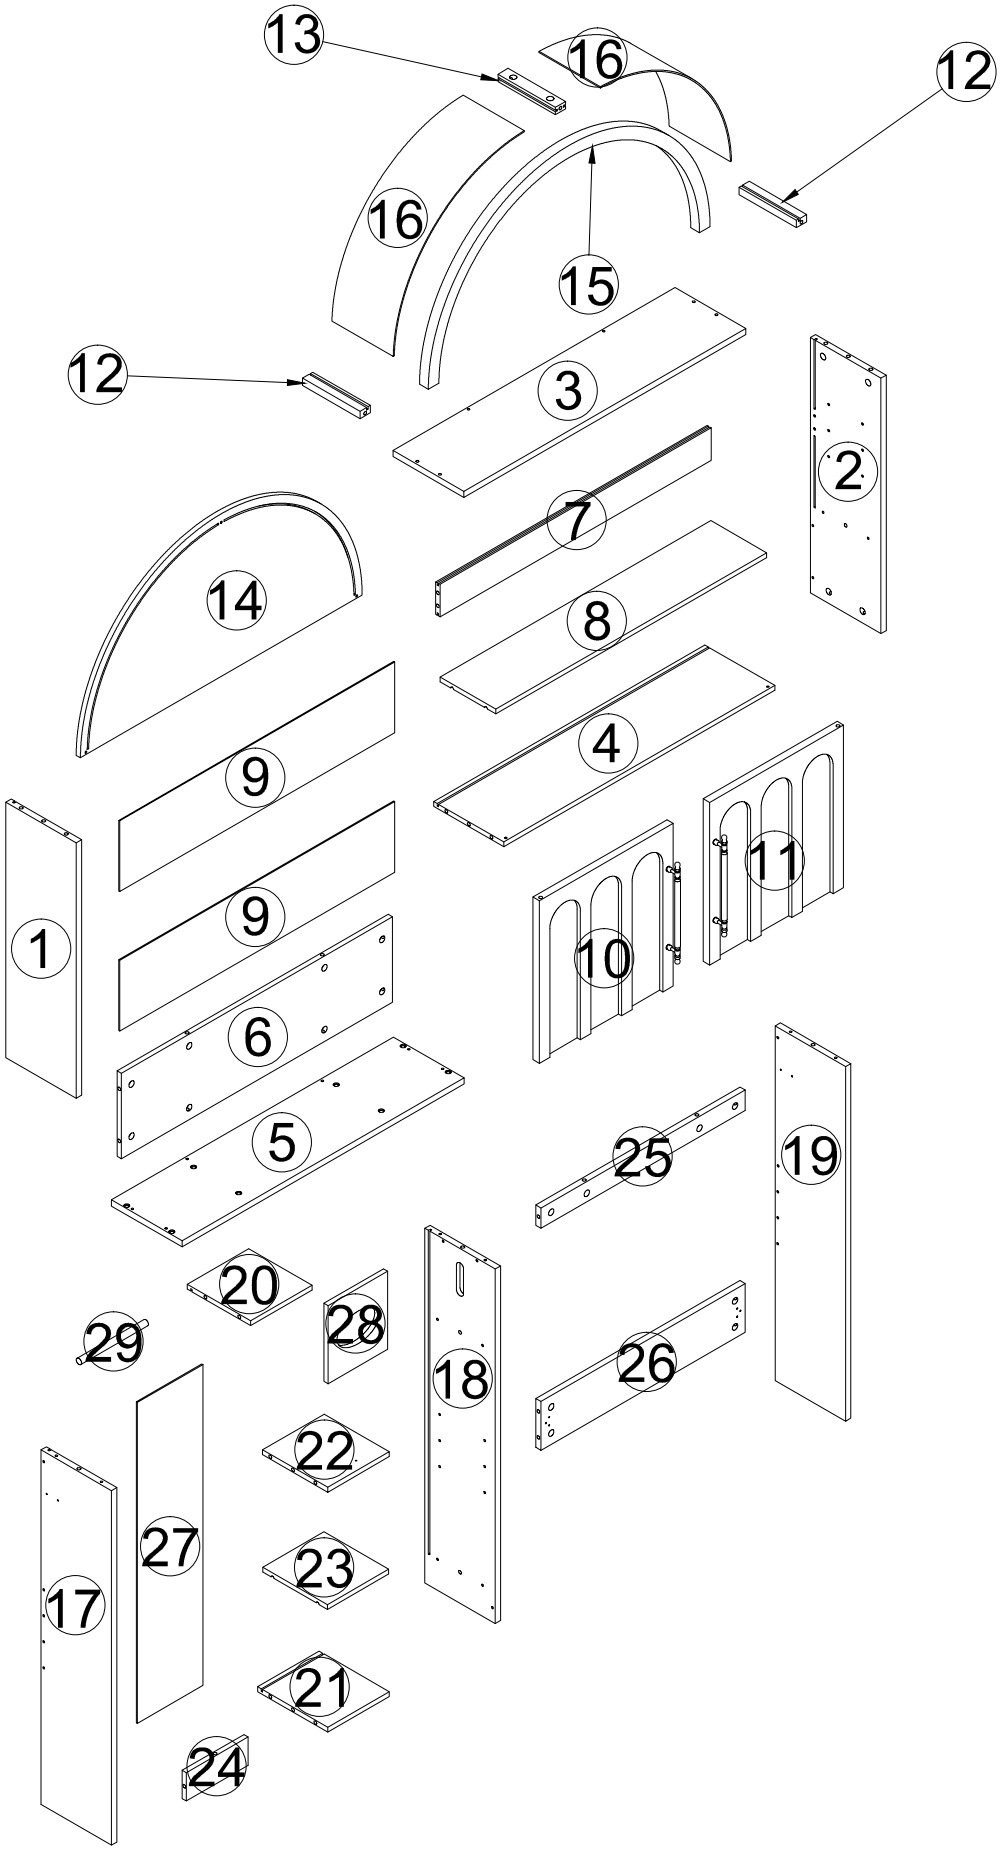


Parts List(EN)

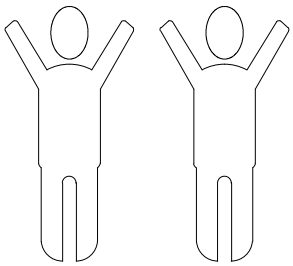


It takes two people to work together to assemble the product.

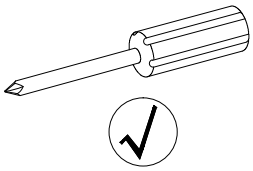


Recommended to use a screwdriver to assemble the product.

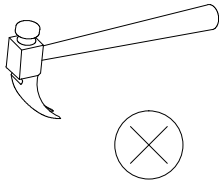



Do not use a hammer, it might damage the board.

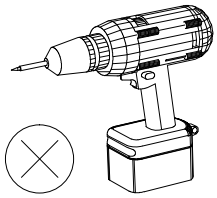


The use of an electric wrench is not recommended.If used, please set the torque to the minimum.













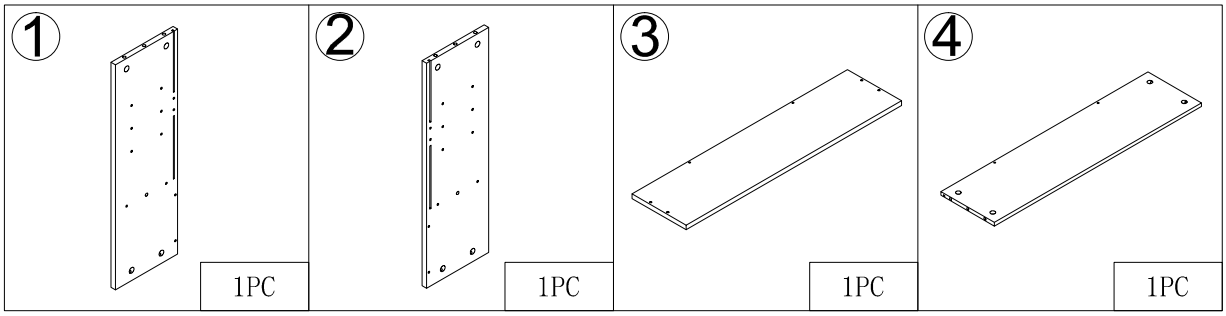


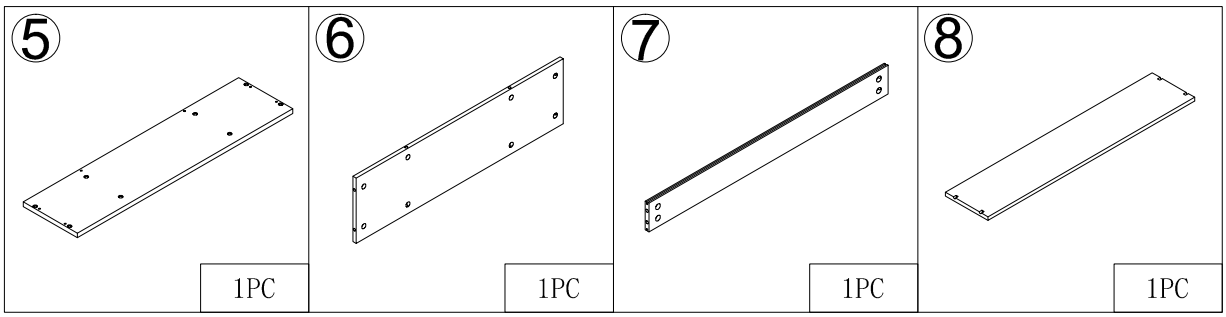












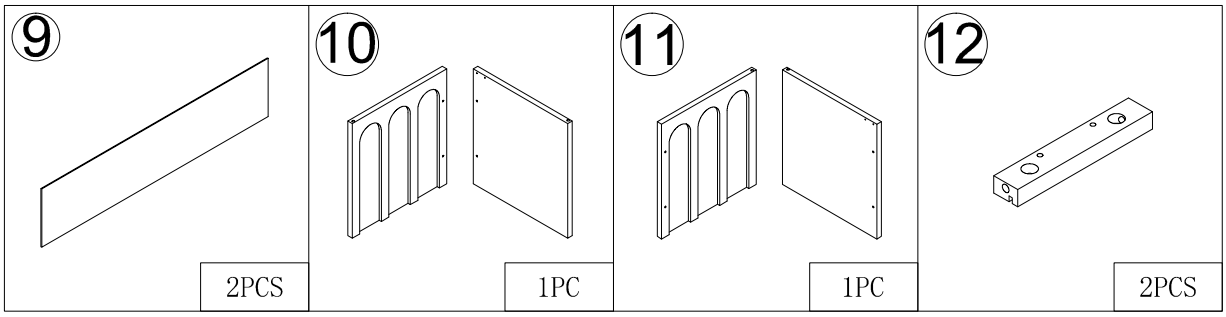


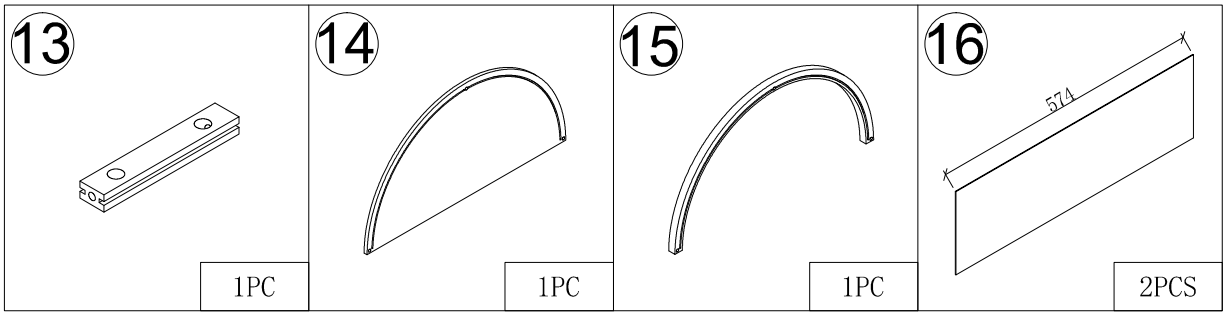



Parts List(EN)

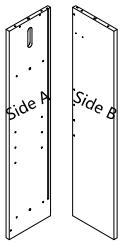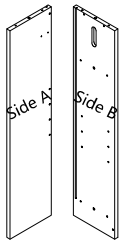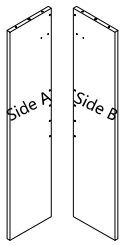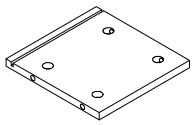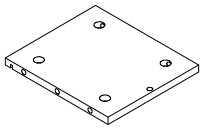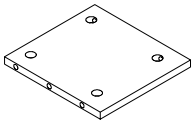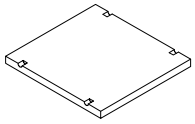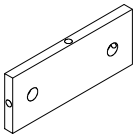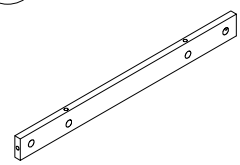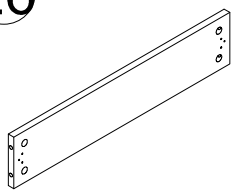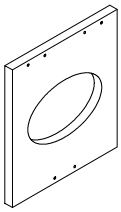17  1PC	18  1PC	19  1PC	20  1PC
21  1PC	22  1PC	23  1PC	24  1PC
25  1PC	26  1PC	27  1PC	28  1PC
29  1PC			


Parts List(EN)

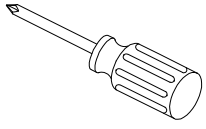No. A Quantity:54+4 pcs Cam Lock Dowel 8*28mm 	No. B Quantity:54+4 pcs Cam φ15 	No. C Quantity:52+4 pcs Sticker Ø20 	No. D Quantity:12+1 pc Dowel 8*30mm 
No. E Quantity:2 pcs Hinge 	No. F Quantity:2 pcs Hinge 	No. G Quantity:10+1 pc Screw M3.5*10mm 	No. H Quantity:12+1 pc Screw M4*12mm 
No. I Quantity:6+1 pc Foot Pad Ø15 	No. J Quantity:2 pcs 	No. K Quantity:4+1 pc Screw M4*22mm 	No. L Quantity:8+1 pc Shelf Support M5*15mm 
No. M Quantity:4+1 pc Screw M5*25mm 	No. N Quantity:6+1 pc Screw M6*40mm 	No. O Quantity:1 pc Allen Key 3# 	No. P Quantity:1 pc Allen Key 4# 
No. Q Quantity:10+1 pc Screw M3.5*14mm 	No. R Quantity:3 sets Magnetic Door Catcher 	No. S Quantity:4+1 pc 	No. T Quantity:1 pc Screwdriver 

Parts List(EN)

No. U Quantity:14+1 sets Plastic Wedge 	No. V Quantity:2 sets Hardware anti-falling belt 		

Instructions for Fastening
CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

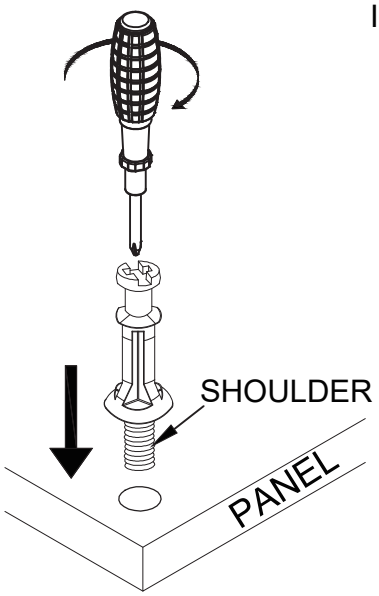

Place Cam-bolt on pre-drilled hole and screw in vertically

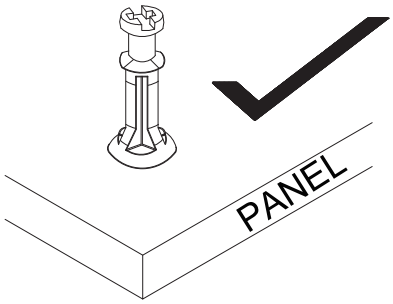


The shoulder is flush with the panel.

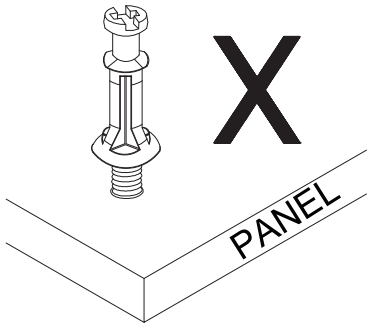


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips screwdriver to screw the CAM-BOLT in vertically until the shoulder is flush with the panel.

INSERTING CAM-LOCK

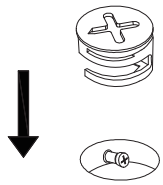


Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.

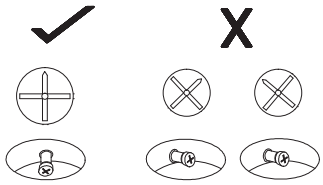

CORRECT WRONG

Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.


TIGHTENING CAM-LOCK

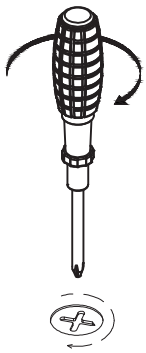


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4 of a turn) -- over-tightening could damage the Cam-lock and/or Cam-bolt.

STEP 1


Group A

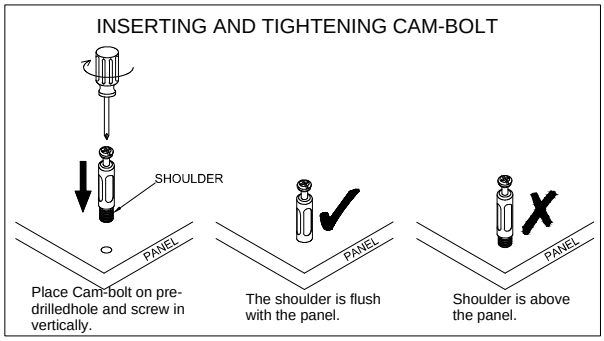

Before installation, please note the two different installation options. If you wish to mount the storage shelf on the left side, assemble it following Combination A (Steps 1 – 7).If you opt to install the storage shelf on the right side, skip to Step 8.

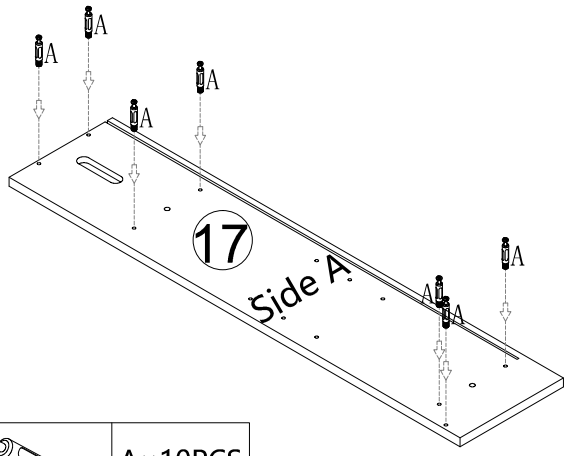


You may install this panel at a suitable position according to the height of the toilet water inlet pipe.

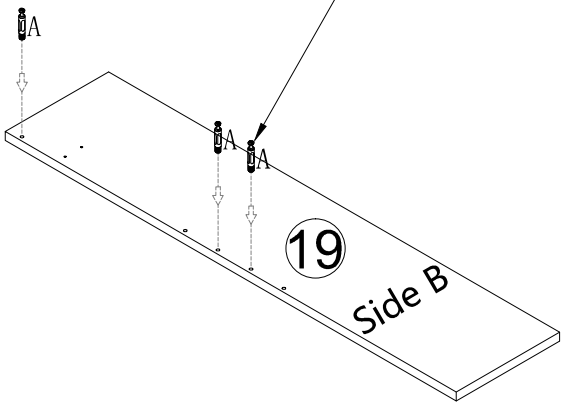




STEP 2


You may install this panel at a suitable position according to the height of the toilet water inlet pipe.

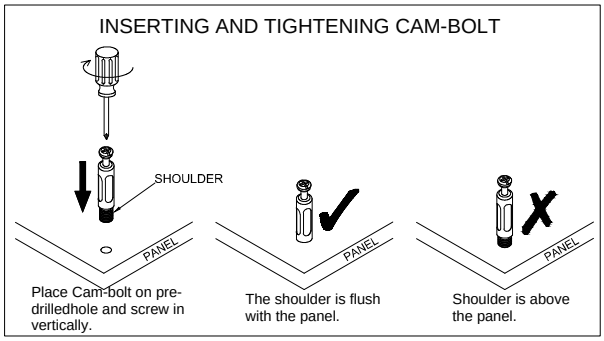

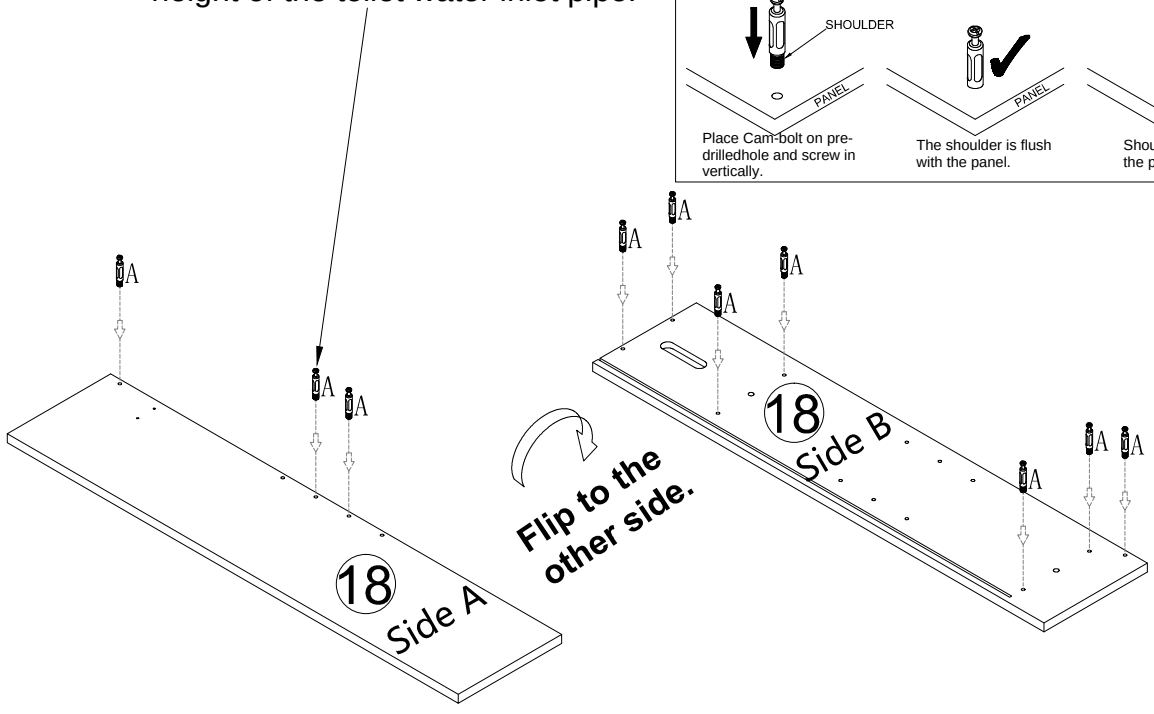



STEP 3

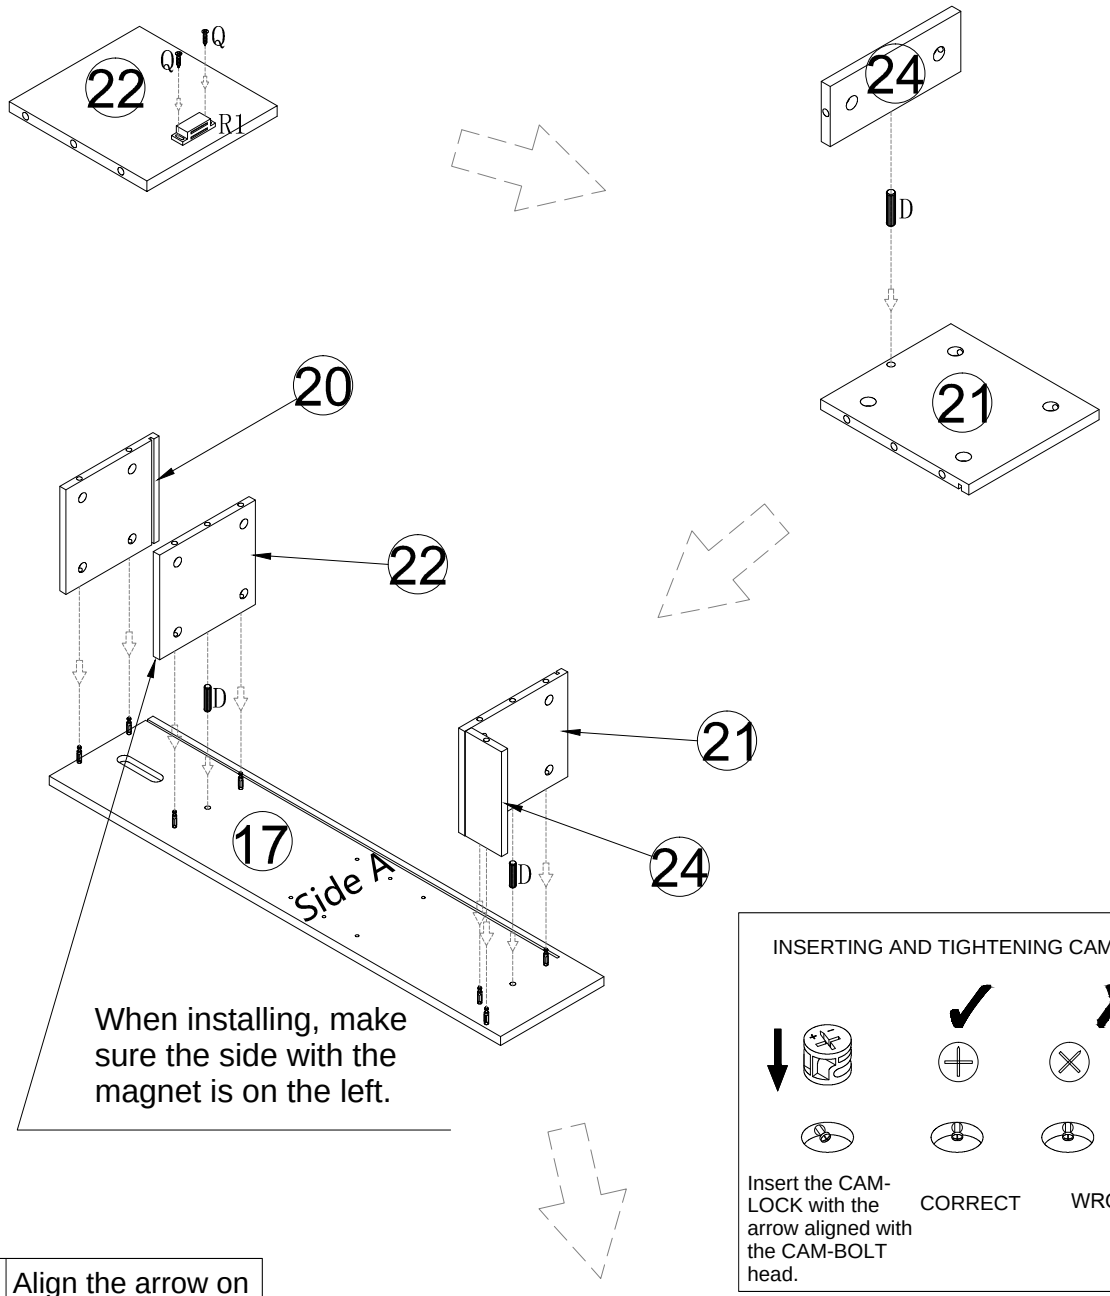


INSERTING AND TIGHTENING CAM-BOLT


Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.

CORRECT


WRONG


Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

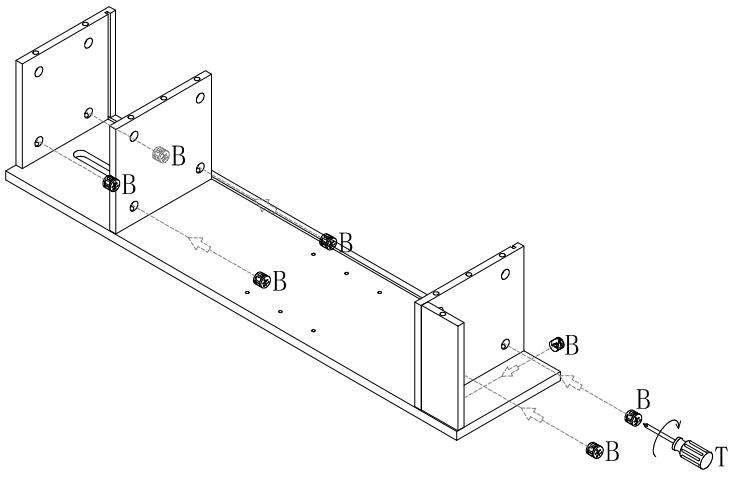


	B×7PCS
	D×3PCS
	Q×2PCS
	R1×1PC

STEP 4

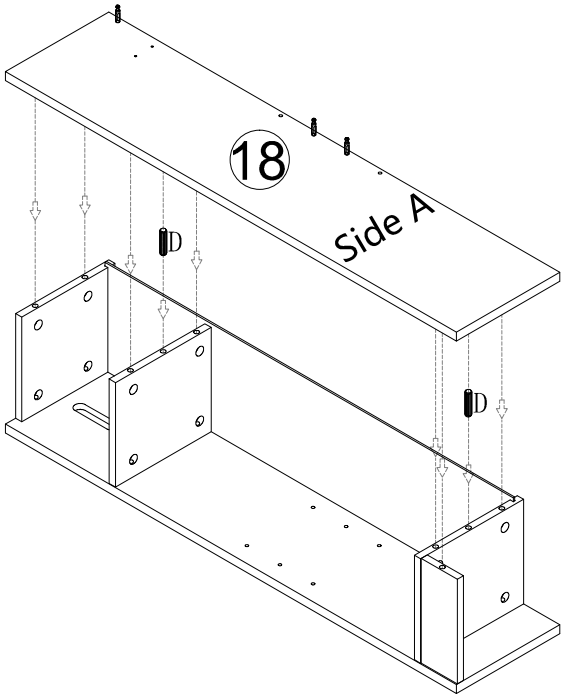

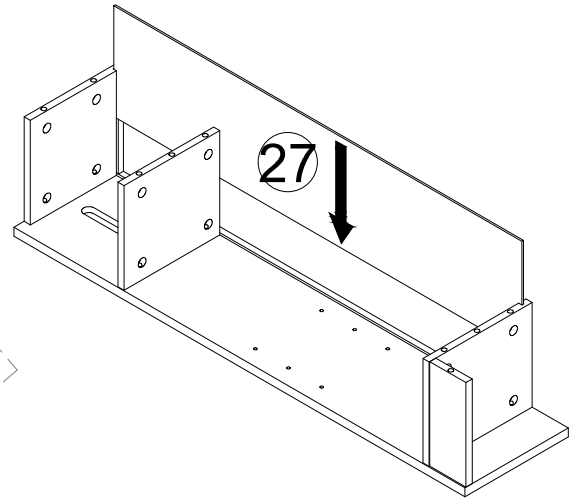

INSERTING AND TIGHTENING CAM-BOLT

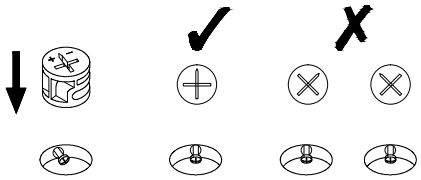



Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.


CORRECT

WRONG

Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

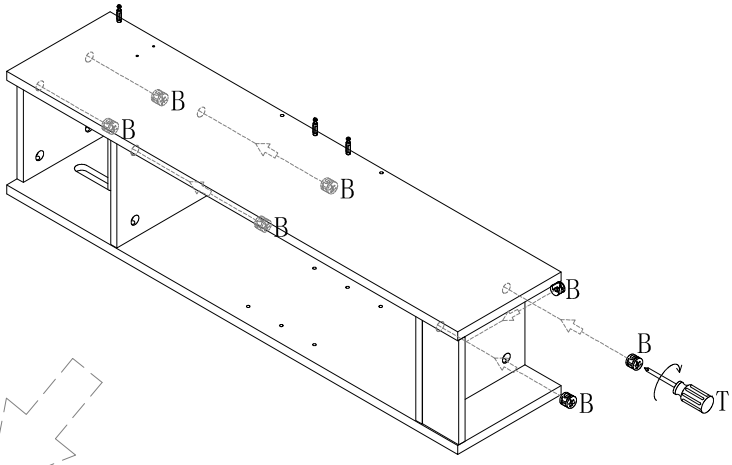


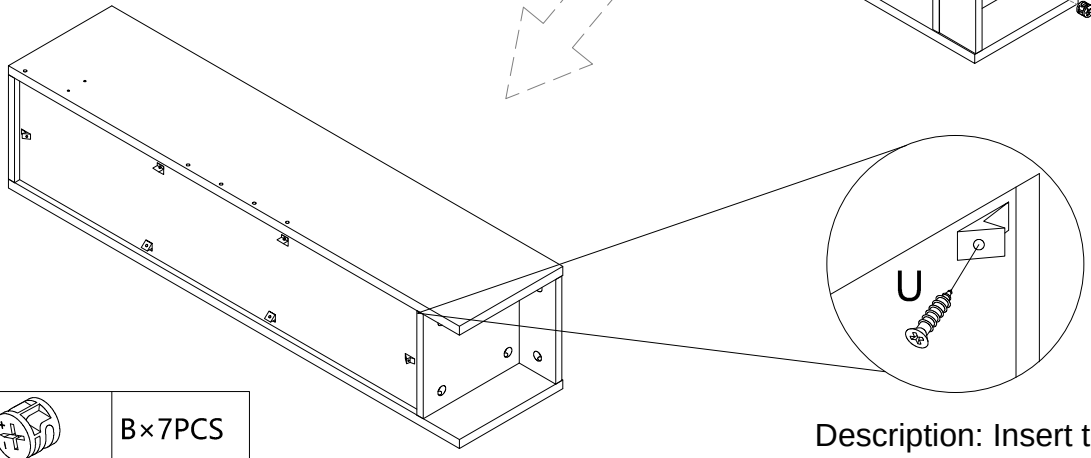

	B×7PCS
	D×2PCS
	U×6Sets


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

STEP 5

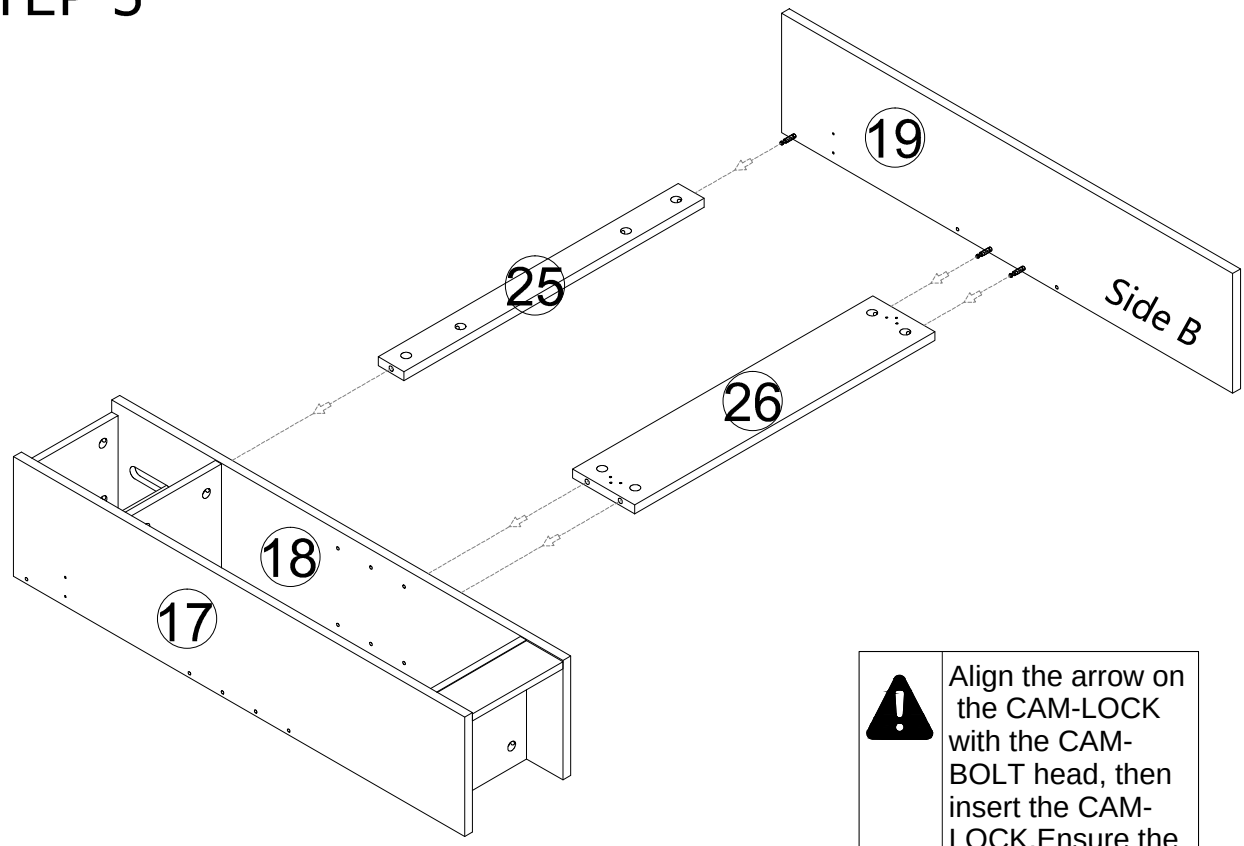

Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.


INSERTING AND TIGHTENING CAM-BOLT

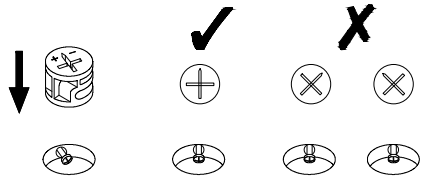

Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.


CORRECT


WRONG

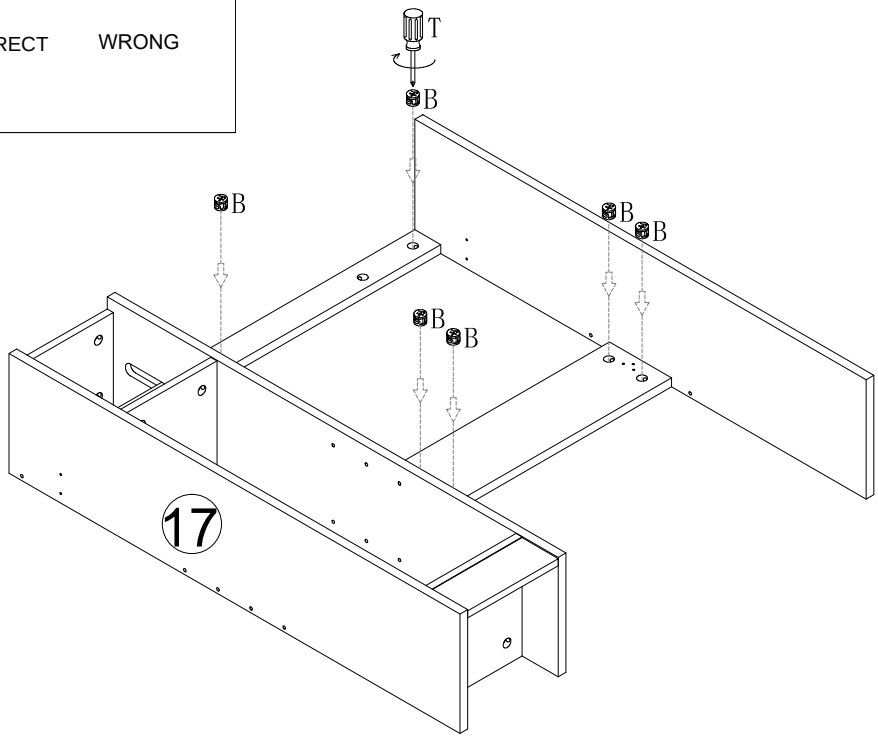


	B×6PCS

STEP 6

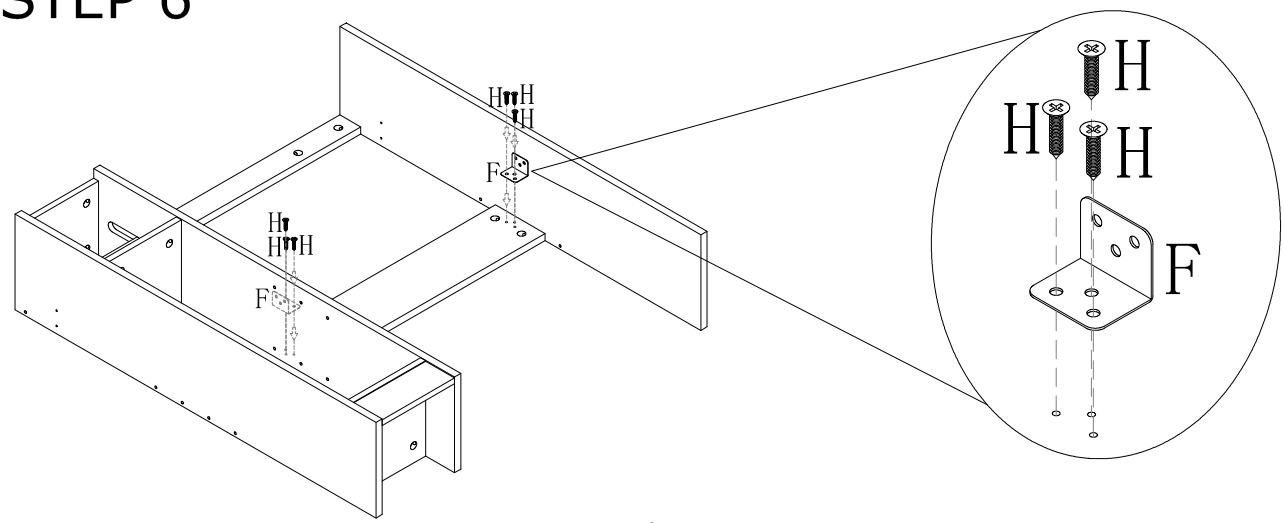



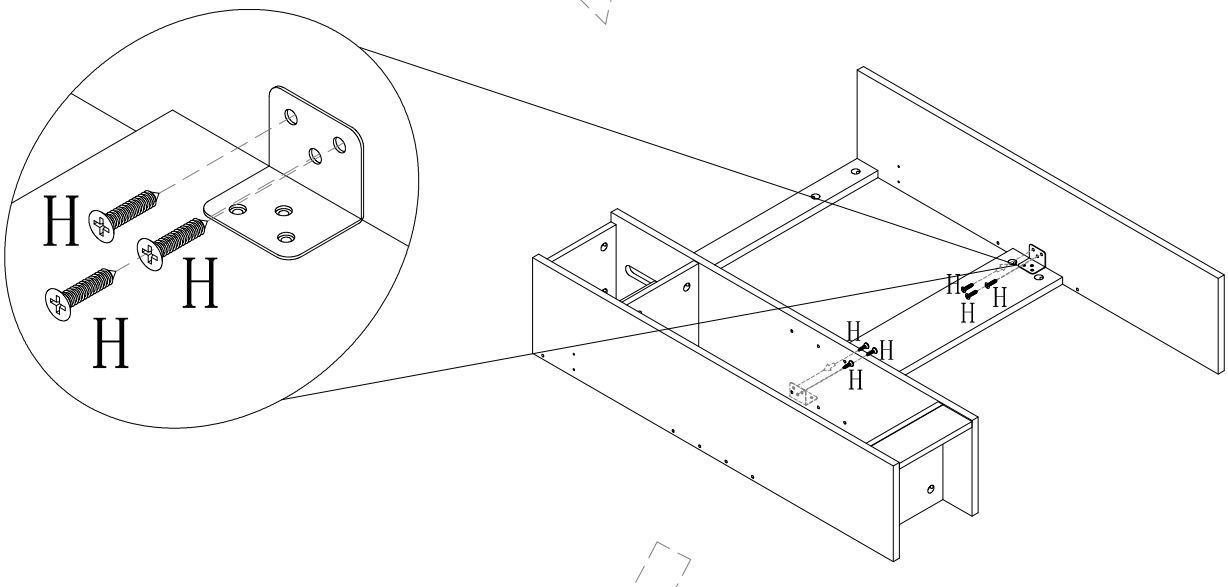


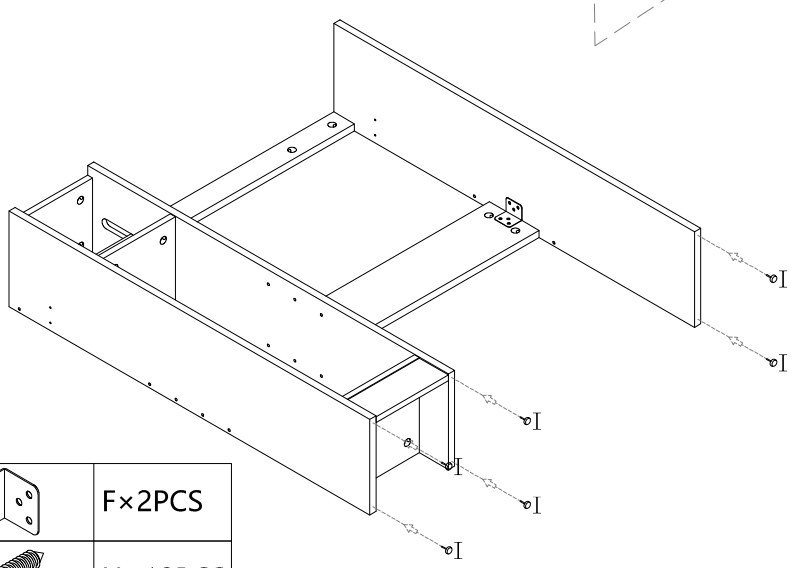

	F×2PCS
	H×12PCS
	I×6PCS

STEP 7

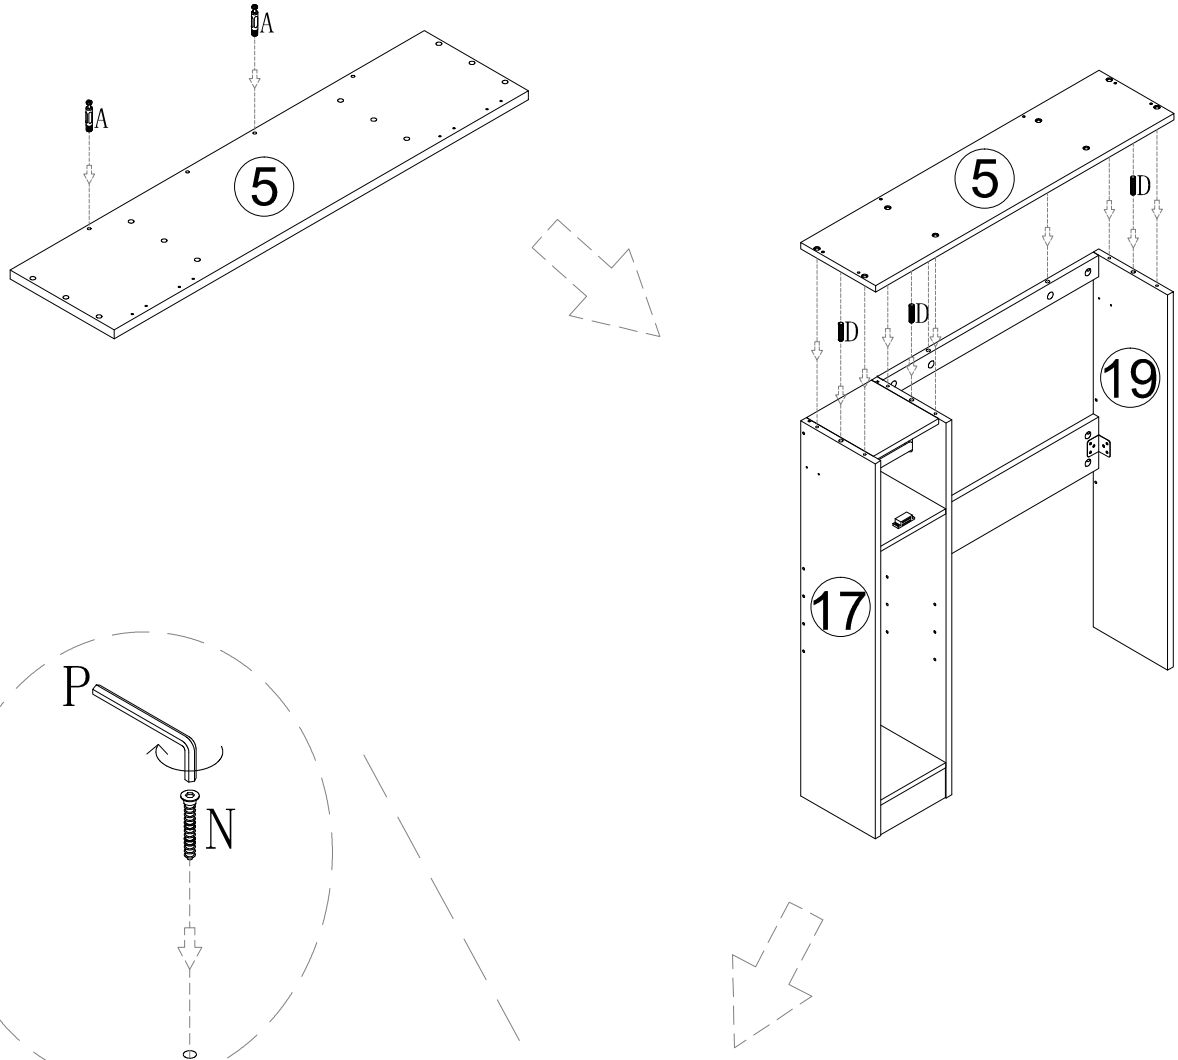


	A×2PCS
	B×2PCS
	D×3PCS
	N×6PCS
	P×1PC




After completing step 7 of the installation, please jump to step 15 to continue the installation.


STEP 8 Group B

If you wish to mount the storage shelf on the right side, assemble it following Combination B (Steps 8 – 14).

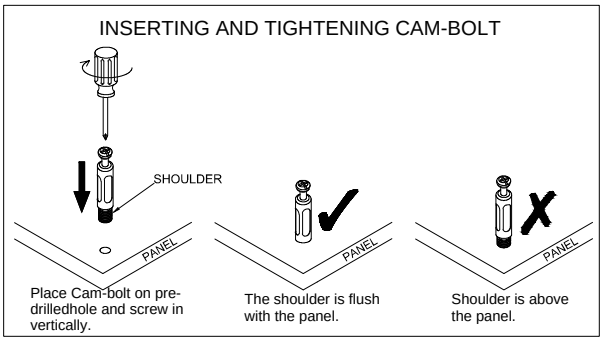


You may install this panel at a suitable position according to the height of the toilet water inlet pipe.

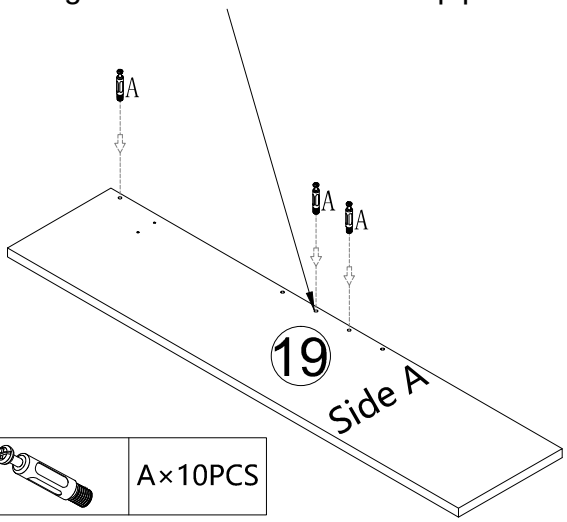


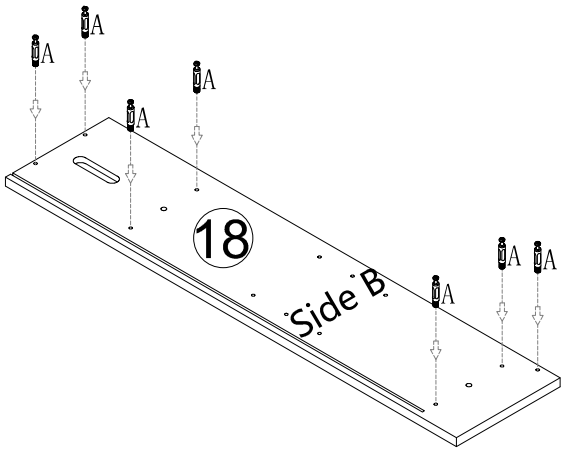


STEP 9

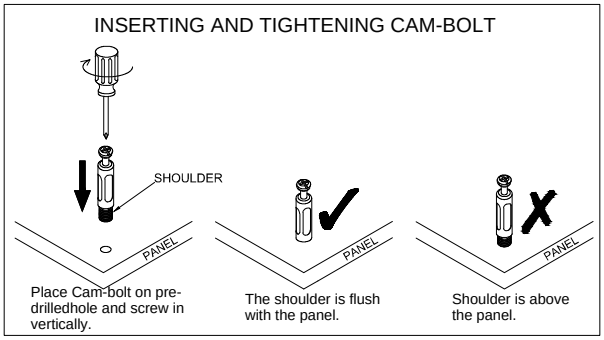

You may install this panel at a suitable position according to the height of the toilet water inlet pipe.

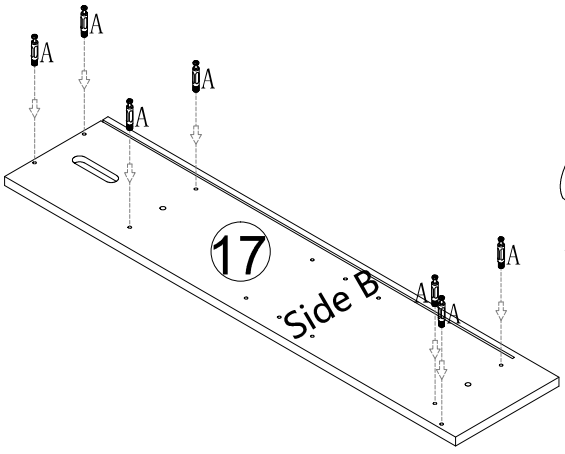



Flip to the other side.

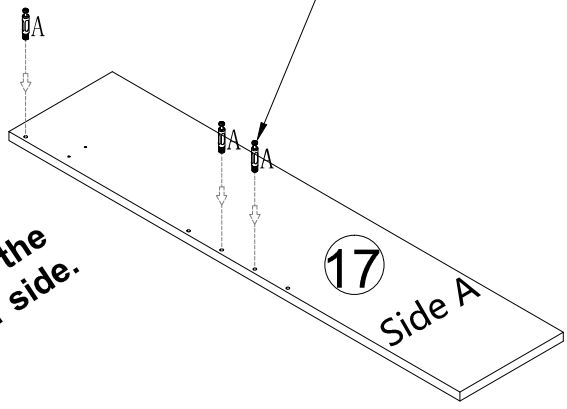





STEP 10

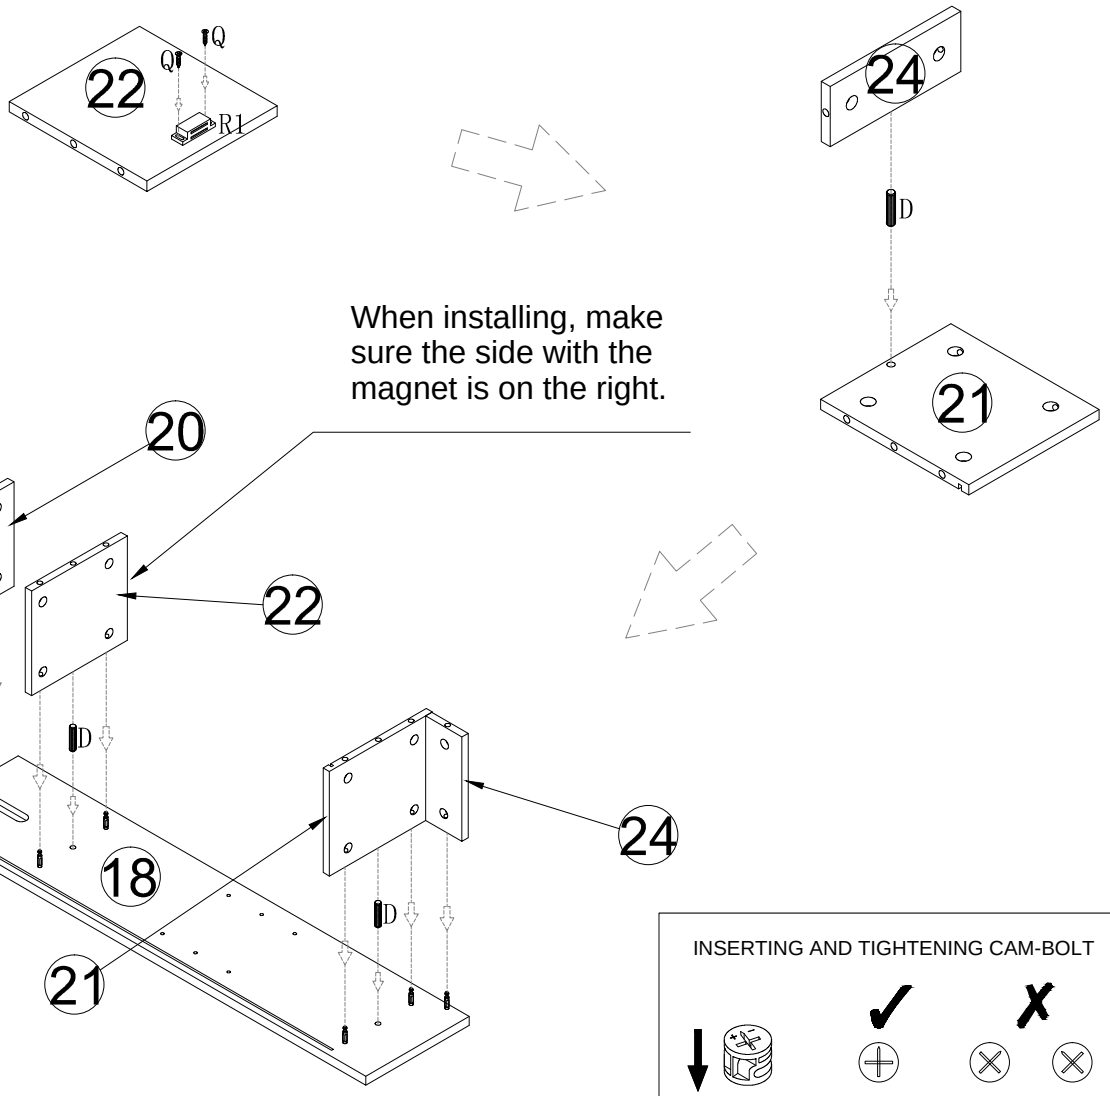

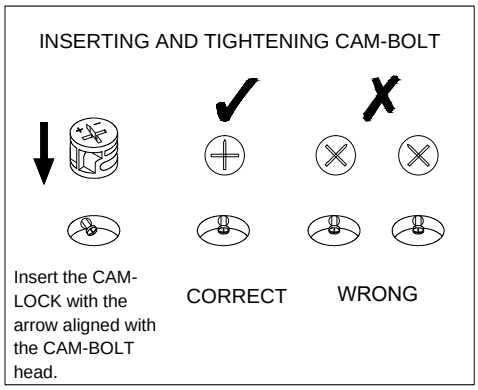



!	Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

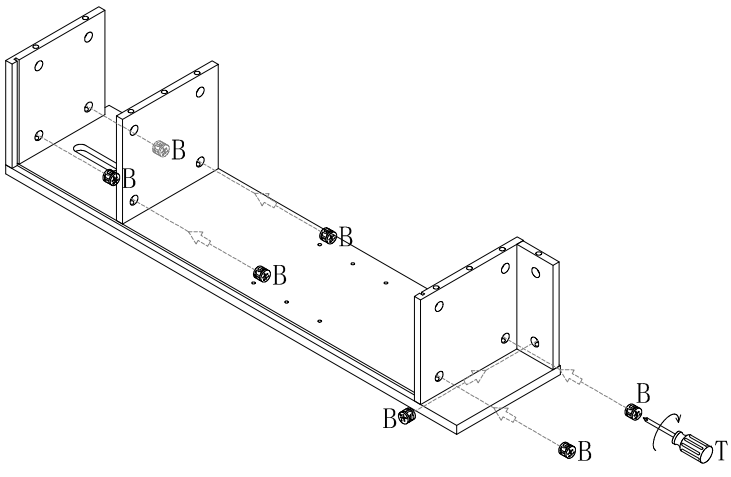


	B×7PCS
	D×3PCS
	Q×2PCS
	R1×1PC

STEP 11

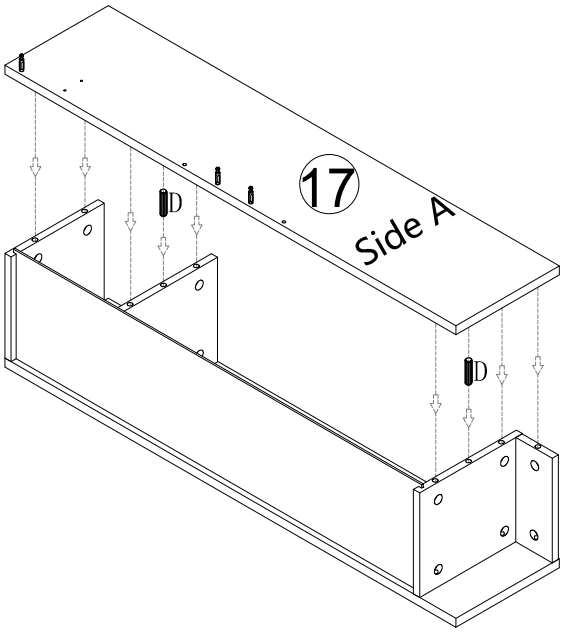

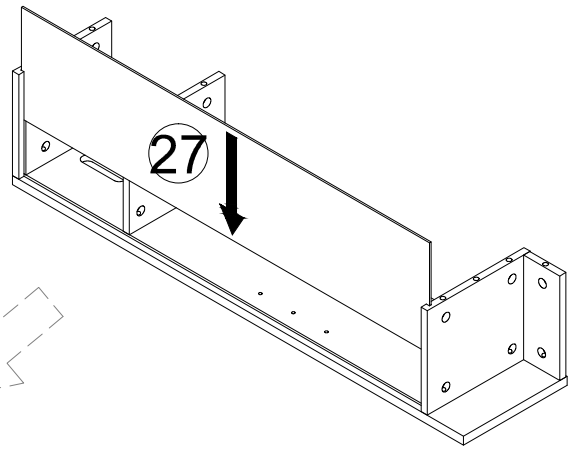

INSERTING AND TIGHTENING CAM-BOLT

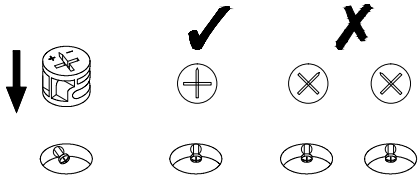



Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.


CORRECT

WRONG

Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

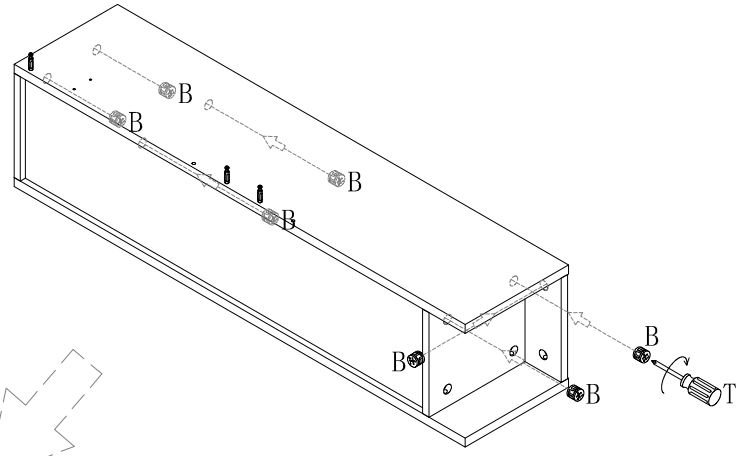


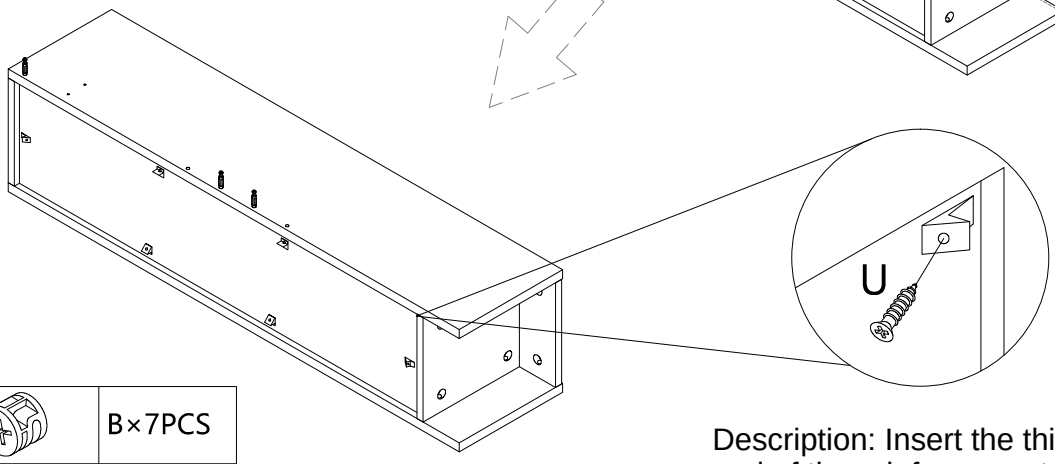

	B×7PCS
	D×2PCS
	U×6Sets


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

STEP 12

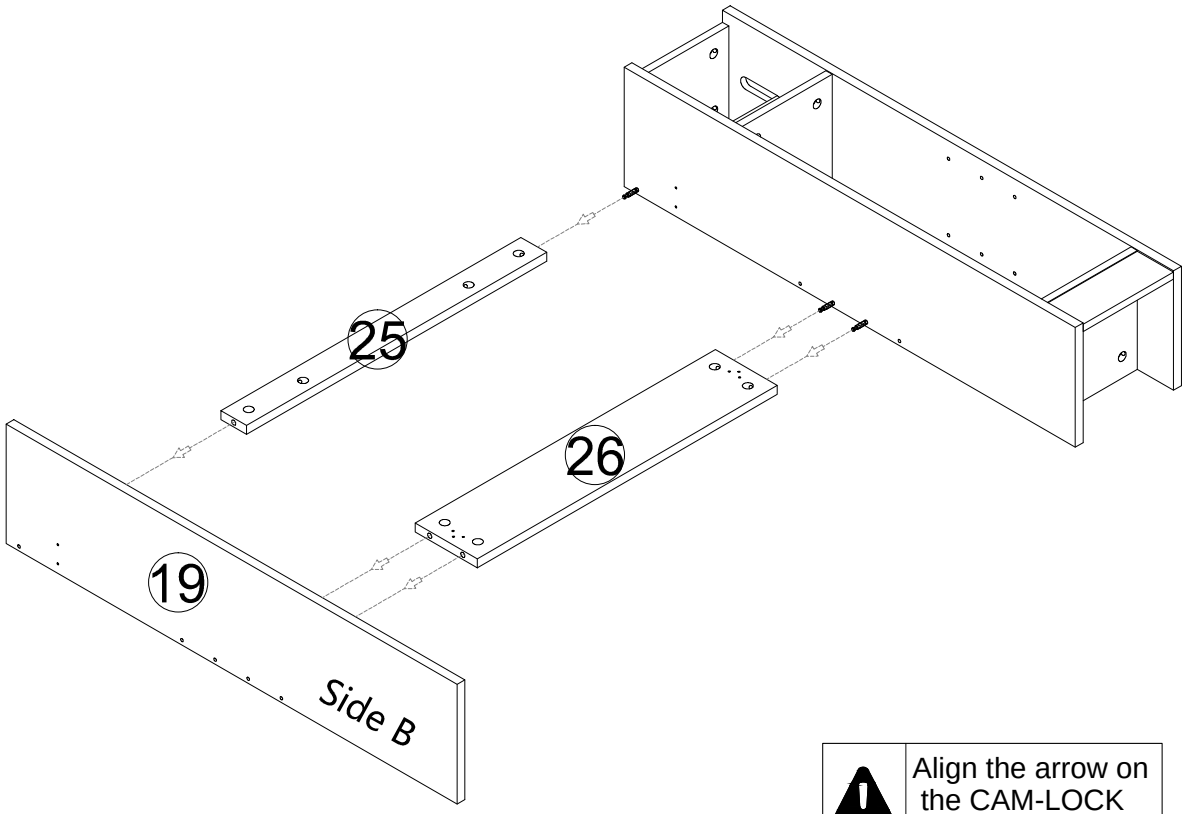

Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.


INSERTING AND TIGHTENING CAM-BOLT

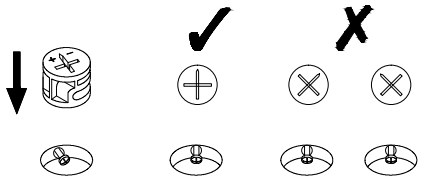

Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.


CORRECT

WRONG

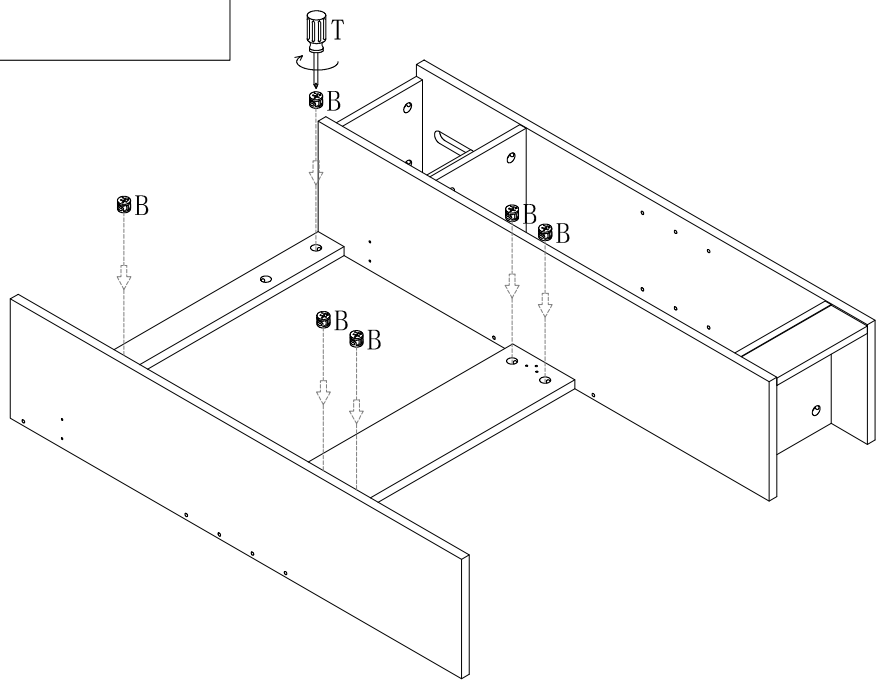


	B×6PCS

STEP 13

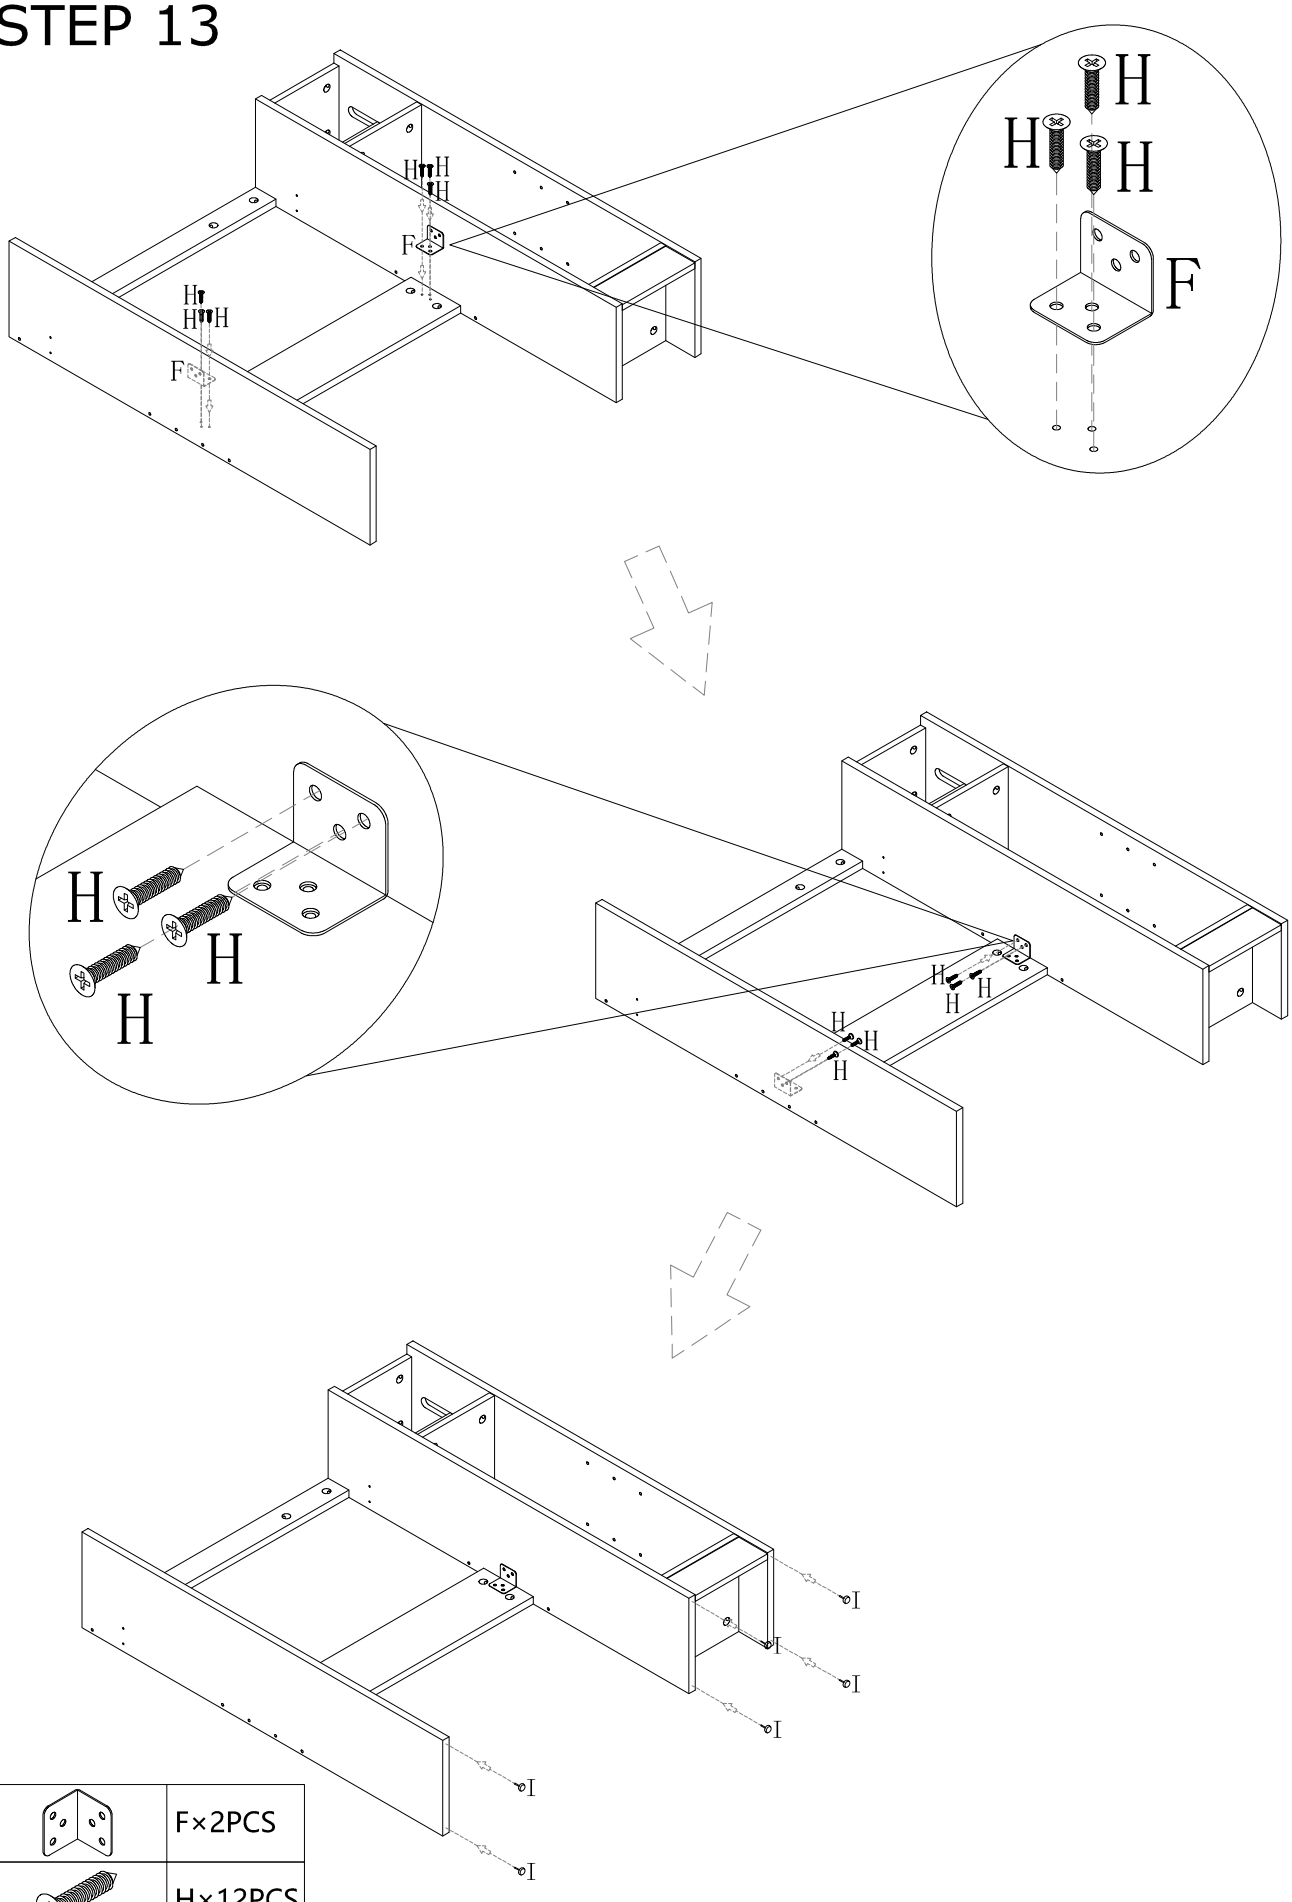

	F×2PCS
	H×12PCS
	I×6PCS


STEP 14

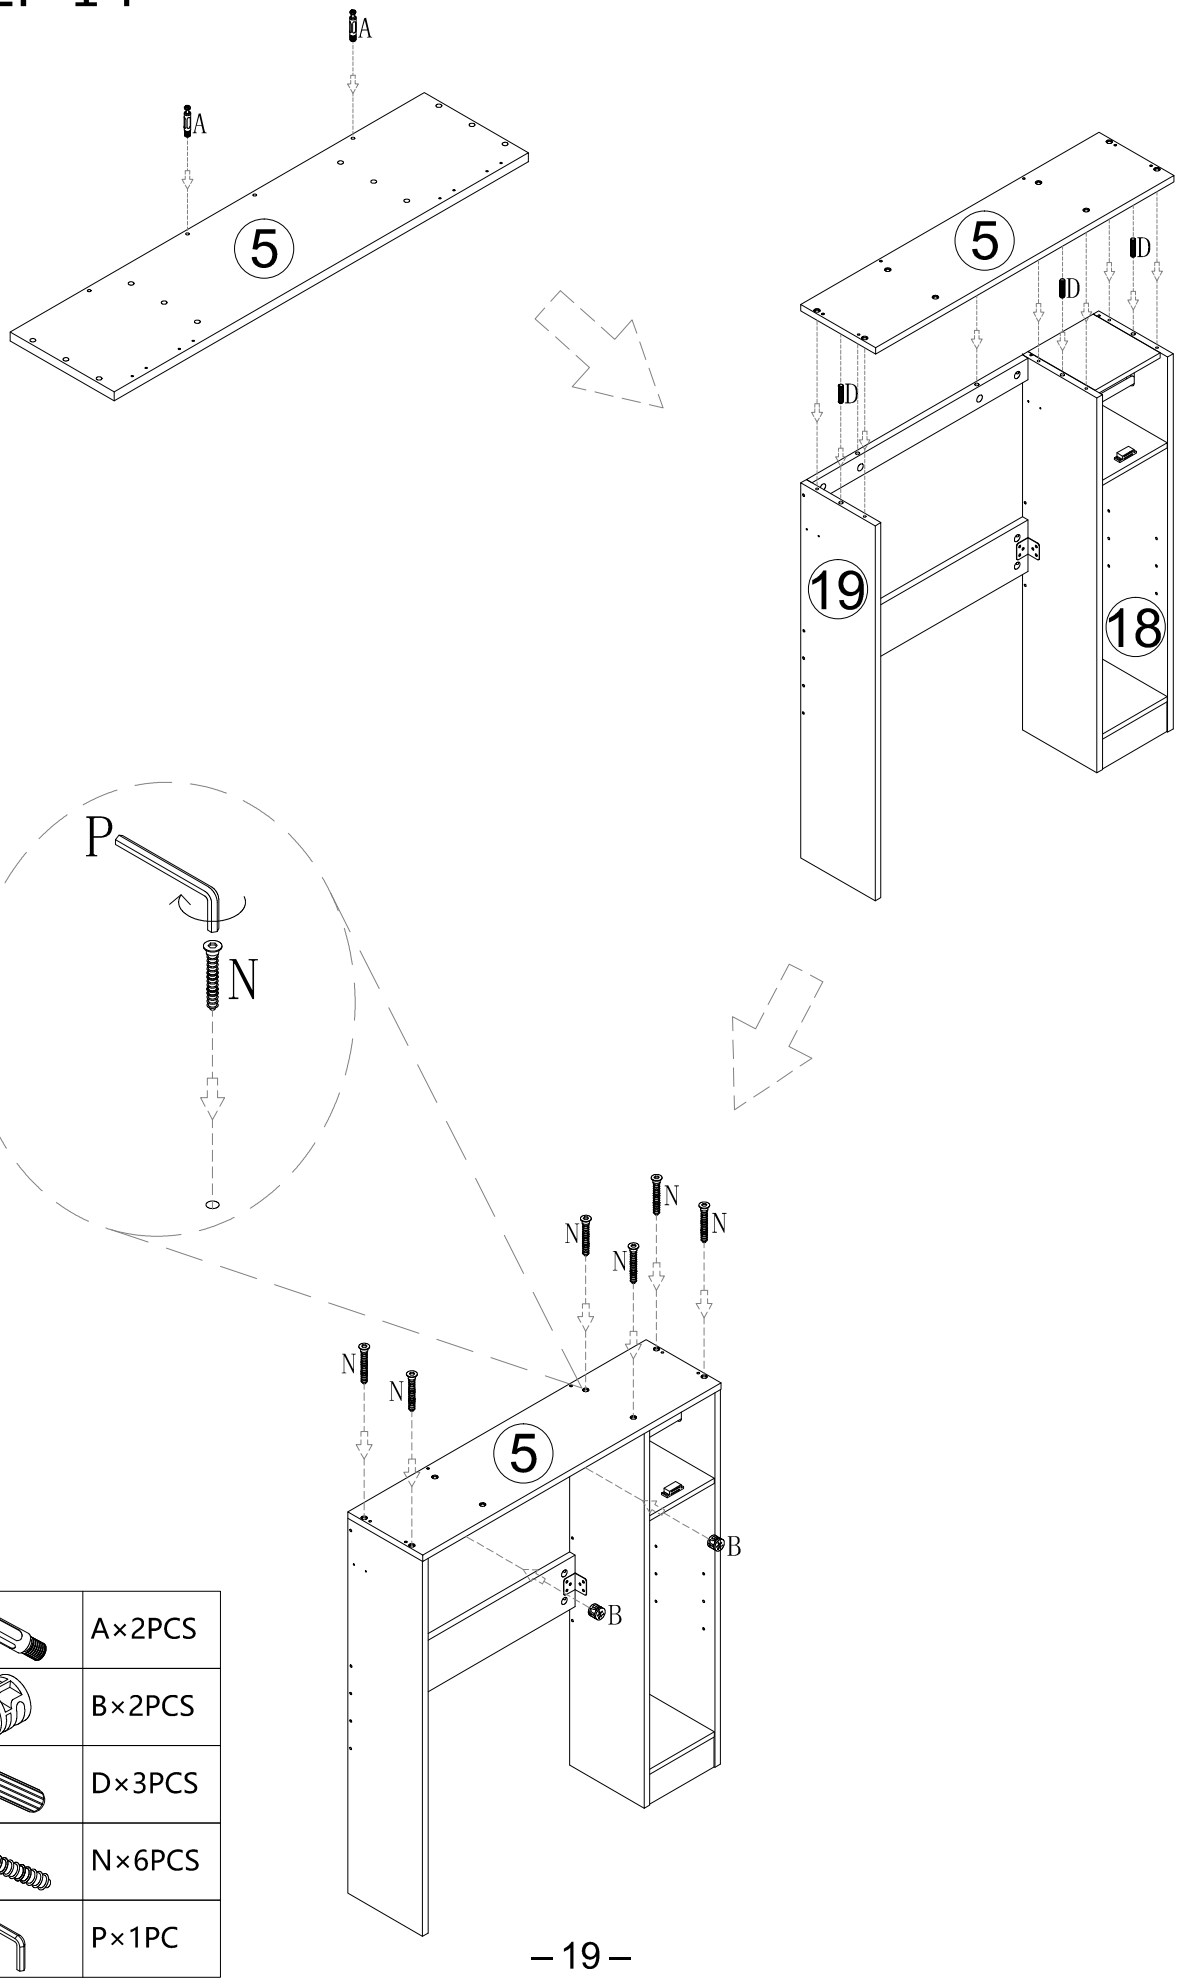



	A×2PCS
	B×2PCS
	D×3PCS
	N×6PCS
	P×1PC


STEP 15

From this step onward, the installation method for Group A and Group B is the same.

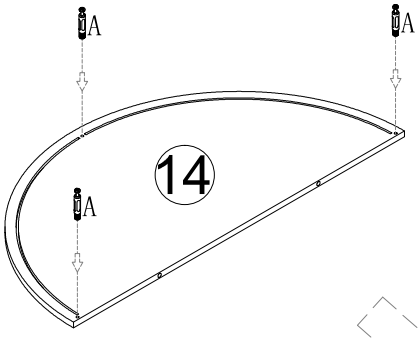


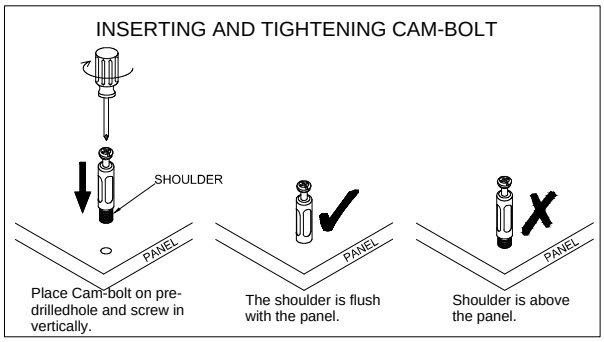

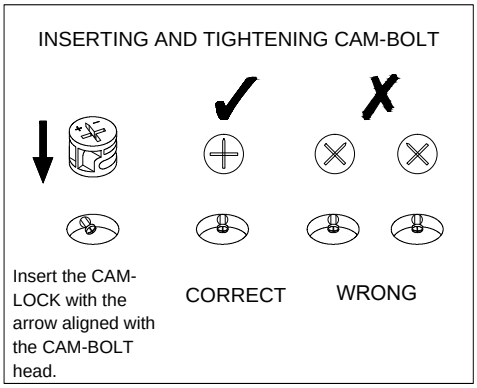


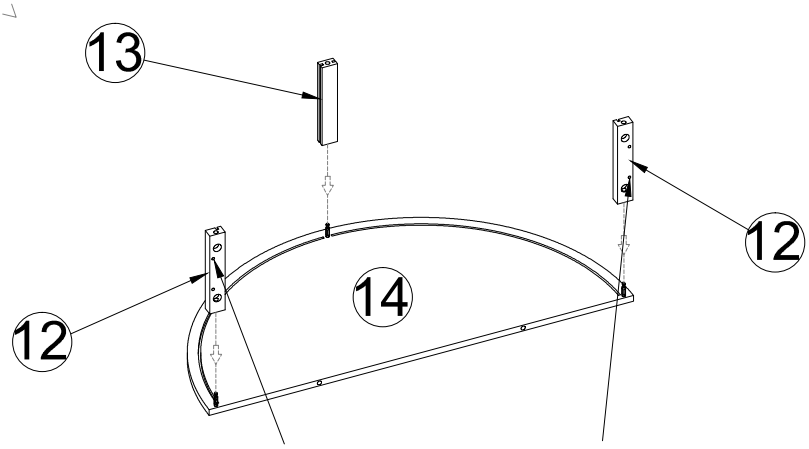

When installing, make sure the parts with small holes are installed on both sides.

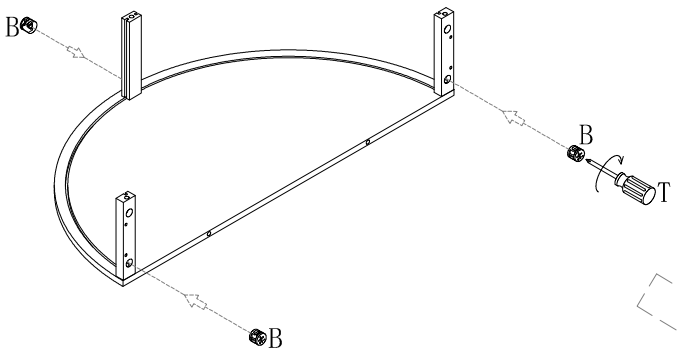


Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

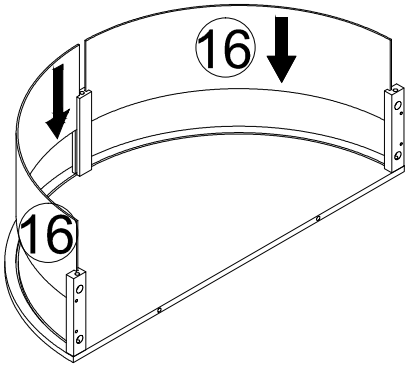



Be careful not to break it when bending and installing the bent plate.


	A×3PCS
	B×3PCS

STEP 16

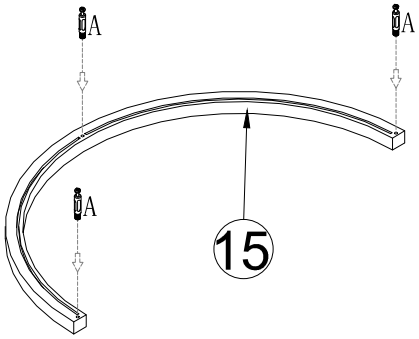


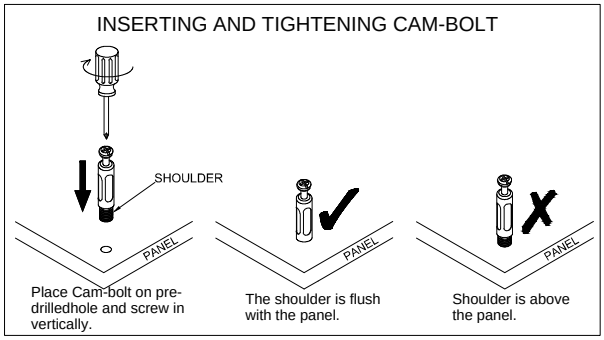

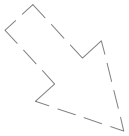

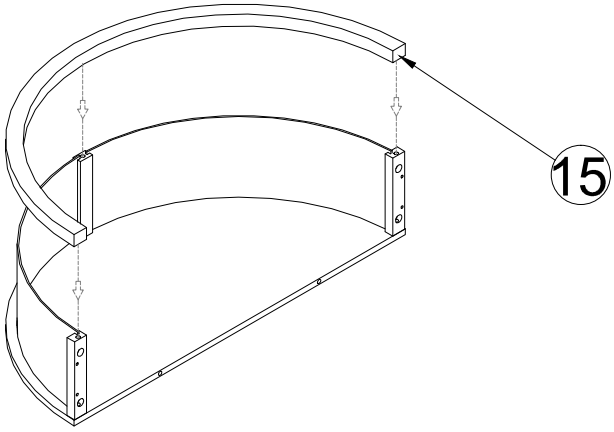


This step requires two or more people to complete the installation.

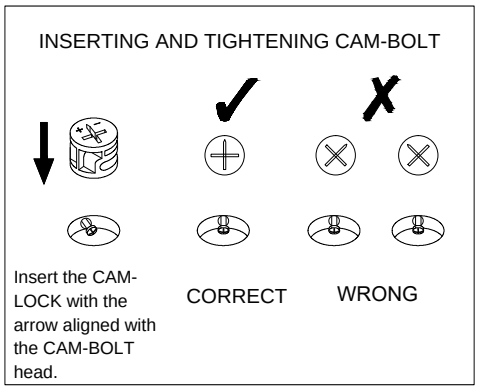




Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

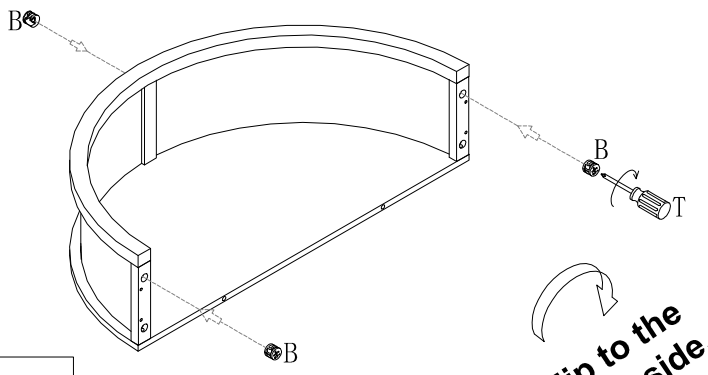


	A×3PCS
	B×3PCS


STEP 17

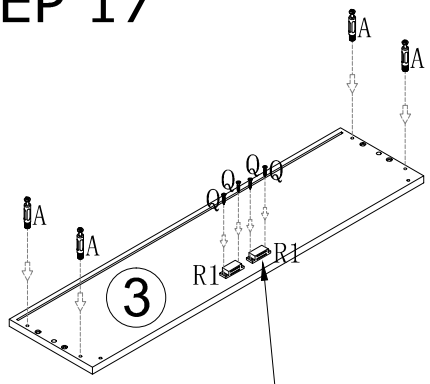



When installing, try to make sure the fronts of the two magnets are level with each other.

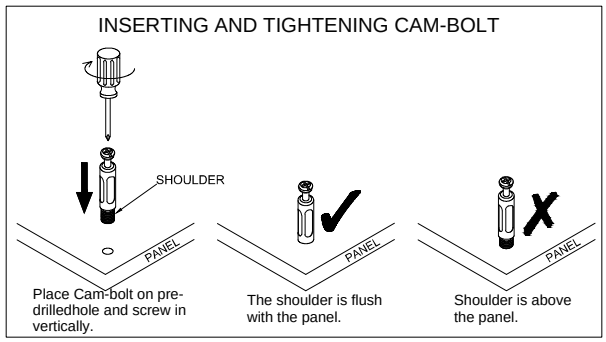




Flip to the other side.

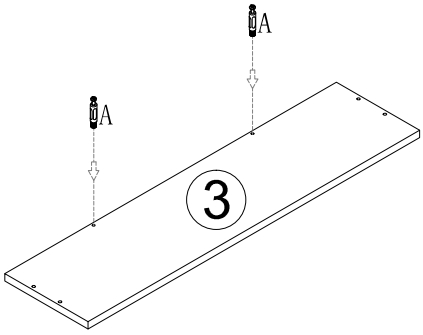

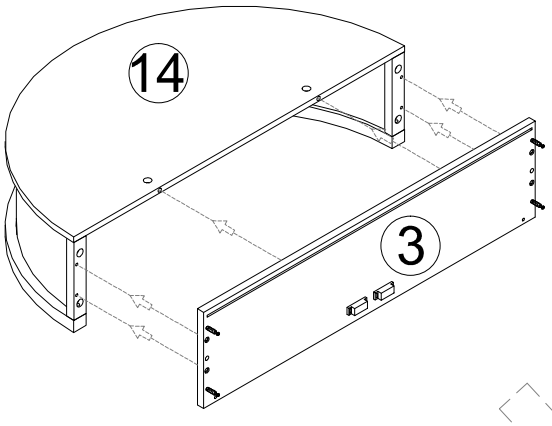


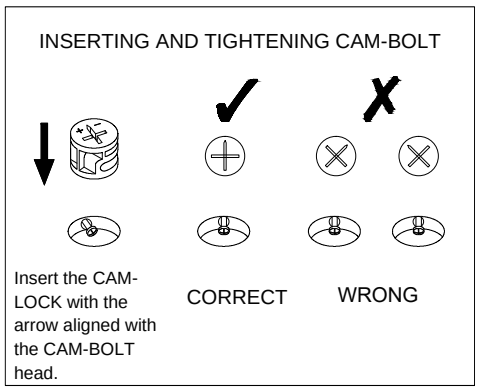


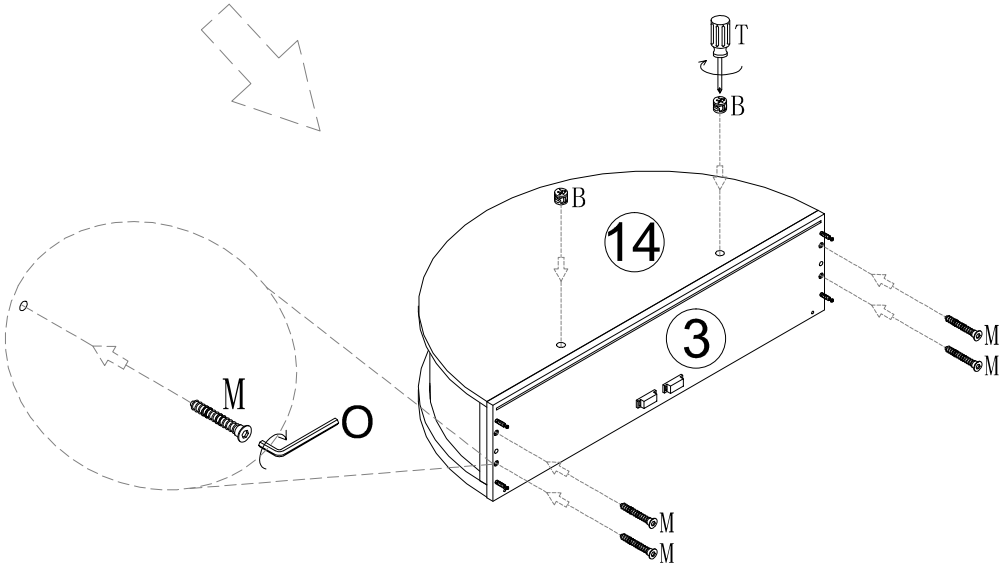



	A×6PCS
	B×2PCS
	M×4PCS
	O×1PC
	Q×4PCS
	R1×2PCS


STEP 18

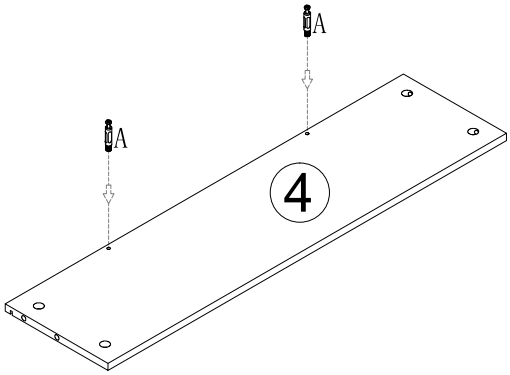


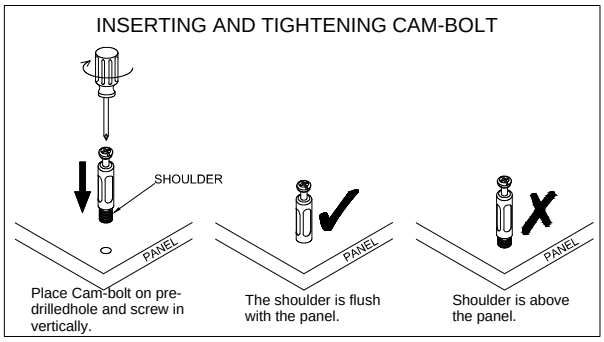

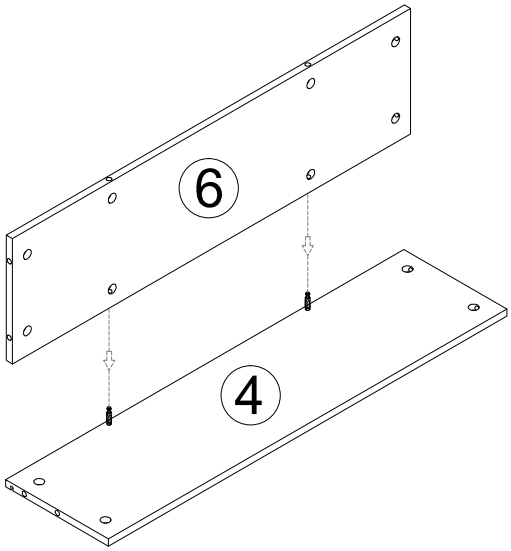

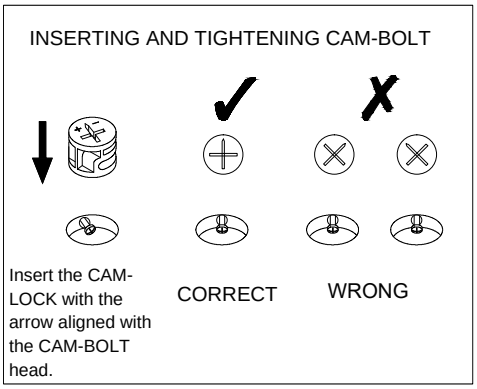


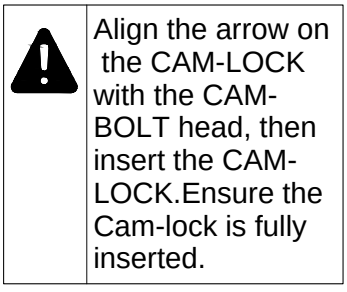


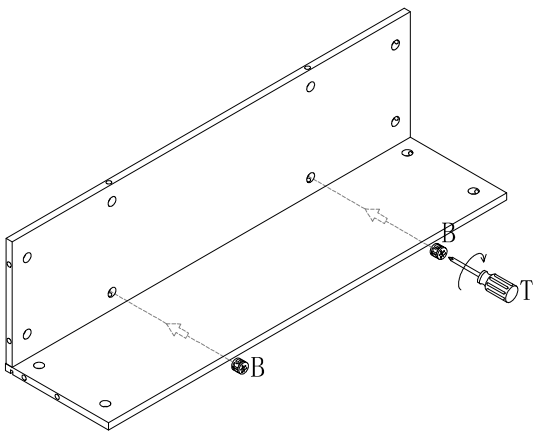



	A×2PCS
	B×2PCS


STEP 19

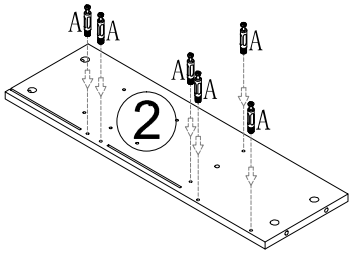


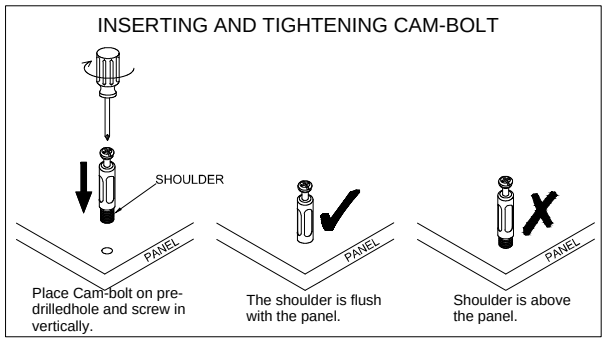

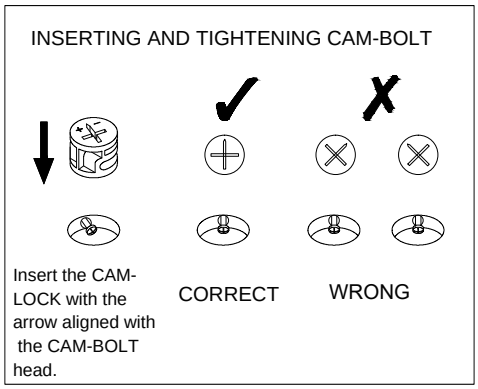


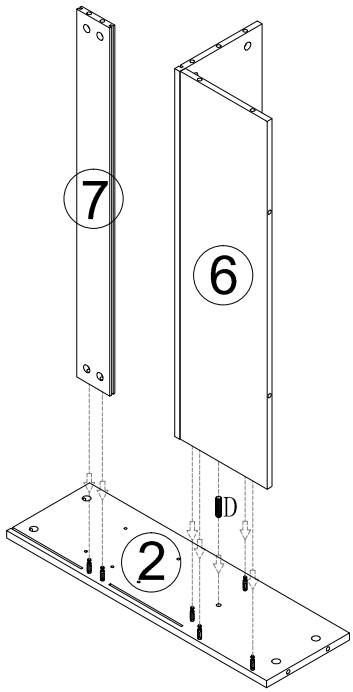

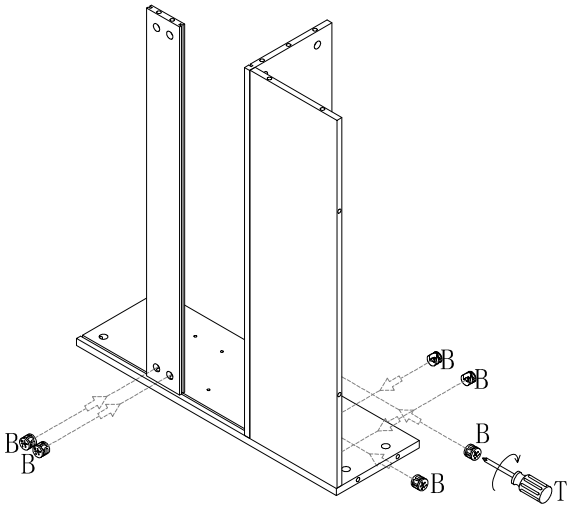


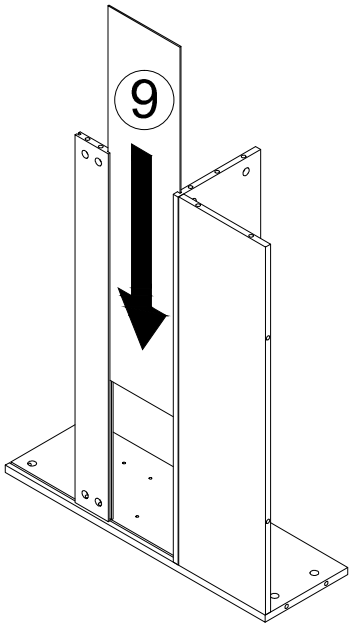



Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.


	A×6PCS
	B×6PCS
	D×1PC


STEP 20

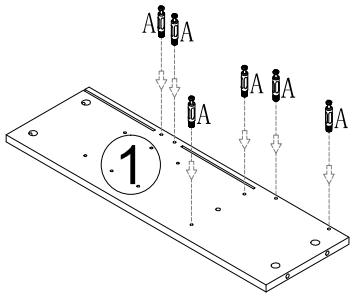


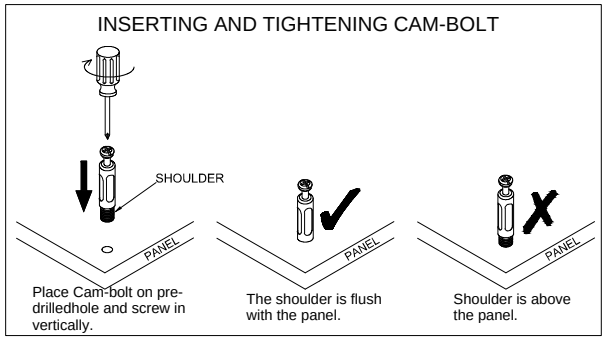

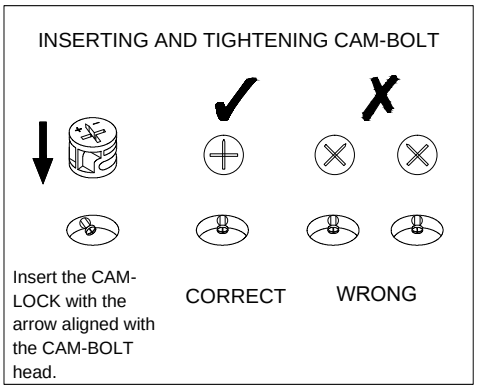

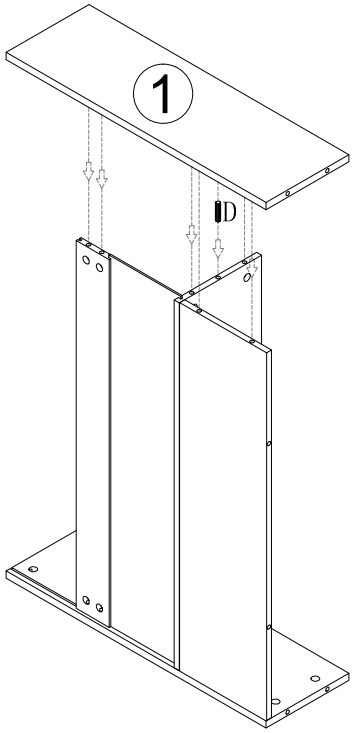

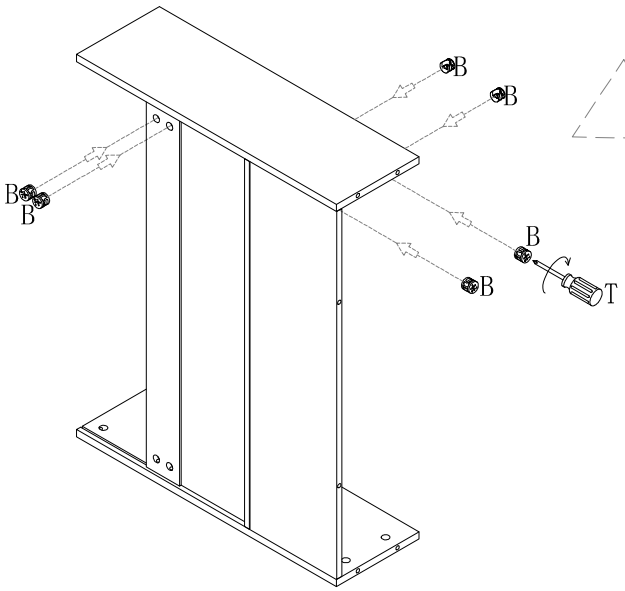

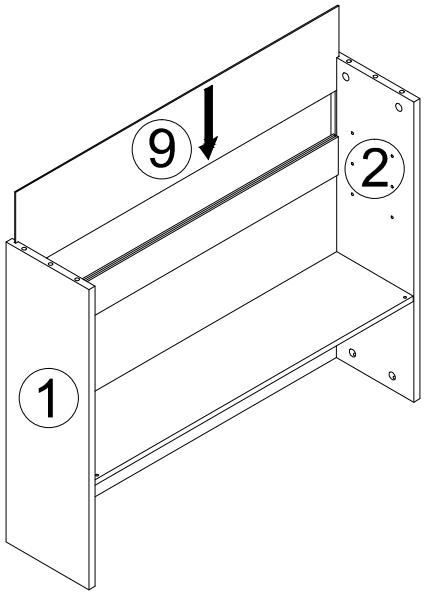


Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.	


	A×6PCS
	B×6PCS
	D×1PC

STEP 21

This step requires two or more people to complete the installation.

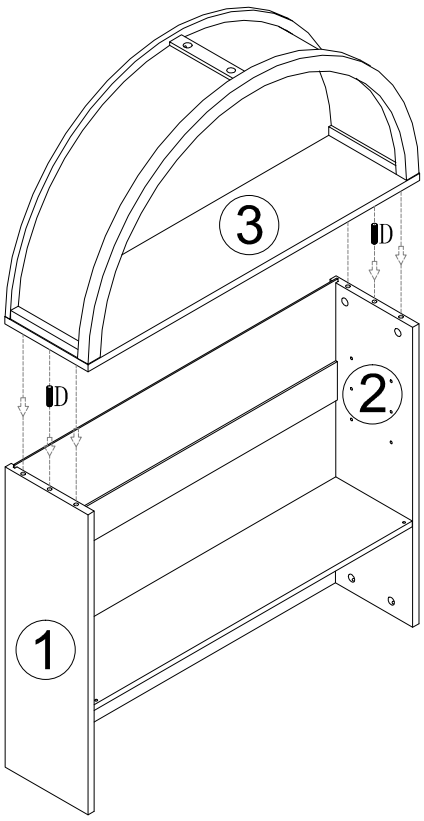


INSERTING AND TIGHTENING CAM-BOLT

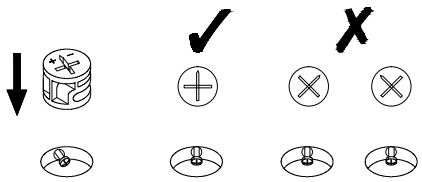


Insert the CAM-LOCK with the arrow aligned with the CAM-BOLT head.


CORRECT

WRONG

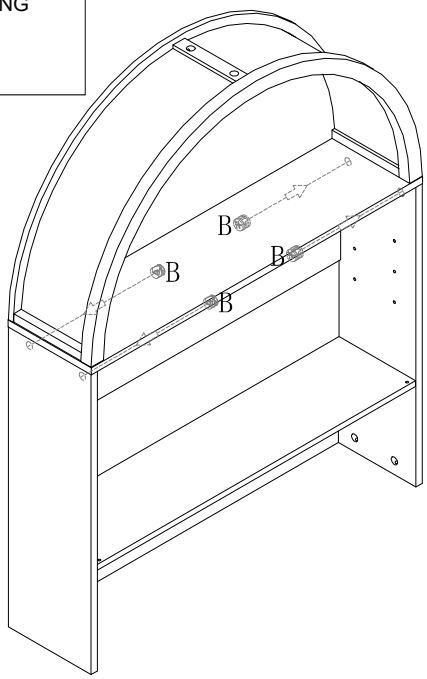


Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

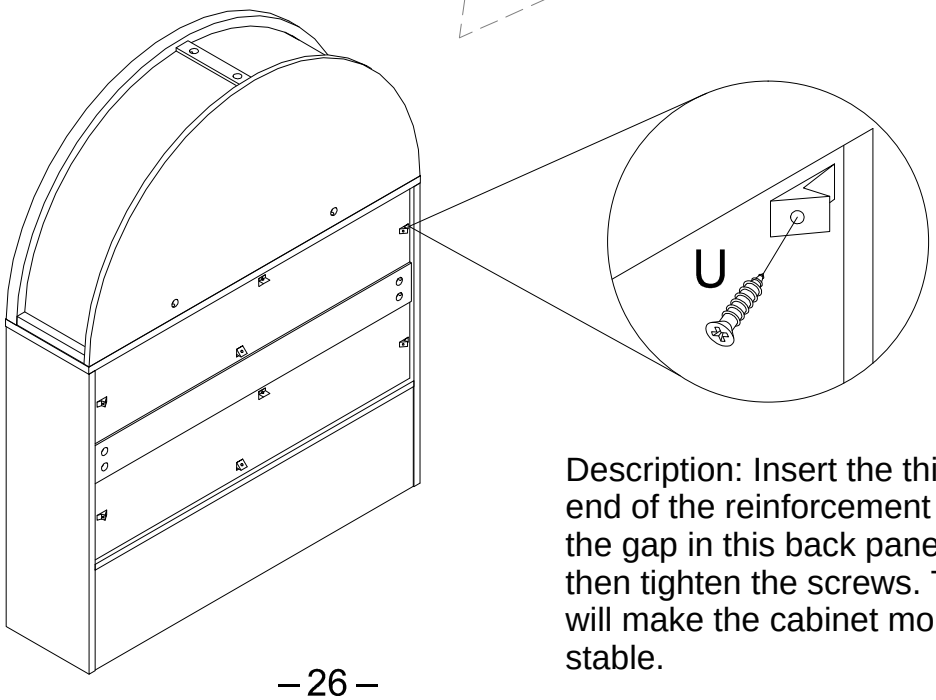



	B×4PCS
	D×2PCS
	U×8Sets

Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

STEP 22

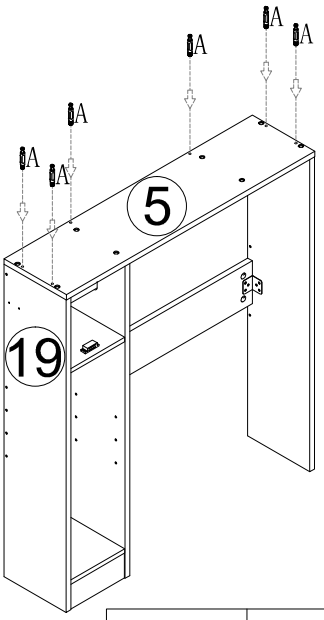


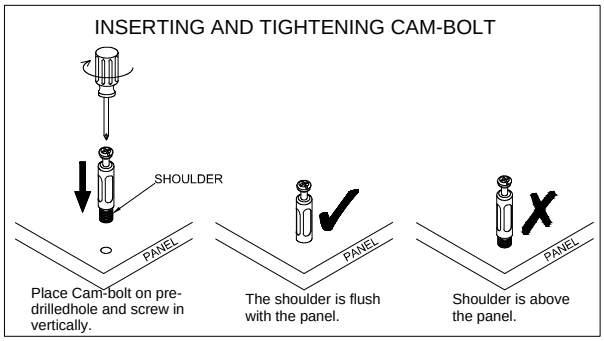


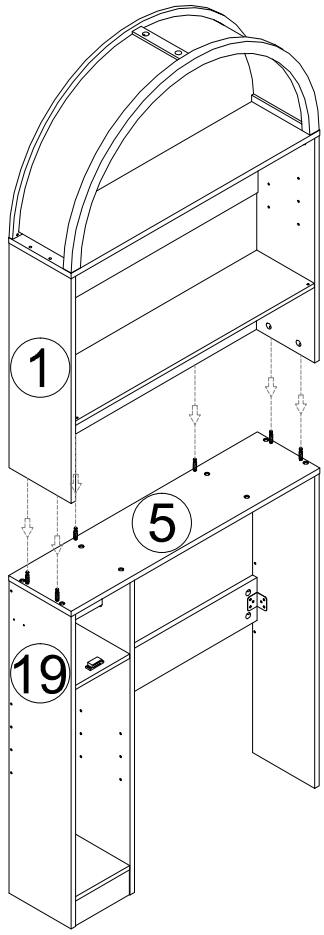


This step requires two or more people to complete the installation.


Align the arrow on the CAM-LOCK with the CAM-BOLT head, then insert the CAM-LOCK.Ensure the Cam-lock is fully inserted.

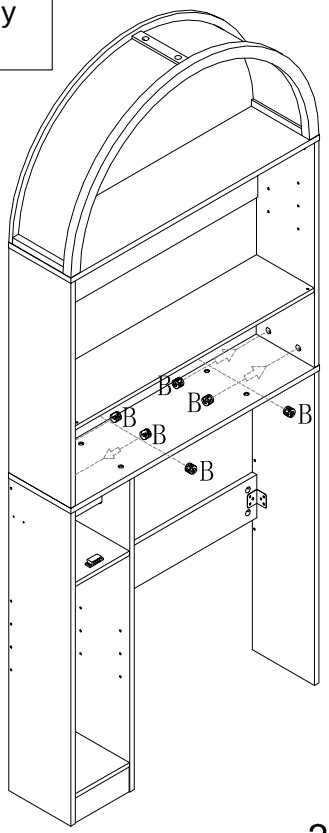

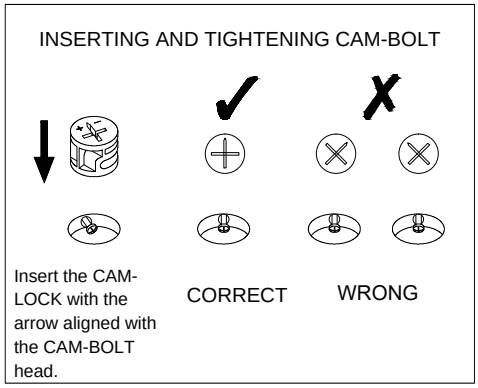


	A×6PCS
	B×6PCS

STEP 23

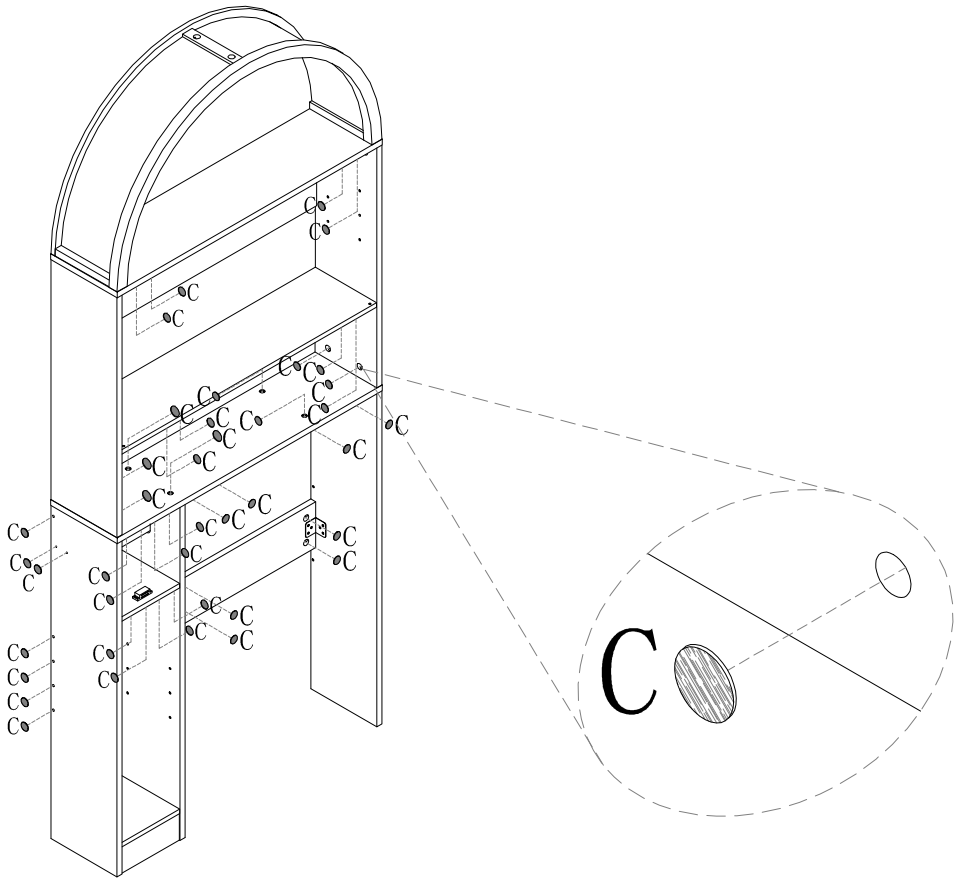


	C×52PCS

STEP 24

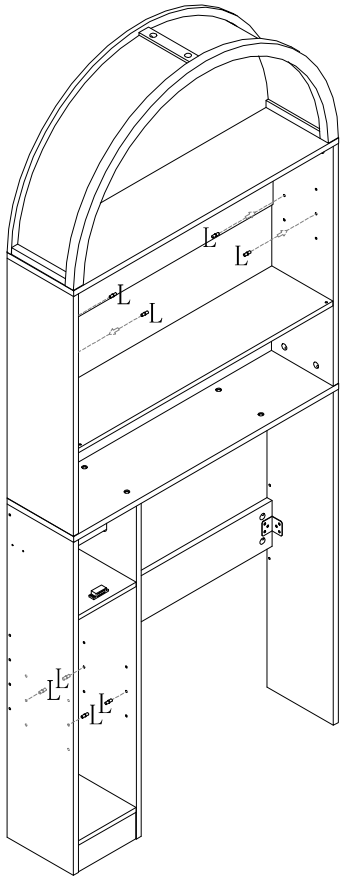


	L×8PCS

STEP 25

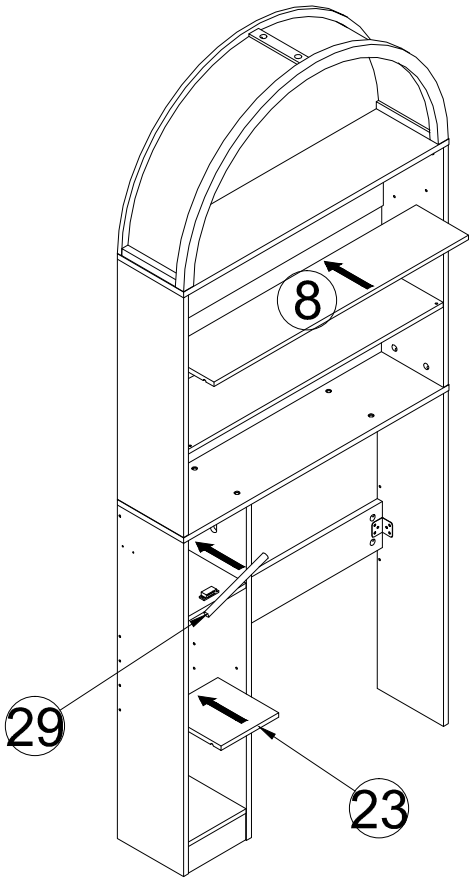


STEP 26

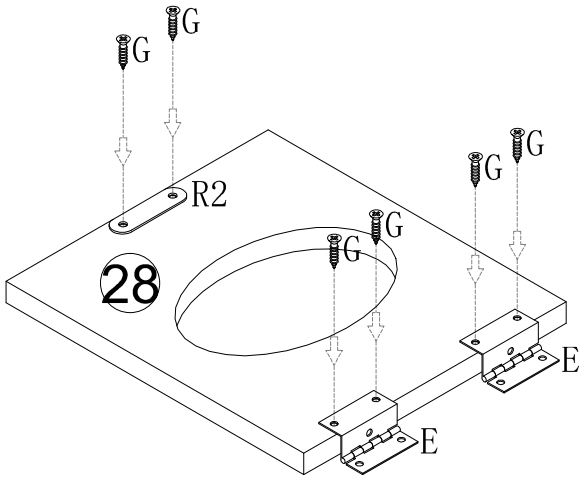

	E×2PCS
	G×6PCS
	R2×1PC


STEP 27


This step requires two or more people to complete the installation.

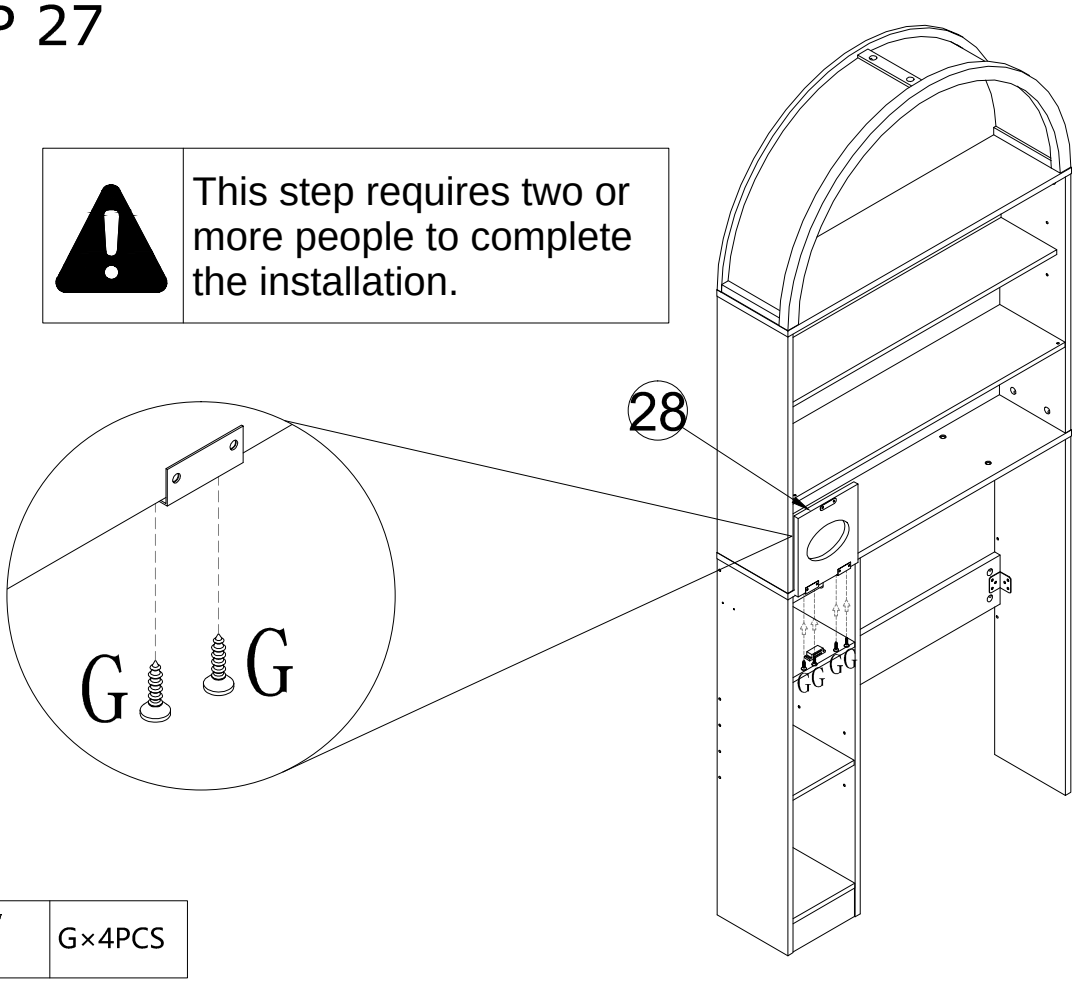

	G×4PCS


STEP 28

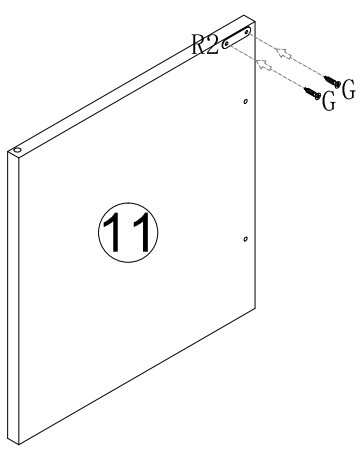


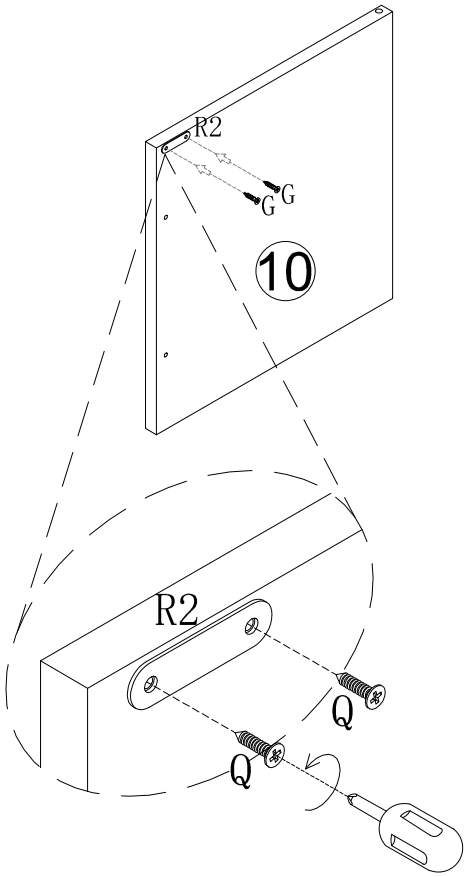

	Q×4PCS
	R2×2PCS


STEP 29

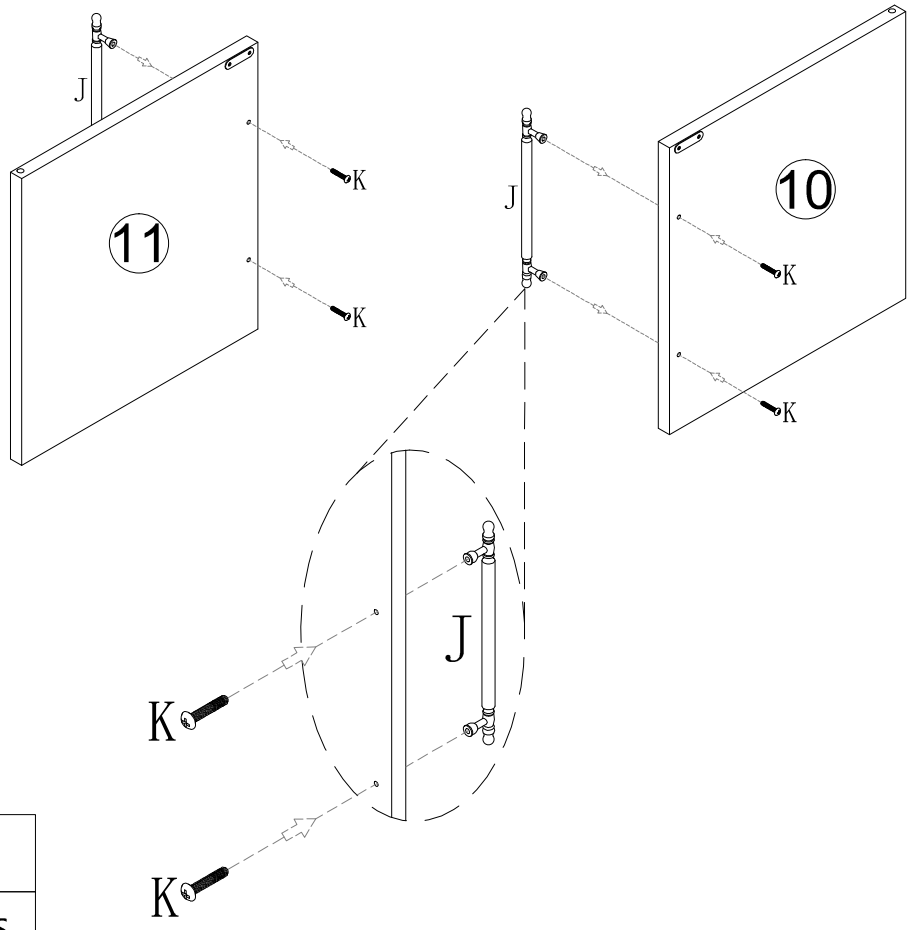


	J×2PCS
	K×4PCS

STEP 30


Make sure both the top and bottom parts are properly installed, otherwise it might affect how it works.

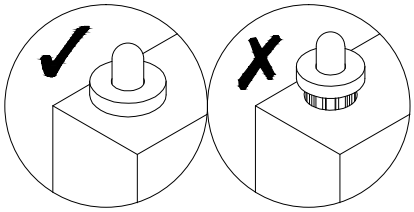


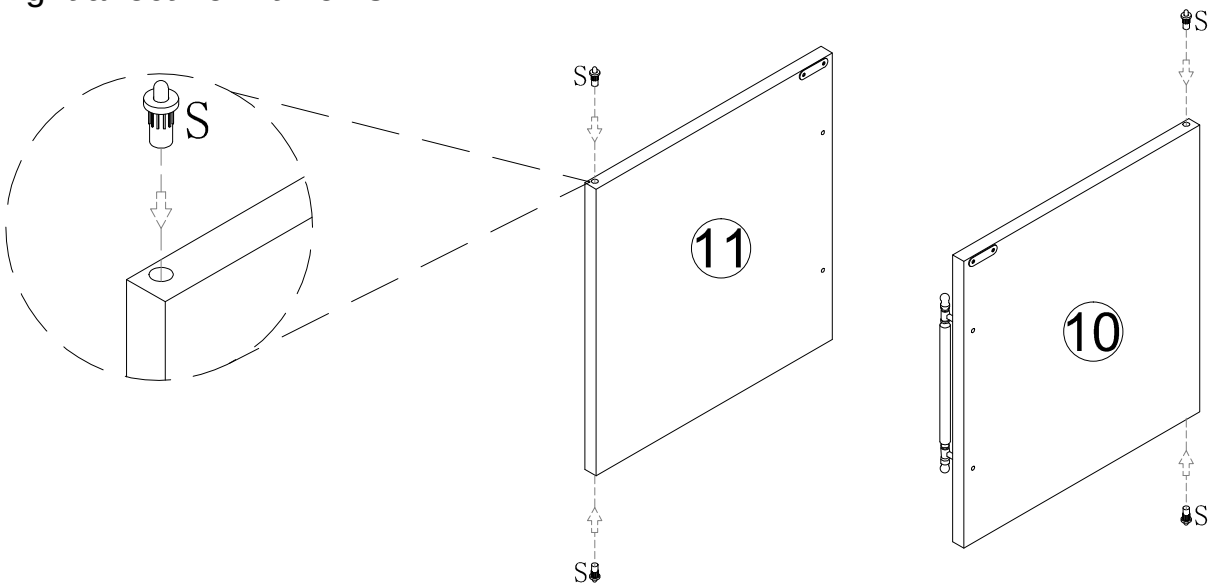


	S×4PCS


STEP 31

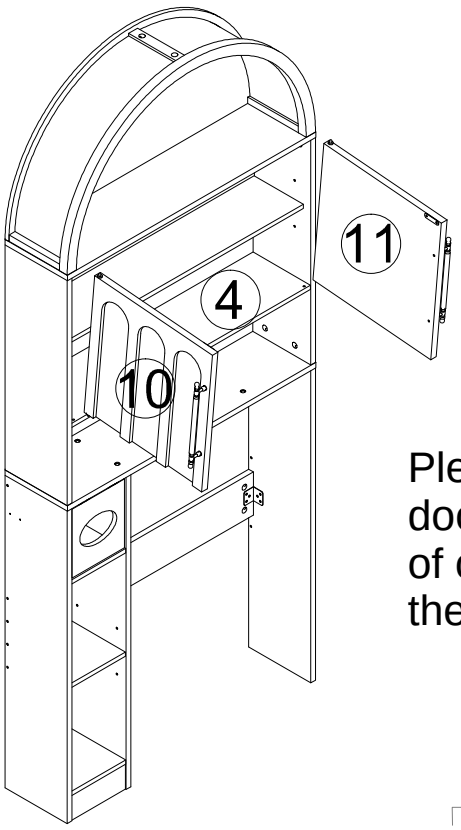


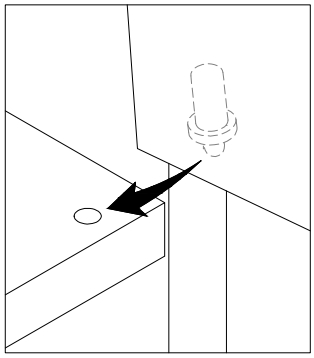

Please align the protruding part of the door panel pivot with the hole of component 4 and insert it, note: the magnetic contact iron plate is above.

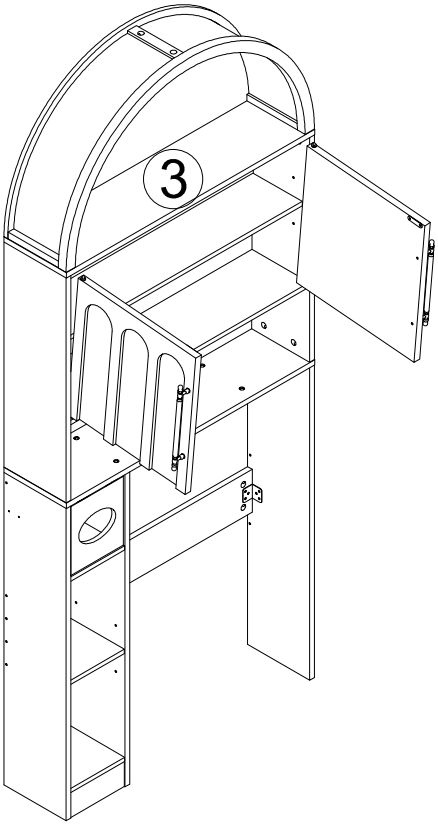


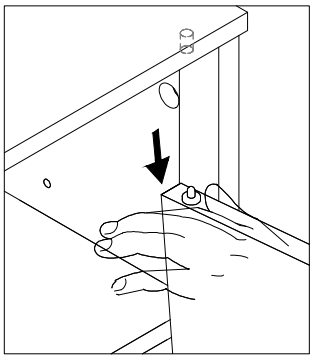


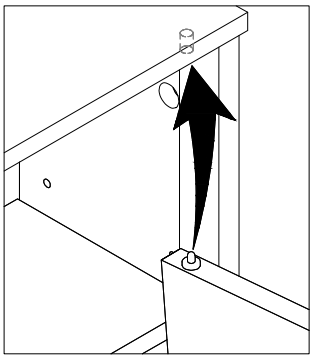

Please press down the protruding part of the door panel pivot and align it with the hole on component 3 for insertion.

STEP 32

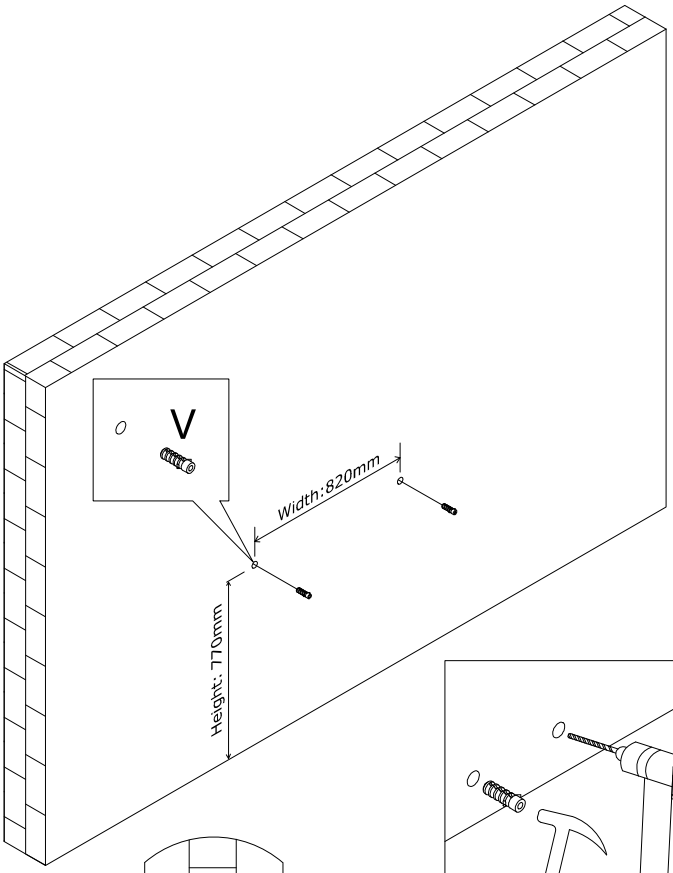

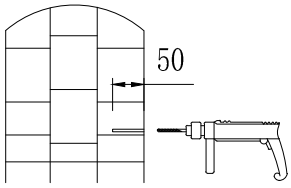



Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.