



**** Do not tighten any bolts until all of them have been started !**


Step 1.

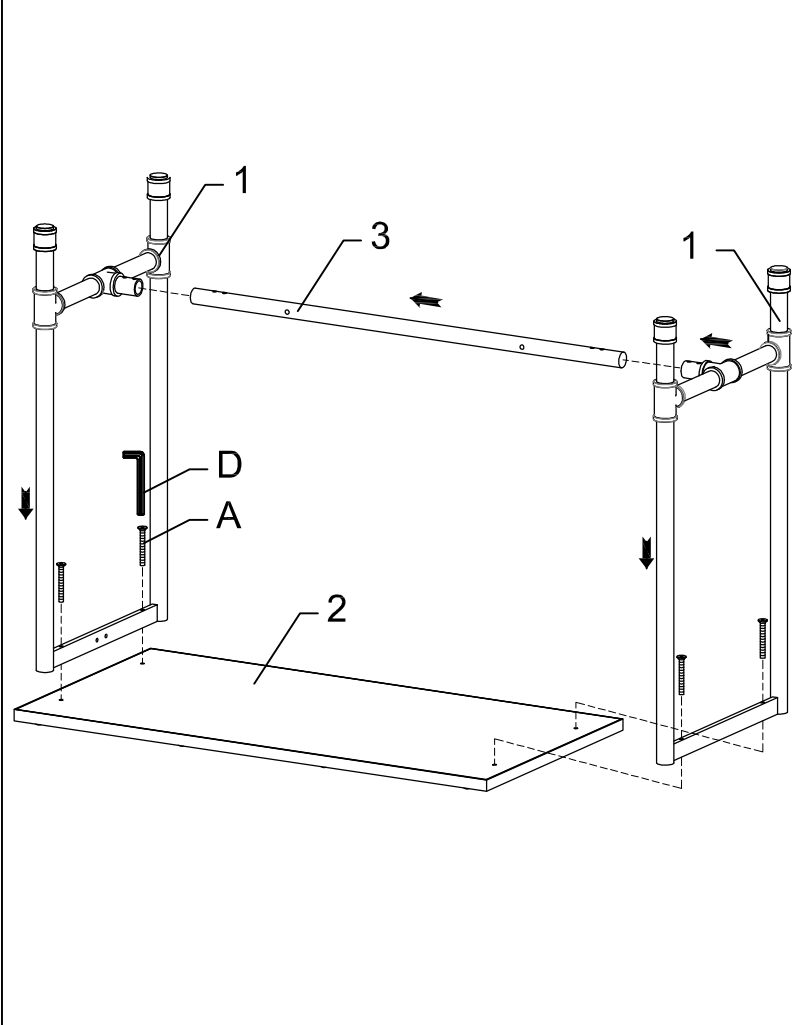


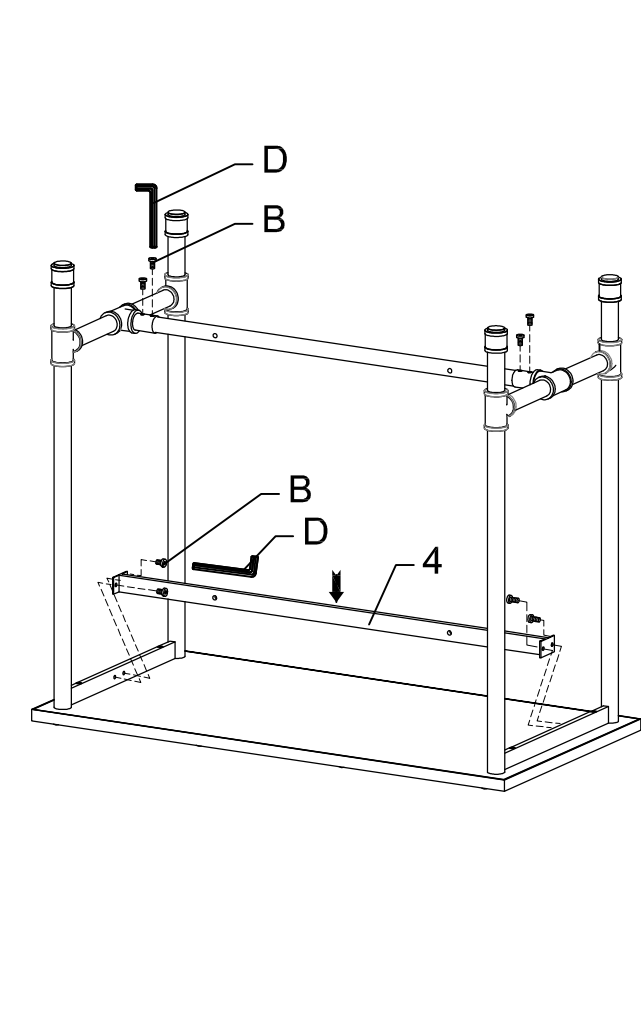



Step 2.

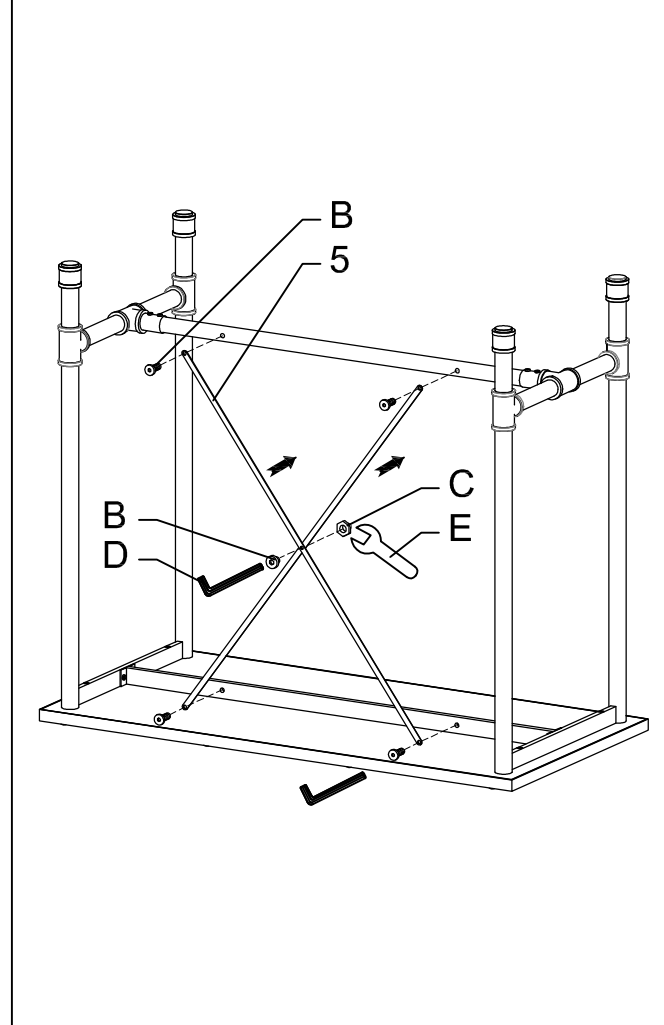





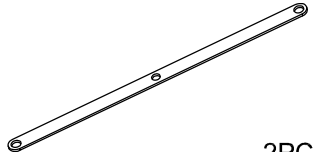
Step 3.



ACCESSORY PACK

<p>A</p>  <p>4PCS</p>	<p>B</p>  <p>13PCS</p>	<p>C</p>  <p>1PC</p>	<p>D</p>  <p>1/4"</p> <p>1PC</p>	<p>E</p>  <p>1PC</p>
---	---	---	---	---

COMPLETE HARDWARE
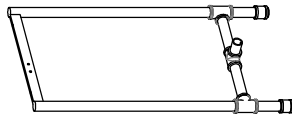
<p>1</p>  <p>2PC</p>	<p>2</p>  <p>1PC</p>	<p>3</p>  <p>1PC</p>	<p>4</p>  <p>1PC</p>	<p>5</p>  <p>2PCS</p>
--	---	--	---	--