

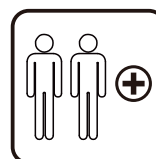
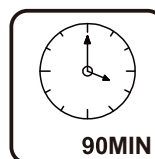
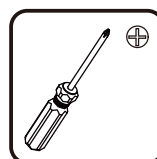
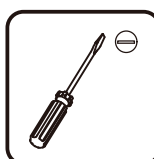


Installation & Assembly


Version:1.0

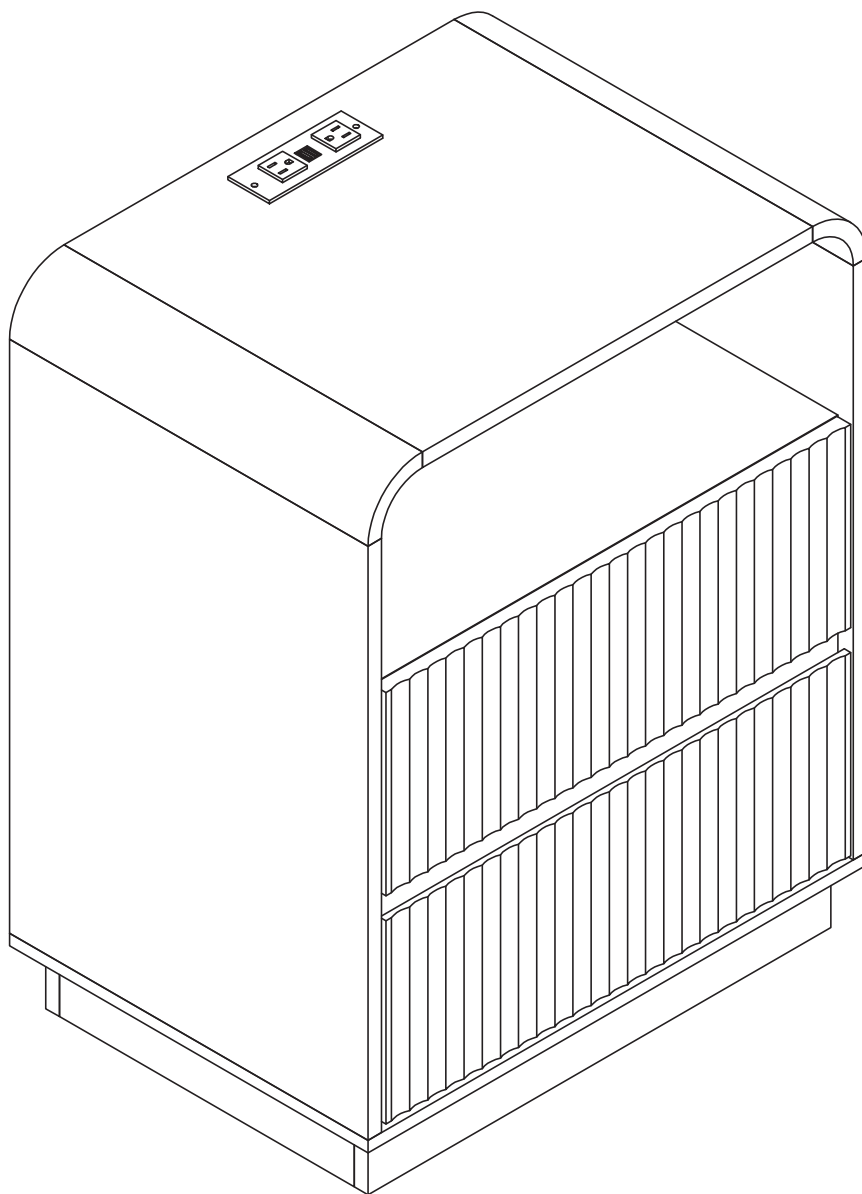


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

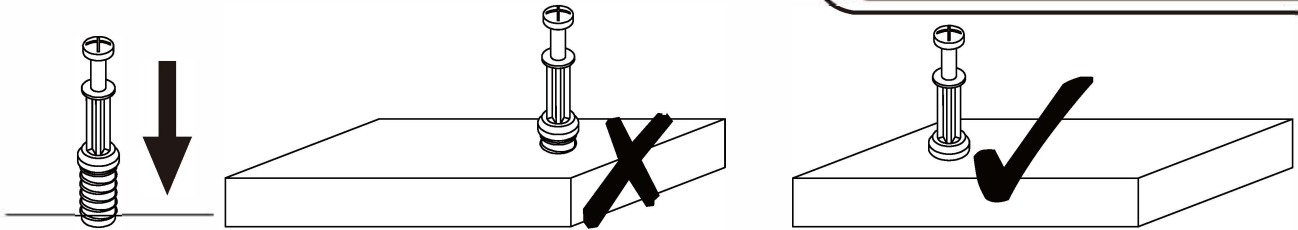


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

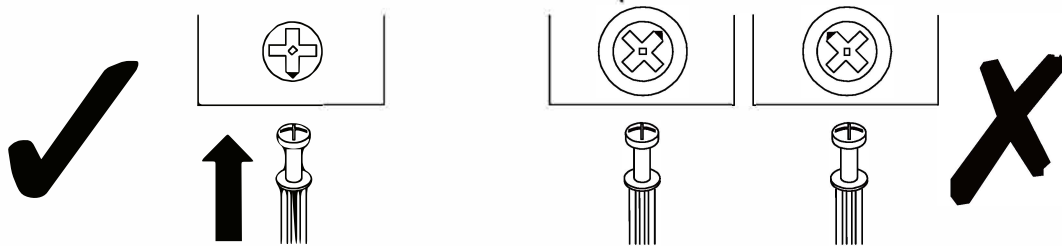











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







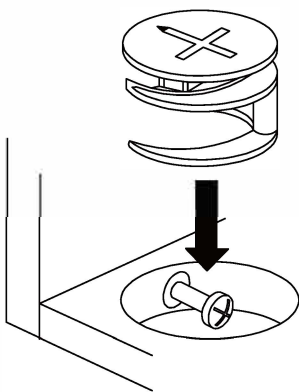



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.






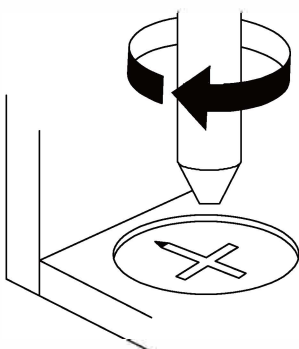


EN_Turn cam lock clockwise to tighten.

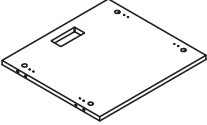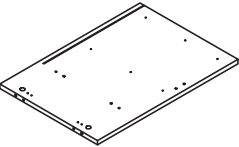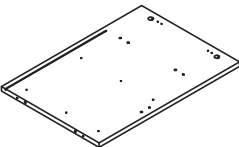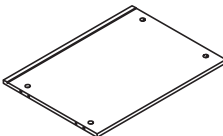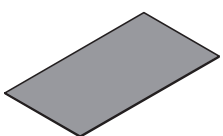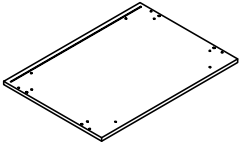NO.	PARTS	QTY	SPARE
①		x1	
②		x2	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x2	
⑪		x2	

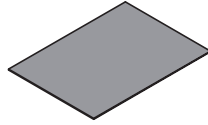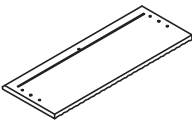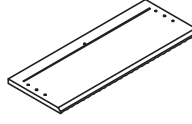
NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x2	
⑭		x2	
⑮		x2	
⑯		x2	
⑰		x1	
⑱		x1	
	 Hardware Kit		

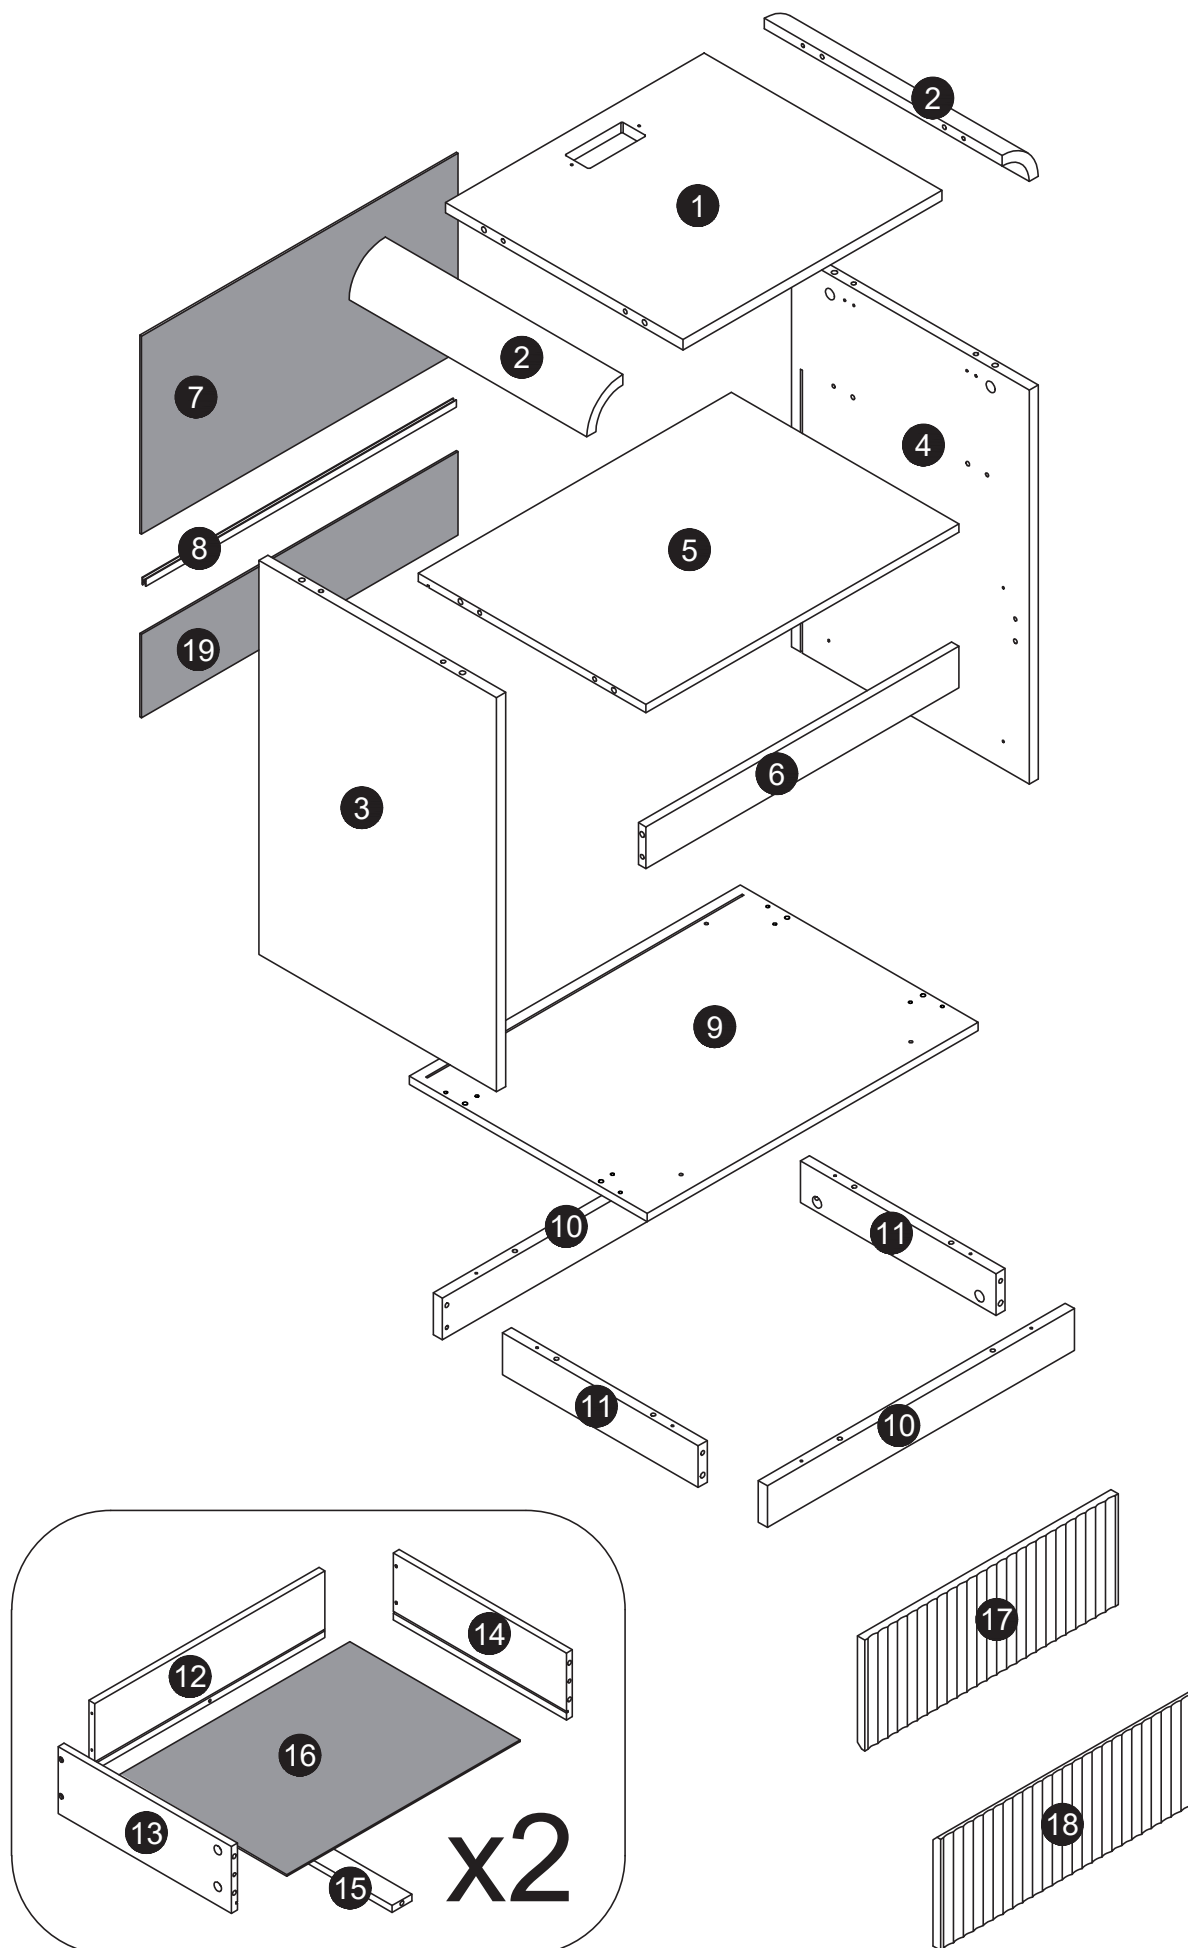

 A x20 Ø6x35mm +2(spare)	 B x28 Ø15x10mm +2(spare)	 C x34 Ø6x30mm +3(spare)	 D x12 Ø4x35mm +1(spare)	 E x24 Ø3.5x12mm +2(spare)	 F x8 Ø6x40mm
 G x4 Ø5x40mm	 H x4 Ø20mm	 I x8 Ø4x30mm	 J x4	 K x16 Ø4x14mm +1(spare)	 L x2 Ø6x30mm
 M-1	 M-2	 N-1	 N-2	 O x2 Ø3.5x12mm	 P x1
 CL x2 L350mm	 CR x2 L350mm	 DL x2 L350mm	 DR x2 L350mm		

D x10



01

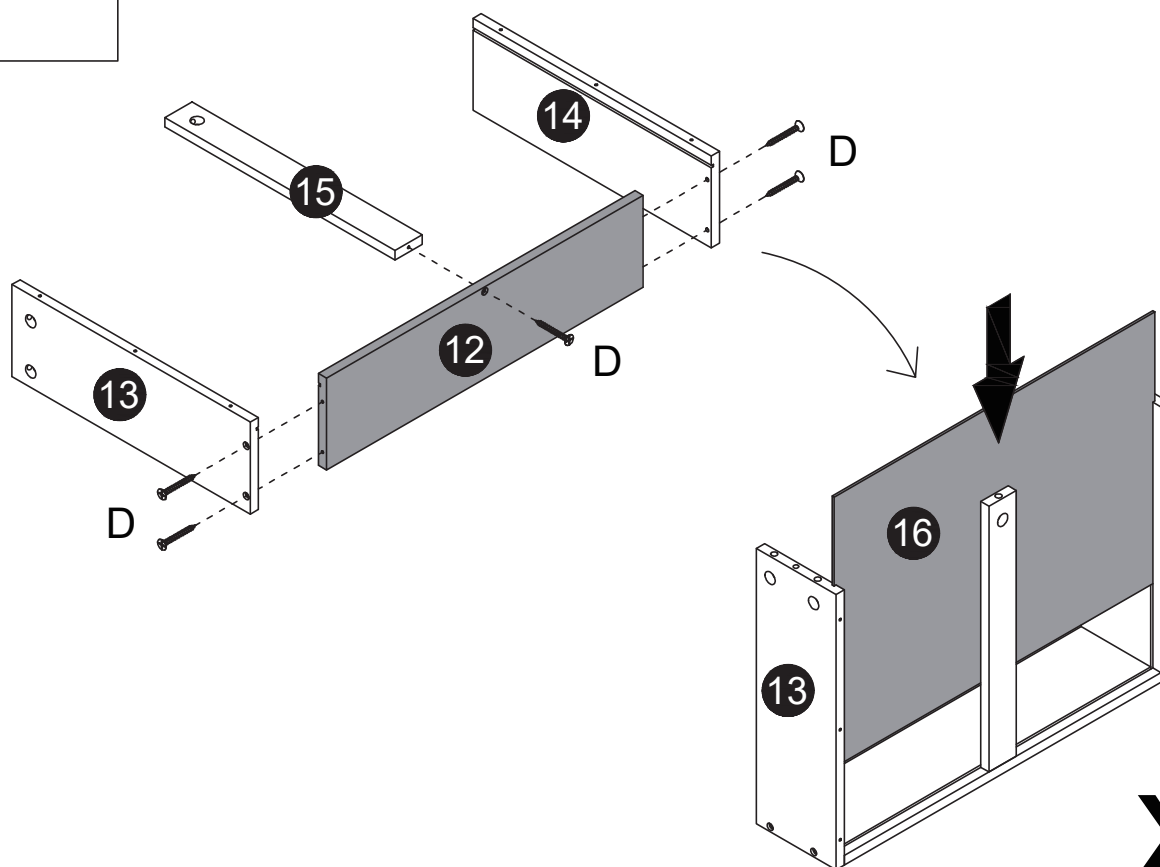

x2

A x10

02

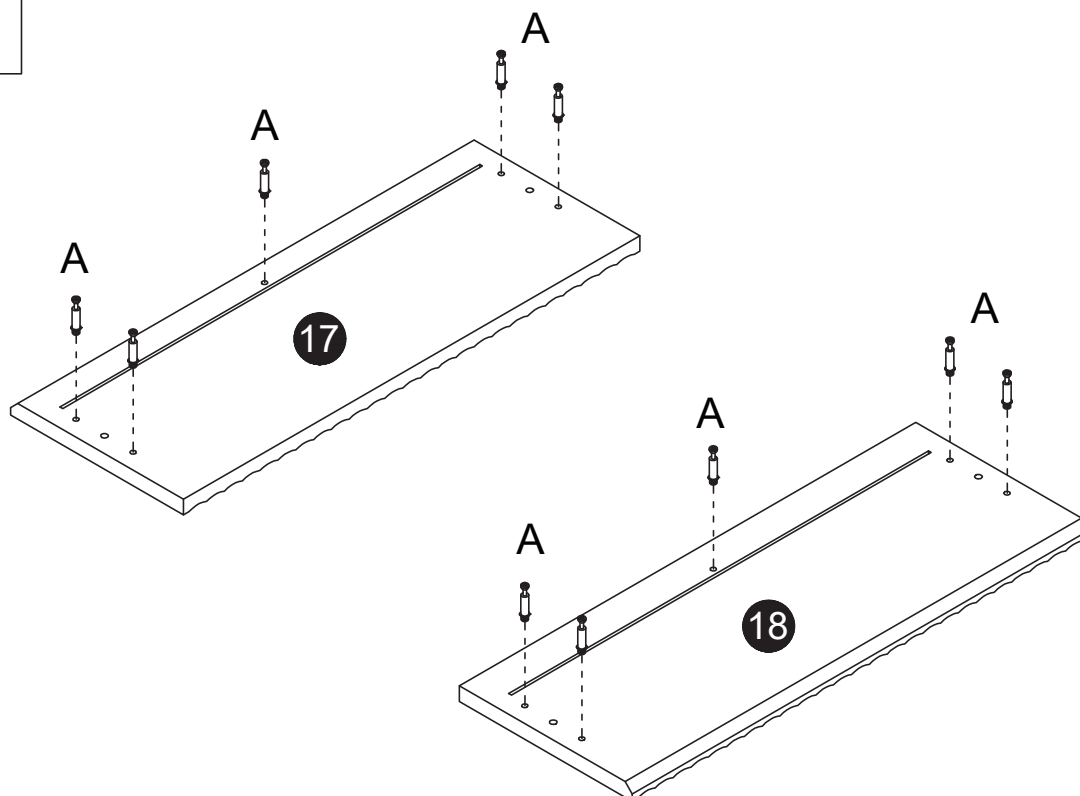



B x10

C x4



03

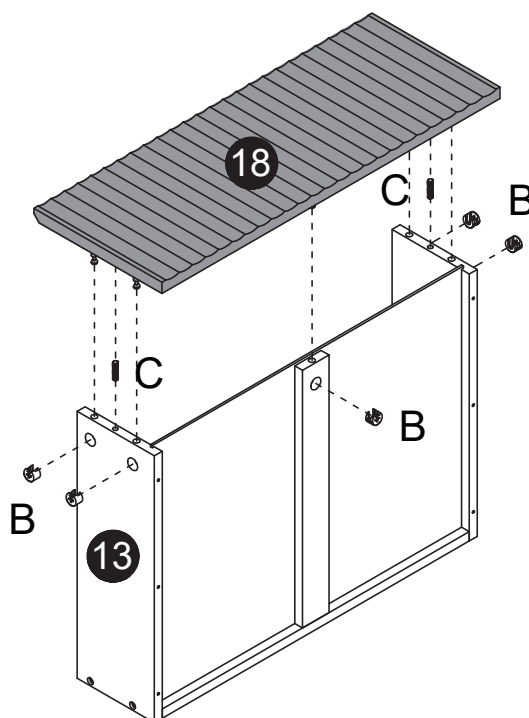
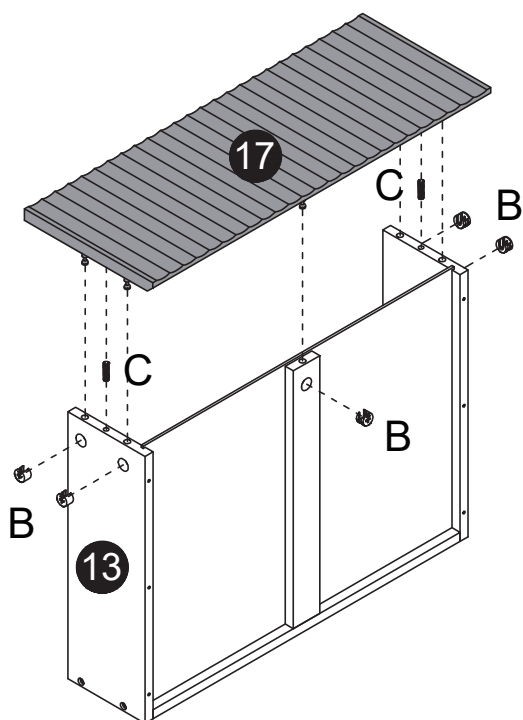


E x12

DL x2


DR x2

04

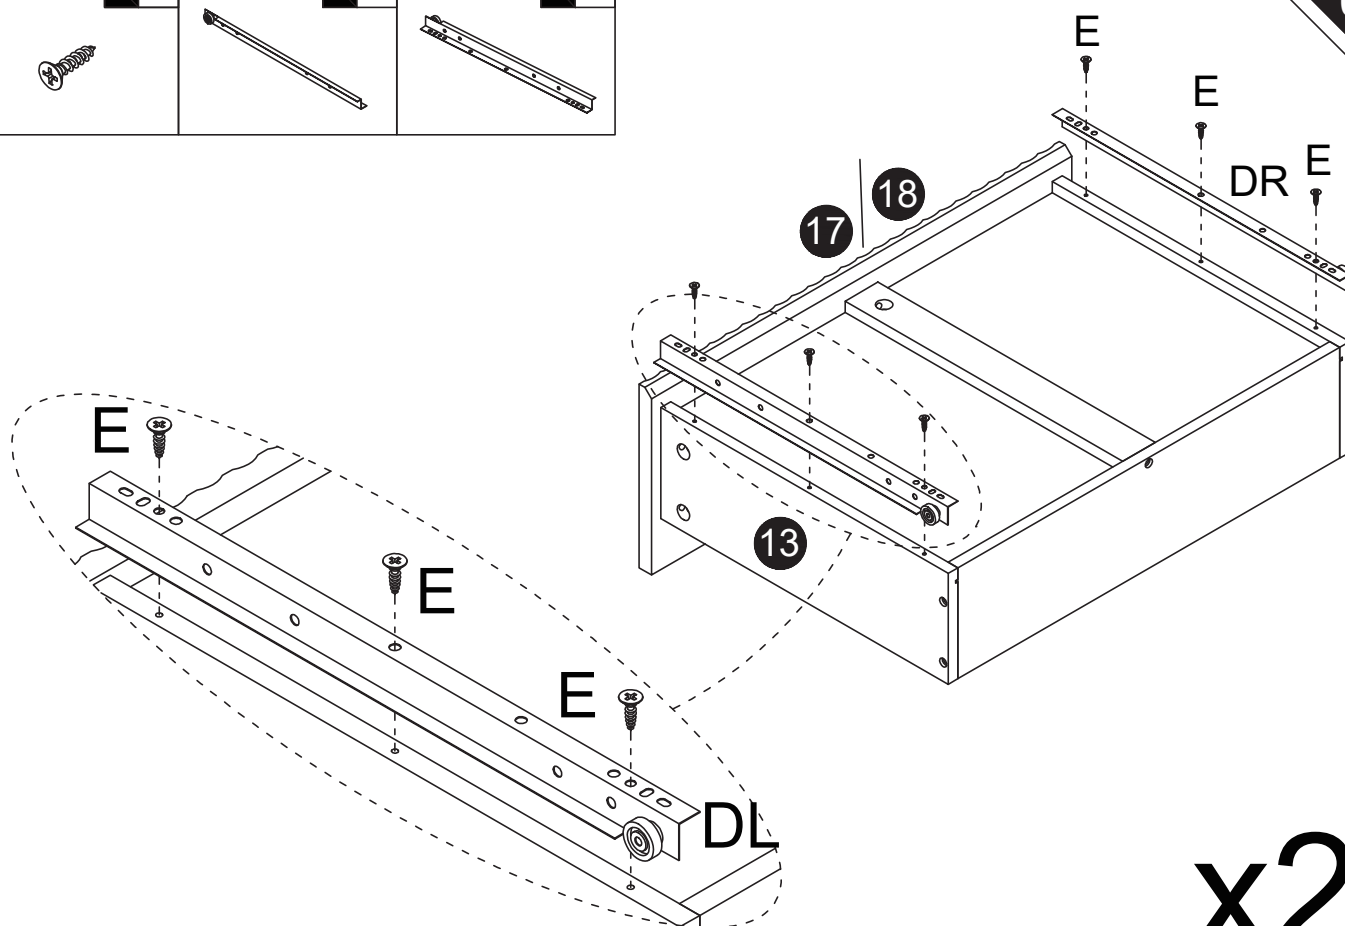

x2

A x6









E x12



CL x2



CR x2

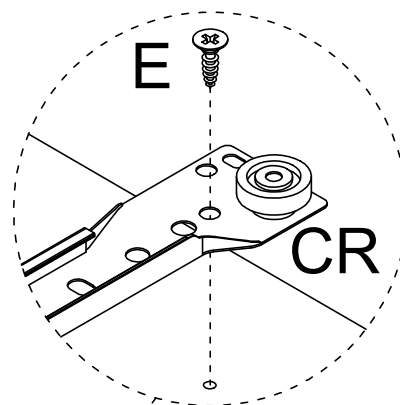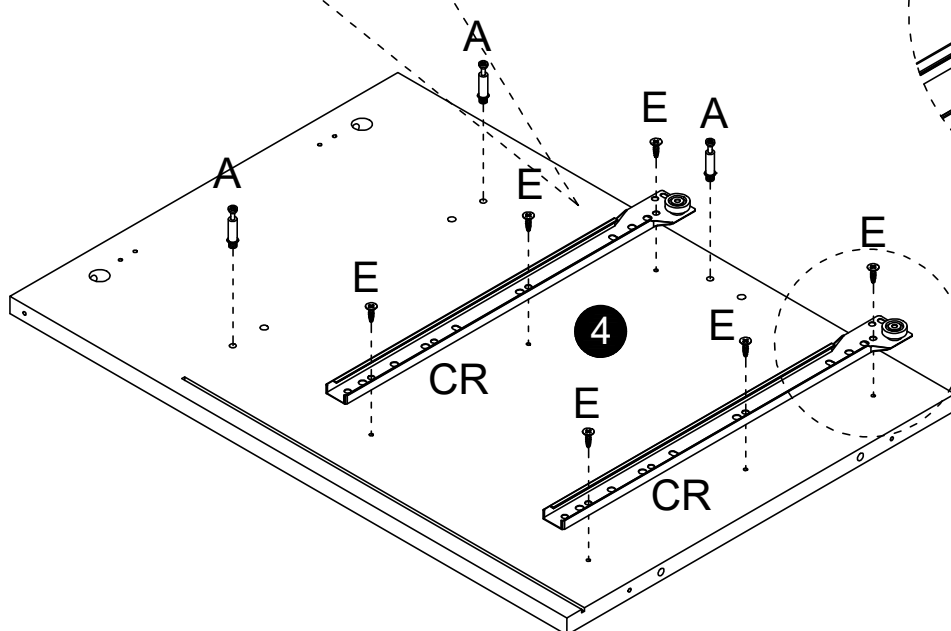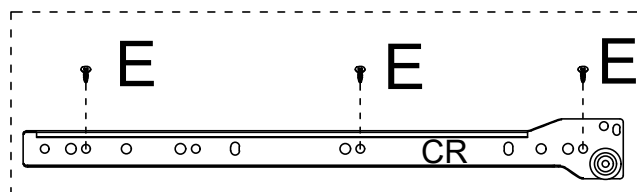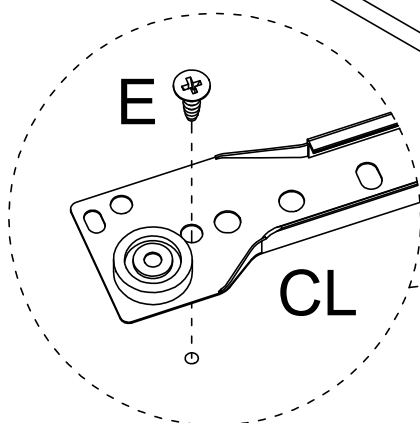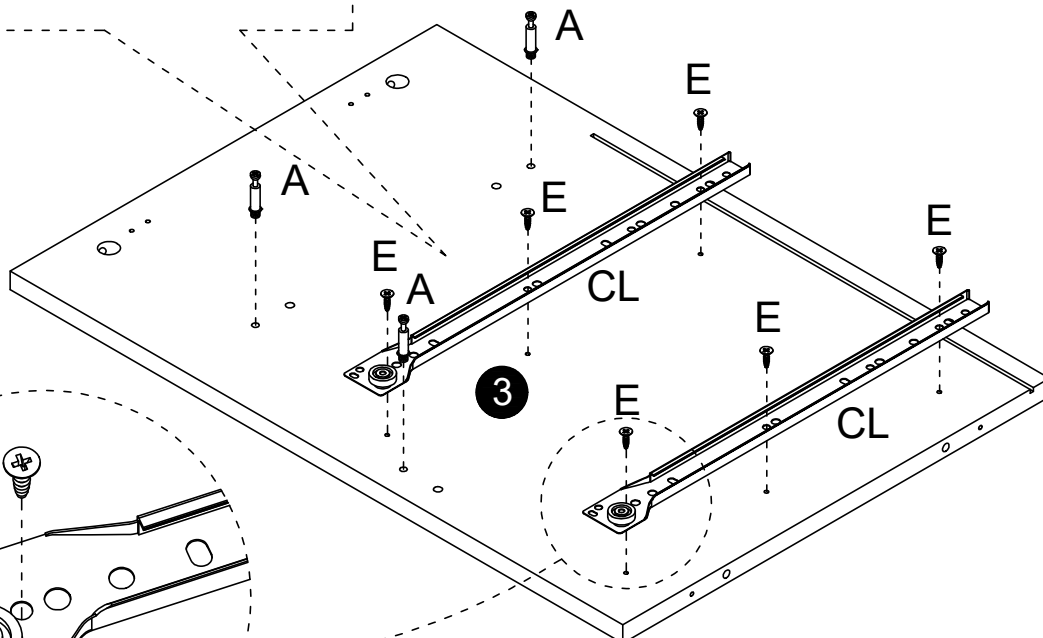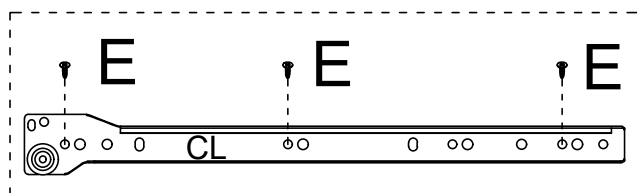


B x3



C x3



06

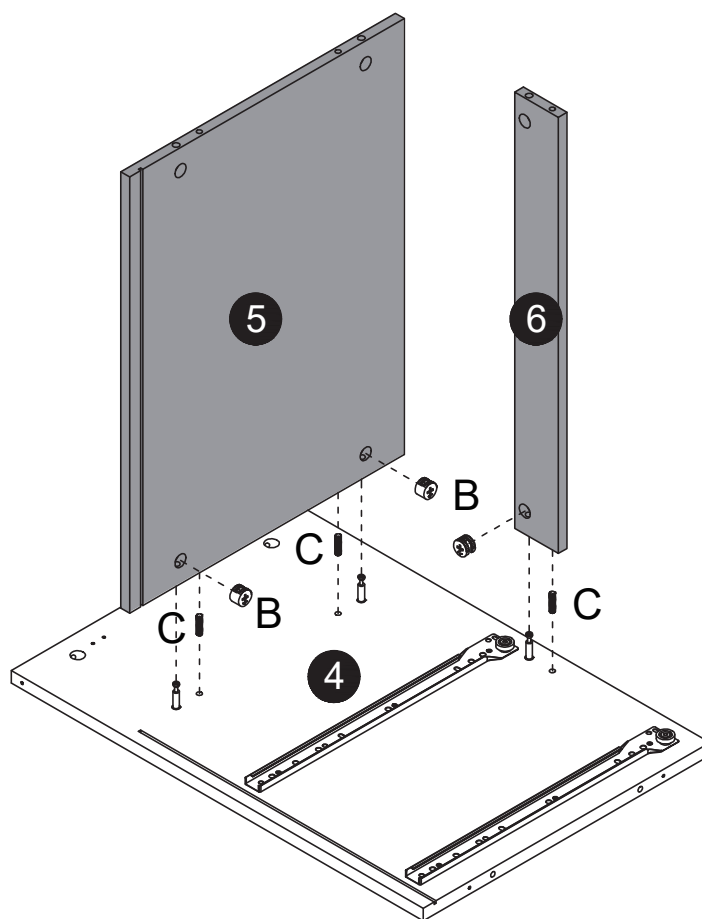


B x3




C x3




07

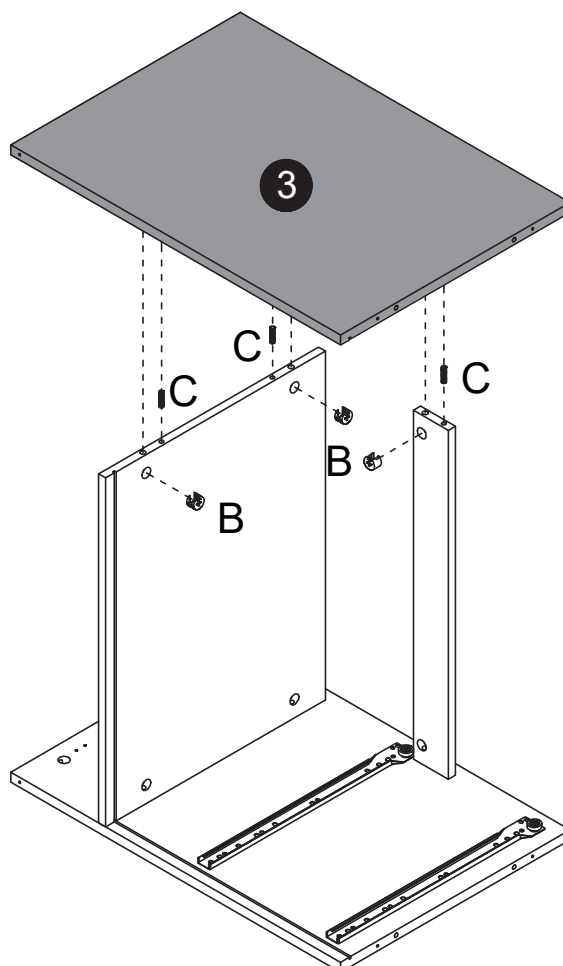


08

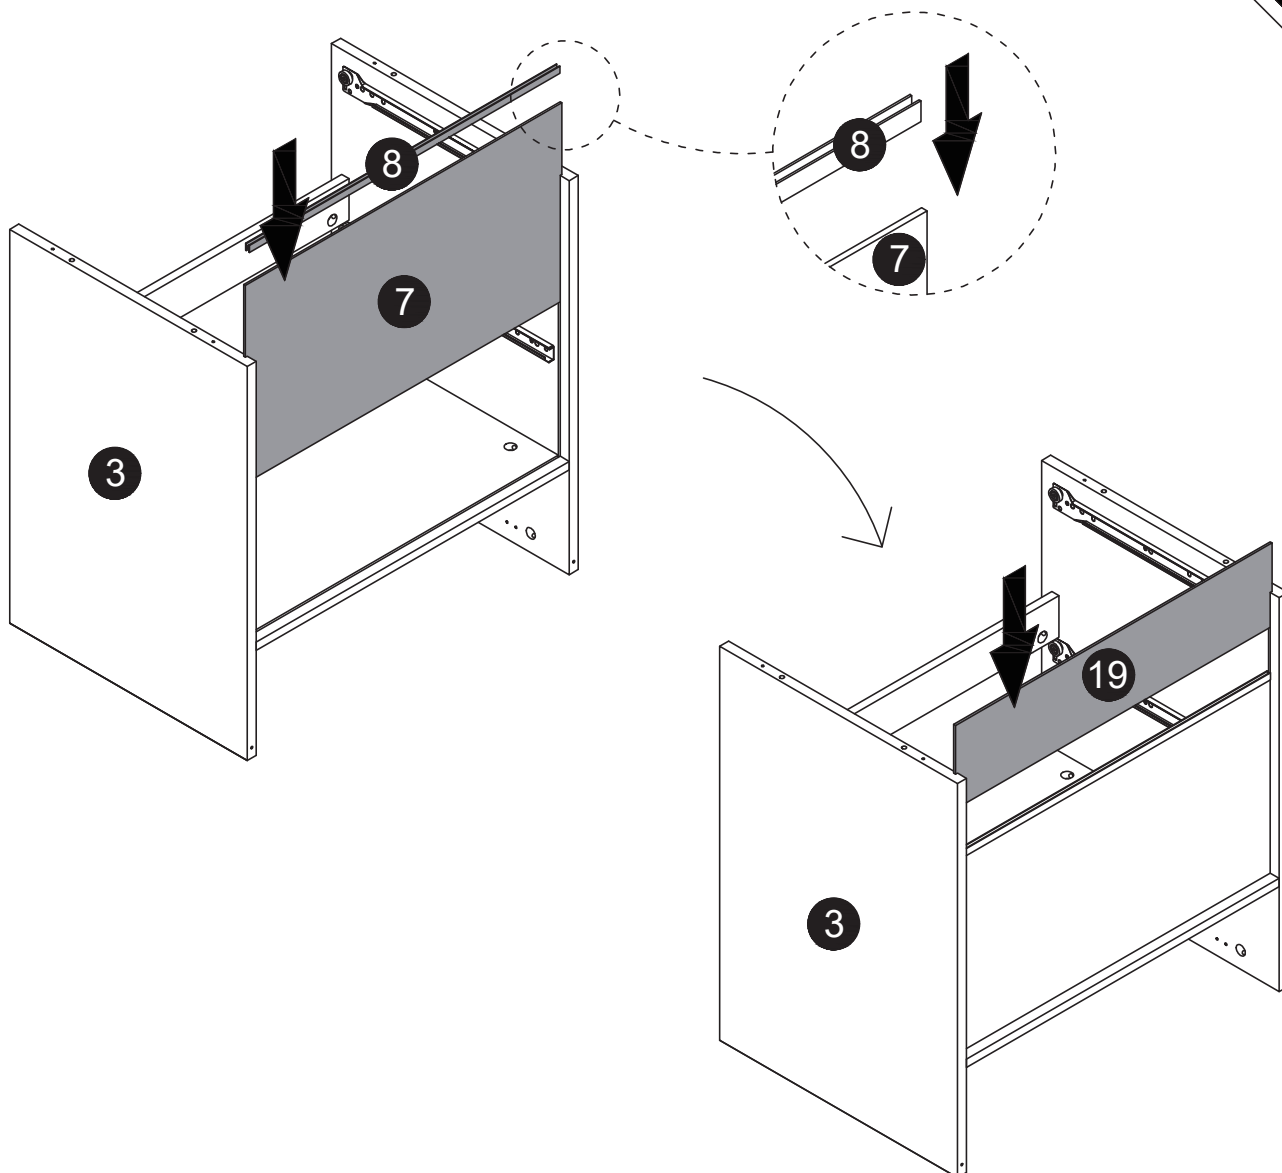

09



A x4

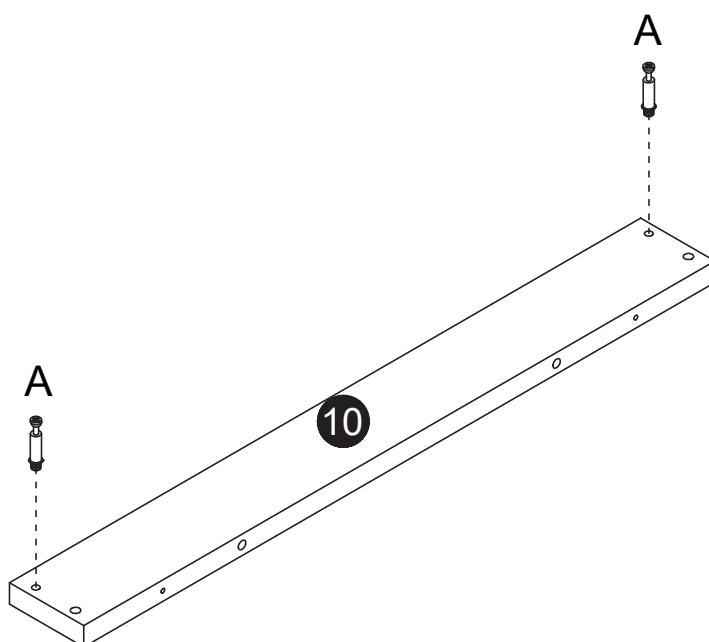

x2


B x4



C x4



10

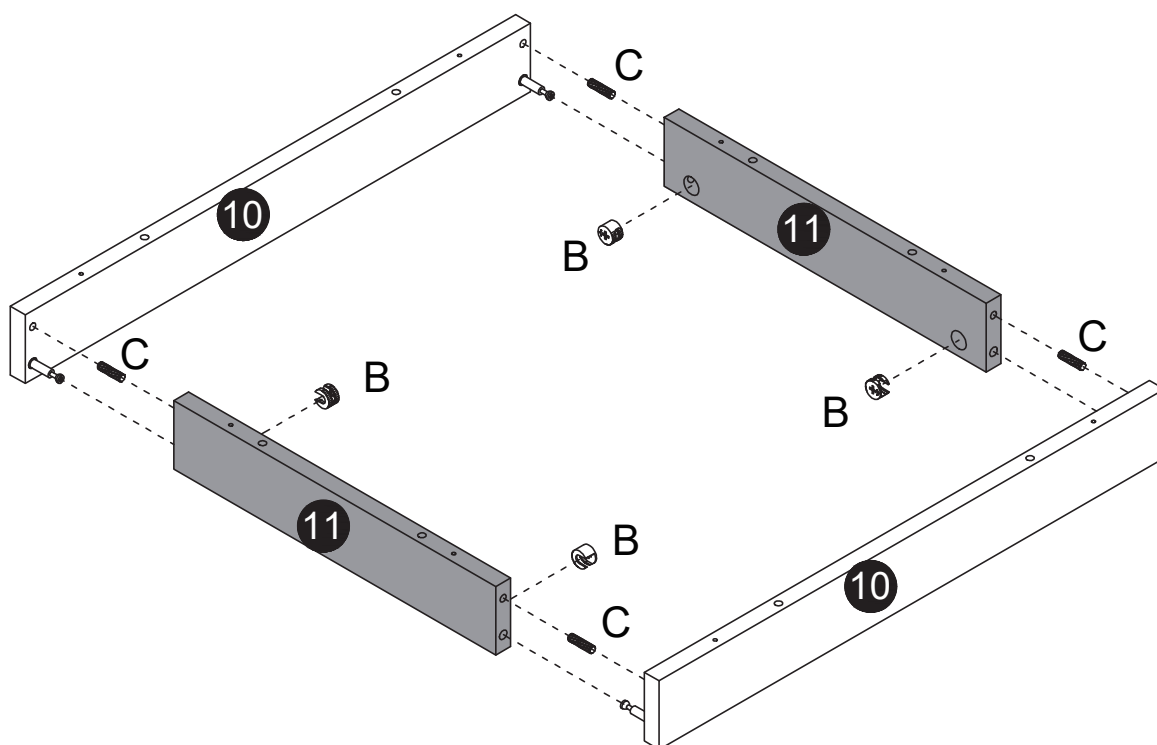


C x8



I x8





11

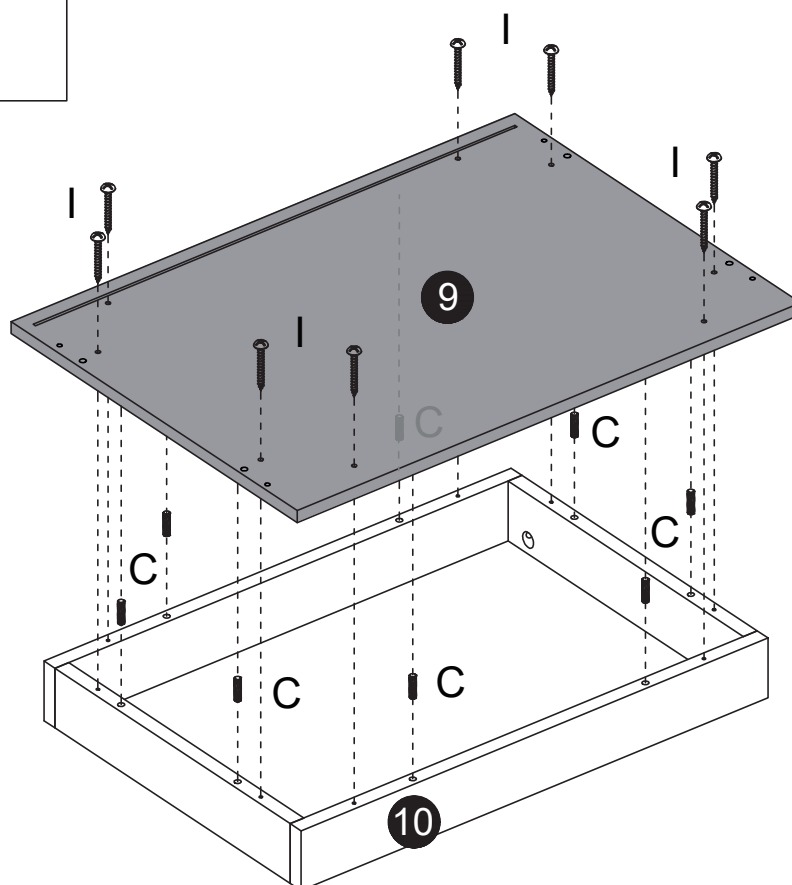



C x4




G x4

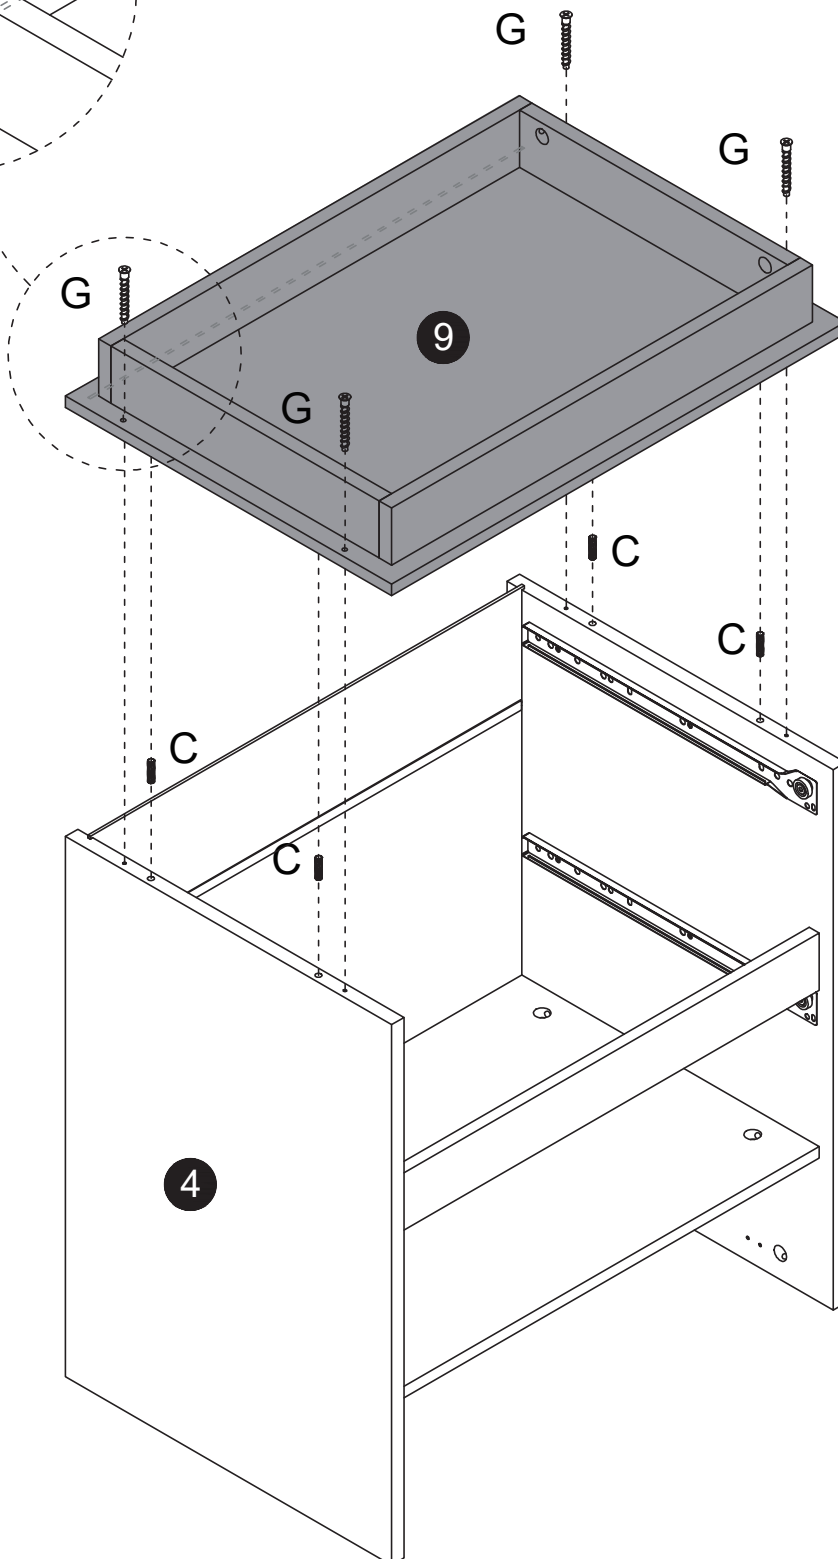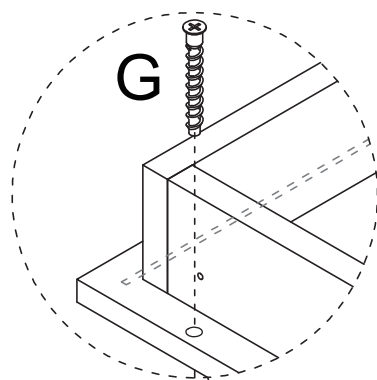

F x8

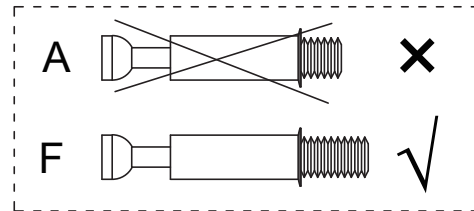

Caution : Need to use the correct part #F instead of part #A.


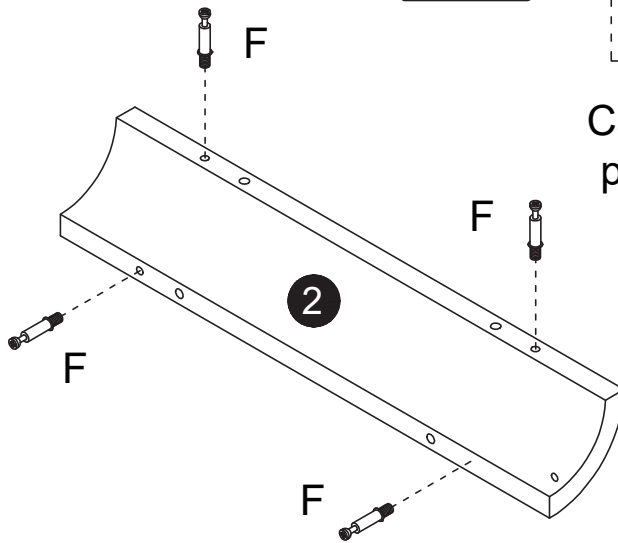


x2

B x4





C x4

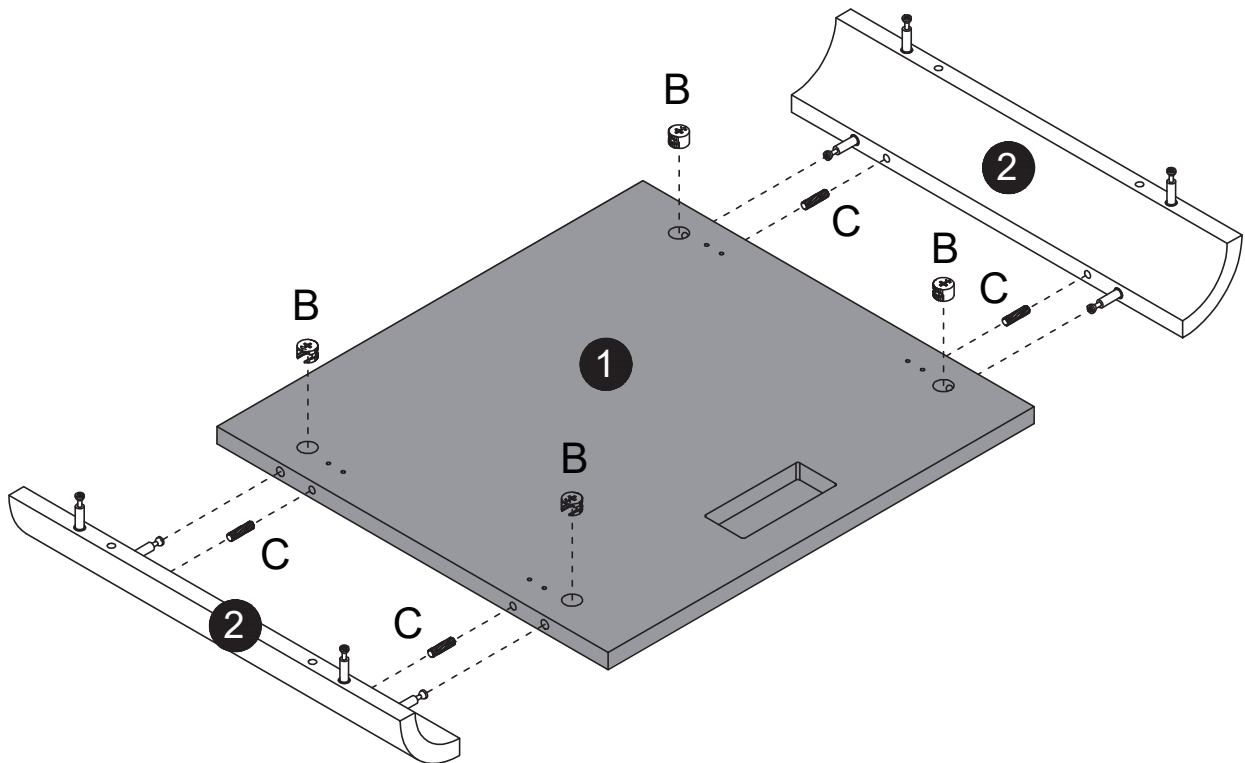


B x4













C x4

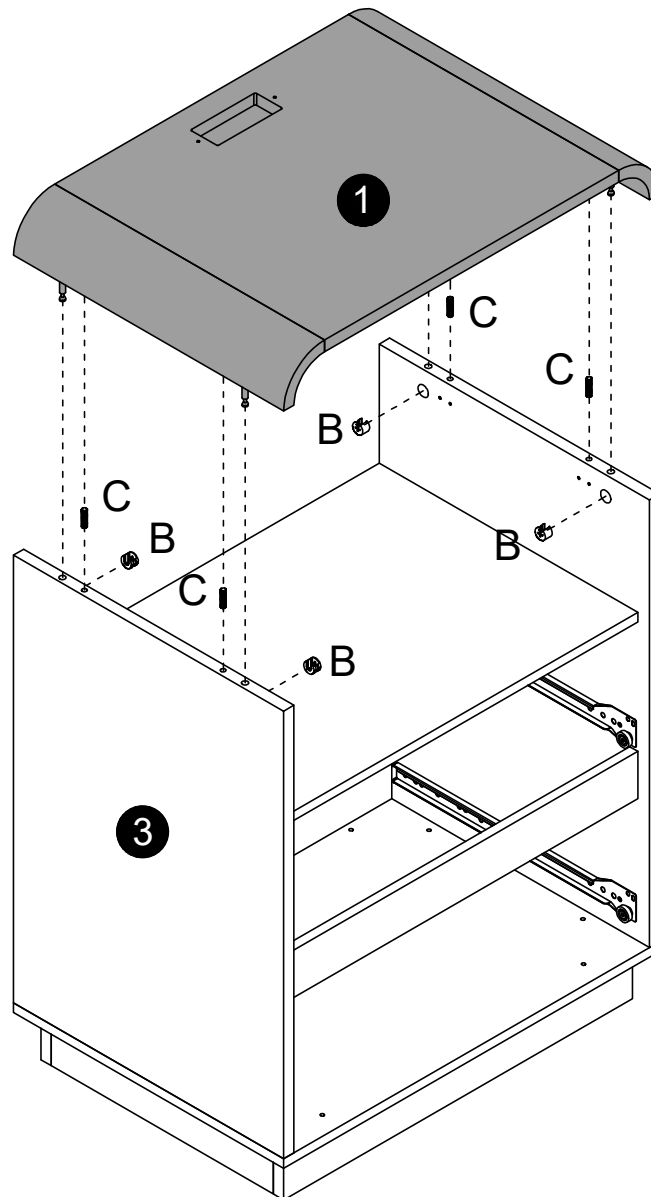

Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

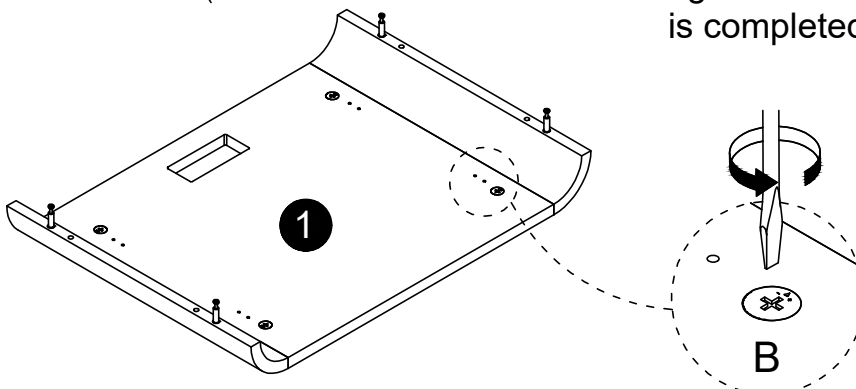


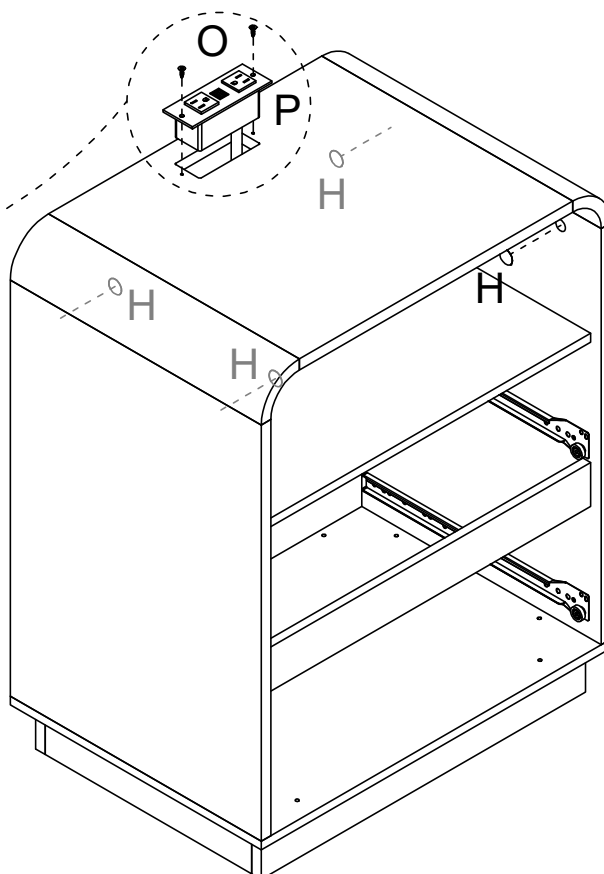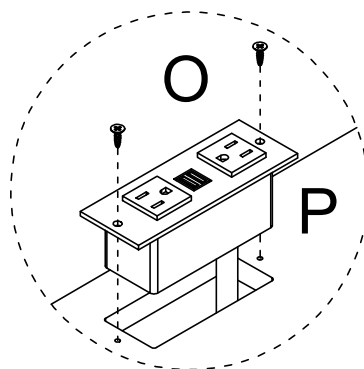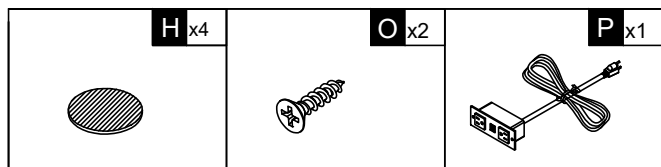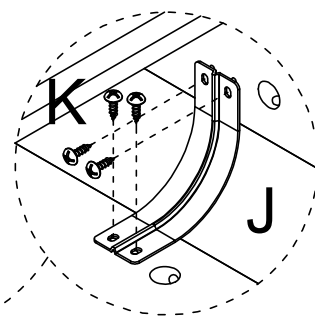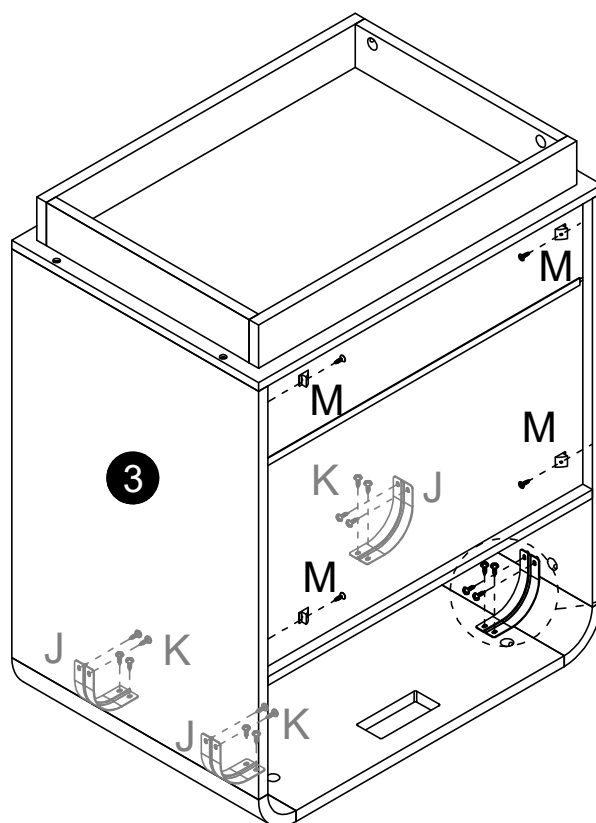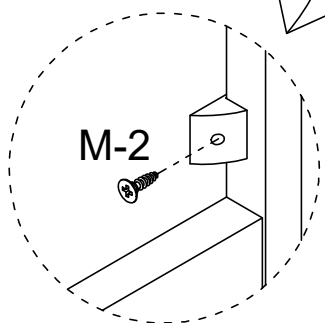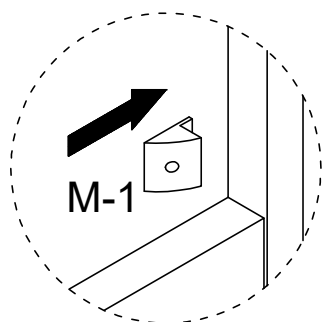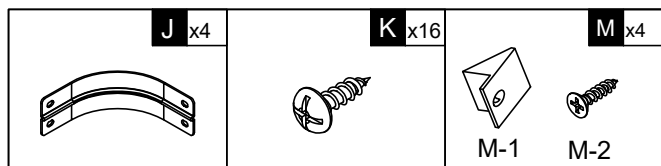

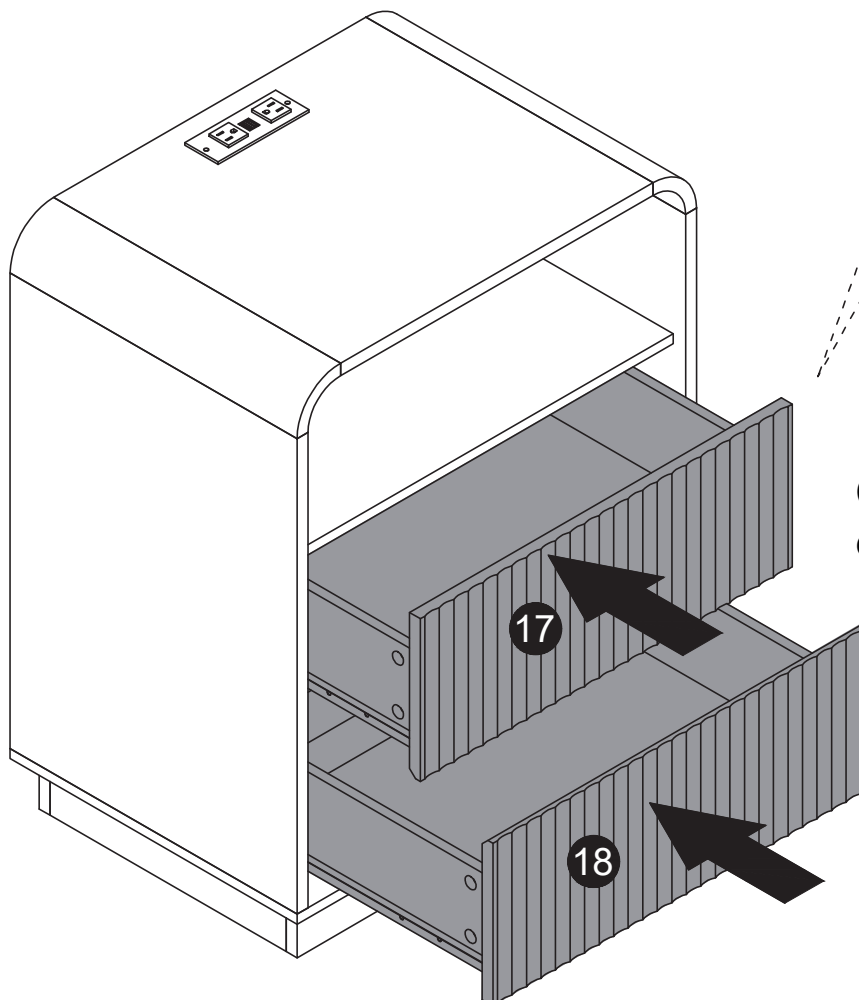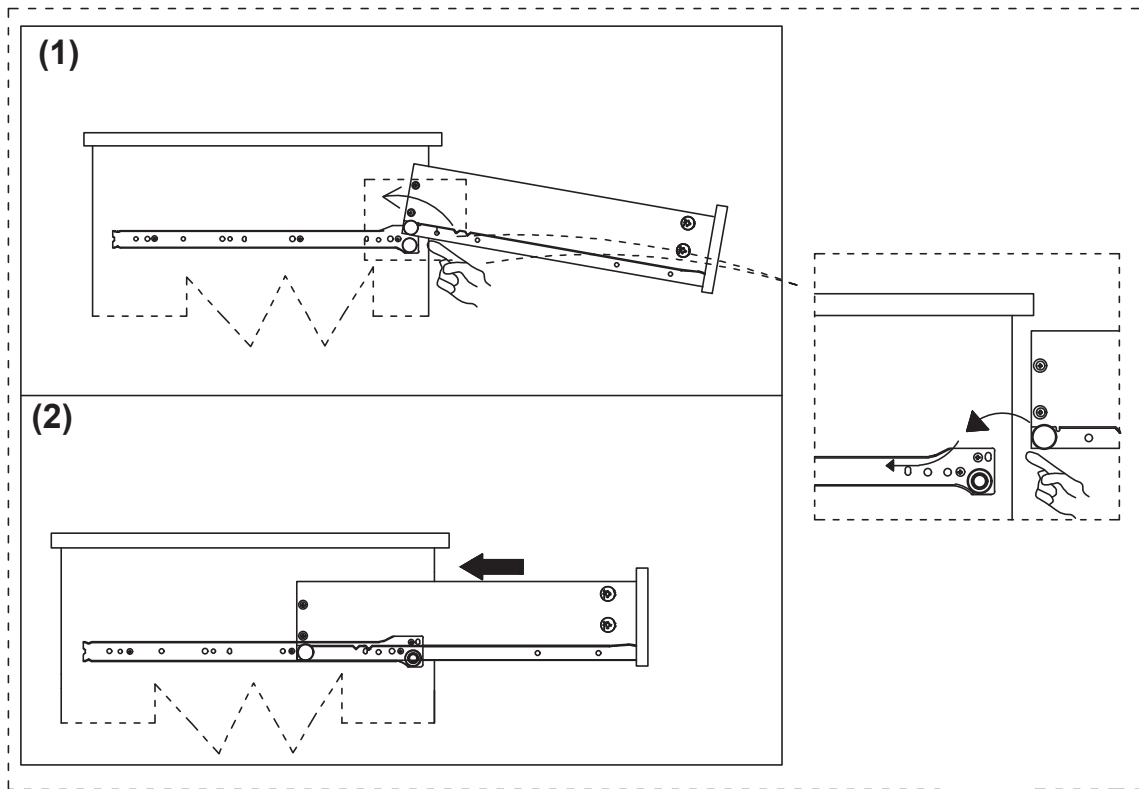


Caution : Please place
drawer 17 above.


D x2



L x2




N x2




N-1


N-2

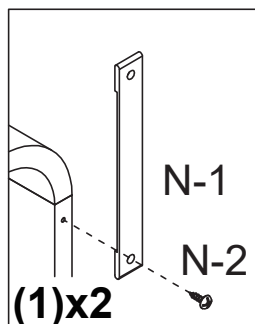


First fix the anti-rewind screw in the reserved hole of the product.

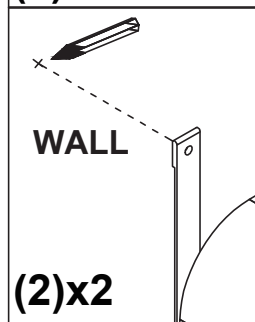


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

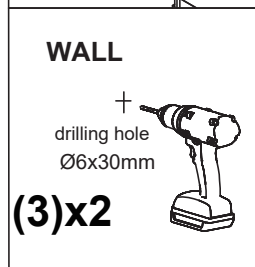

Then use a tape drill to make holes in the wall that are suitable for the product screws.

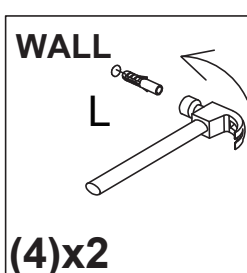

Then, put the expansion bolt into the hole

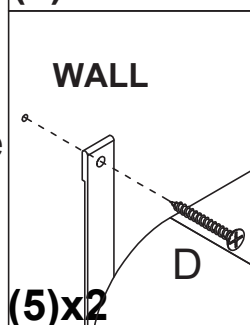

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

