



# Easy Installation

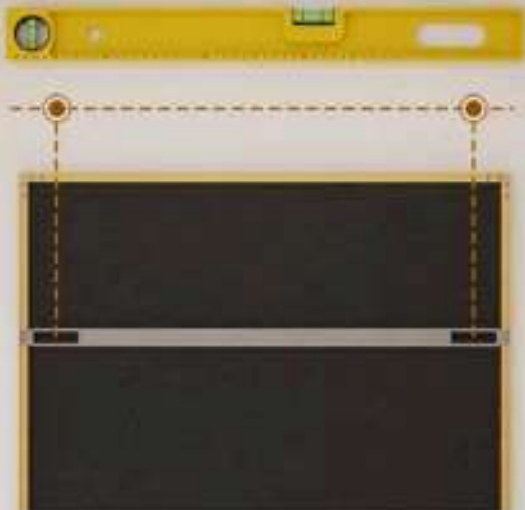

1. Measure the hole distance and mark the wall with level

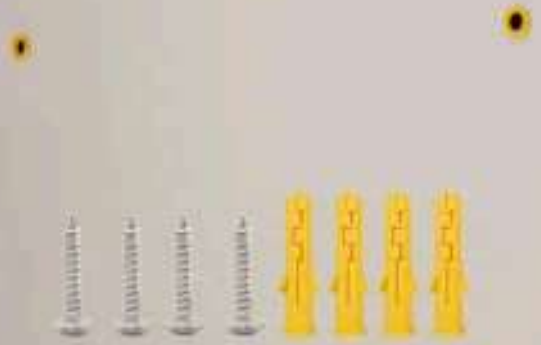


Includes: Screw × 4, Wall Anchor × 4

2. Drill at marks, tap anchors flush (Refer to instruction manual)



3. Install screws, leave 0.2-0.4 in gap

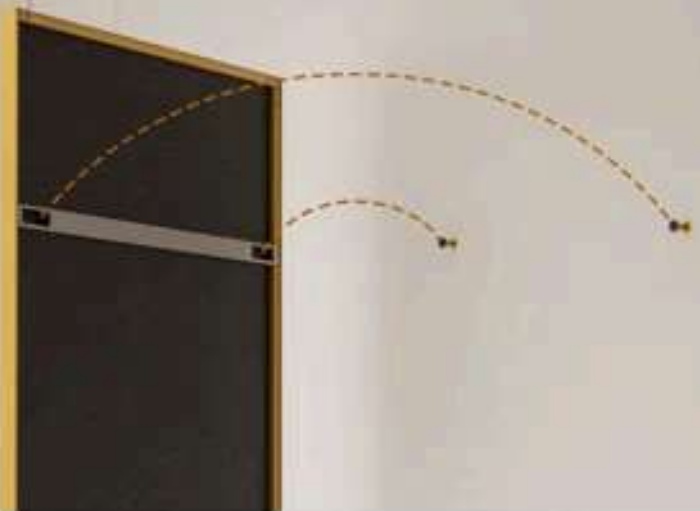

4. Align one mounting hole to the screw, then align the other side