

# **ASSEMBLY INSTRUCTION**

### ASSEMBLY TIPS:











1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### Warning!





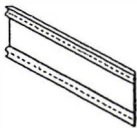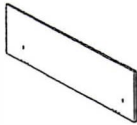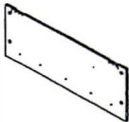



1. Don't attempt to repair or modify parts that are broken or defective.  
Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

### PARTS IDENTIFICATION


(A) FRONT PANEL		1 PC	(F) TOP PANEL		1 PC
(B) BACK PANEL		1 PC	(G) LEG		4 PCS
(C) LEFT SIDE		1 PC	(H) LEFT ADHESIVE FLANNELETTE		1 PC
(D) RIGHT SIDE		1 PC	(I) RIGHT ADHESIVE FLANNELETTE		1 PC
(E) BOTTOM PANEL		1 PC	(J) LONG ADHESIVE FLANNELETTE		1 PC

Z.


## HARDWARE PACKAGE

NO	DESCRIPTION	FIGURE	Q'TY
1	CAM BOLT ø7mmx35mm		14 PCS
2	CAM LOCK ø25mmx11mm		14 PCS
3	CAM LOCK COVER ø30mmx10mm		14 PCS
4	WOOD DOWEL ø8mmx30mm		22 PCS
5	HINGE 76mmx1.6mm		2 PCS
6	SCREW ø6mmx1/2"		24 PCS
7	LID SUPPORT 160mmx30mmx16mm		2 PCS
8	SCREW ø7mmx1-3/8"		8 PCS


## STEP 1

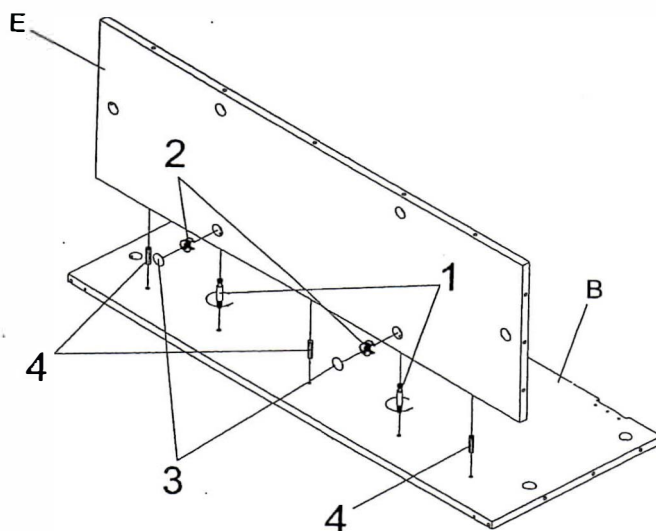


## STEP 2:

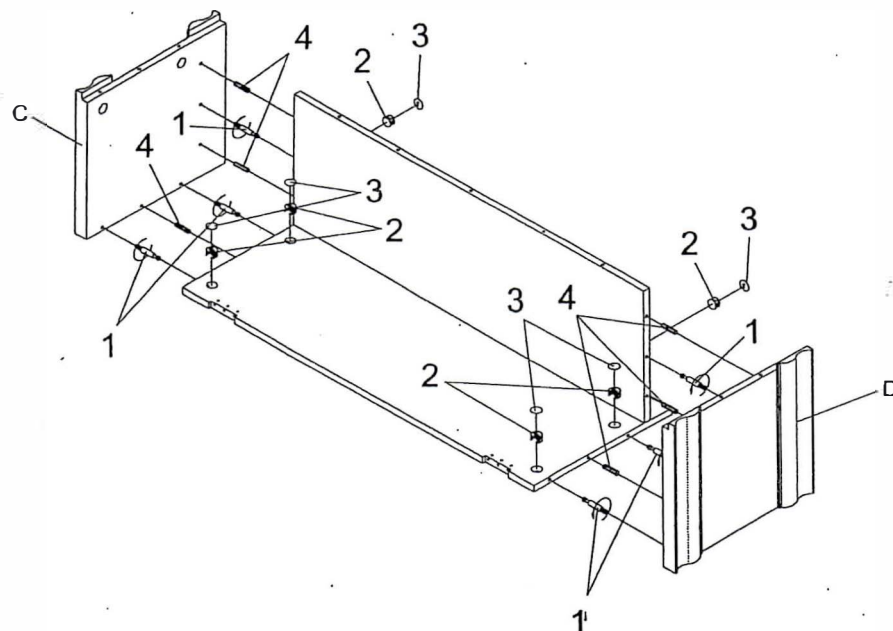


## STEP 3:

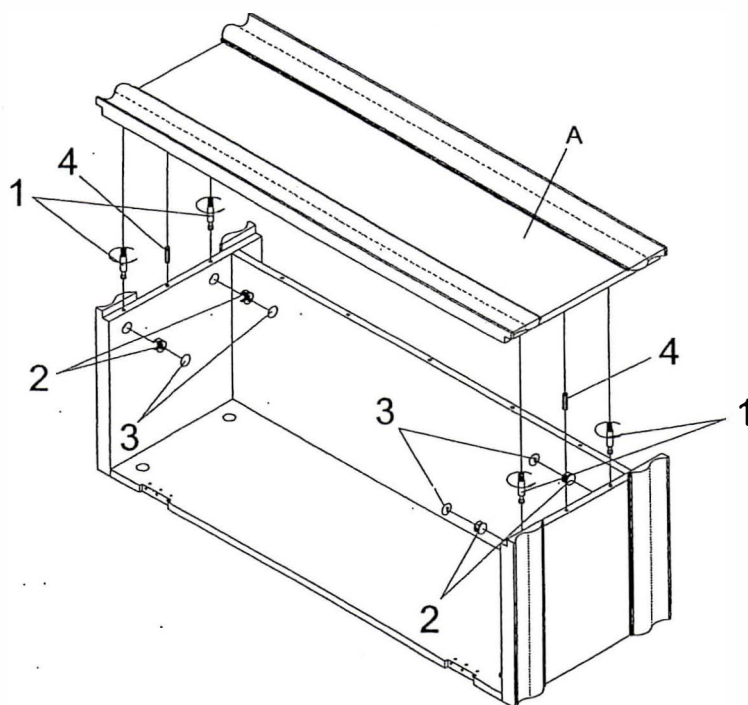


STEP 4

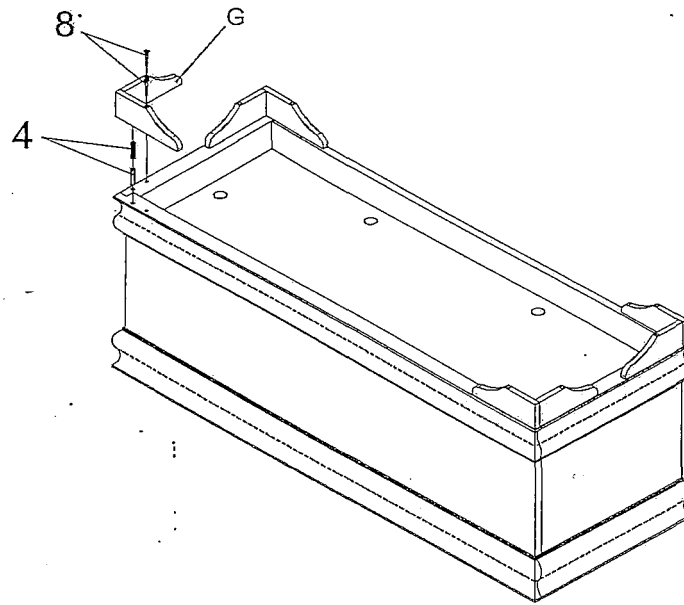


STEP 5

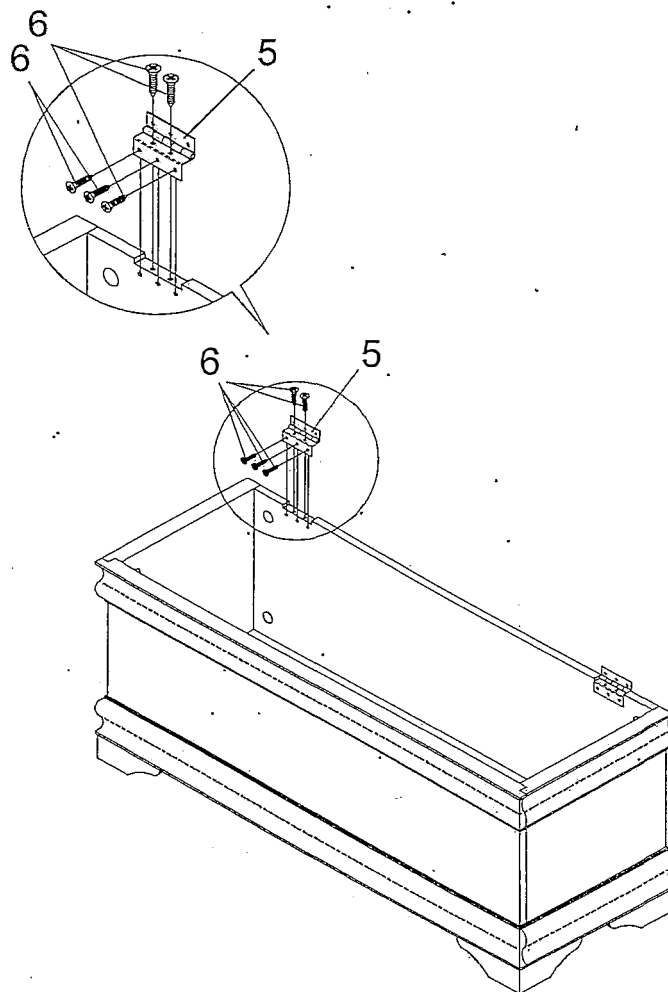


STEP 6

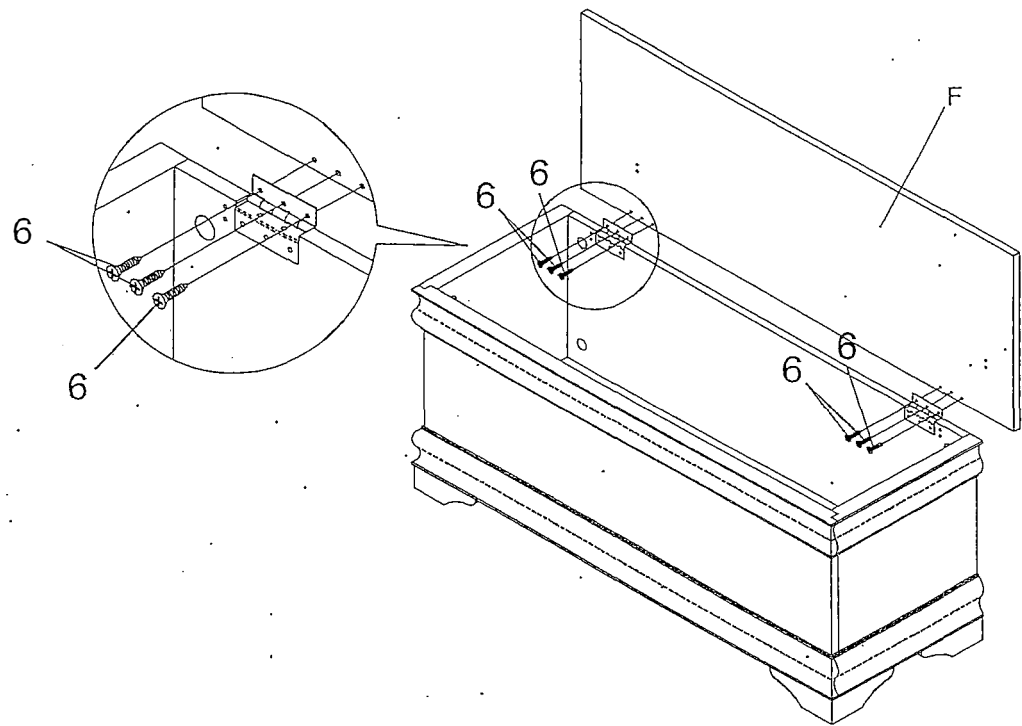

STEP 7

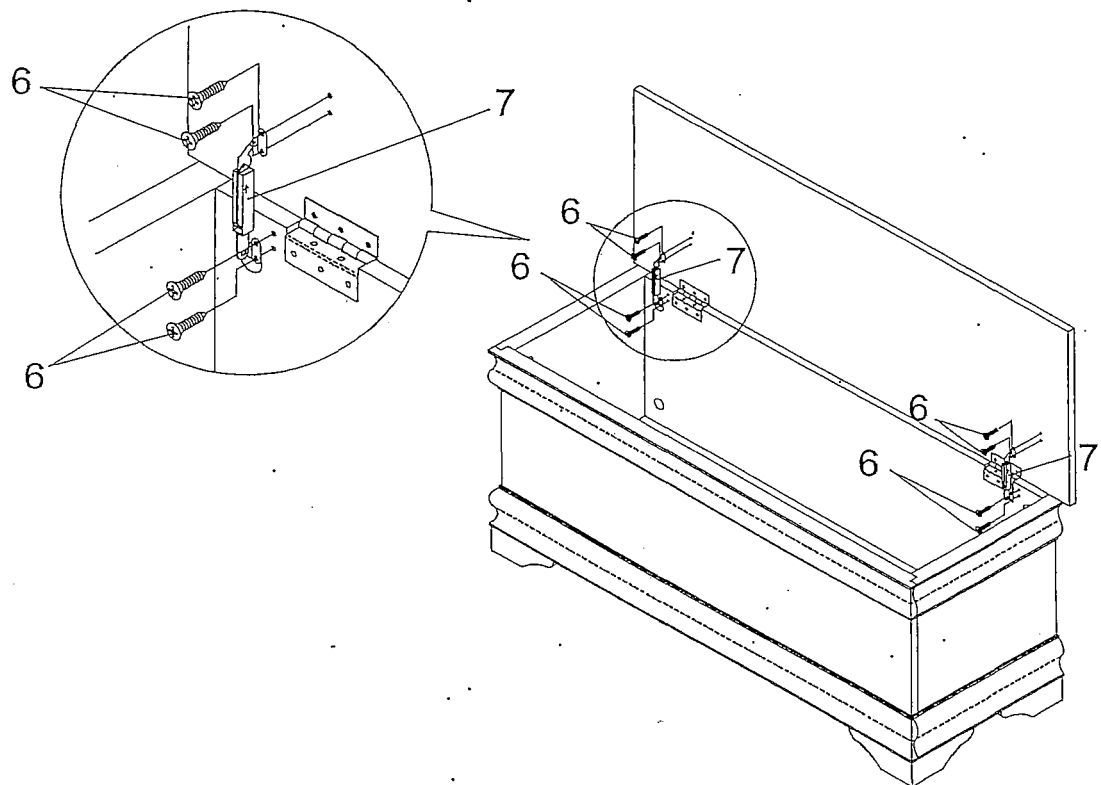

STEP 8

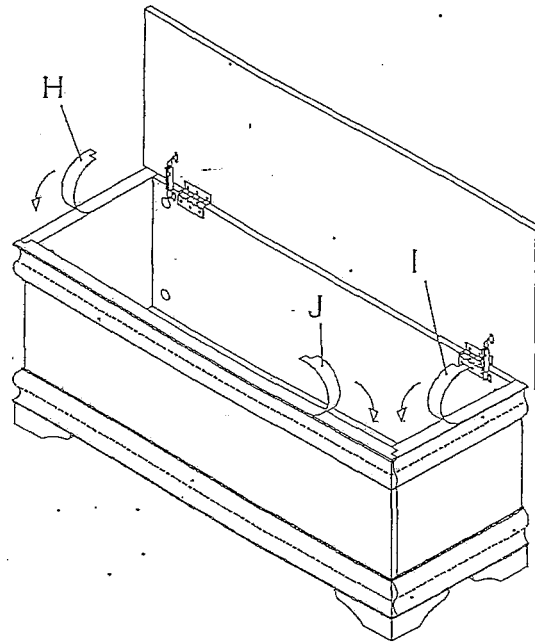

FINISH

