

# ASSEMBLY INSTRUCTION

## DRESSER & MIRROR

### (Box 1)

#### BOX OF MIRROR

NO	ITEM	Qty
A	MIRROR	1 PC
B	MIRROR SUPPORT RAIL	2 PCS

### (Box. 2)

#### BOX OF DRESSER

NO	ITEM	Qty
C	DRESSER	1 PC


### (Box. 1)

#### HARDWARE LIST

NO	ITEM	Qty
1	JCBC BOLT M6 x 35MM BLK	4 PCS
2	JCBC BOLT M6 x 40MM BLK	4 PCS
3	SPRING WASHER 1/4" RBW	8 PCS
4	FLAT WASHER 1/4" ID x 19mm OD BLK	8 PCS
5	ALLEN KEY m4 x 65mm BLK	1 PC


### STEP 1

Draw out mirror support (B) from the carton box.

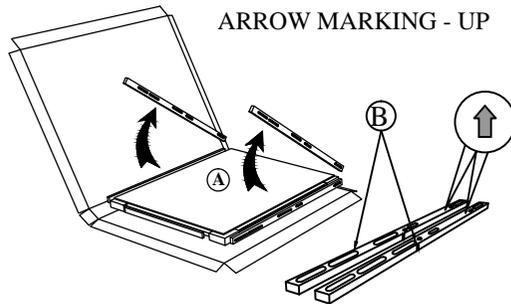


**STEP 2 :** Align & fasten mirror support (B) to the back of mirror (A) using short JCBC bolt(1),spring washer (3) & flat washer (4). **DO NOT FULLY TIGHTEN AT THIS STEP.**

Note : Make sure arrow marking of the mirror support (B) is aligned up.

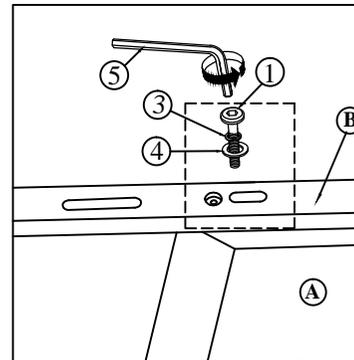


\*\*BACK VIEW

ARROW MARKING - UP

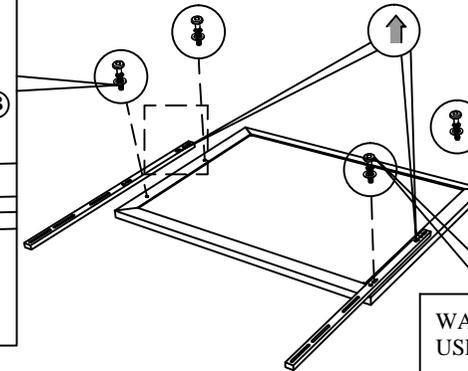


**WARNING!**  
USE SHORT BOLT M6 x 35MM

**STEP 3 :** Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using long JCBC bolt (2) , spring washer (3) & flat washer (4) **THEN FULLY TIGHTEN ALL THE BOLTS AT STEP 2 & 3 WITH ALLEN KEY ( 5 ).**

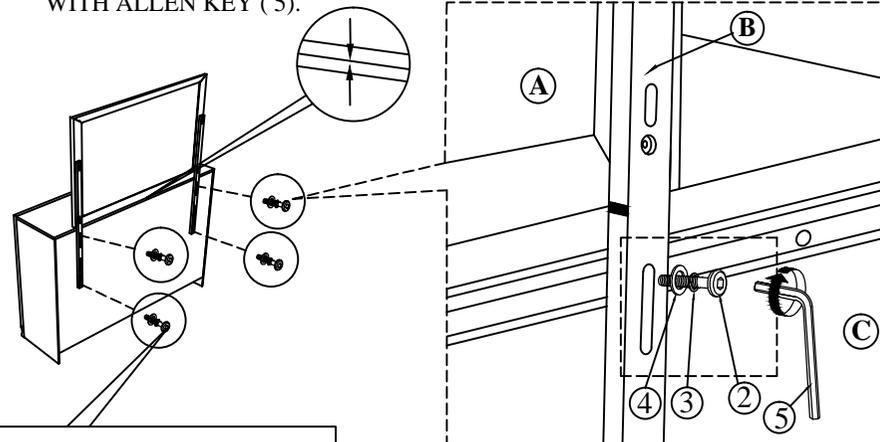

**WARNING!**  
USE LONG BOLT M6 x 40MM

Note : Make sure arrow marking of the mirror support is aligned with the arrow marking of the center of the dresser as show in drawing.

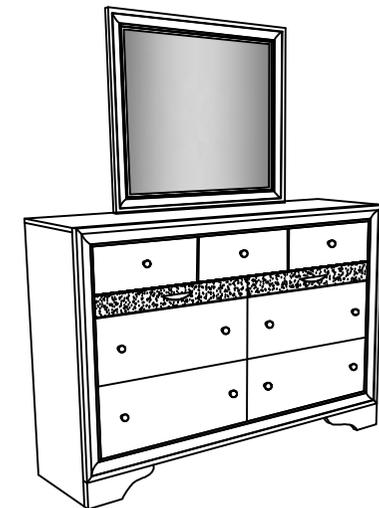

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.