

Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---


Thank you for purchasing our product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:

Letter	Draw	Number			
1		30pcs	9	 4x16mm	2pcs
2		22pcs	10		1pc
3	 15x9.5mm	22pcs	11		2pcs
4	 2.5x12mm	2pcs	12	 3x12mm	4pcs
5		1pc	13	 4x30mm	10pcs
6		2pcs	14	 4x10mm	2pcs
7	 3x10mm	9pcs	15		8pcs
8		2pcs	16		2pcs

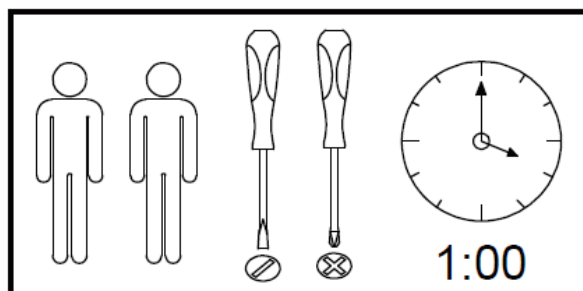


Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)

Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Panels:

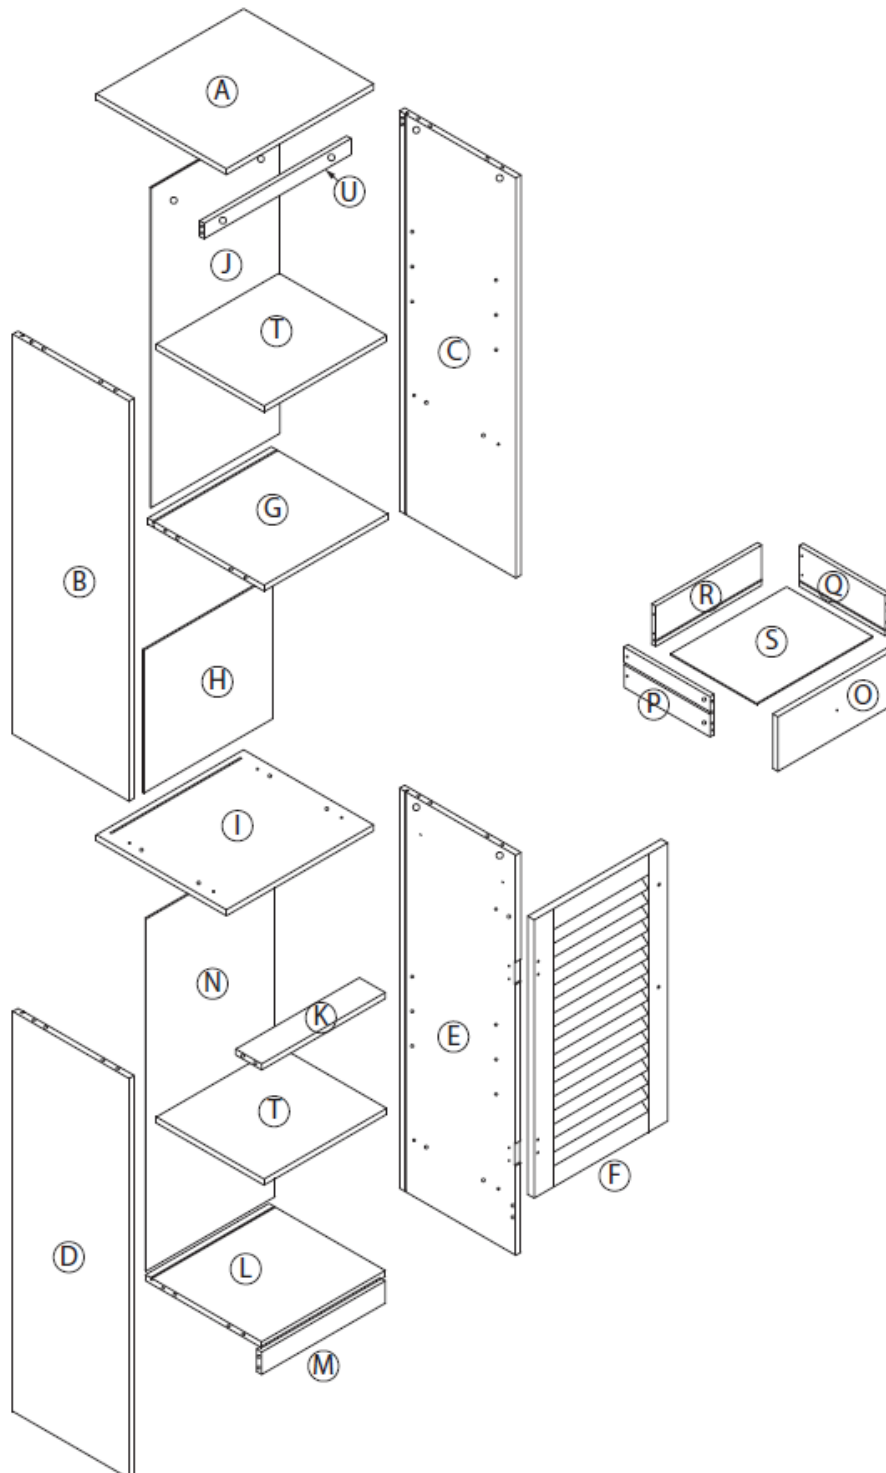


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 1

Make sure the pins are installed correctly as shown with the “check mark” below:

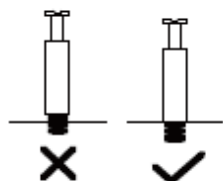

Below shows how the pins are used to assemble the panels together.

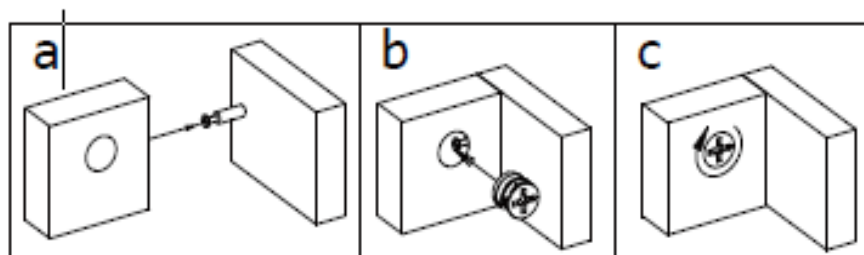


FIGURE A

Instruction Manual


Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Assemble the top of the cabinet (best to prepare on an open flat (soft) surface):

Insert pins (2) to panels (A, B, C, D, and E) as shown in **Figure A**.

Align slider (11) to panel and screw in (12) to panels (D and E). Align magnet (5) and screw in (4).

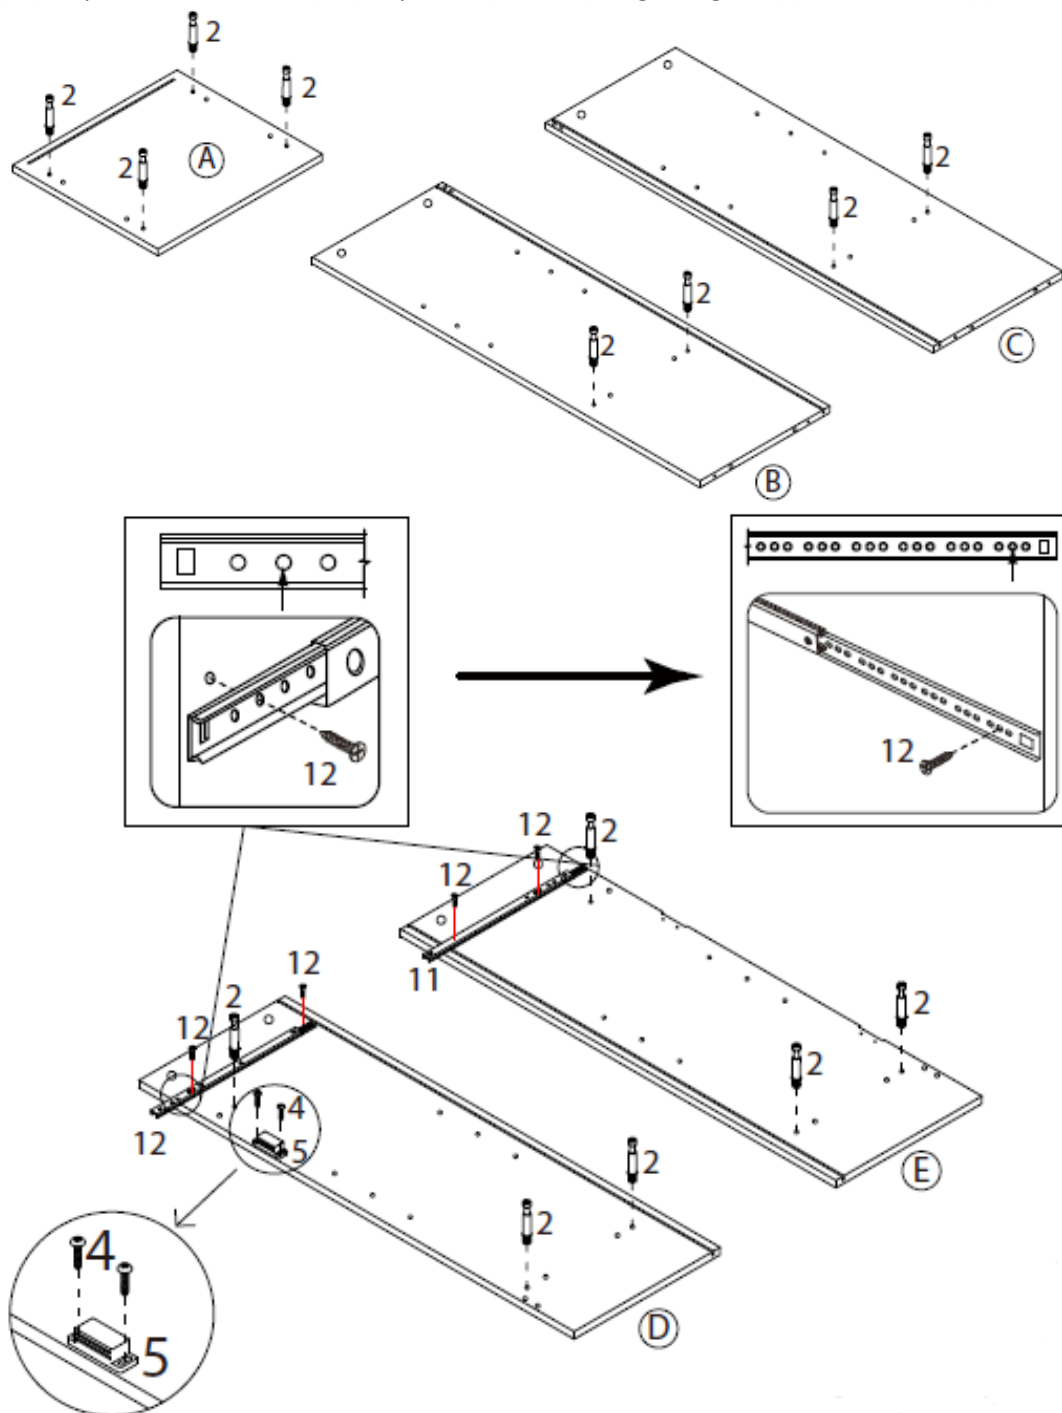

Instruction Manual


Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

	(2)x14pcs		(11)x2pcs	
	(4)x2pcs			(12)x4pcs
	(5)x1pc			

Step 2

Align (6) to shutter and screw in (7). Align (10) and screw in (7). Screw in (9) and screw in knob on the front side.

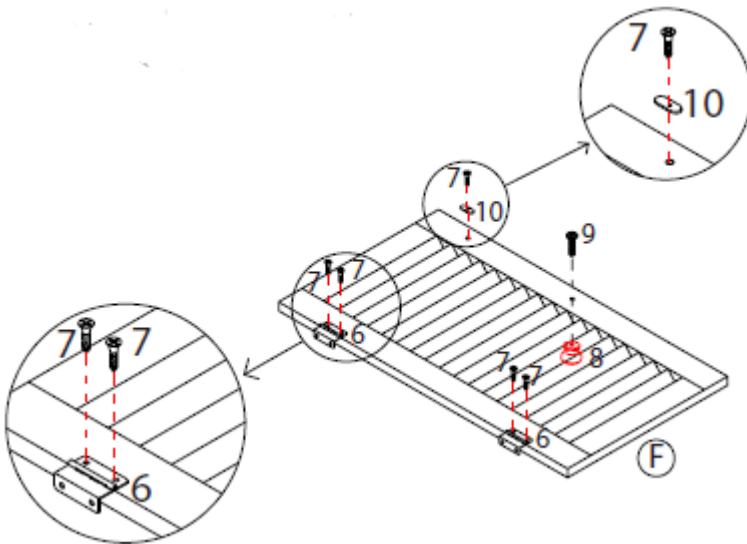

	(6)x2pcs		(9)x1pc	
	(7)x5pcs			(10)x1pc
	(8)x1pc			


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 3

Insert pins (1) to panels B, C, U, and G. Refer to **Figure A** for assembly guide for inserting locknuts on panel (G).

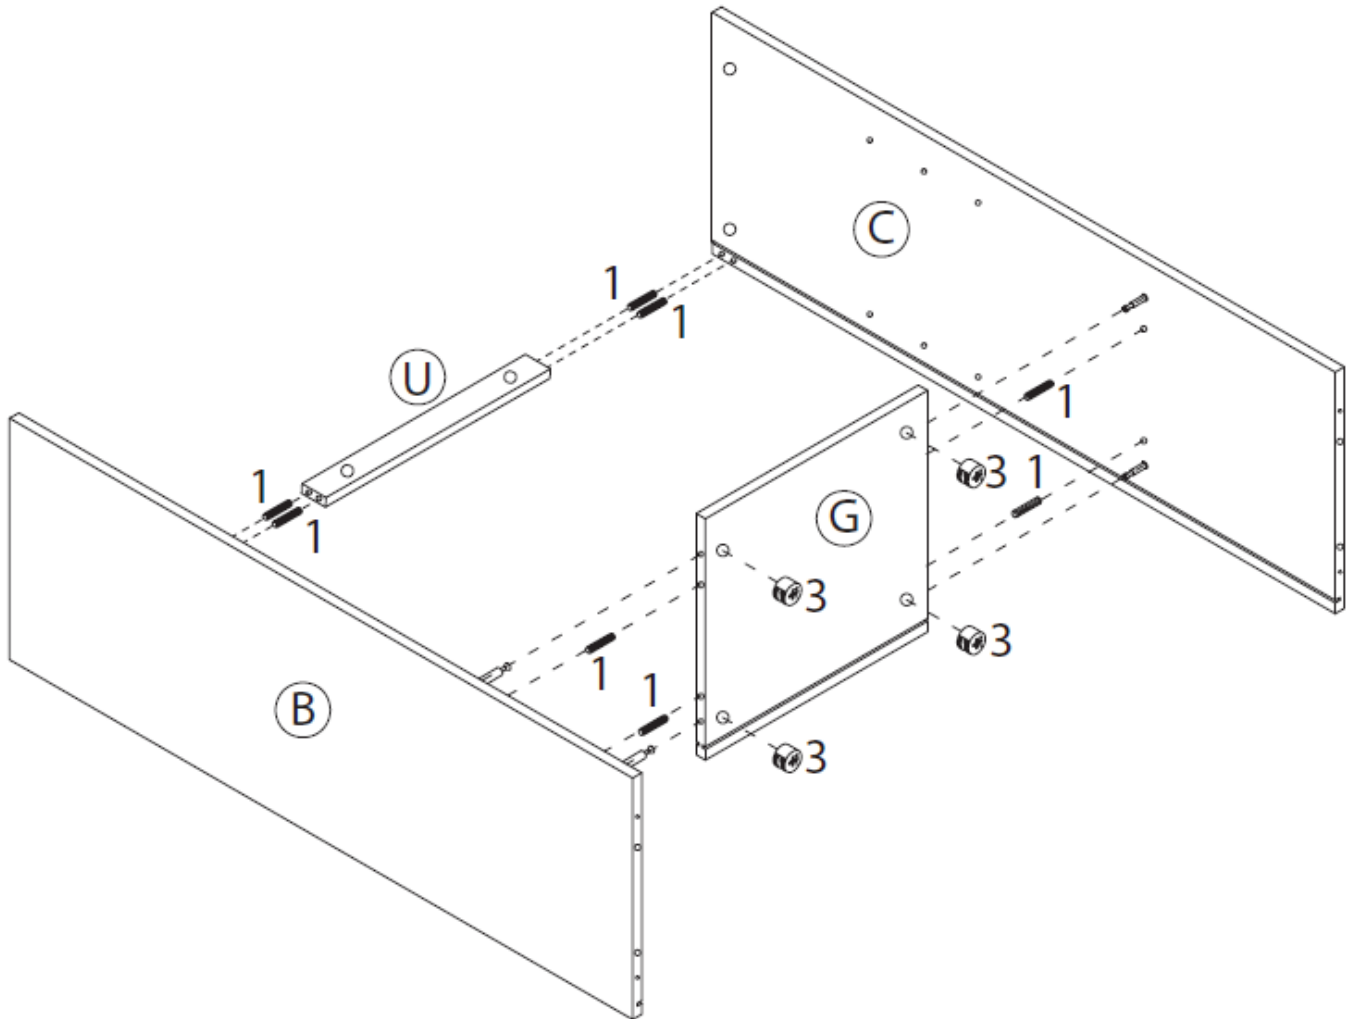

	(1)x8pcs
	(3)x4pcs

Instruction Manual


Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---


Step 4

Slide in back panel (H) as shown below.

Insert pins (1) to panels (B, C, and I). Screw in (13) to panel (I).

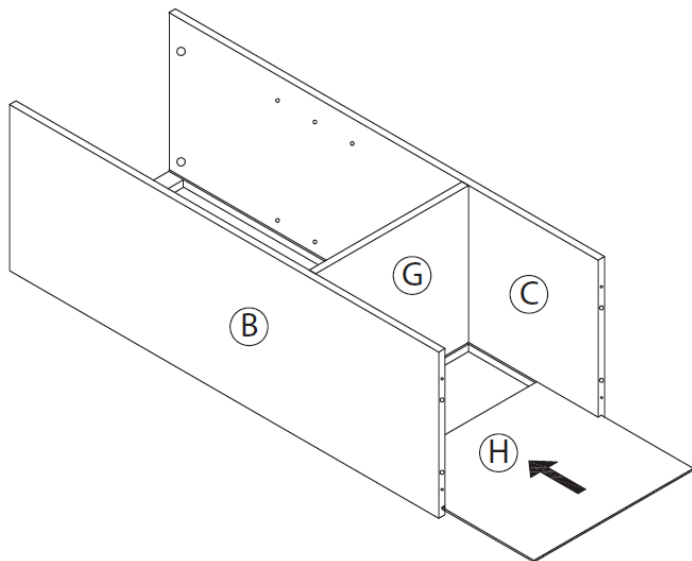

	(1)x4pcs
	(13)x4pcs

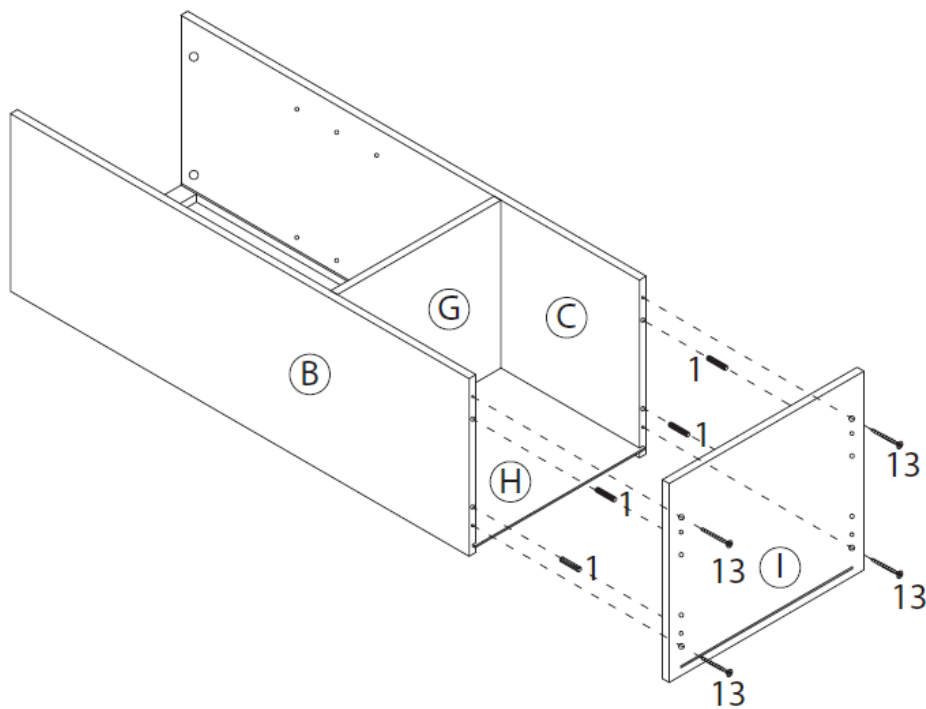


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---


Step 5

Slide in back panel (J) as shown below.

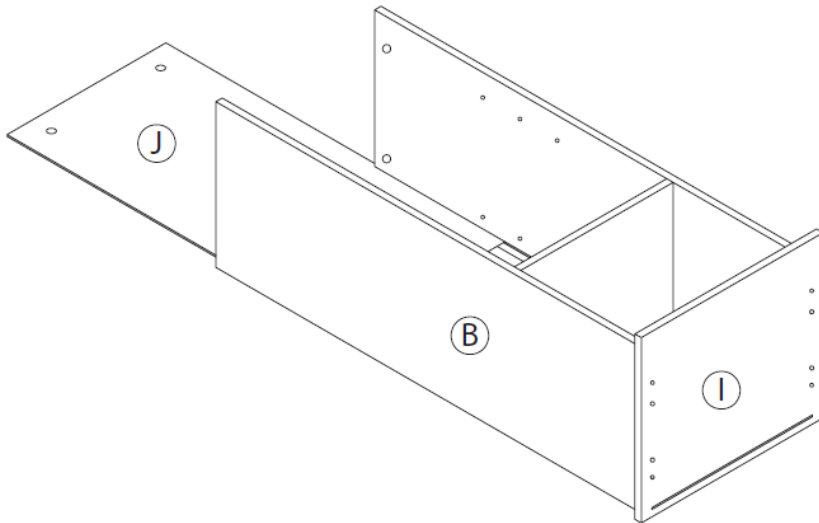

Step 6

Add pins to the top panels (B and C). Secure with top panel (A). Refer to **Figure A** for assembly guide for inserting locknuts on panels (B and C).

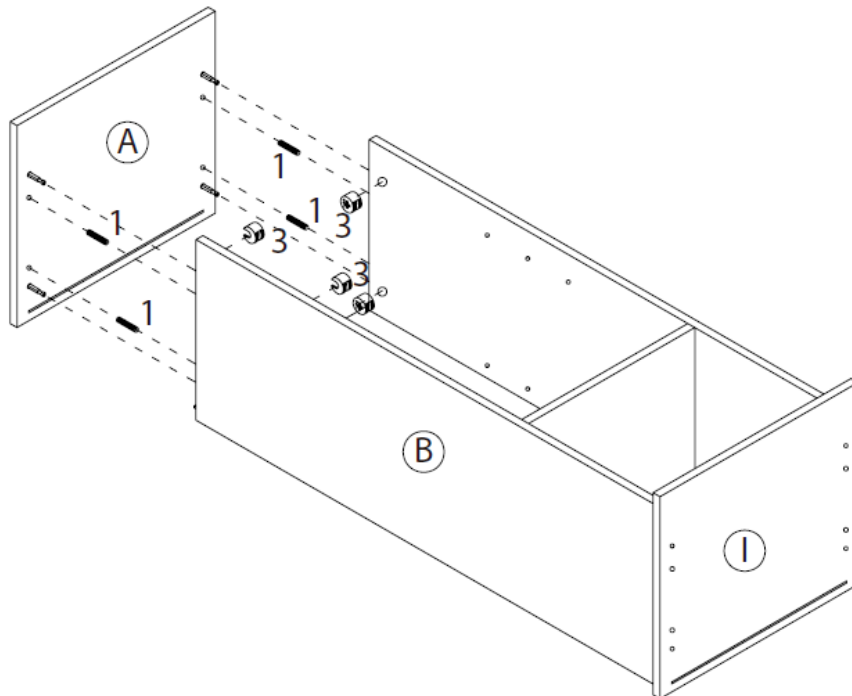

	(1)x4pcs
	(3)x4pcs


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 7

Insert pins into panel (D), and attach the side section (K, L, and M) with pins (1) and locknuts.

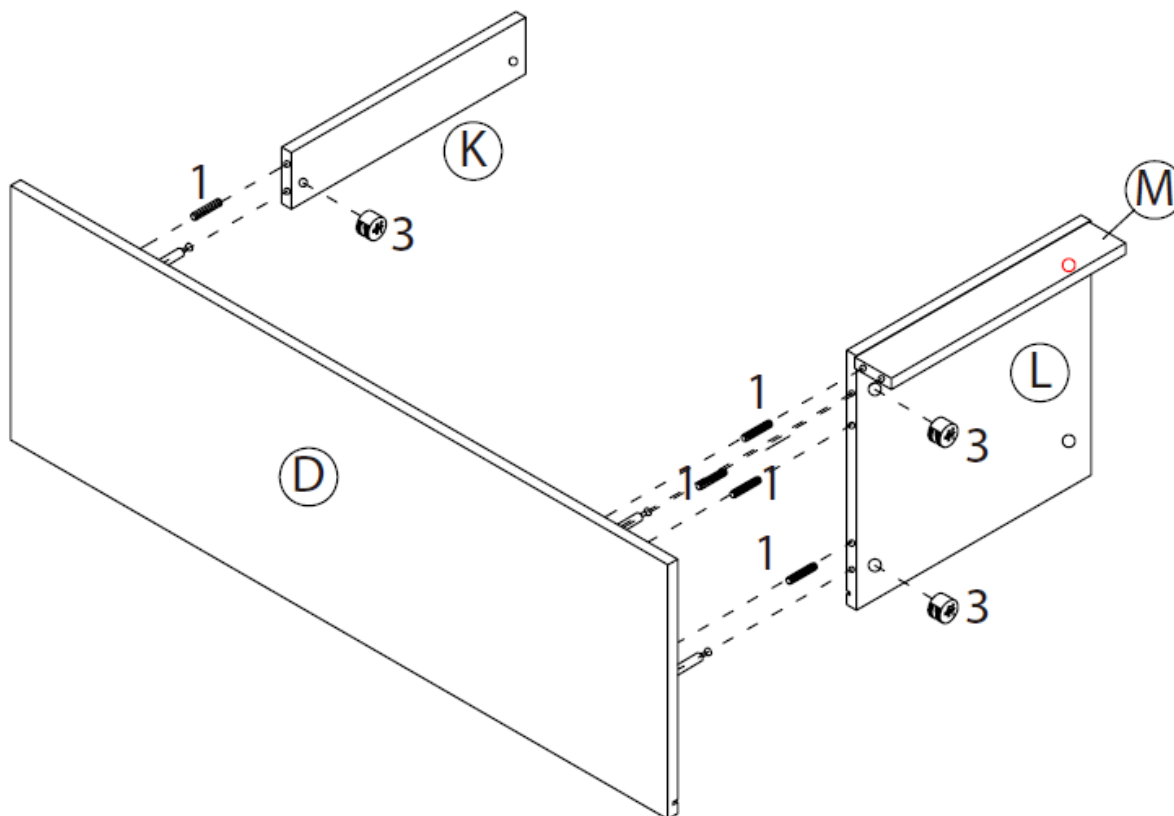

	(1)x5pcs
	(3)x3pcs


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 8

Insert pins into panel (E), and attach the side section (K, L, and M) with pins (1) and locknuts.

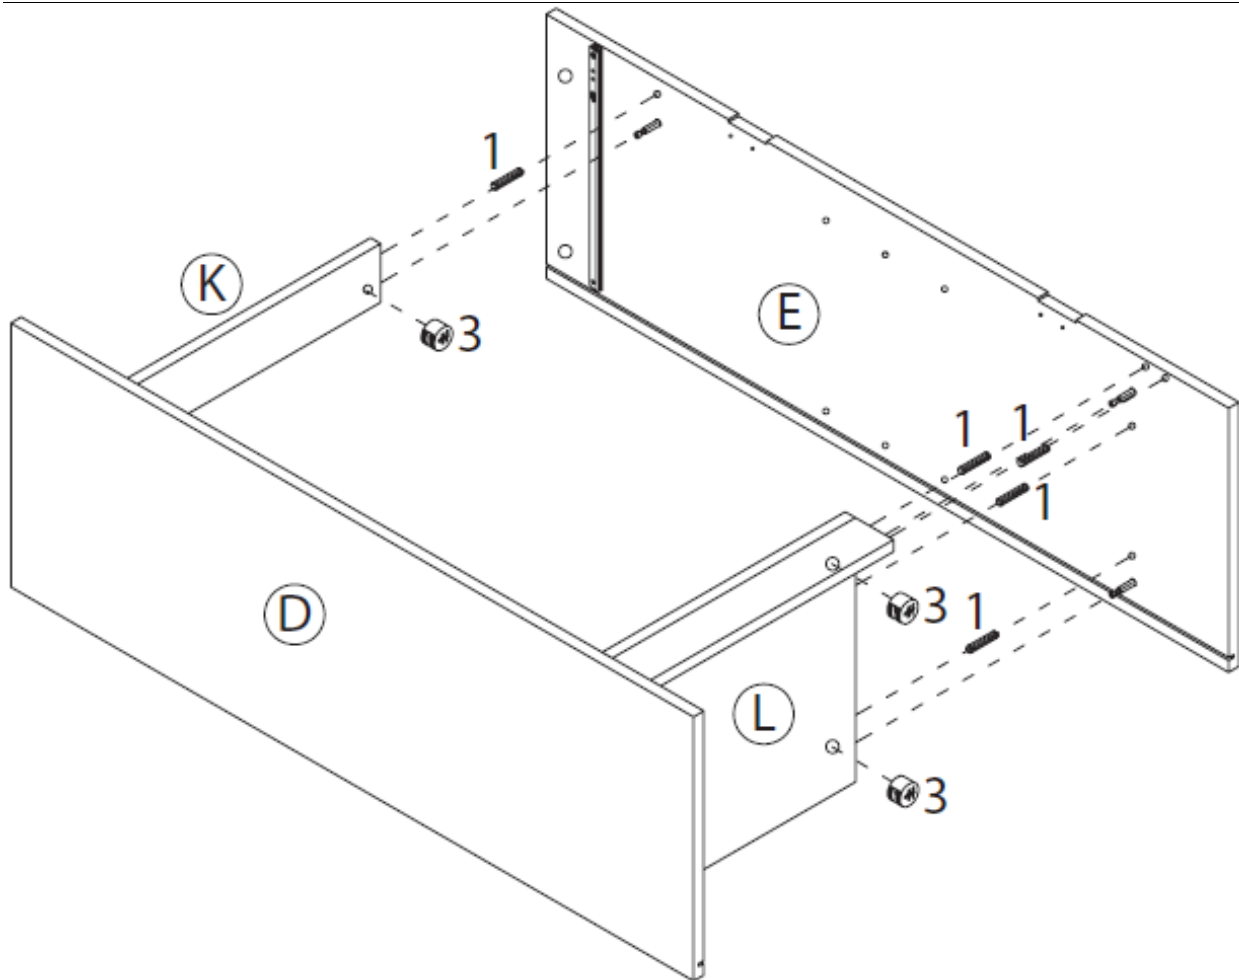

	(1)x5pcs
	(3)x3pcs


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 9

Slide in back panel (N) as shown below.

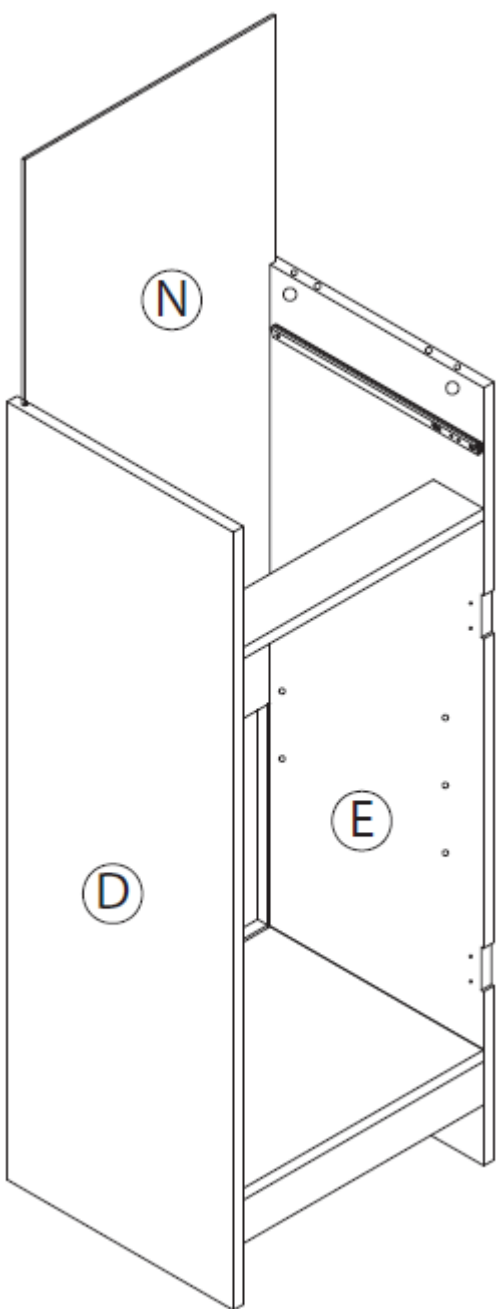


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 10

Insert pins (1) into panel (I), and attach the bottom section (D and E) with pins (2) and locknuts (3).

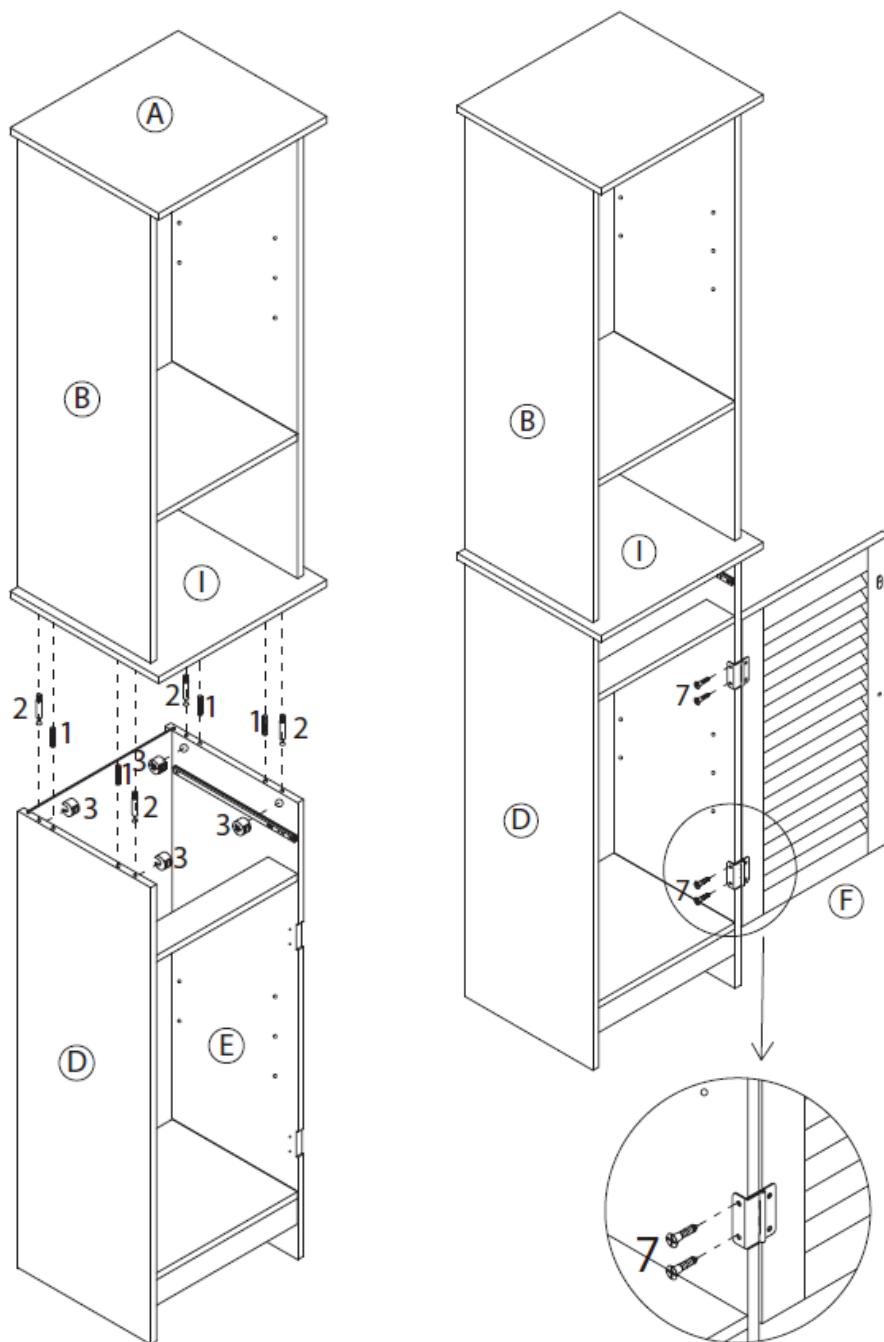

	(1)x4pcs
	(2)x4pcs
	(3)x4pcs
	(7)x4pcs

Instruction Manual


Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 11

Insert pins (2) to front drawer panel (O). Screw in (13) to panels (P and Q) to (R).

Slide in bottom panel (S). Assemble front drawer panel (O) to panels (P and Q) then lock nuts (3).

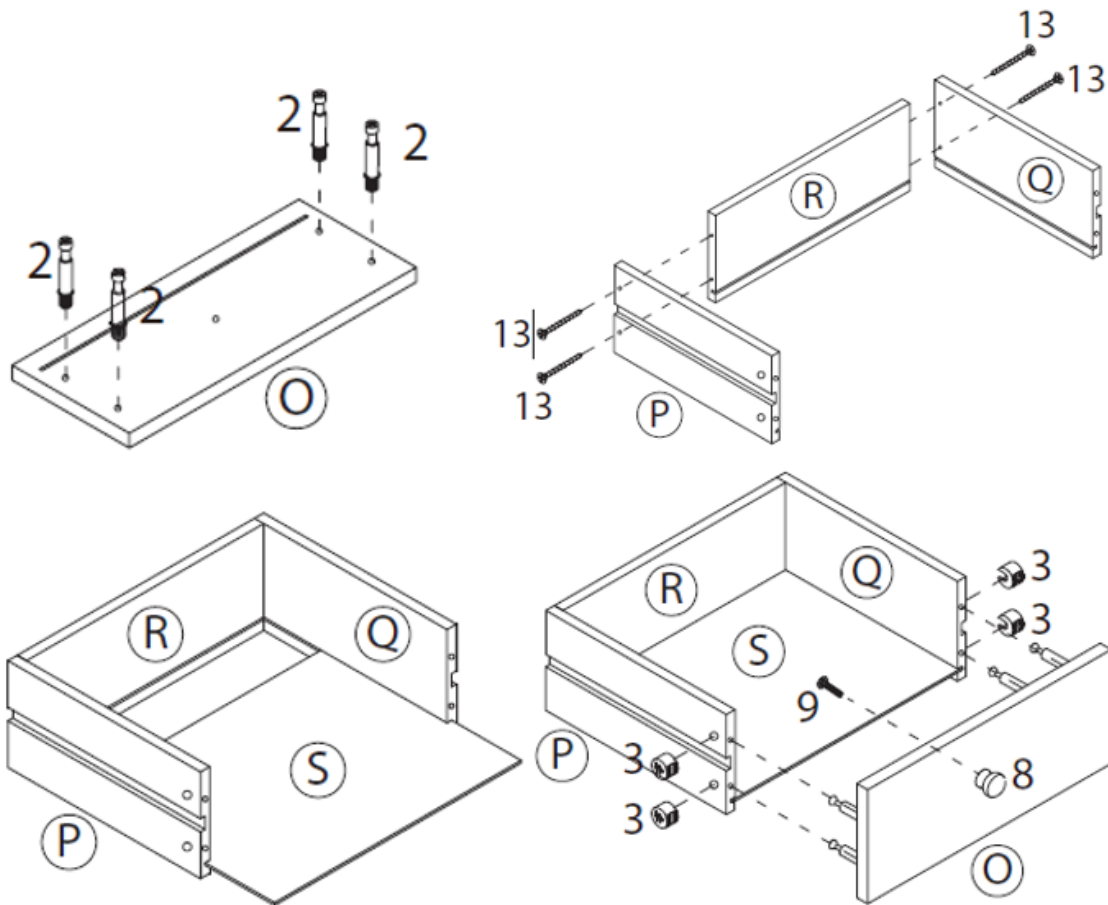

 (2)x4pcs	 (9)x1pc
 (3)x4pcs	 (13)x4pcs
 (8)x1pc	 (14)x2pcs


Instruction Manual

Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 12

Screw in (14) to sides of drawer

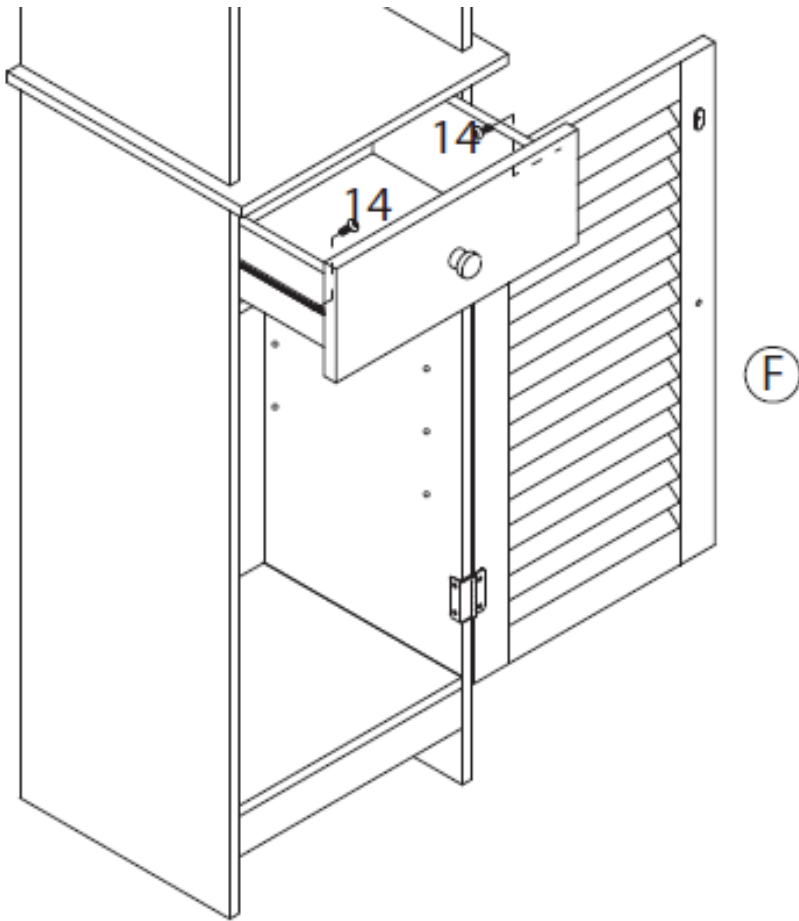

Instruction Manual


Please save this manual for future reference.

Product Name:	Shutter-door Bathroom 64.2in. Tall Cabinet in White
----------------------	---

Step 13

Shelves (T) are adjustable, and may be placed in a few options in each section (1 shelf per section).

First install the brackets inside the cabinet for where you want the shelves. To insert shelf (T) into the cabinet, tilt it at angle first to get it into the cabinet. Insert part 16 to wall and align and screw in part 13 to the back panel.

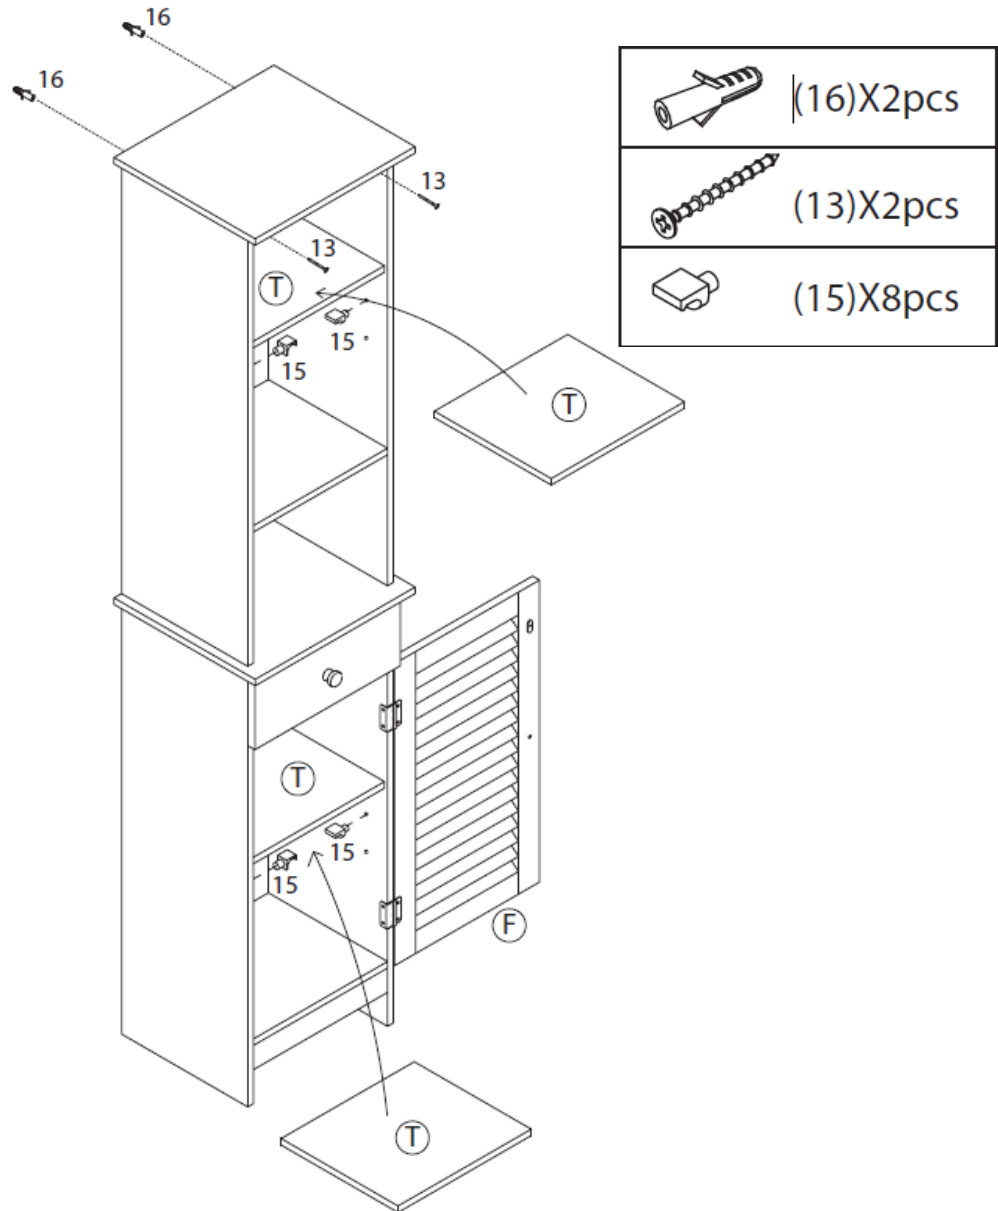

WARNING: FOR YOUR SAFETY! To avoid injury and/or damage, please do not climb on the shelves as this may cause serious bodily injuries and/or product damage.