


COFFEE TABLE

Assembly Instructions - Please keep for future reference

N893P493556 / N893P493557

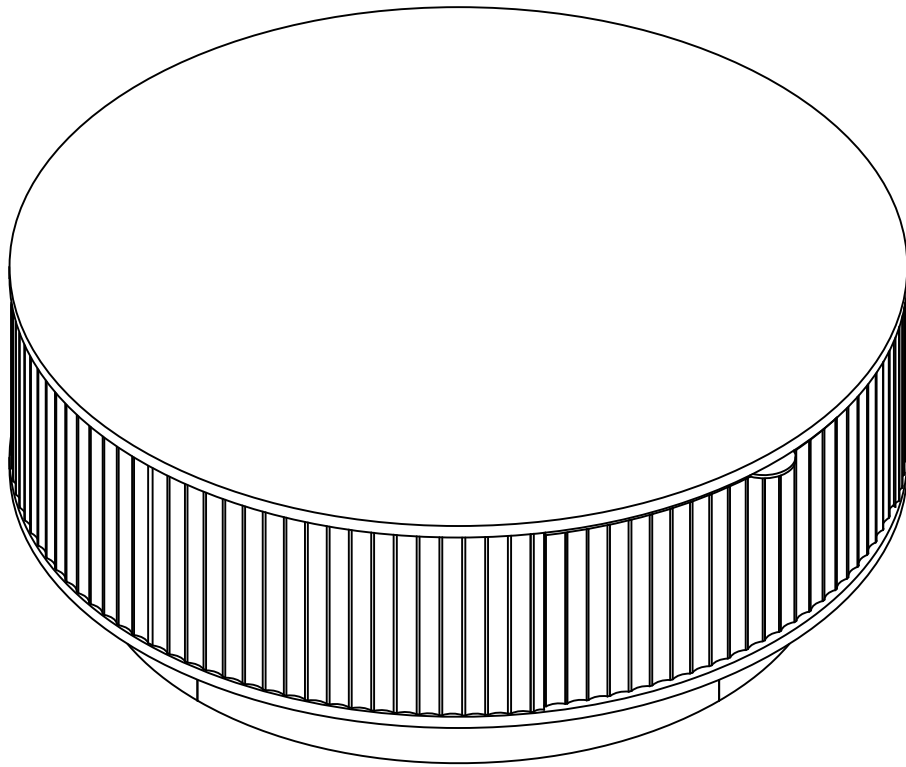

Important - Please read these instructions fully before starting assembly.



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-








Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.


HARDWARE BOX INSIDE BOX 2

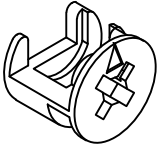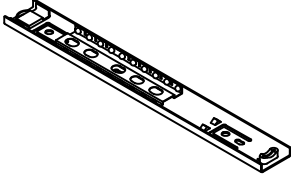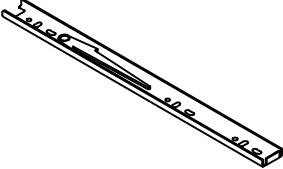A QTY: 14 	B QTY: 14 	C QTY: 12  Ø6*25mm	D QTY: 24  Ø6*12mm
CAM BOLT	CAM LOCK	WOOD DOWEL	FLAT HEAD SCREW
E1 QTY: 4 	E2 QTY: 4 	F QTY: 6  Ø6*19mm	G QTY: 12  Ø8*25mm
BALL BEARING GLIDE	BALL BEARING GLIDE	FLAT HEAD SCREW	FLAT HEAD SCREW
H QTY: 8  Ø8*60mm	I QTY: 14  Ø8*32mm	J QTY: 1  Ø10*45mm	
FLAT HEAD SCREW	FLAT HEAD SCREW	HEX KEY	

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

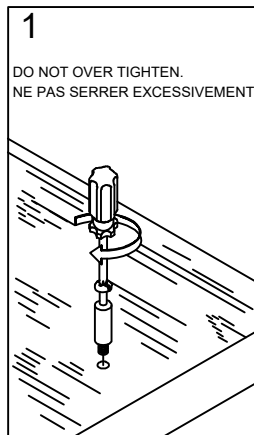

Step 2


Push the male camlock into the entry hole.

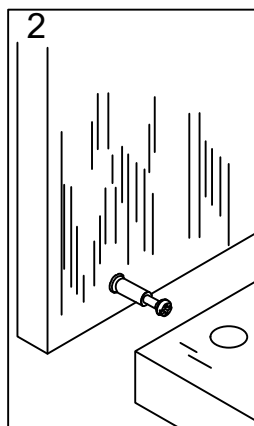

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

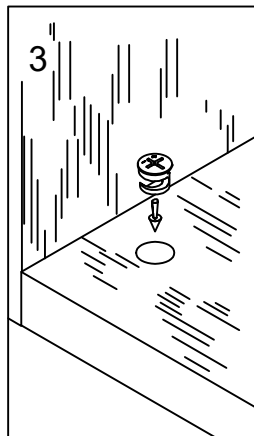


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

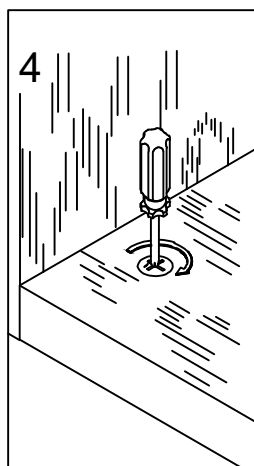

COMPONENTS - KEY DIAGRAM

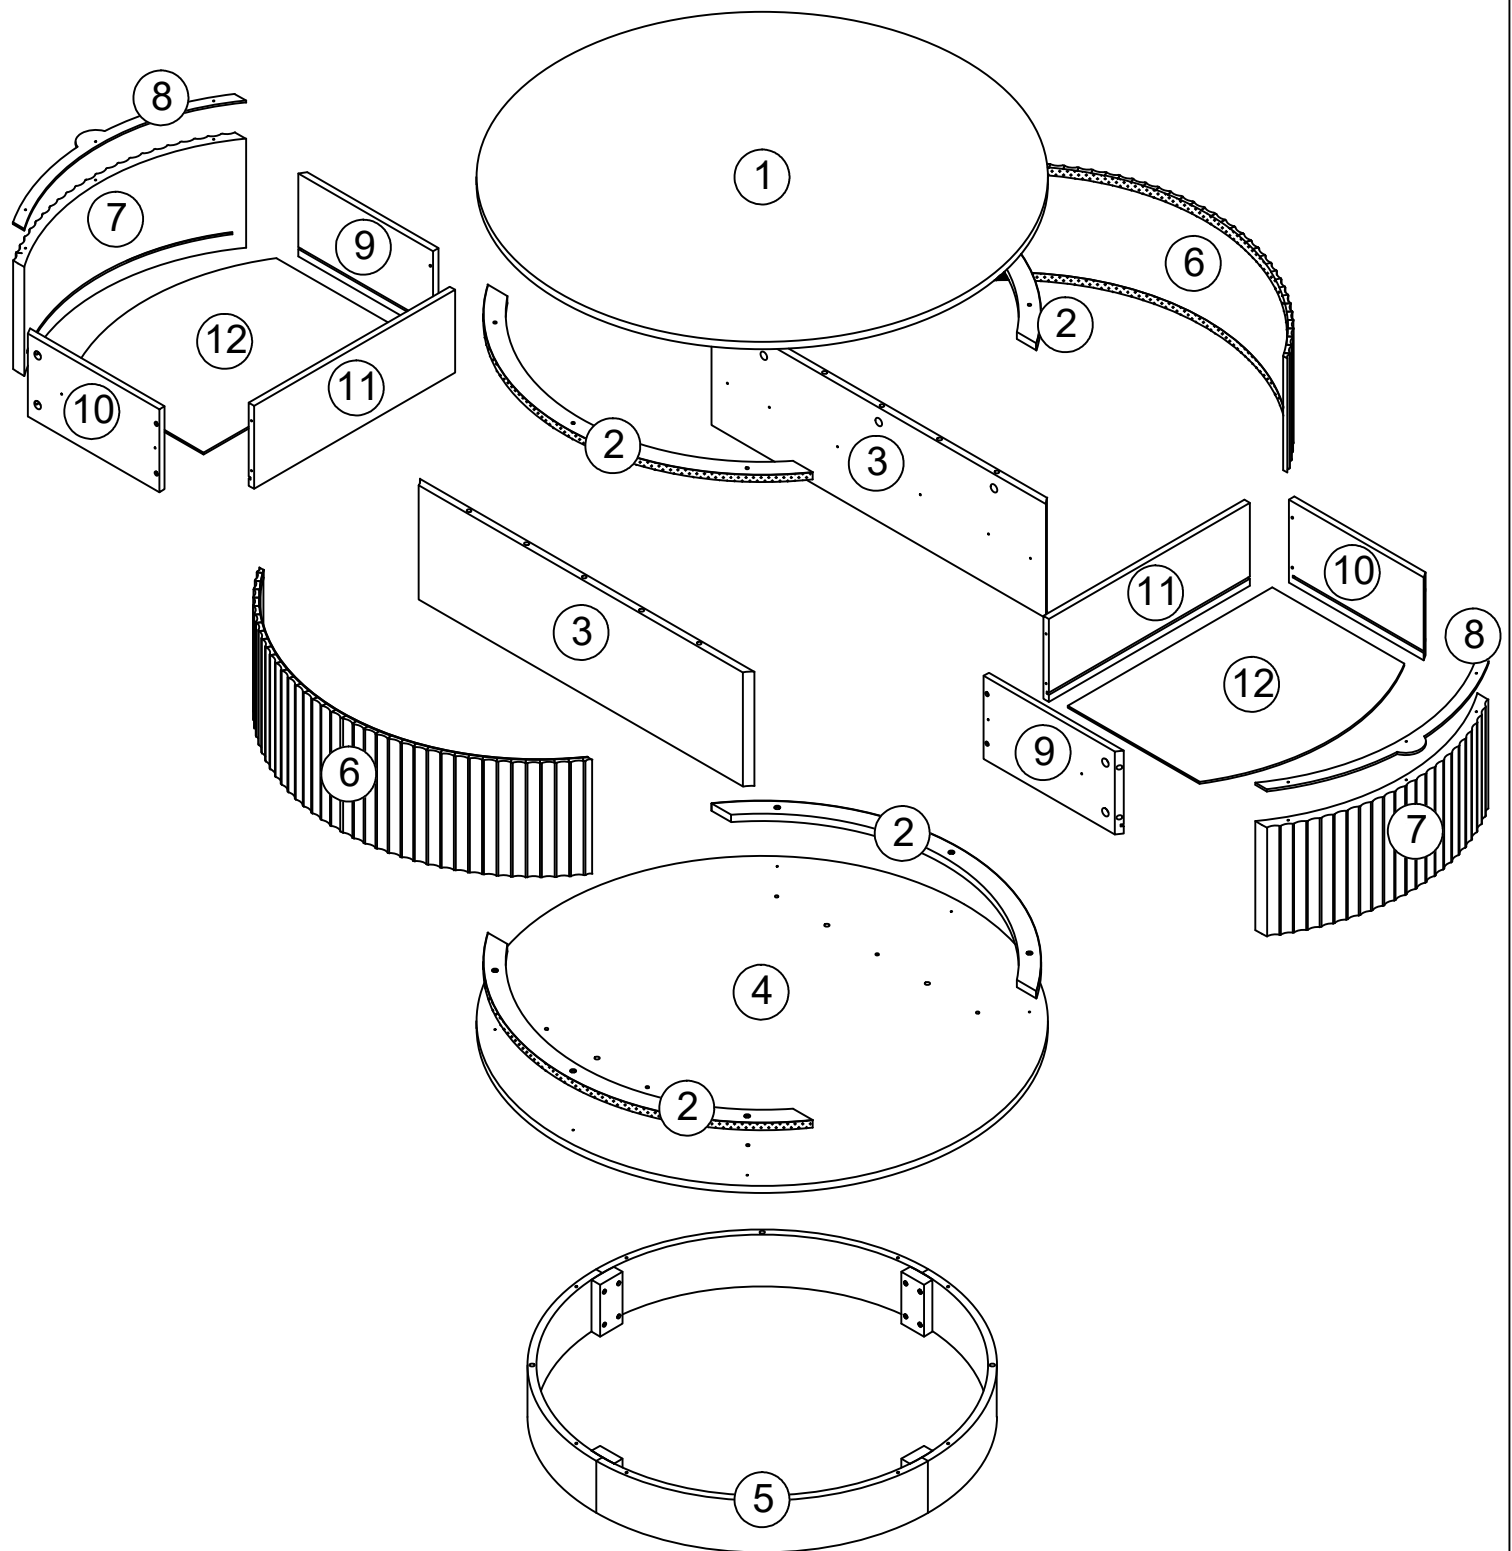


COMPONENTS - KEY DIAGRAM

This product comes in 2 boxes.

BOX 1: N893P493556


1

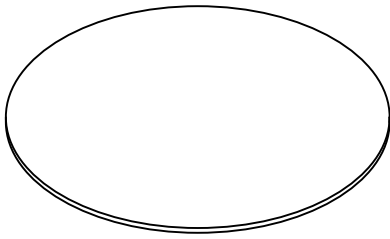

TOP PANEL

QTY: 1


2

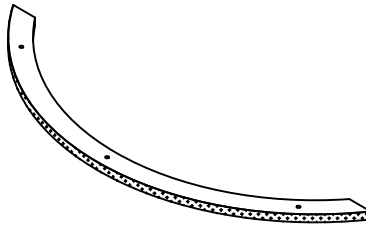

CURVED BRACKET

QTY: 4

4

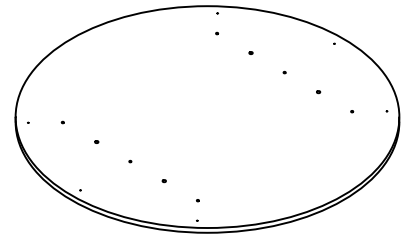


BOTTOM PANEL

QTY: 1

BOX 2: N893P493557


3

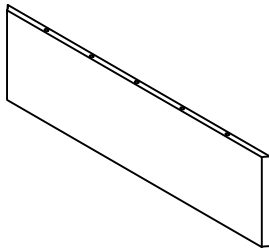

SLIDE MOUNTING RAIL

QTY: 2


5

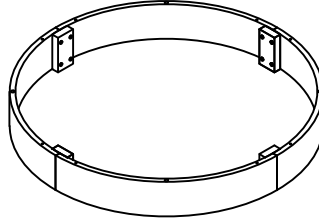

BOTTOM FRAME

QTY: 1


6

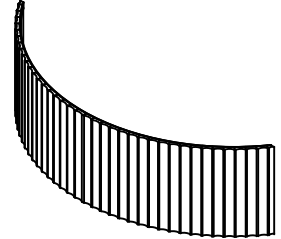

SIDE PANEL

QTY: 2


7

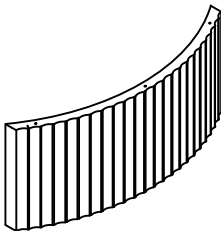

DRAWER FRONT

QTY: 2


8

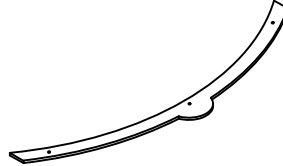

DRAWER HANDLE

QTY: 2


9

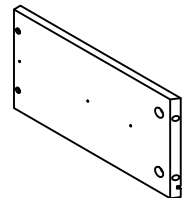

LEFT DRAWER SIDE

QTY: 2


10

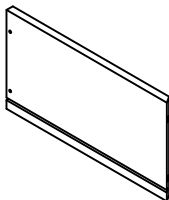

RIGHT DRAWER SIDE

QTY: 2


11

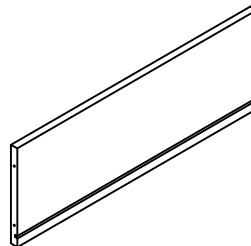

BACK DRAWER


QTY: 2

12

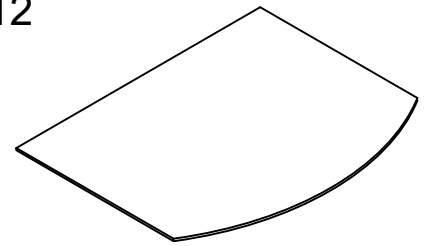

BOTTOM DRAWER

QTY: 2

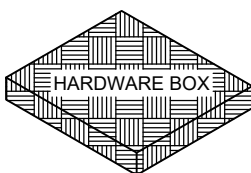



HARDWARE KIT

QTY: 1


Pay Slides Must Be Separated Berore Assembly.
After Separated, Set Aside Until Needed for Assembly.

STEP 1 : Extend Side


Pay attention when connecting !
The sliding module must be at the front end.

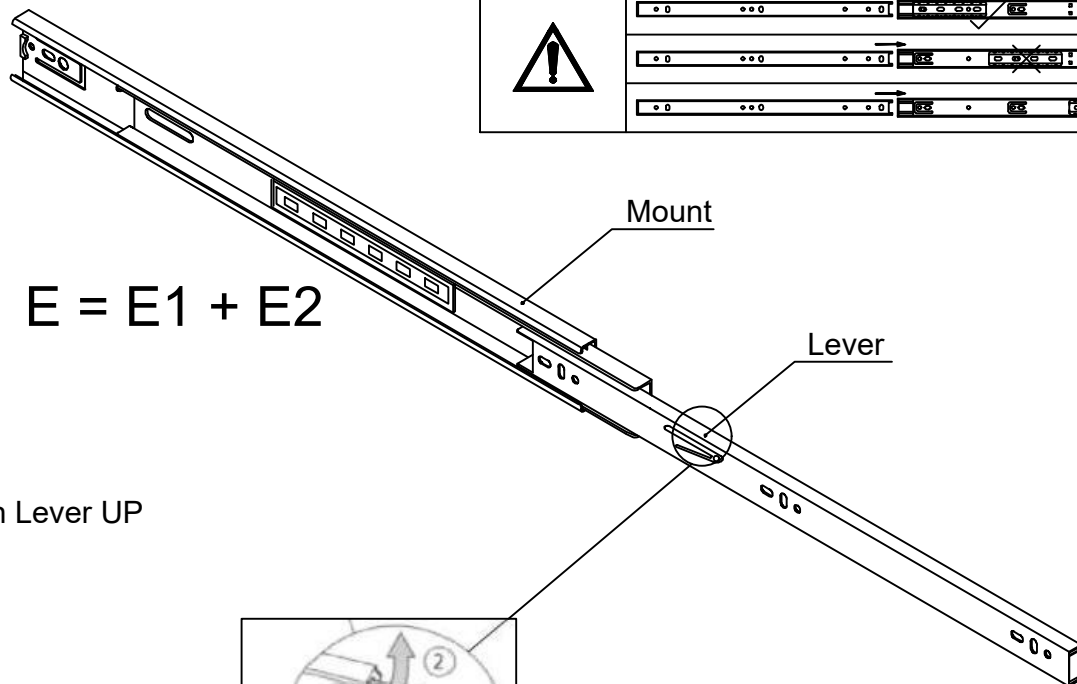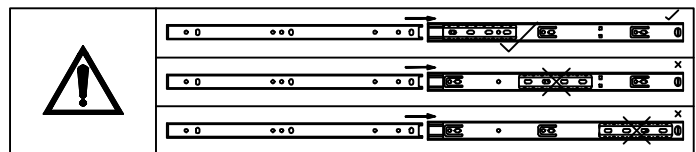

STEP 2 : Push Lever UP

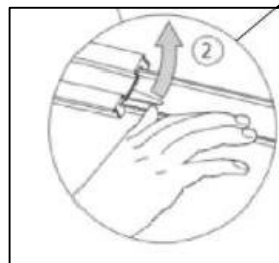

Push lever for the left of drawer,
press the lever for the right of drawer.

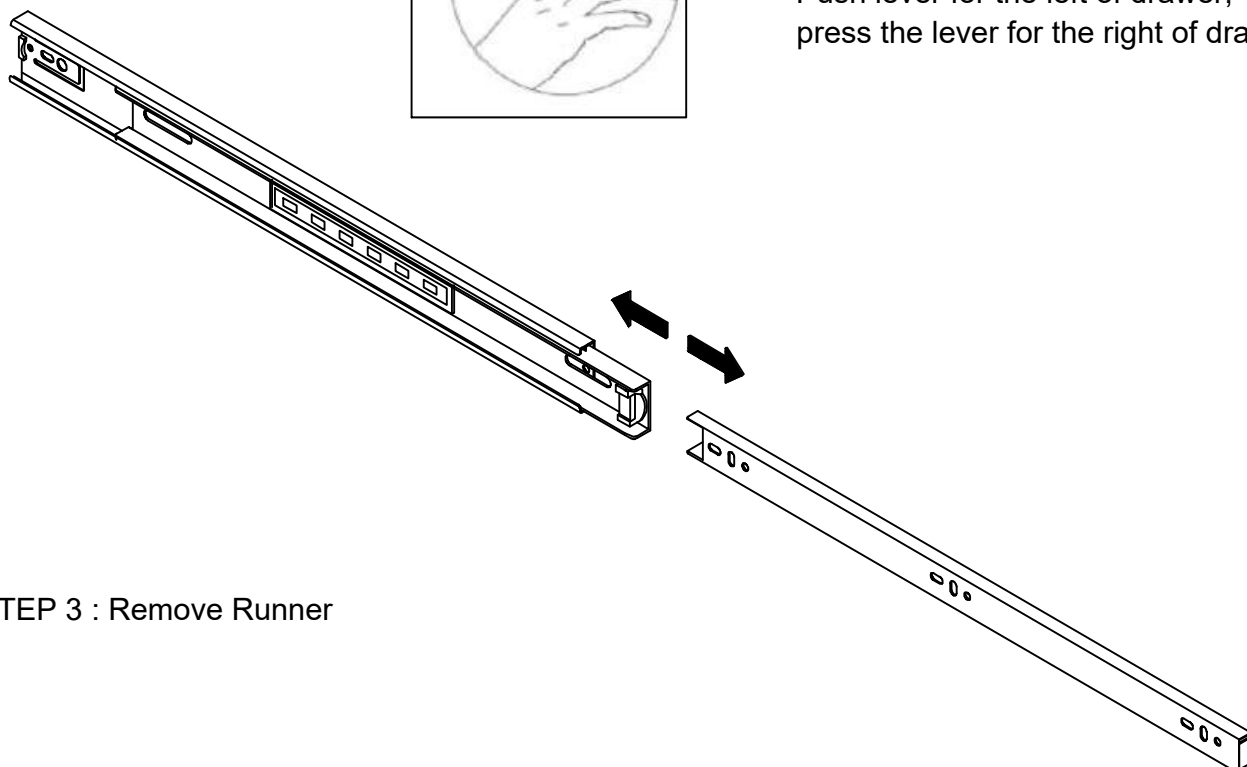


STEP 3 : Remove Runner

ASSEMBLY INSTRUCTIONS

STEP 1

③ x2

E1		4PCS
D		12PCS

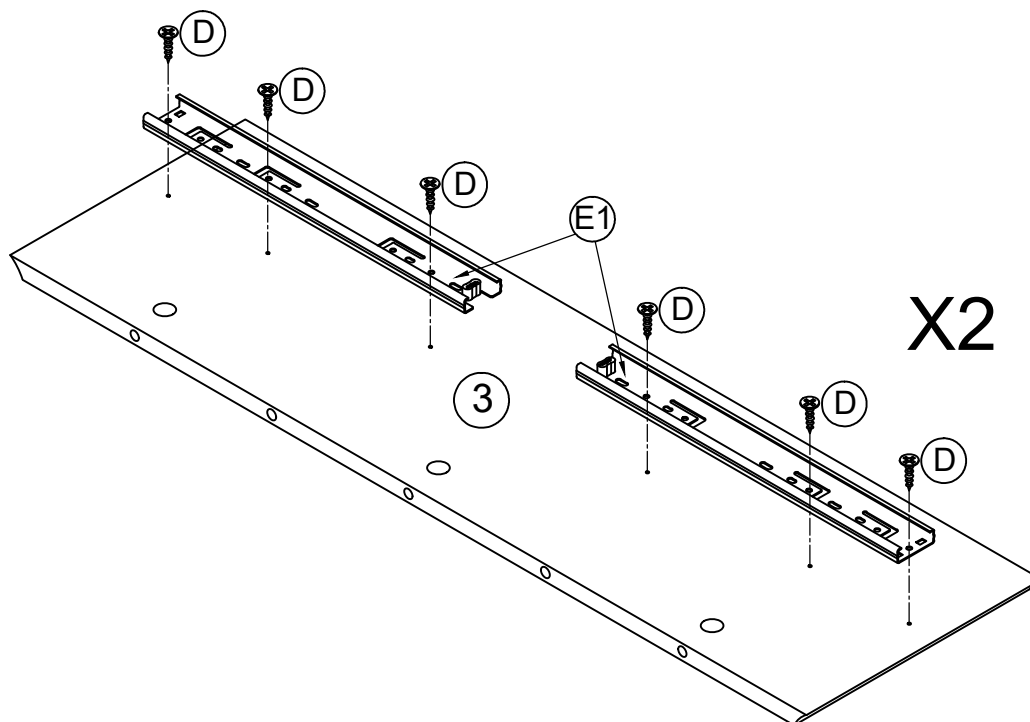



STEP 2

① x1

② x4


④ x1


G		12PCS
---	---	-------

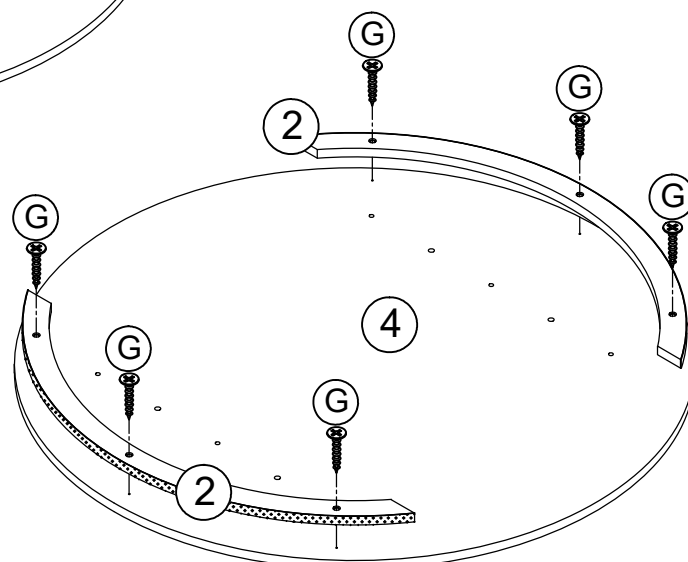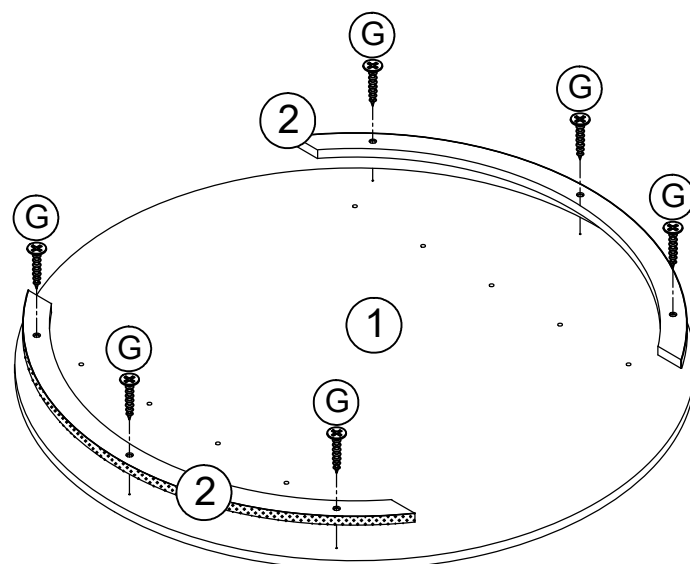


ASSEMBLY INSTRUCTIONS

STEP 3

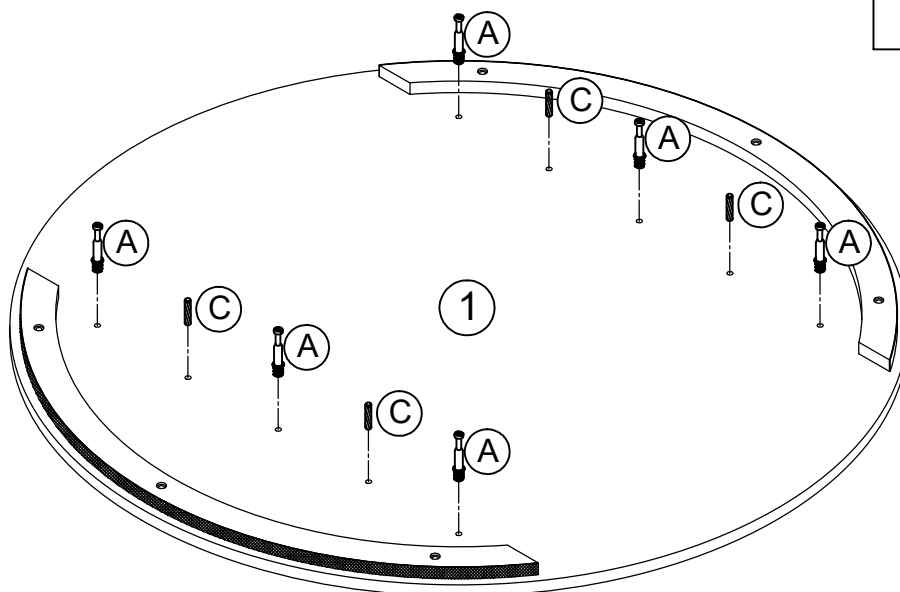


A		6PCS
C		4PCS

STEP 4

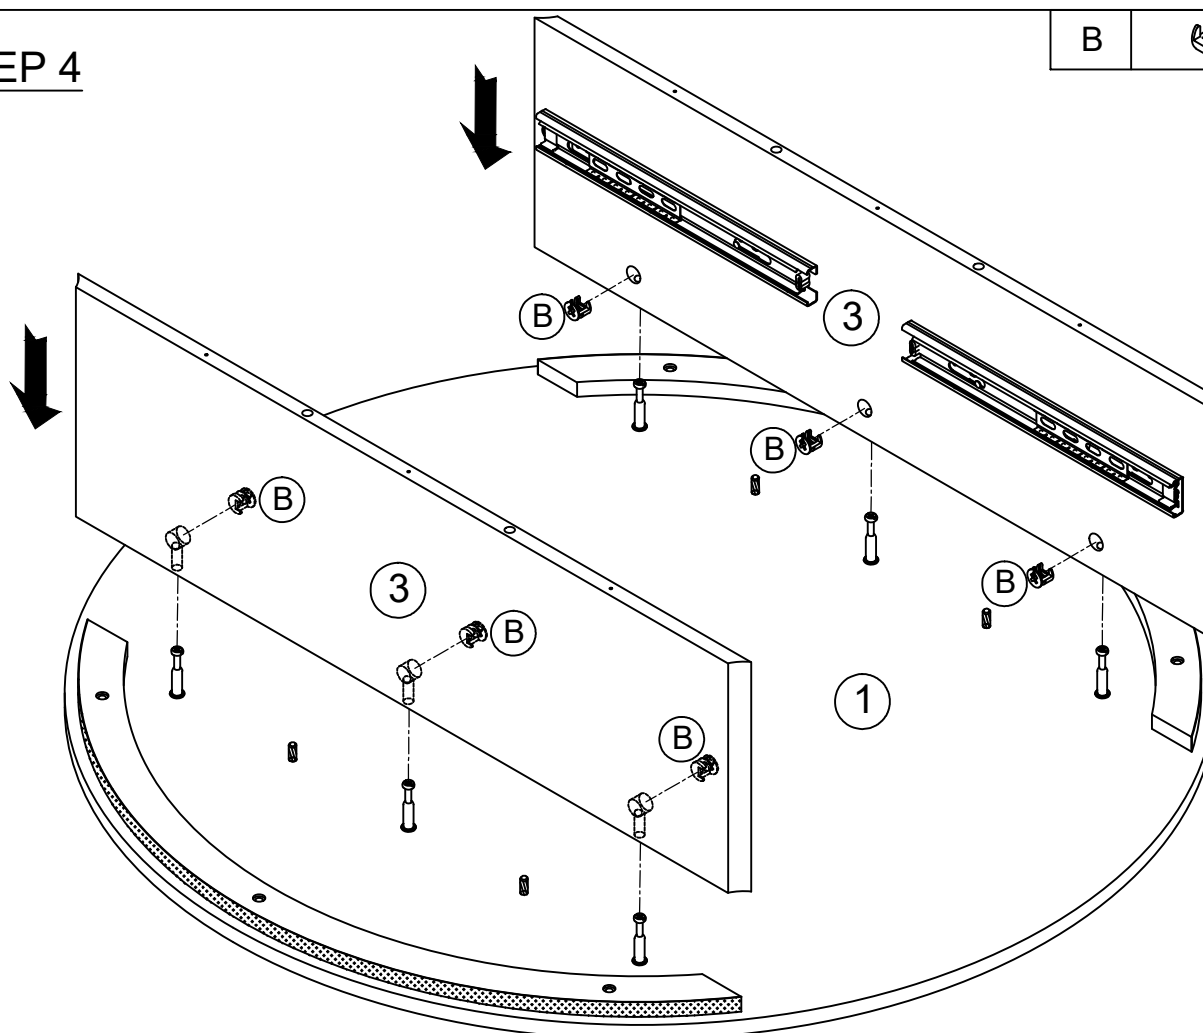


B		6PCS
---	---	------

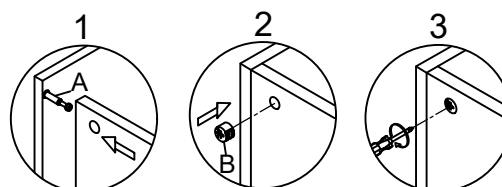

ASSEMBLY INSTRUCTIONS


STEP 5

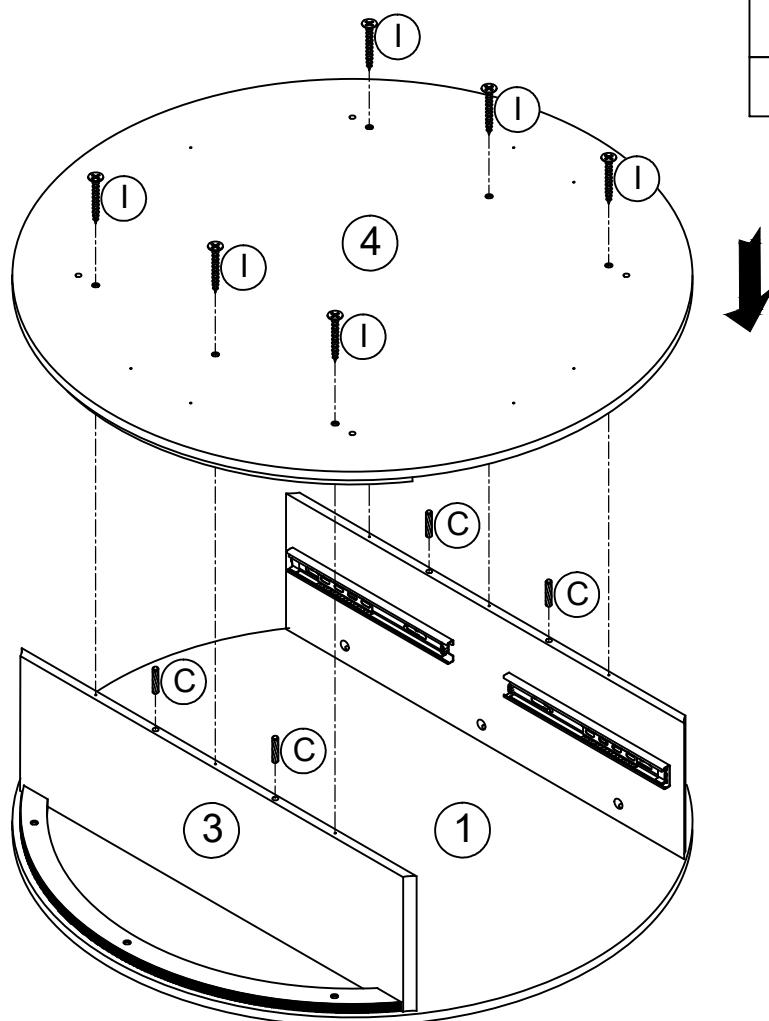

C		4PCS
I		6PCS

STEP 6

⑤ x1

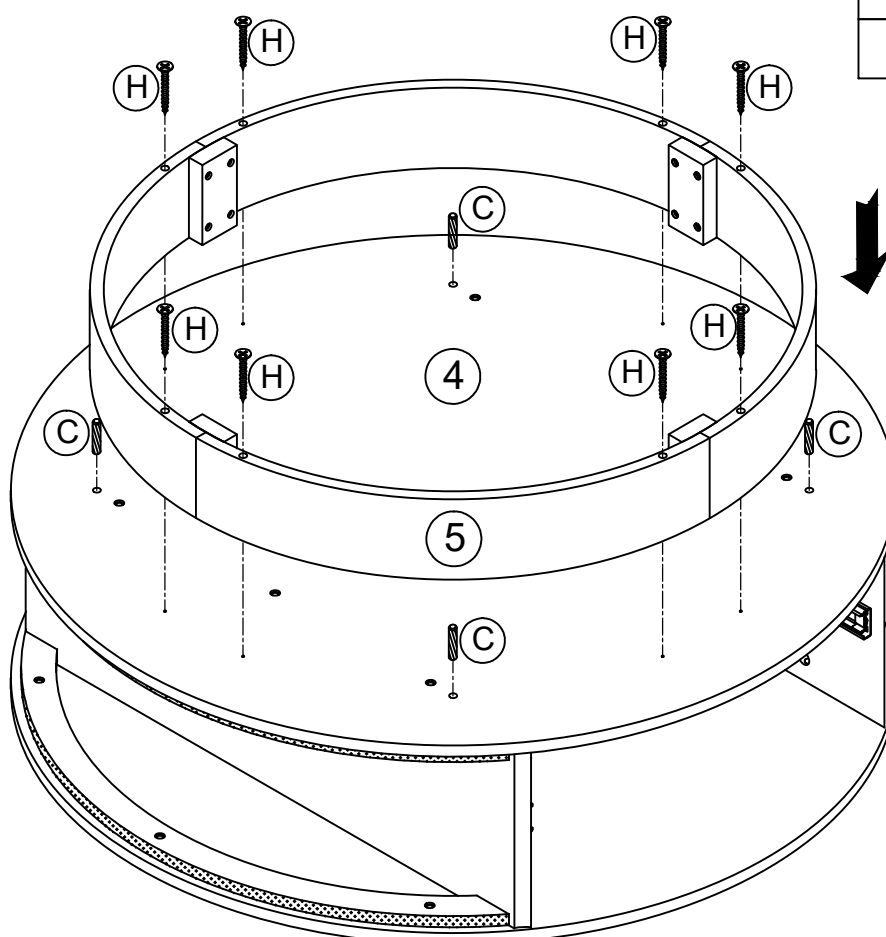

C		4PCS
H		8PCS


ASSEMBLY INSTRUCTIONS

STEP 7


⑨ x2

⑩ x2

D		12PCS
E2		4PCS

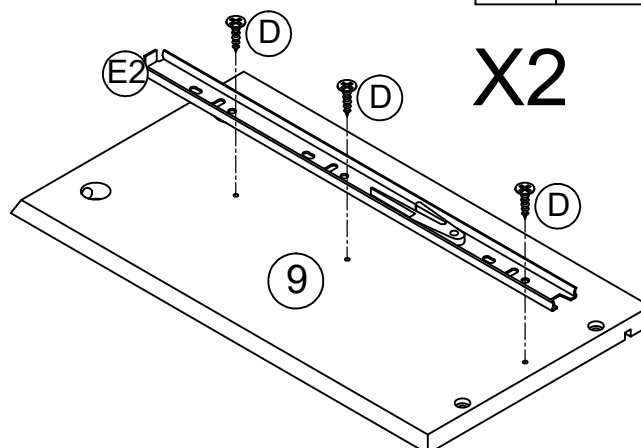

X2

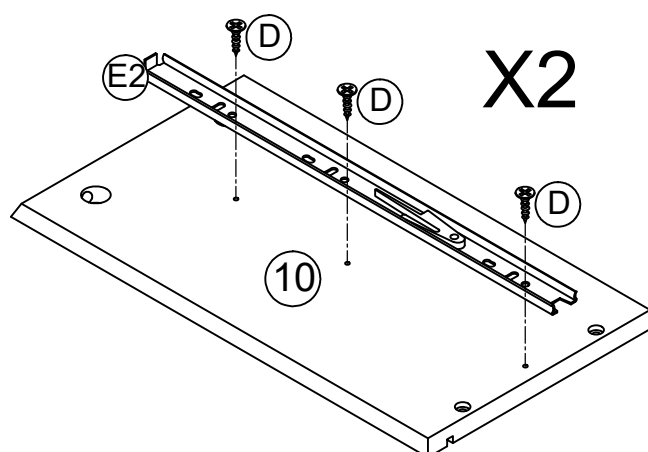


X2

STEP 8


⑪ x2

⑫ x2

I		8PCS
---	---	------

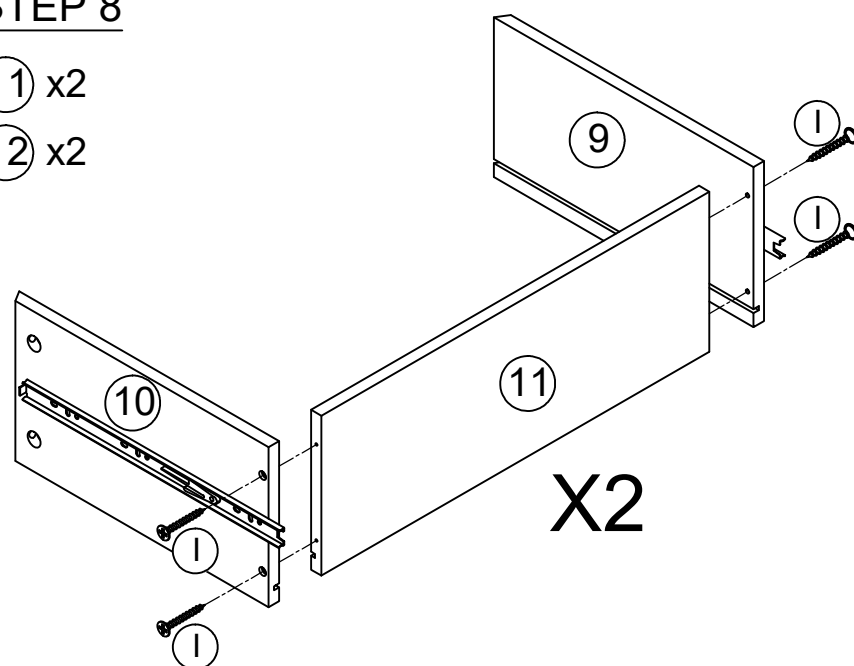

X2

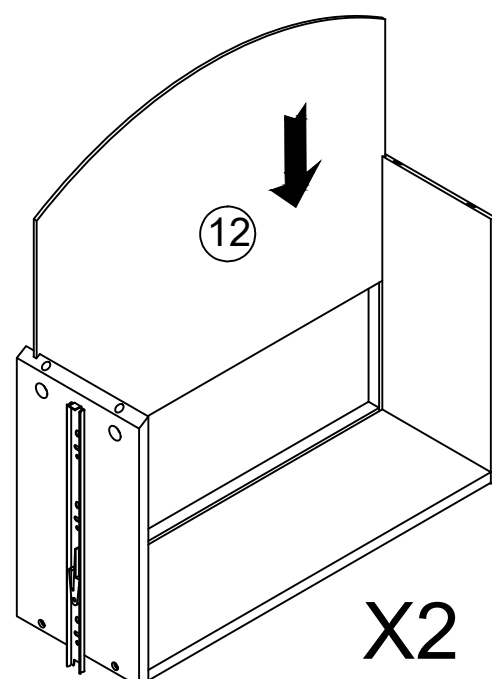



X2



ASSEMBLY INSTRUCTIONS

STEP 9

(7) x2

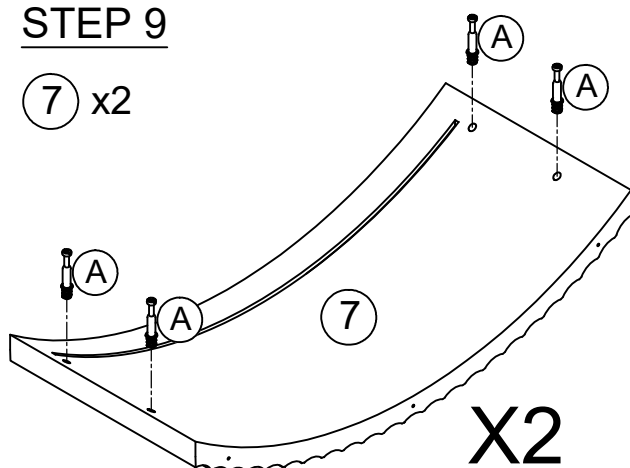


A		8PCS
B		8PCS

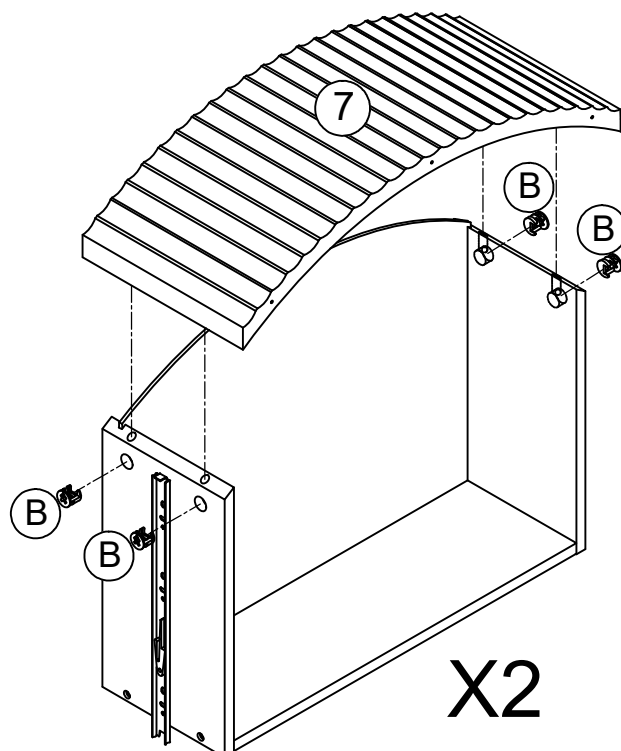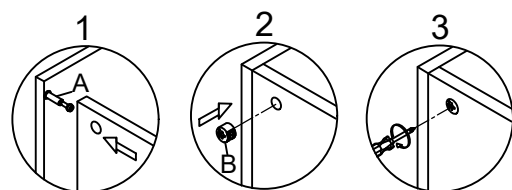

STEP 10


(8) x2

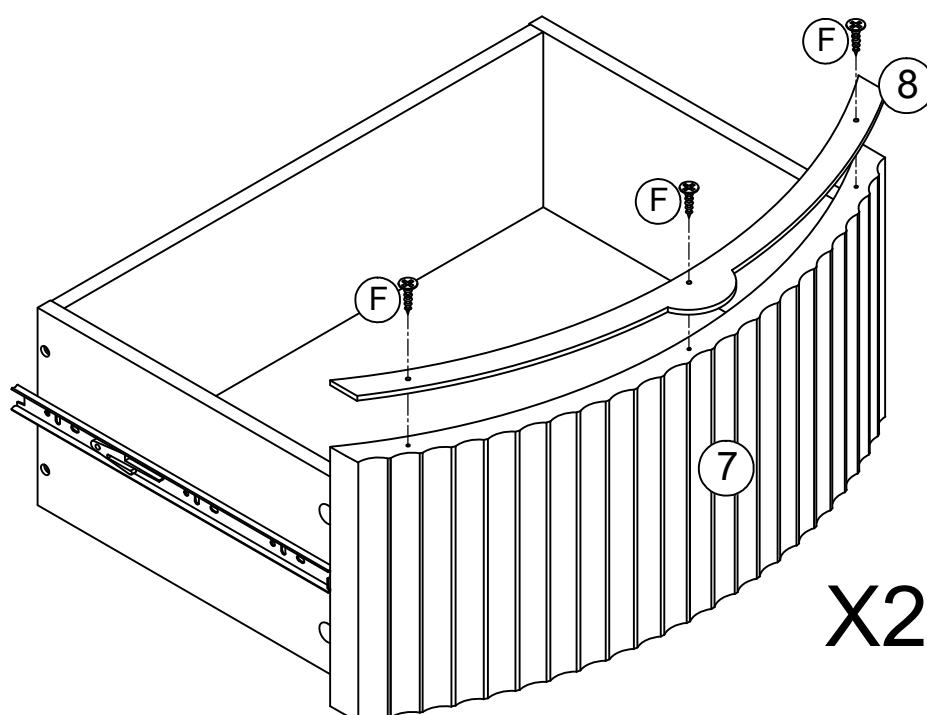

F		6PCS
---	---	------

ASSEMBLY INSTRUCTIONS

STEP 11

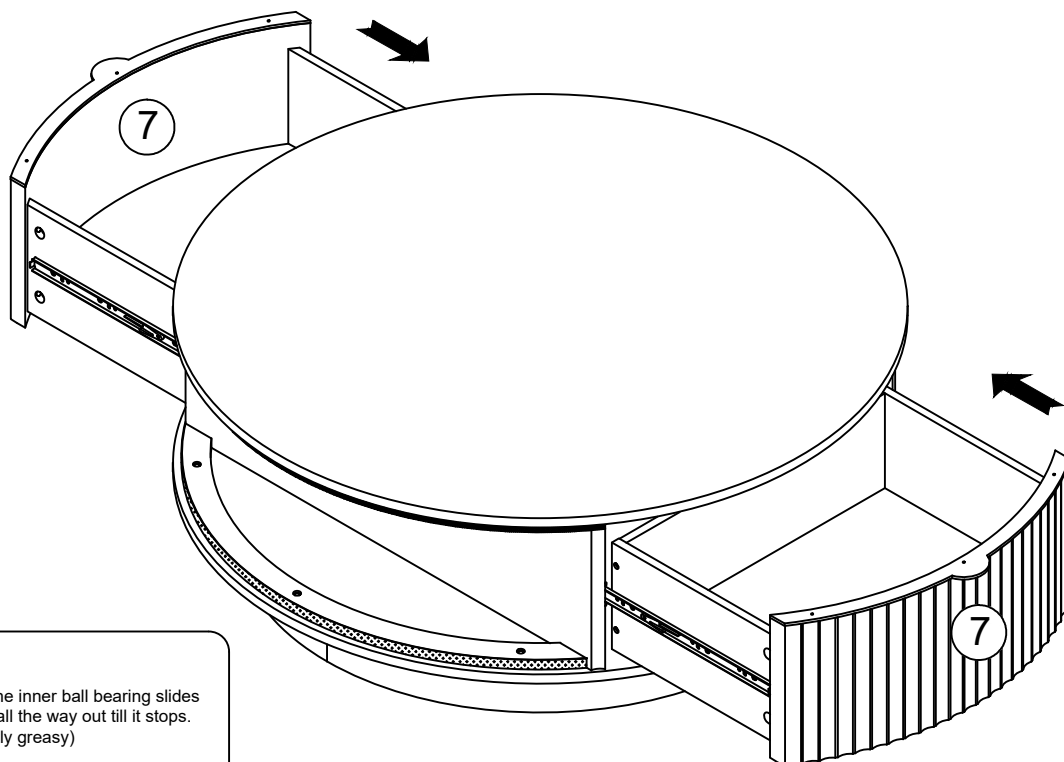


NOTE: Pull the inner ball bearing slides on each side all the way out till it stops. (may be slightly greasy)



REMARQUE : Tirez complètement vers l'extérieur les glissières à billes intérieures de chaque côté jusqu'à ce qu'elles s'arrêtent. (elles peuvent être légèrement grasses)

STEP 12

⑥ x2

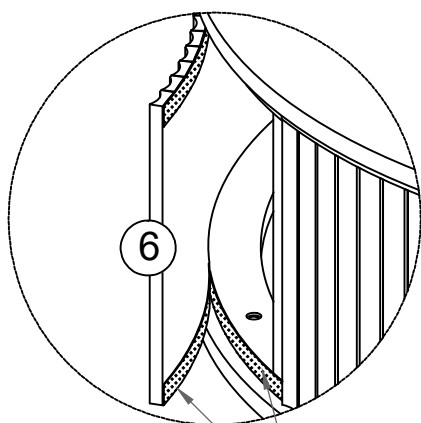

Velcro Tape

