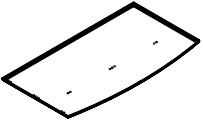
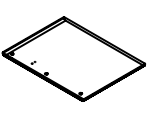
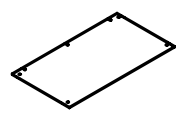
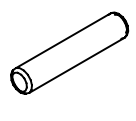
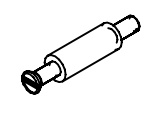

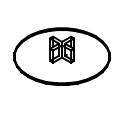
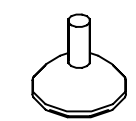
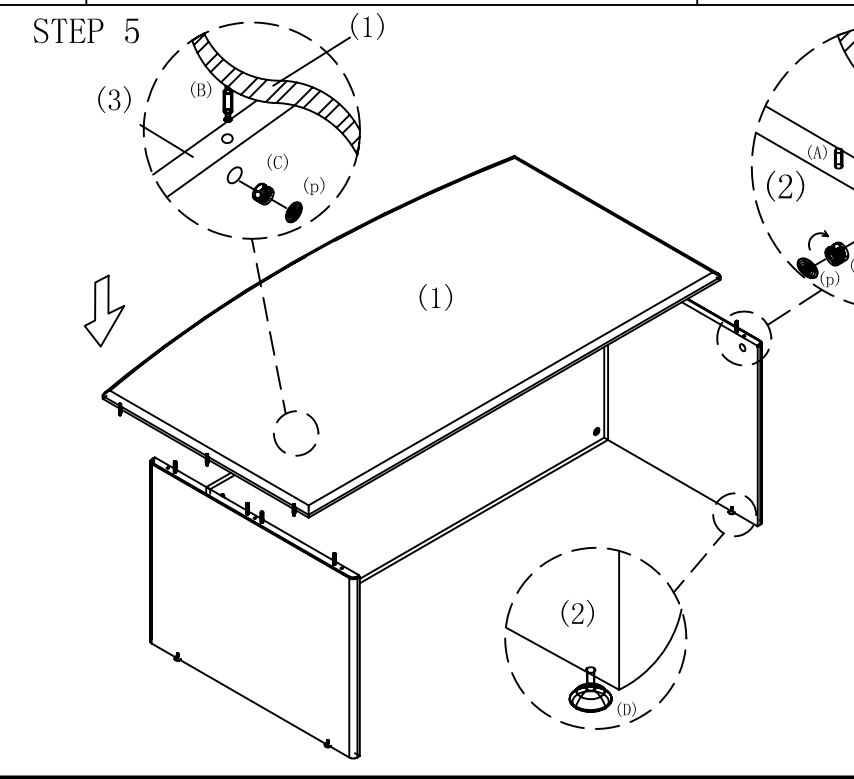
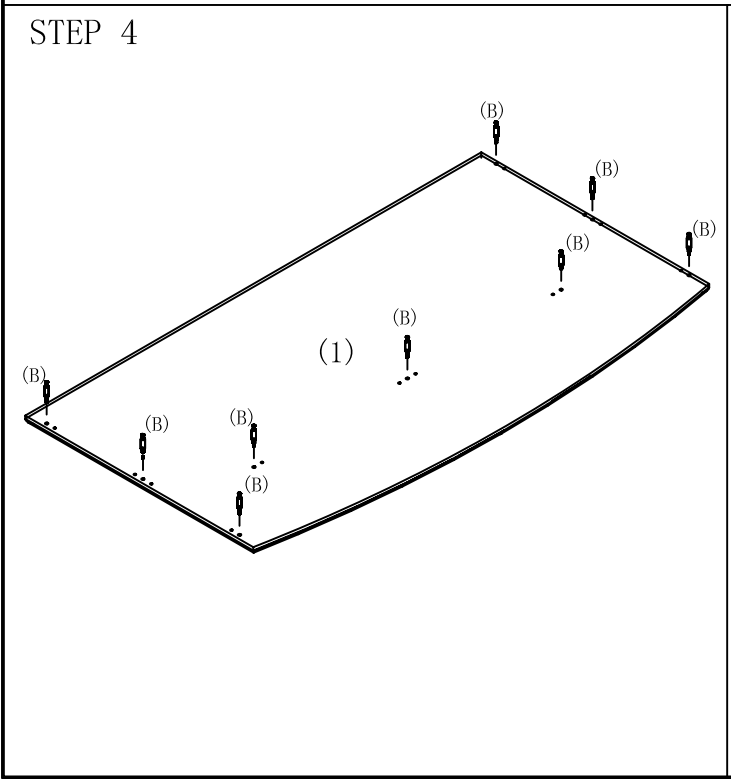
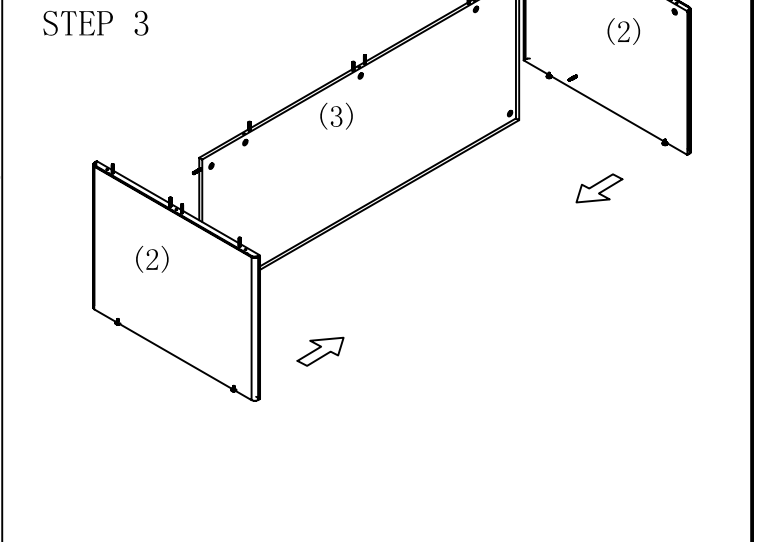
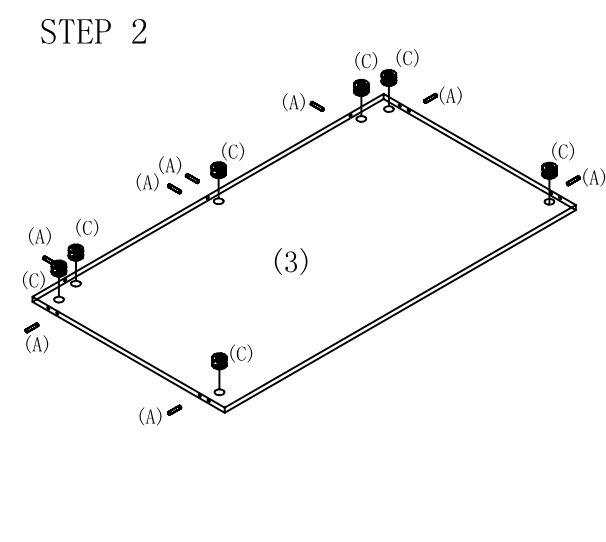
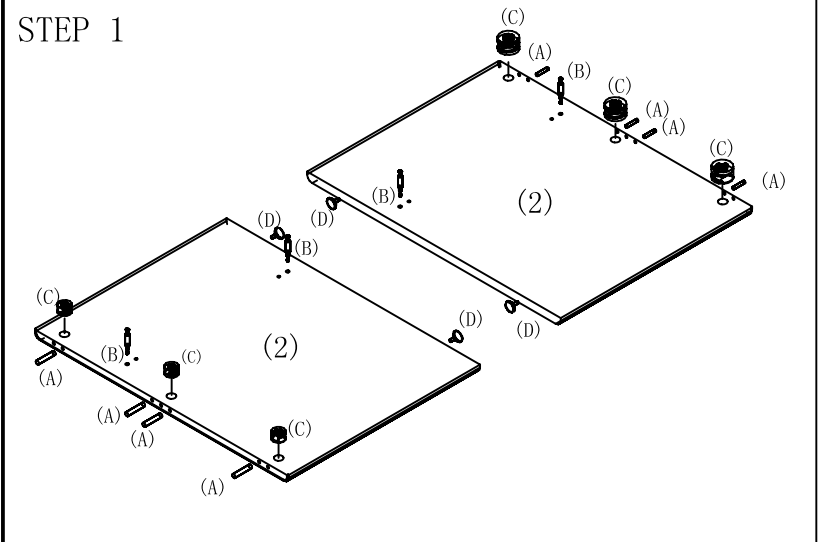


(1) Top  1PCS	(2) End Panel  2PCS	(3) Modesty Panel  1PCS	(A) Dowel  16PCS+1	(B) Cam Pin  13PCS+1	(C) Cam Lock  13PCS+1	(p) Cam Cover  13PCS+1	(D) Leg Leveler  4PCS
--	---	---	--	--	--	--	---



72" BOW FRONT DESK SHELL  
**SON-89**  
 72"W\*39"D\*29"H

**OSP**  
 furniture  
 877-OSP-WORX  
 (677-9679)

*Always lay components on A clean, soft-cushioned surface during assembly.*