

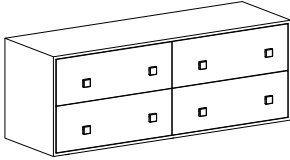






CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List

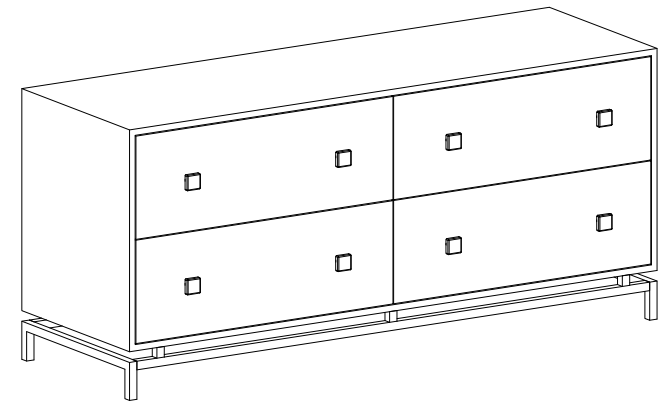
PIECE	DESCRIPTION	PICTURE	QUANTITY
A	DRAWER		1 X
B	SIDE FRAME		2 X
C	CONNECTING BAR		2 X
D	SUPPORT LEG		1 X
HW1	HEX SOCKET BOLT	 1/4"-20*5/8"	10 X
HW2	ALLEN KEY	 M4	1 X
HW3	ANTI-TIP HARDWARE		2 X

SAFAVIEH

C O U T U R E

Model# SFV2123

Product Dimensions:56"W*18"D*25"H



Weight Capacity : 200 lbs

Warning : Do not stand on the product

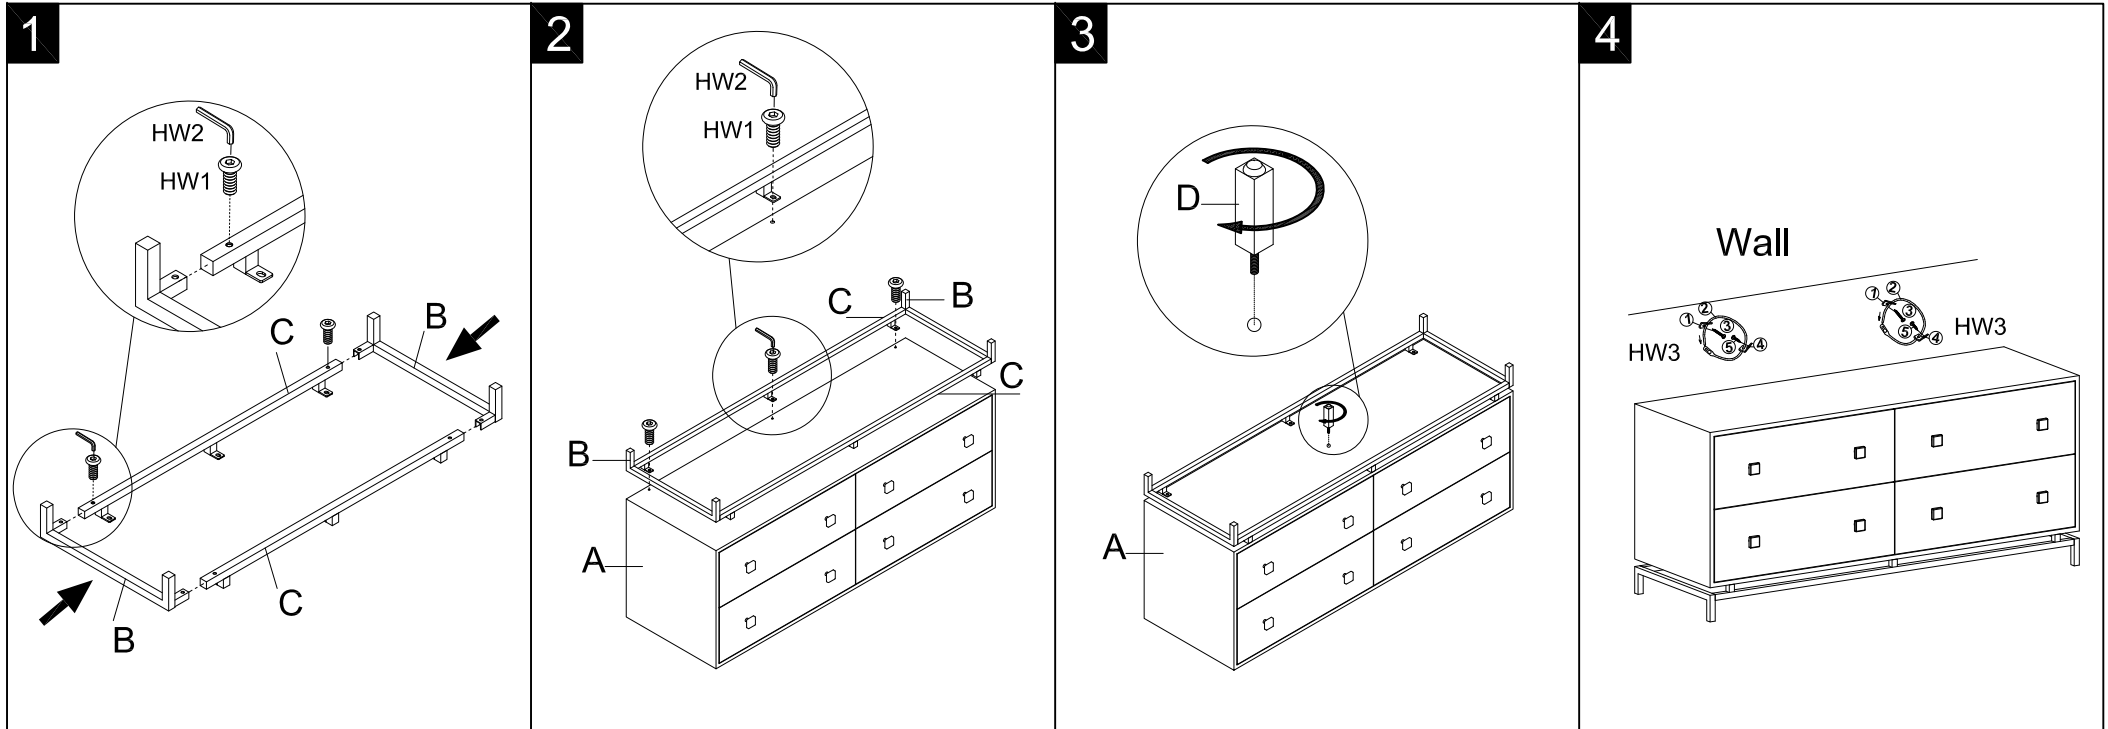
Warning : Do not over torque bolts

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (included): Allen key.



Step 1:
Insert the protrusions on the 2*Side frames (B) into the tube of Connecting bar (C). Using the Allen Key (HW2) to lock with 4*Hex Socket Bolts (HW1).

Step 2:
Attach the assembled metal base to underneath of Drawer (A), using Allen Key (HW2) to lock with 6*Hex-Socket Bolt (HW1)

Step 3:
Insert the support leg (D) into the hole in the center of underneath of Drawer (A) by spinning it clockwise as above shown.

Step 4:
Straighten up the assembled product.
Following the installation instructions of Anti-tip Hardware (HW3) to fix the product in the wall by 2 straps. Assembly is completed.