
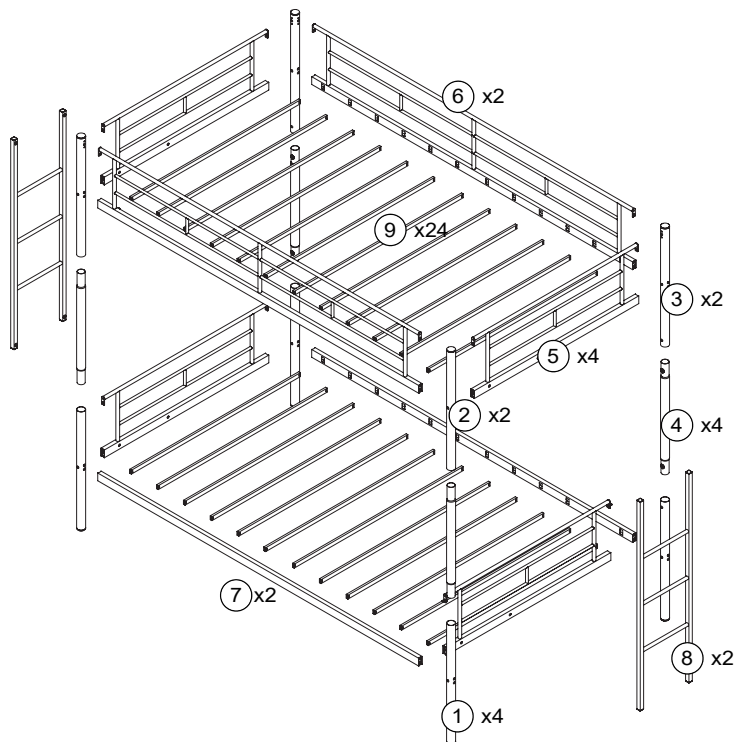


Assembly Instruction


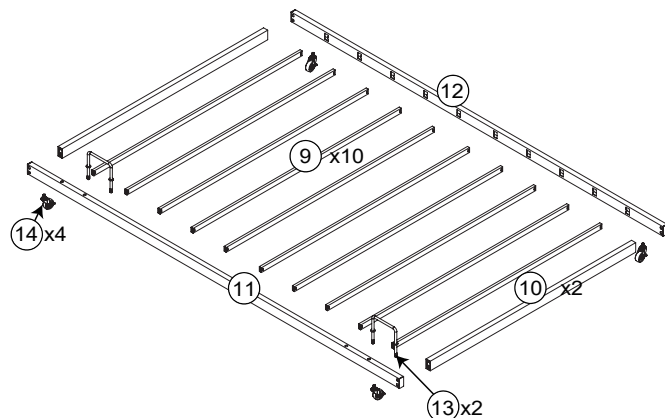


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

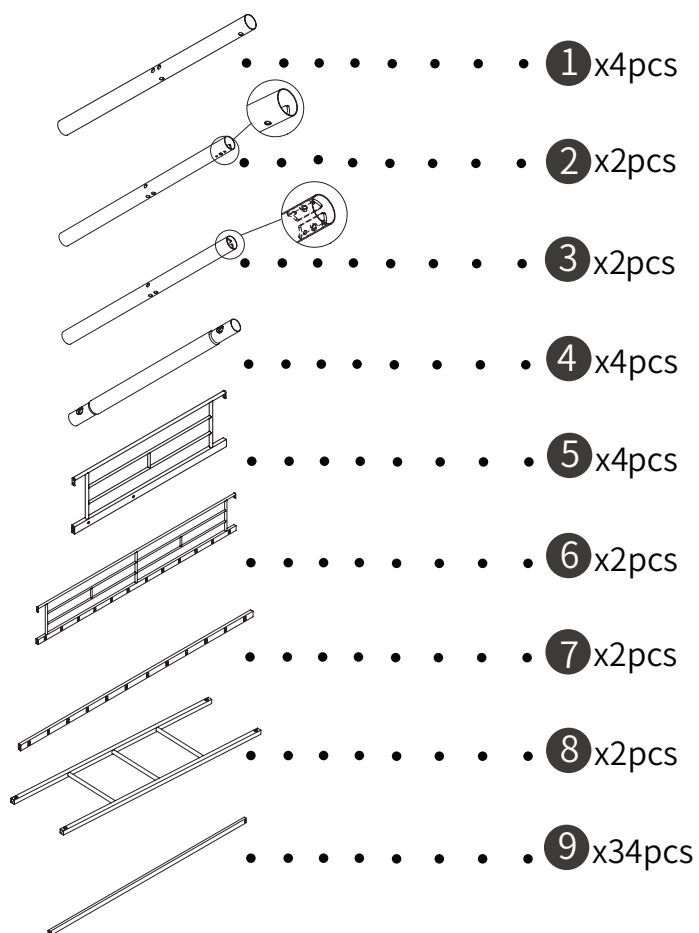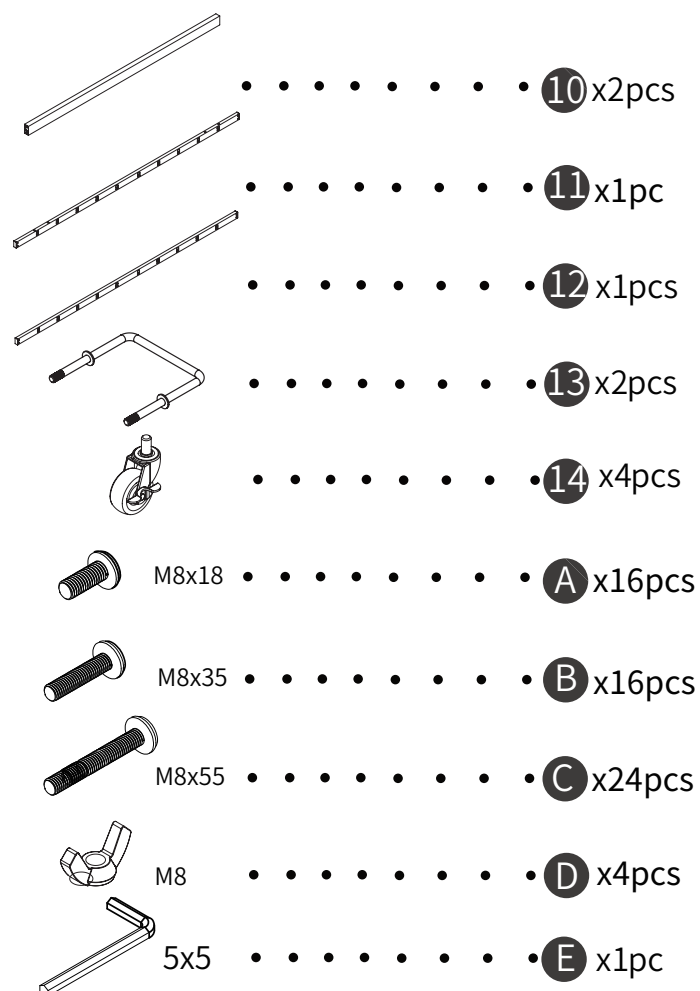


1

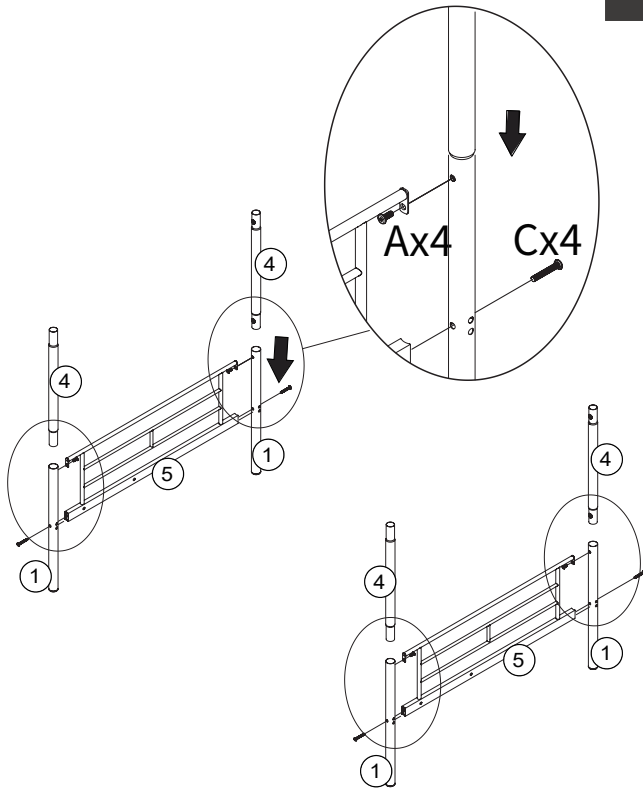

A		M8x18	4
C		M8x55	4


2

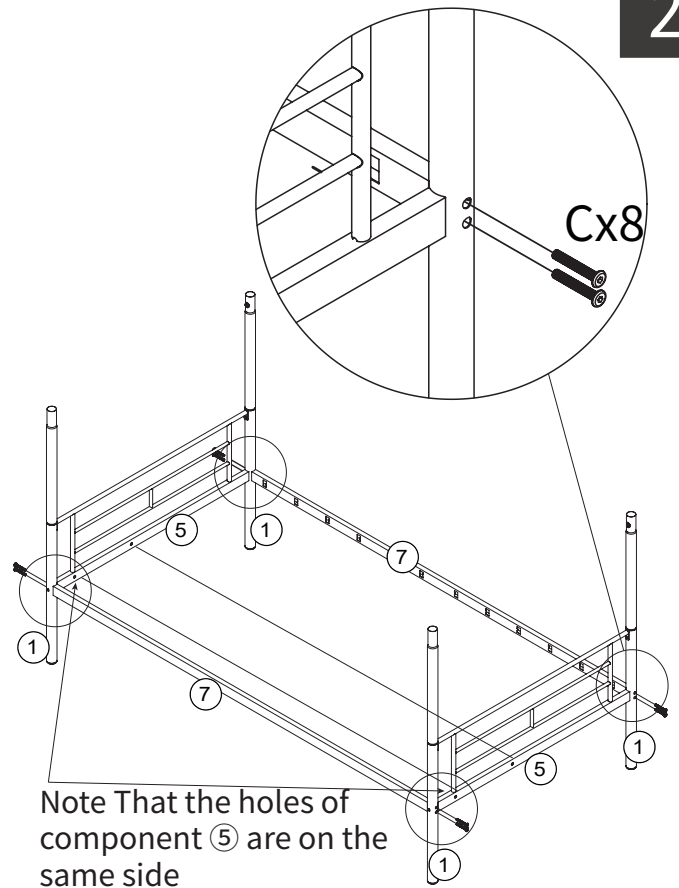

C		M8x55	8
---	--	-------	---

Note that the hole of component ③ faces inward during installation

3

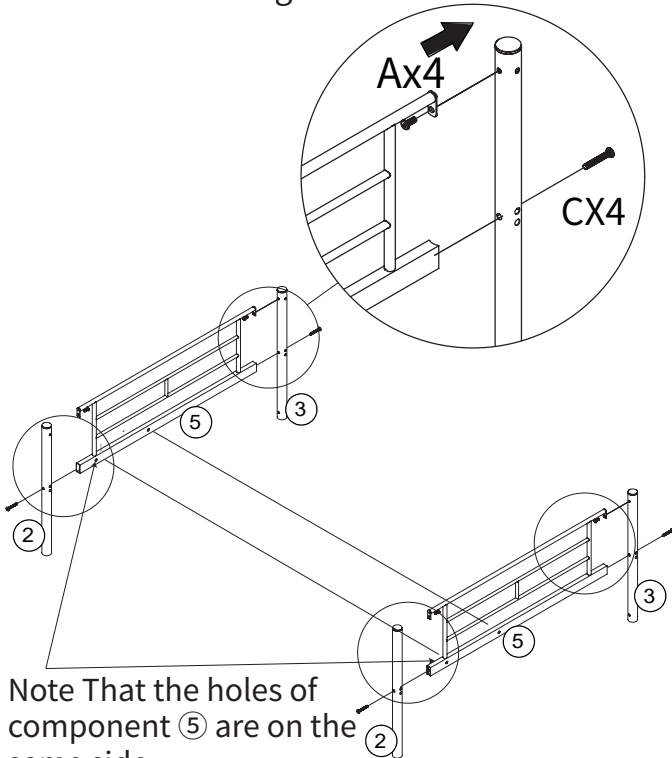

Note That the holes of component ⑤ are on the same side


A		M8x18	4
C		M8x55	4

The screw is not locked in this step

4



2 PERSON
ASSEMBLE

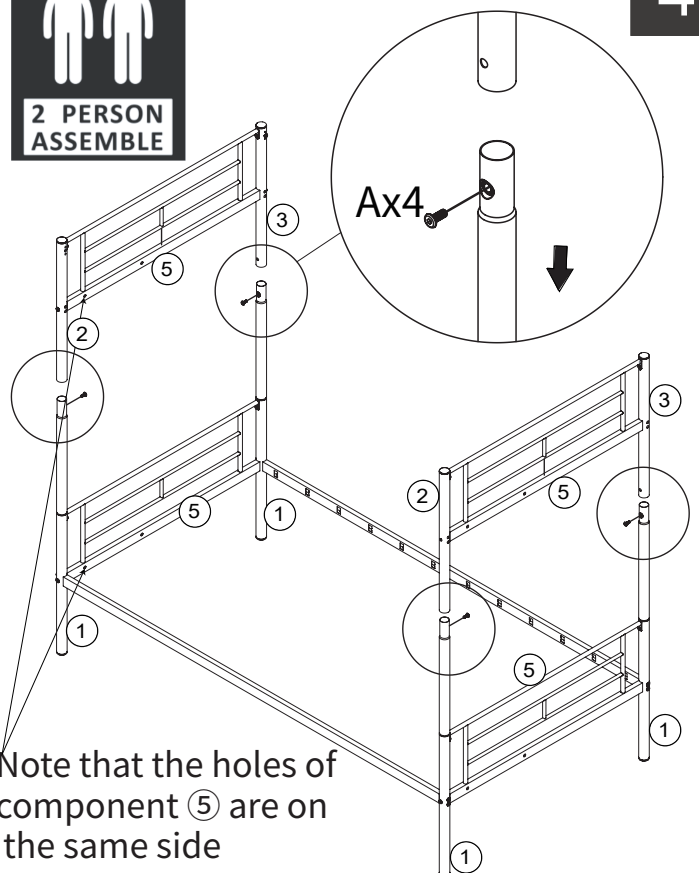


Note that the holes of component ⑤ are on the same side


A		M8x18	4
---	---	-------	---



5

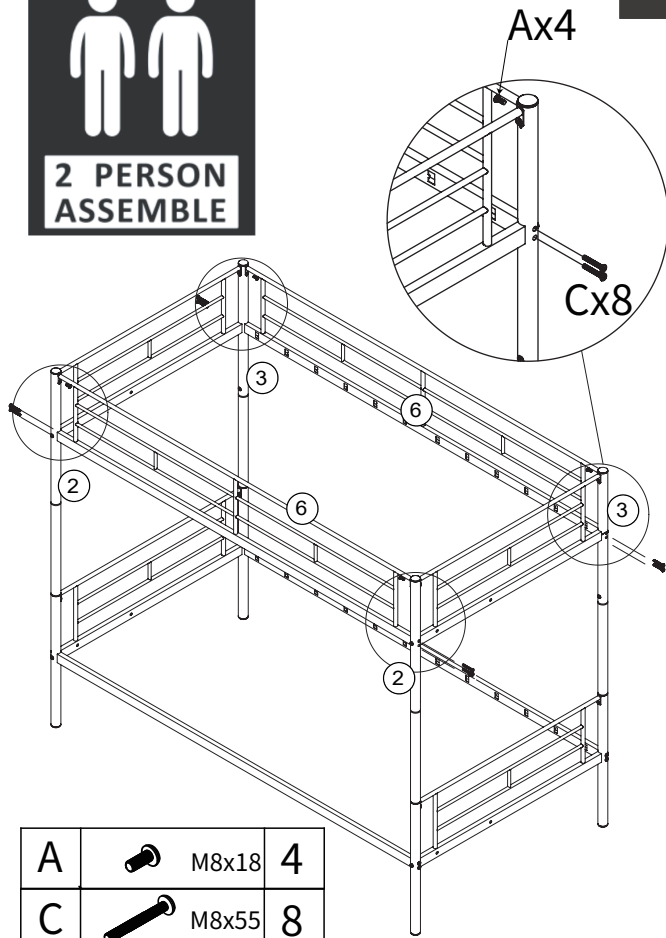


6

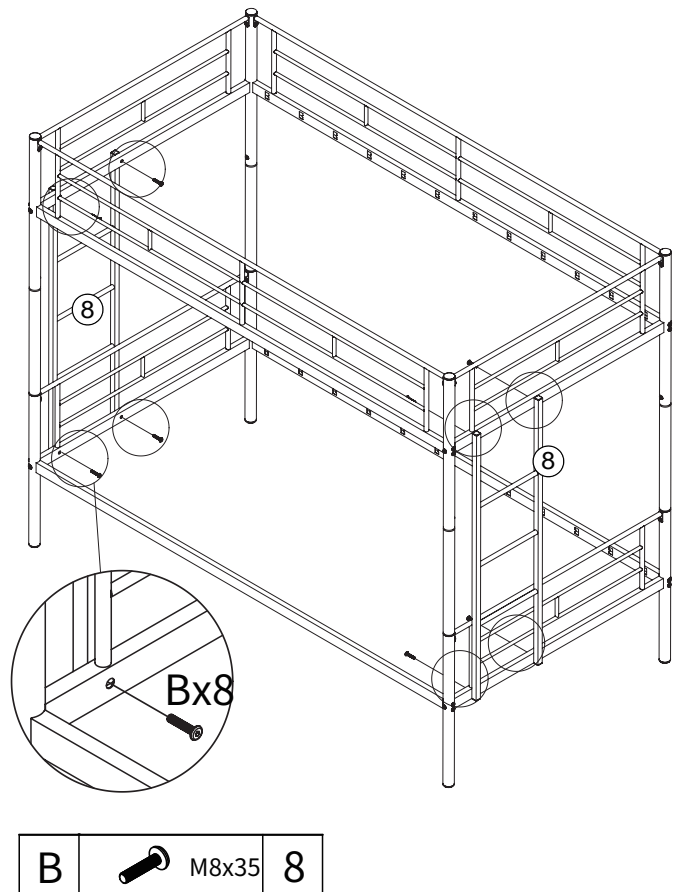


Note: Please push the slats to the bottom!


7

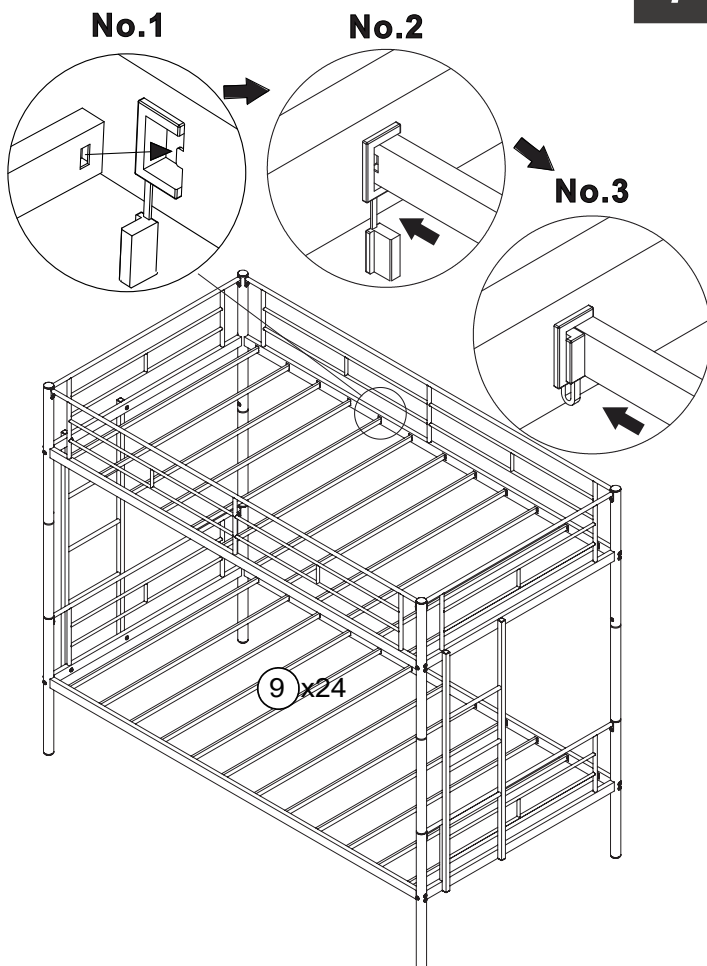

8



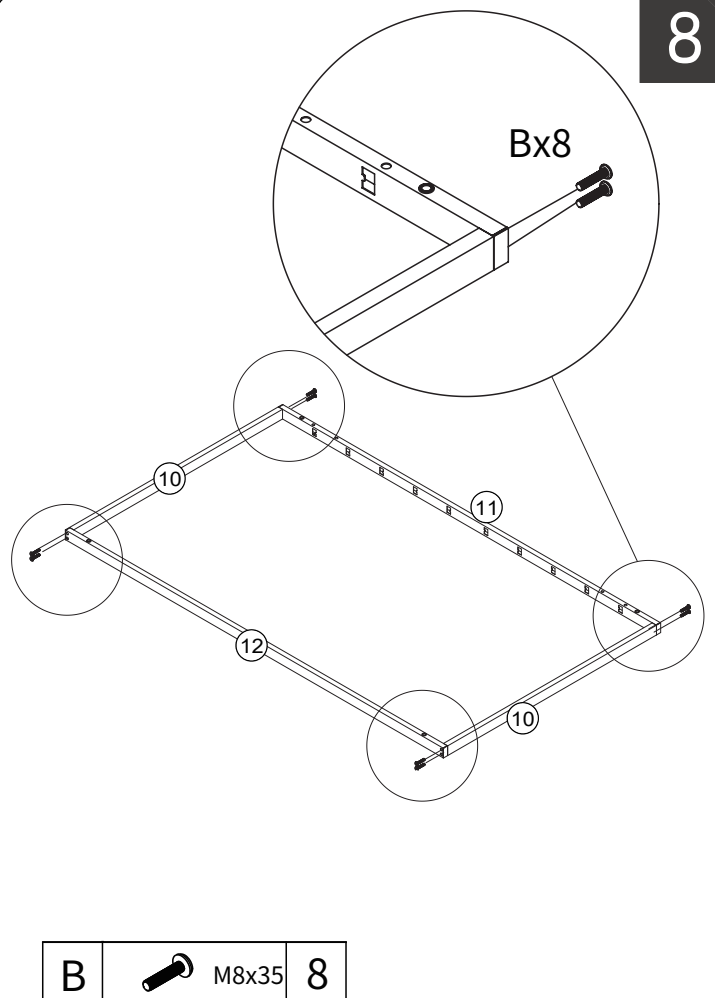


9

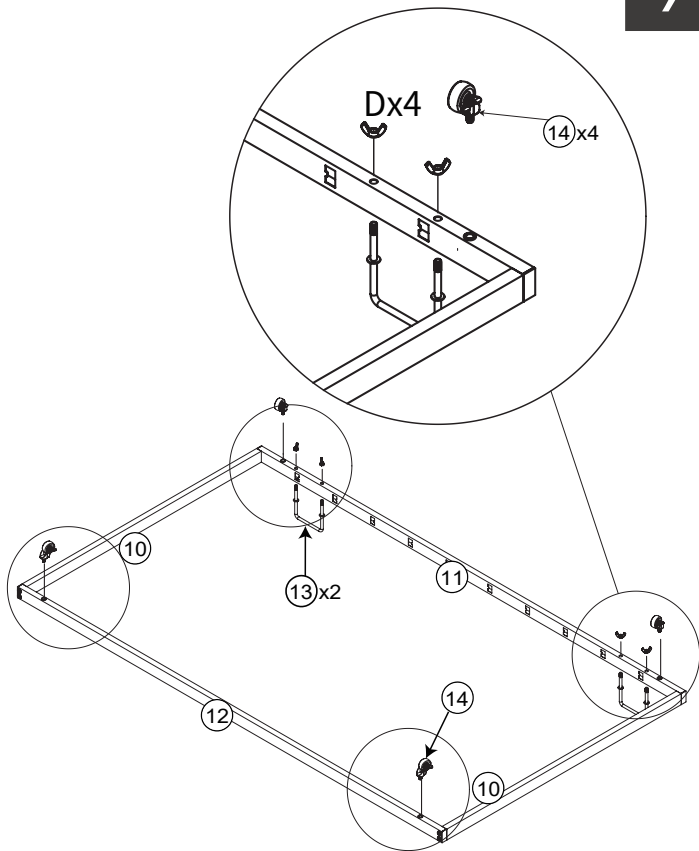

10

Note: Please push the slats to the bottom!

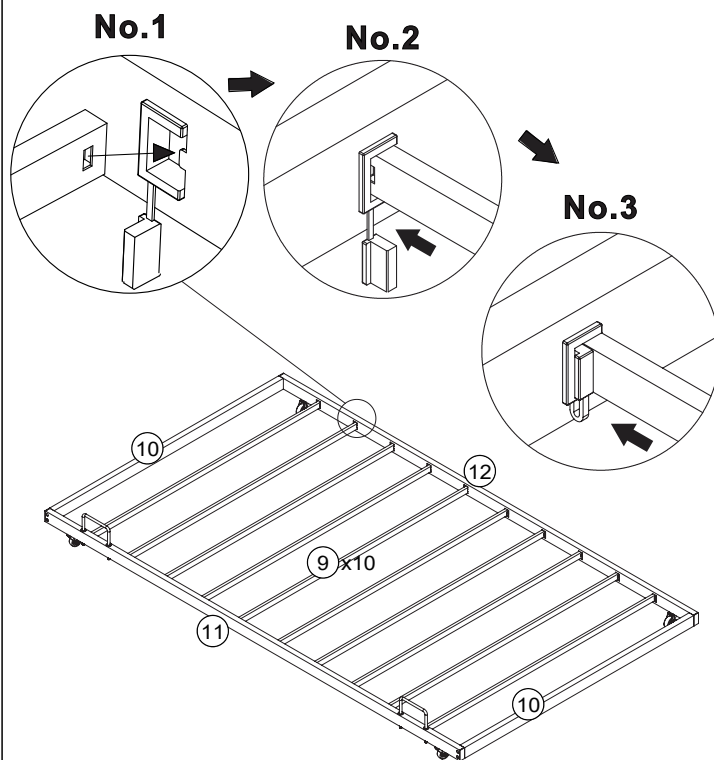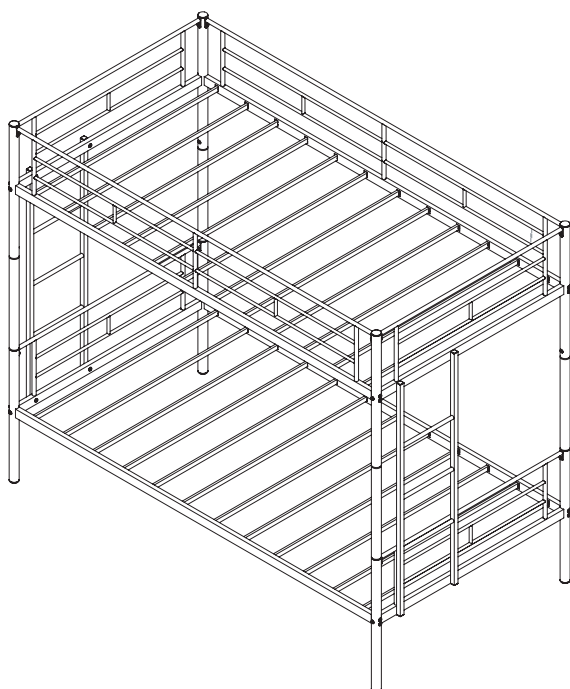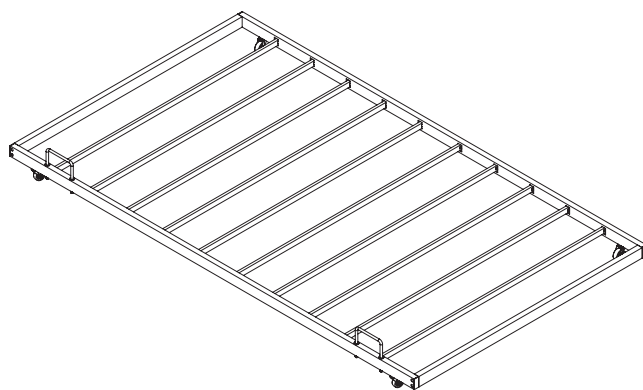

Installation Completed