



Assembly Instructions

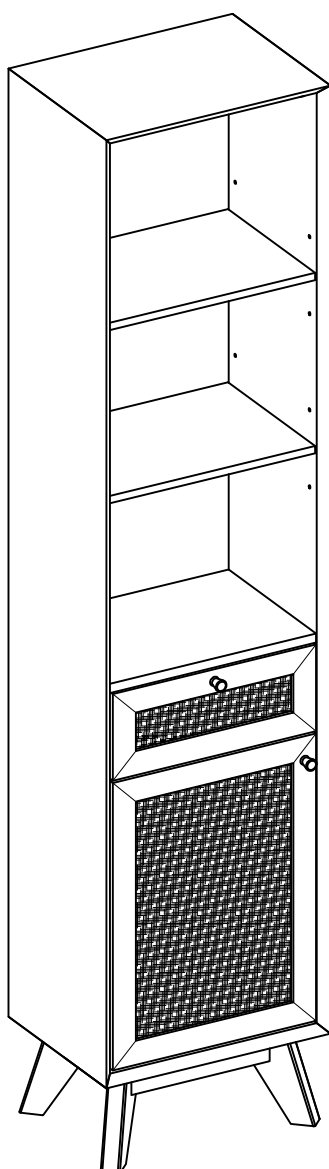


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

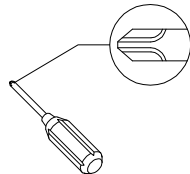

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

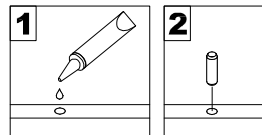


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

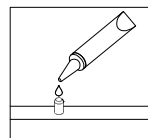


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

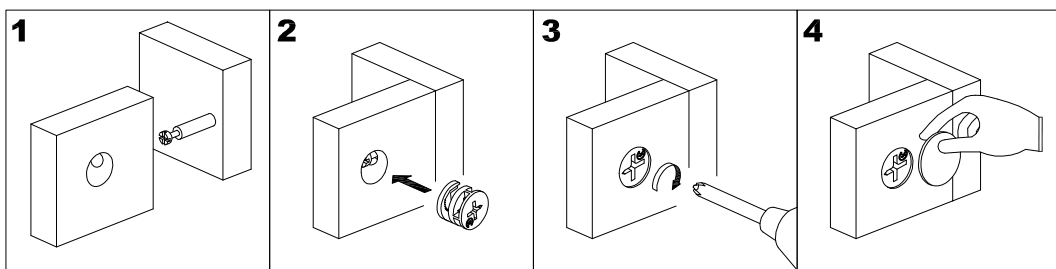


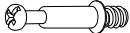


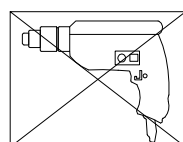





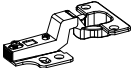

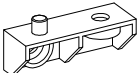



- VII. Power tools should not be used to assemble this product .

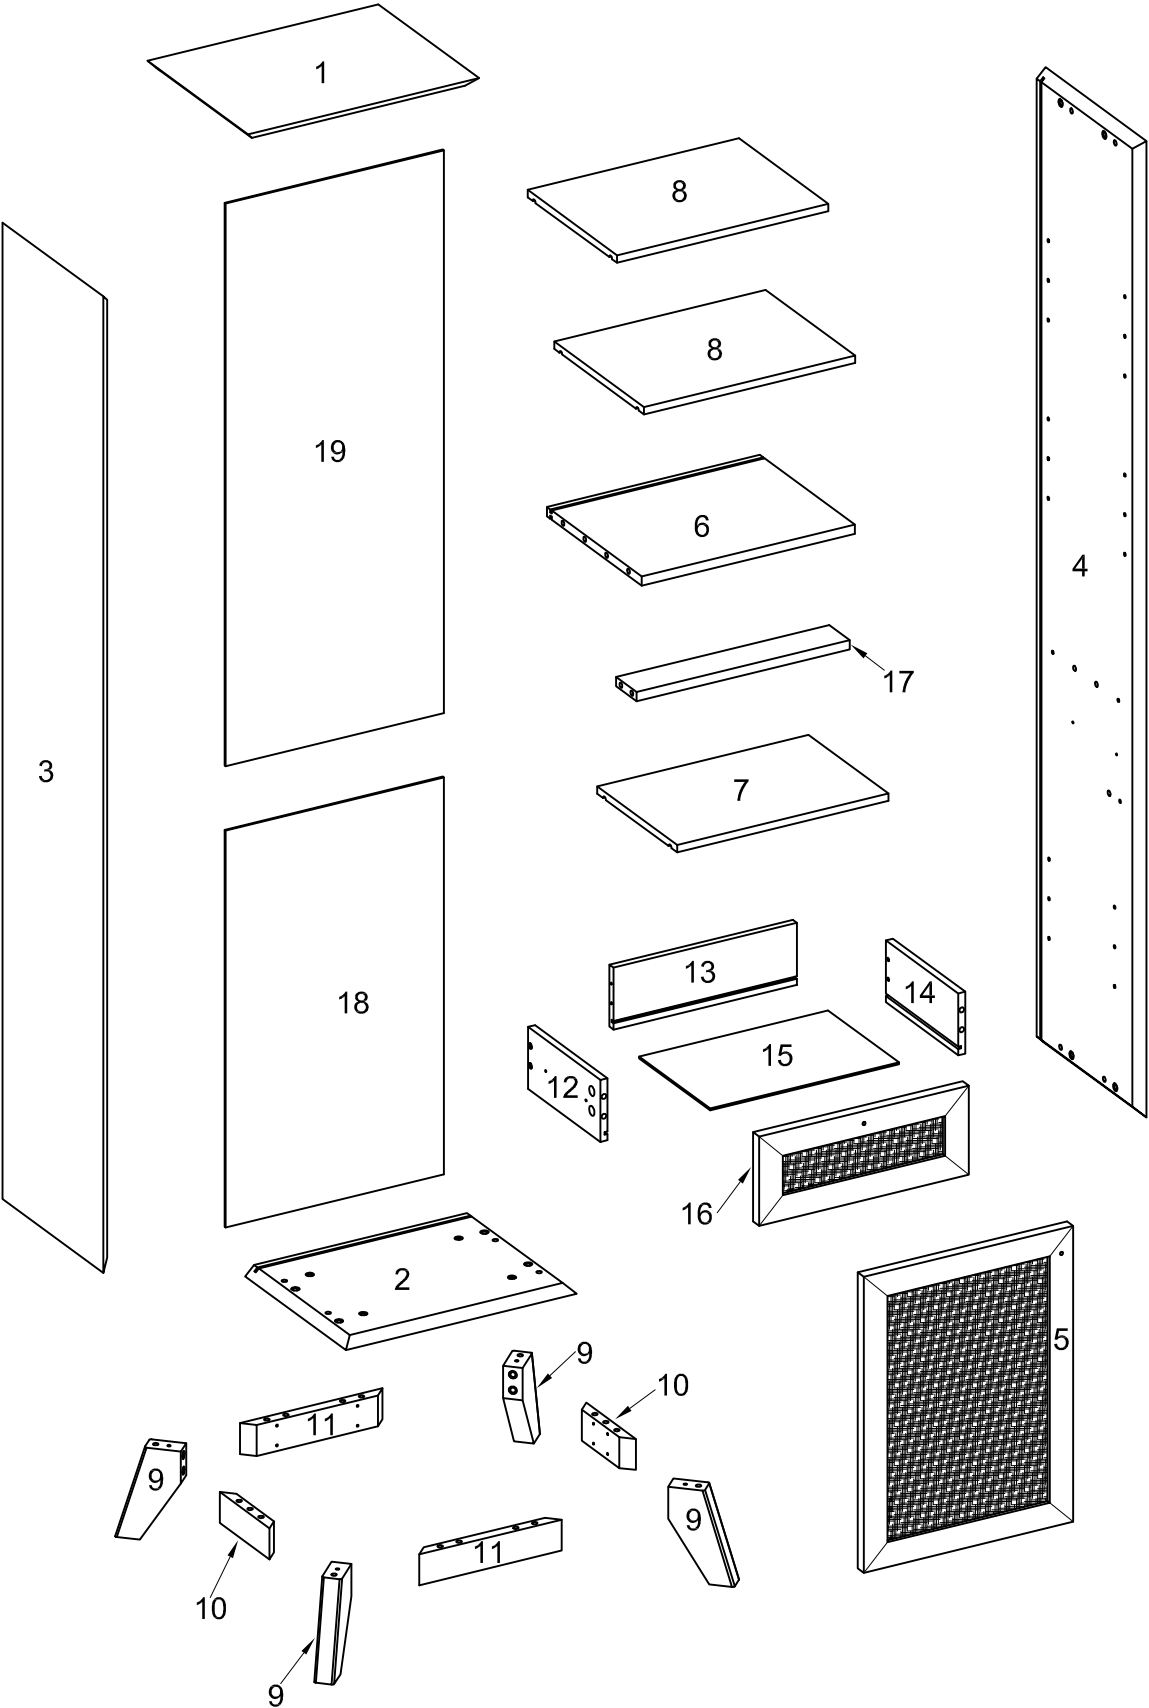


Parts List



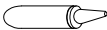







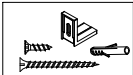
Hardware List

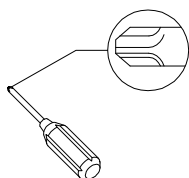
A		Ø8x30mm	Dowel	16 pcs
B		Ø6x35mm	Cam bolt	10 pcs
C		Ø15x11mm	Large Cam lock	6 pcs
D		Ø30mm	Cam cover	14 pcs
E			Glue	1 pc
F		Ø5x16mm	Shelf support pin	12 pcs
G		Ø4x25mm	Knob bolt	2 pcs
H			Knob	2 pcs
J			Plastic wedge	18 pcs
K		Ø3x17mm	Flat-head screw	18 pcs
L			Soft hinge	2 pcs
M		Ø3.5x14mm	Hinge screw	12 pcs
N			Connector	8 pcs
P		Ø6x13mm	Bolt	16 pcs
Q		M 4	Allen Wrench	1 pc
R			Angle iron	4 pcs



Philips head screwdriver required for assembly
(not included)



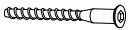
Hardware List

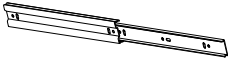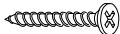S		Ø6x50mm	Screw	4 pcs
T		Ø15x9mm	Small cam lock	4 pcs
U		Ø6x30mm	Bolt	8 pcs
V		Ø3.5x12mm	Screw	8 pcs
W			Drawer slider	1 set
X		Ø4x38mm	Screw	4 pcs
Y		Ø6x55mm	Bolt	8 pcs
Z		Ø5x14mm	Screw	16 pcs
AA		Tipping Restraint Hardware		2 sets


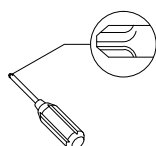


Philips head screwdriver required for assembly
(not included)


Step 1

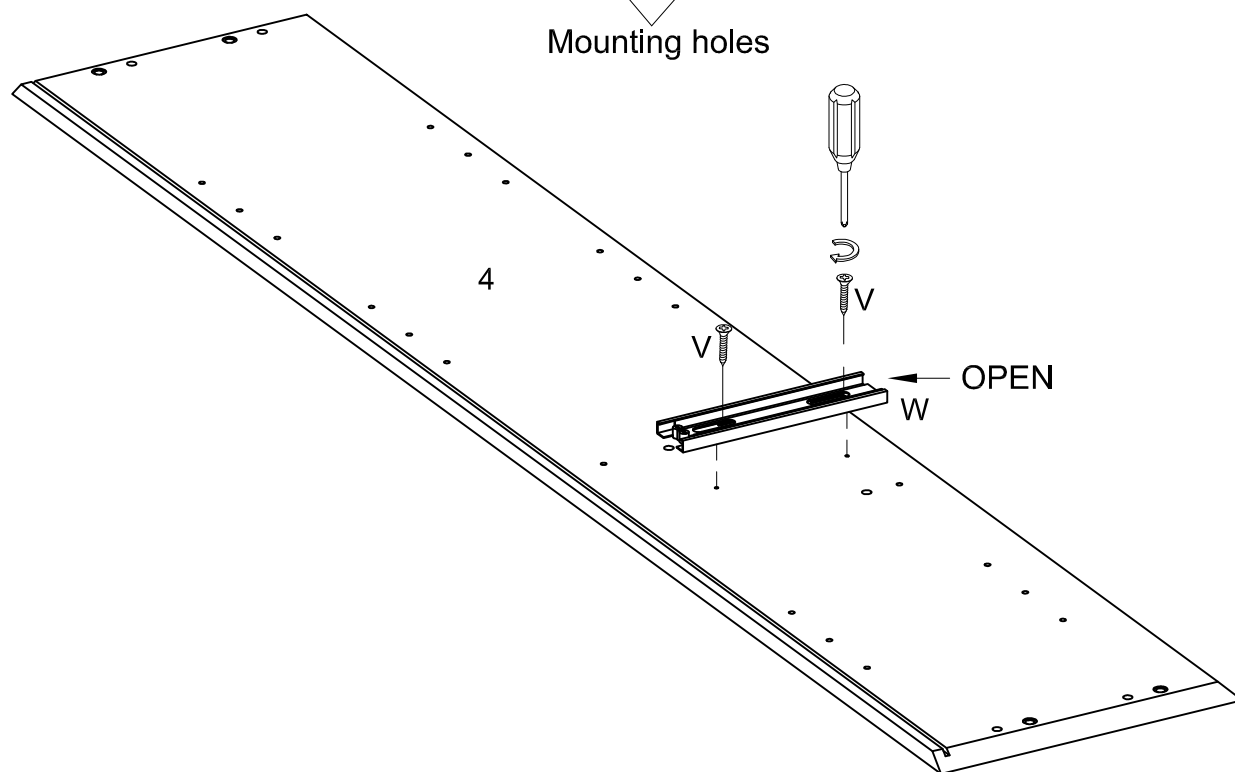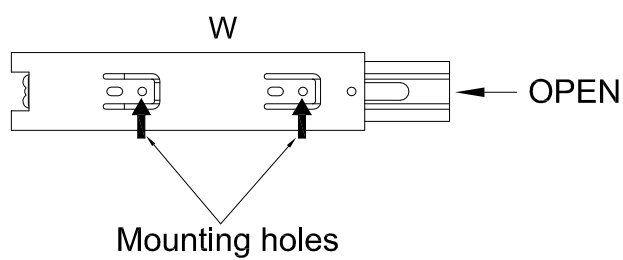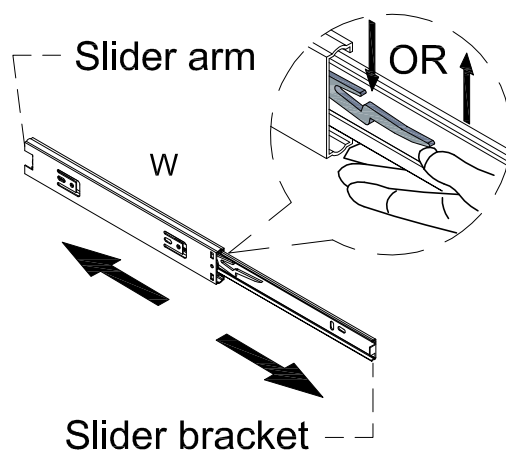


Step 2

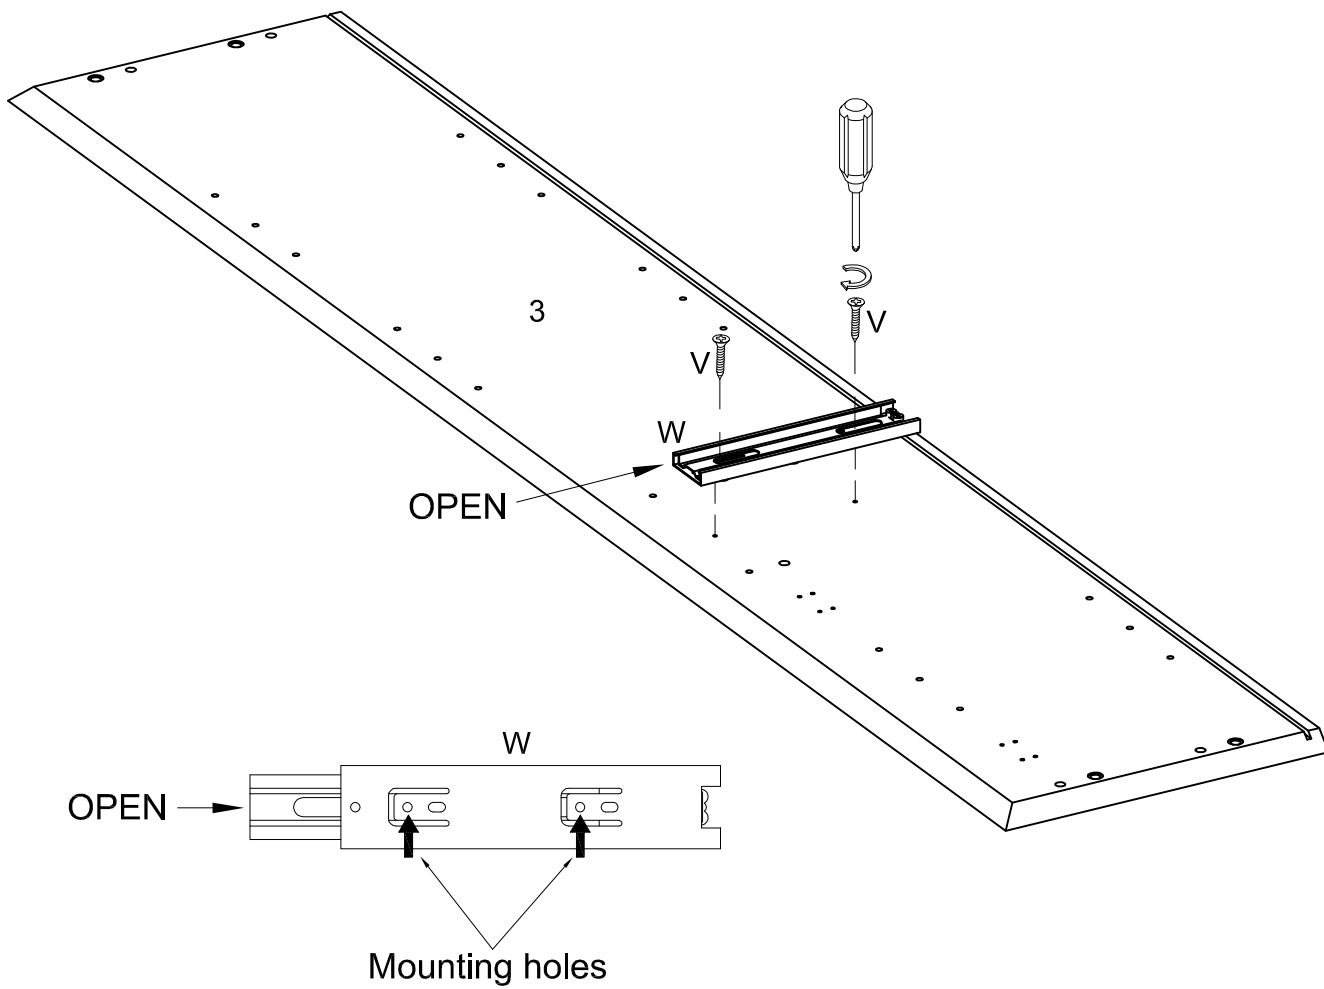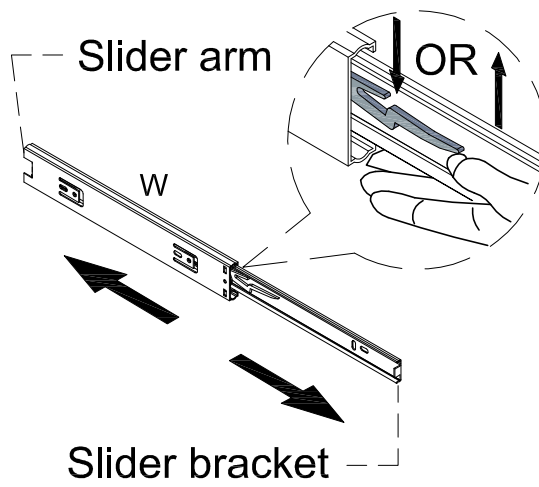



Step 3

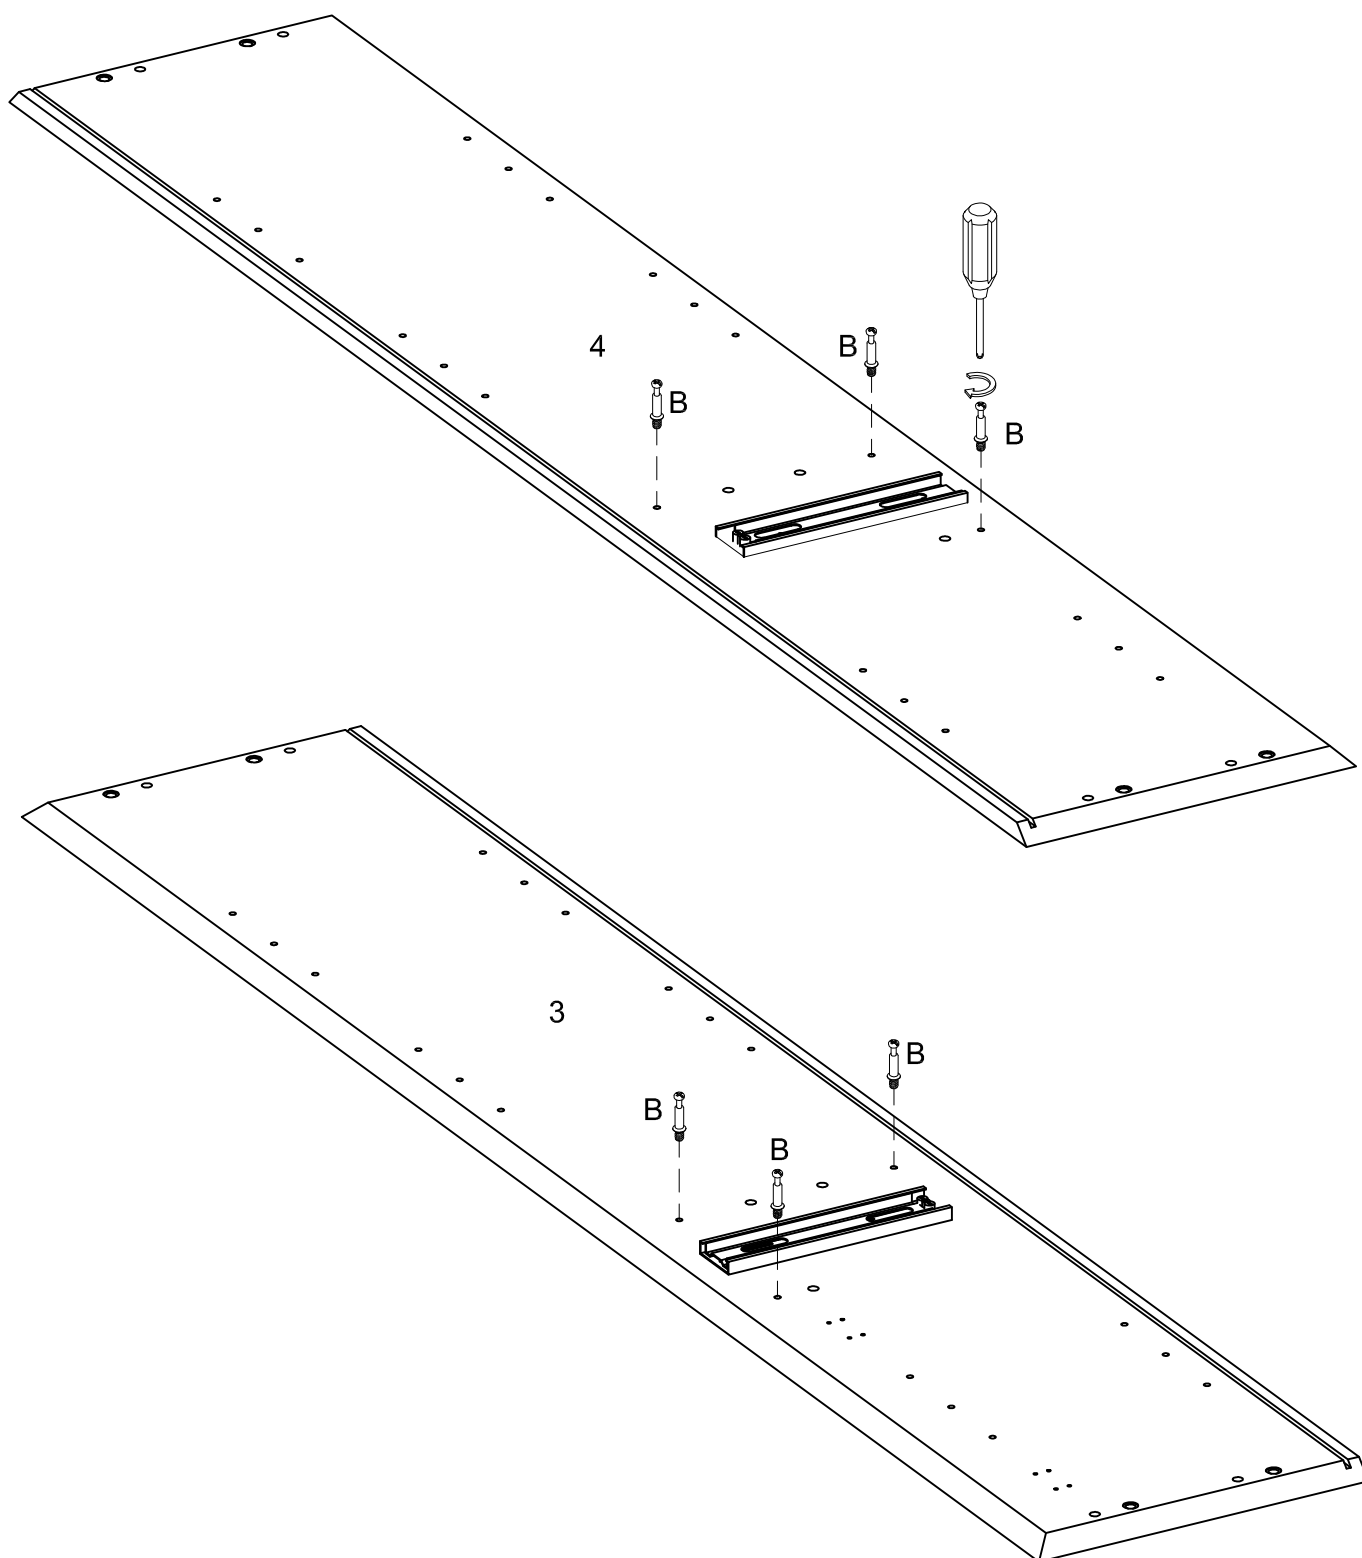



Step 4

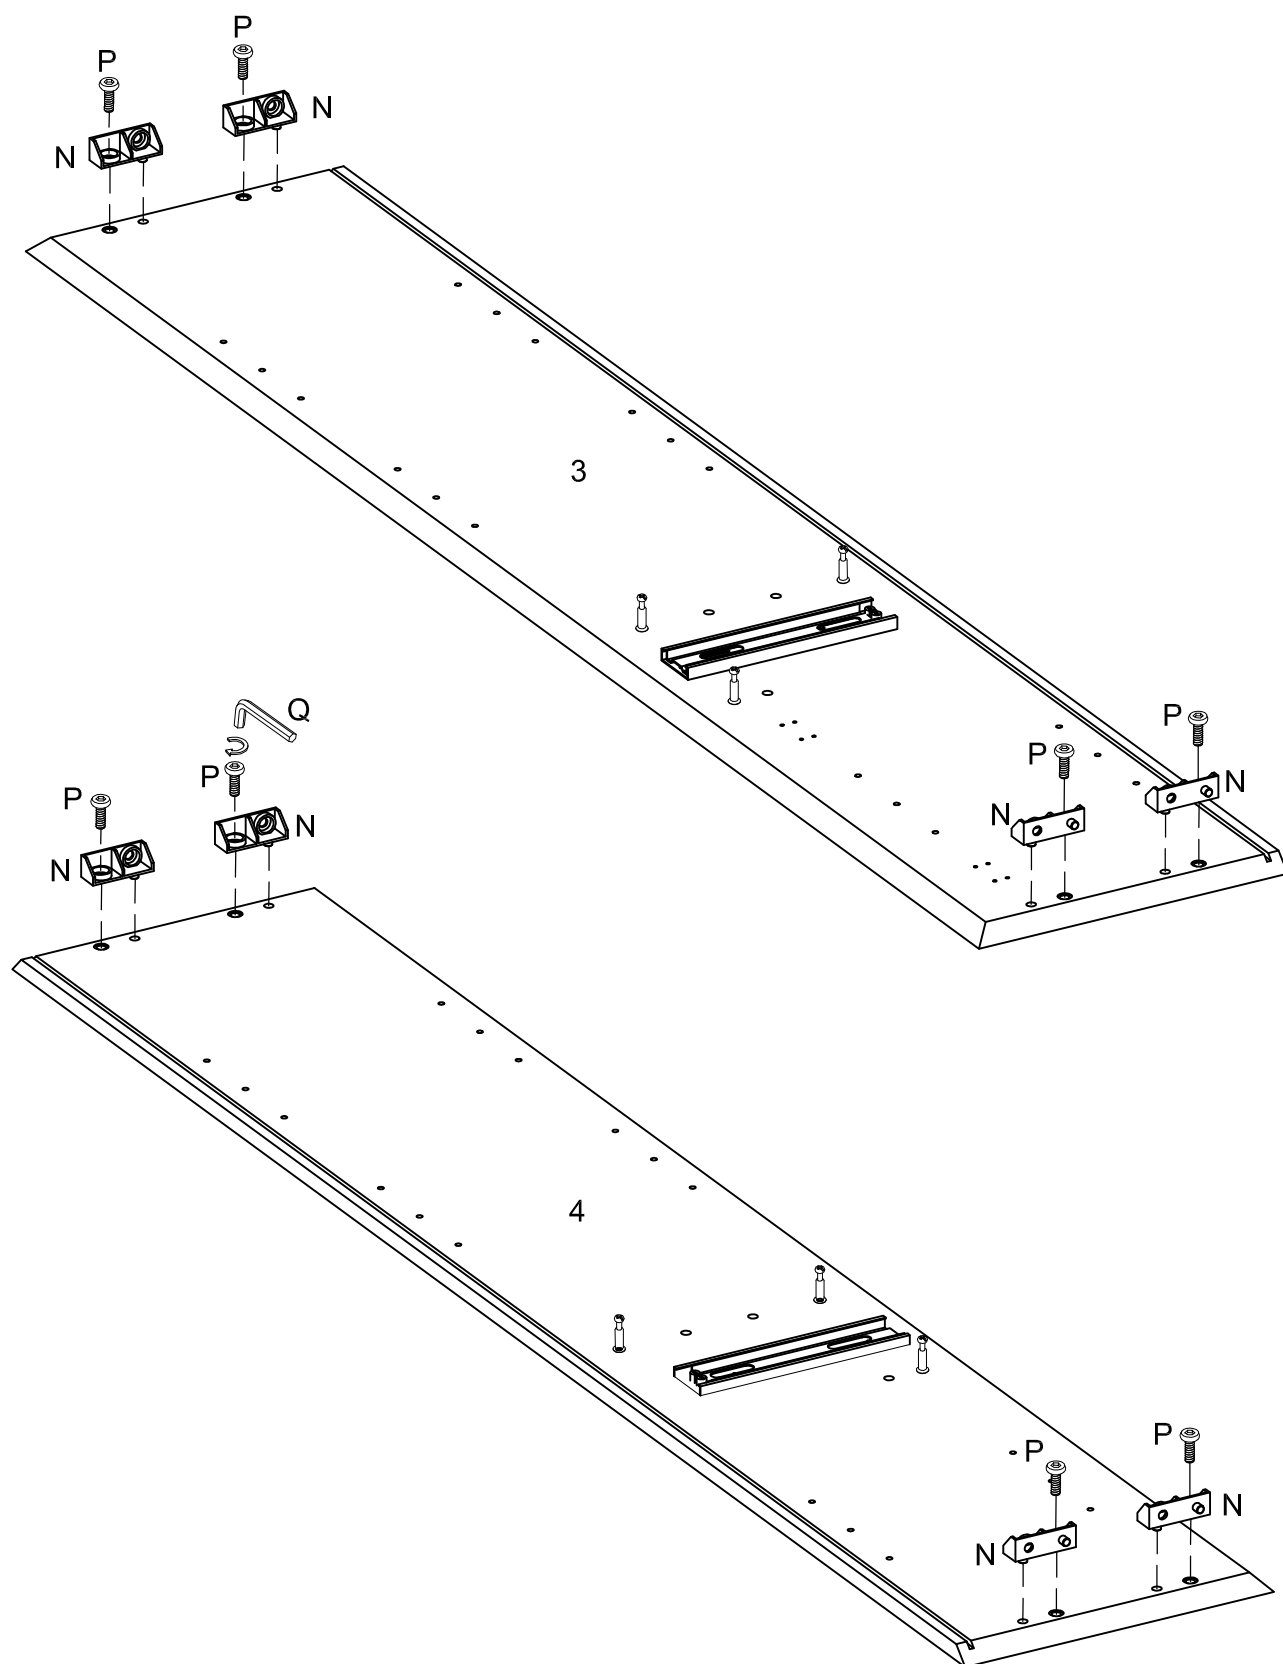


Step 5

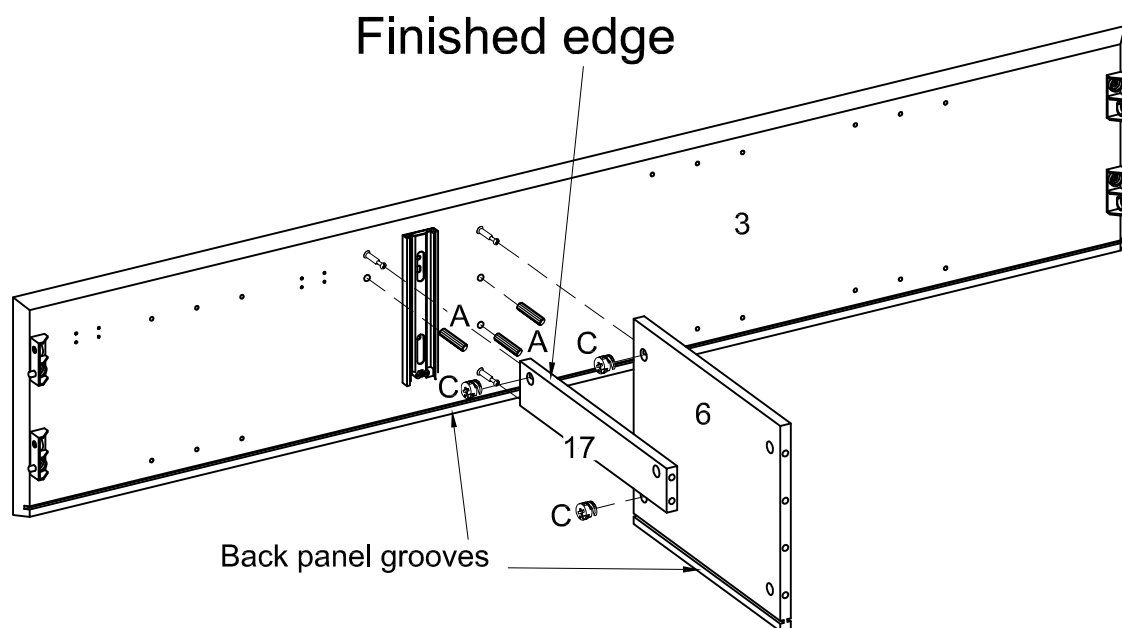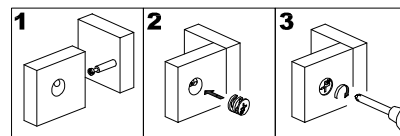


Step 6

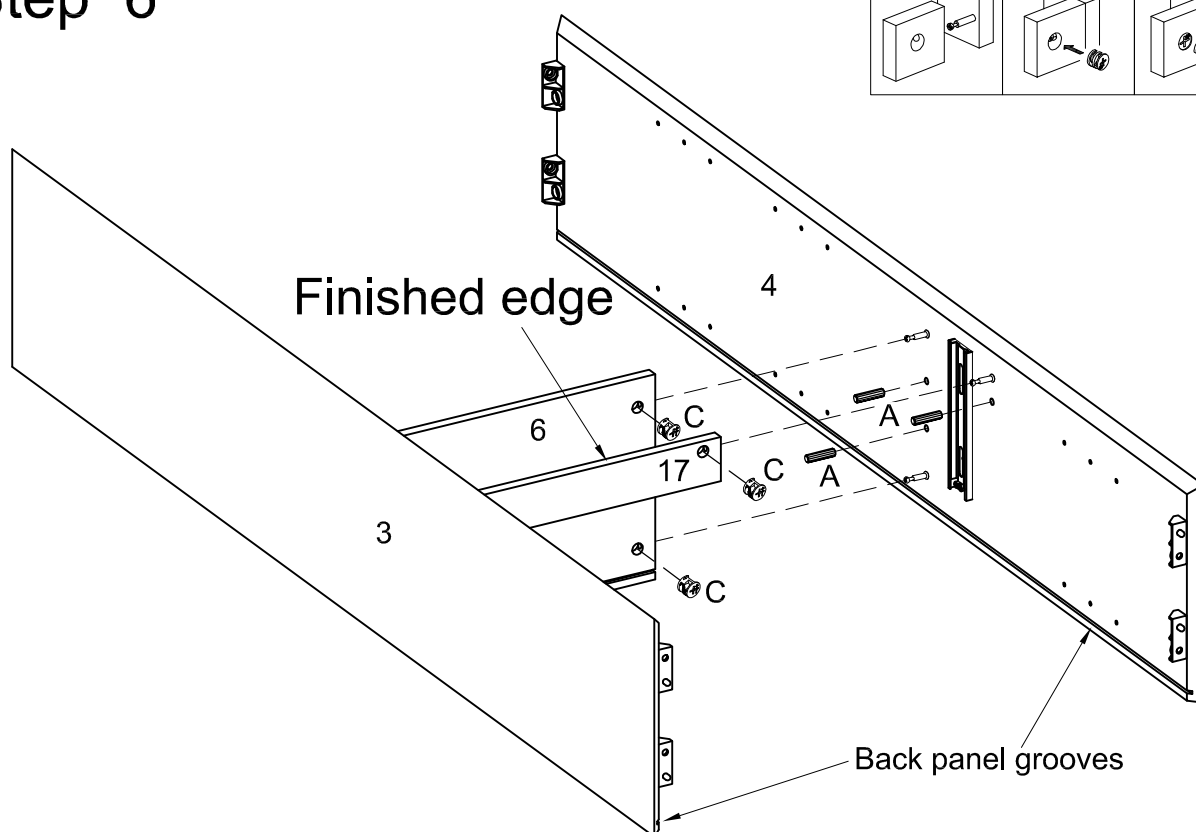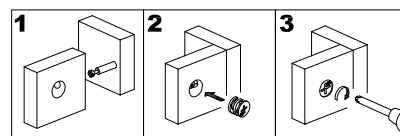

Step 7


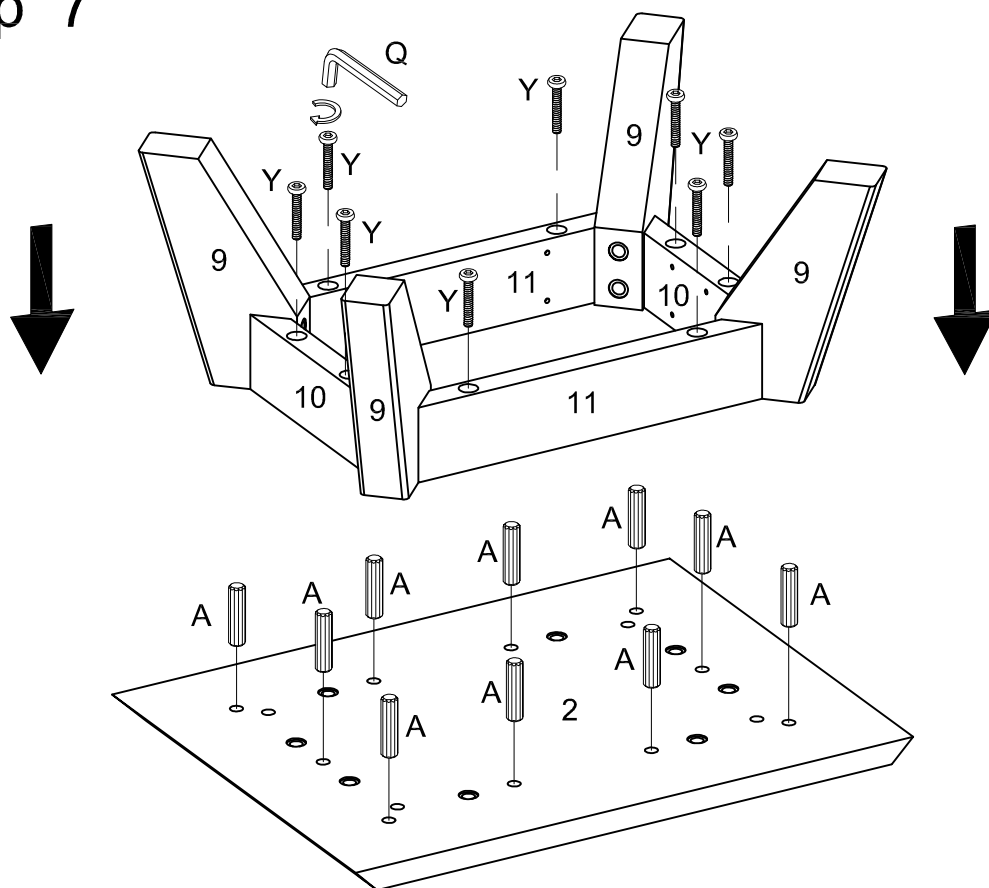


Step 8

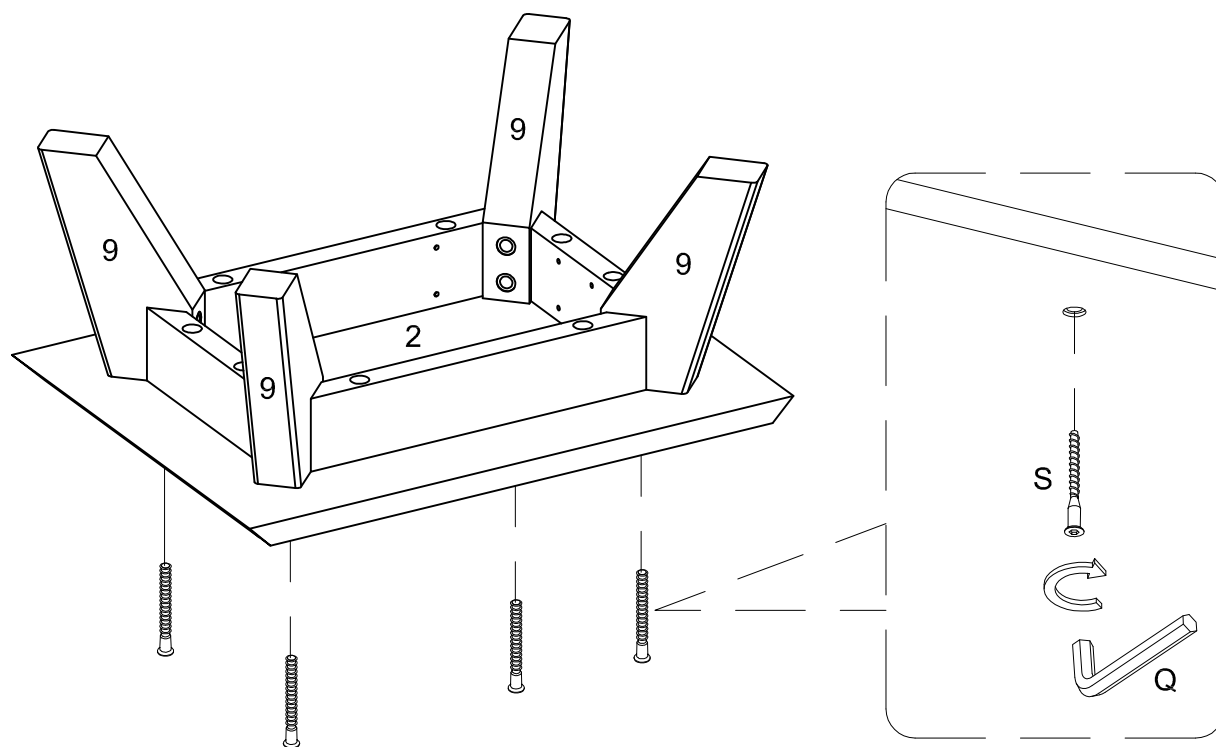


Step 9


Note: Do not over tighten the bolts

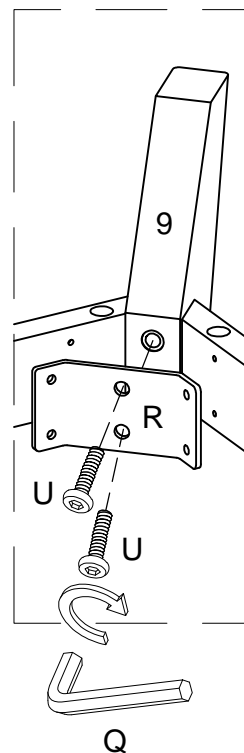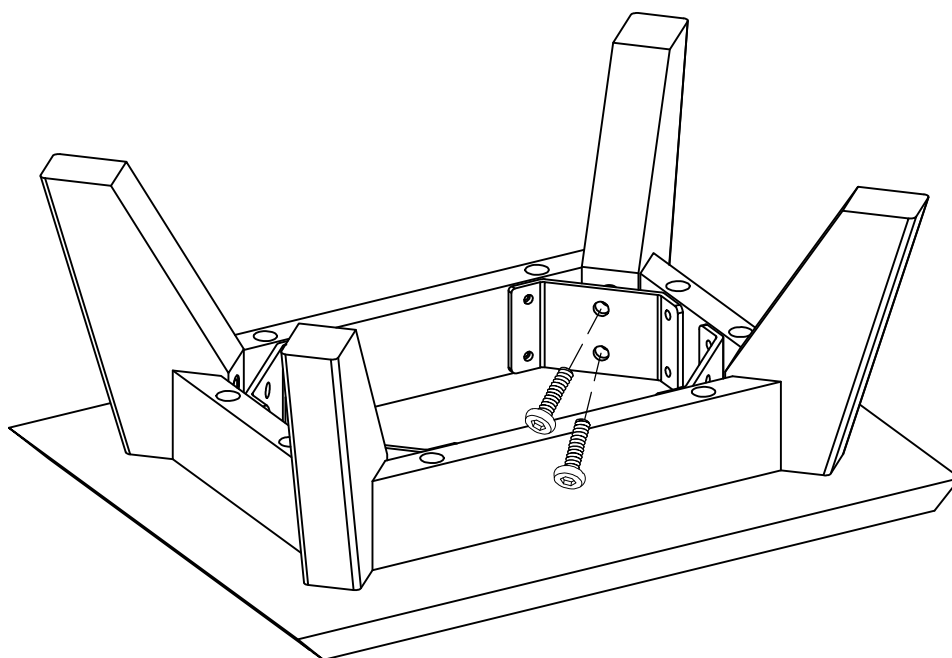


Step 10

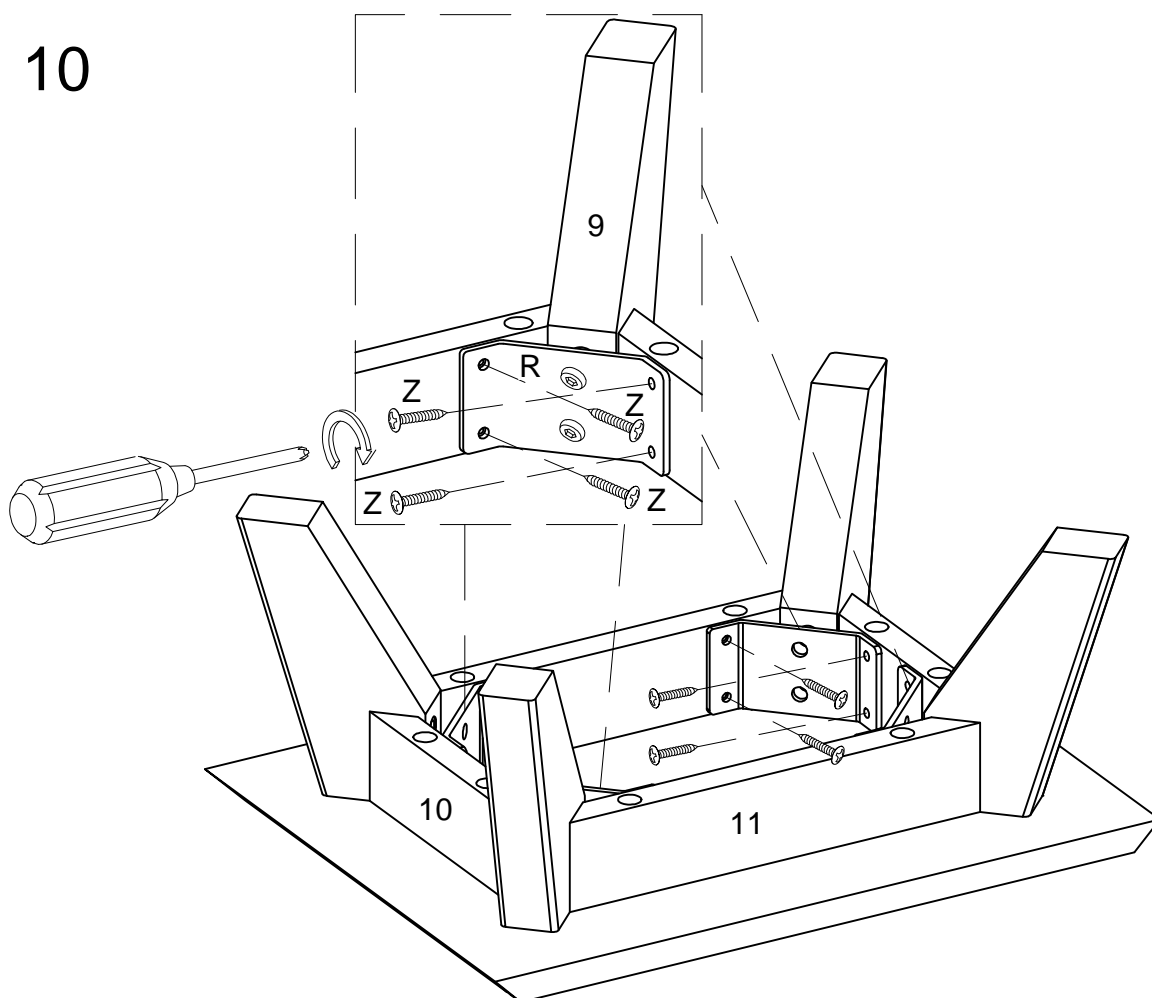


Step 11

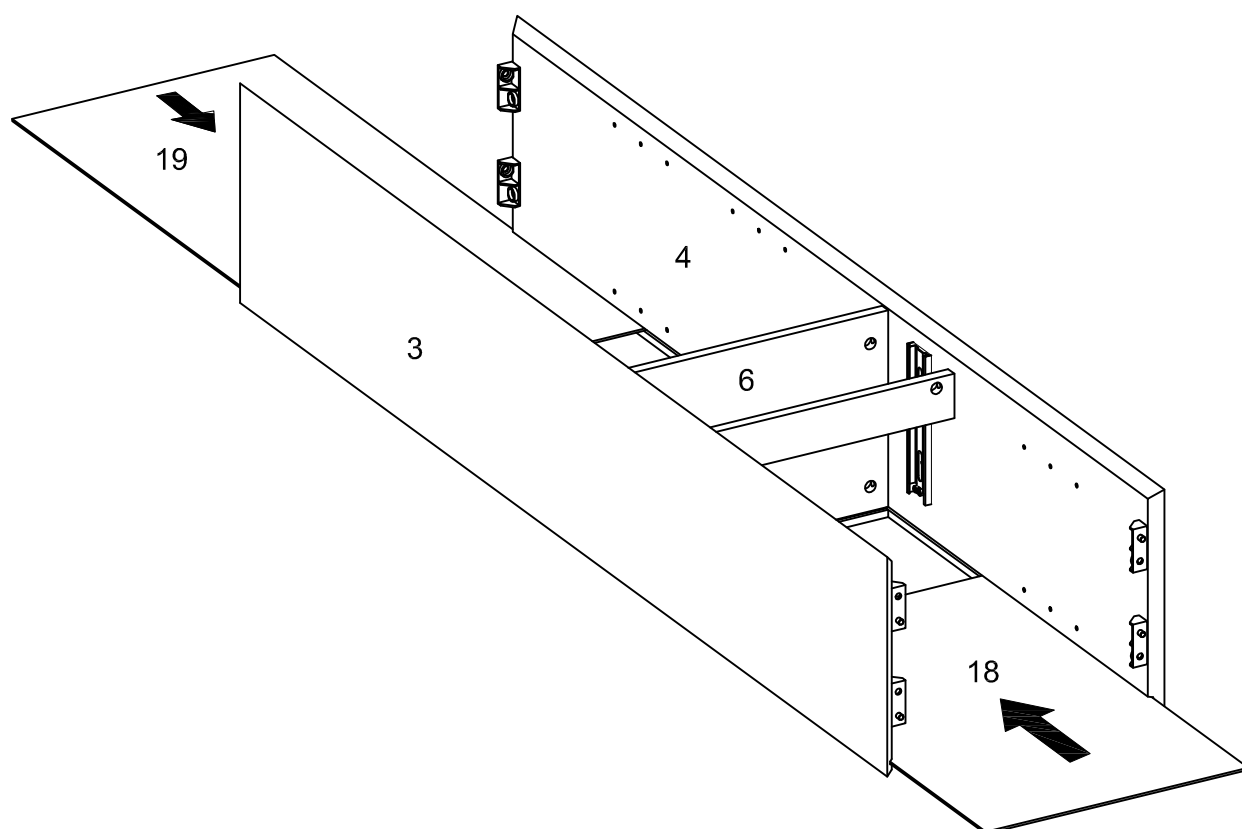


Step 12

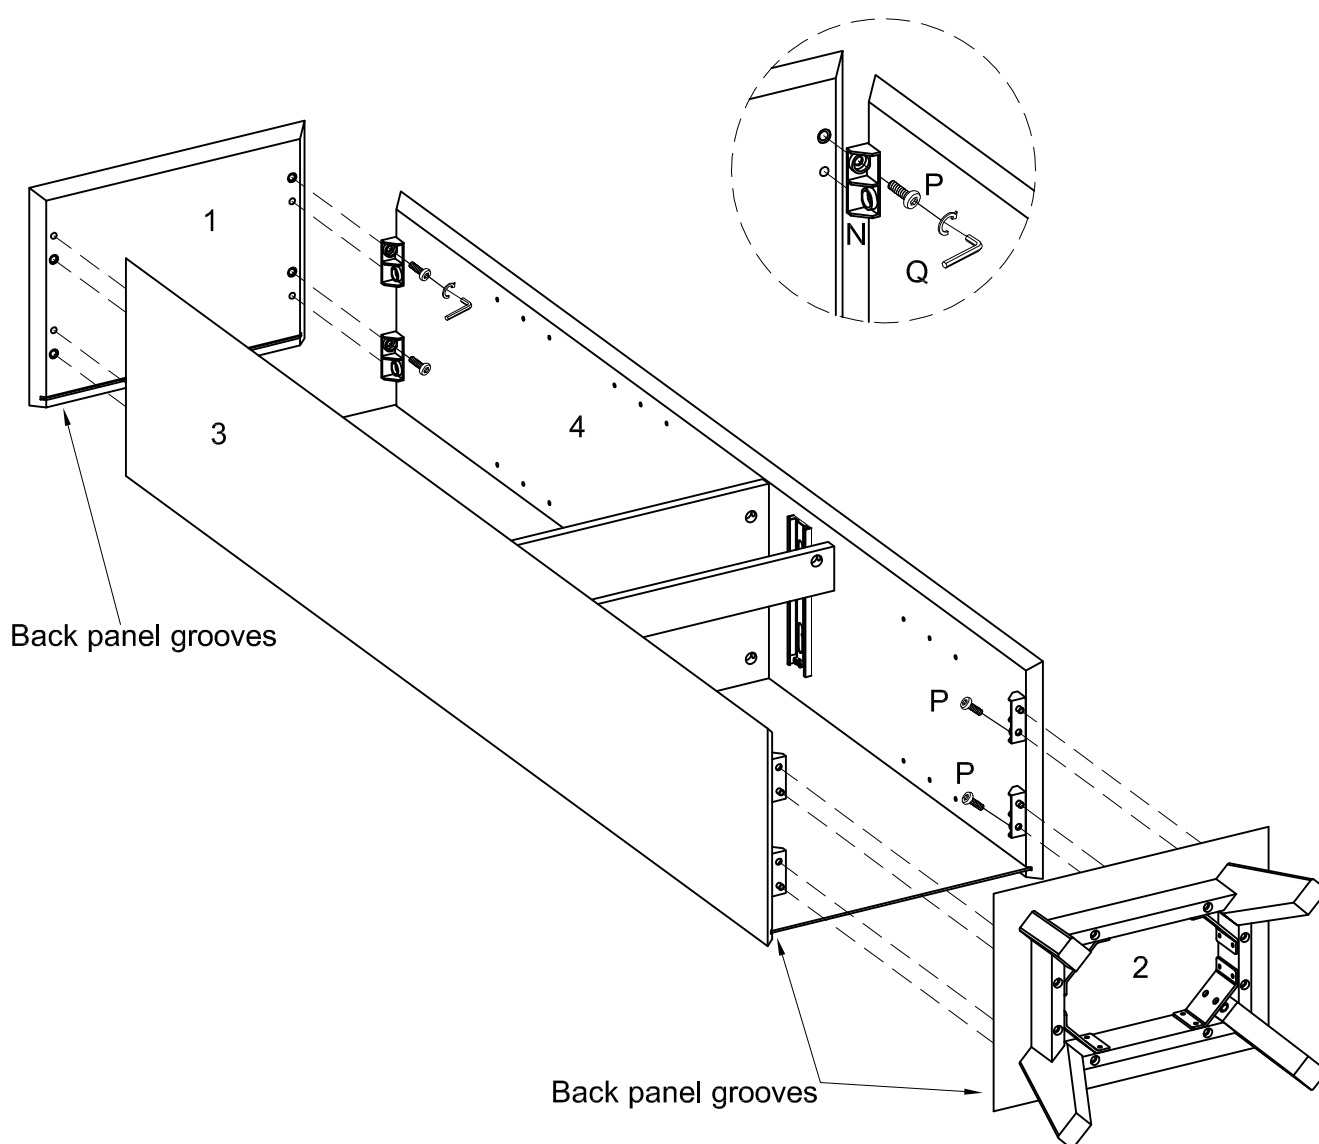


Step 13

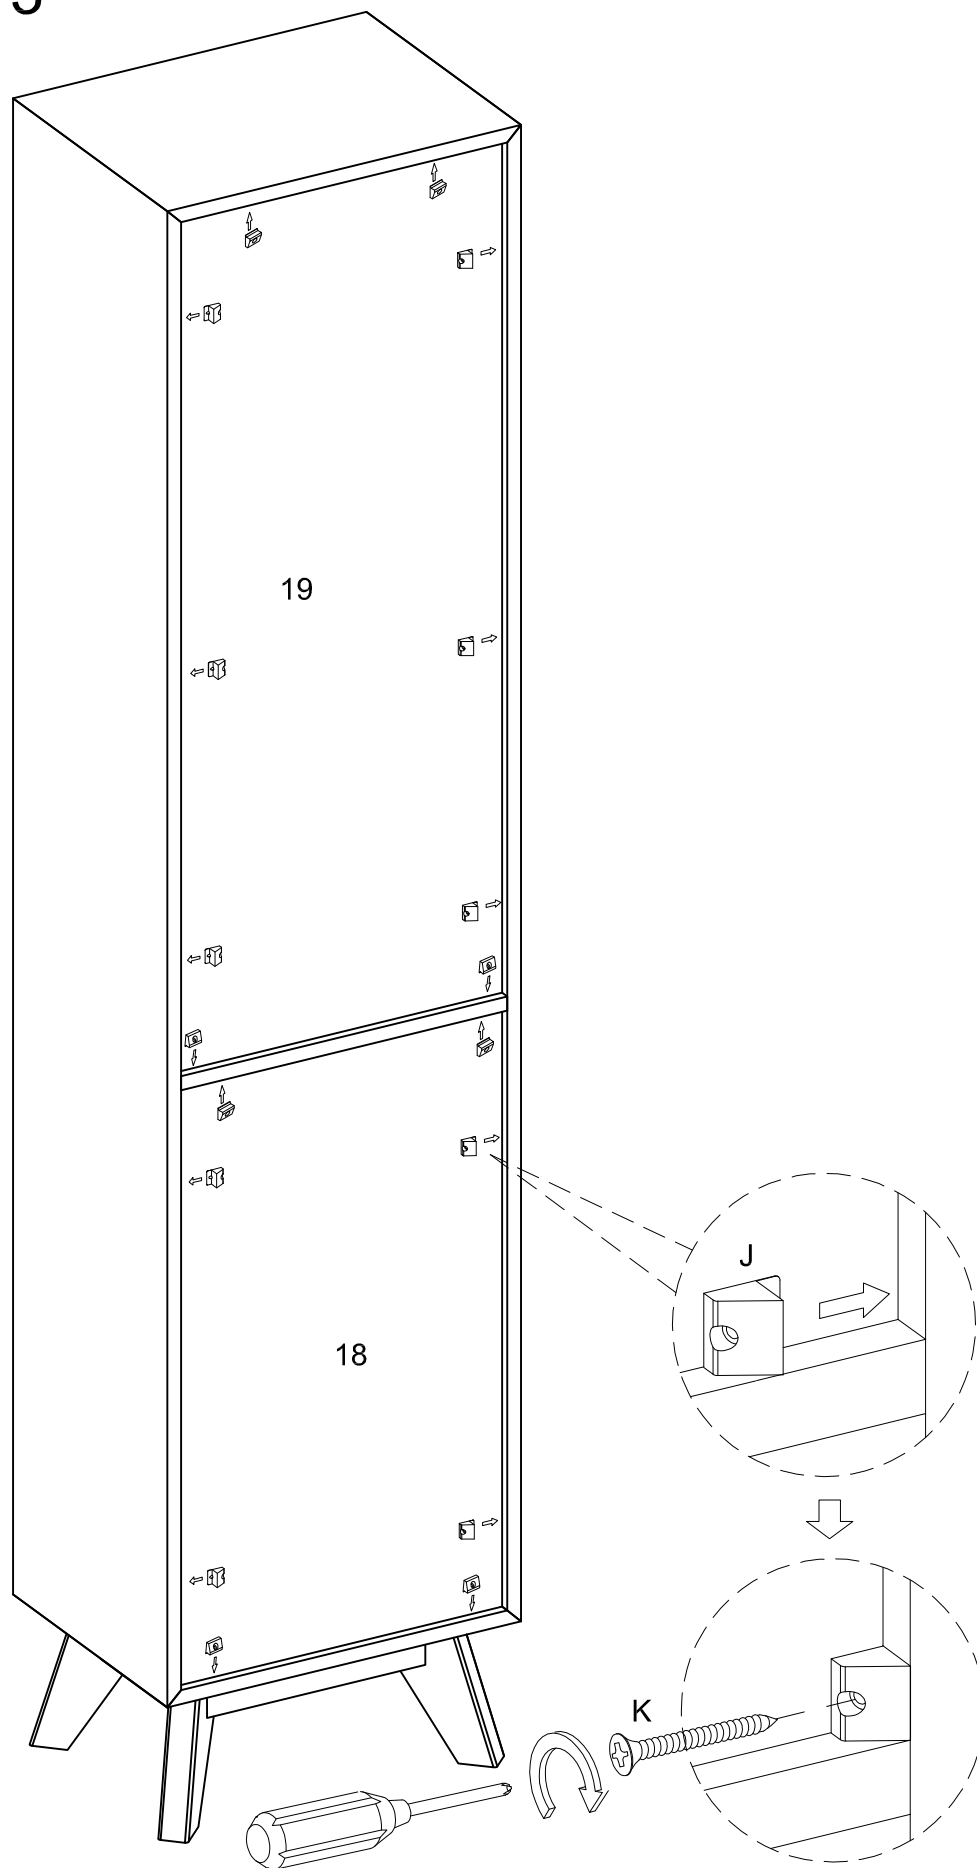


Step 14

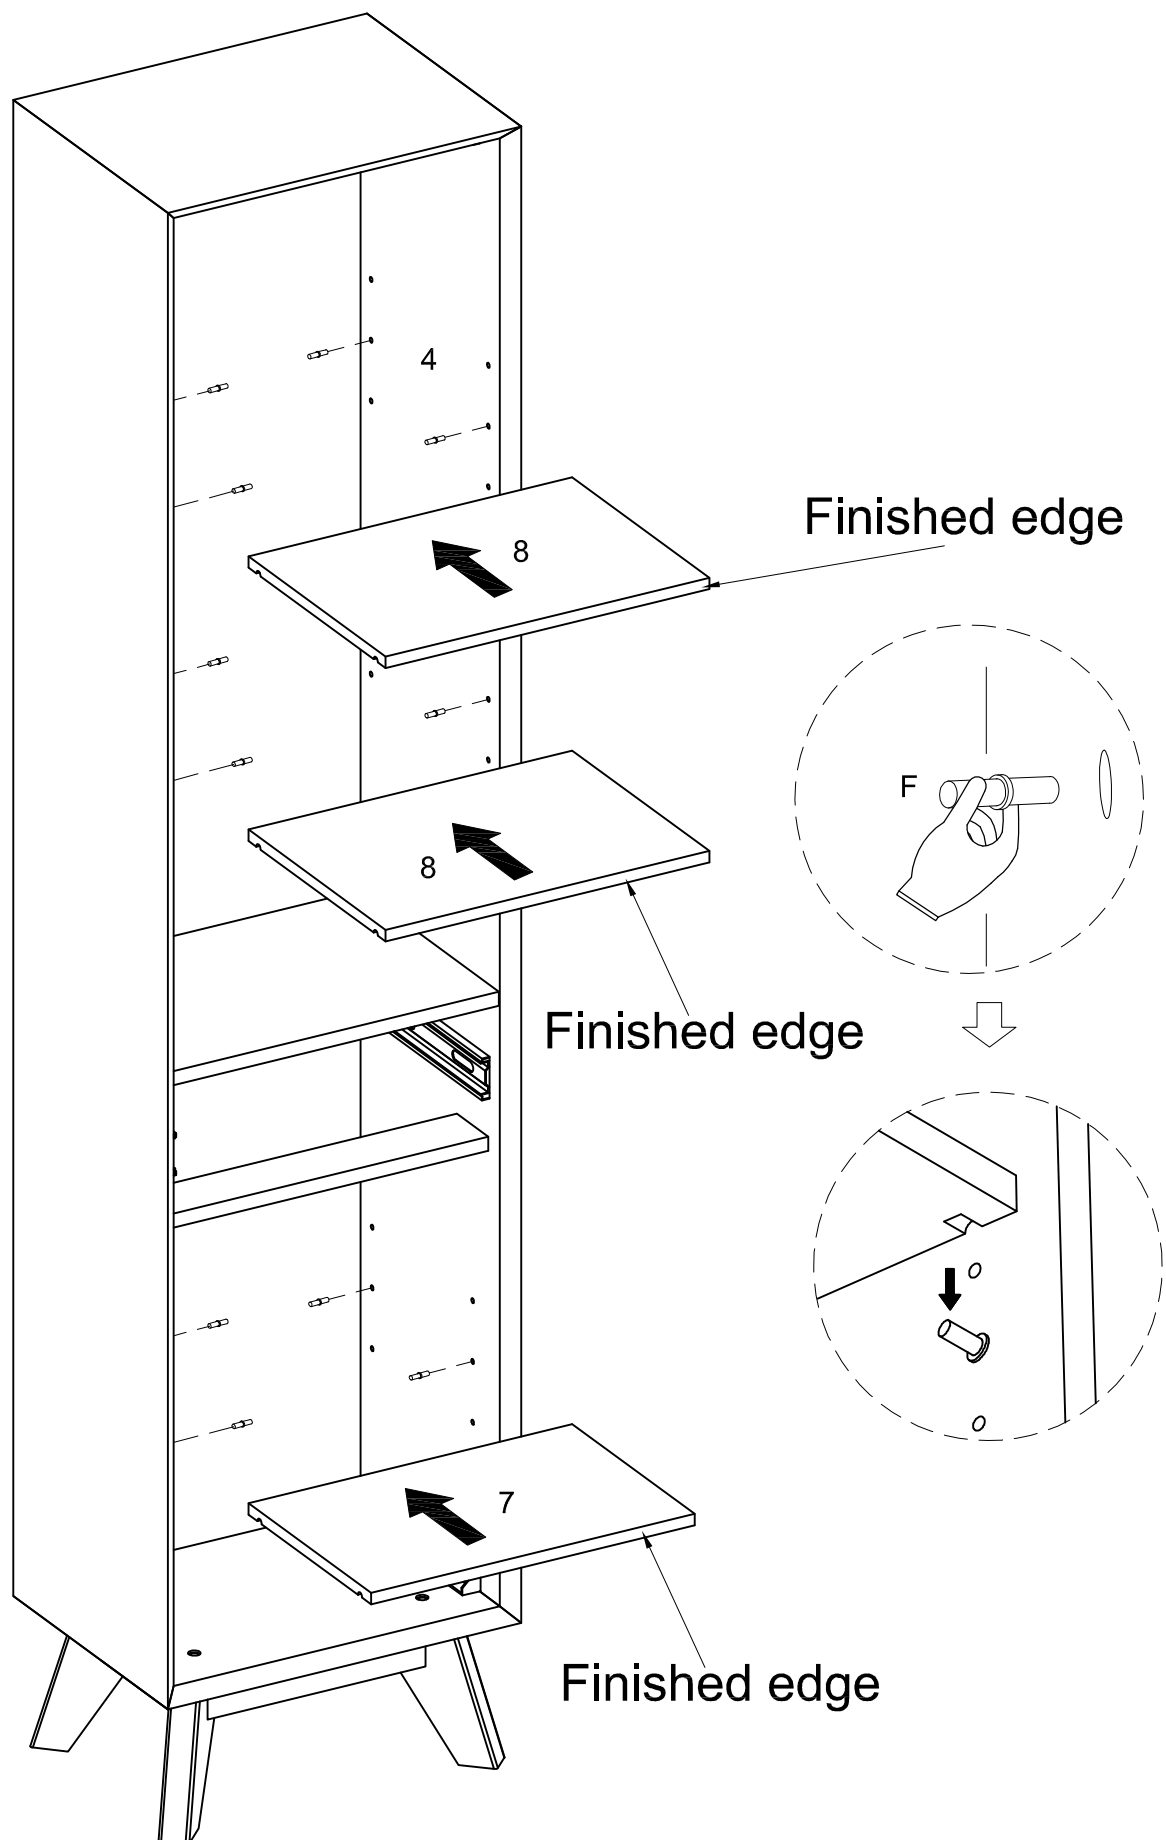




Step 15

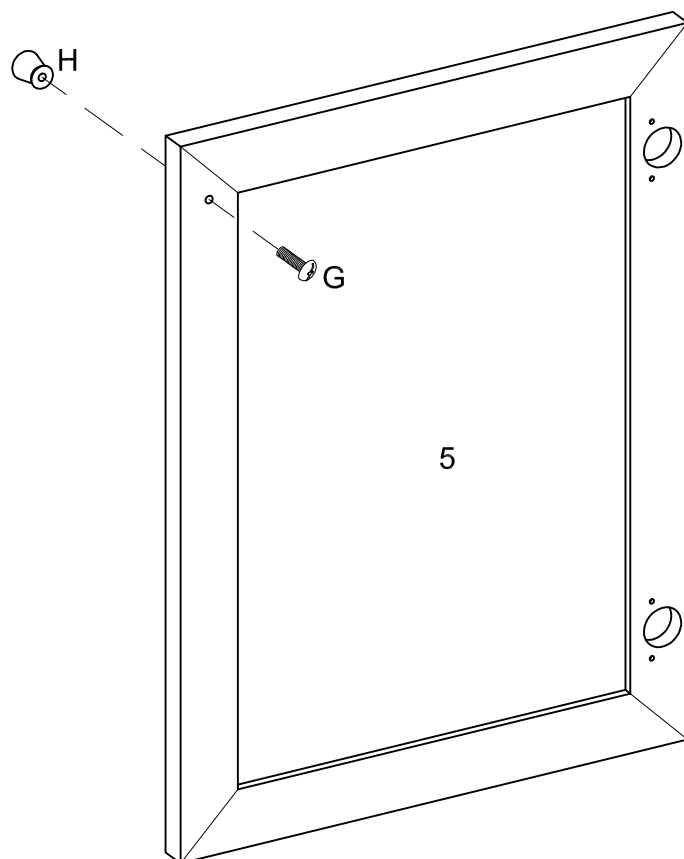


Step 16

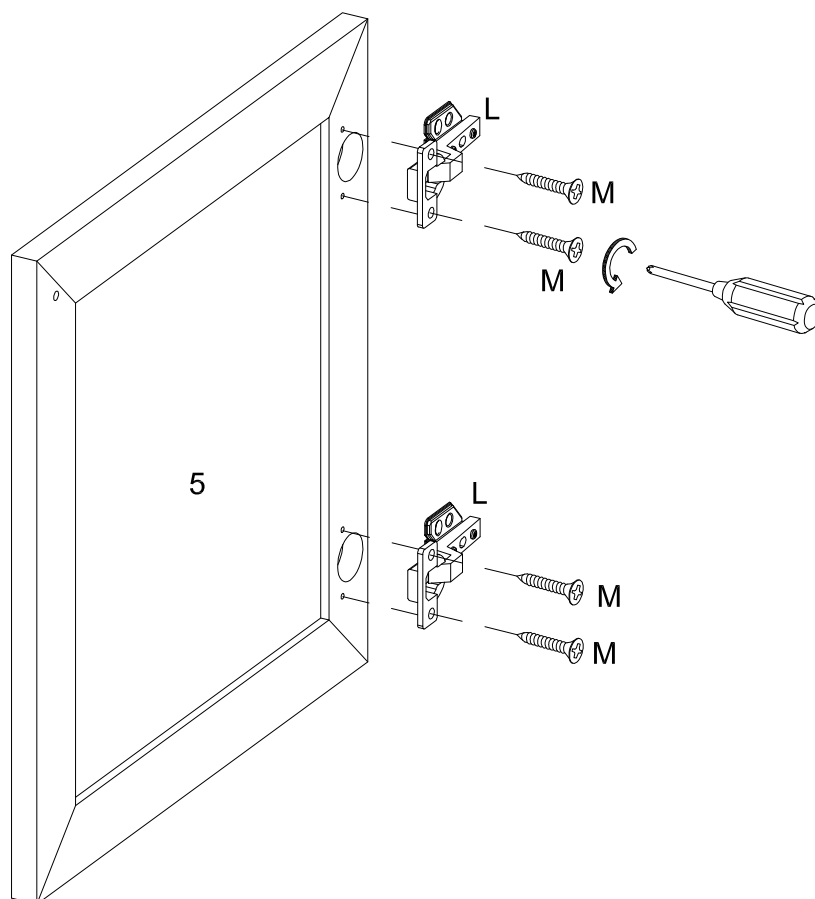


Step 17

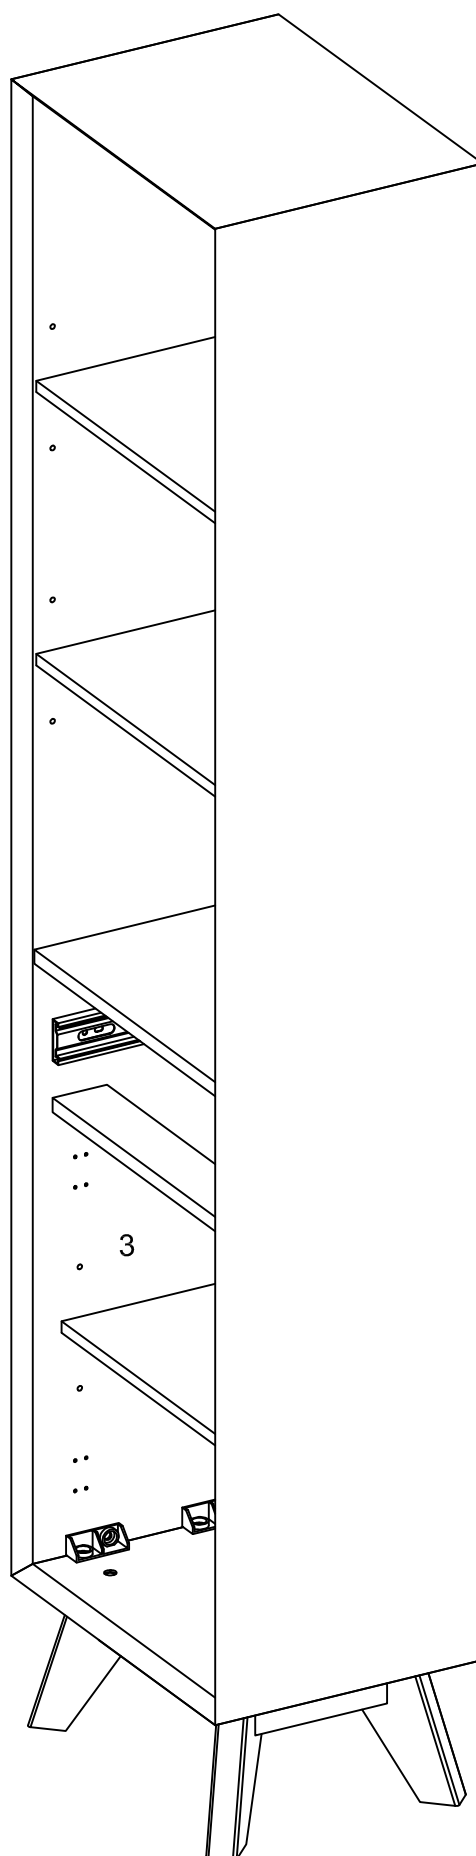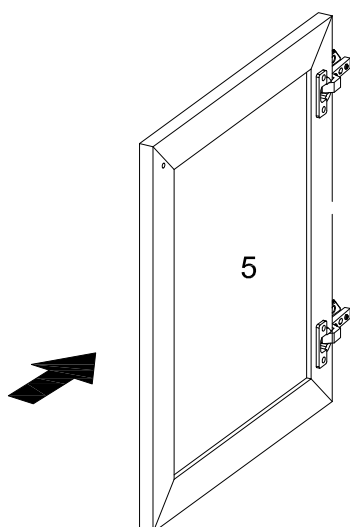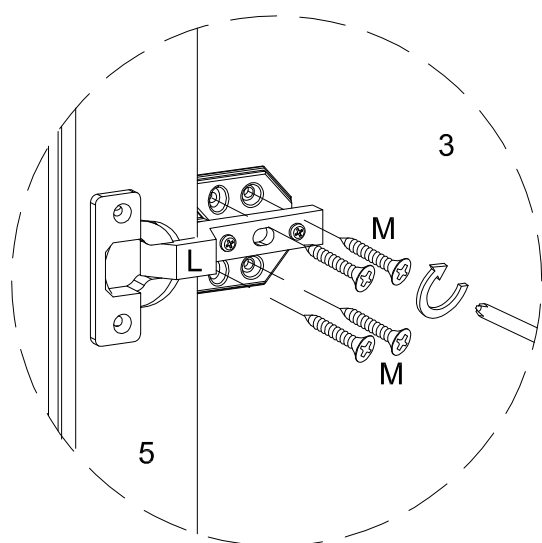


Step 18

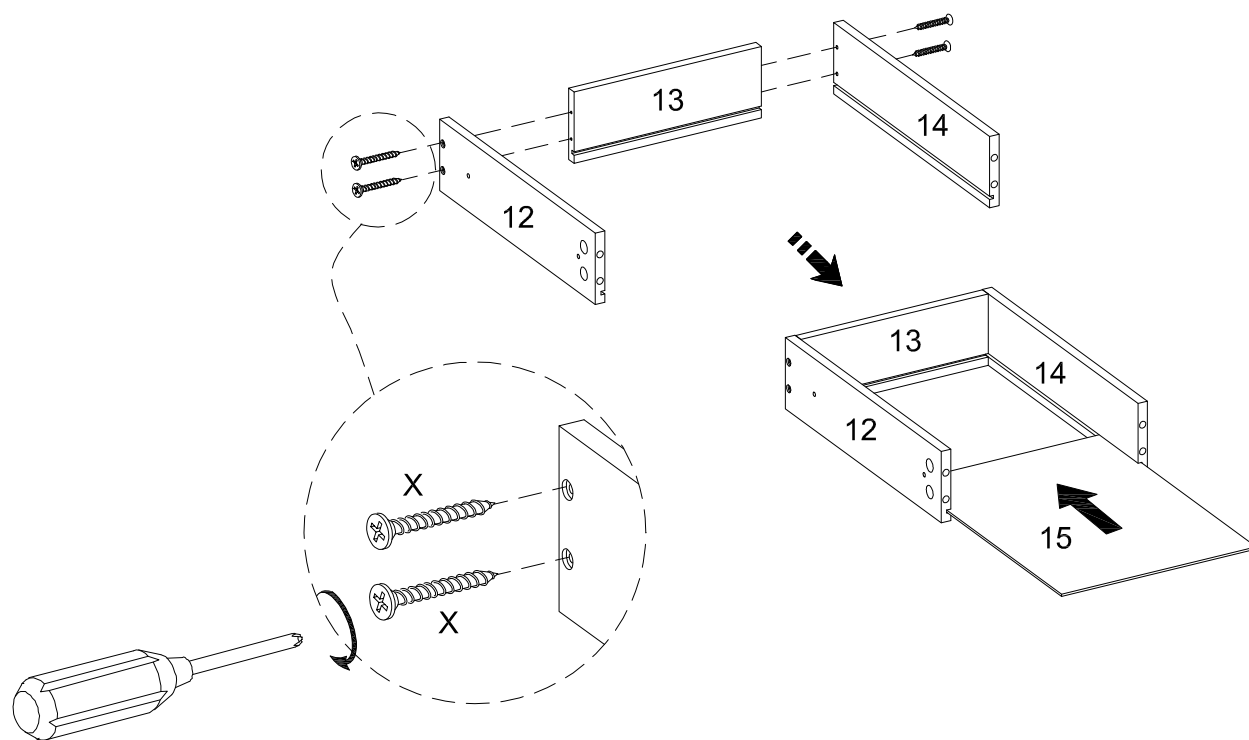


Step 19

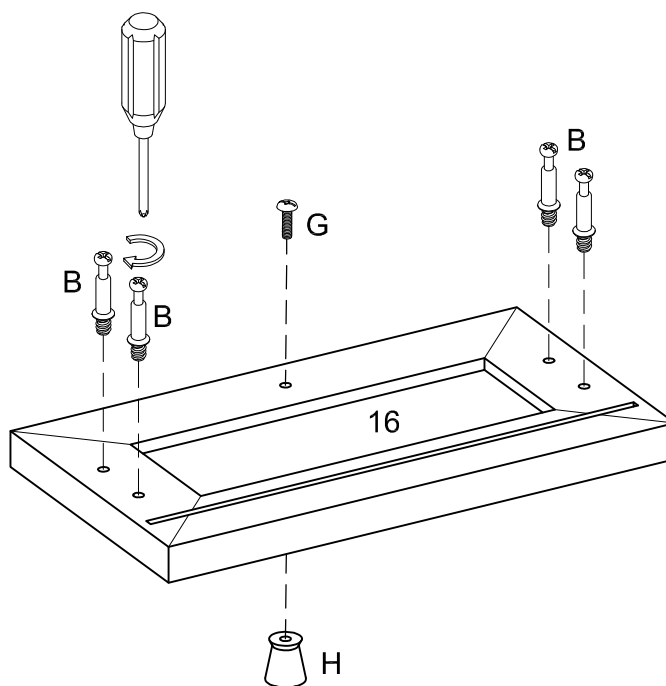


Step 20

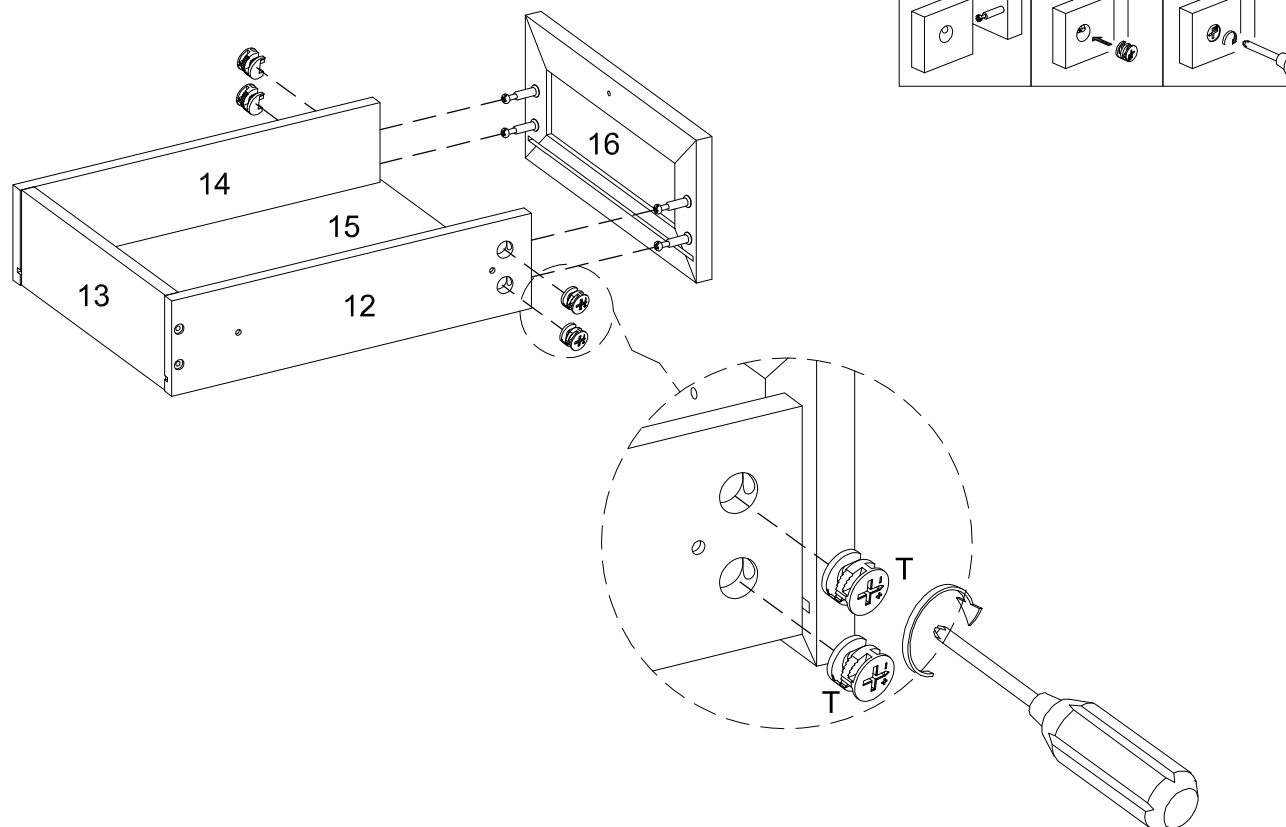


Step 21

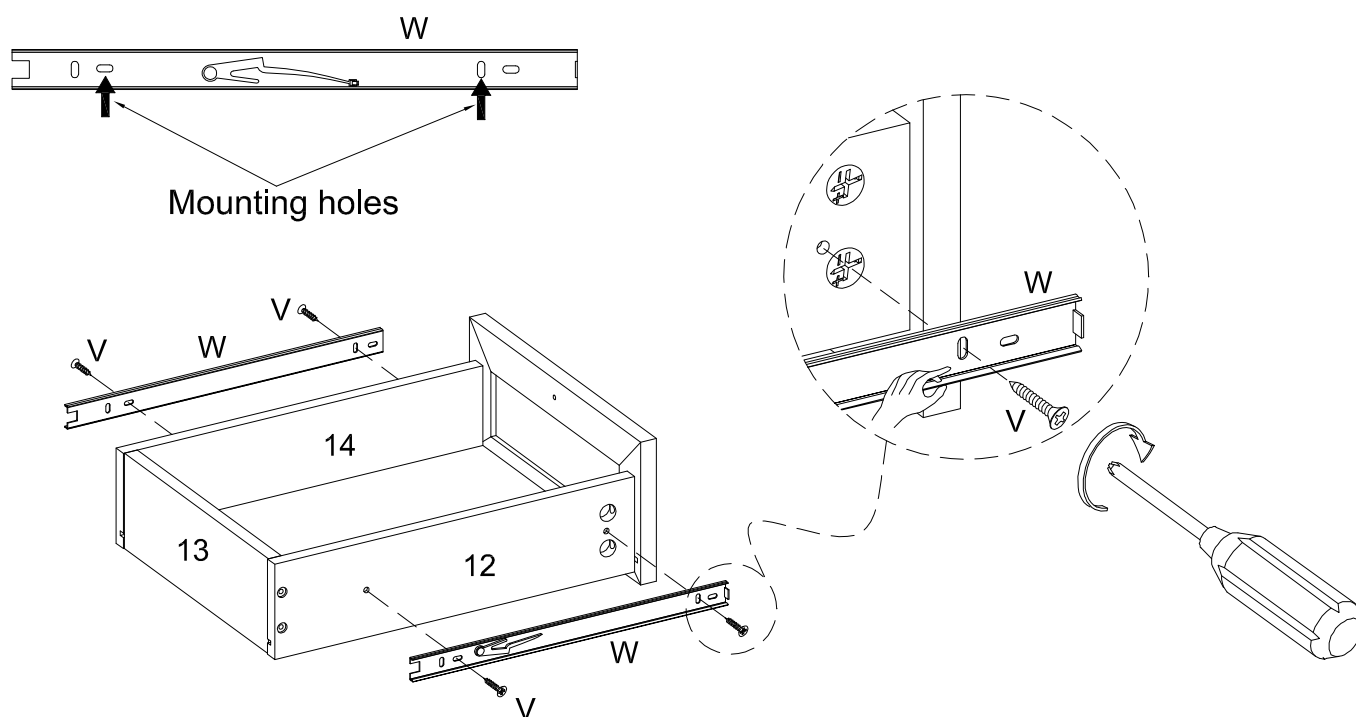


Step 22

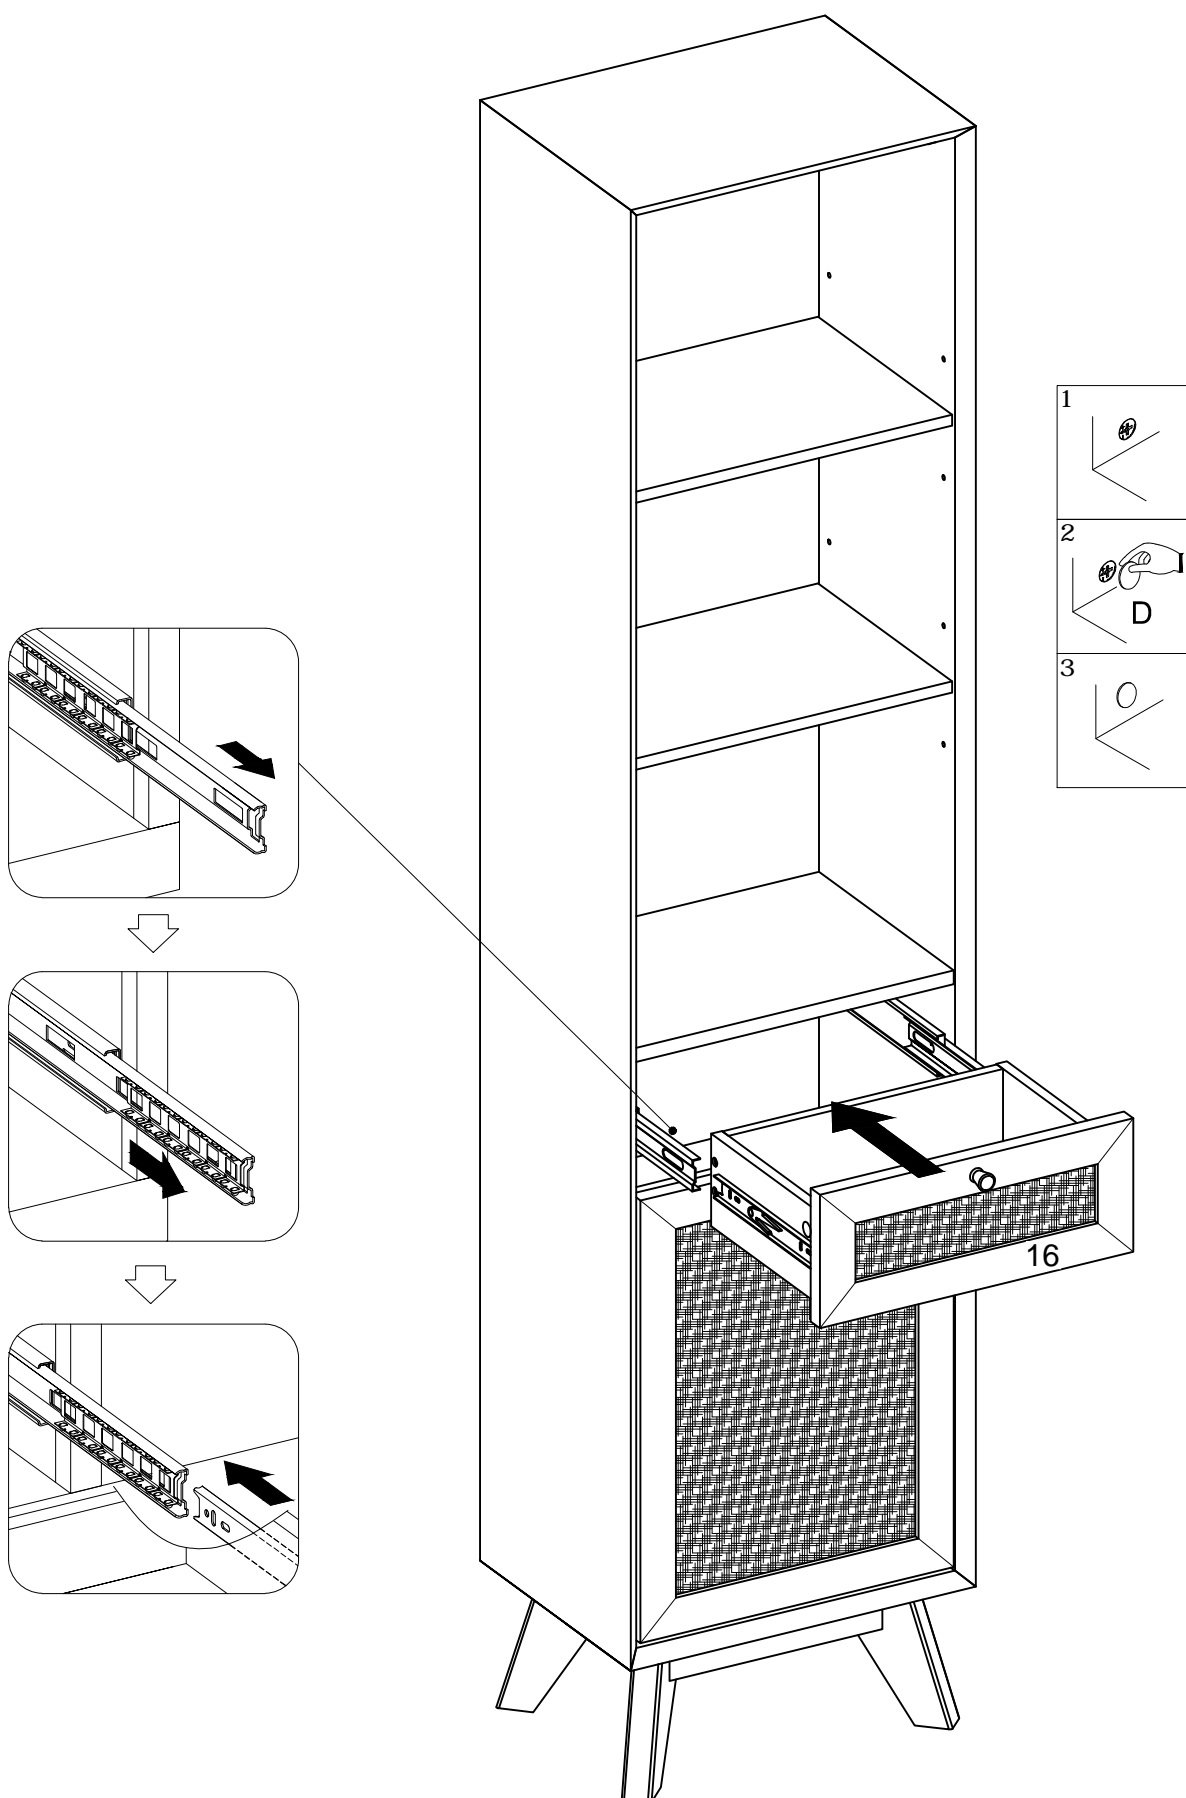

Step 23

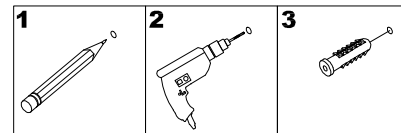

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

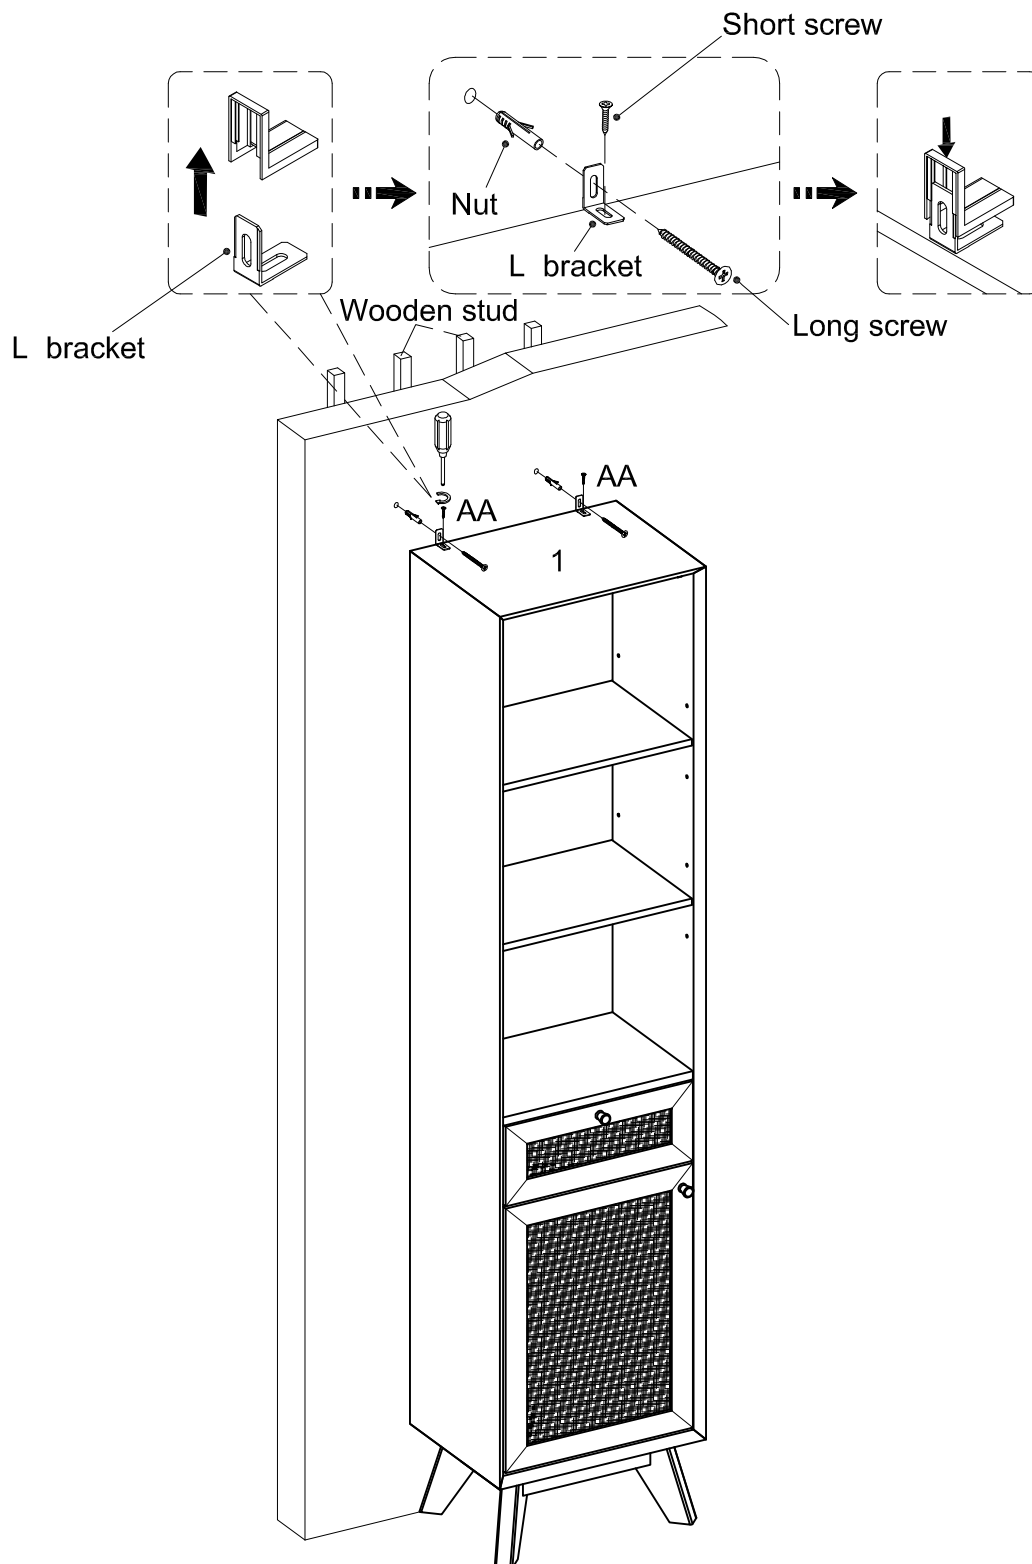

Final Assembly