




2 DOOR WARDROBE (FLAT TOP)

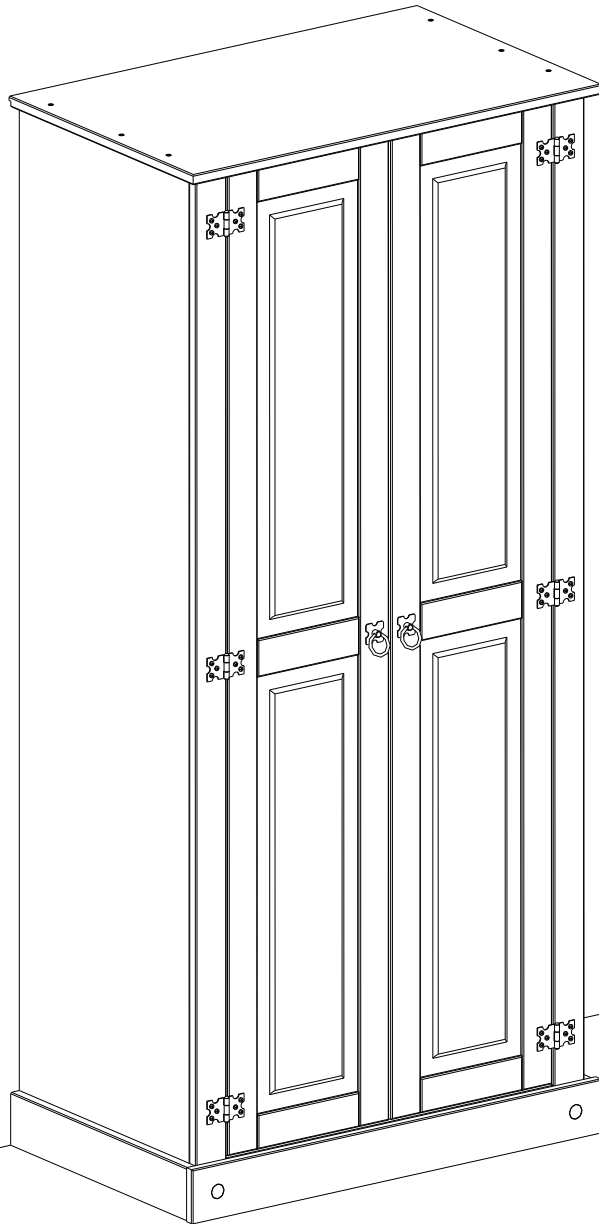



Width = 800mm
Depth = 500mm
Height = 1750mm















2m x 2m

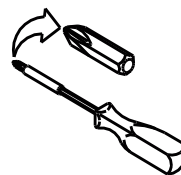

0:60h

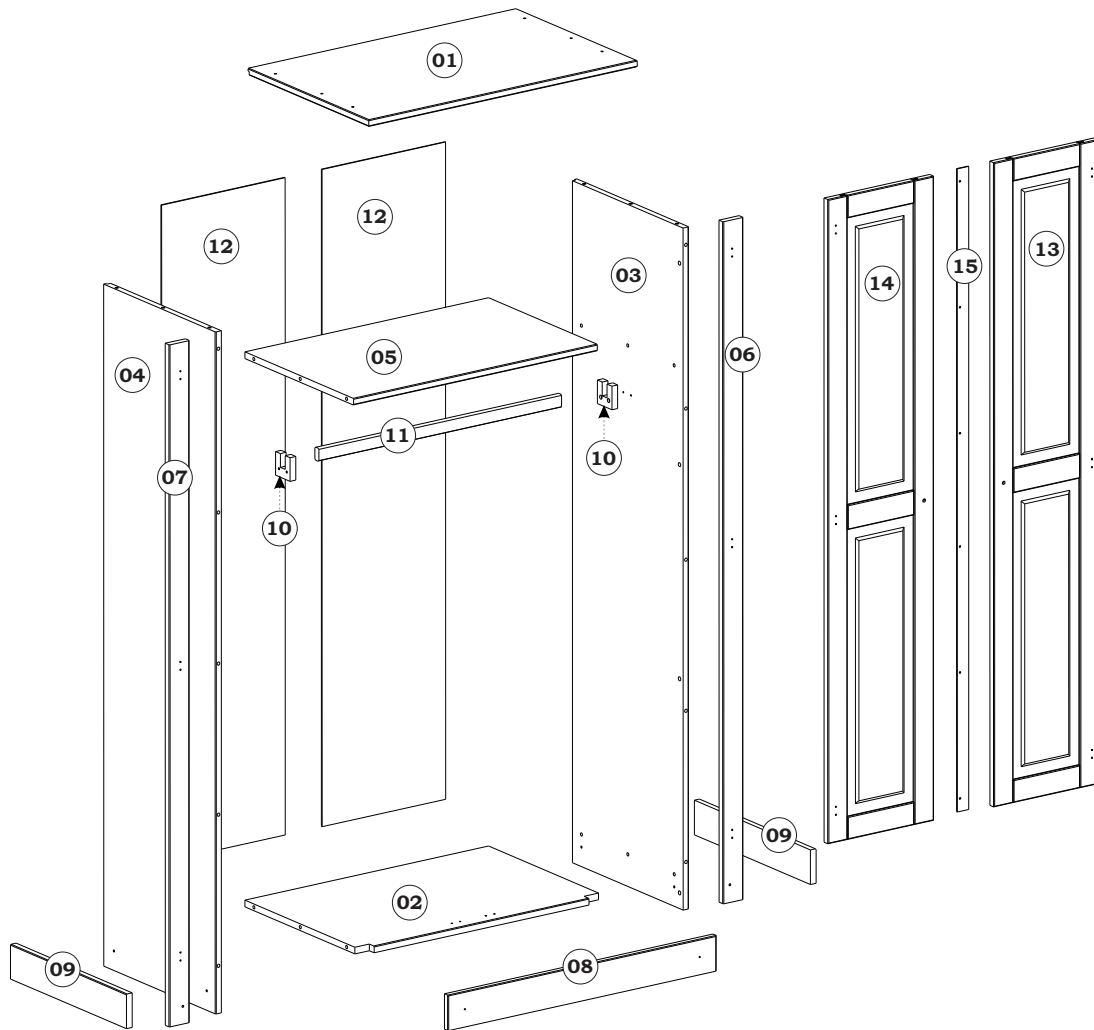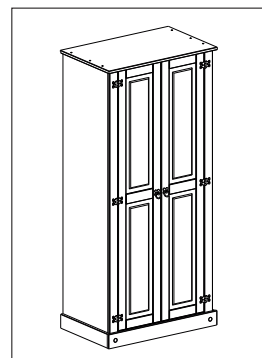

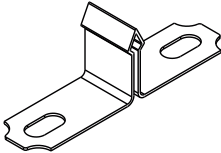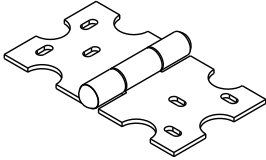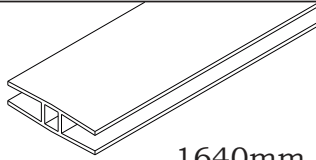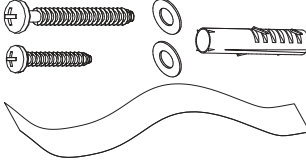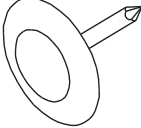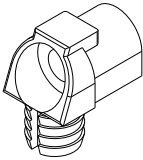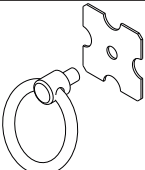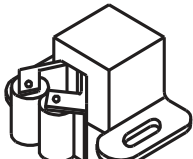A	 Ø8,0x30mm	28	L		04
B	 Ø3,5x30mm	06	M		06
C	 Ø4,0x40mm	06	X	 1640mm	01
D	 8x8	42	Y		01
E		02			
F	 Ø4,0x25mm	26			
G		22			
H	 Ø3,5x16mm	58			
I	 3/16"x5/8"	02			
J		02			
K		04			

01

H





04x

Ø3,5x16mm

K






02x

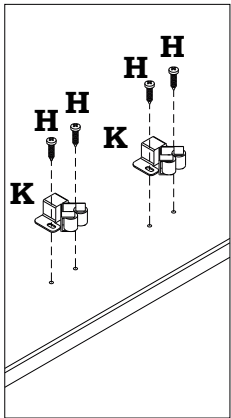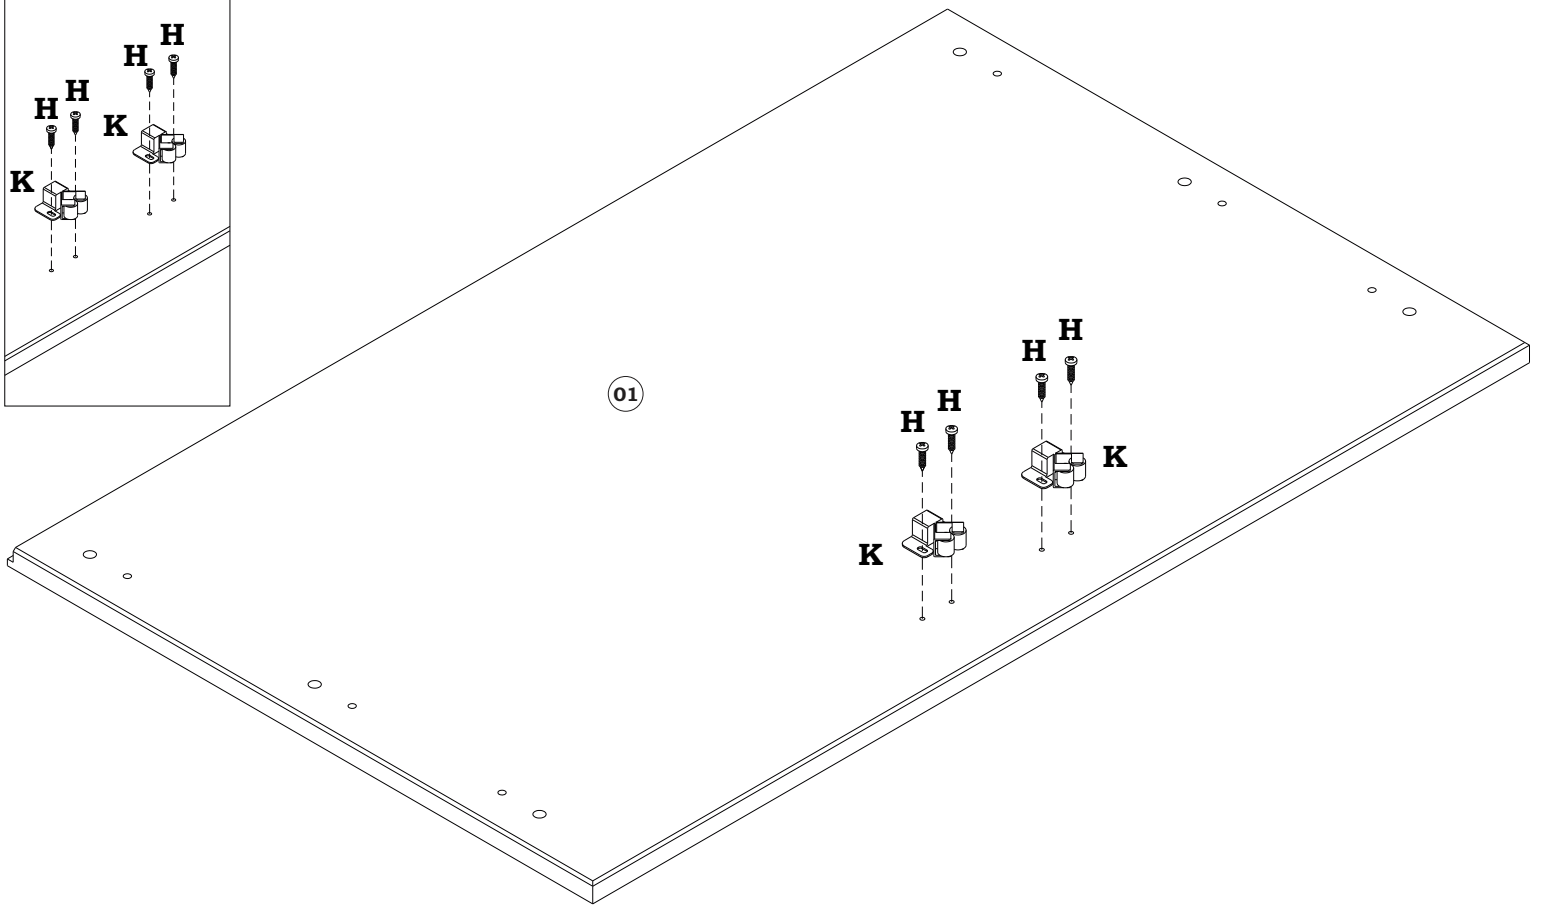

02

A  **06x**
Ø8,0x30mm

G  **08x**


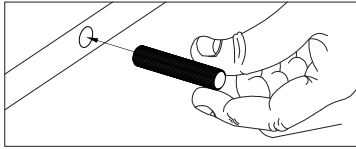
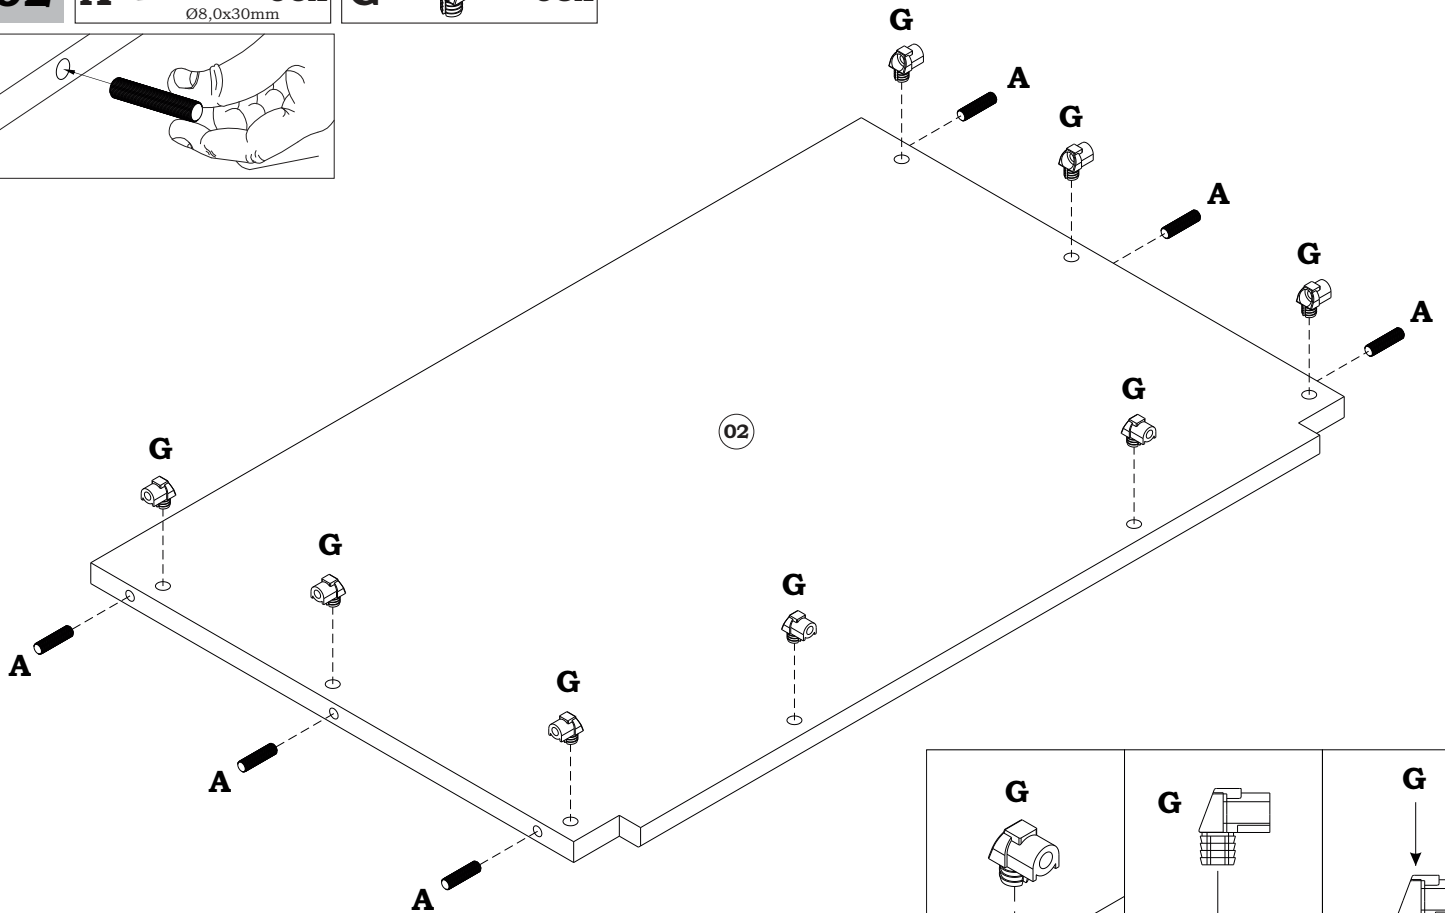
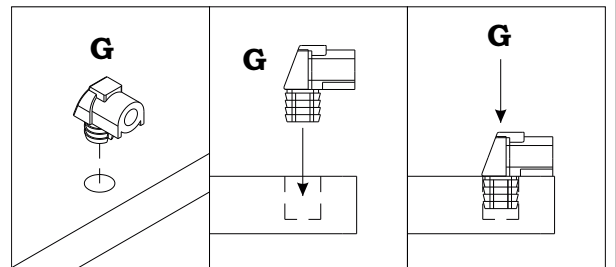


03**A****08x**

Ø8,0x30mm

F**02x**

Ø4,0x25mm

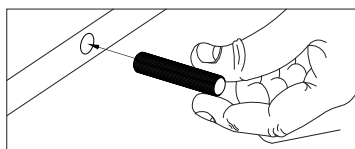
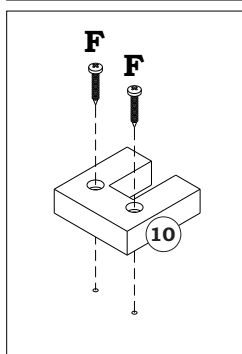
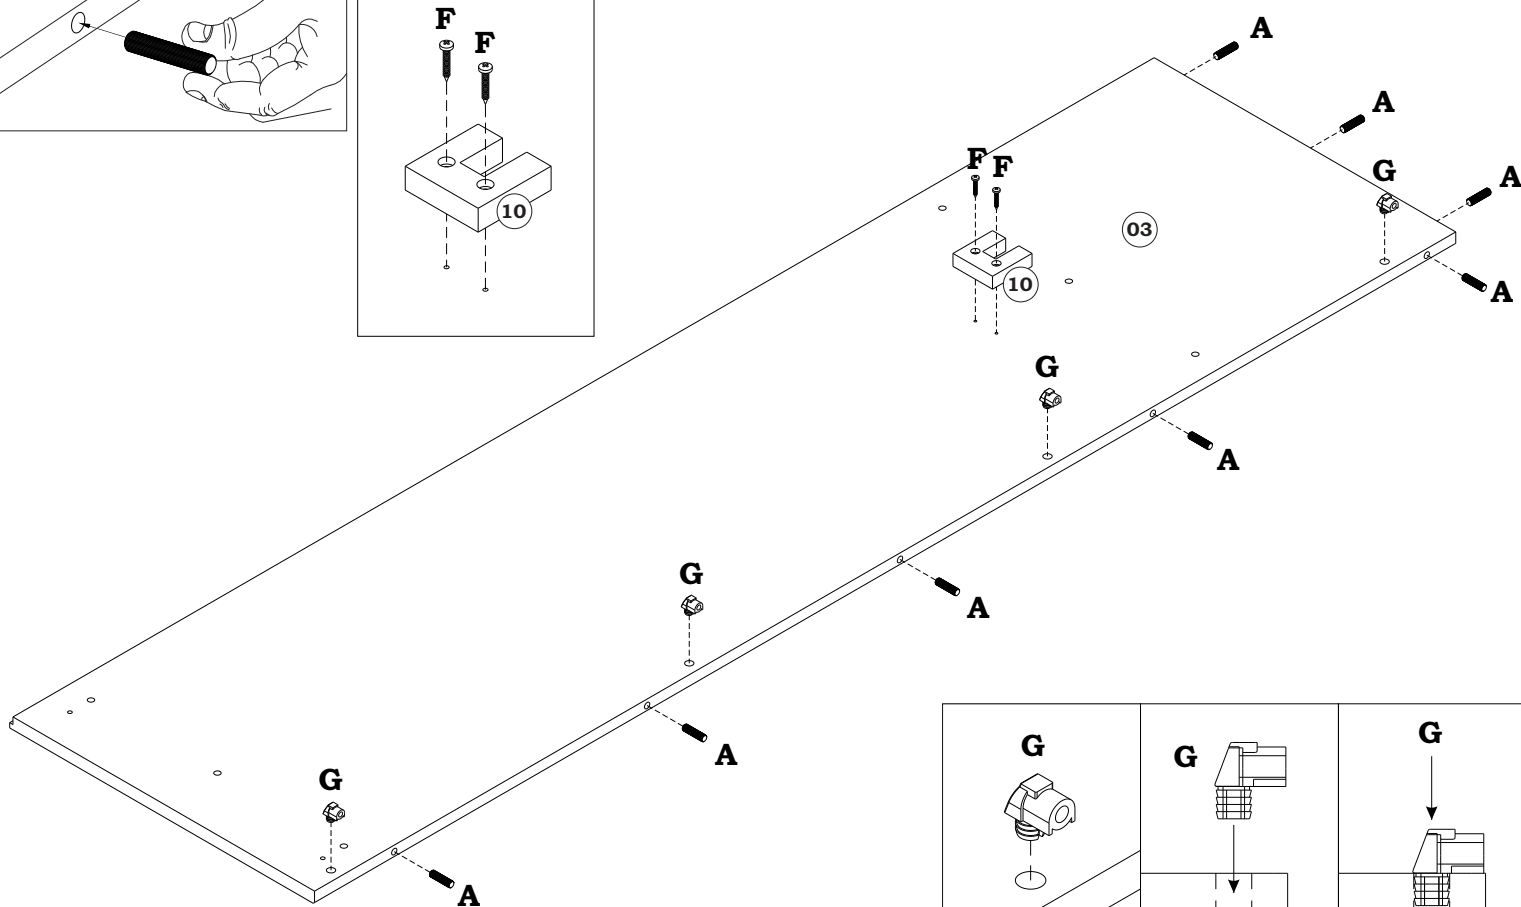
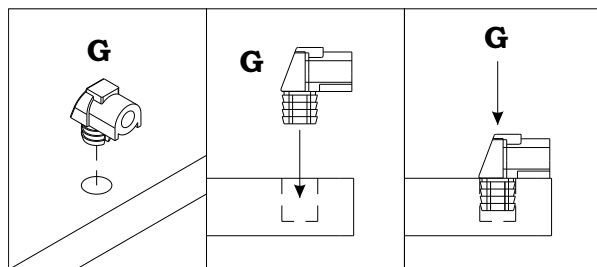
G**04x**

04

A  **08x**
Ø8,0x30mm

F  **02x**
Ø4,0x25mm




G  **04x**

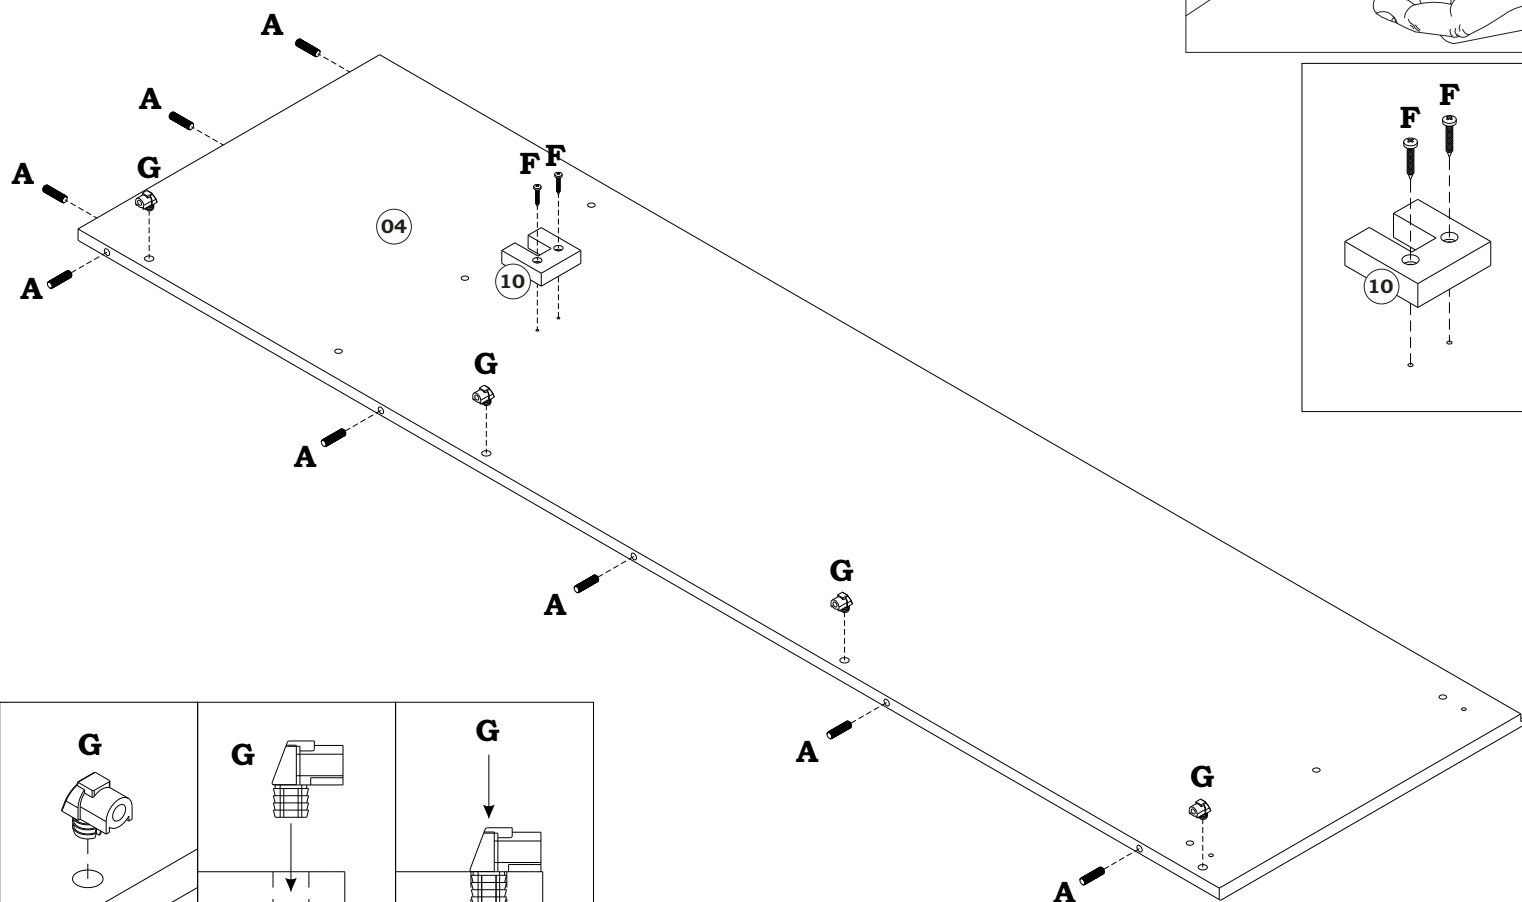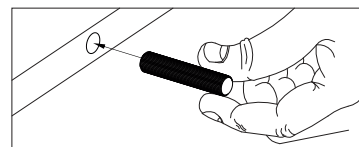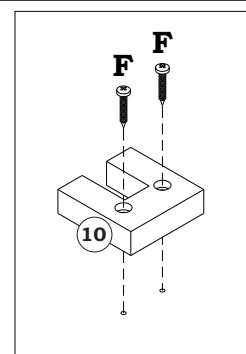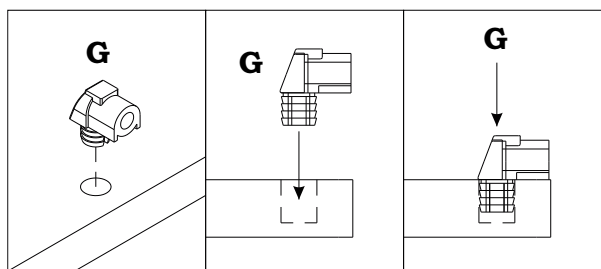

05

A  **06x**
Ø8,0x30mm

G  **06x**

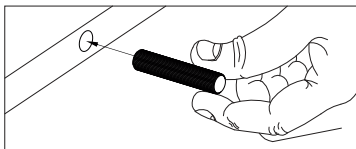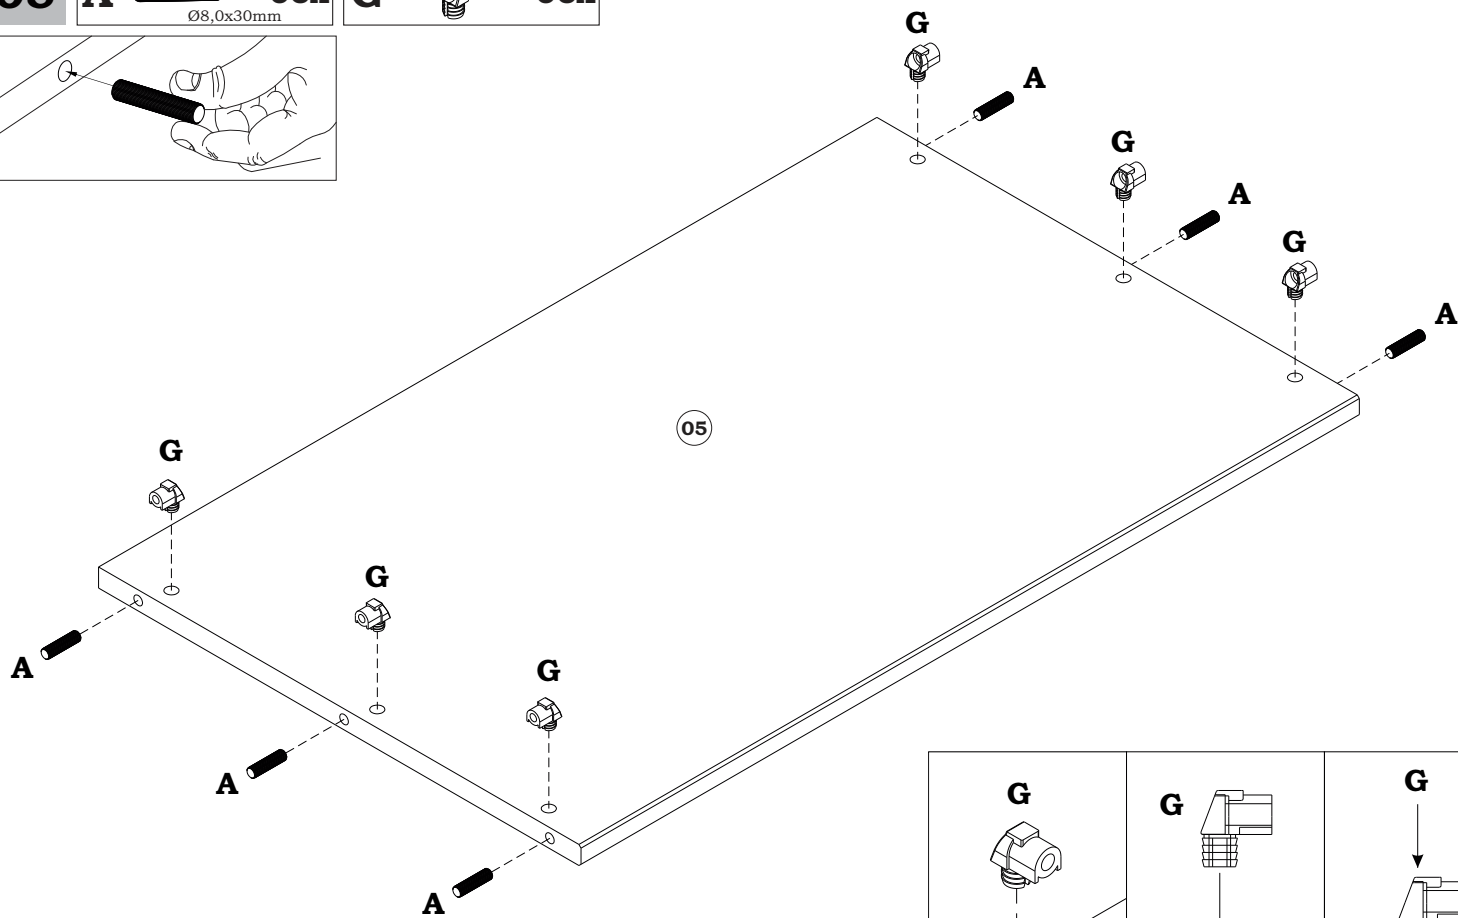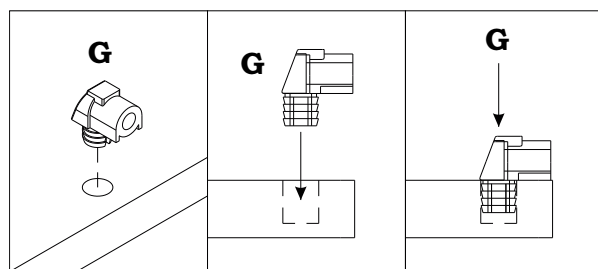

06


H



Ø3,5x16mm

09x




M



03x



13

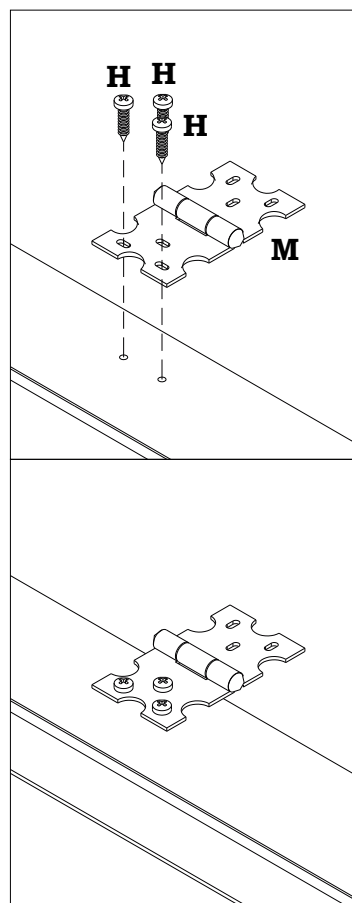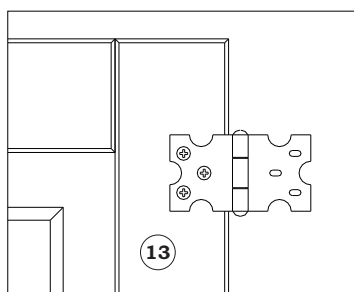

13

07


H






09x

Ø3,5x16mm


M





03x

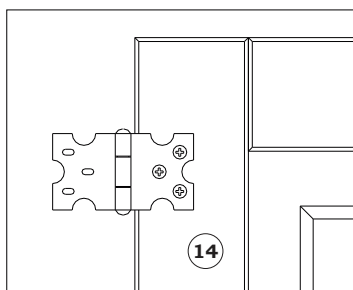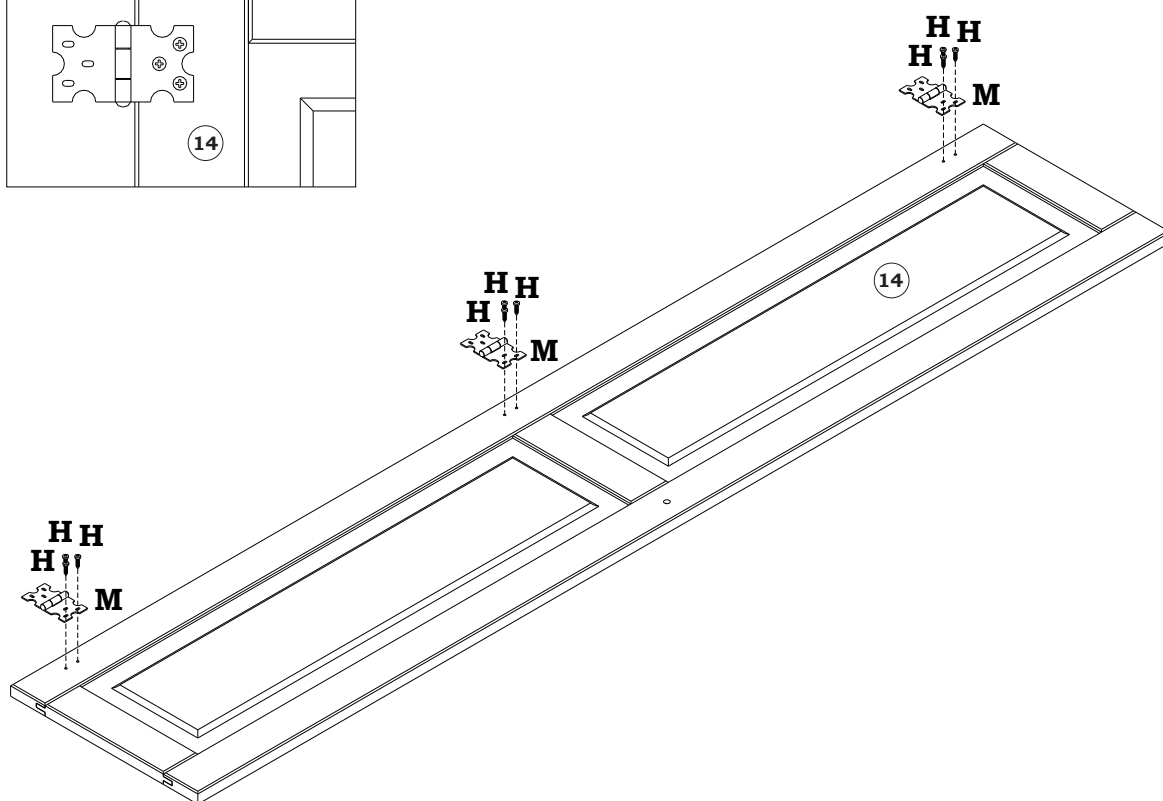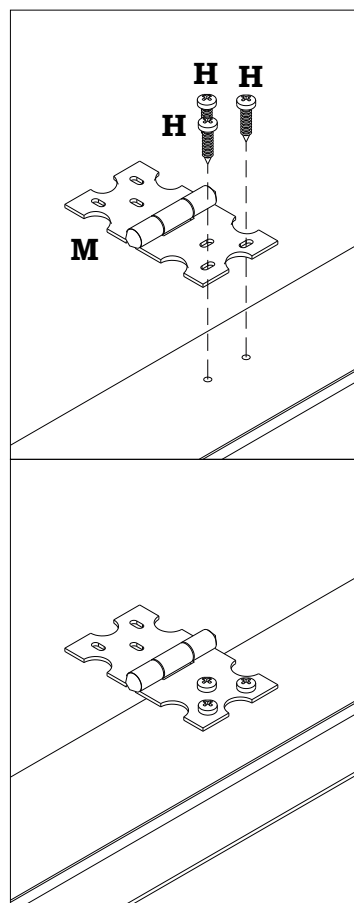



08 **F**  **04x**
Ø4,0x25mm

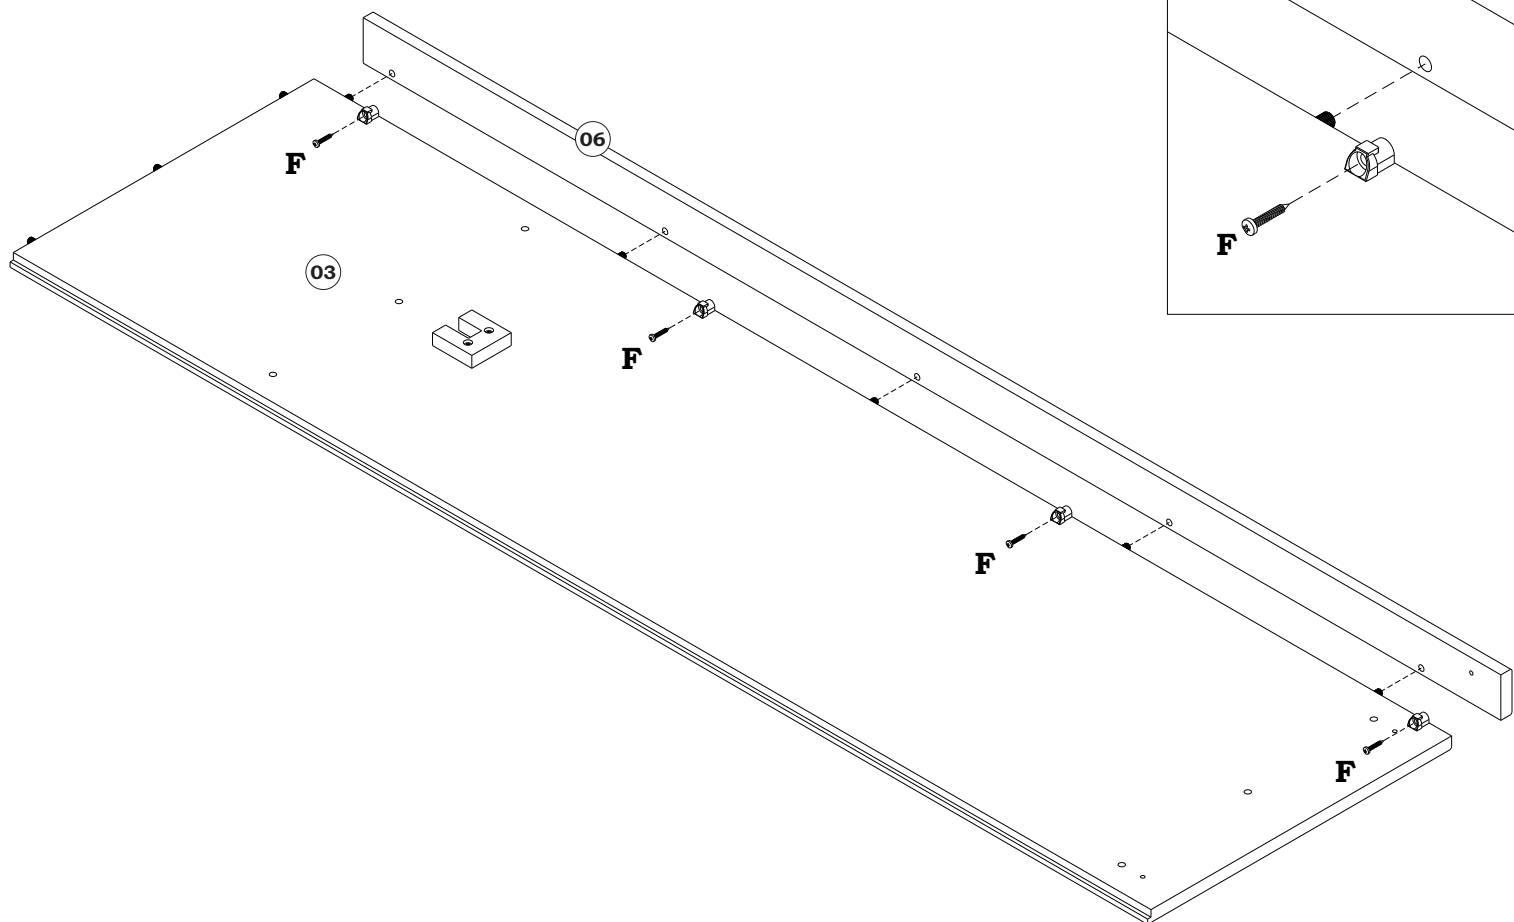

09 **F**  **04x**
Ø4,0x25mm

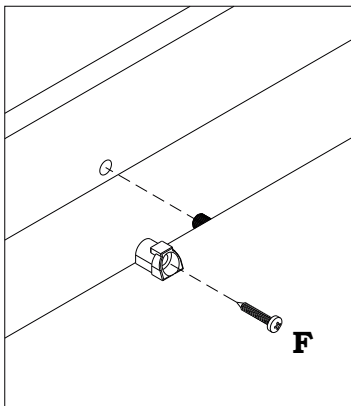
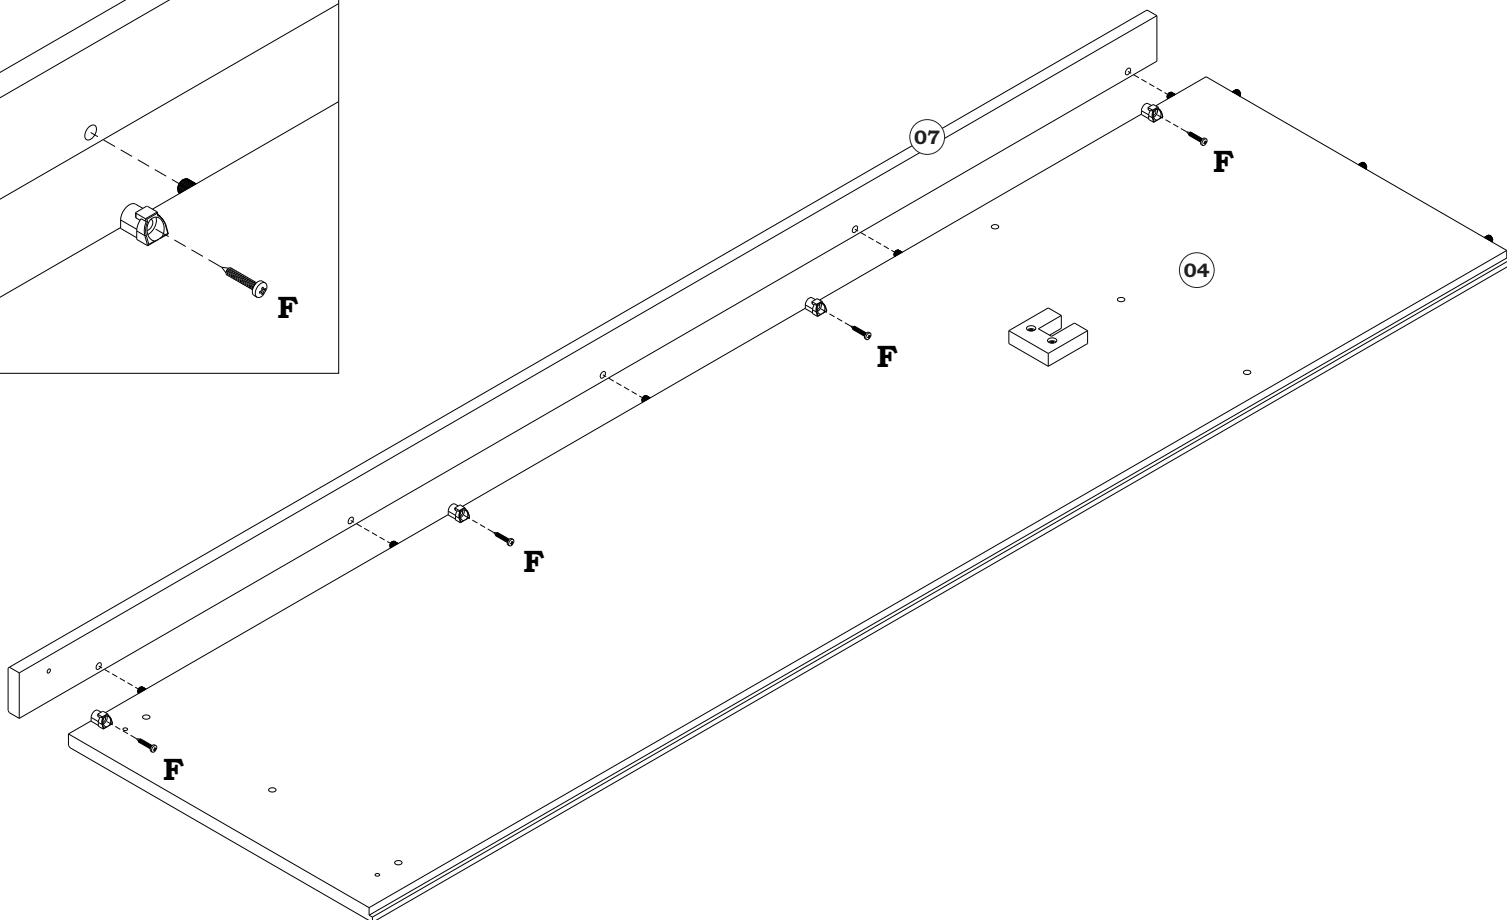


10 **F**  **03x**
Ø4,0x25mm

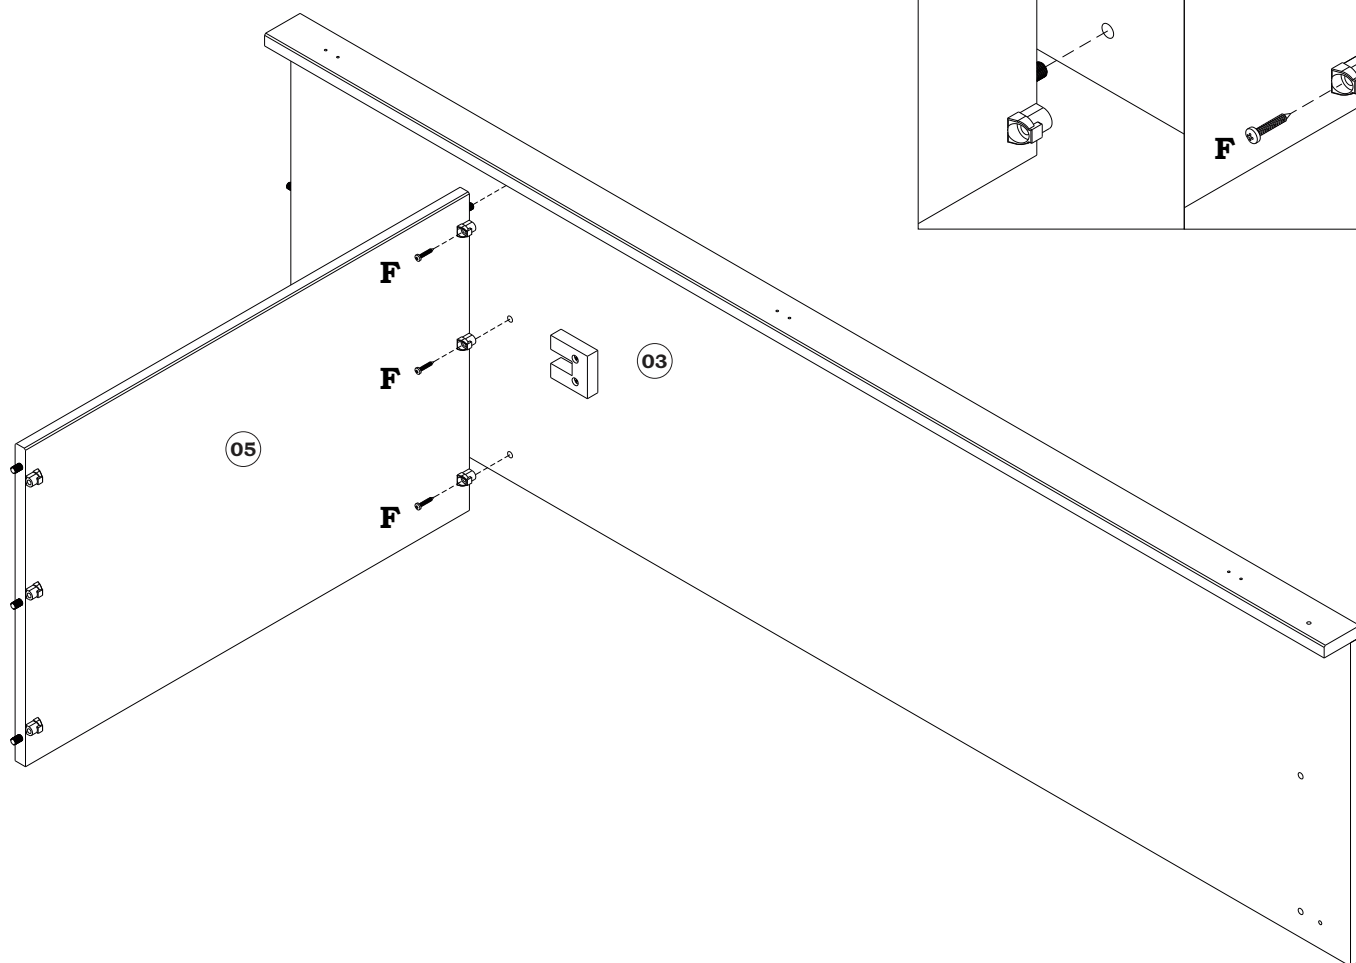
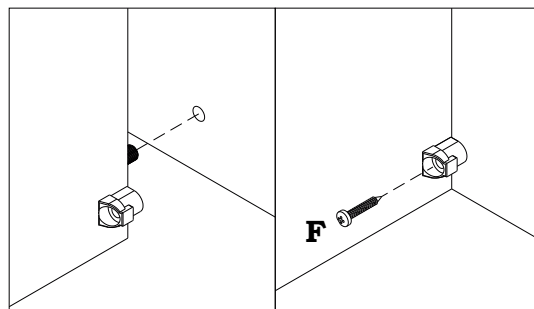


11


F  **03x**
Ø4,0x25mm

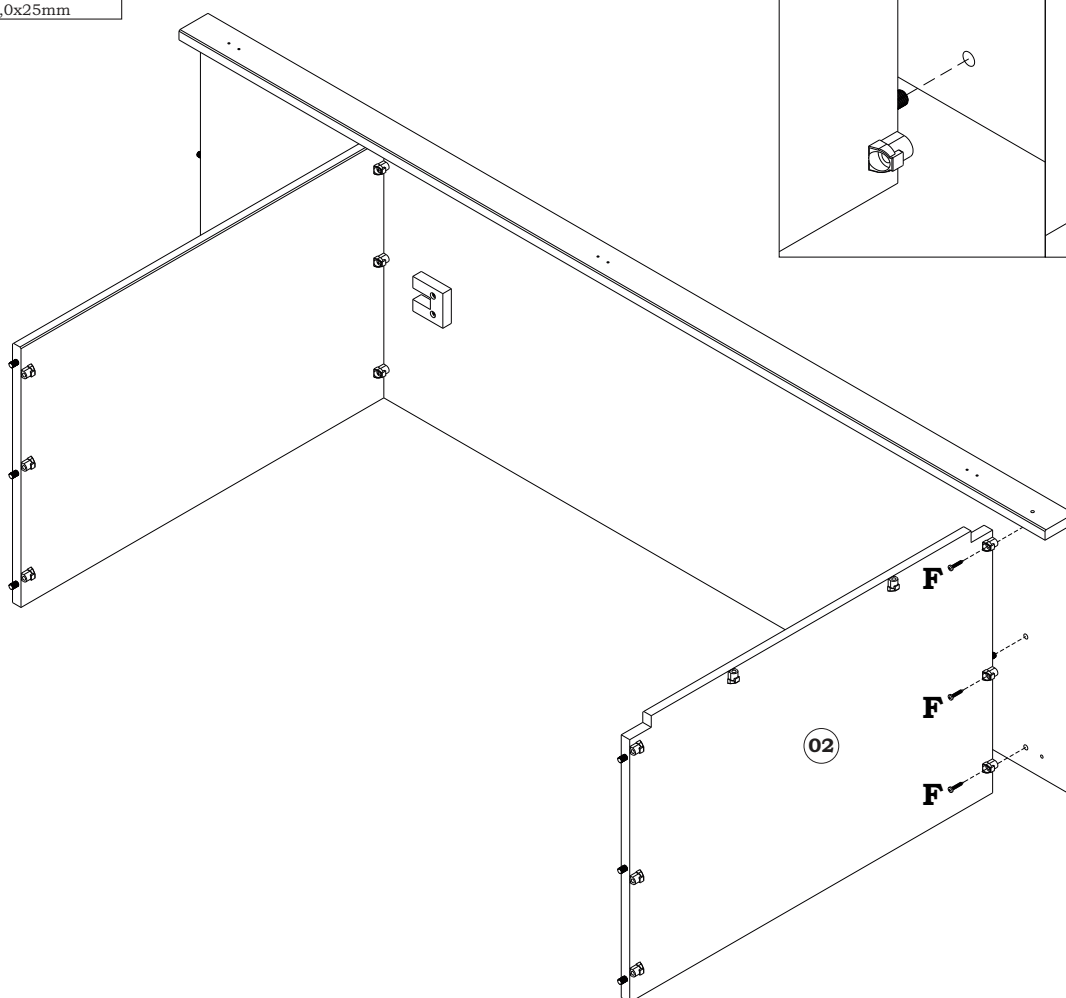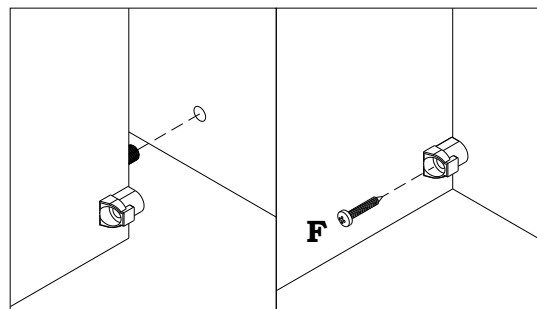

12 **F**  **06x**
Ø4,0x25mm

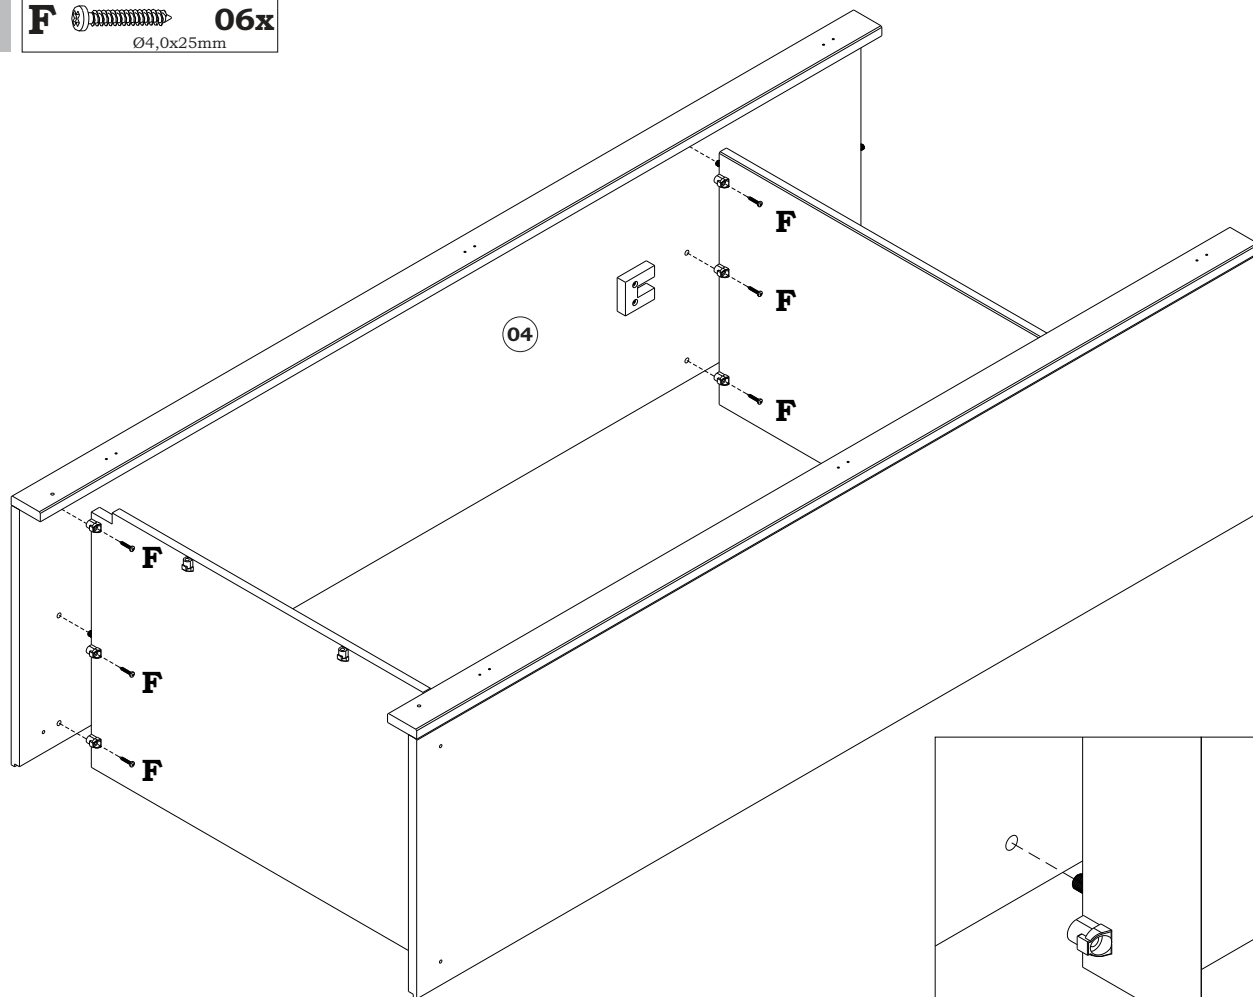
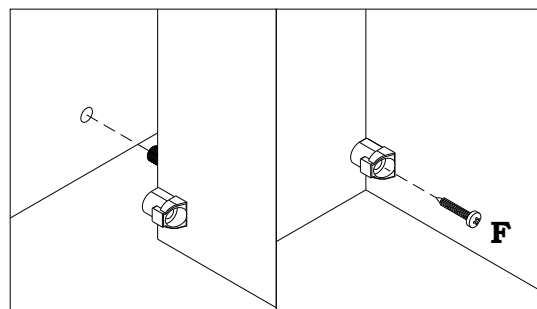


Ø4,0x40mm

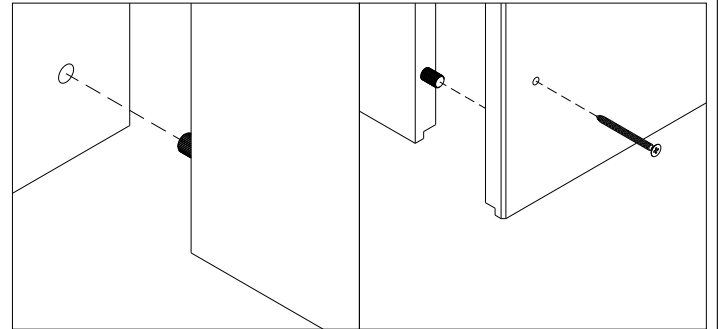

14



B  **04x**
Ø3,5x30mm

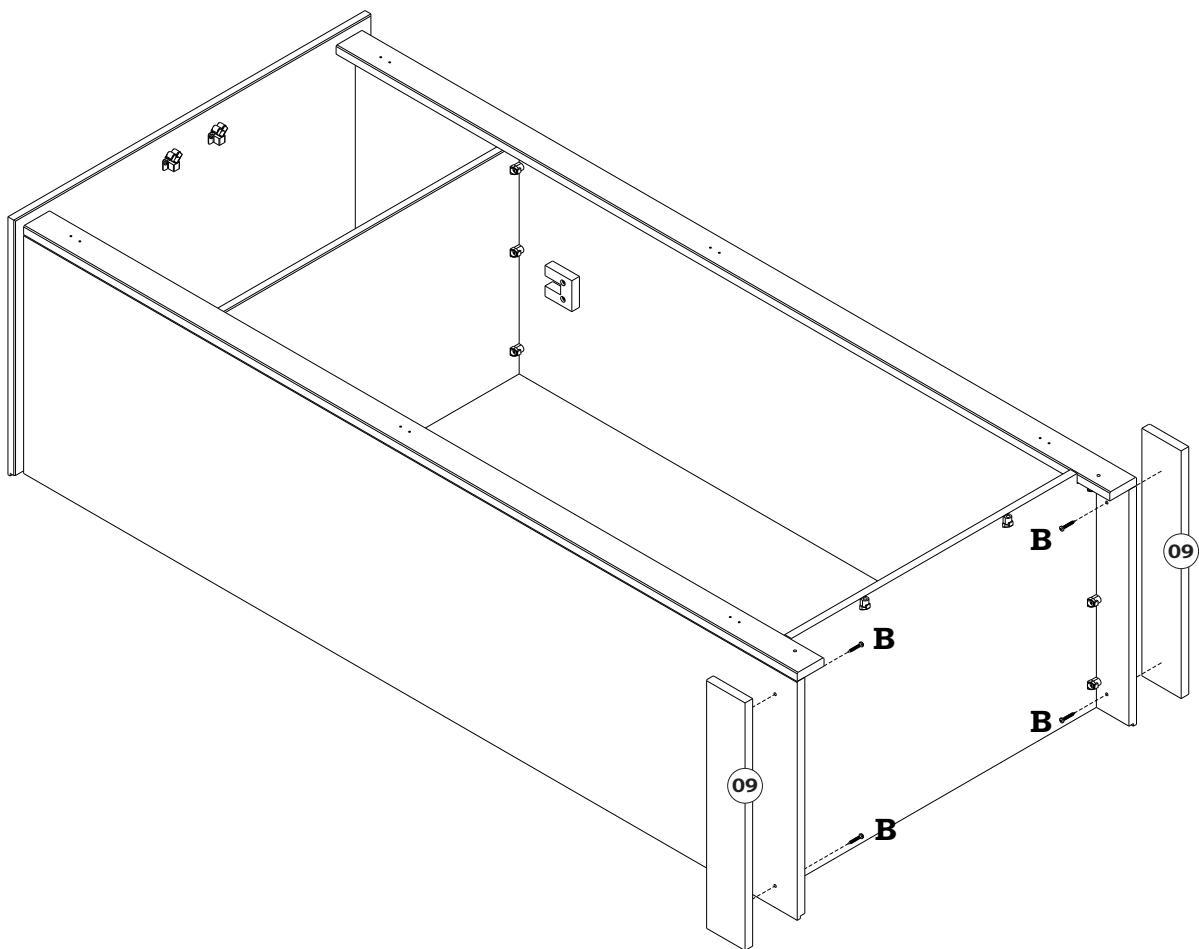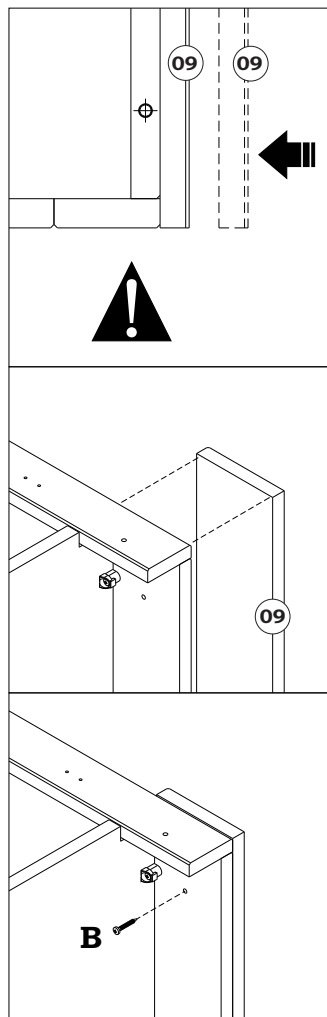





15

B  **02x**
Ø3,5x30mm


F  **02x**
Ø4,0x25mm



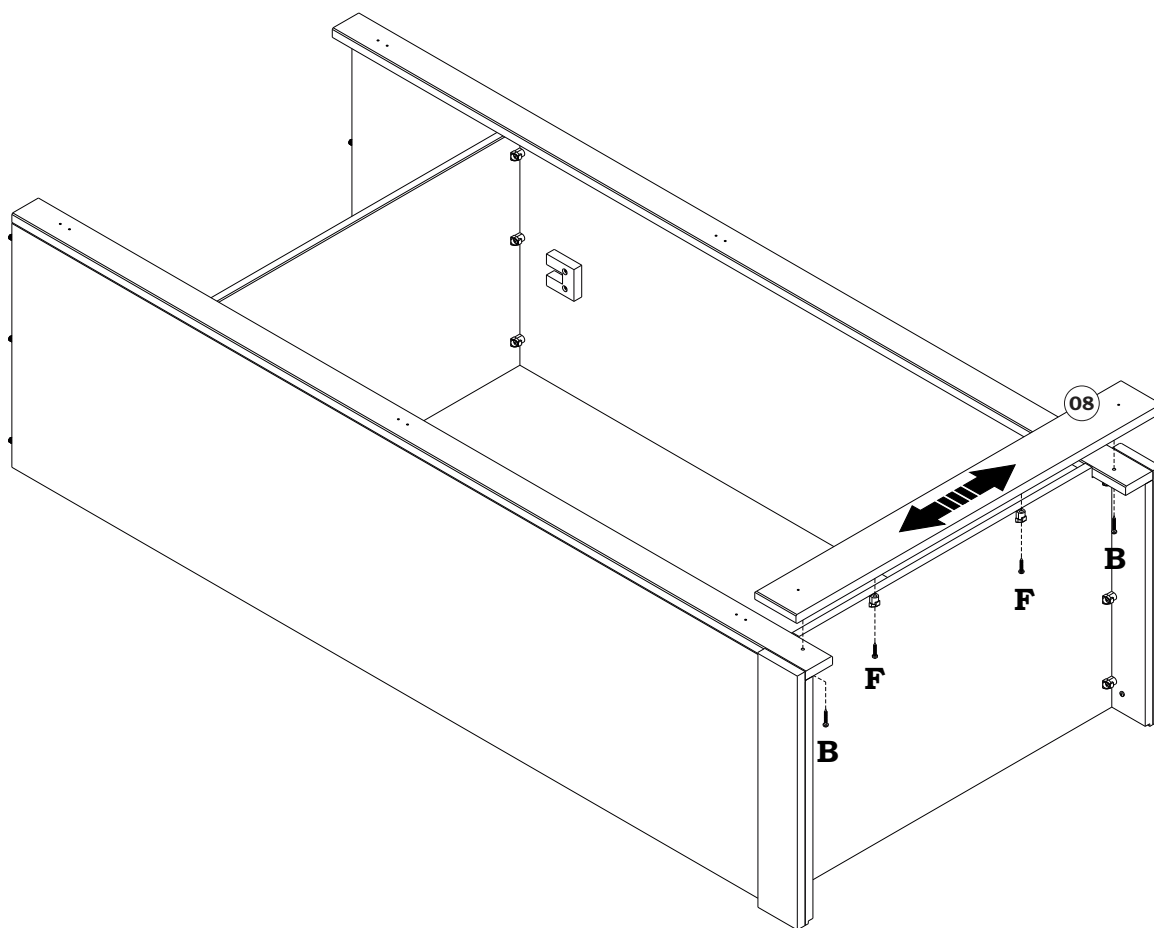
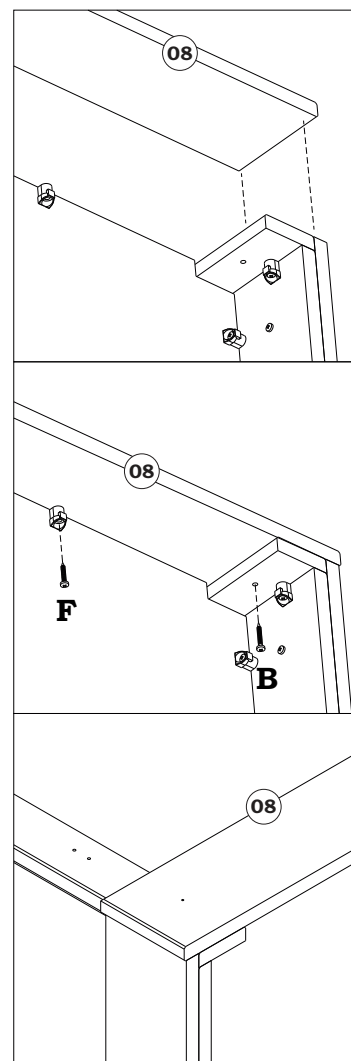


16 **E**  **02x**

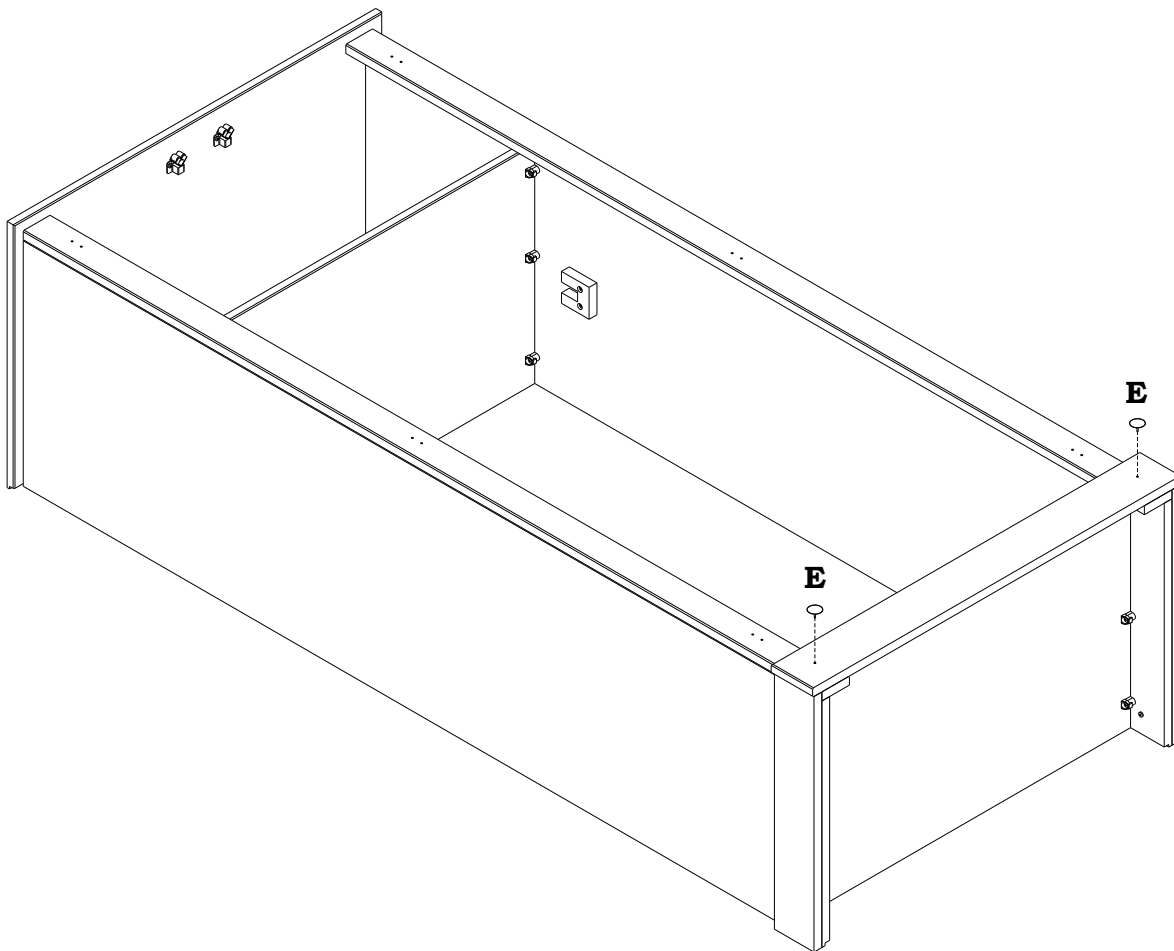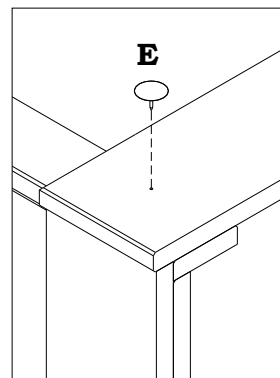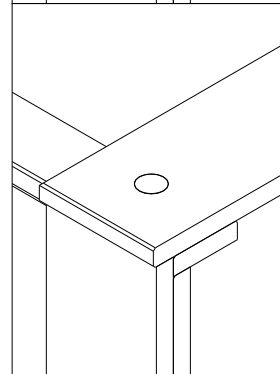
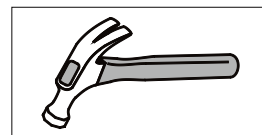


17 **D**  **42x**
8x8

X  **01x**
1640mm

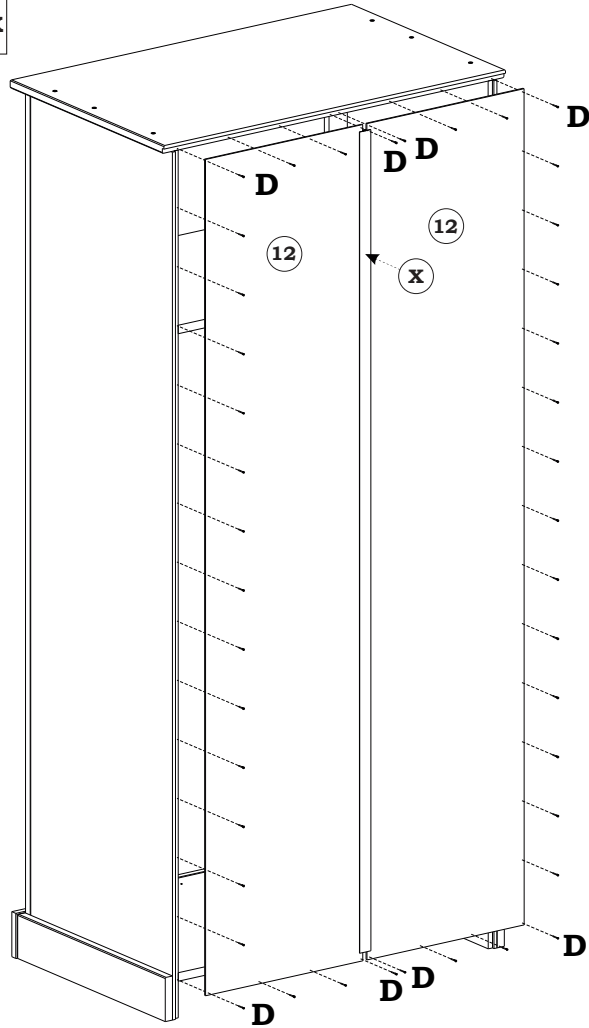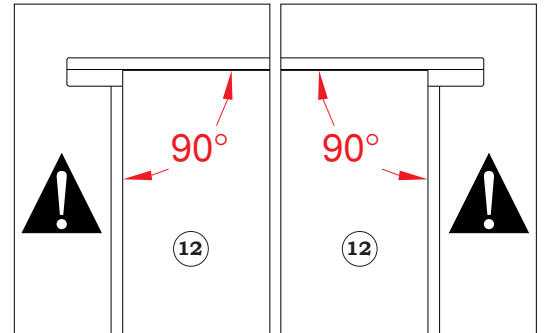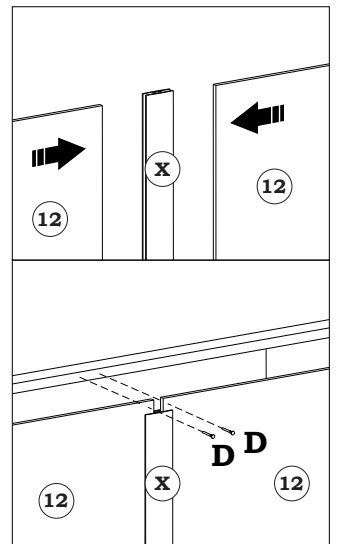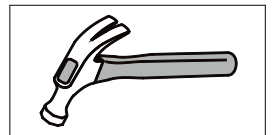

18

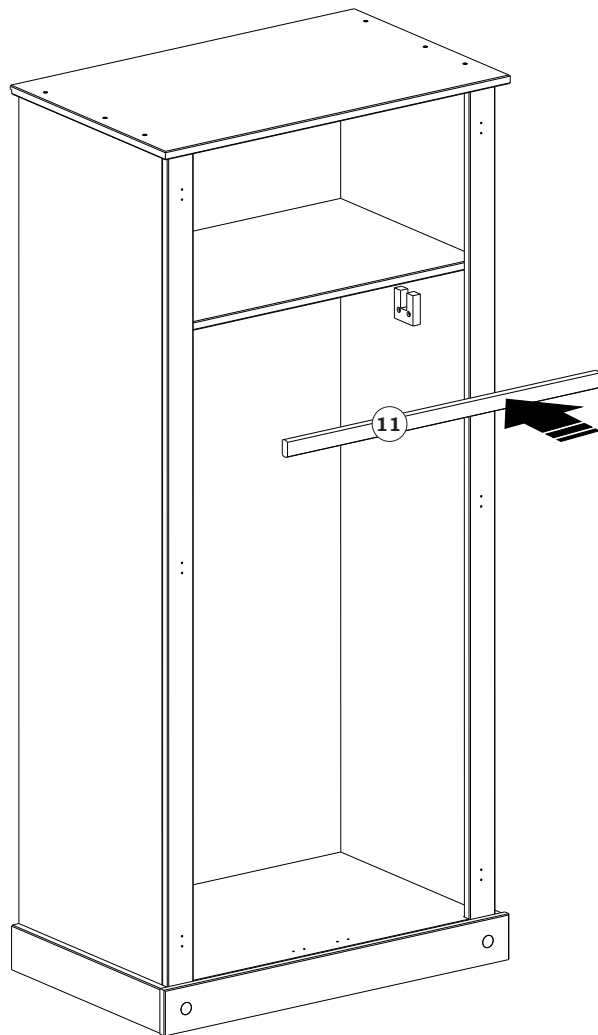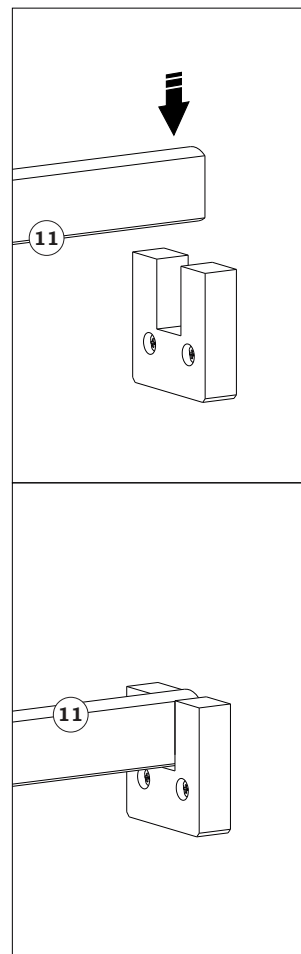

19

H





Ø3,5x16mm

04x

K



02x

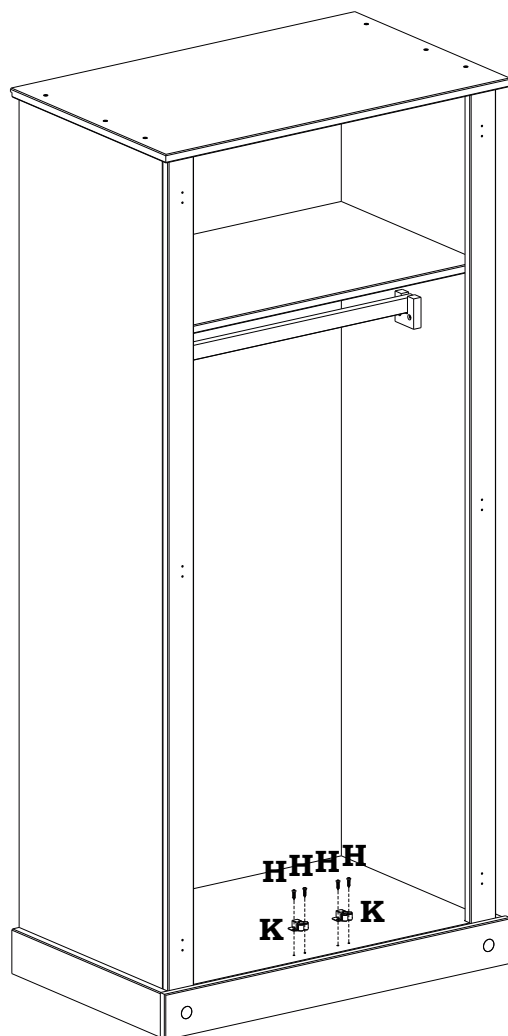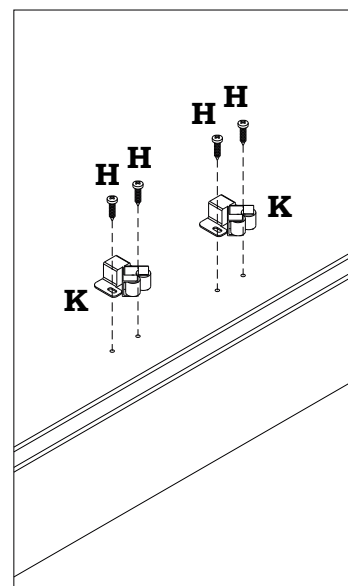


20

H





Ø3,5x16mm

09x

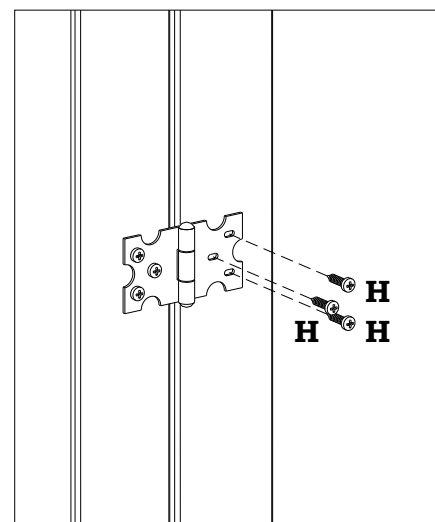

21

H  09x
Ø3,5x16mm

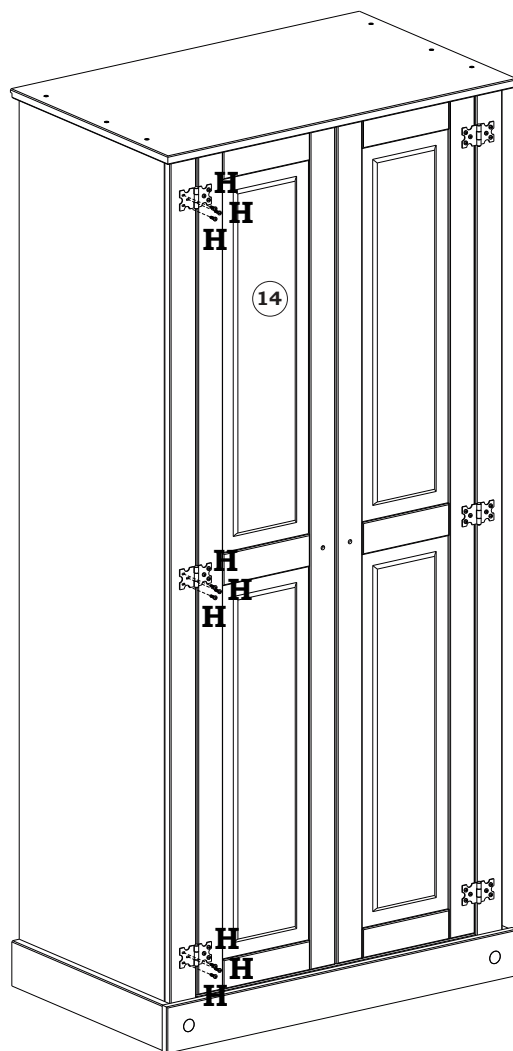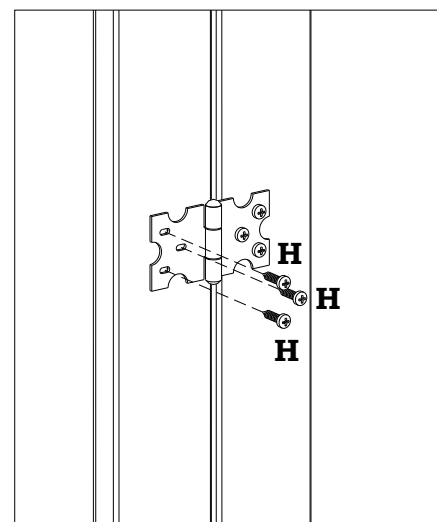



22

H



06x

Ø3,5x16mm



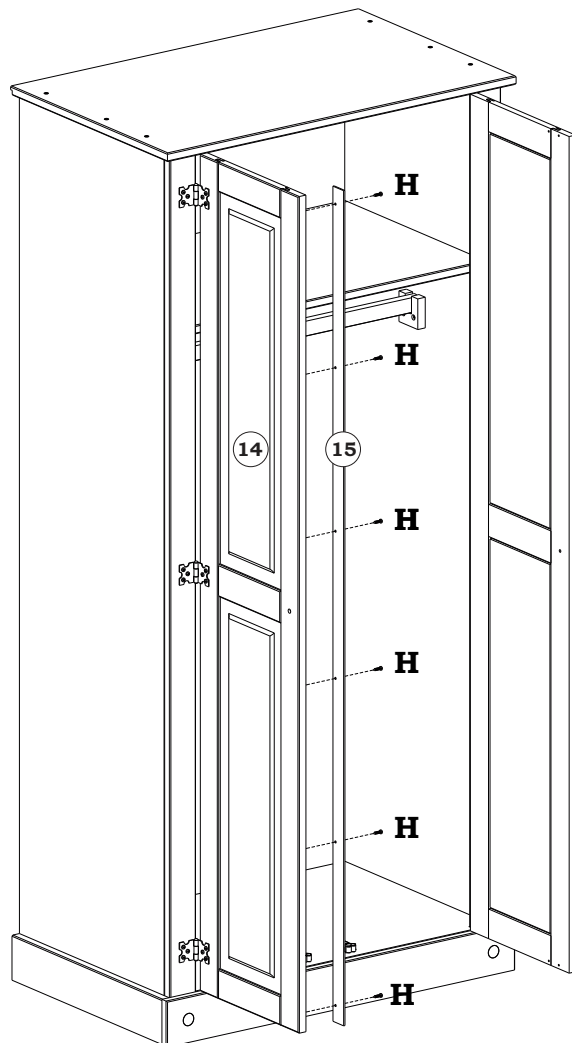
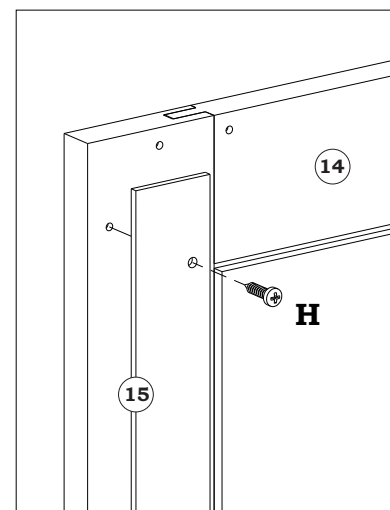







23 **H**  **08x**
Ø3,5x16mm

I  **02x**
3/16"x5/8"

J  **02x**

L  **04x**

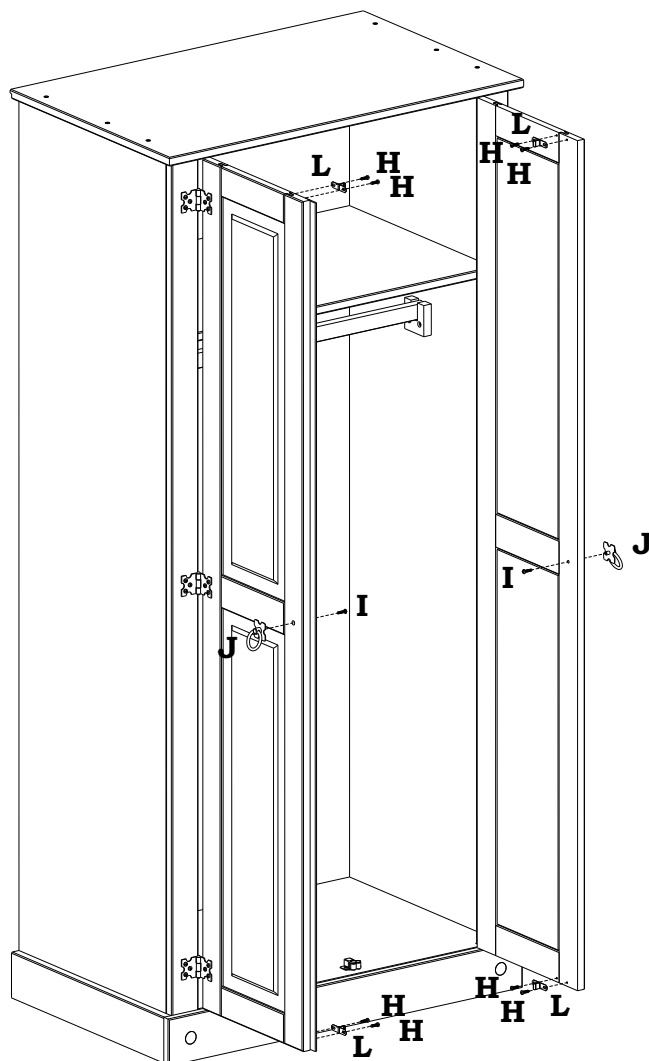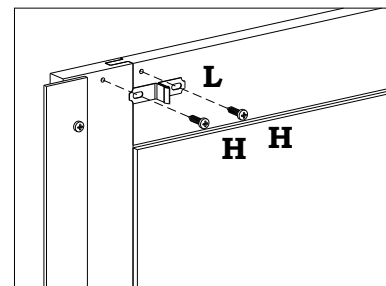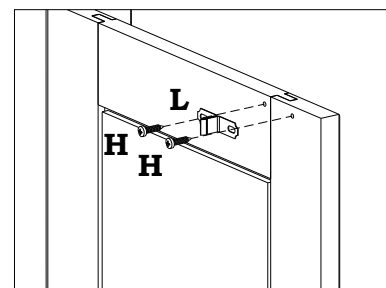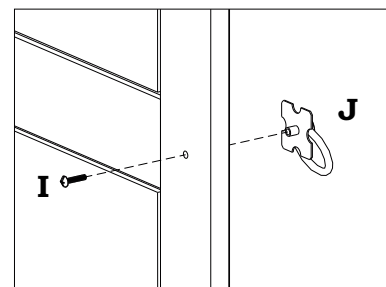

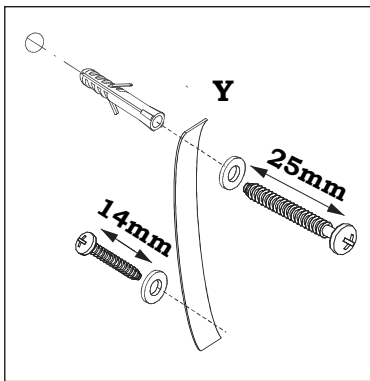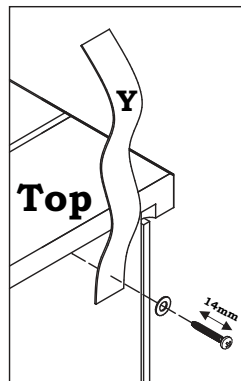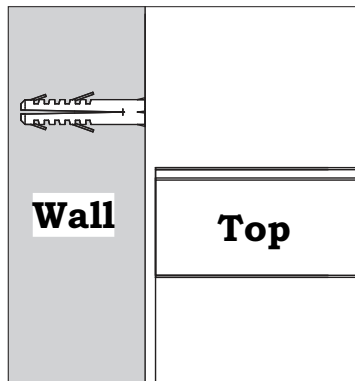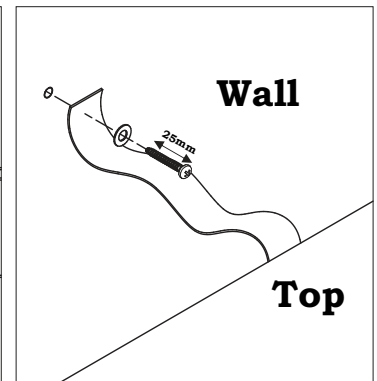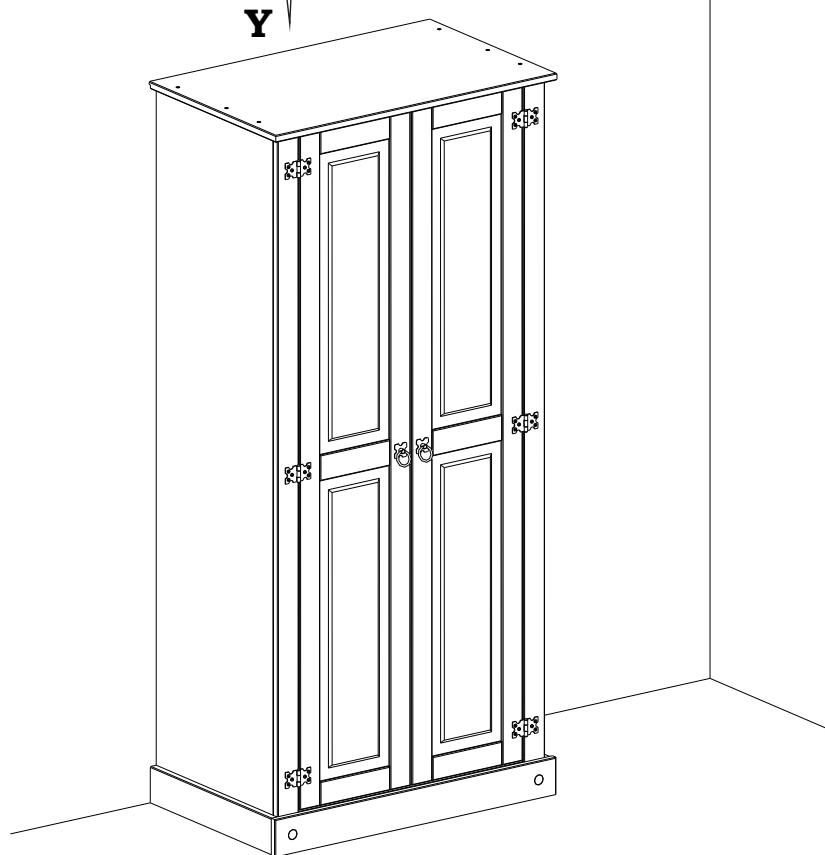24**Y****01x**

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED).

- Place fixing strip against the wall and mark position for drilling hole.
- Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert the wall plug into the hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.