


UPHOLSTERED 4 DRAWER STORAGE BED

ASSEMBLY INSTRUCTIONS

QUEEN SIZE

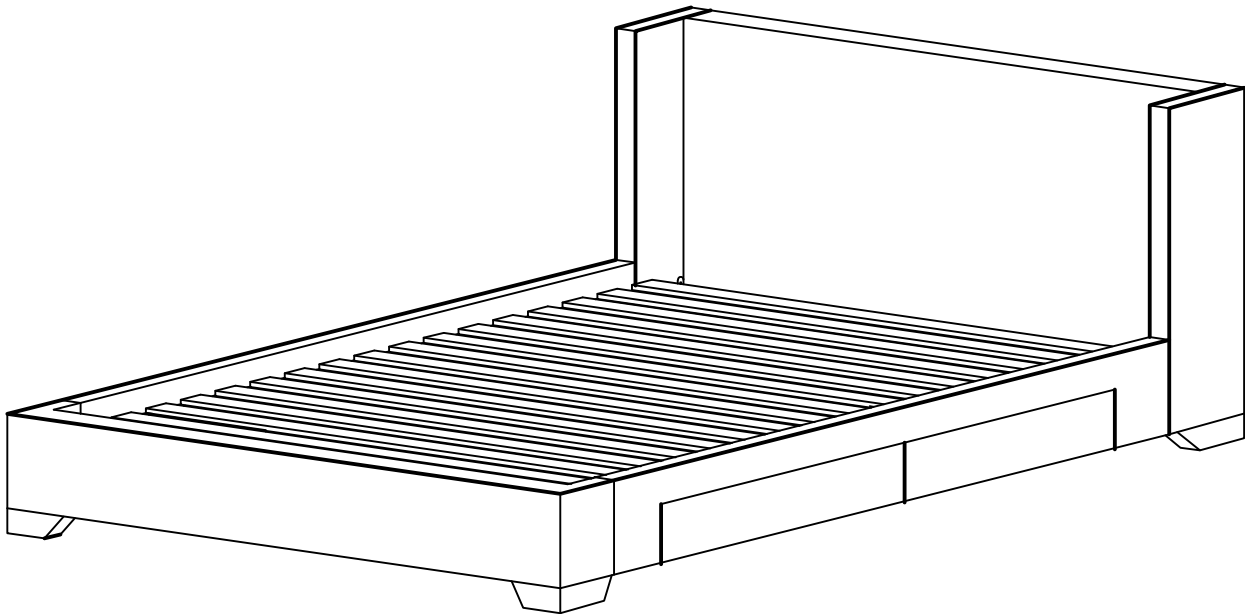

IMPORTANT NOTES:

Once unboxed, place all parts on a clean & smooth surface (i.e. rug, carpet) to avoid the parts from getting soiled or marred.

Follow the assembly instructions carefully, step by step.


Do not fully tighten bolts until the end of each step.

After bed is assembled do not attempt to move the bed by sliding or pushing, attempting to move the bed without removing the mattress and slats, without assuring the support pieces (legs & bars) have not shifted during the move **WILL RESULT IN THE BED POSSIBLY COLLAPSING, CAUSING BODILY HARM OR INJURY**


IF THE BED HAS EVER BEEN MOVED THE SUPPORT SYSTEM MUST BE DOUBLED CHECKED TO MAKE SURE NOTHING HAS SHIFTED!

Parts List

① Headboard 1pc

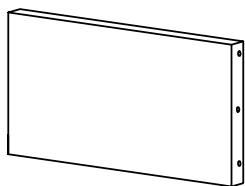


②A Wing(left) 1pc



②B Wing(right) 1pc




③ Side Rail 2pcs

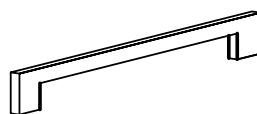

④ Footboard 1pc




⑤ Leg(front) 2pcs



⑥ Leg(back) 2pcs



⑦ Drawer Units 2pcs



⑧ Support Leg(105mm) 8pcs



⑨ Support Leg(285mm) 1pc



⑩ Support Bar(1555mm) 1pc



⑪ Support Bar(625mm) 4pcs



⑫ Support Bar(200mm) 4pcs




⑬ Support Bar(225mm) 2pcs



⑭ Support Bar(290mm) 2pcs



⑮ Slat 1set




Hardware List


A Bolt M8*30mm 30pcs 	B Allen Key M5 1pc 	C Nut M8 18pcs 	D Spring Washer M8 18pcs
E Flat Washer M8 18pcs 	F Spanner 1pc 	G Bolt M6*30mm 24pcs 	H Allen Key M3 1pc
I Flat Washer M6 24pcs 	J Bolt M8*50mm 14pcs 	K Bolt M6*20mm 4pcs 	

STEP ONE:

Attach the wings (2A & 2B) to the main part of the headboard (1). See diagram below.

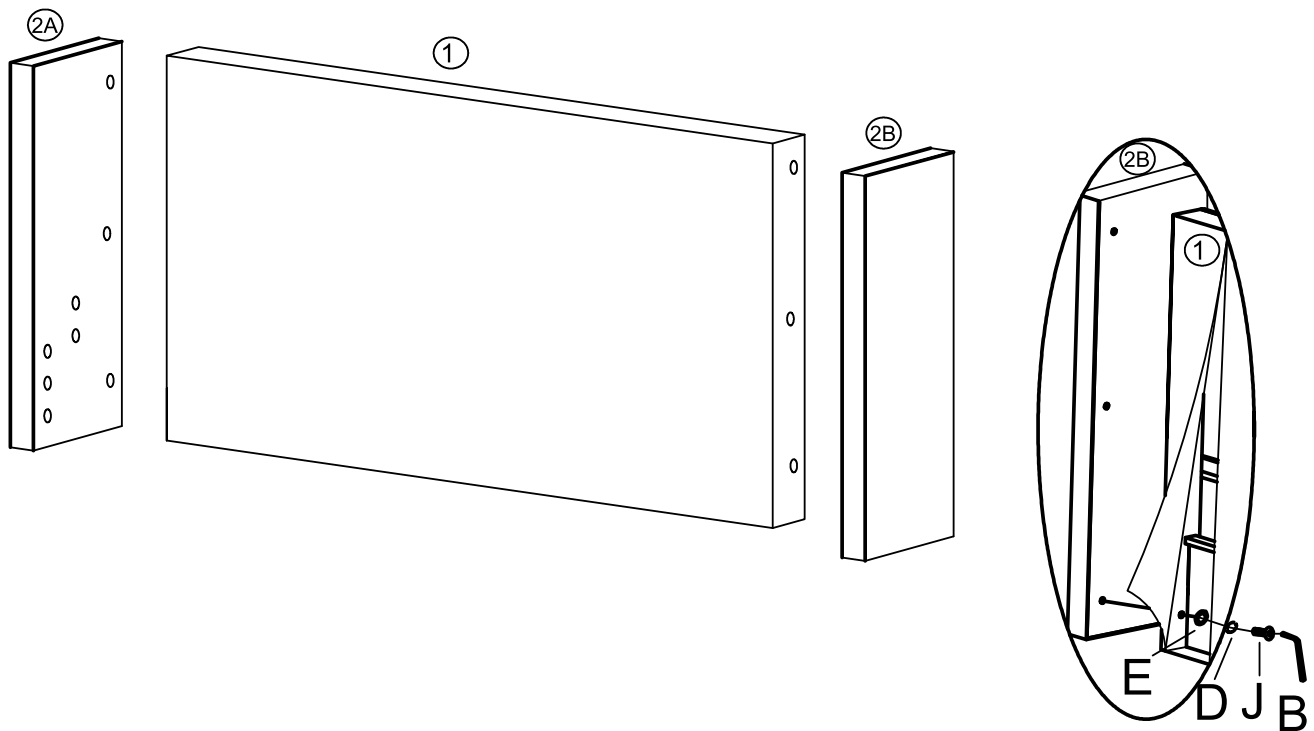**STEP TWO:**


Attach wooden feet to both the bottom of the wings (2A & 2B) and bottom of the footboard (4). See diagram below.

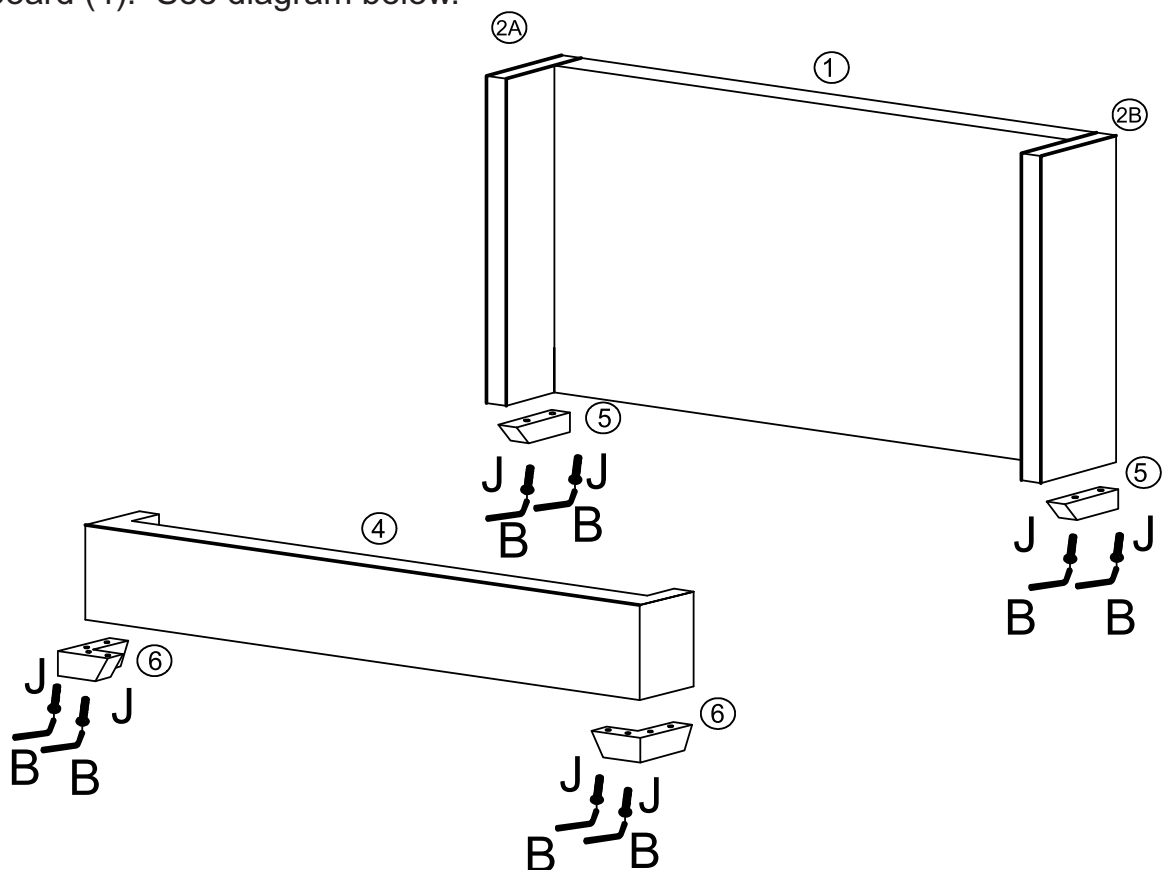

STEP THREE:

Attach the siderails (3A & 3B) to the headboard and footboard.
See diagram below.

NOTE: The siderails are interchangeable, there are no lefts and rights.

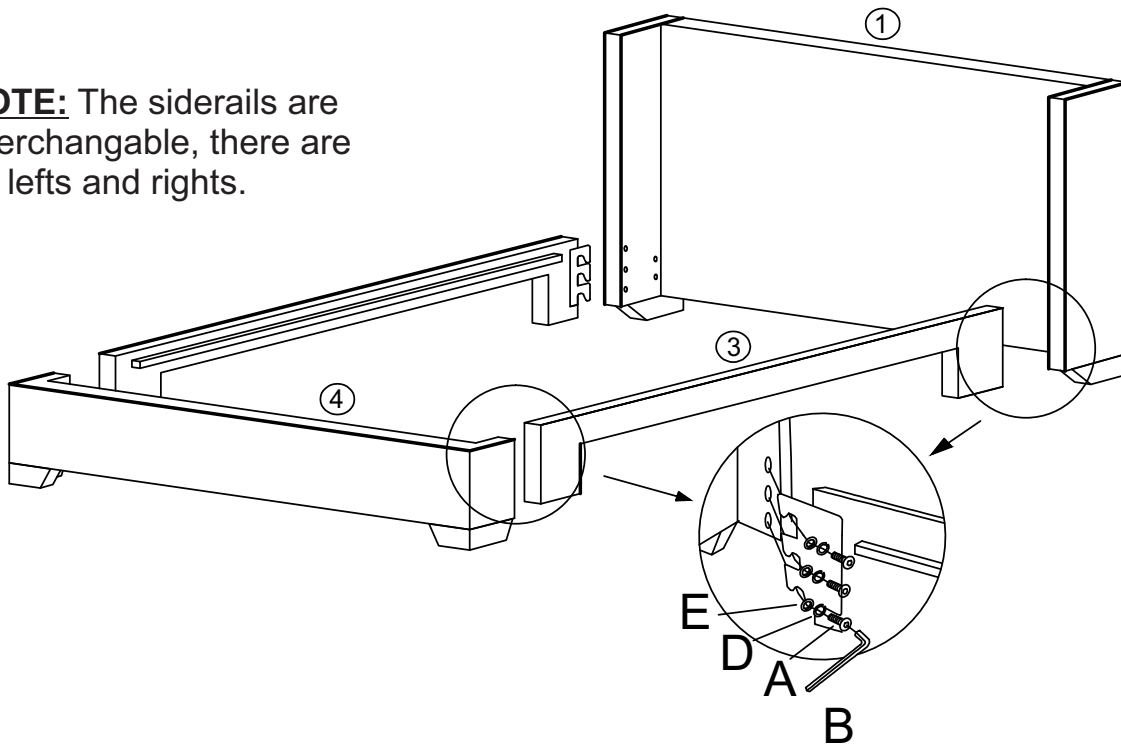


STEP FOUR:

Attach support leg (9) to the headboard support bar (10). See diagram below.


Attach the headboard support bar (10) to the bottom of the headboard spanning between the inside of the two headboard wings. See diagram below

Attach the 4- siderail support bar extensions (12) further connecting the siderails to both the headboard and footboard. See diagram below.

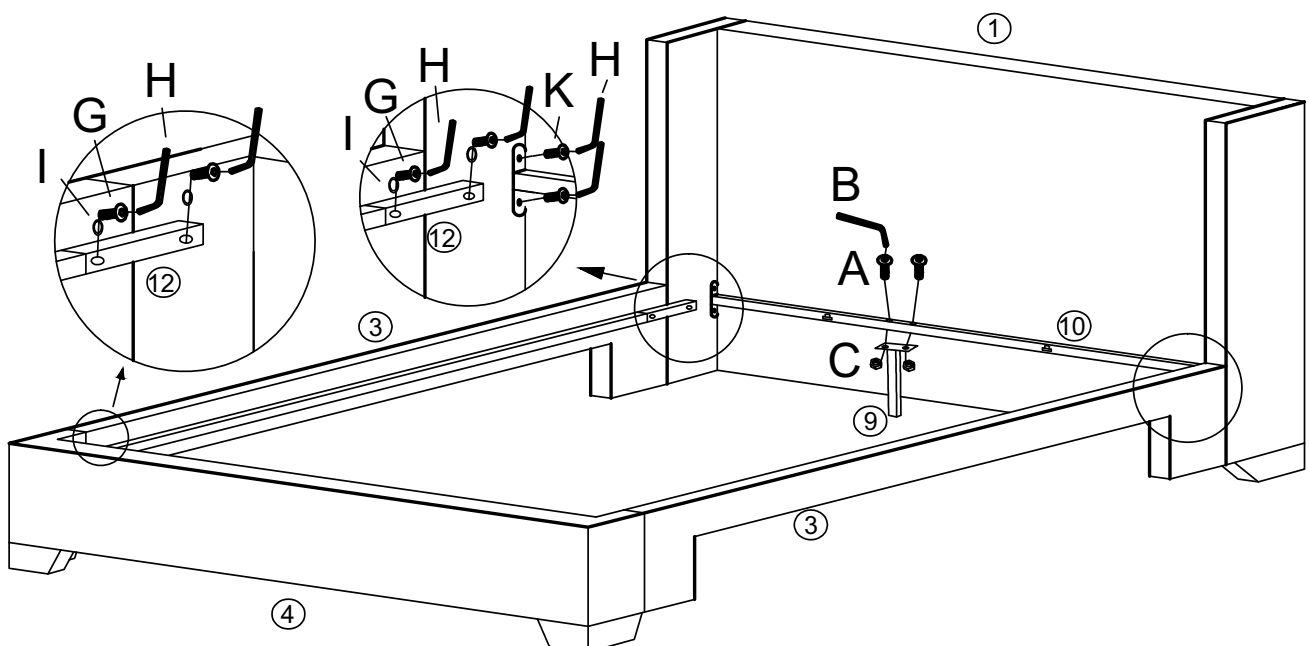


STEP FIVE:

Attach the 4- short support legs (8) to the underside of each drawer cage. See diagram below.

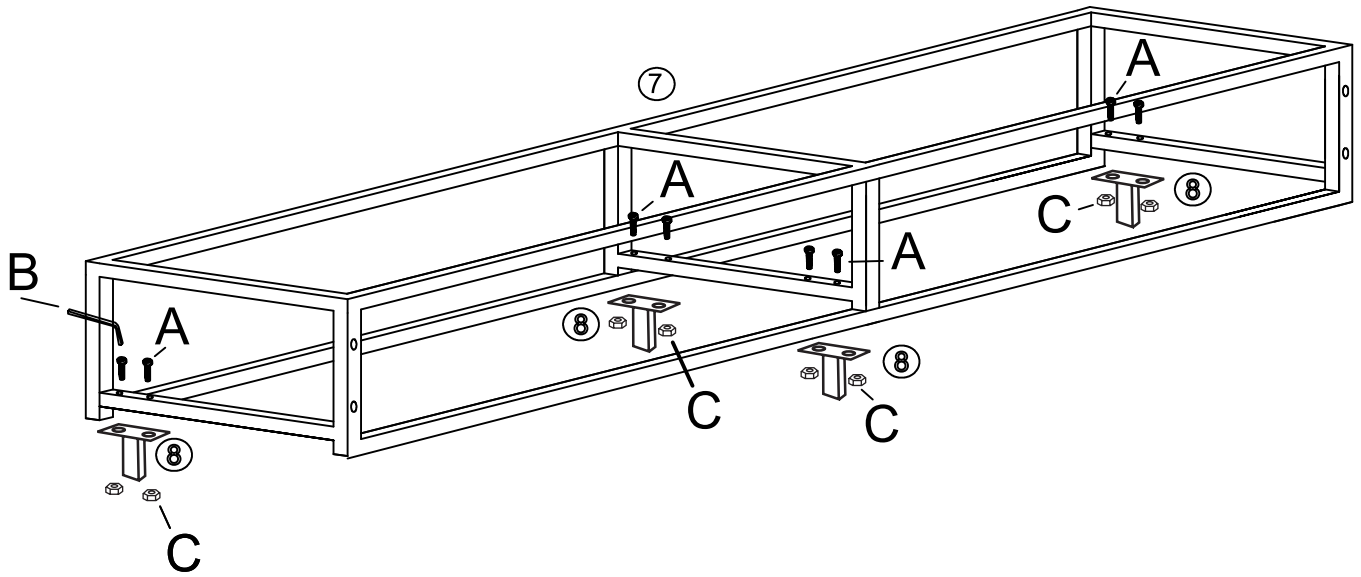


STEP SIX:

Attach each drawer cage to the inside of the siderails using the 8- M6 bolts (G). Loosely screw in all bolts before completely tightening them. See Diagram.

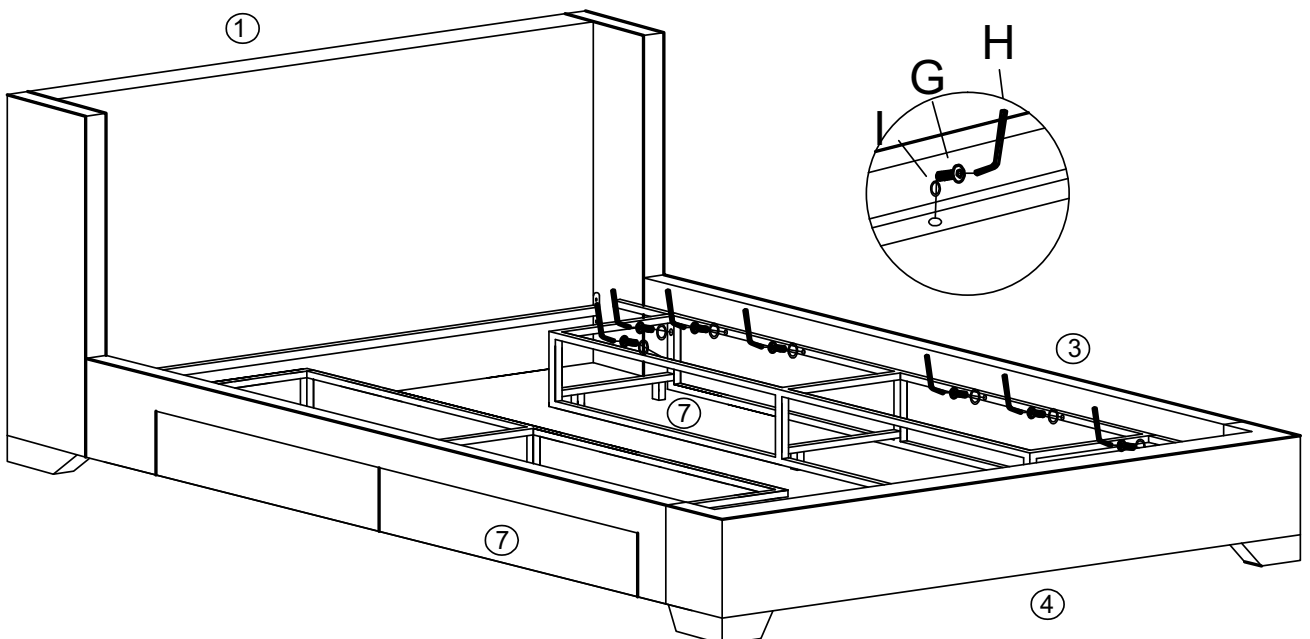


STEP SEVEN:

Attach the 4- support bars (11) connecting both drawer cages.
See diagram below.

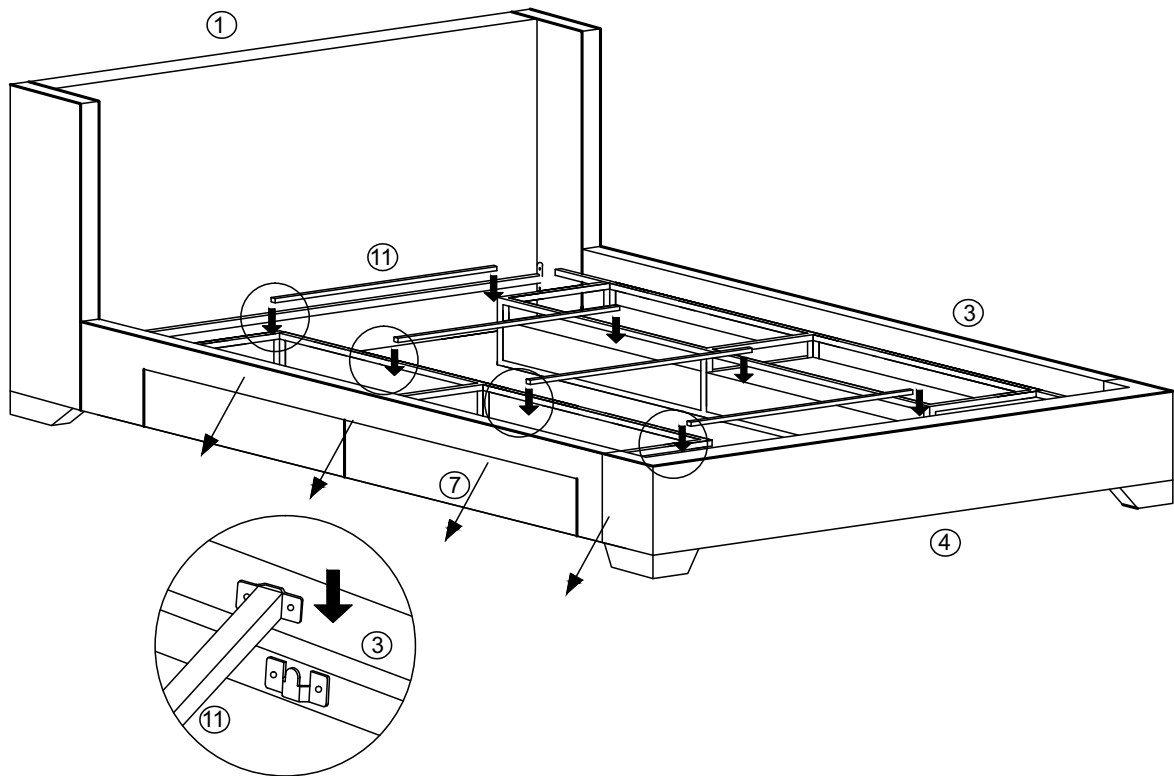**STEP EIGHT:**

Attach the 2- 11.5" support bars (14) connecting to the headboard.
See Diagram.

Attach the 2- 9" support bars (13) connecting to the footboard
See Diagram.

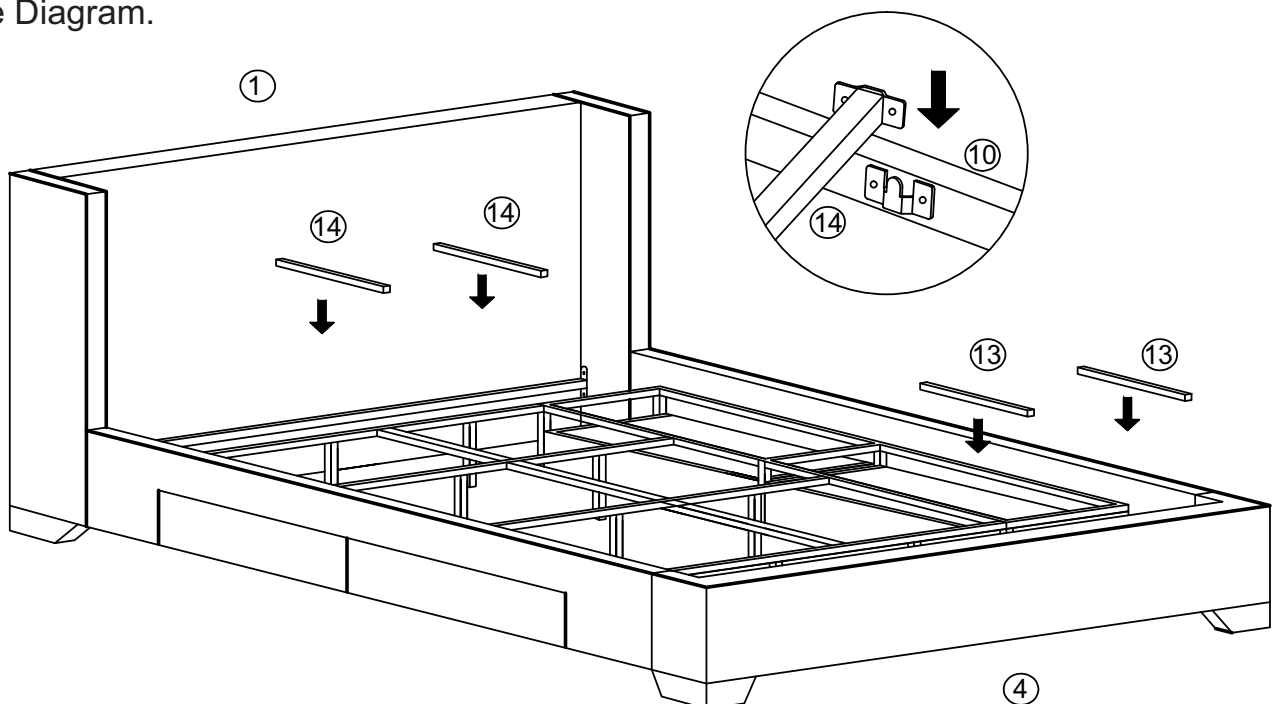

STEP NINE:

Lay down slats.
See Diagram.

Your bed is now assembled! ENJOY!

