


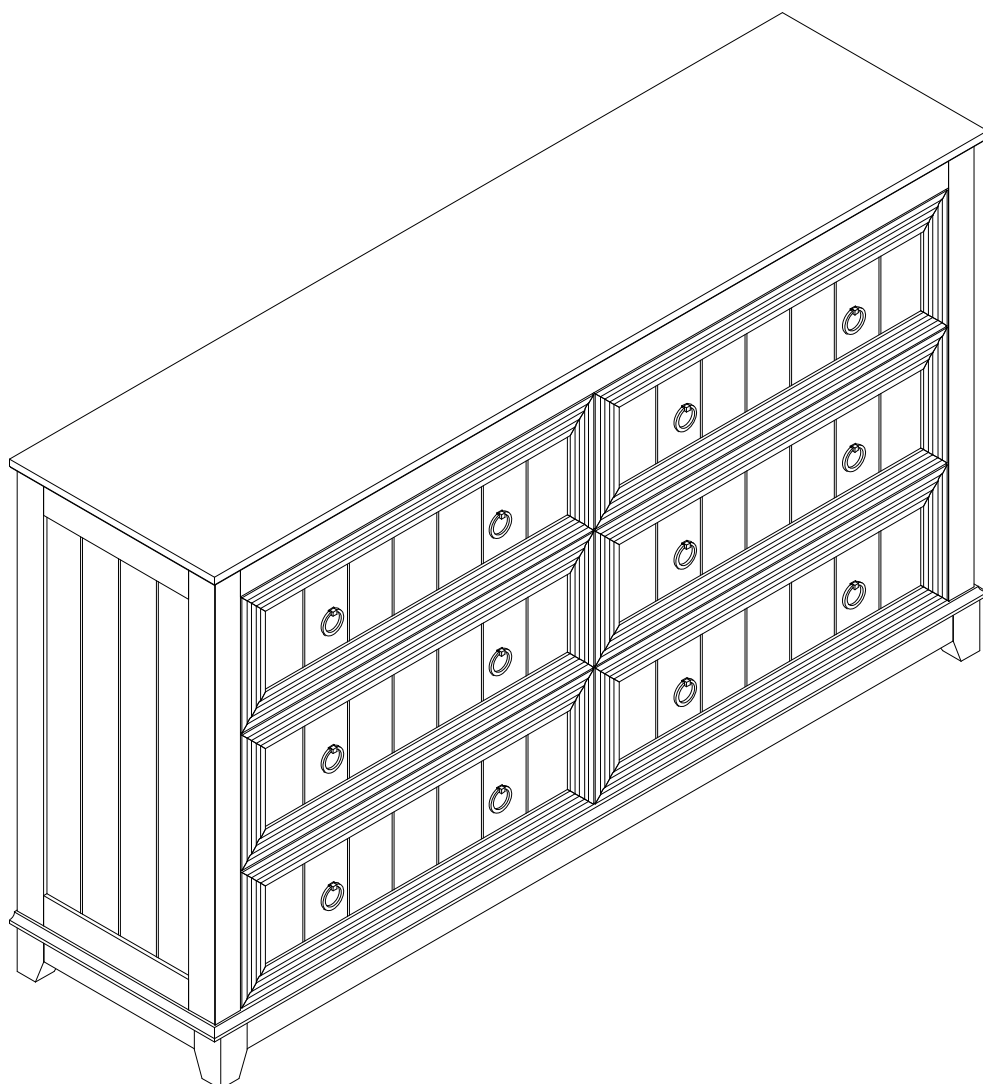

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product



- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

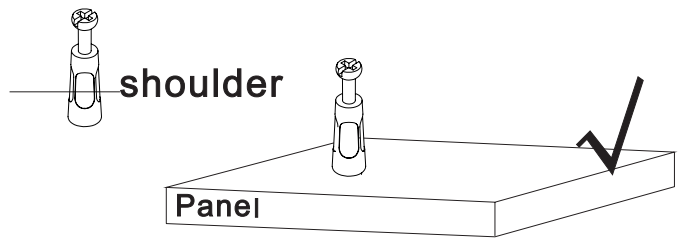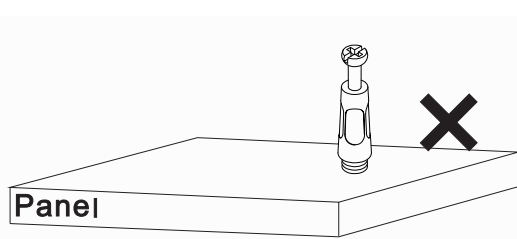


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

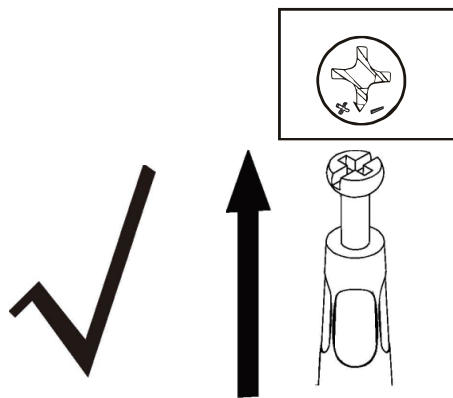


CORRECT

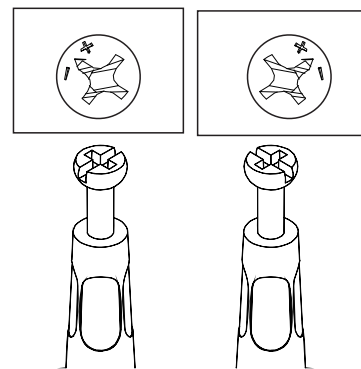


WRONG

When fitting cam lock, ensure starting position is correct before you insert cam lock to quickfit.


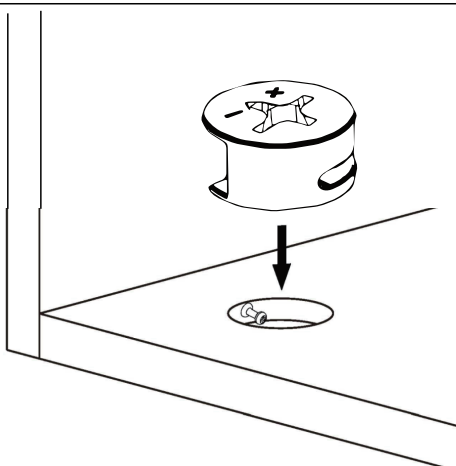


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

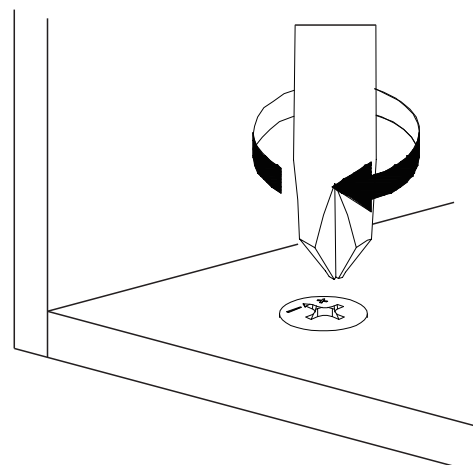


Turn cam lock clockwise to tighten.



















If the top Panel collapses or bends
Please adjust according to the following image

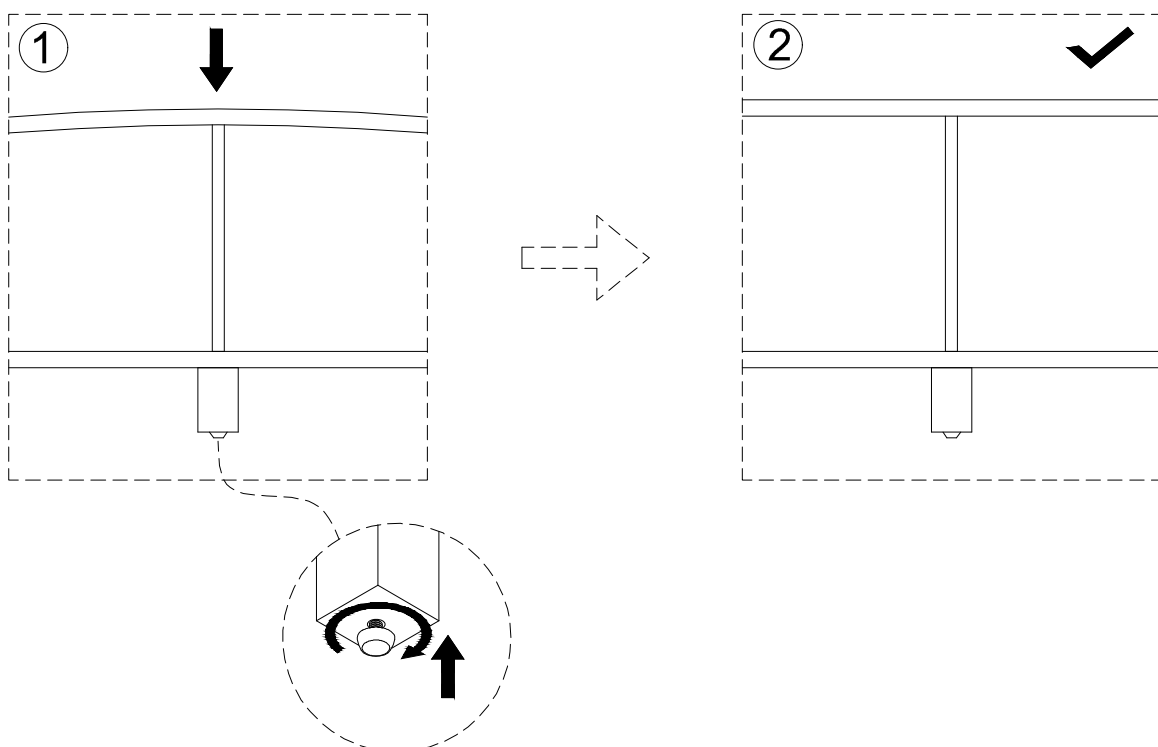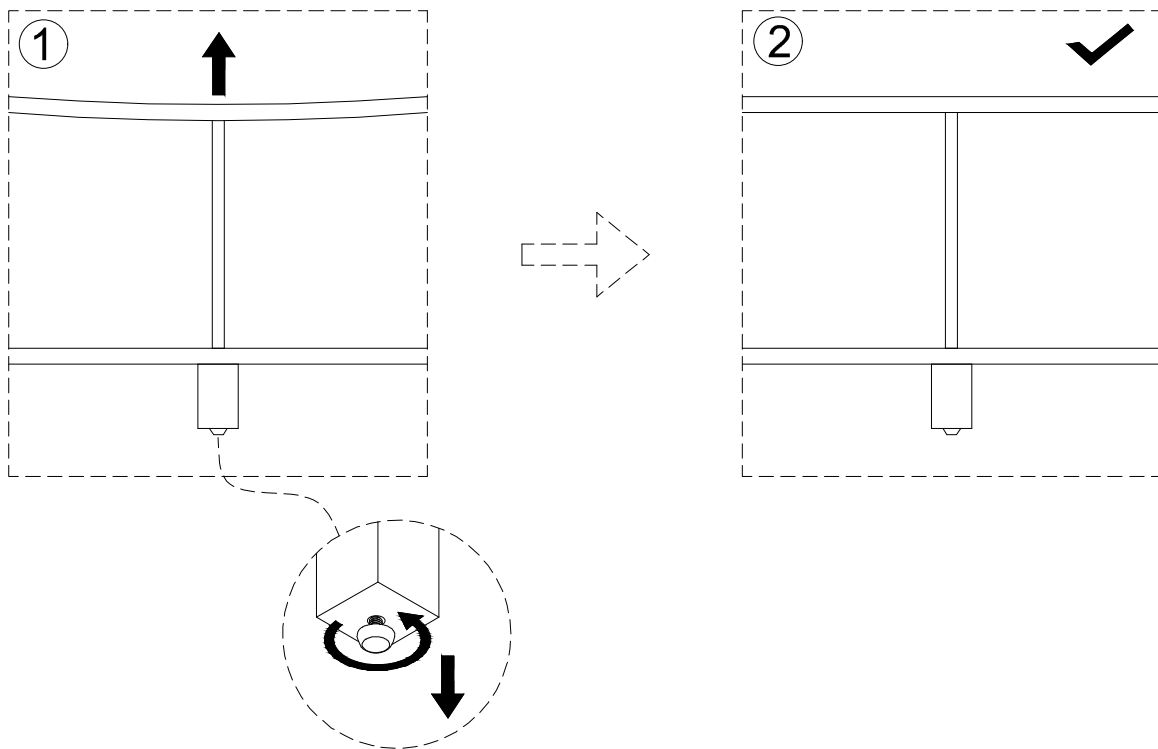








PART LIST

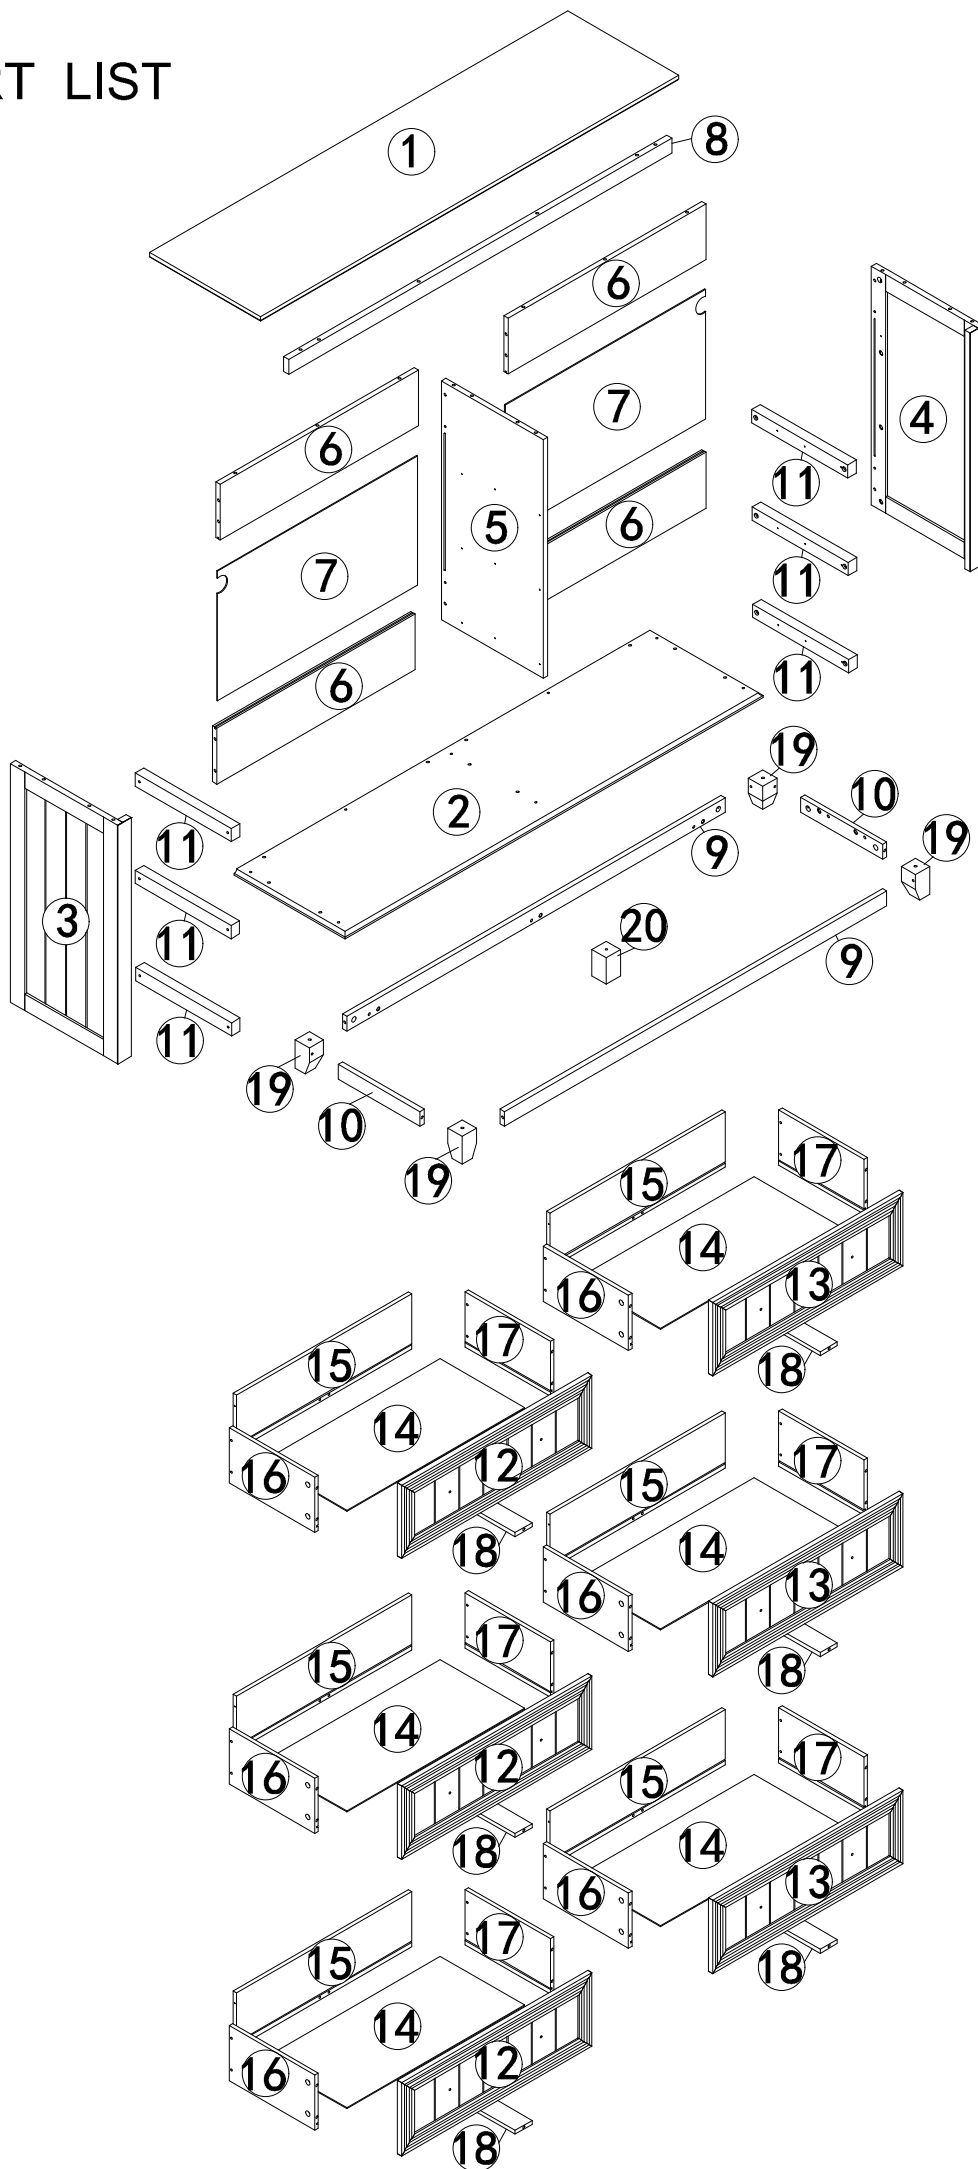


PART LIST

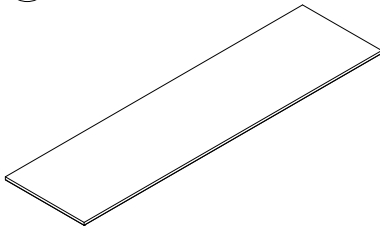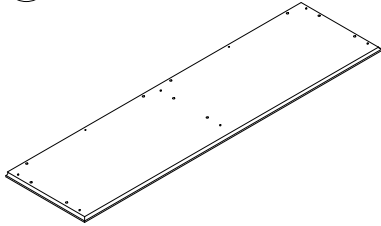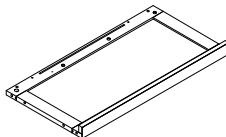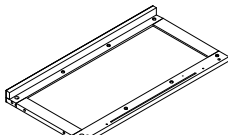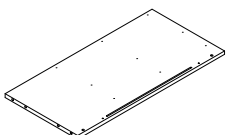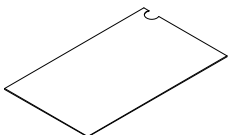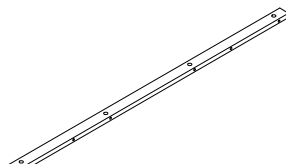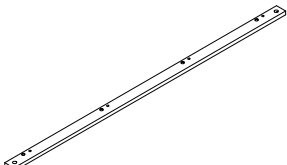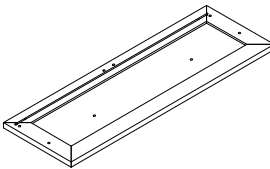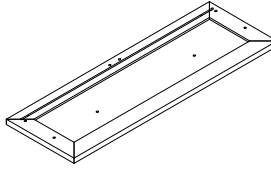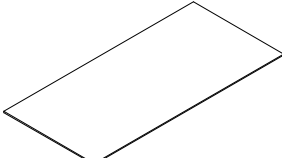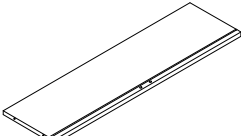①  1PC	②  1PC	③  1PC	
④  1PC	⑤  1PC	⑥  4PCS	
⑦  2PCS	⑧  1PC	⑨  2PCS	
⑩  2PCS	⑪  6PCS	⑫  3PCS	⑬  3PCS
⑭  6PCS	⑮  6PCS	⑯  6PCS	
⑰  6PCS	⑱  6PCS	⑲  4PCS	⑳  1PC

HARDWARE LIST

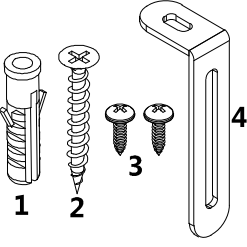
A  ø6X35 (60+3)PCS	B  ø15X9.5 (60+3)PCS	C  ø4X32 (36+2)PCS
D  ø8X30 (34+2)PCS	E  ø6X25 (12+1)PCS	F  ø6X12 (24+1)PCS
G  12PCS	H  (8+1)PCS	I  ø3X15 (8+1)PCS
J  6PCS	K  ø3X12 (63+4)PCS	L  ø4X12 (9+1)PCS
M  12PCS	N  (12+1)PCS	O  ø5X40 (6+1)PCS
P  2SET	 1PC	 1PC

STEP 1

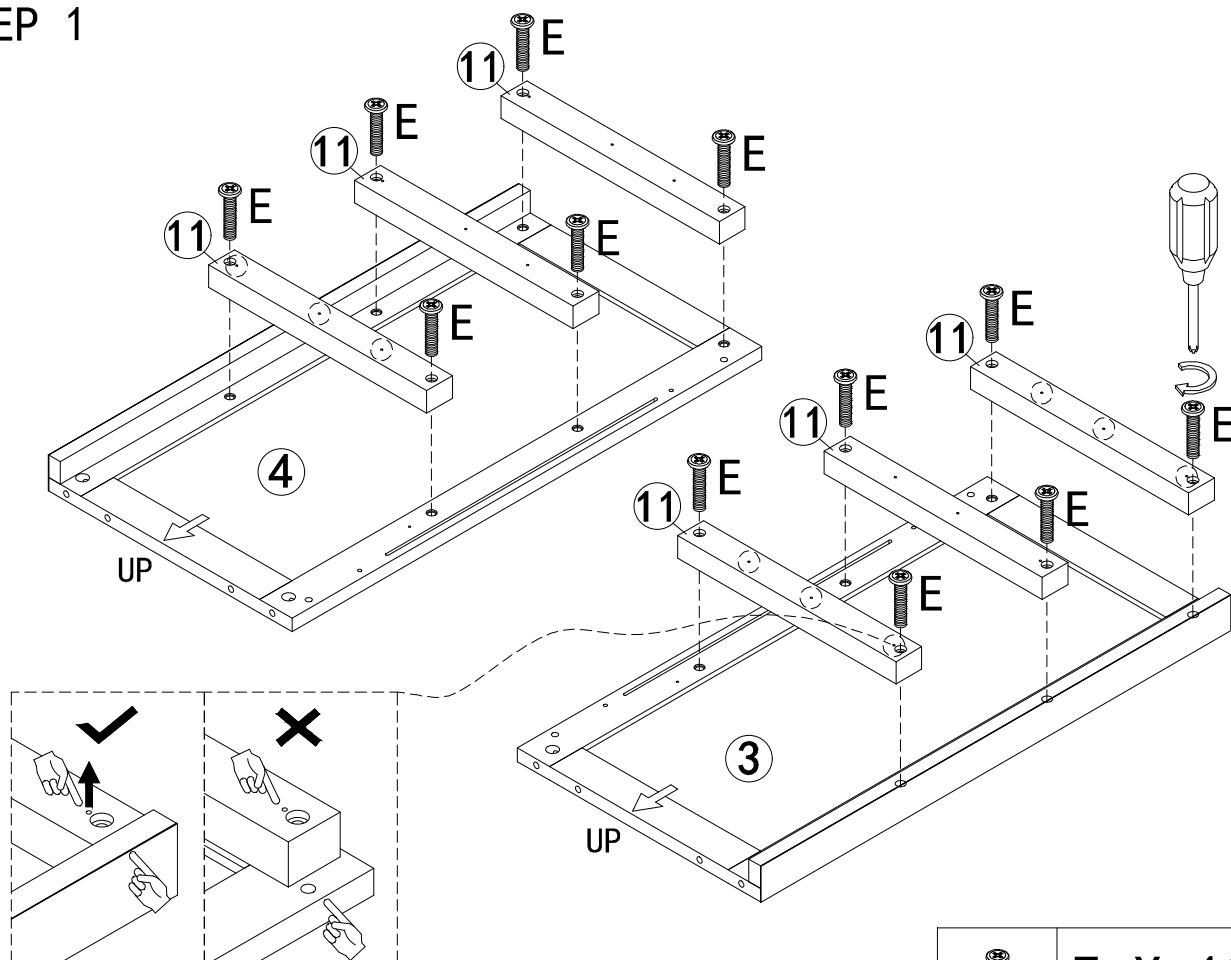


E X 12PCS

STEP 2


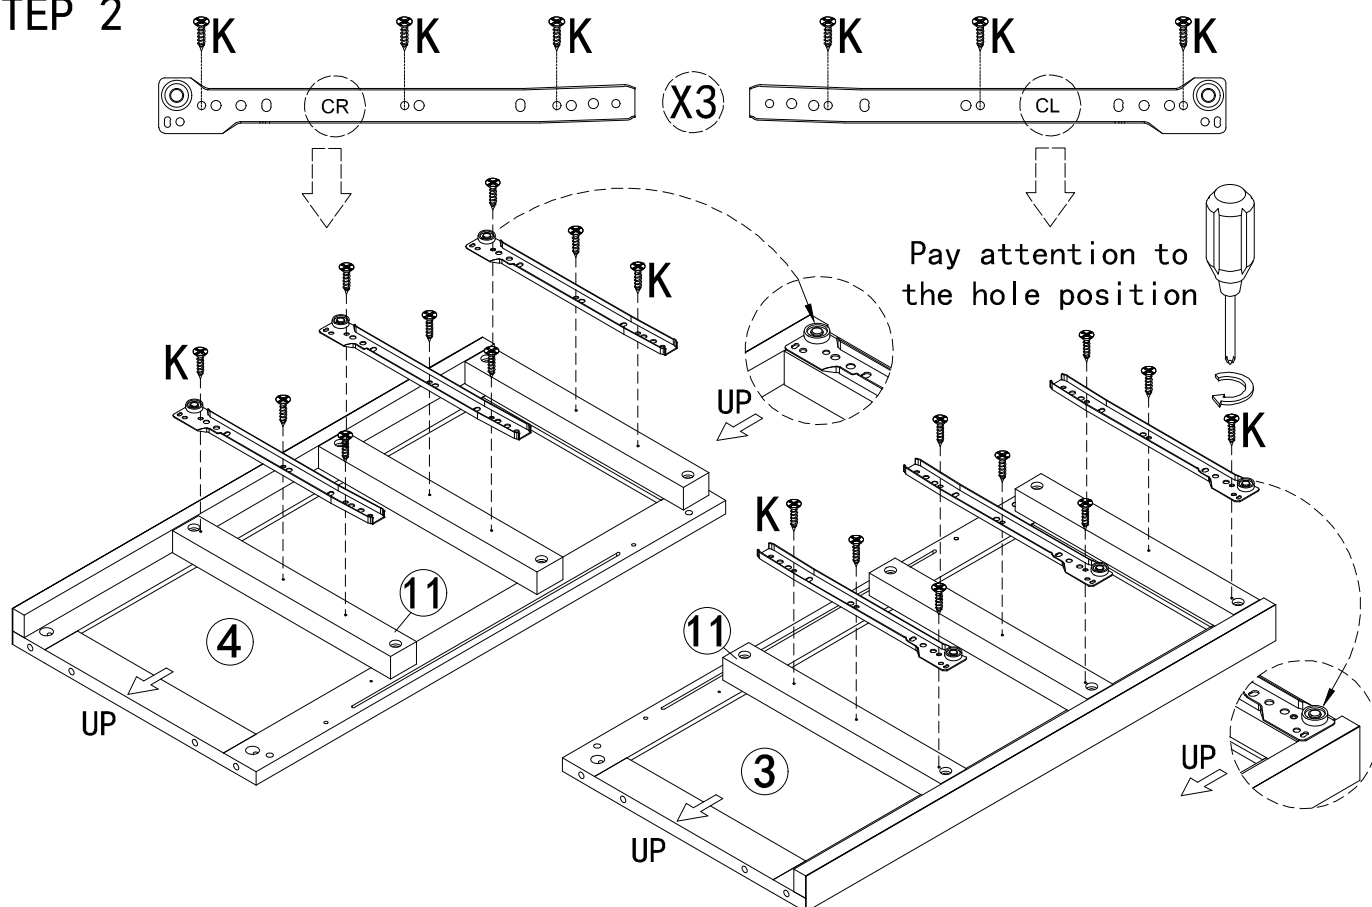


K X 18PCS


STEP 3

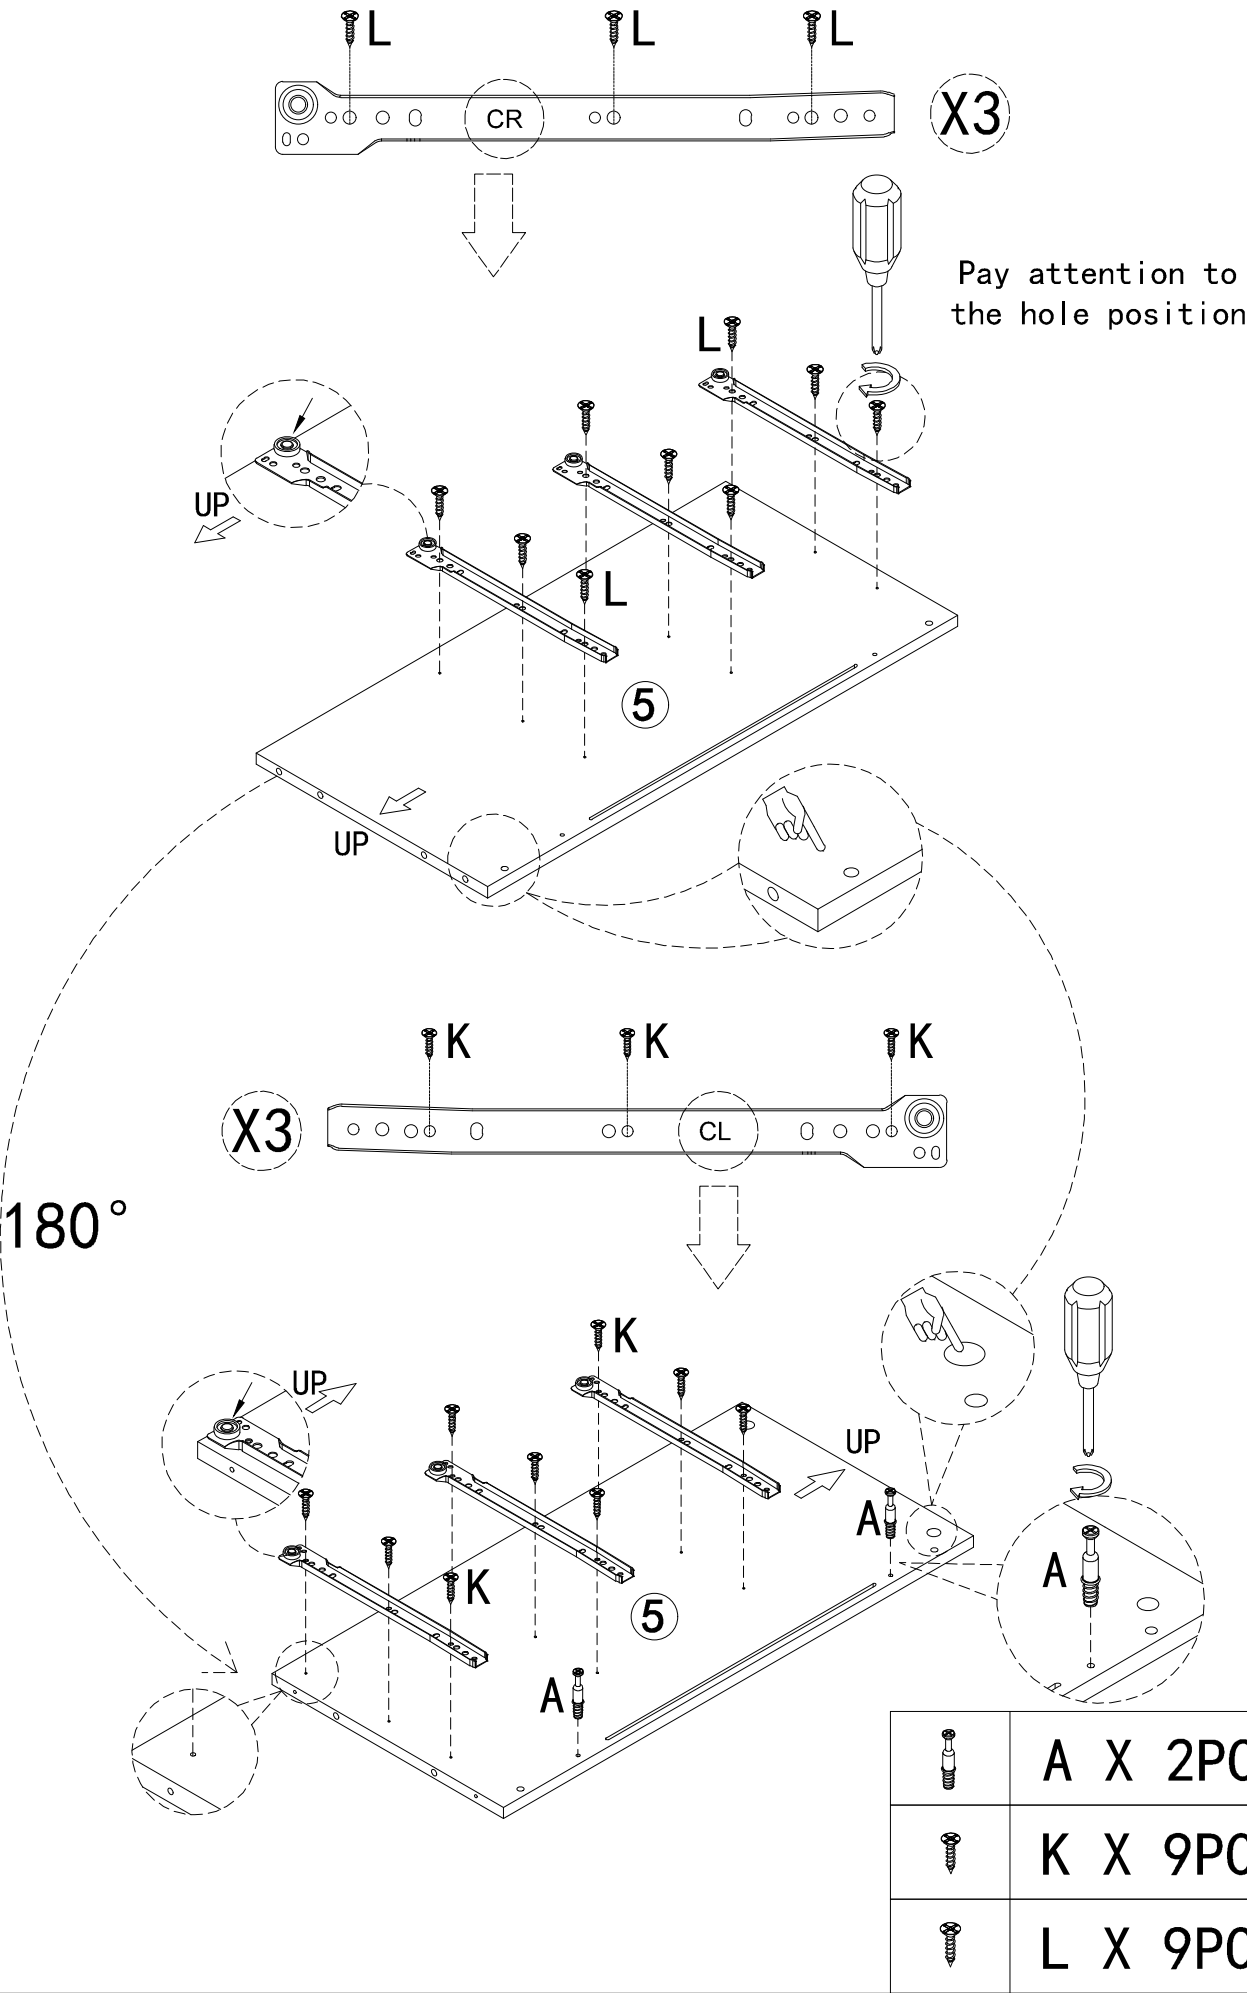

STEP 4

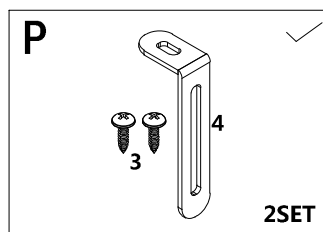
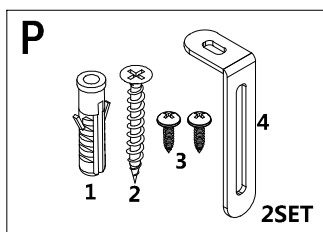


Note: Put the anti-tip device P4 on the top, near the back side, and fix it with a screw P3.

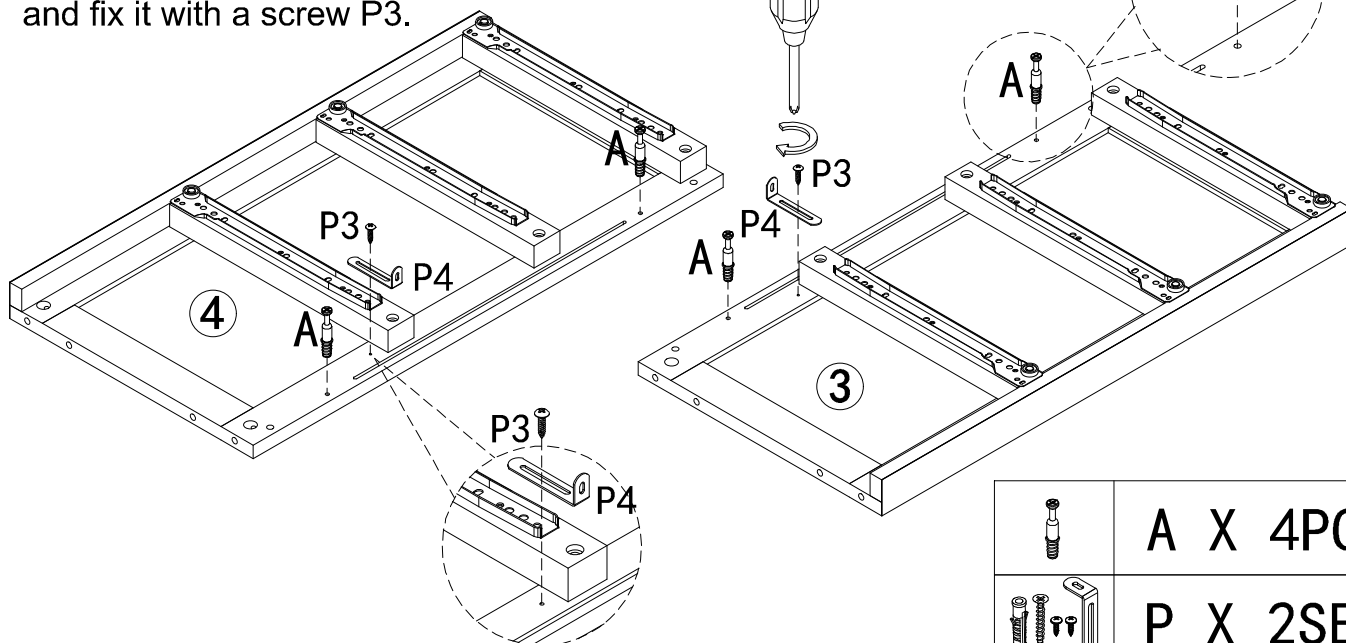


	A X 4PCS
	P X 2SET

STEP 5

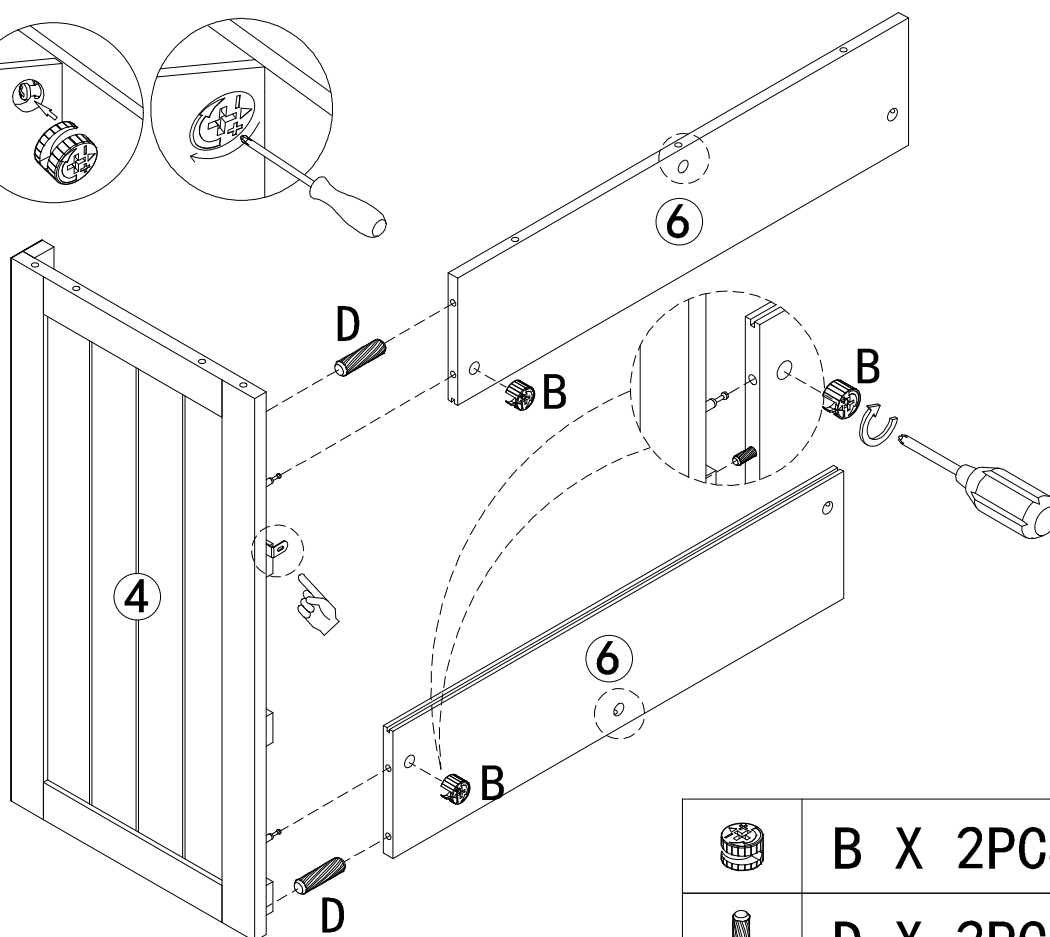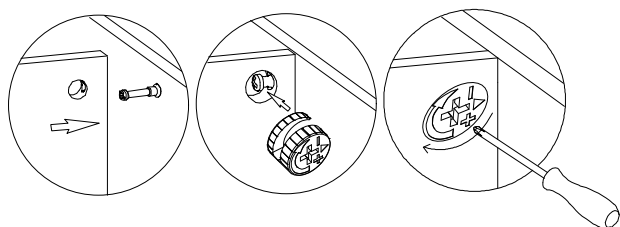


	B X 2PCS
	D X 2PCS

STEP 6


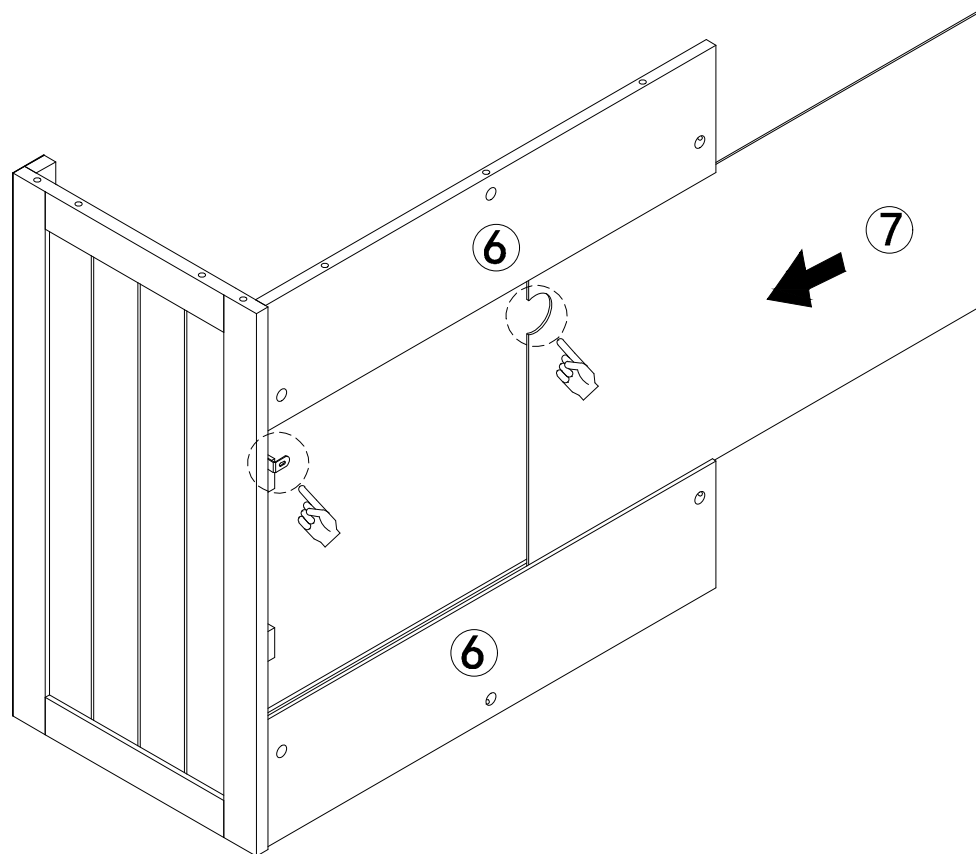


STEP 7

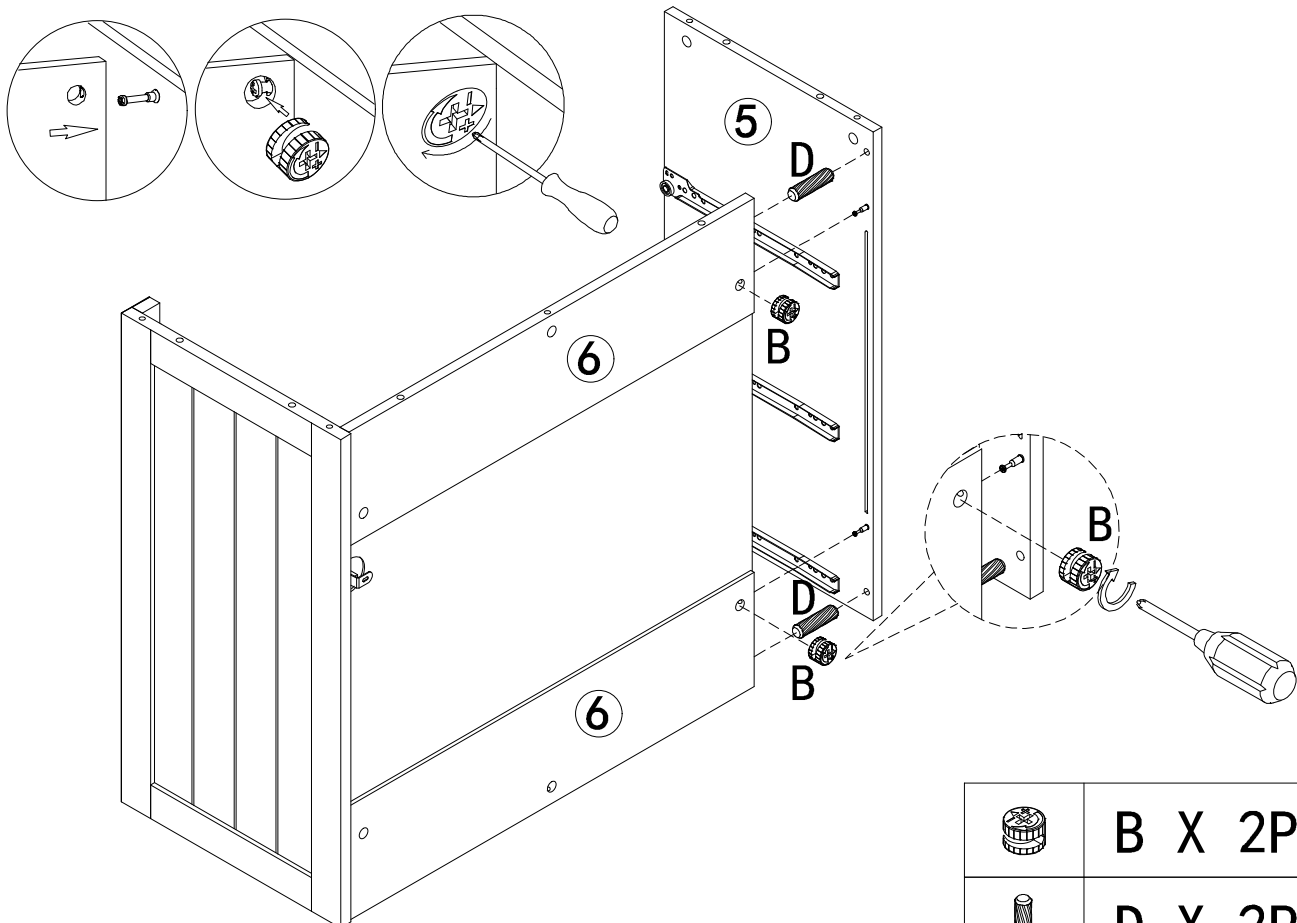


	B X 2PCS
	D X 2PCS

STEP 8

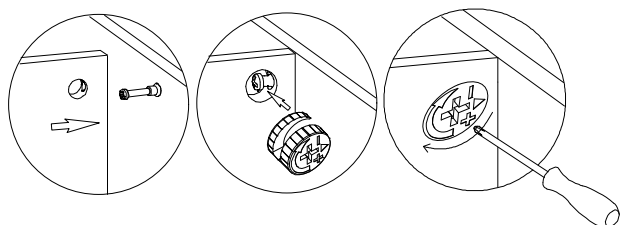
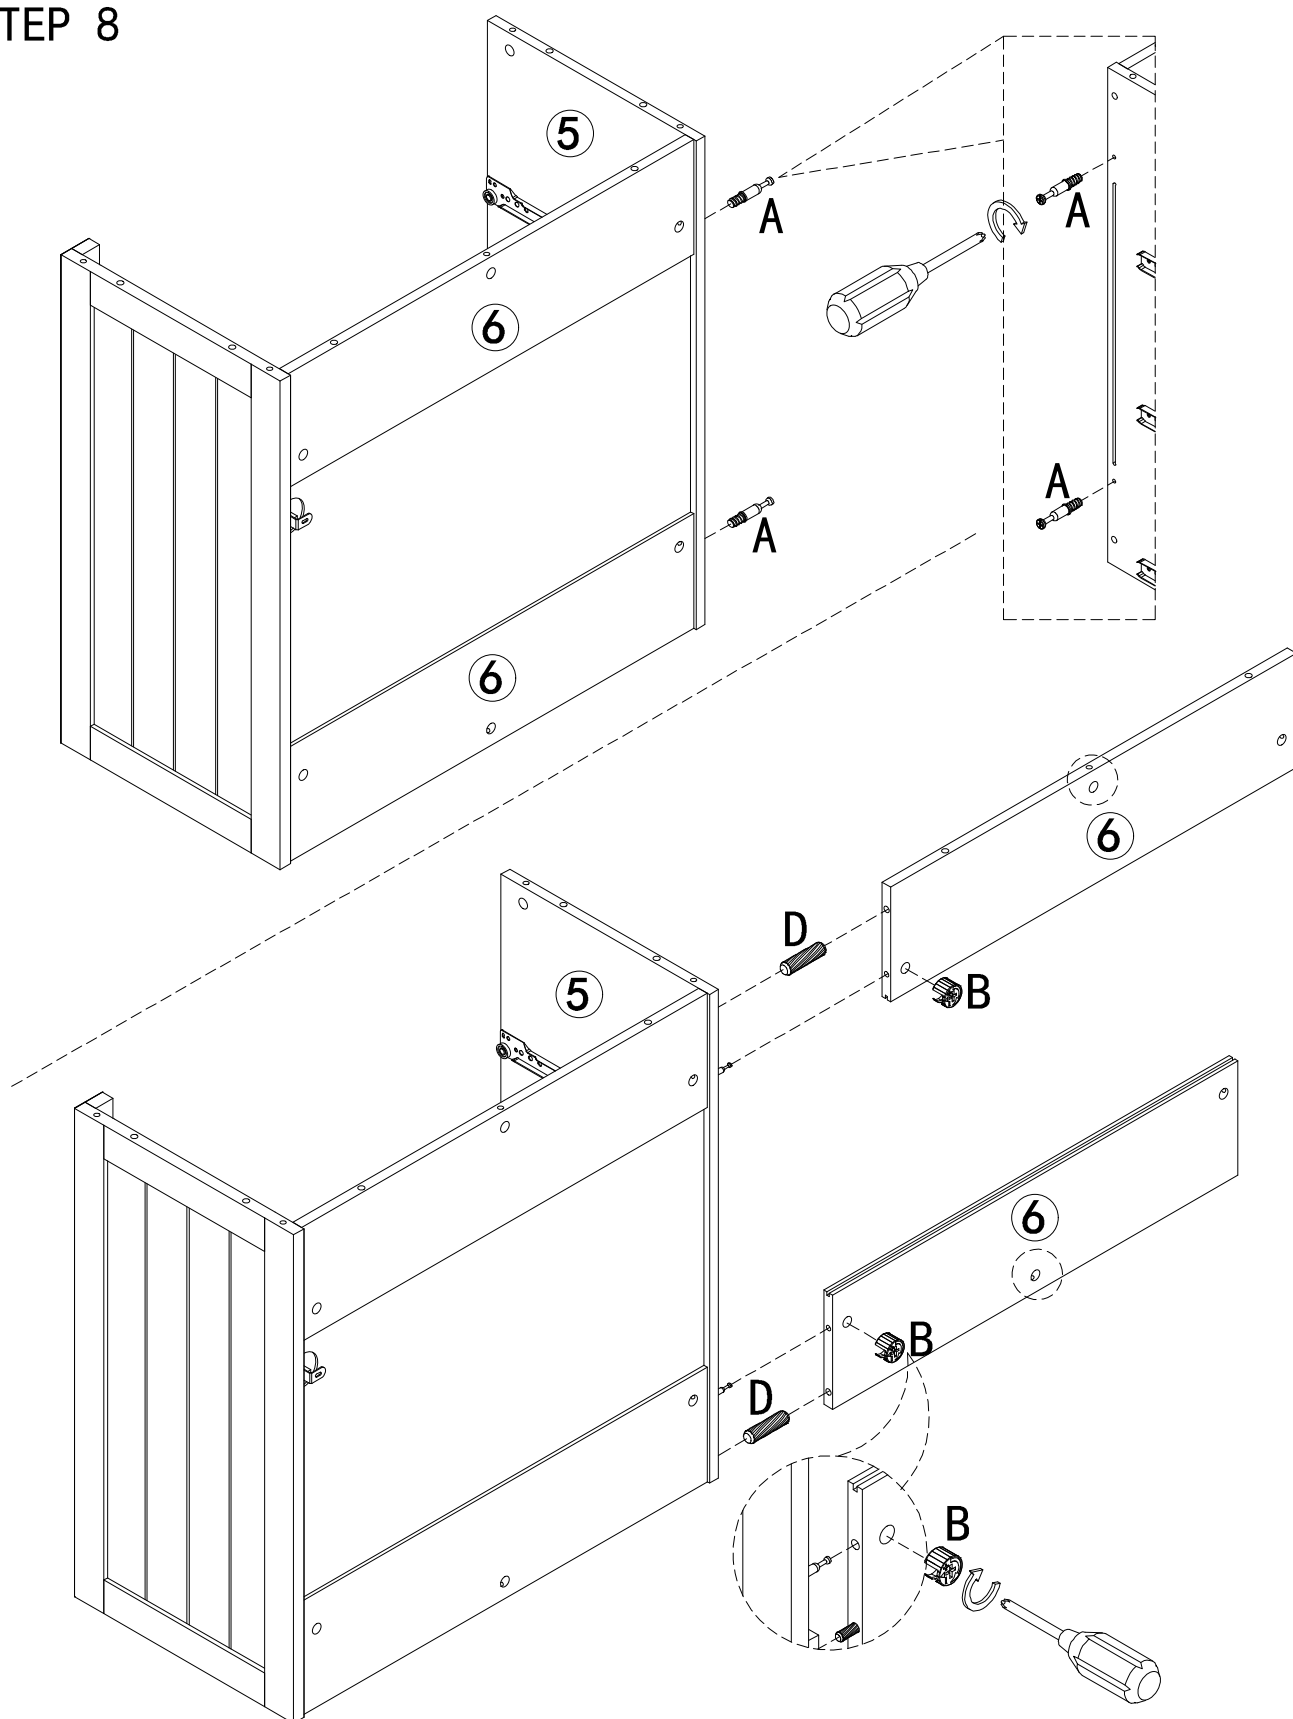


	A X 2PCS
	B X 2PCS
	D X 2PCS

STEP 9

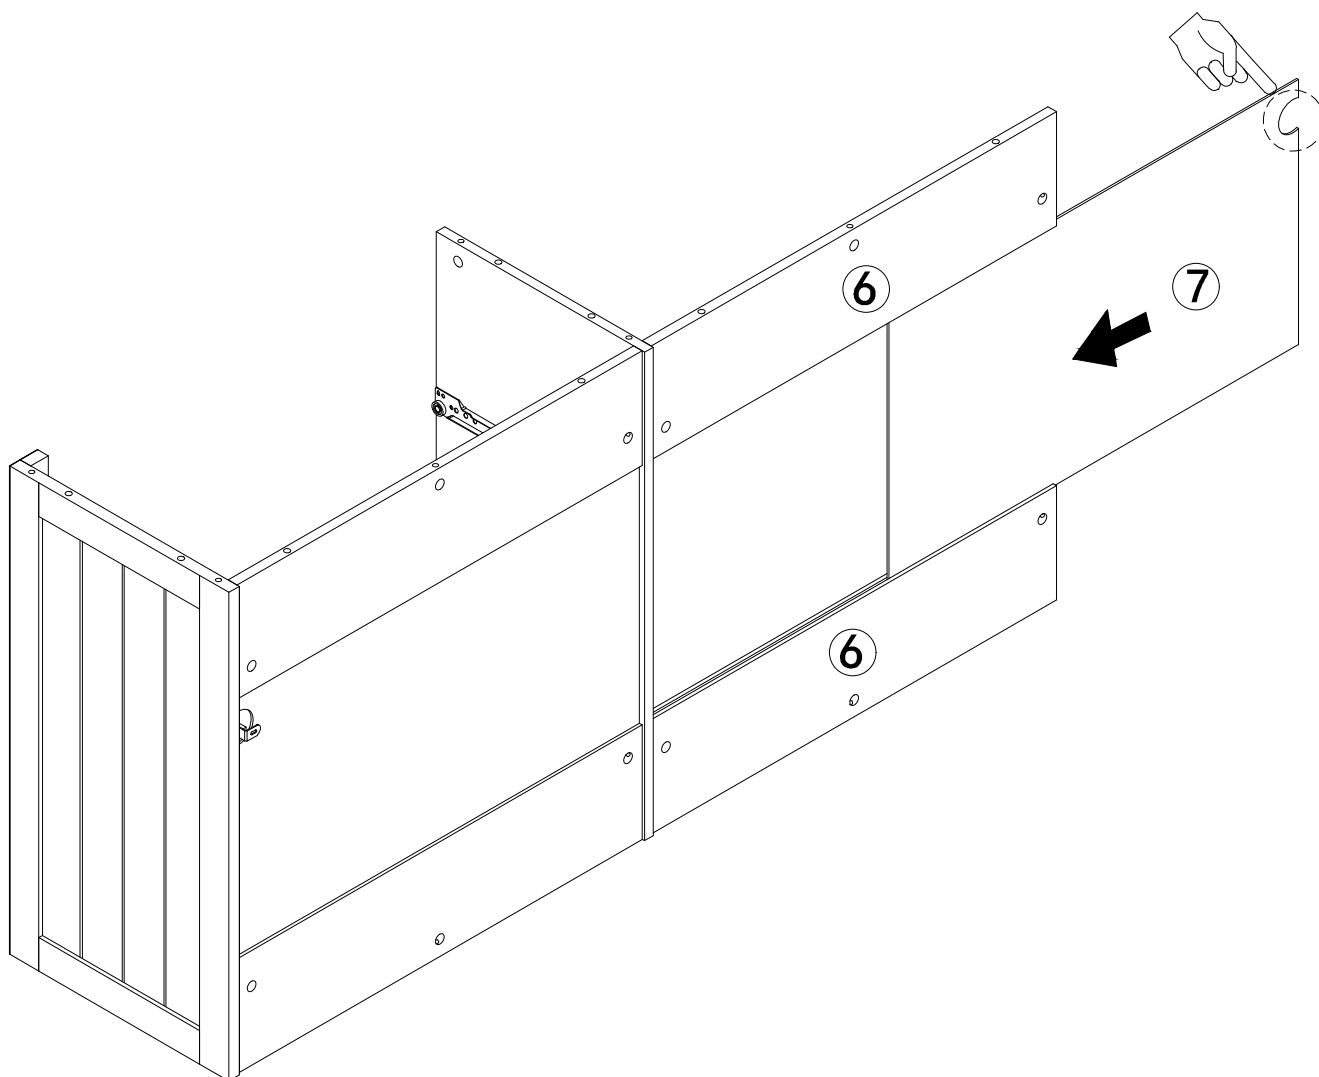


STEP 10

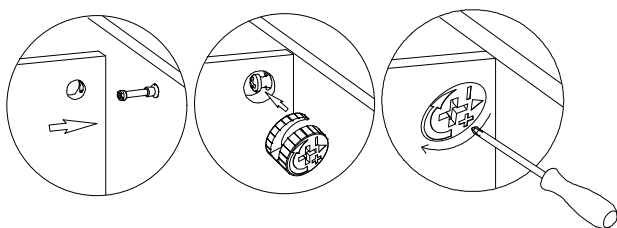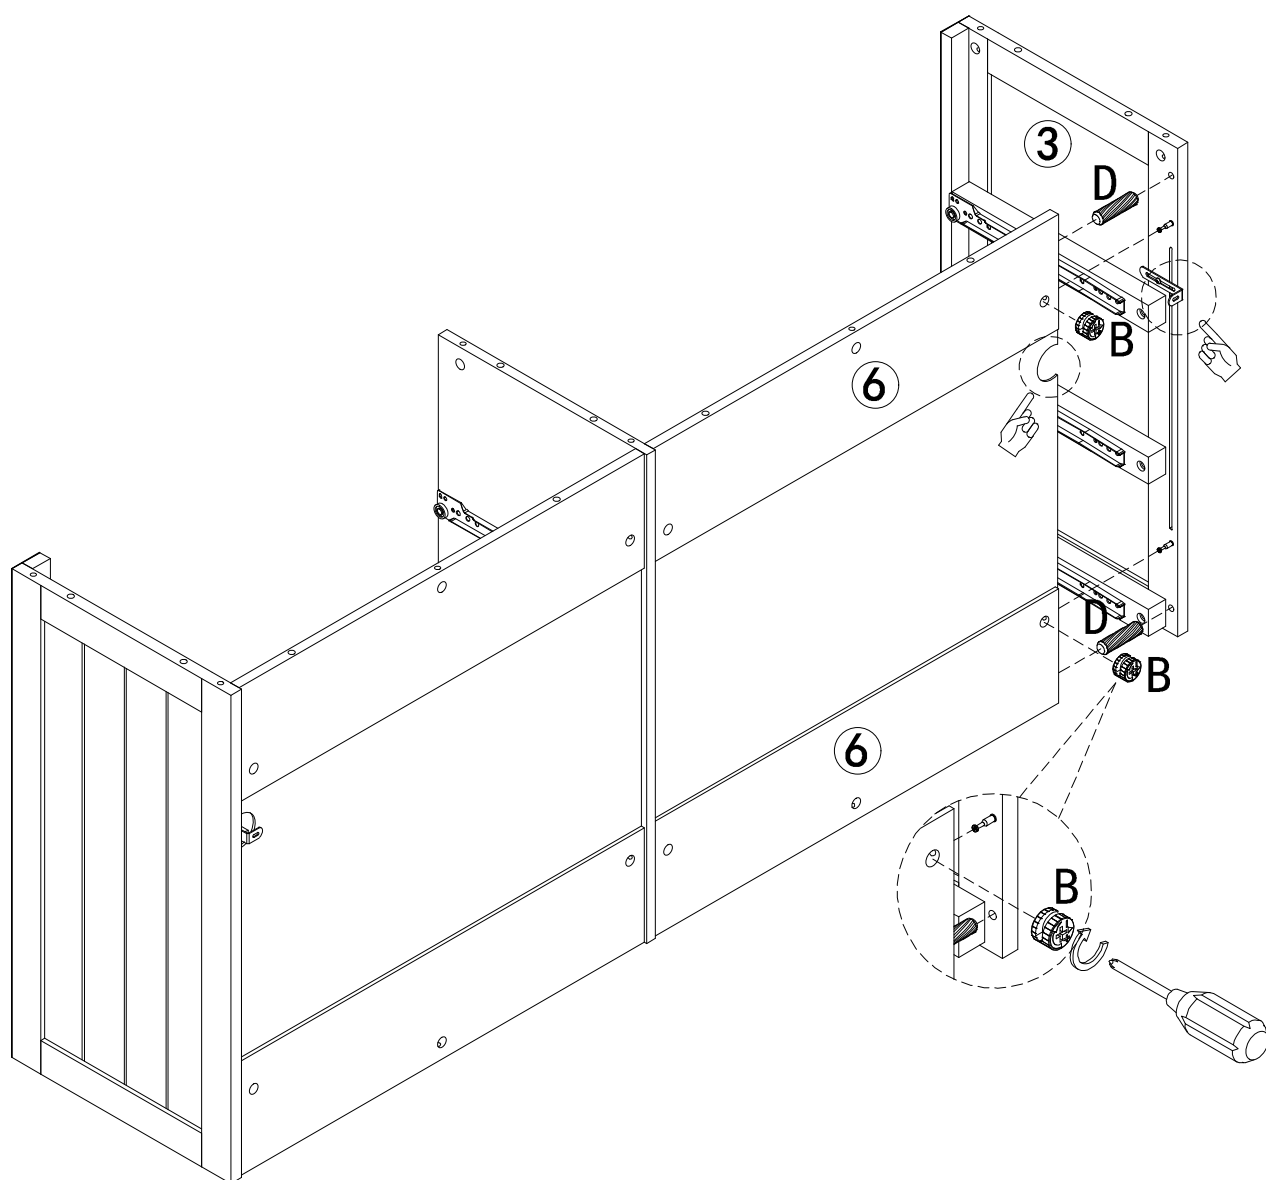


	B X 2PCS
	D X 2PCS

STEP 11

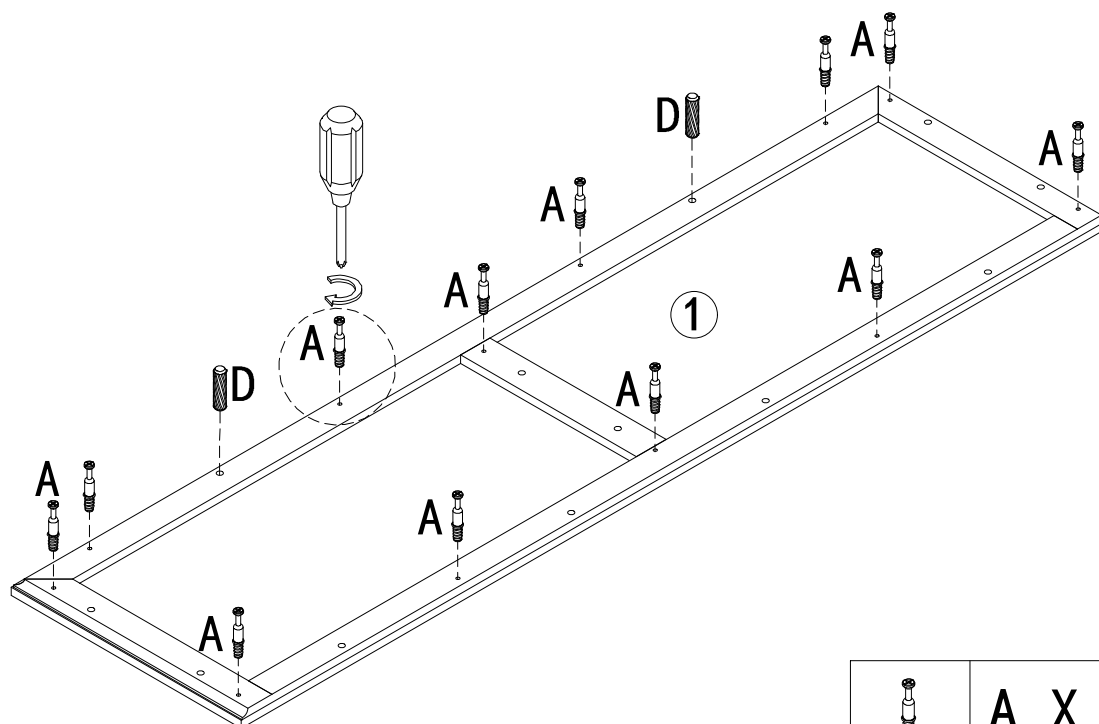


	A X 12PCS
	D X 2PCS

STEP 12

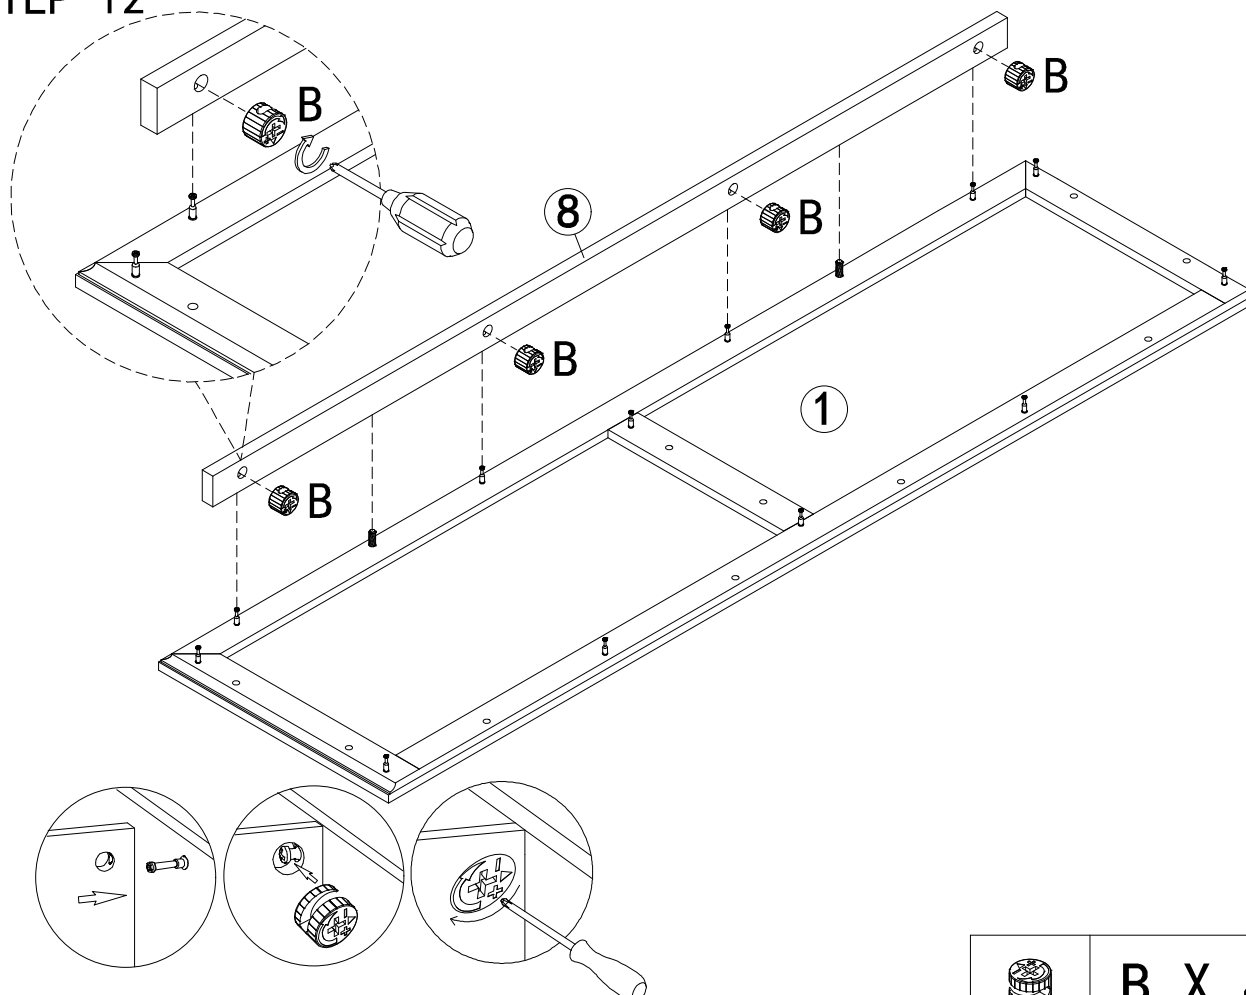



	B X 4PCS
---	----------

STEP 13

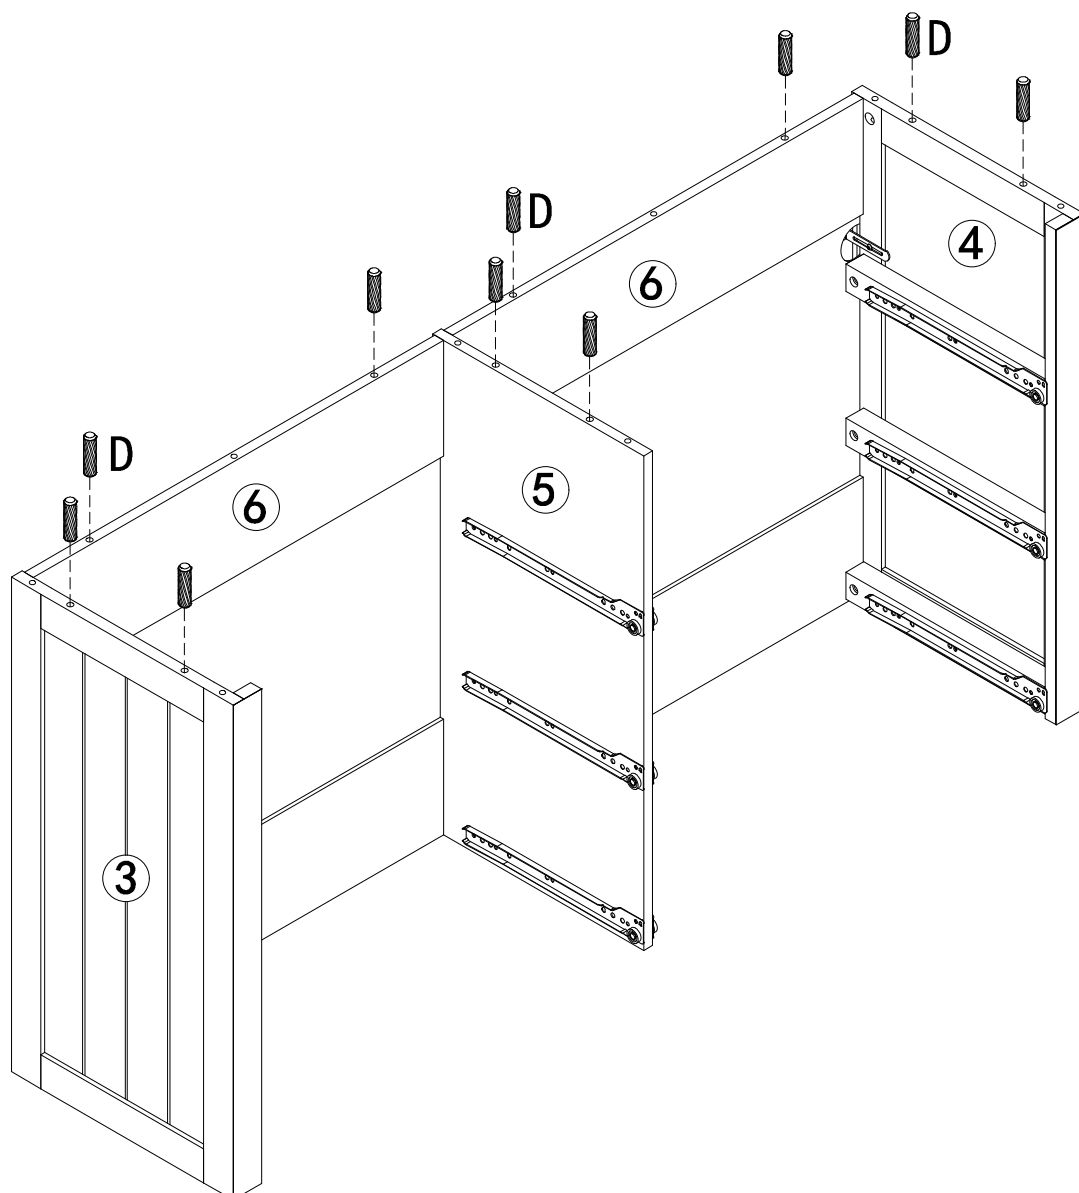


D X 10PCS

STEP 14

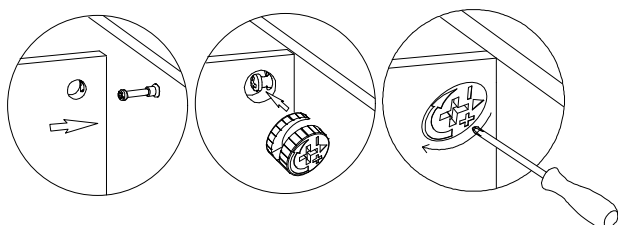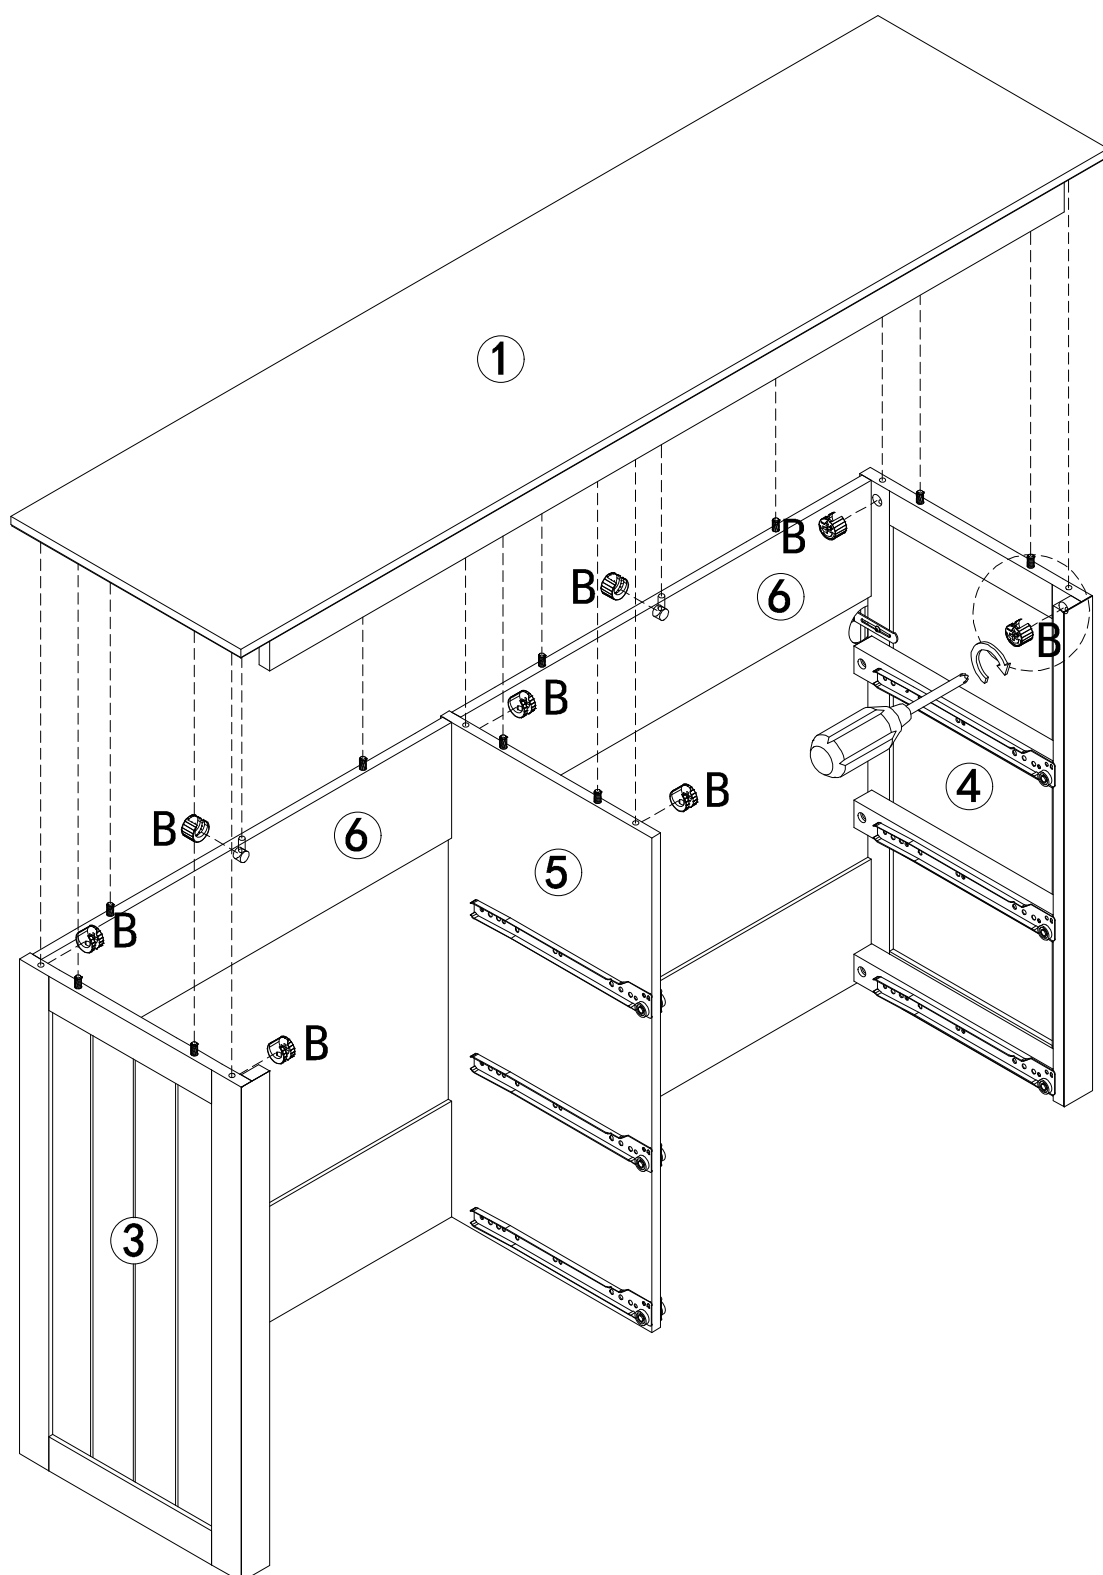


B X 8PCS


STEP 15

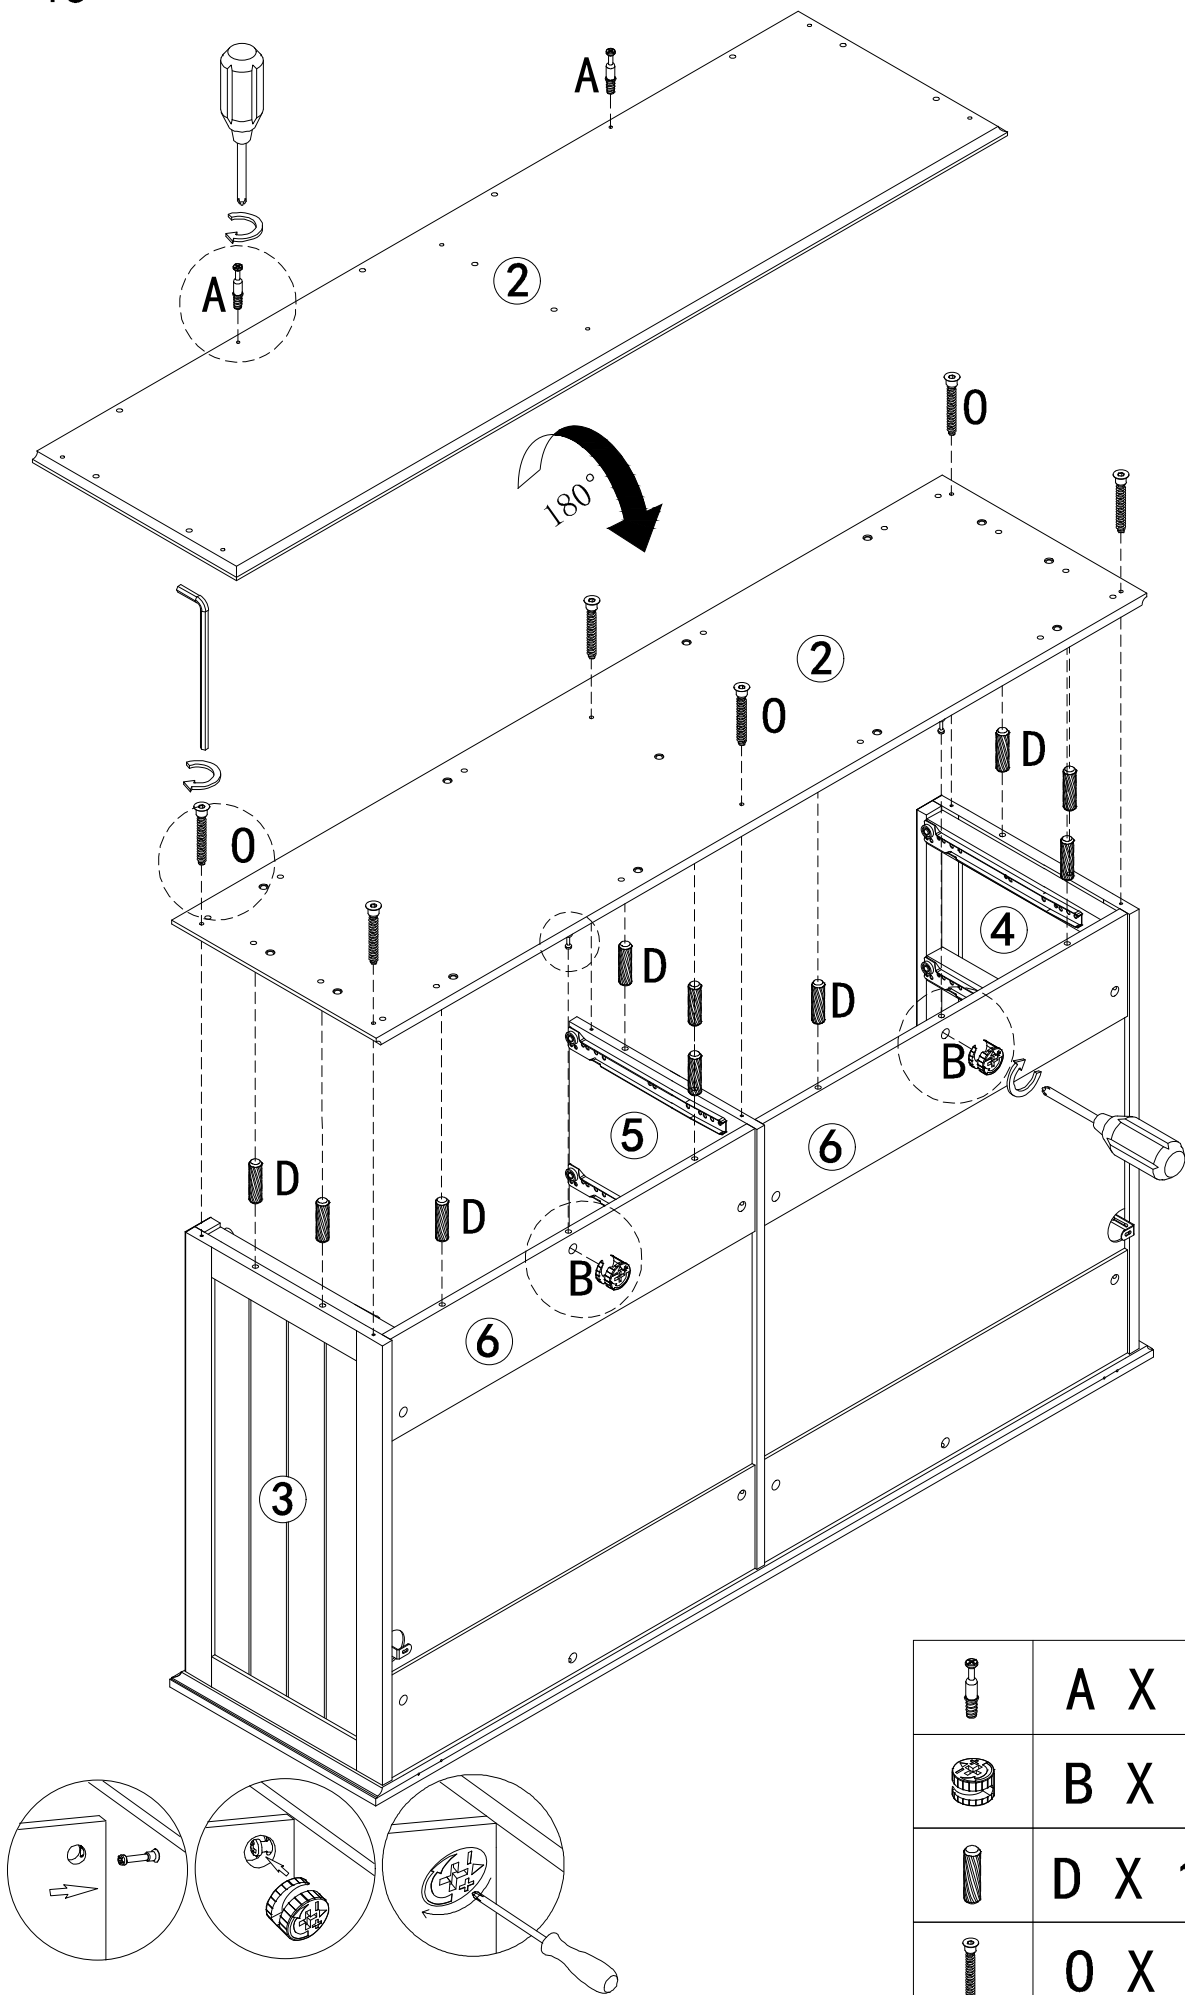

STEP 16


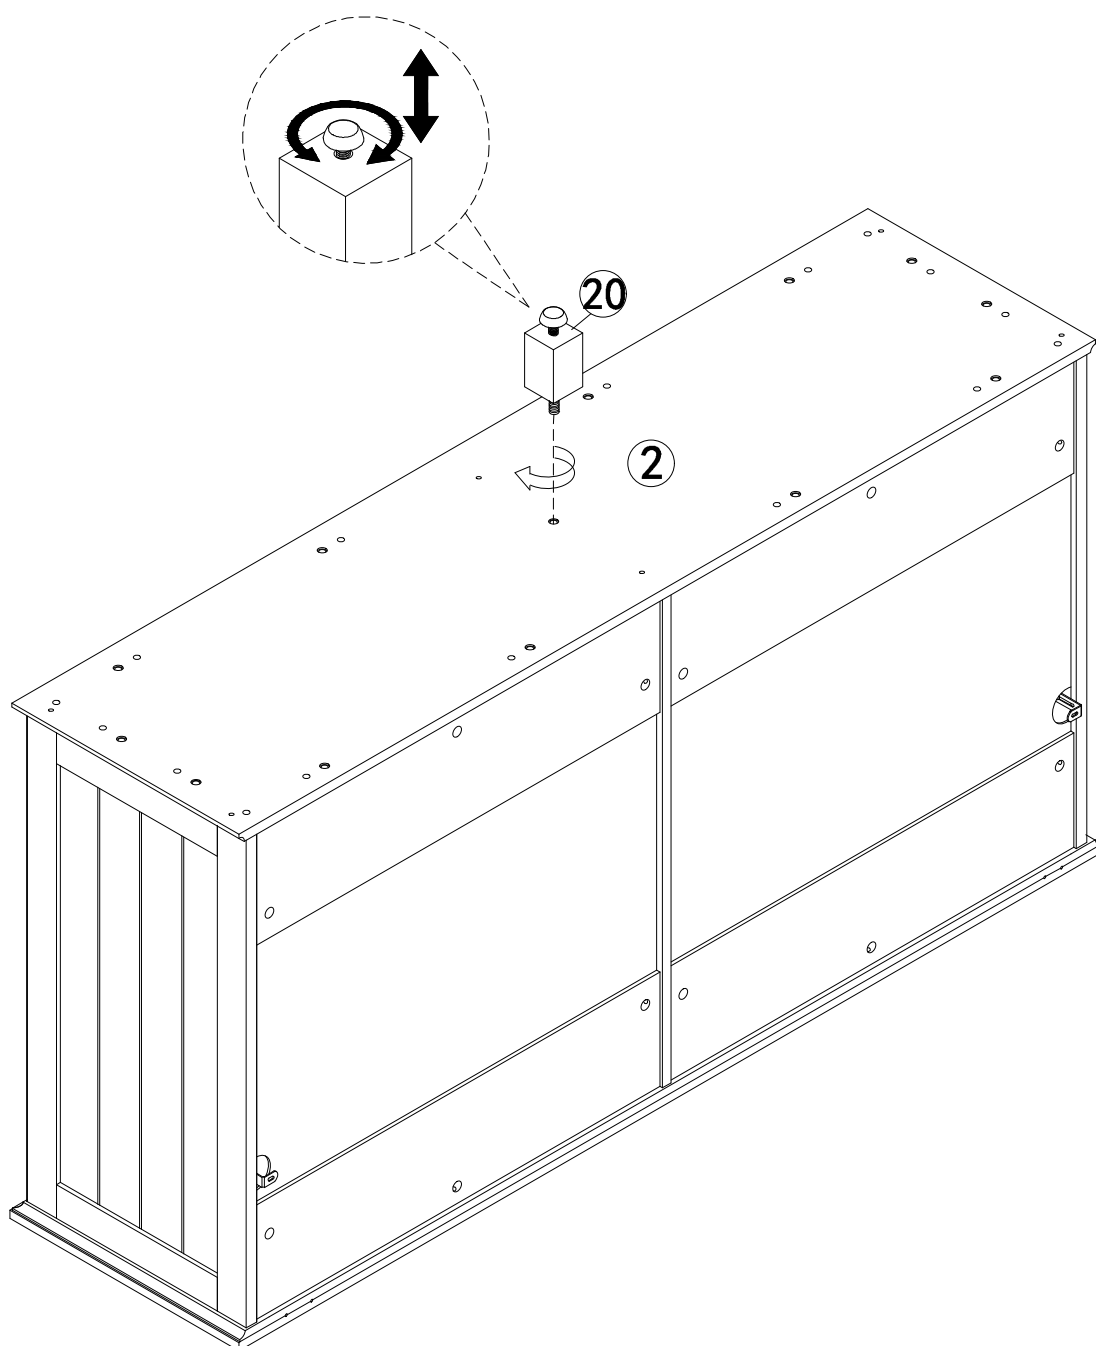


STEP 17

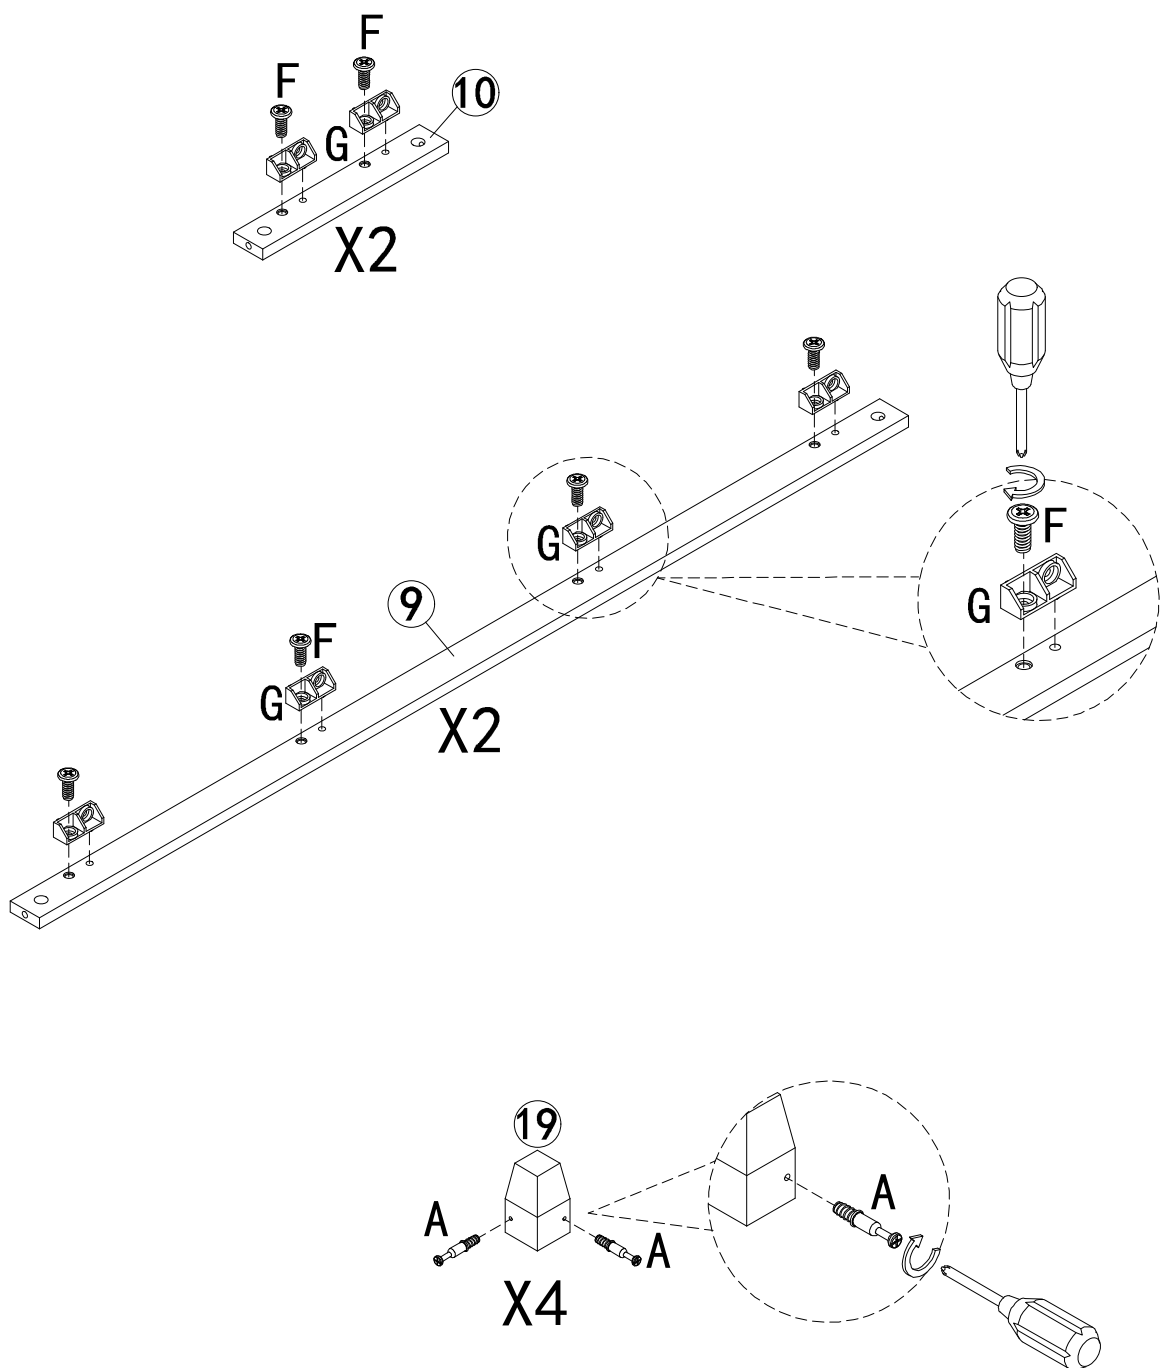


	A X 8PCS
	F X 12PCS
	G X 12PCS

STEP 18

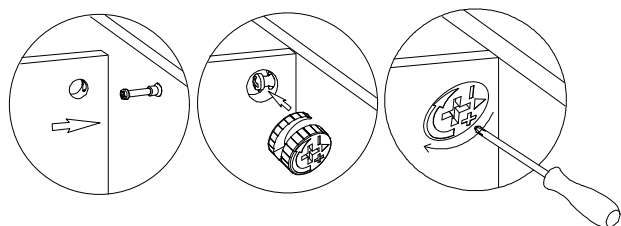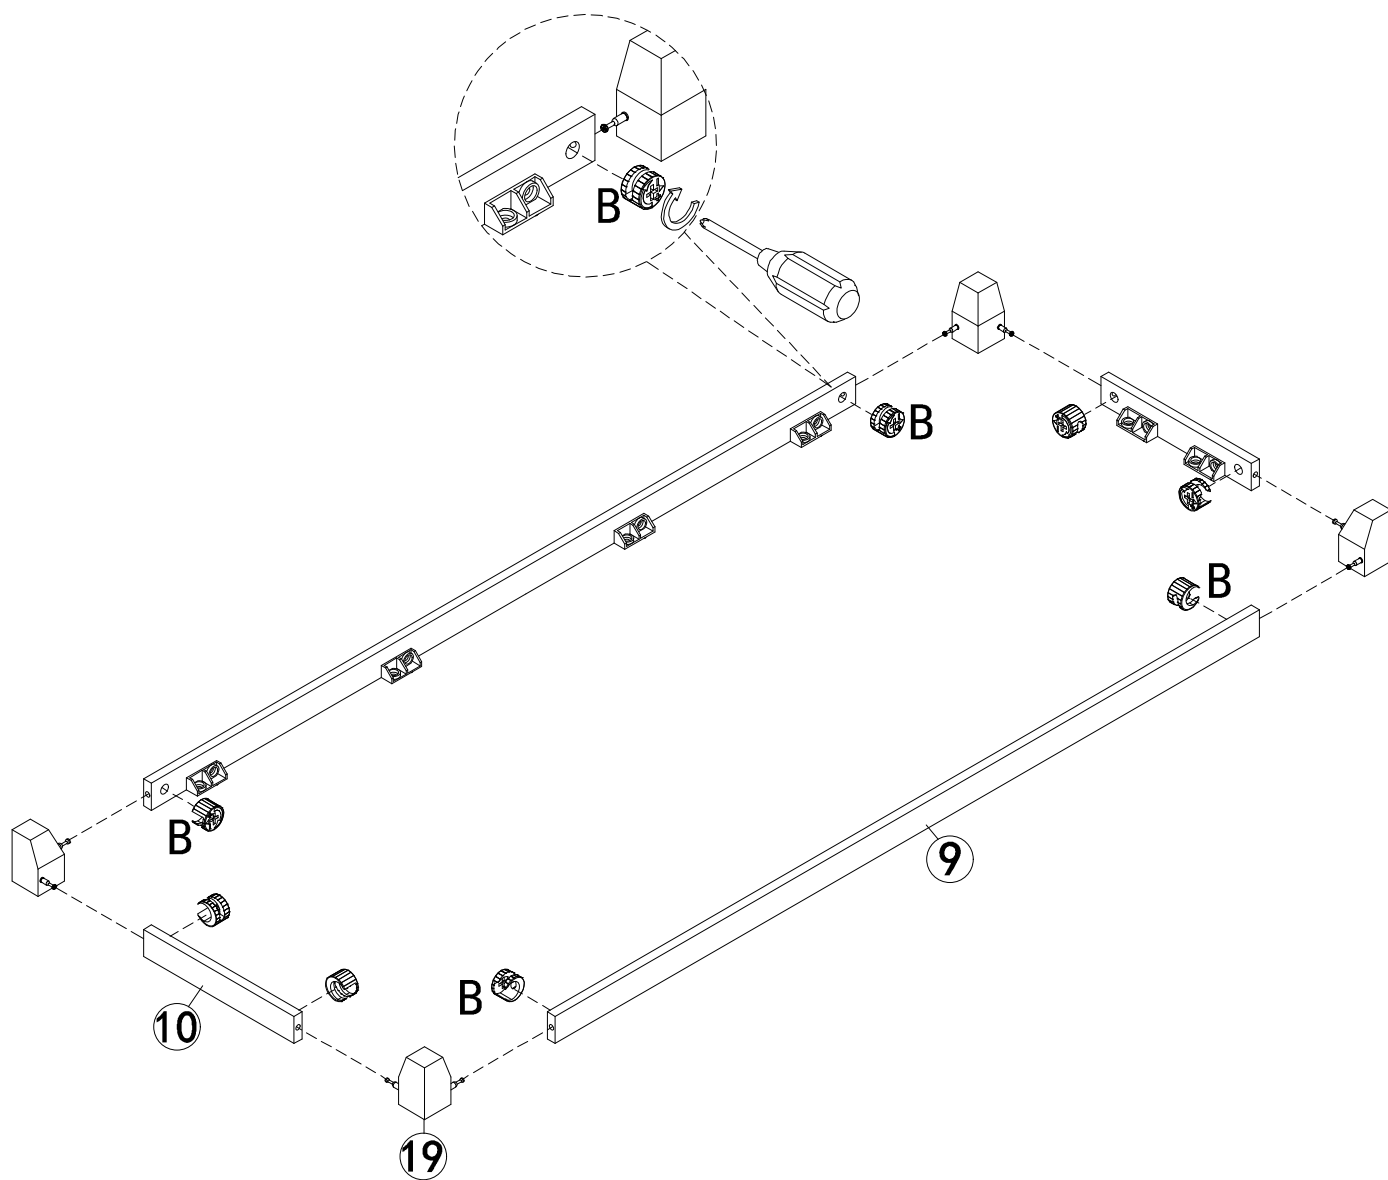

B X 8PCS


STEP 19

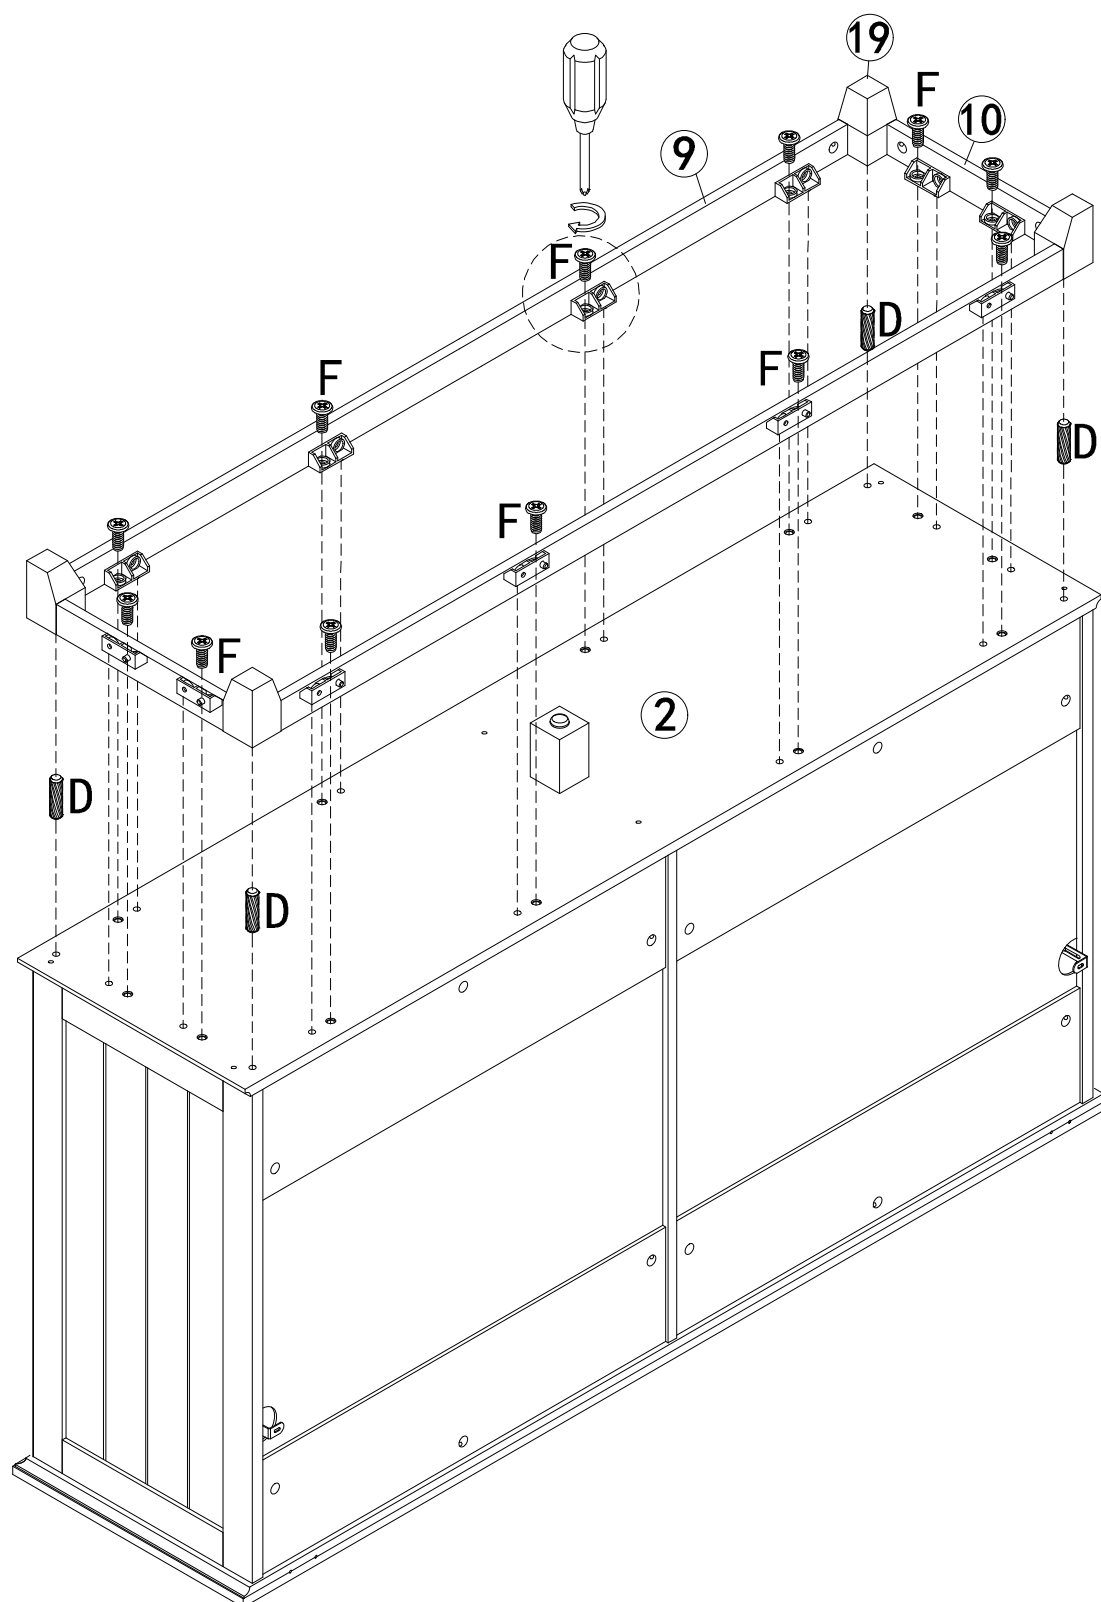

	D X 4PCS
	F X 12PCS

STEP 20

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

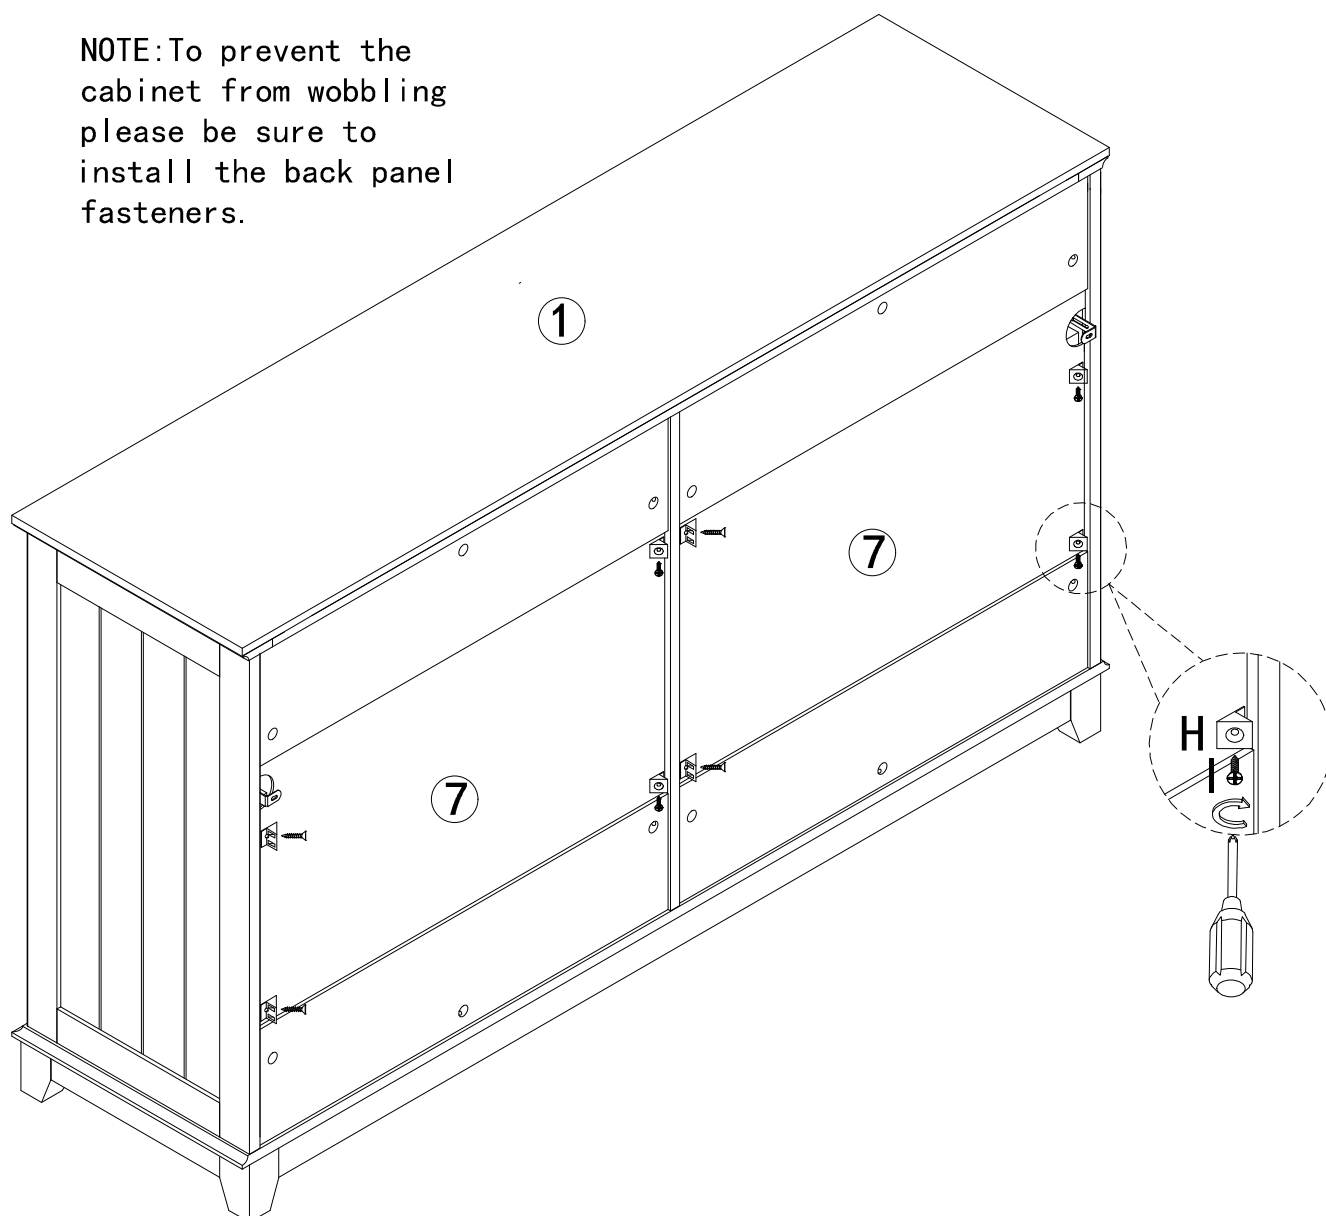


I X 8PCS



H X 8PCS




STEP 21

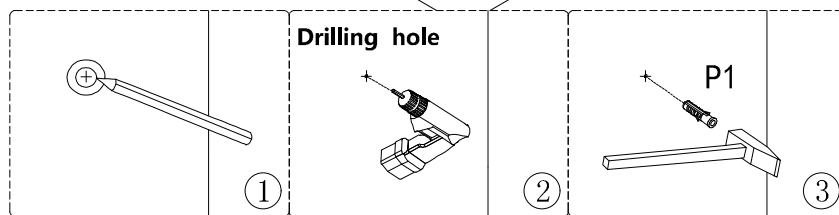



Drill a hole in the wall, then hammer the P1 into the wall with a hammer

WALL

Note: Follow step
Link P4 and P1 with a P2 using a
screwdriver, and assembly it tightly.

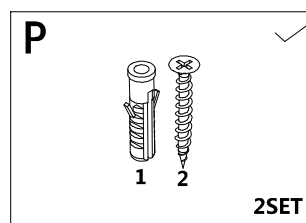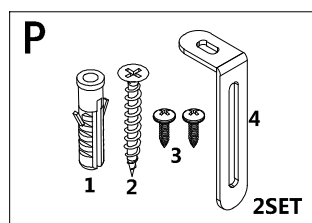
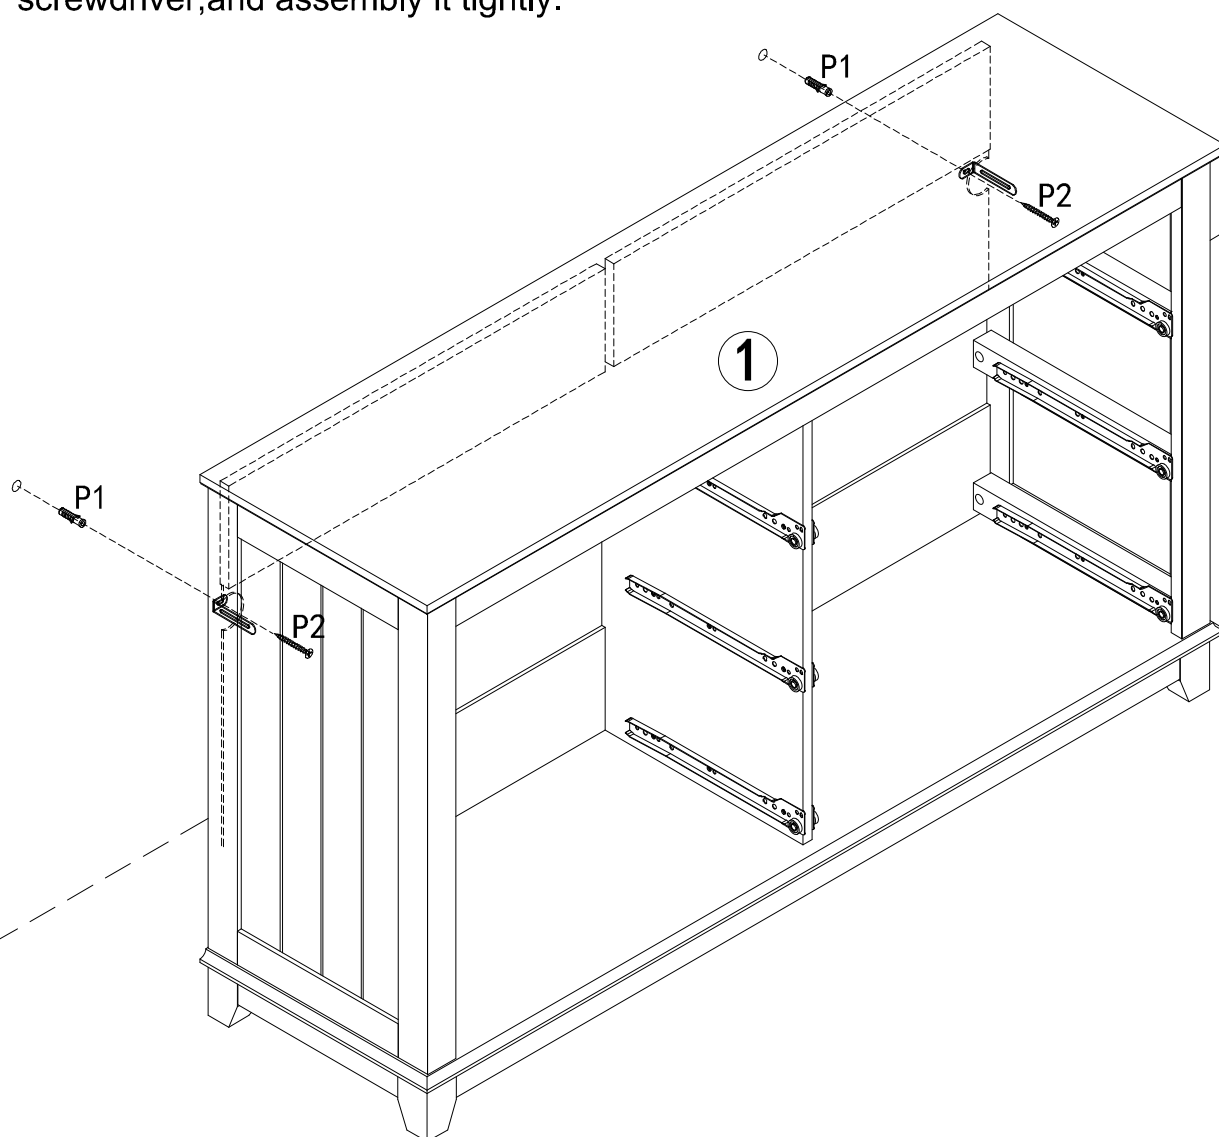


STEP 22

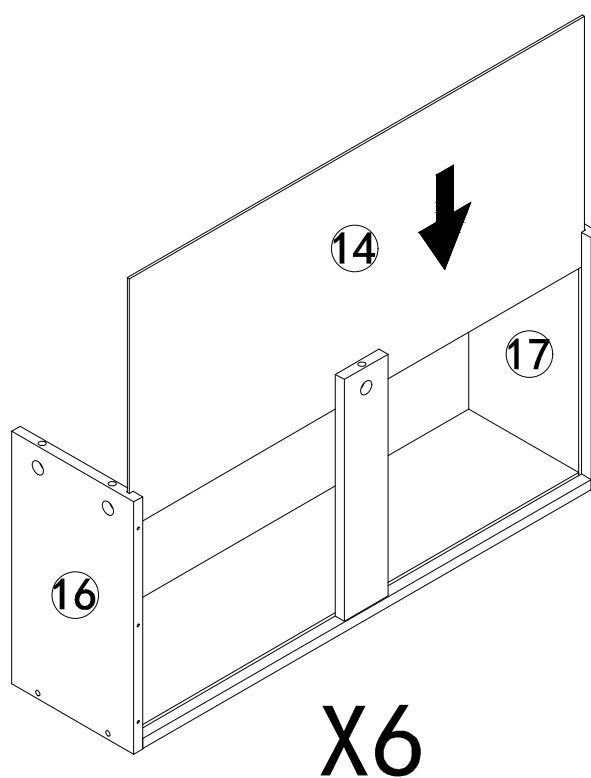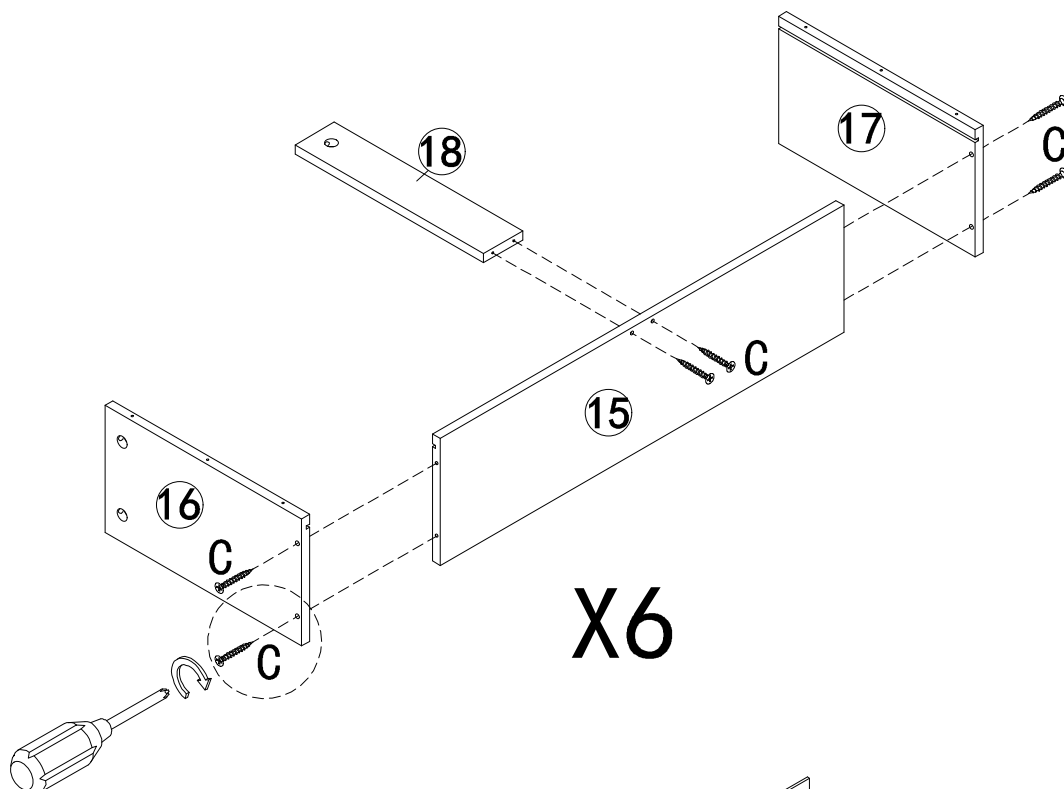

C X 36PCS


STEP 23

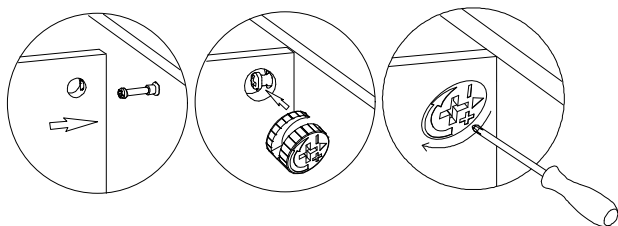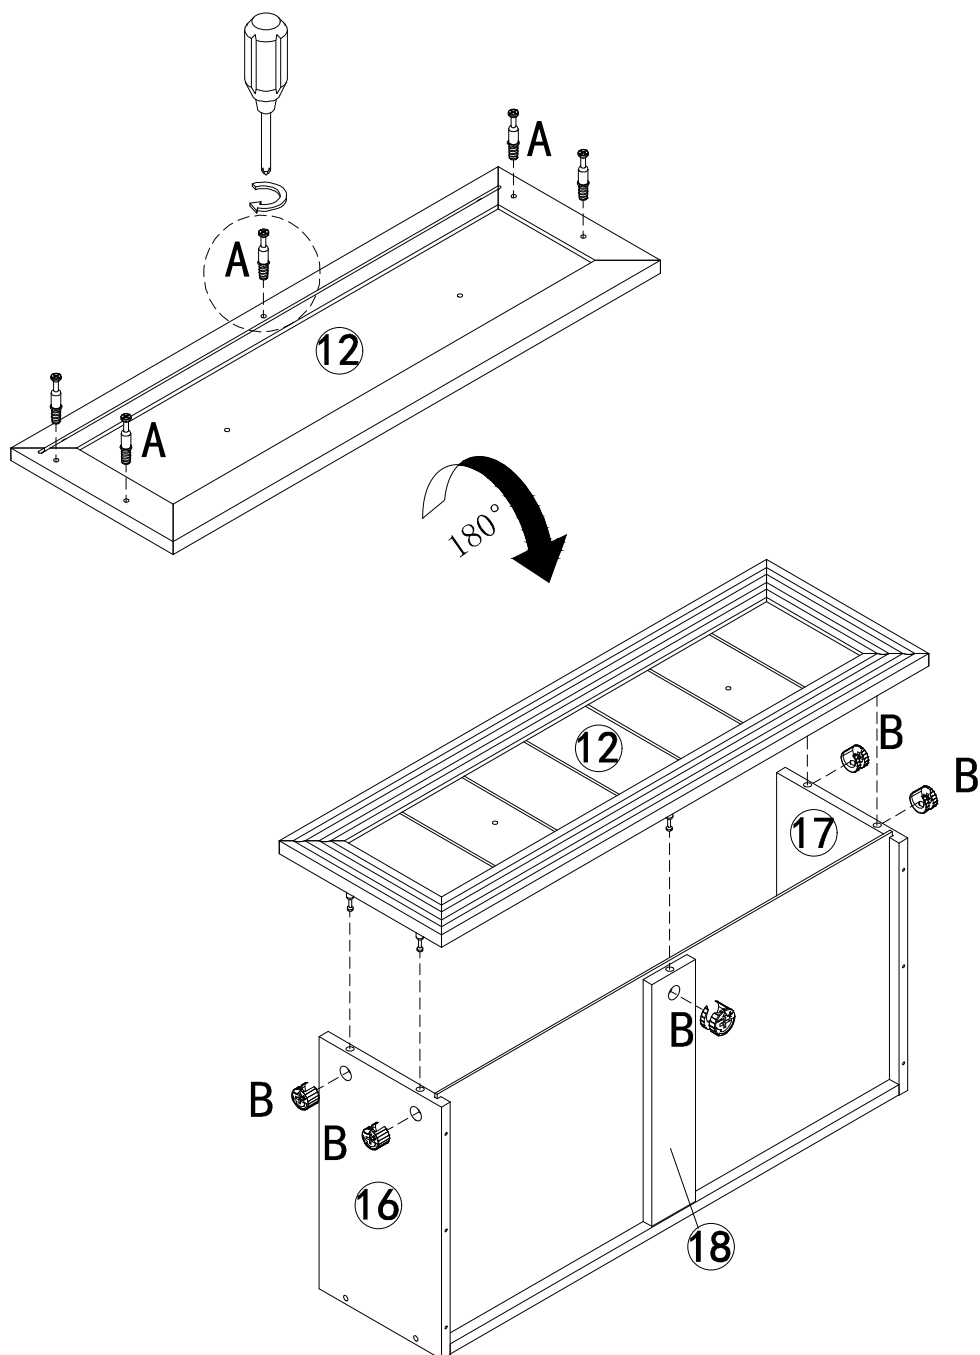

X3


	A X 15PCS
	B X 15PCS

STEP 24

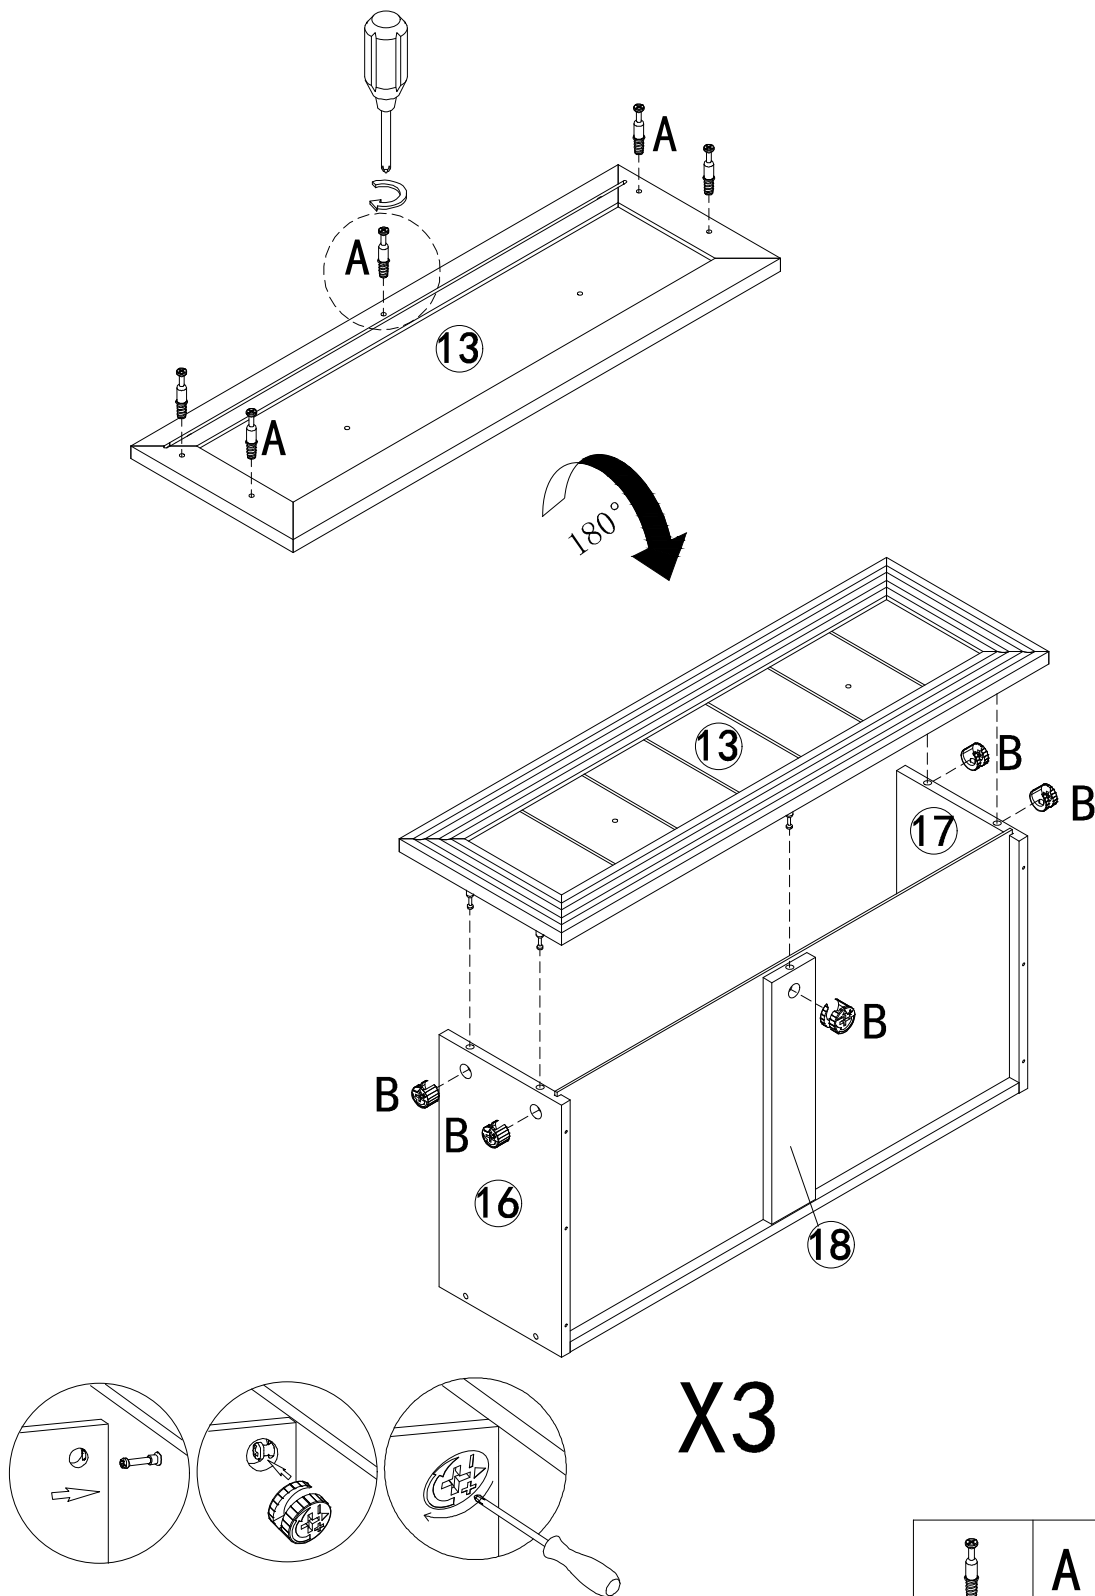

	A X 15PCS
	B X 15PCS


STEP 25

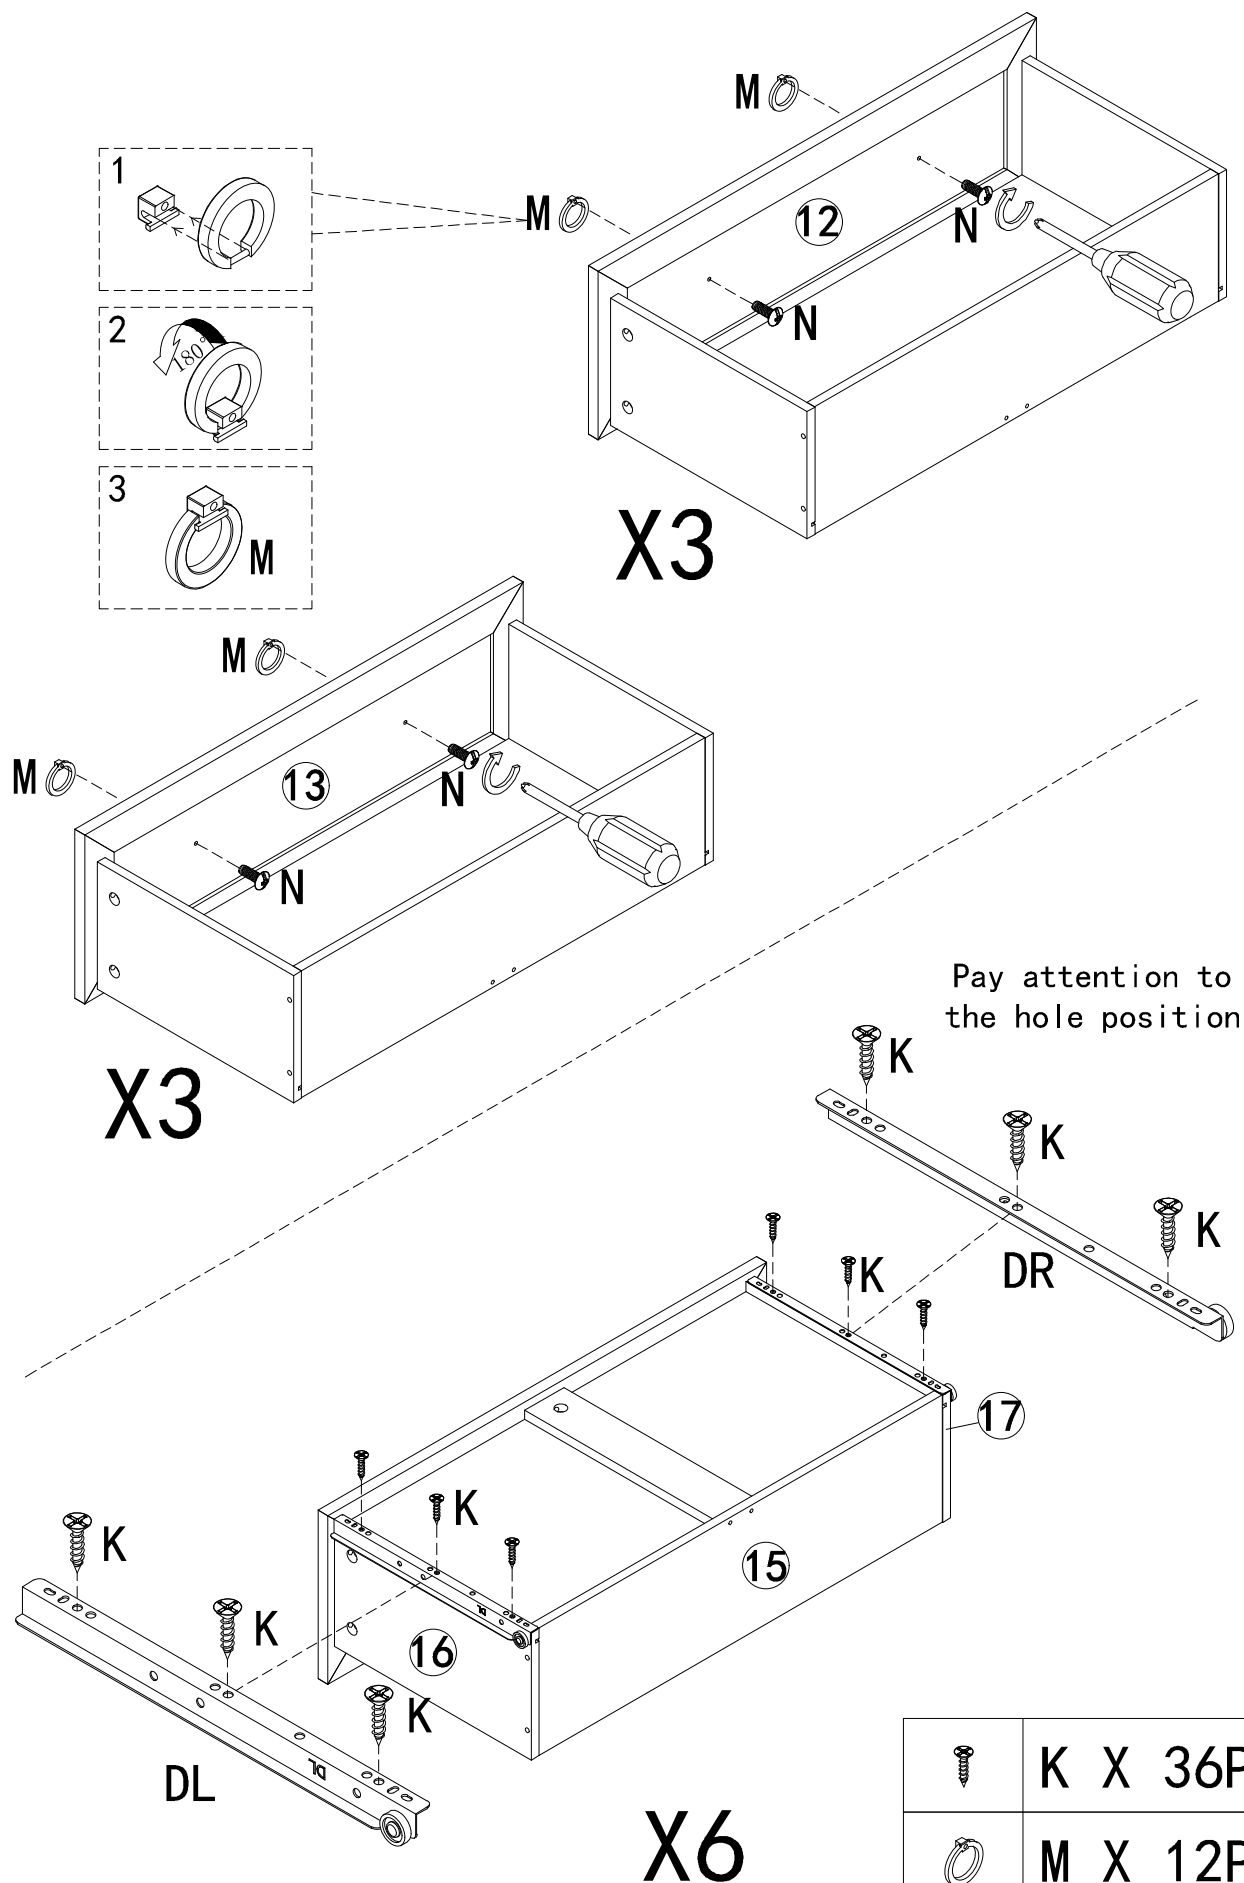

	K X 36PCS
	M X 12PCS
	N X 12PCS

	K X 36PCS
	M X 12PCS
	N X 12PCS

STEP 26

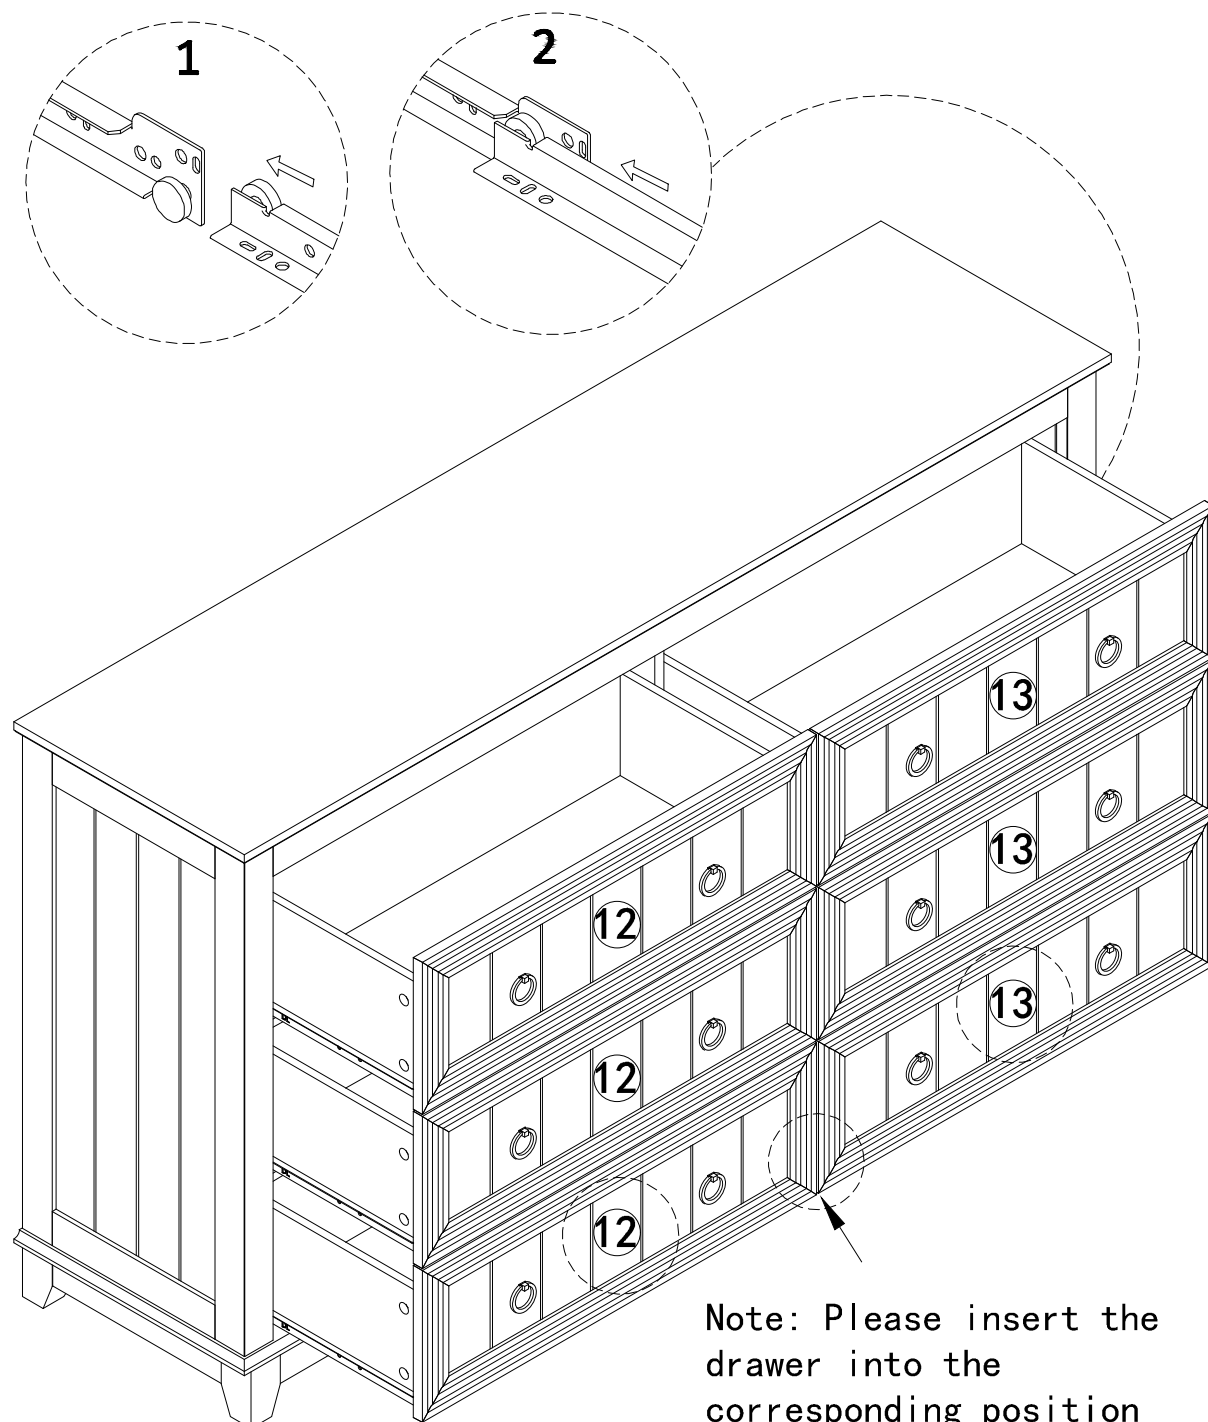

Note: Please insert the drawer into the corresponding position according to the number