

# White Fabric Shade Pendant Light

**Caution:** Please turn off power before installation and read the manual carefully, we advise you contact professional electricians to install for safety purpose.

## Product Features

Style: Modern

Material: Metal, Fabric

Base Type: E12

Light Source Included: No

Voltage: 120VAC

Wattage: 60W

## Package includes


1 x Pendant Light

1 x Accessories Kit

1 x User's Manual

## Installation Instructions

1. Screw the central tube onto the lamp body.
2. Screw the central tube of the lamp body onto the swivel joint.
3. Insert the threaded rod of the curved tube into the ball joint, add a washer and tighten the nut.
4. Use screws to secure the upper flat metal ring to the middle metal fitting of the curved tube.
5. Use screws to secure the lower flat metal ring to the lower metal fitting of the curved tube.
6. Slide the lampshade onto the lamp body, aligning the hole in the upper flange of the lampshade with the hole in the curved tube flange, then insert the screw and tighten the ball-shaped nut.
7. Thread the power cord through the threaded tube and the ball joint cover, then screw the threaded tube onto the connector inside the ball joint and secure the ball joint cover.
8. Secure the nut onto the threaded tube and then slide the tube sleeve over it.
9. Thread the power cord through the suspension rod and secure it to the lamp body, adjust the number of rods according to the required length.
10. Thread the power cord through the suspension ring and the canopy, then secure the hanging ring to the suspension rod. Use the quick link to secure the suspension rod and canopy together, then tighten the clamp.
11. Attach the mounting plate to the electrical junction box by using supplied mounting screws.
12. Connect the fixture wires (neutral, live and ground wire) with wire nuts.  
(Note: Connect the black wire to the positive terminal (live); Connect the white wire to the negative terminal (neutral), and the ground wire to the ground terminal).  
When wiring, ensure that no wires are exposed.
13. Secure the canopy to the mounting plate by using nuts.
14. Slide the socket sleeves over the lamp sockets, then install the bulbs (not included).
15. Turn on the power to check if the bulb is working properly.

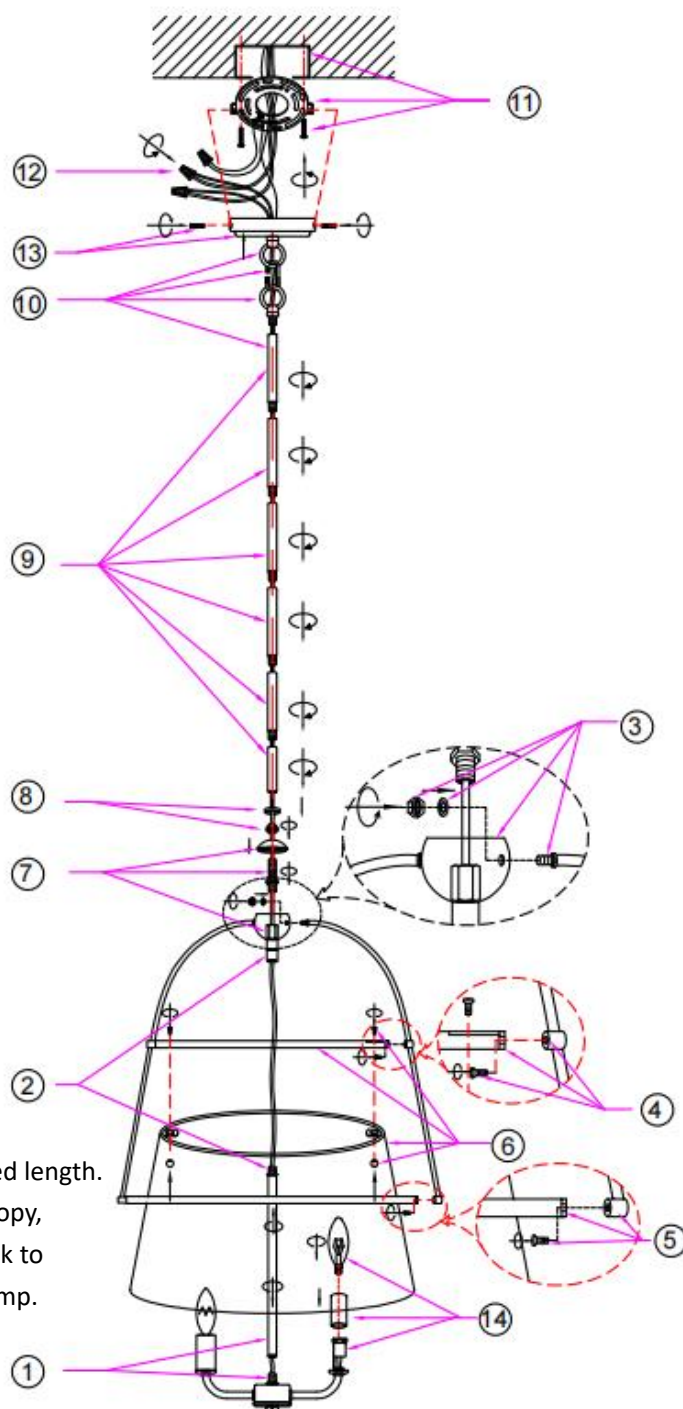

**Note:** Please use this product accordingly to its intended purpose, do not retrofit or remodeling the product. The warranty does not cover if the failure is caused by the third party product, or natural disasters.

Made in China