

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.









*Tools Required for Assembly (included): Allen Key and Wrench Key

*Estimated Assembly Time: 10 minutes.

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly damp sponge.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY				
A	Seat Panel		1x				
B	Backrest Panel		1x				
C	Left leg Panel		1x				
D	Right leg Panel		1x				
E	Front bar of leg		1x	HW2	Allen screw M6x60mm		6x
HW1	Allen bolt M6x30mm		4x	HW3	Allen Key		1x



MODEL# PAT6801

PRODUCT DIMENSIONS:

ALTON ADIRONDACK CHAIR: 32.01"L x 30.31"W x 34.65"H

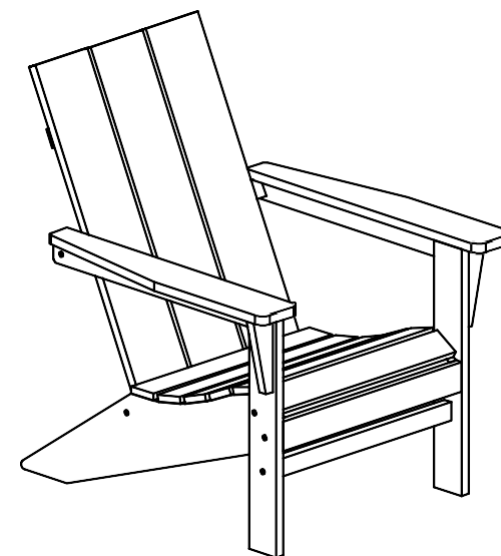

Weight capacity : 275 Lbs (single seat)

Warning : Do not stand on chair

Warning : Do not over torque bolts/screws

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.


*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 10 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com


1

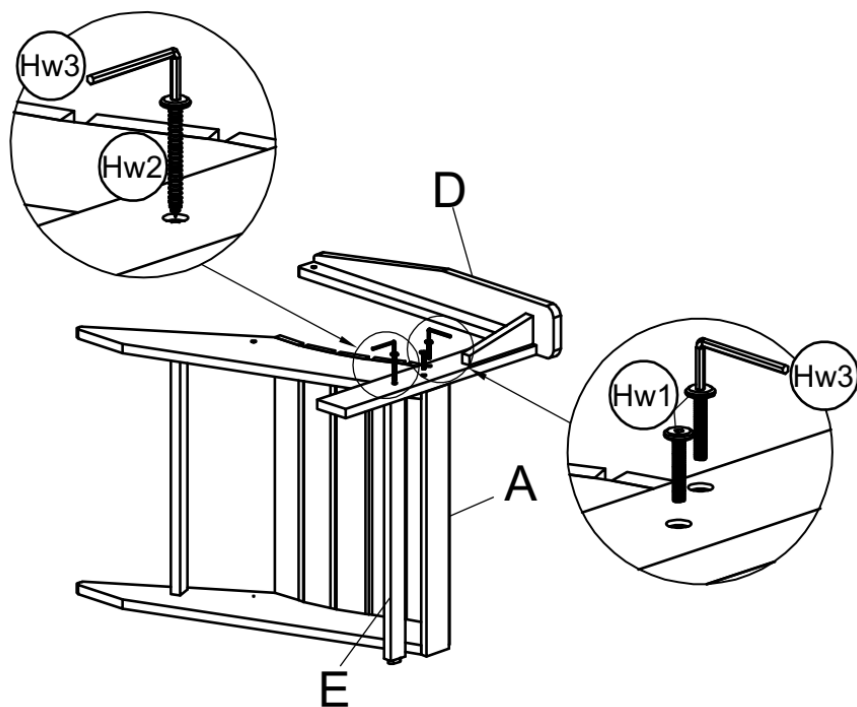

STEP 1: Assemble Right leg Panel (D) with Seat Panel (A) by 2 Allen bolt (HW1) and using Allen Key (HW3) to fit. Then assemble Front bar of leg (E) with Right leg Panel (D) by Allen screw (HW2) and using Allen Key (HW3) to fit.

When tightening the Bolts and Screws, tighten sequentially.

2

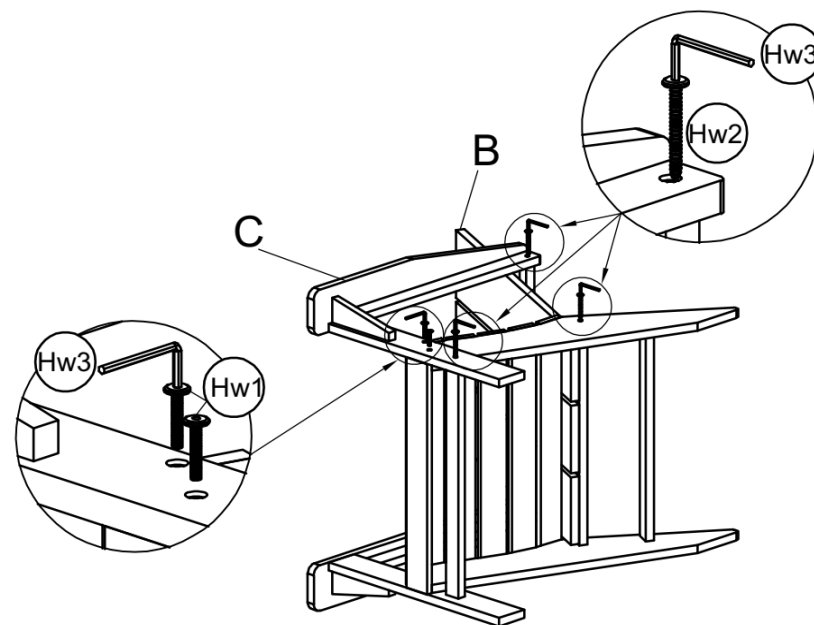

STEP 2: Similar in Step 1, Assemble Left leg Panel (C), Front bar of leg (E) with Seat Panel (A) by 2 Allen bolt (HW1) + Allen screw (HW2) and using Allen Key (HW3) to fit. Then assemble Backrest Panel (B) into the whole frame of Chair by Allen Screw (HW2) and using Allen Key (HW3) to fit.

When tightening the Bolts and Screws, tighten sequentially.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 10 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com

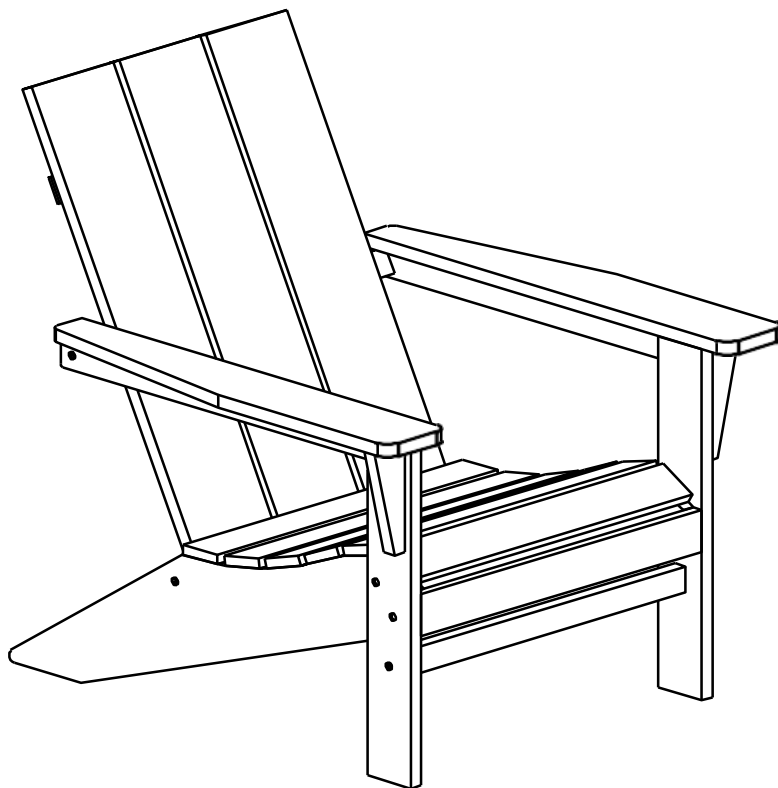

STEP 3: Inspect the Chair and make sure all parts are connected. Place Chair in a flat surface for use.