



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF307088

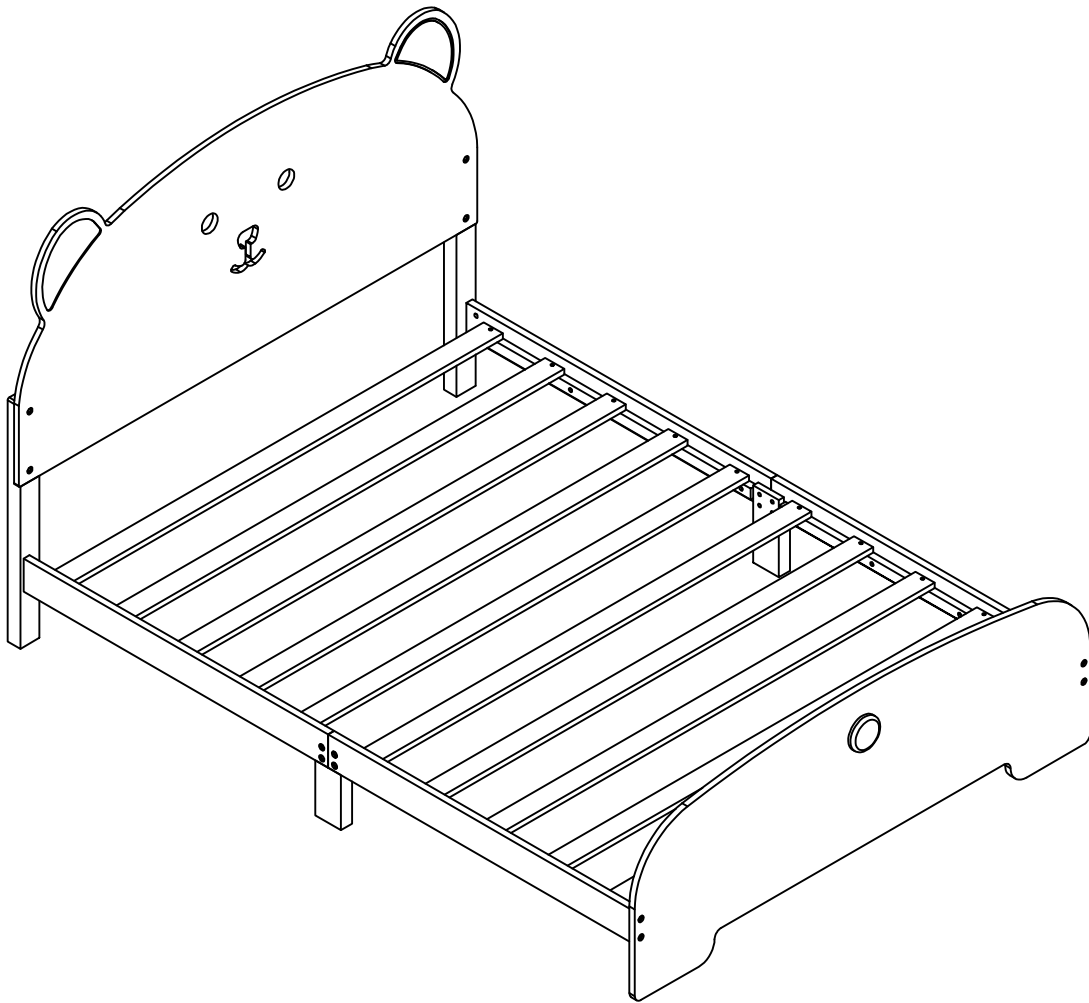

DETAIL VIEW

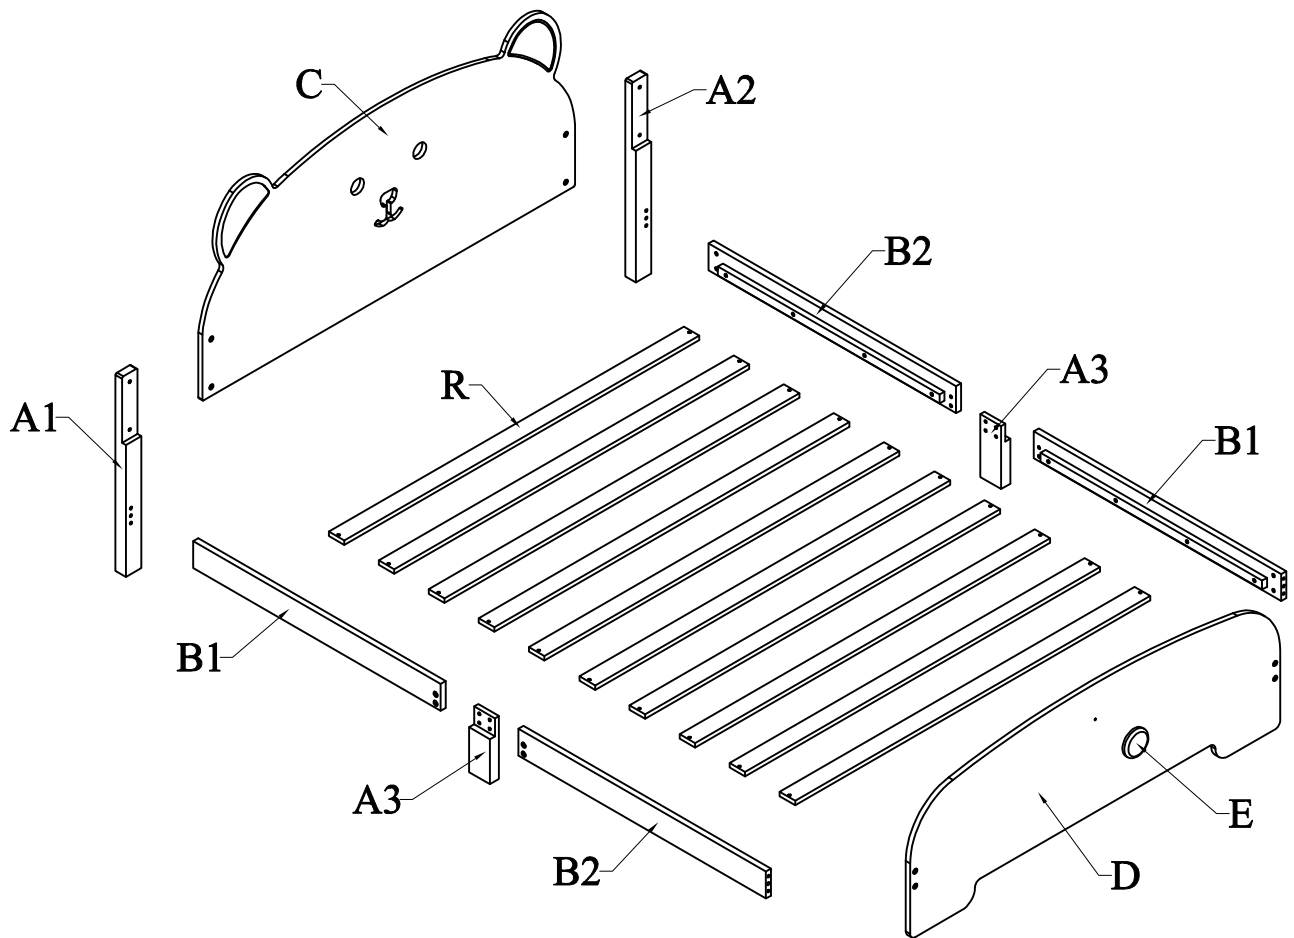

BOX: WF307088

A1




Leg - left (1pc)

A2




Leg - right (1pc)

A3




Leg - middle (2pcs)

B1

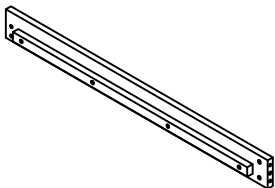


Side rail - left (2pcs)

B2

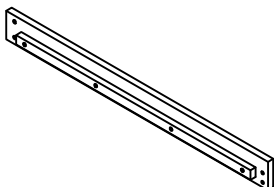


Side rail - right (2pcs)

C

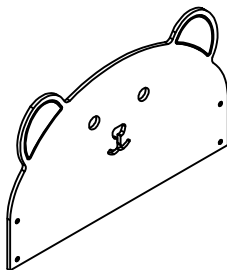

Headboard (1pc)

D

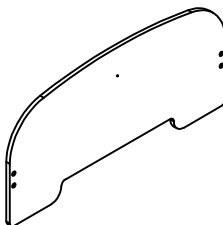


Footboard (1pc)

E









Bear tail (1pc)


R

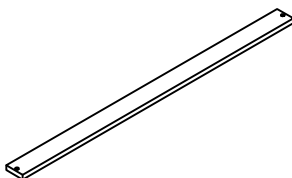

Slats (10pcs)

HARDWARE LIST: WF307088

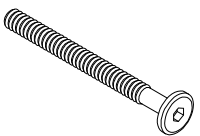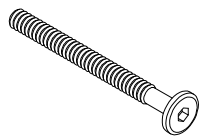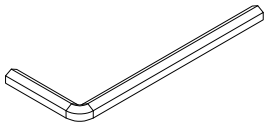
1  Hex - Head bolts Ø1/4" * 80 - 4pcs	2  Hex - Head bolts Ø1/4" * 60 - 4pcs	3  Hex - Head bolts Ø1/4" * 30 - 4pcs	4  Hex - Head bolts Ø1/4" * 25 - 8pcs
5  Horizontal - Hold bolts Ø1/4" - 8pcs	6  Canopy head though Ø1/4" - 8pcs	7  Wood dowel Ø8 * 30 - 5pcs	8  Wood crews M4 * 25 - 21pcs
9  Allen key K4 - 2pc			



Assembly Tools Required (Not Included)

STEP 1

4




Hex - Head bolts
Ø1/4" * 25 - 8pcs

6



Canopy head through
Ø1/4" - 8pcs

X2

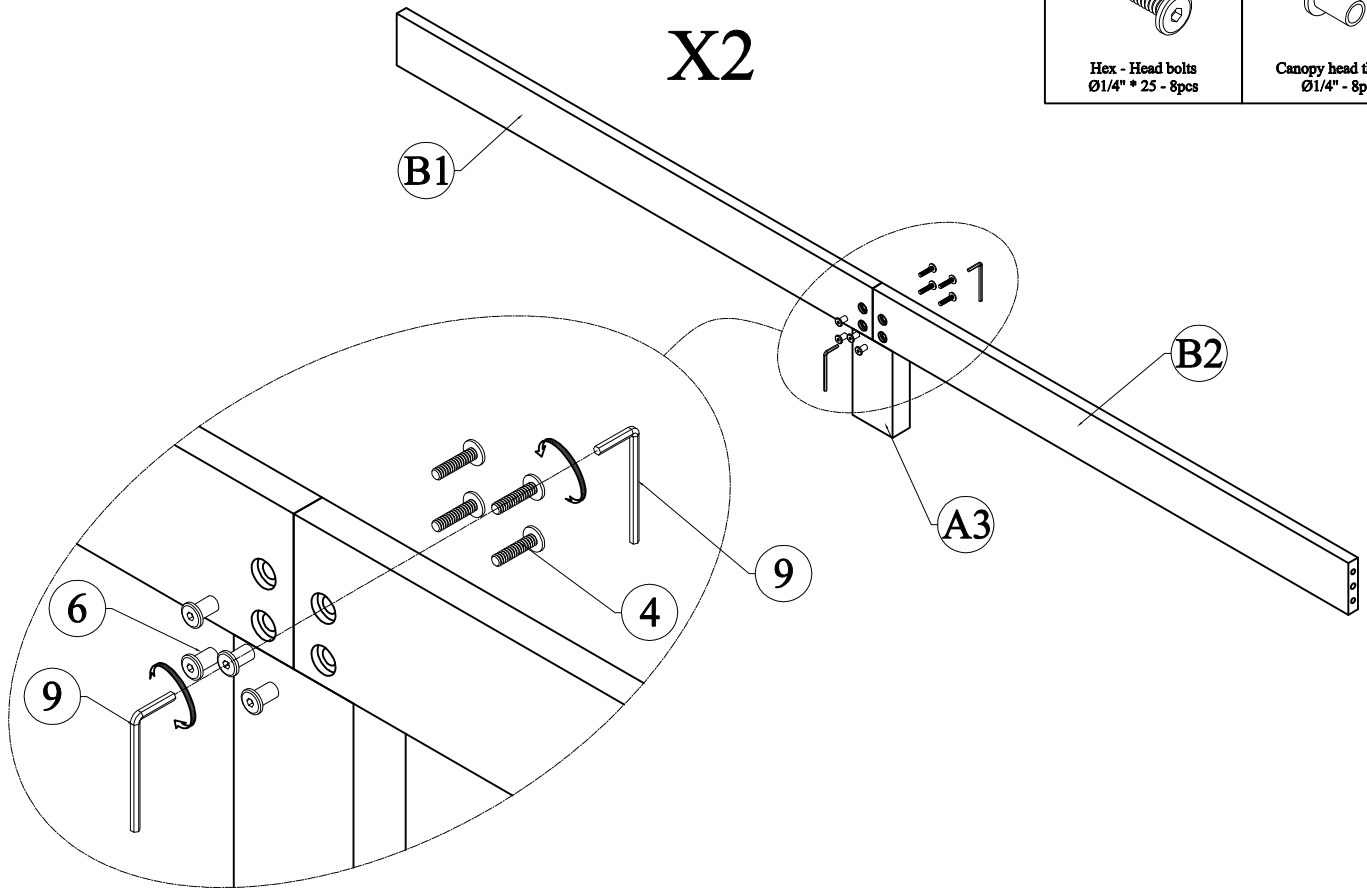


STEP 2

8




Wood crews
M4 * 25 - 1pc

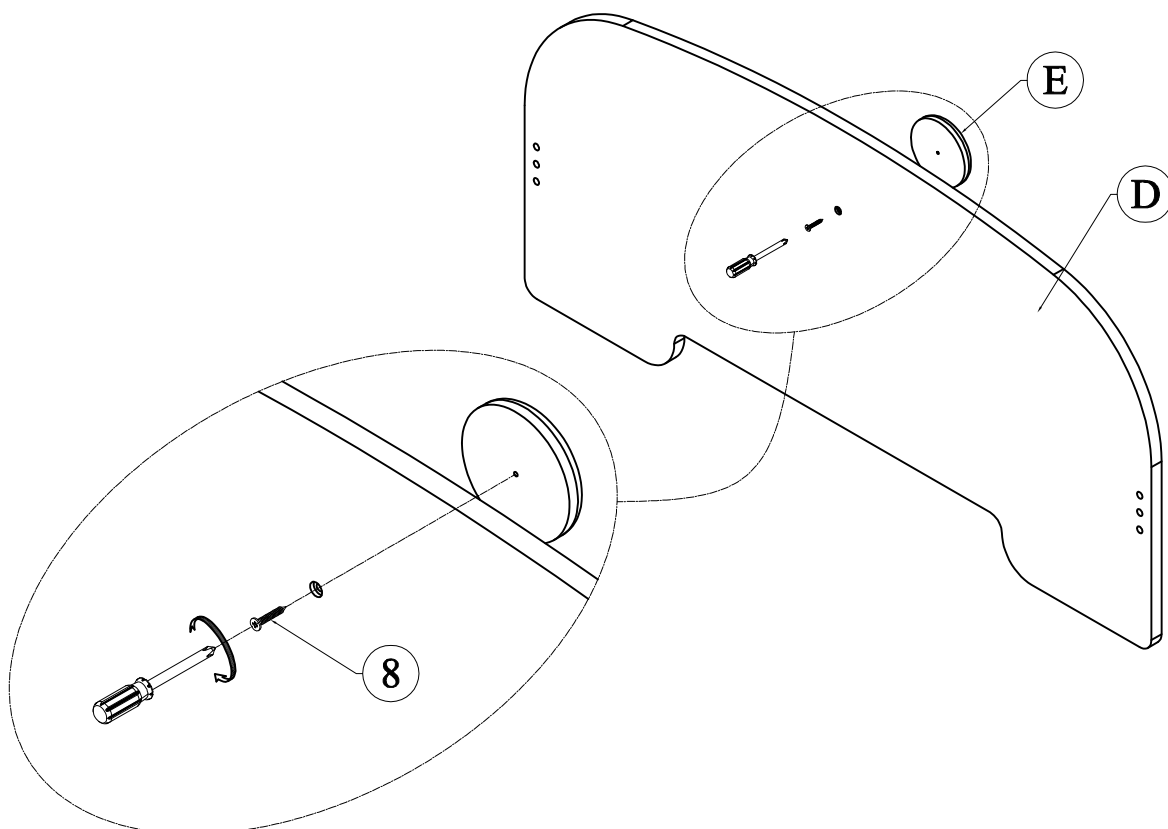


STEP 3

3



Hex - Head bolts
Ø1/4" * 30 - 4pcs

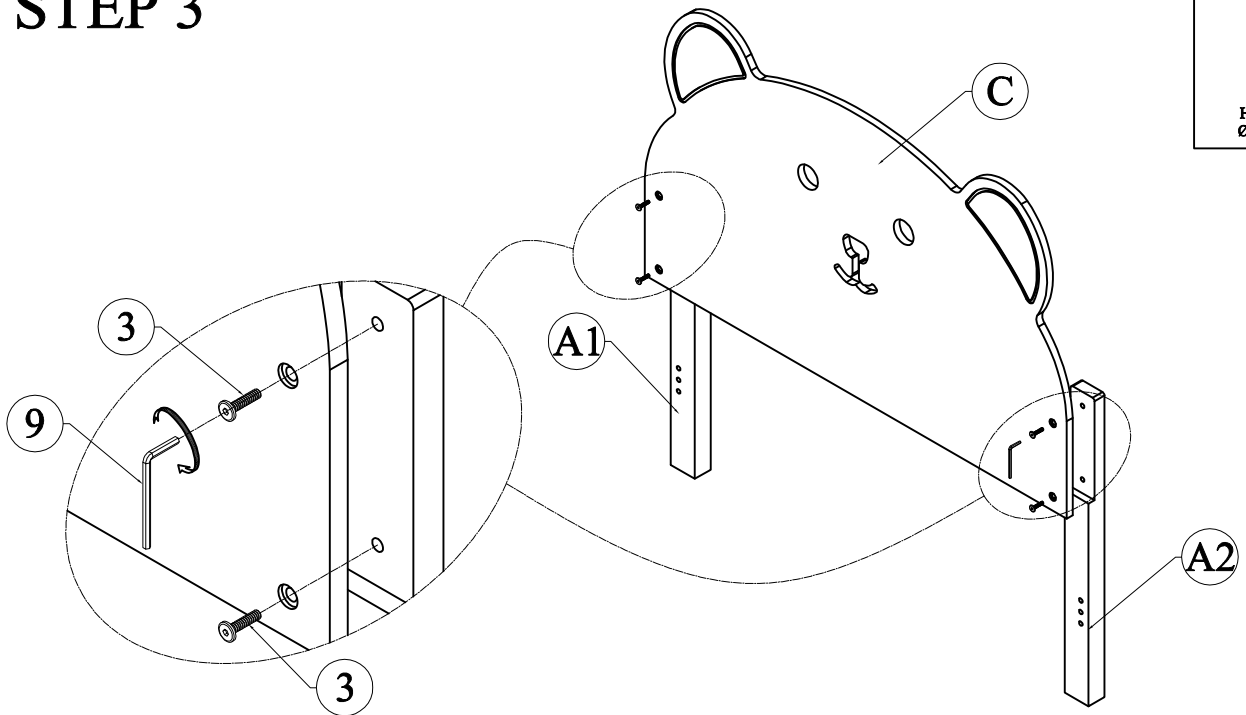


STEP 4

1



Hex - Head bolts
Ø1/4" * 80 - 4pcs

2



Hex - Head bolts
Ø1/4" * 60 - 4pcs

5




Horizontal - Hold bolts
Ø1/4" - 8pcs

7



Wood dowel
Ø8 * 30 - 4pcs

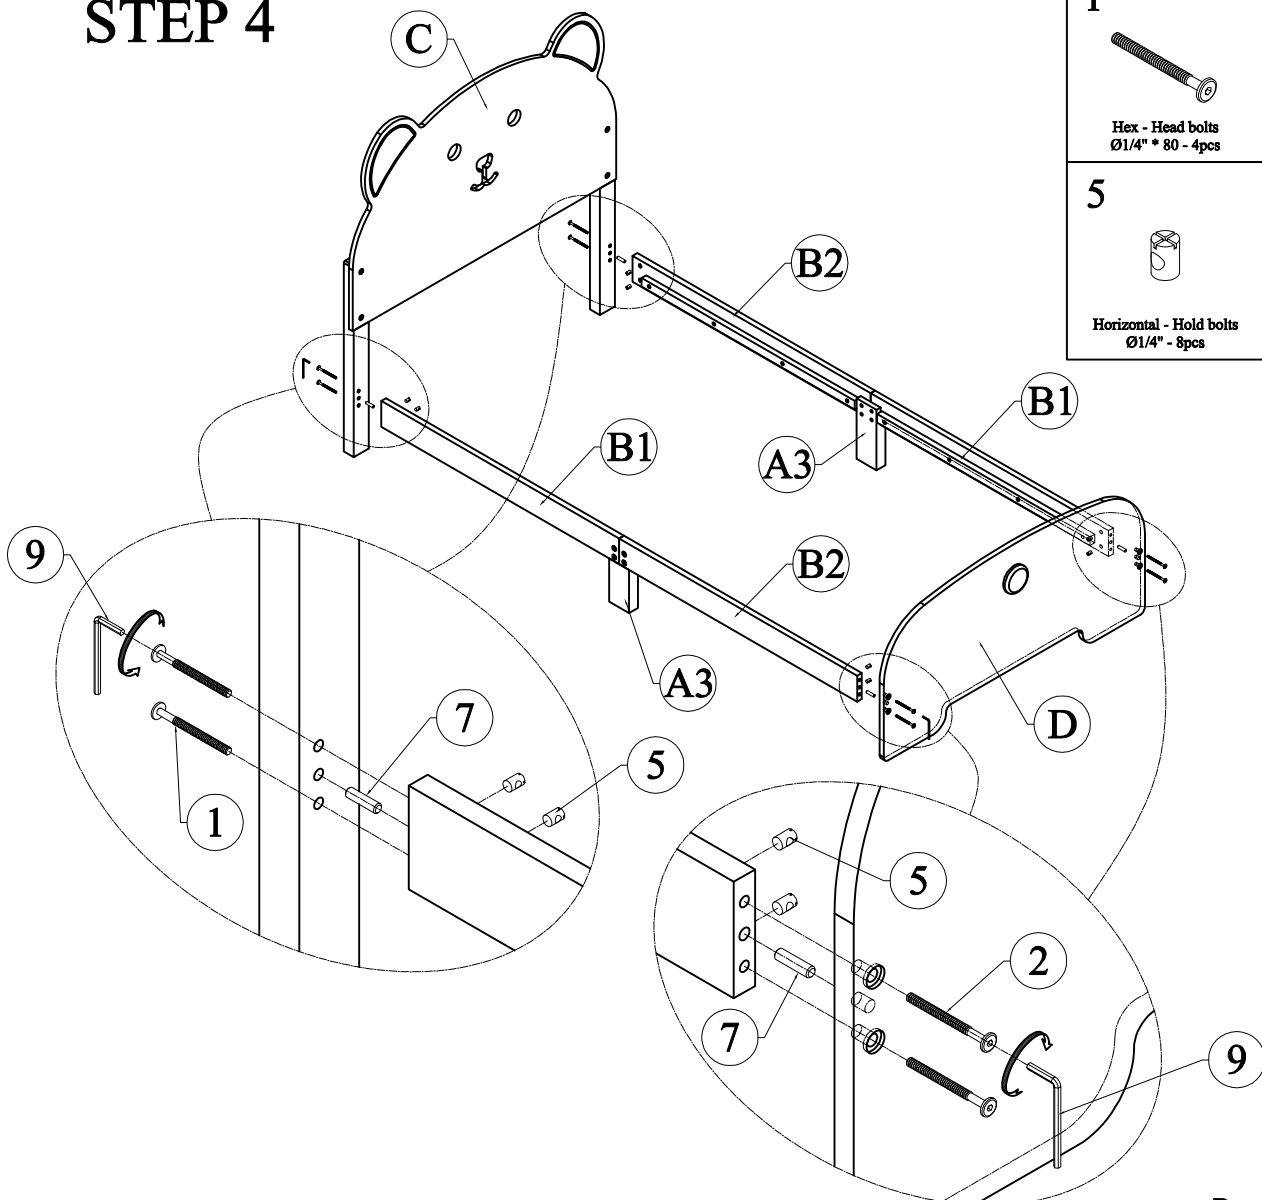


STEP 5

The distance between the slats is 5-1/4 inch

8



Wood screws
M4 * 25 - 20pcs

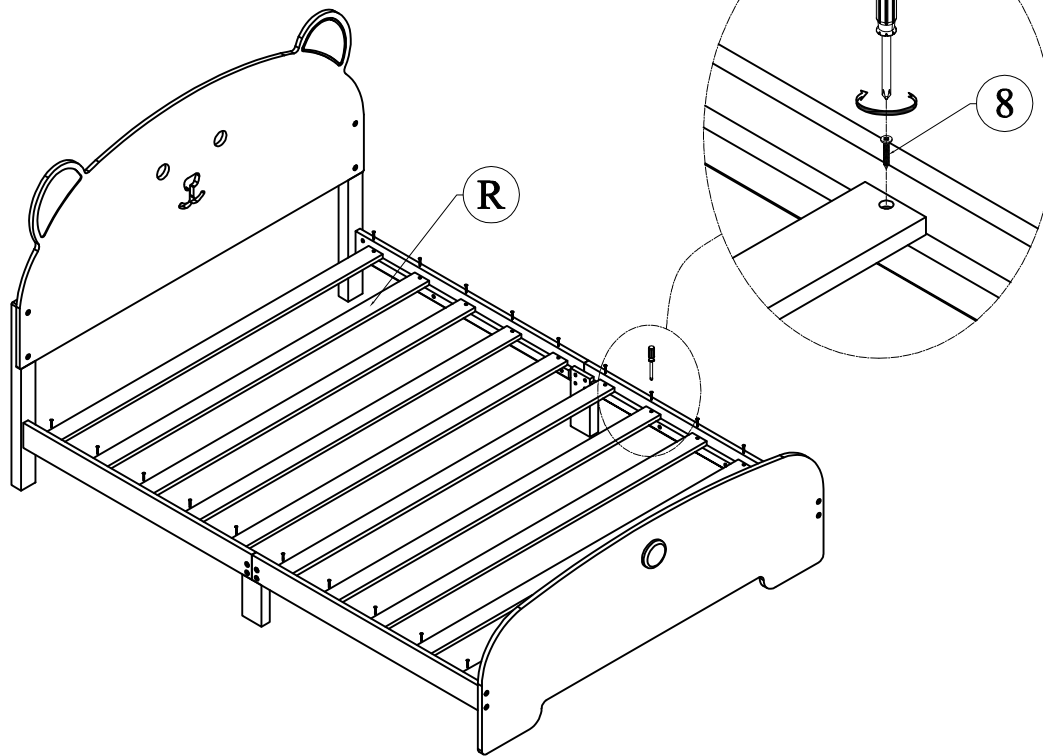

COMPLETED

