

7. Installing the Bulbs

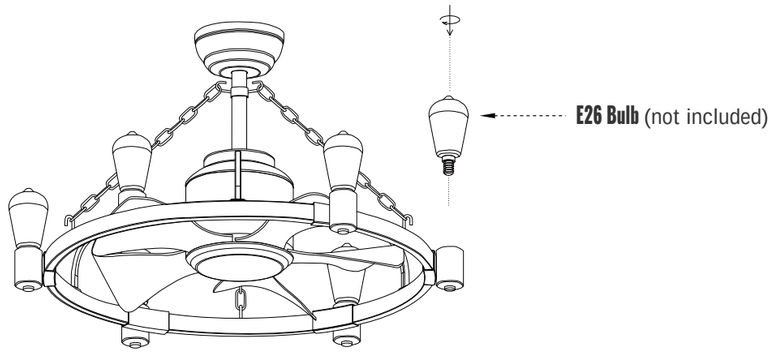

STEP 4. Install 6 E26 bulbs with a maximum support of 60W.

REMOTE CONTROL INSTRUCTIONS

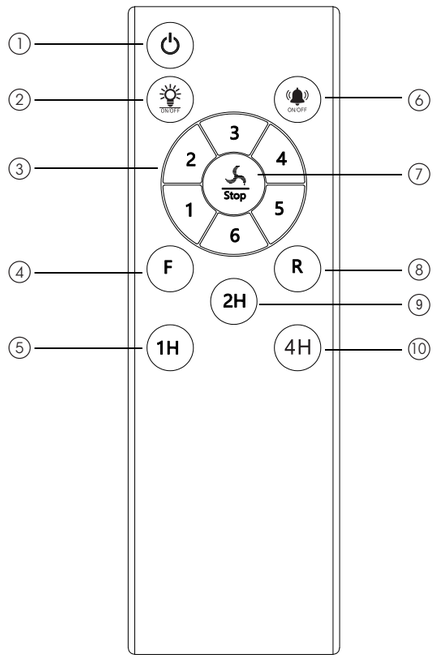

REMOTE SIGNAL PAIRING:


If the remote control loses signal of the fan, press and hold the button ⑨ at the very beginning after it's turned on from wall switch. After the fan light flashes or beeps, it's done.

①: Turn off power.
②: Turn on / off the light.
③: Turn on the fan on 1/2/3/4/5/6 speed.
④: Fan moves forwards.
⑤: 1H for timing the fan.
⑥: Turn on/off the mute mode.
⑦: Turn off the fan.
⑧: Fan moves reversely.
⑨: 2H for timing the fan.
⑩: 4H for timing the fan.

INSTALLATION MANUAL

CEILING FAN WITH LIGHTS

Model No.: D1101-01

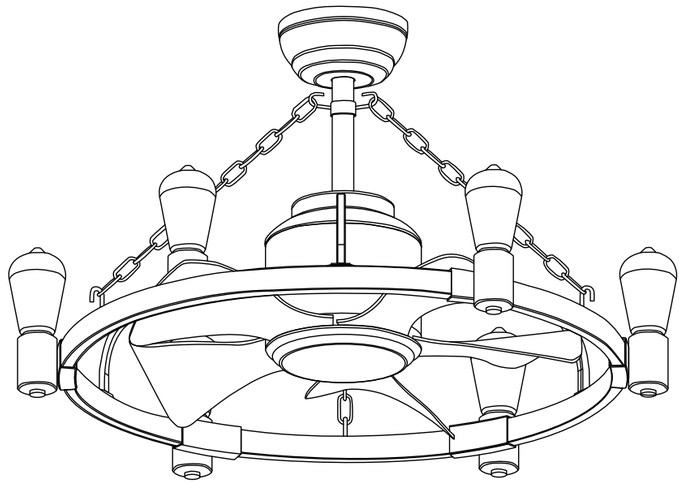


Scan for Installation Video


TOOLS REQUIRED




Ladder



Pliers




Wire Strippers




Screwdrivers

PACKING LIST

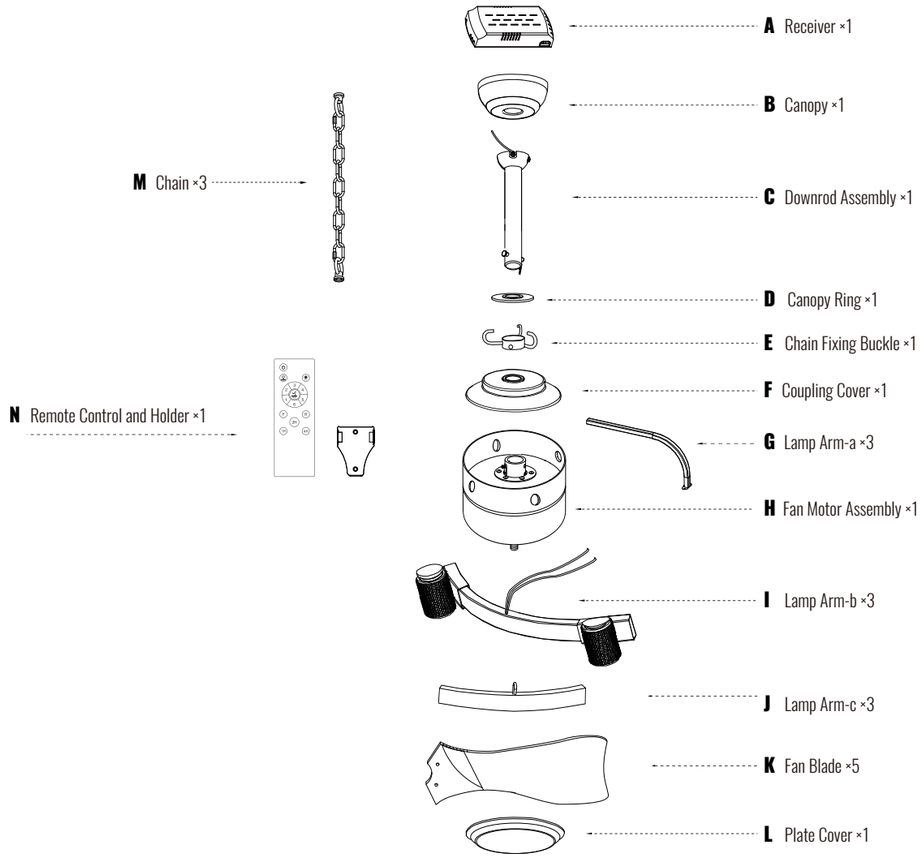

INSTALLATION KIT


AA 3×  Wire nut	**BB** 2×  Outlet Box Screw With Washer	**CC** 1×  Gloves
DD 1×  Mounting Bracket	**EE** 1×  Clevis Pin & "R" Pin	**FF** 1×  Powerstrip

NOTE:


1. Some extra hardware may be included. The quantity listed above is the number required for installation.
2. Parts "EE" have already been installed with Long Downrod Assembly. They need to be disassembled before installation.

INSTALLATION

1. Assembling Light Arm

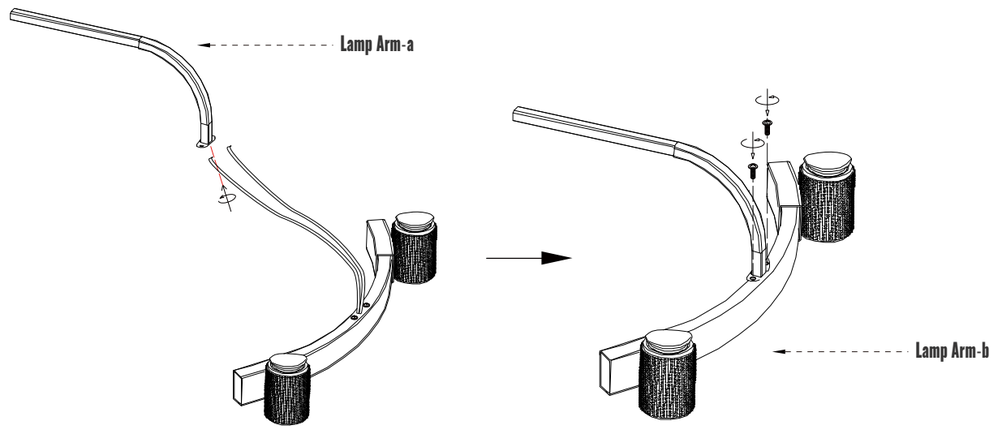


STEP 1. Remove the screw in the center of Lamp arm-b (I).
STEP 2. Pass the power cord in the middle of the Lamp arm-b (I) through the Lamp arm-a (G).
STEP 3. Secure the Lamp arm-b and the Lamp arm-a with screws.

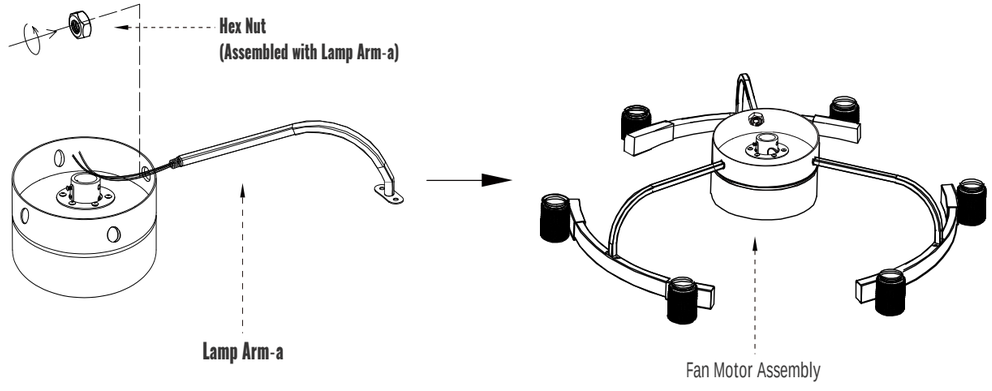


STEP 4. Remove the Hex Nut from Lamp arm-a (G).
STEP 5. Connect the Lamp arm-a to the Fan Motor Assembly (H) and secure it with the Hex Nut.

2. Assembling Light Arm

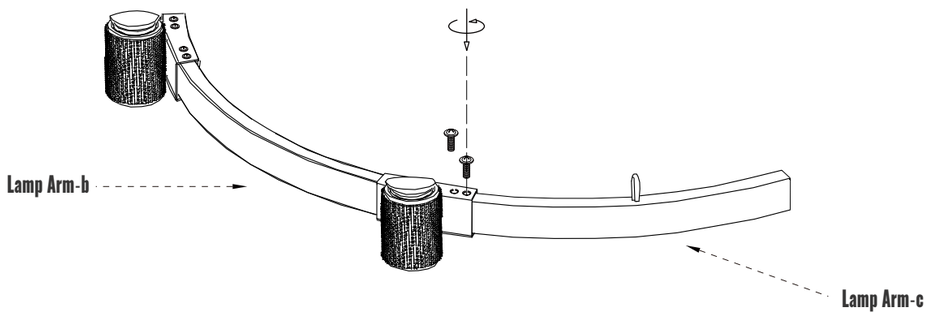


STEP 1. Remove the screws at the ends of the Lamp arm-b (I) .
STEP 2. Insert the lamp arm-c (J) into the lamp arm-b and drive in the screws to secure it.

3. Wiring

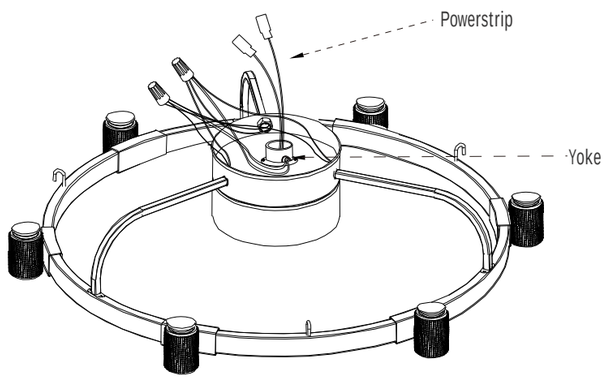


STEP 3. Connect wires from lamp arm-a (G) to power strip (FF) (black to blue, white to white).
STEP 4. Pass the Powerstrip through the Yoke.

4. Assembling the Fan

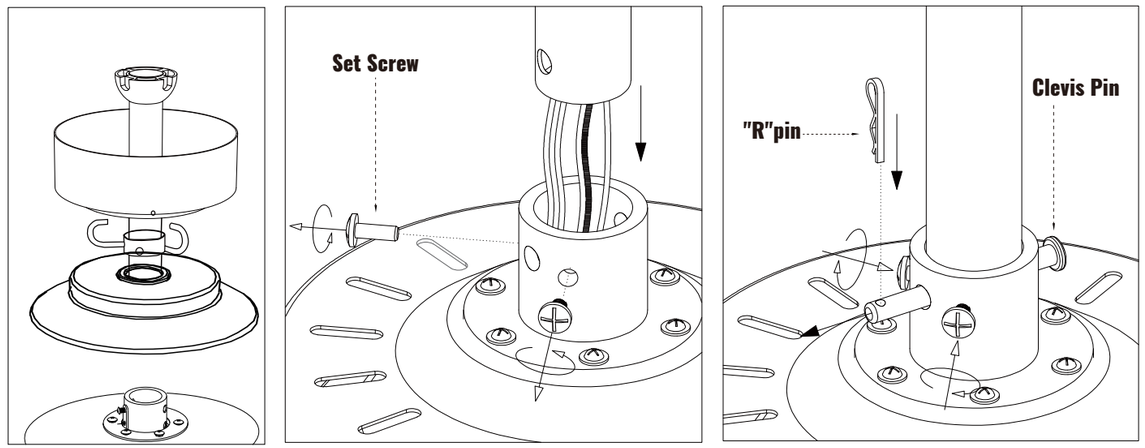


STEP 1. Remove the clevis pin and "R" pin from the downrod assembly.
STEP 2. Thread the canopy, canopy ring, chain retaining clasp and coupling cover through the downrod in that order.
STEP 3. Route powerstrip from the fan through downrod assembly.
STEP 4. Insert clevis pin and "R" pin [EE].
STEP 5. Fix the set screw with a screwdriver.

4. Installing the Mounting Bracket

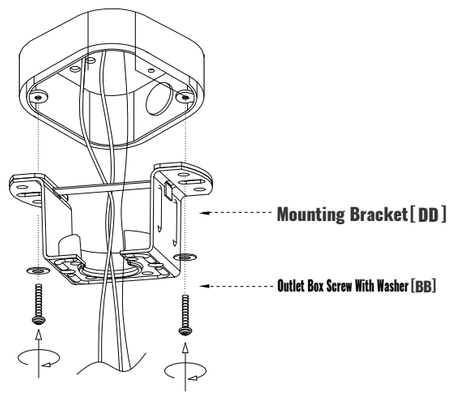


Fix the mounting bracket onto the outlet box with set screws from the outlet box.


5. Hanging the Fan

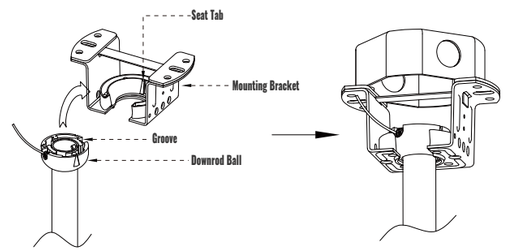

Lift the downrod into the mounting bracket. Rotate the downrod until the tab in the mounting bracket is seated in the Groove in the downrod ball.

7. Wiring

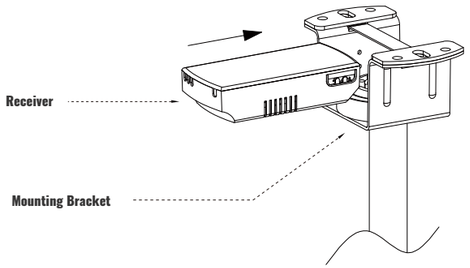


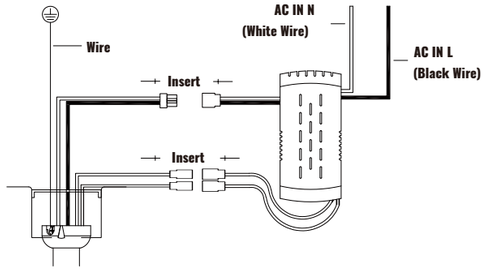

STEP 1. Insert the receiver to the mounting bracket
STEP 2. Connect the wires from the fixture to the house supply wires with wire nuts (AA) , ground wire (bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire.
STEP 3. Wrap the connection with electrical tape.


Note:
1. This fan only needs one set of input wires (black, white, and ground wire). Both of the fan and lights will be controlled by the remote controller.
2. This fan can only be connected to an on/off switch if you have one, not a dimmer switch.

8. Attaching the Canopy

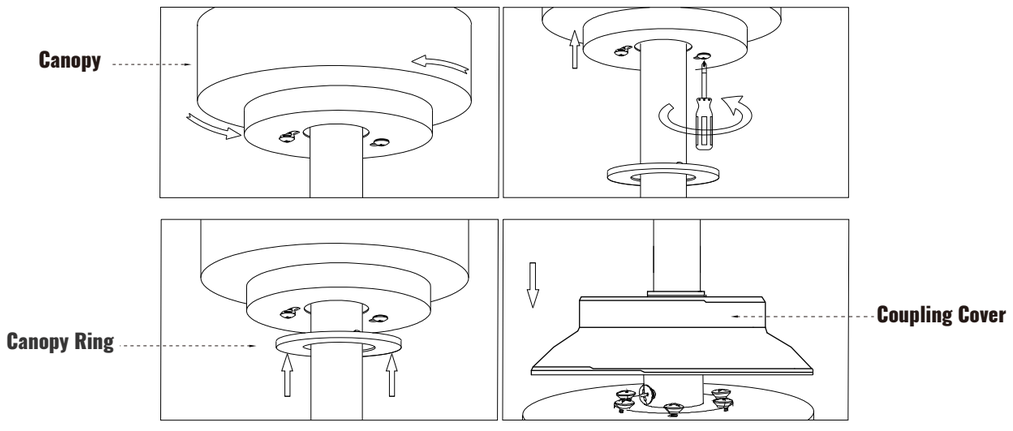


STEP 1. Slide the canopy up to the ceiling and attach it to the mounting bracket with the screws provided.
STEP 2. Slide the canopy ring up to the canopy.
STEP 3 Slide the coupling cover downward to cover the yoke.

9. Assembling the Fan

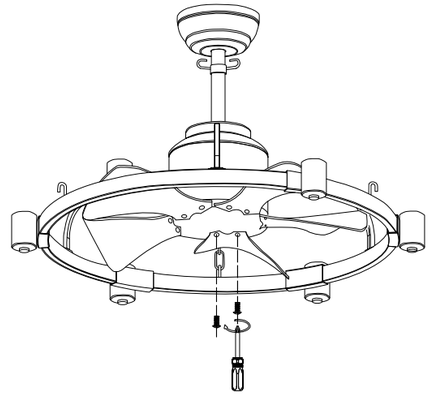


STEP 1. Align the fan blades with the mounting holes and secure with the blade screws (pre-installed on the motor).

Note: Make sure to assemble the blades in sequence and fasten the screws with equal force.

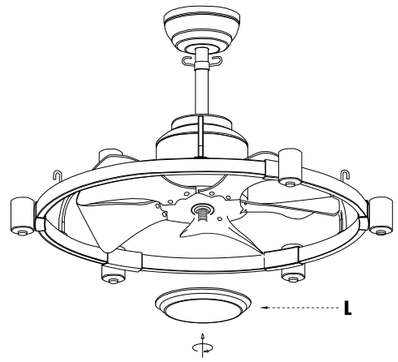

STEP 1. Mounting the Plate Cover (L).

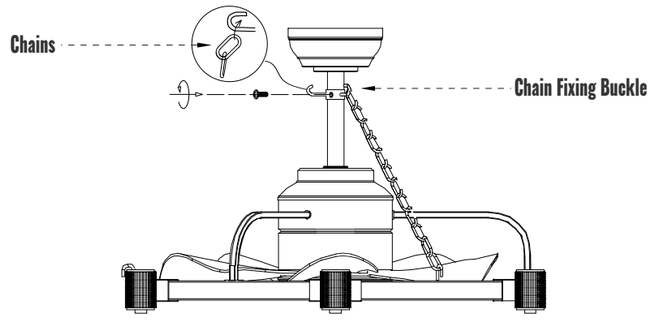

STEP 2. Use the ends of the Chains (M) to connect the Lamp arm-c (J) to the hooks on the Chain Fixing Buckle (E) .
STEP 3. Pull the Chain Fixing Buckle as high as it will go and lock the screws.