


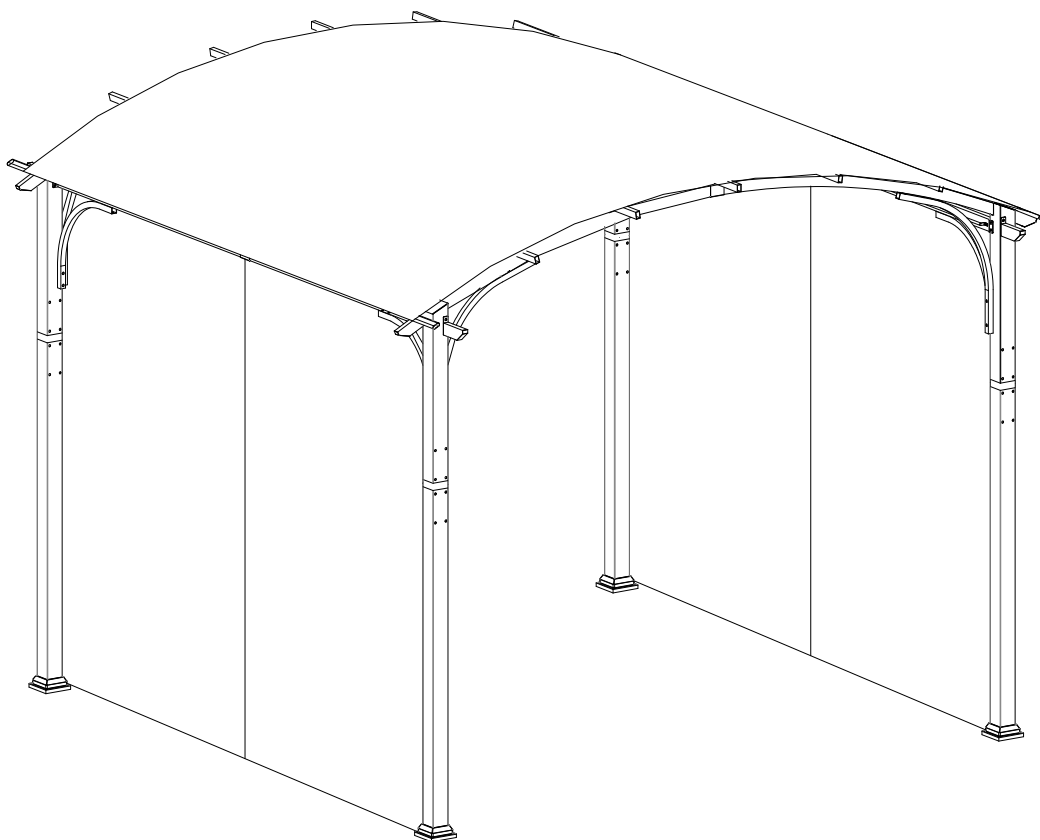

INSTRUCTION MANUAL

Patio Pergola F09

IF YOU PURCHASED THE PERGOLA ONLINE AND HAVE ANY
QUESTIONS OR CONCERNS










PLEASE CONTACT US WITH EMAIL





Email: hiwarrantyservice@outlook.com

TEXT: +1 628-263-4608







Part List

2 / 16

Description	Label	Qty	Part Image
Upper post 1	A1	2	
Upper post 2	A2	2	
Lower Post	A3	4	
Beam long side	B1	2	
Beam Short side	B2	2	
Long arc beam	C1	2	
Short arc beam	C2	2	
Arc beam connector	C3	2	
Top beam long side	D1	5	
Top beam short edge	D2	5	
Straight edge diagonal support	E	4	
Arc edge oblique support	F	4	
Decorative head	G	4	
Long tube wear cloth	M1	2	
Short tube wear cloth	M2	2	
Mosquito net bar	N	4	

Base Cover	O	4	
Post Base	P	4	
Post connecting piece	R	8	
Beam card set	S	2	
decoration on post	T	4	
Canopy	W	1	
abat vent	V	2	

Hardware Pack

Lable	Description	Qty	Add	PartImage
AA	Hexagon cross bolt M6*15	66	4	
BB	Bolt M6*15	64	4	
CC	Hexagon cross bolt M6*45	50	4	
DD	Hexagon cross bolt M6*25	4	1	
FF	Stake D6*230	8		
HH	The plastic cap	64	6	
JJ	Hexagon cross bolt M6*10	4	1	
Z1	Wrench M6	2		
TT	Plastic Ring	24	2	

<1>




B1 2x



B2 2x



S 2x

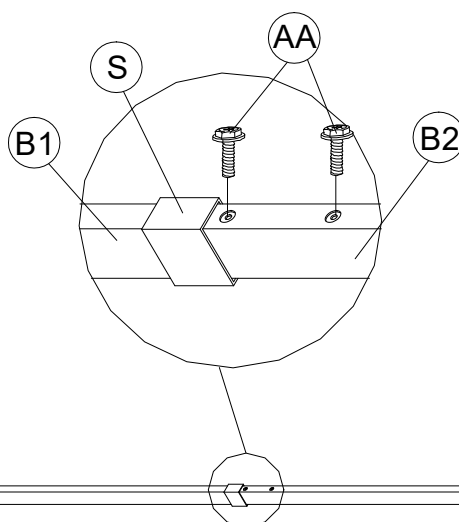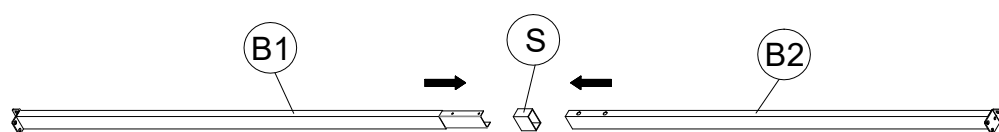


1



M6x15

AA 4x

<2>

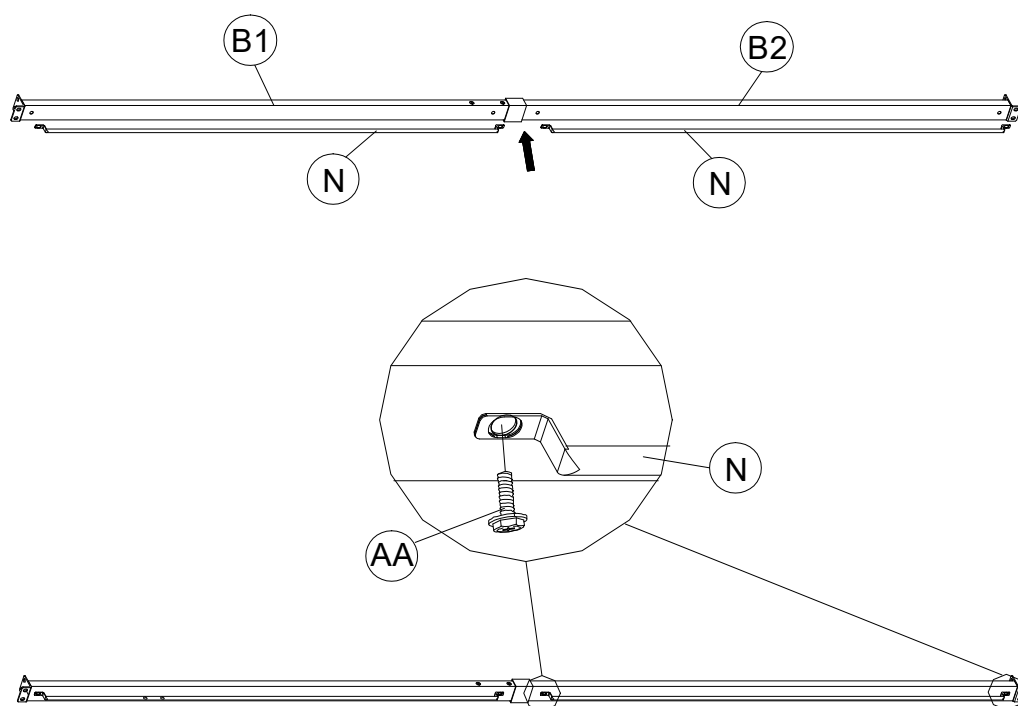

(N) 4x

2


M6x15
(AA) 8x



A1 2x



A2 2x







R 8x



G 4x

3

<3>

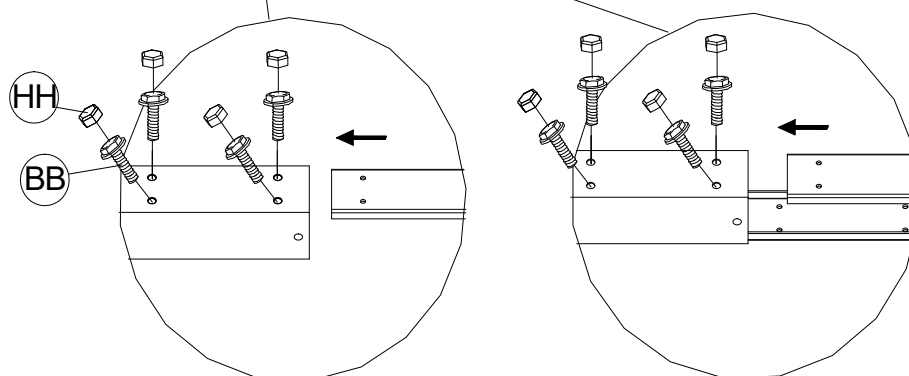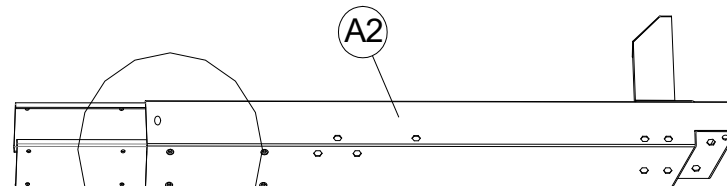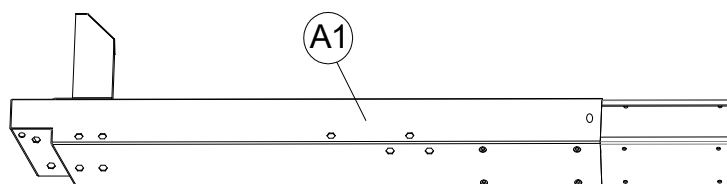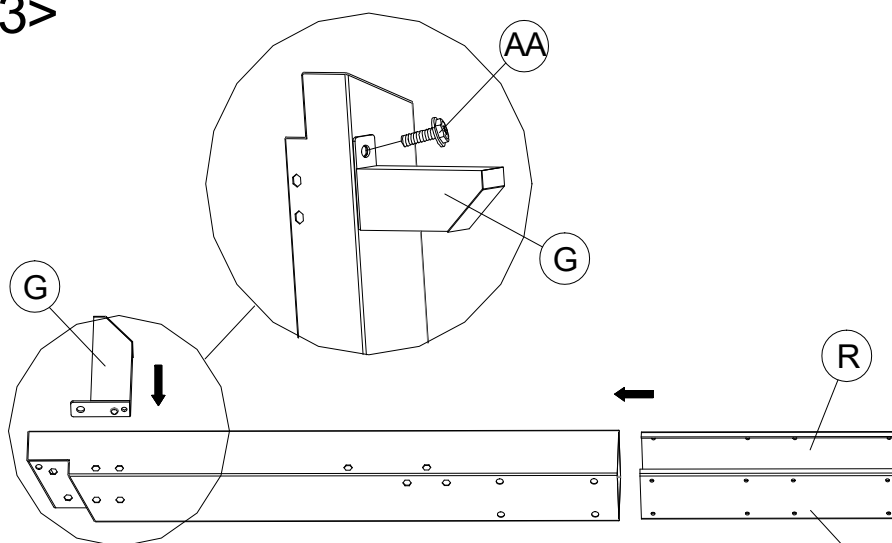


HH 32x M6



BB 32x M6x15




AA 4x M6x15




E 4x

<4>

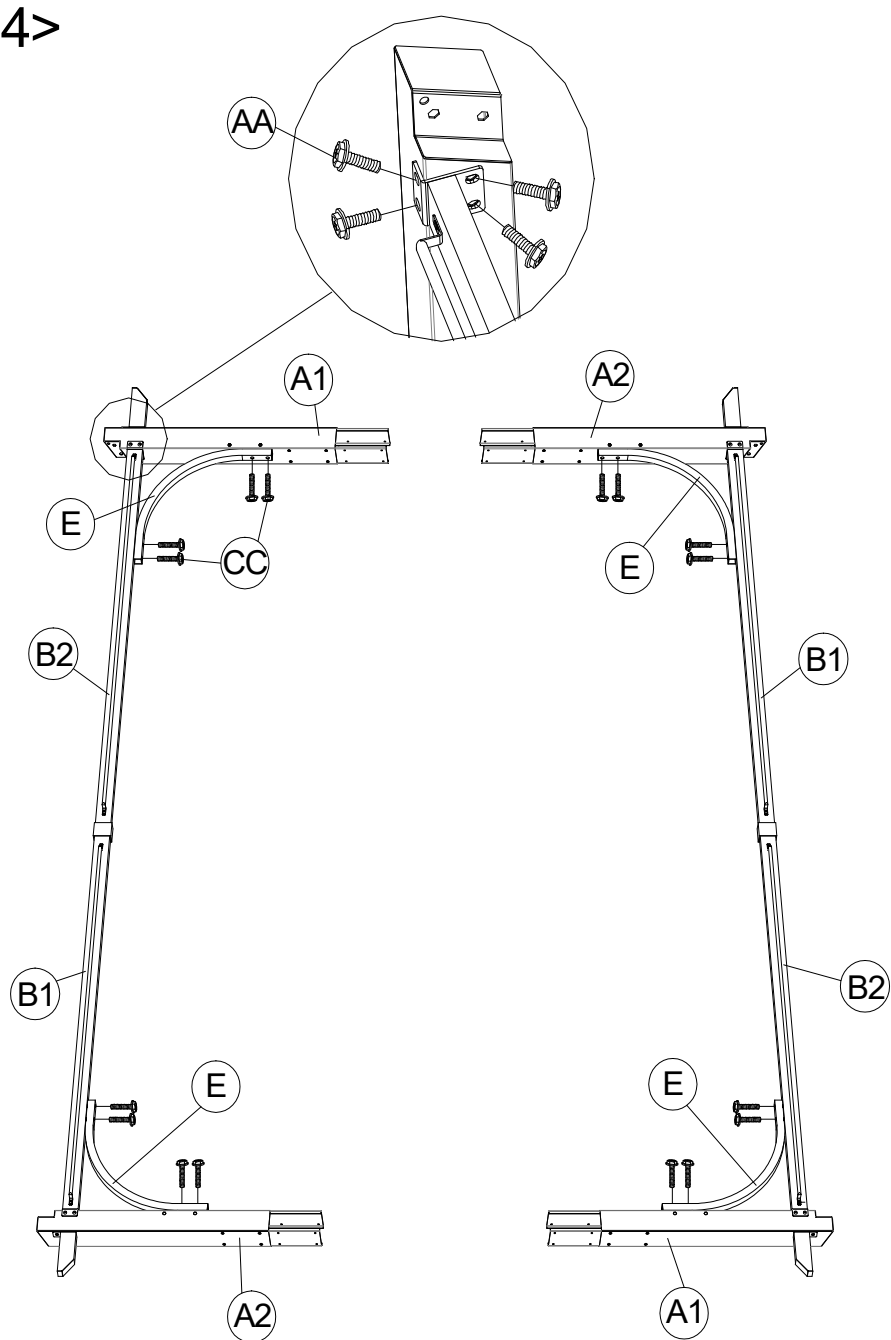

4




CC 16x
M6x45



AA 16x
M6x15


<5>



C1 2x






C2 2x



C3 2x


5

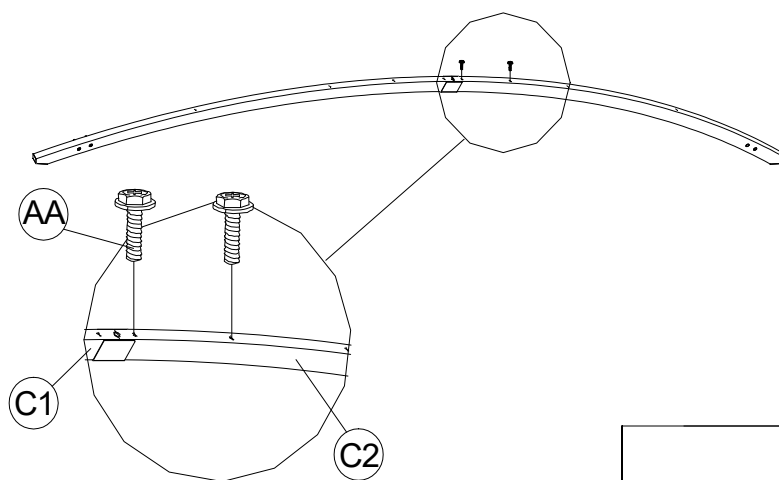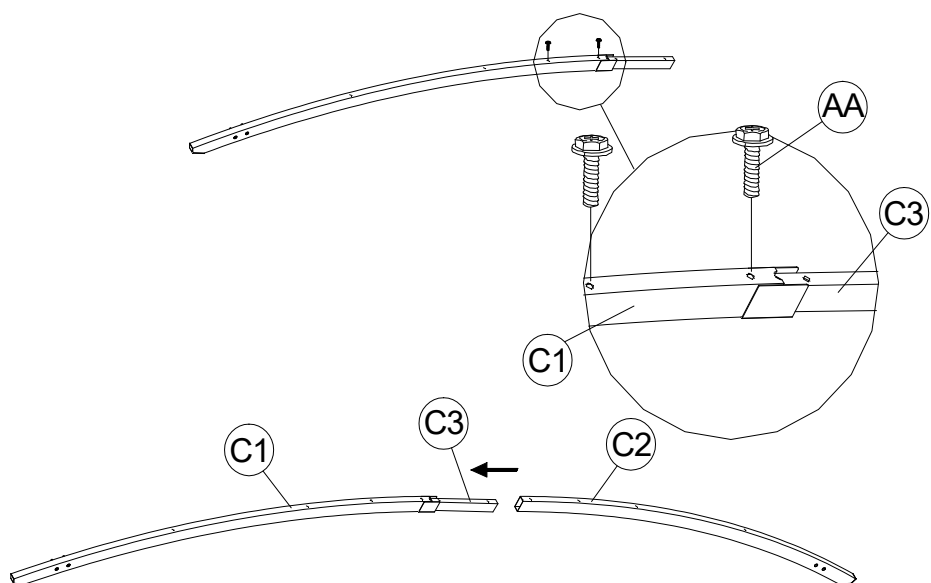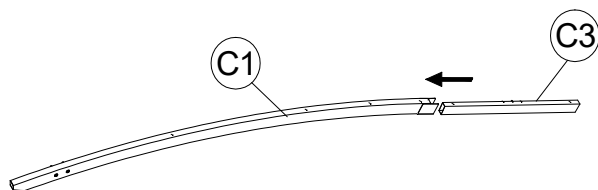


M6x15

AA 8x


<6>

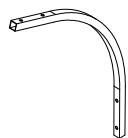

F 4x

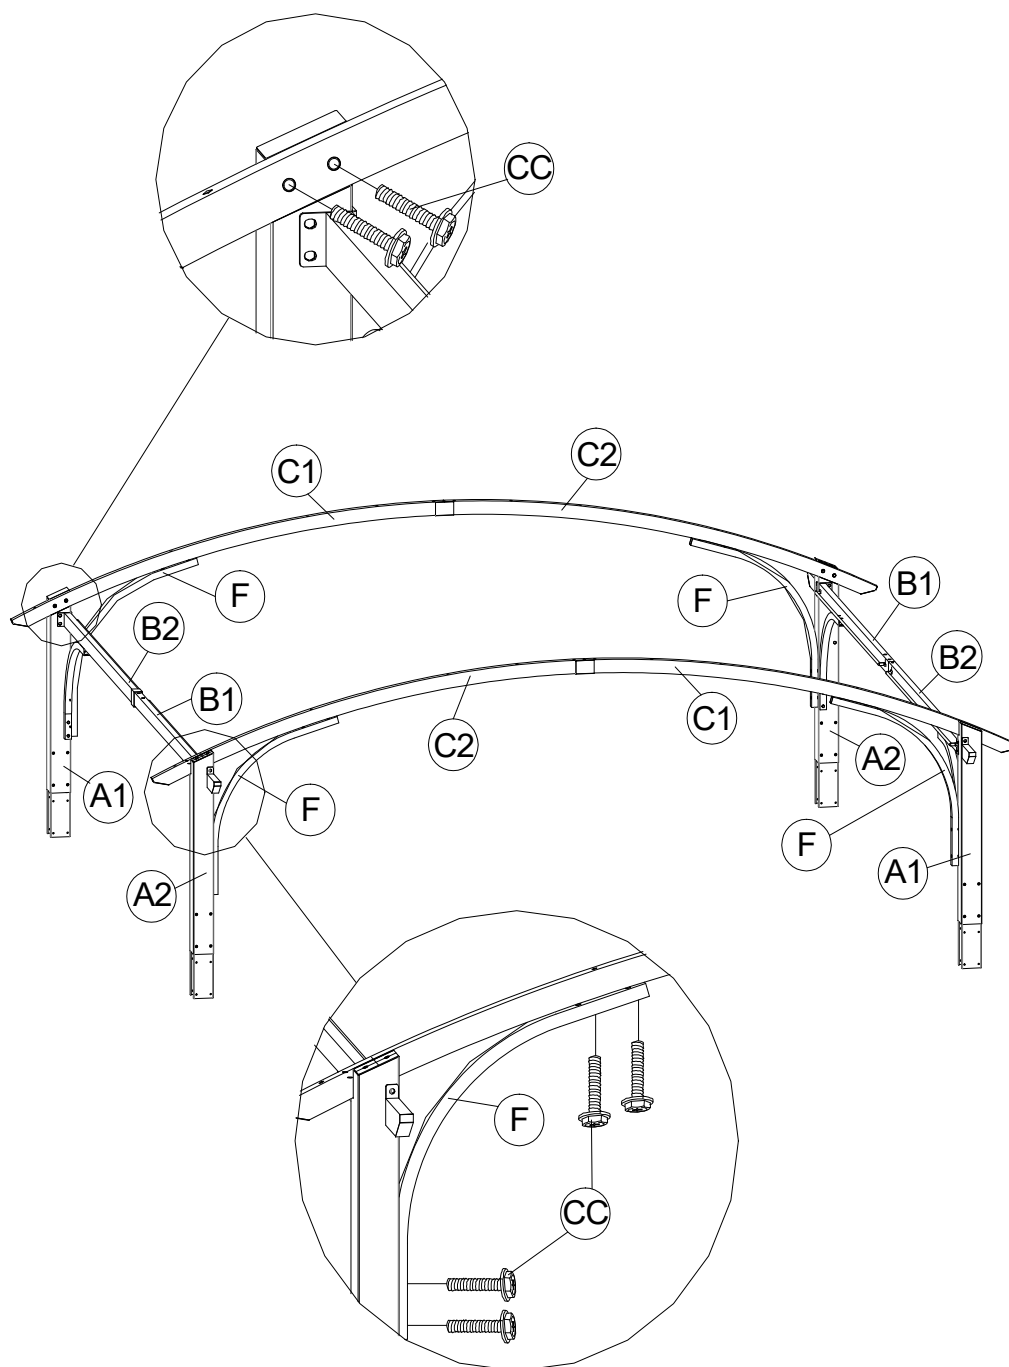

6





M6x45

CC 24x


<7>

D1 5x

D2 5x

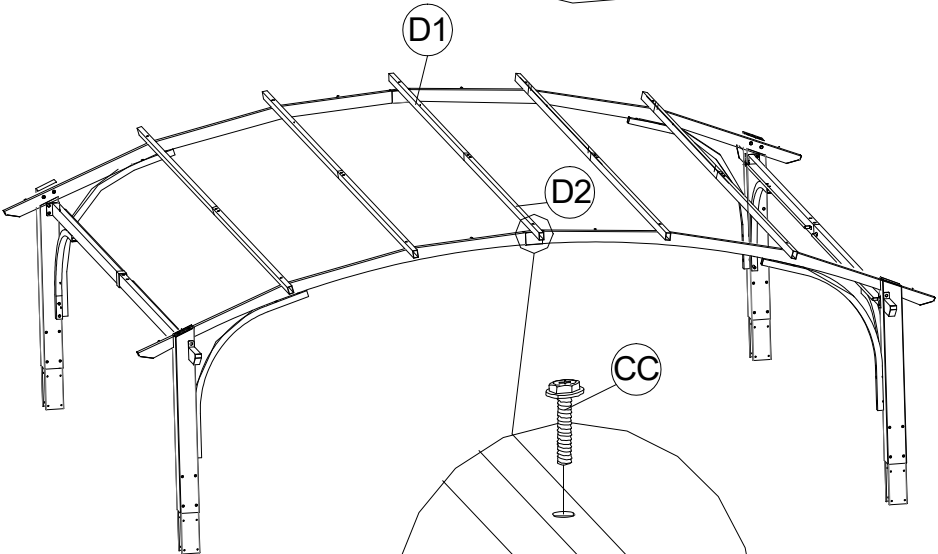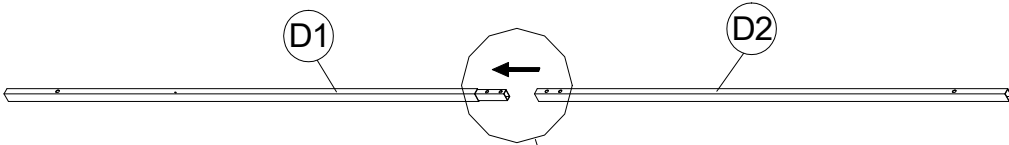

7



M6x45

CC 10x



M6x15


AA 10x



M1 2x




M2 2x




W 1x

8

<8>

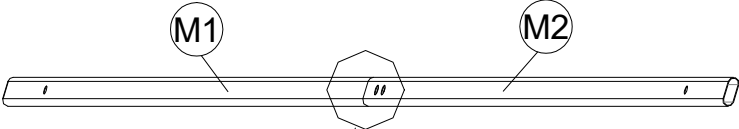

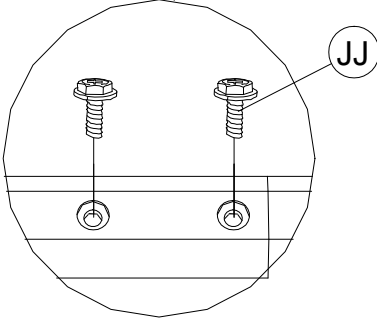




After the tubes are assembled, they are run in from both ends of the cloth.




M6x10

JJ 4x

<9>

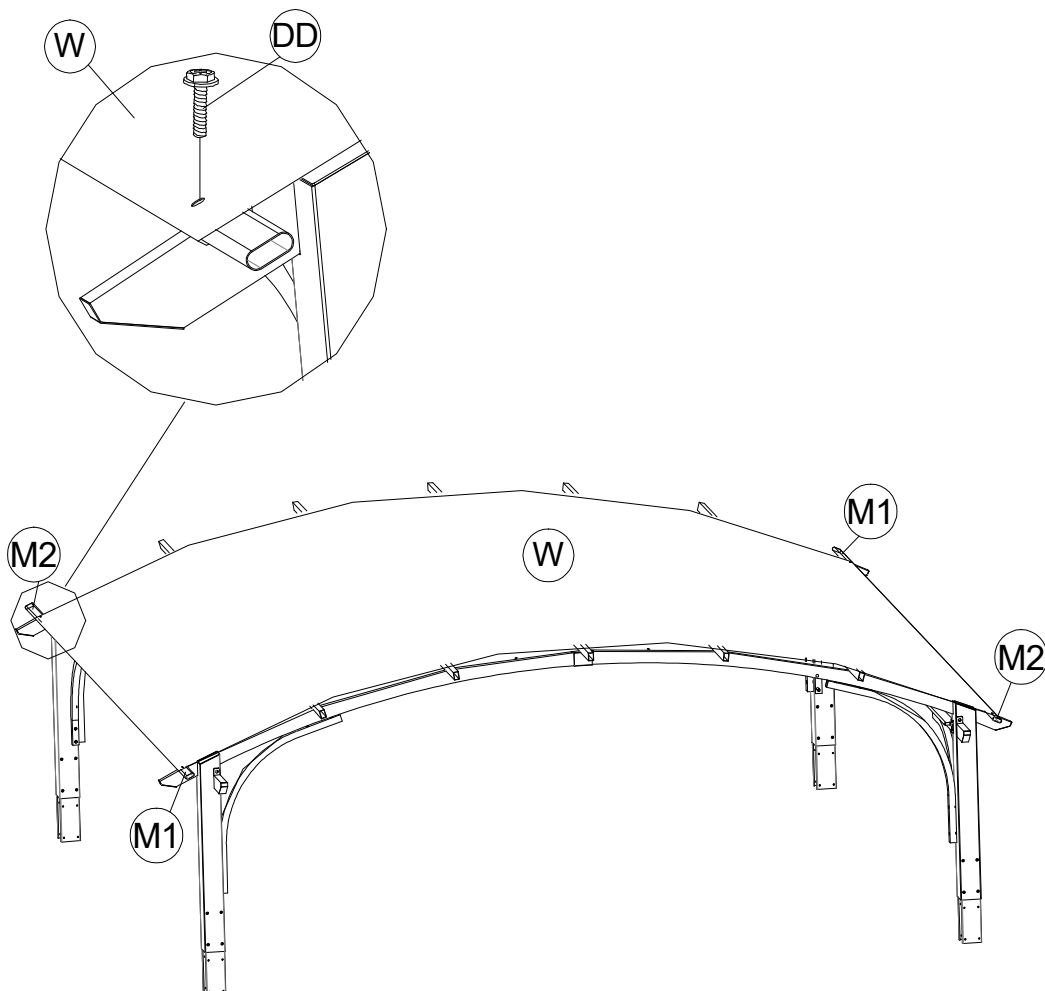

Unroll the cloth, flatten it and tighten
the screws at both ends.



M6x25


DD 4x

9


<10>






A3 4x



O 4x



P 4x

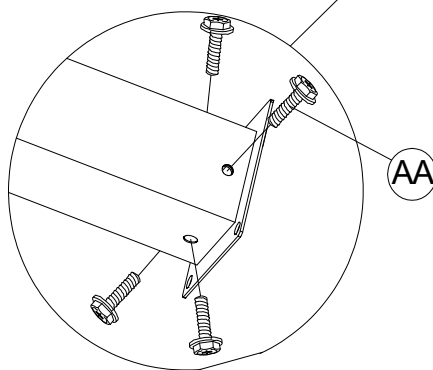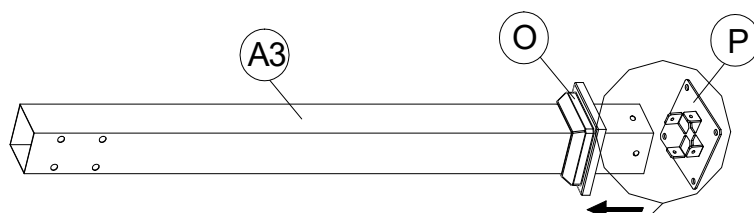

10



M6x15


AA 16x



T 4x

<11>

Column assembly requires 3-4
people to help keep it smooth.

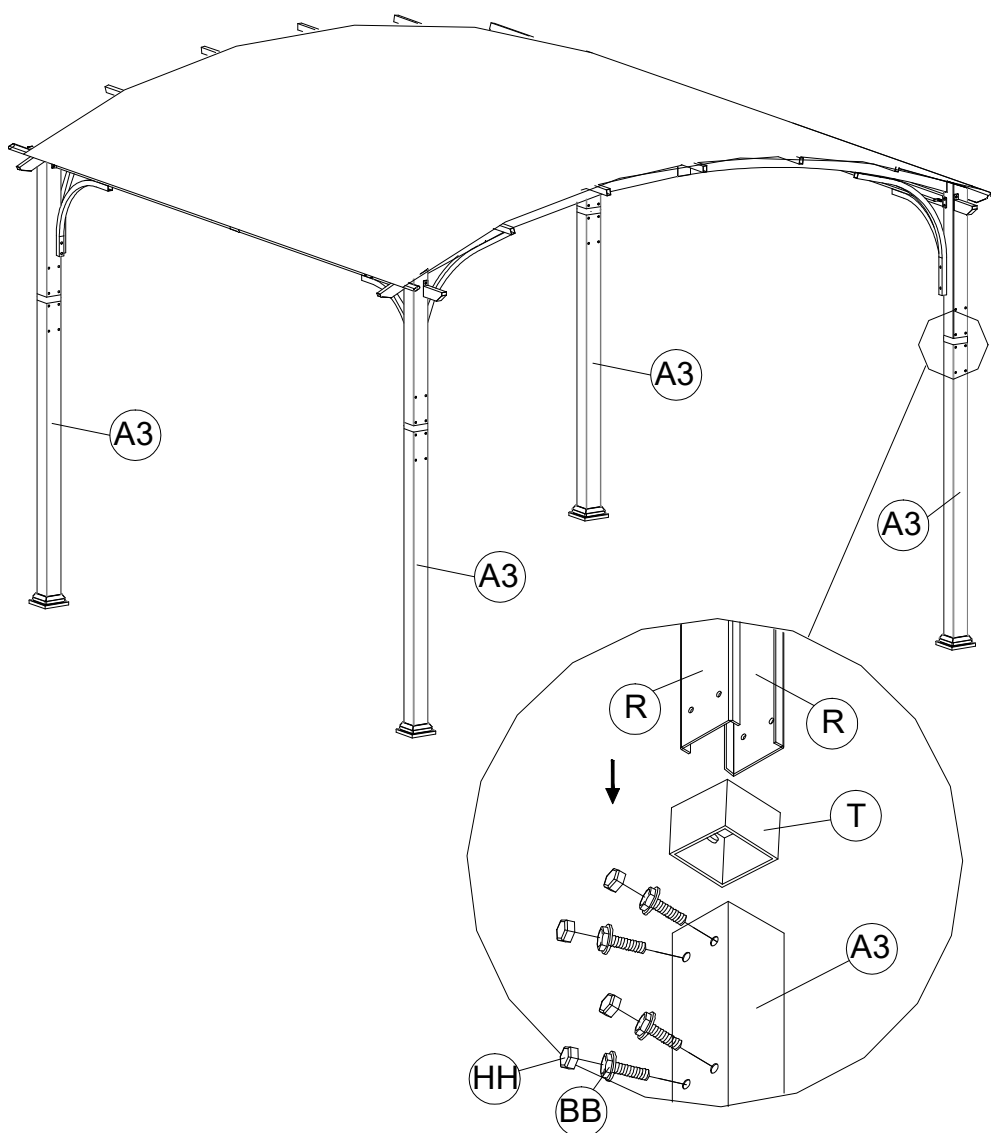

11




M6

HH 32x




M6x15

BB 32x




V 2x

<12>

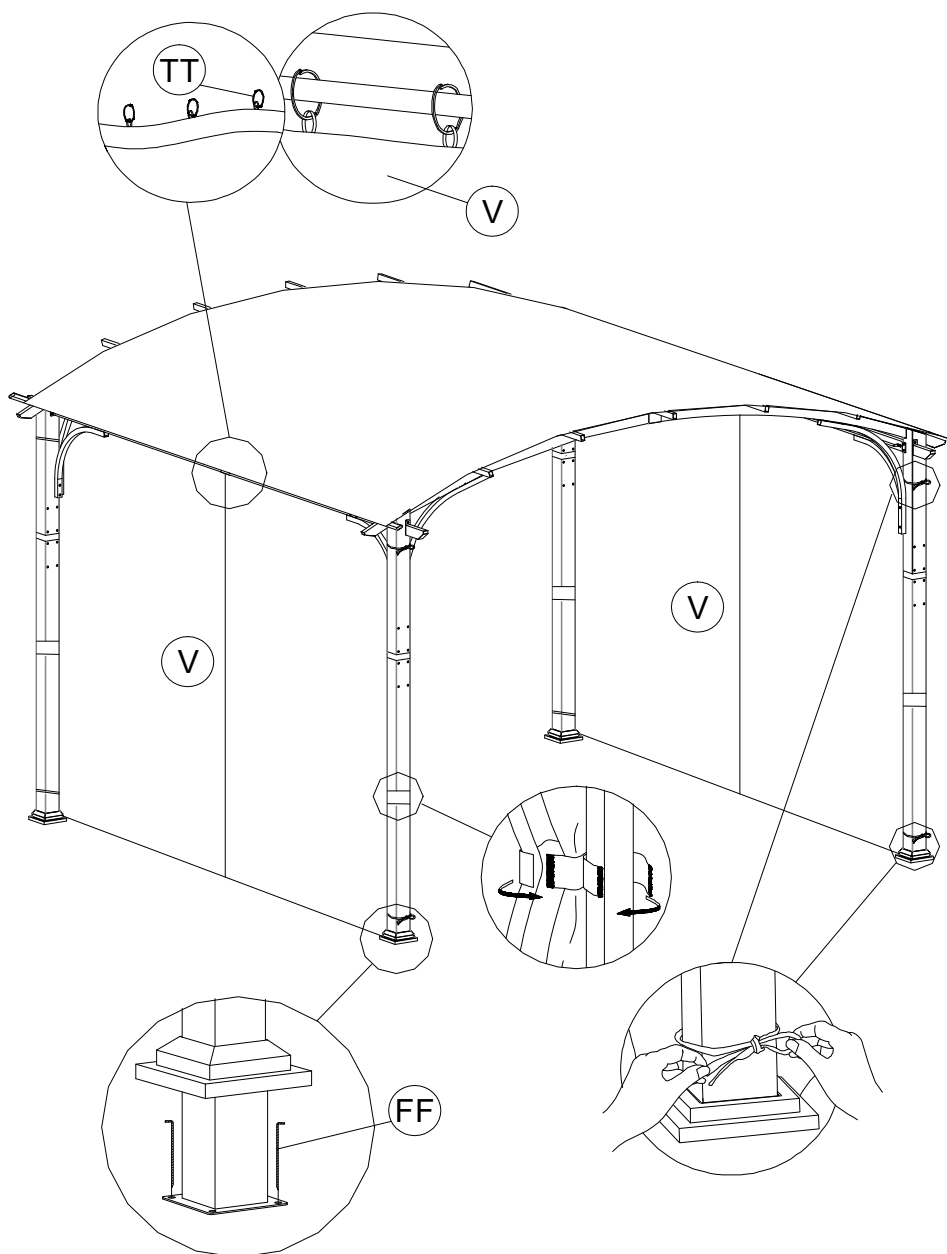

12



FF 8x

D6x230



TT 24x