


Assembly Instructions

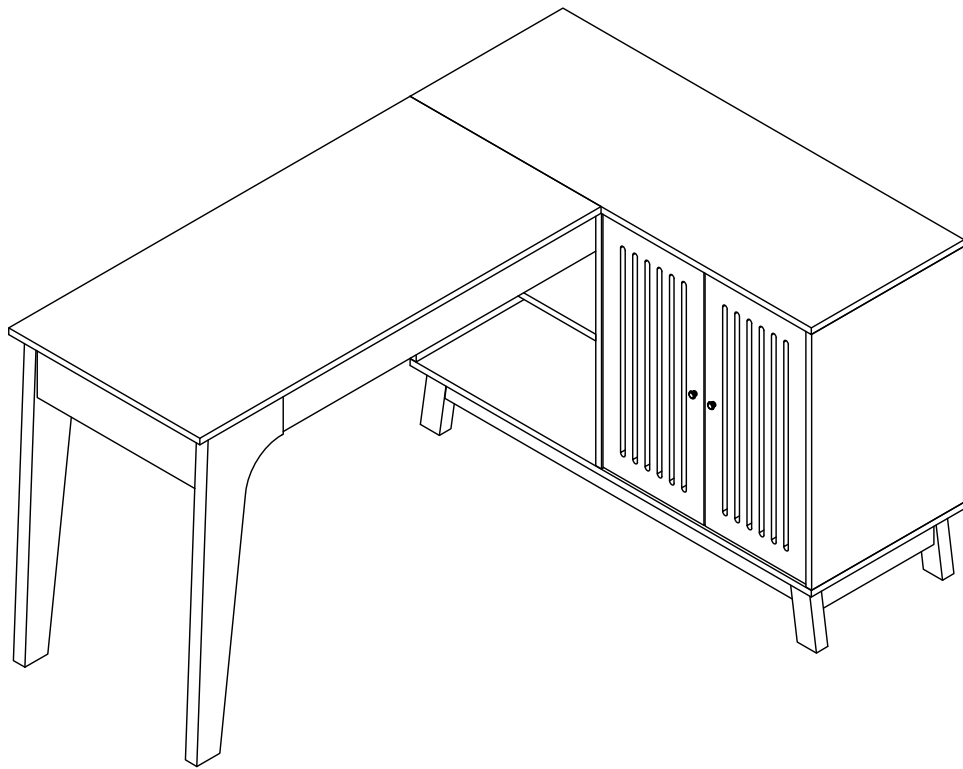

Corner desk

Model No.

HOGA-XK00749

HOGA-XK00794

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

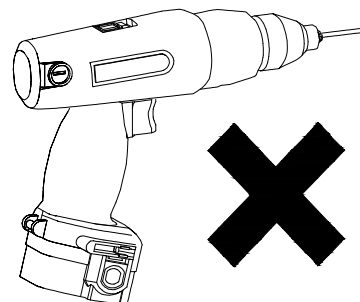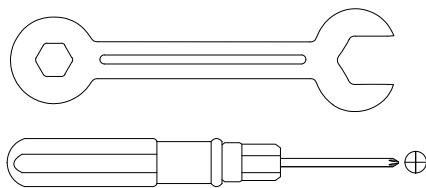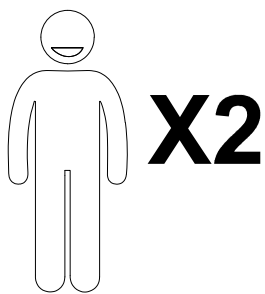



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

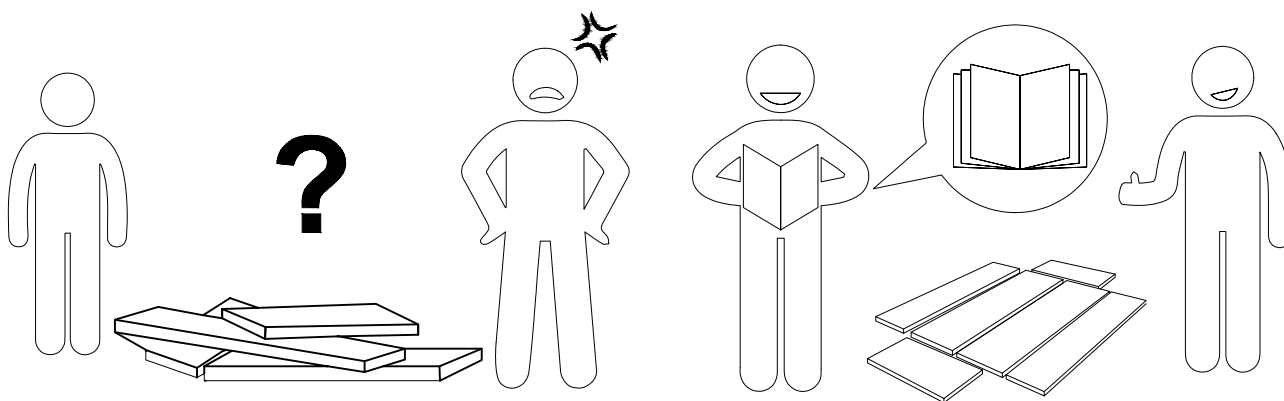

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.




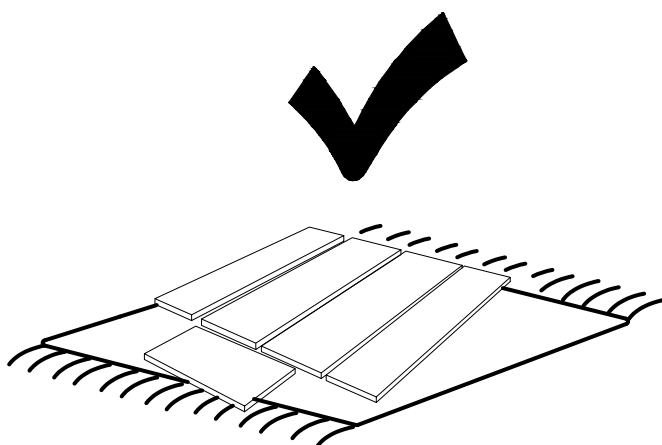
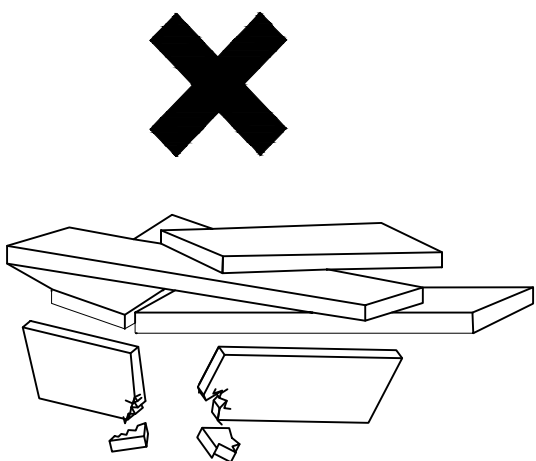




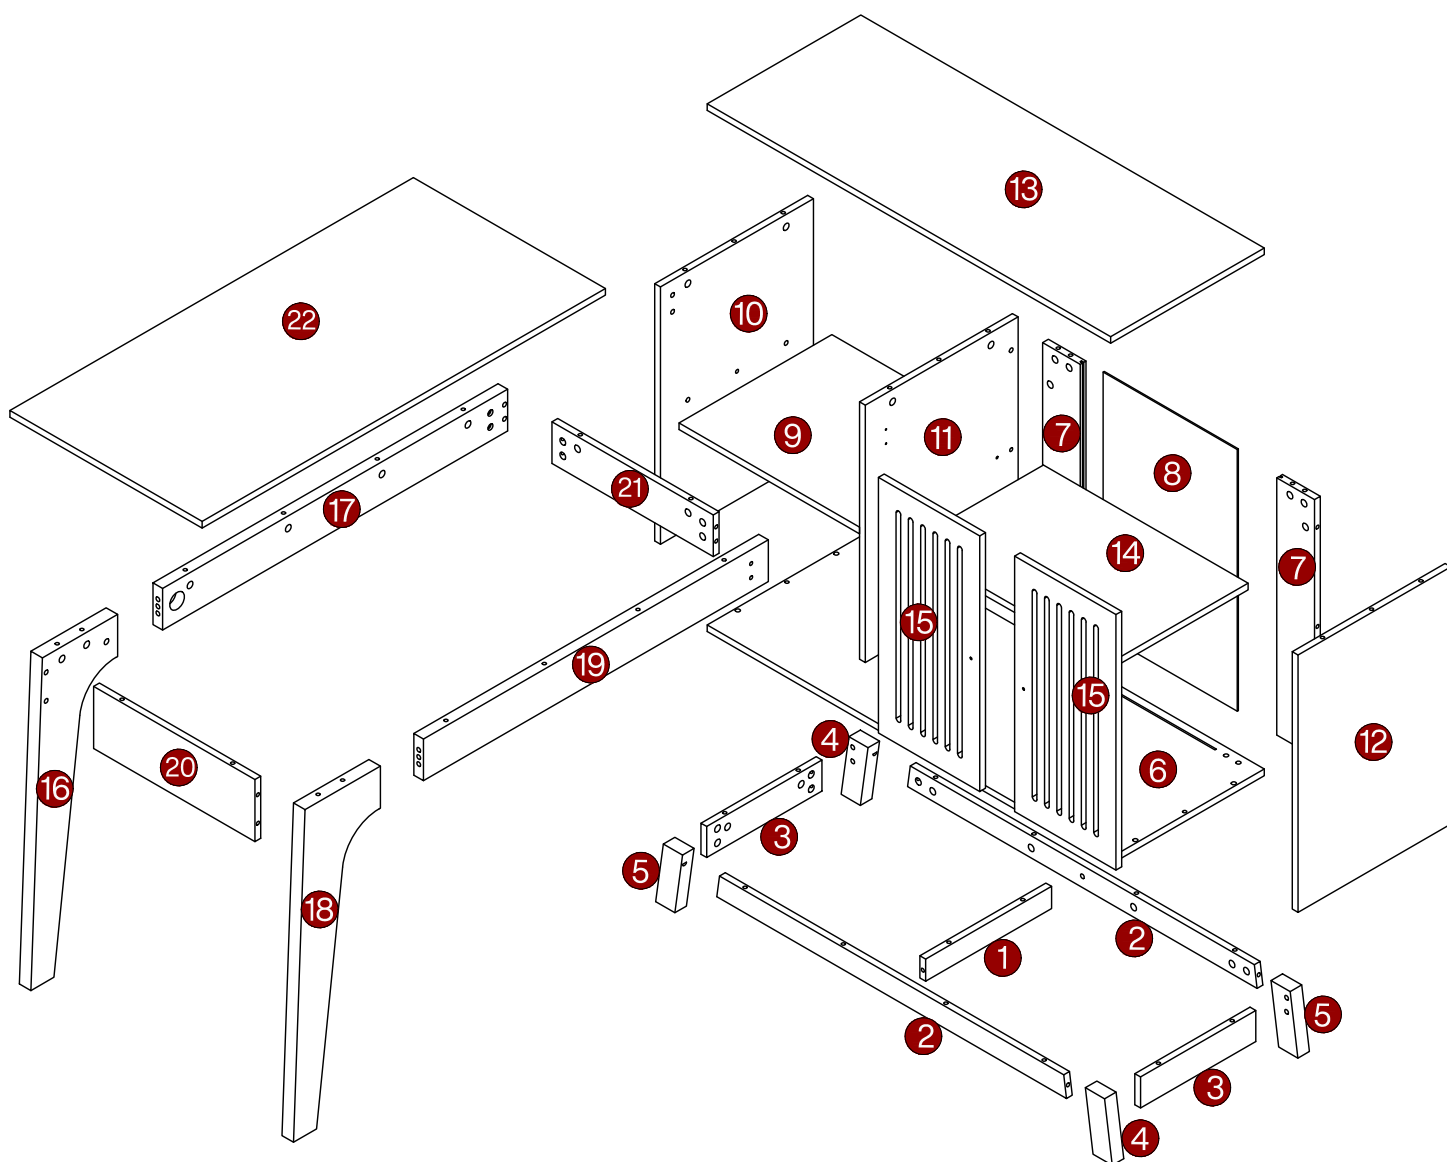




⚠ Caution

Makesureallpartsareincluded.Mostboardpartsarelabeledorstampedontherawedge.
Contactusforafreereplacementifyouencounteranydamagedormissingparts.























Hardware List

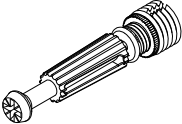A	B	C	D	E	F
					
M6x40mm	Ø15x12mm	Ø8x30mm	Ø10 x40mm	Ø3.5x14mm	M6x25mm
80 pcs	80 pcs	10 pcs	4 pcs	30 pcs	4pcs

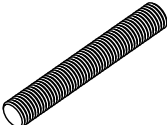G	H	I	J	K	L
					
		M4x18mm		M8x100mm	M8
6 pcs	2 pcs	2 pcs	4 pcs	2 pcs	2 pcs


M	N	O	P	Q	R
					
M8	M8				M12x15mm
2 pcs	1 pc	6 pcs	1 pc	4 pcs	2 pcs

Parts List

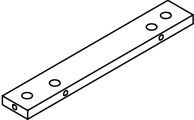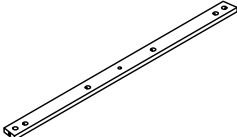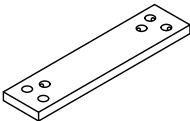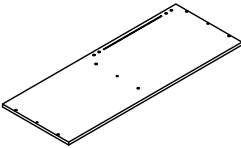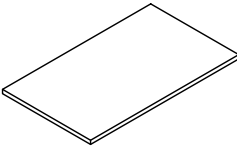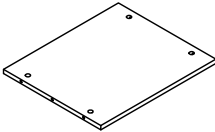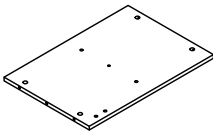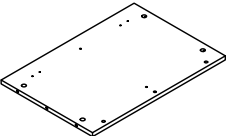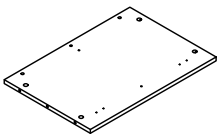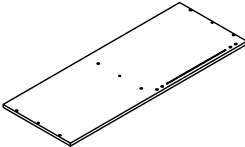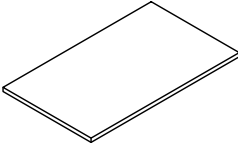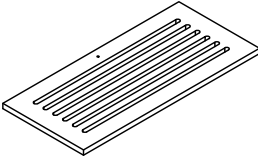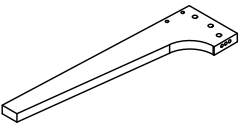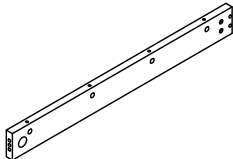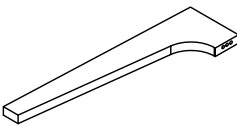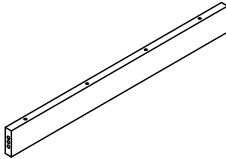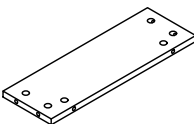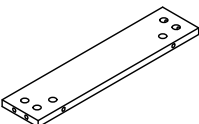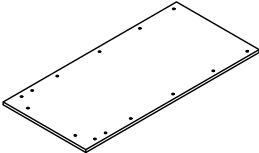
1  1 pc	2  2 pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  1 pc	7  2 pcs	8  1 pc	9  1 pc	10  1 pc
11  1 pc	12  1 pc	13  1 pc	14  1 pc	15  2 pcs
16  1 pc	17  1 pc	18  1 pc	19  1 pc	20  1 pc
21  1 pc	22  1 pc			

Installation of Cams and Pins


Screw the pin into the hole. To set the cam correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

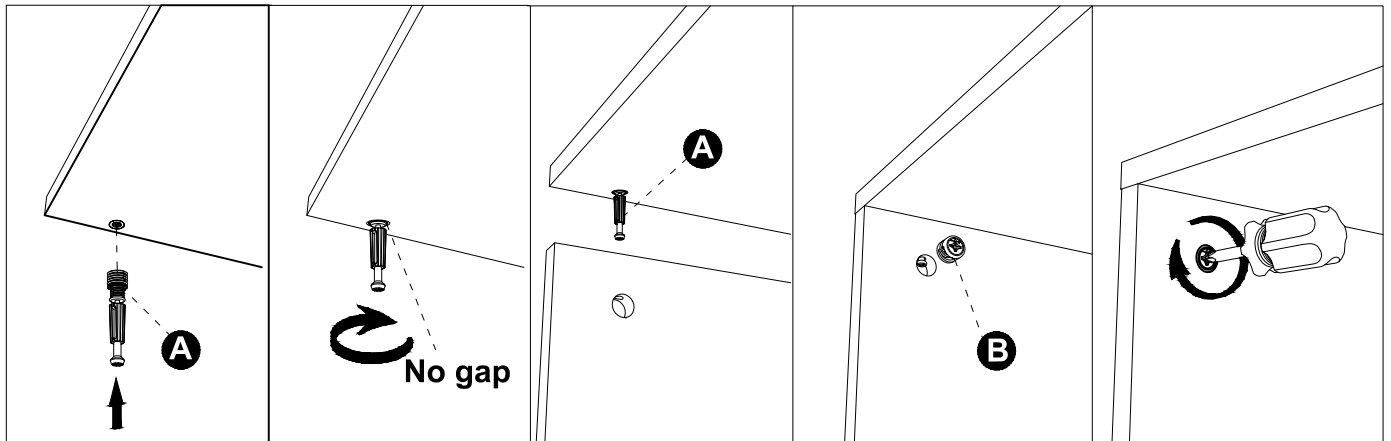


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

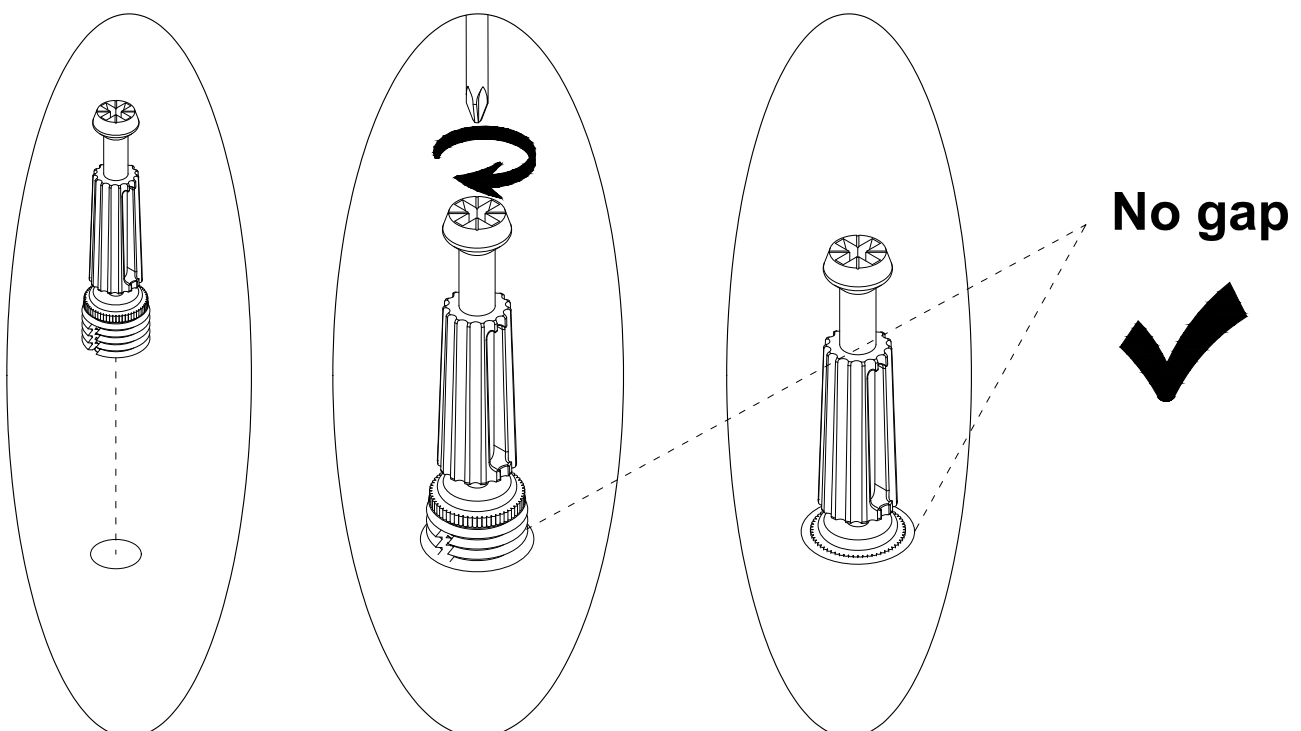

1

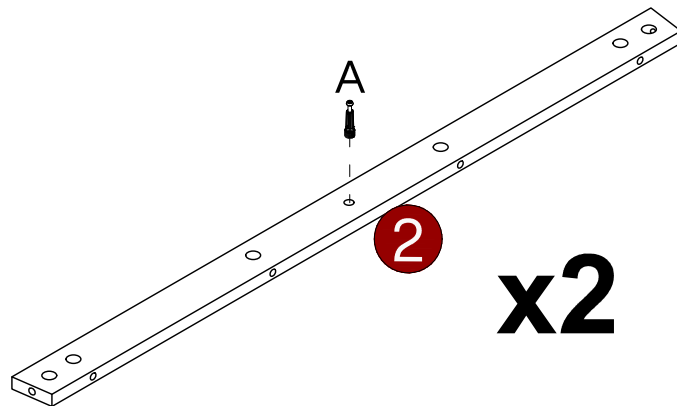


x2

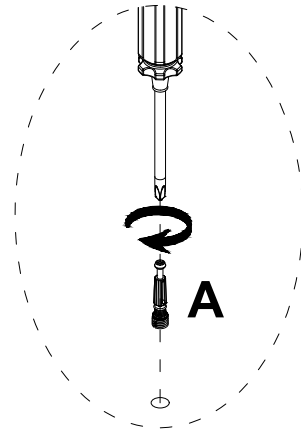

A


M6x40mm
2 pcs

2


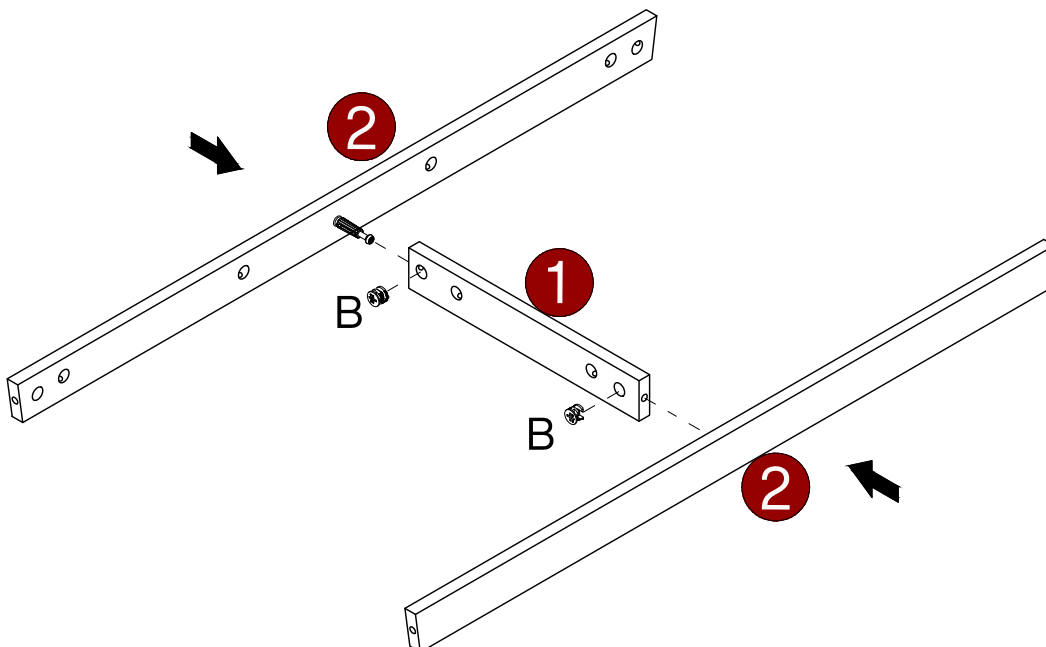


B


Ø15x12mm
2 pcs

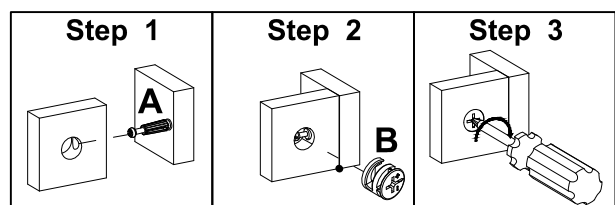

3

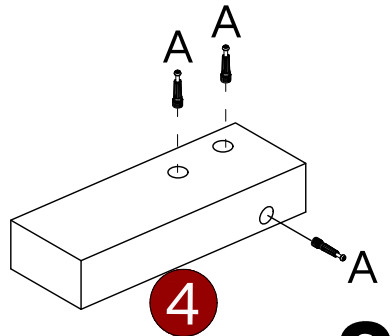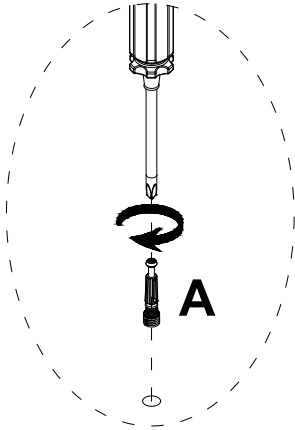

x2

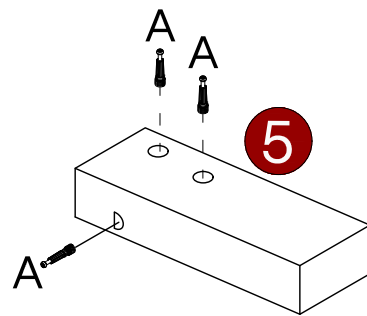


x2

A

M6x40mm
12 pcs


4

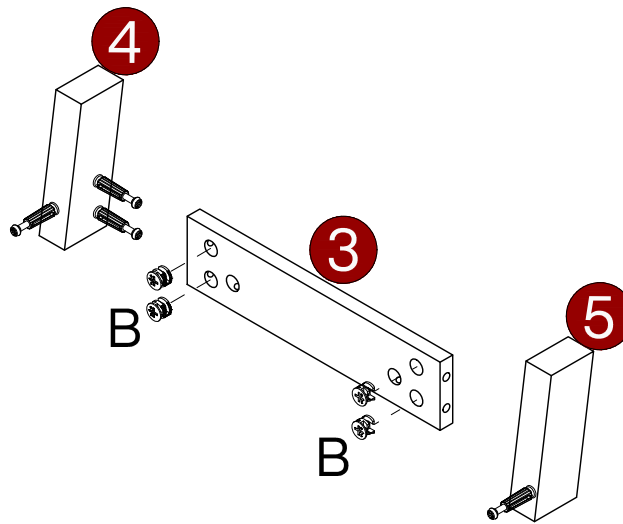


x2

B

Ø15x12mm
8 pcs

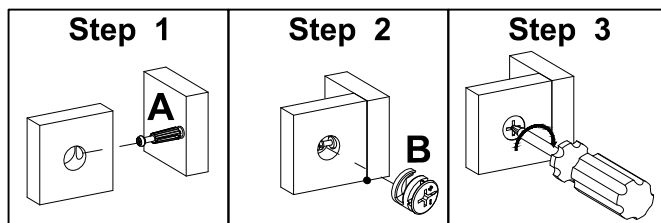


5

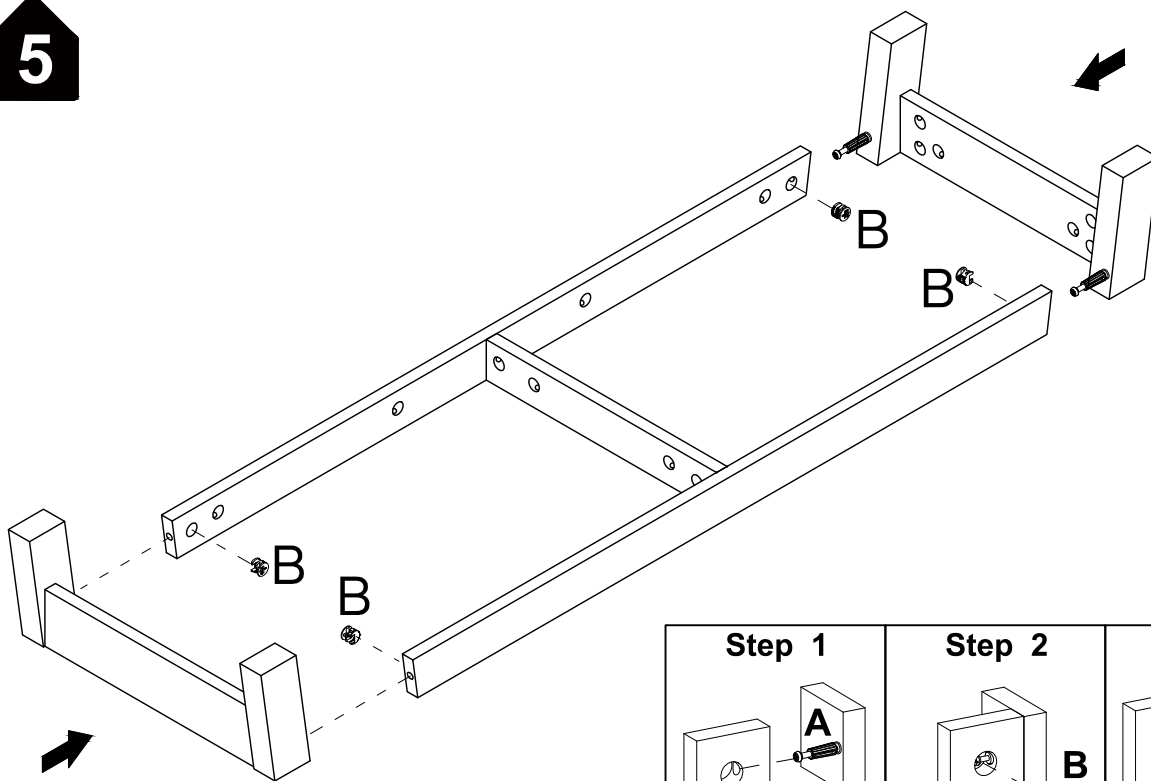


B

Ø15x12mm
4 pcs

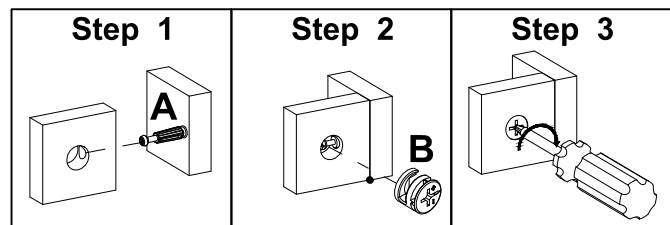


6

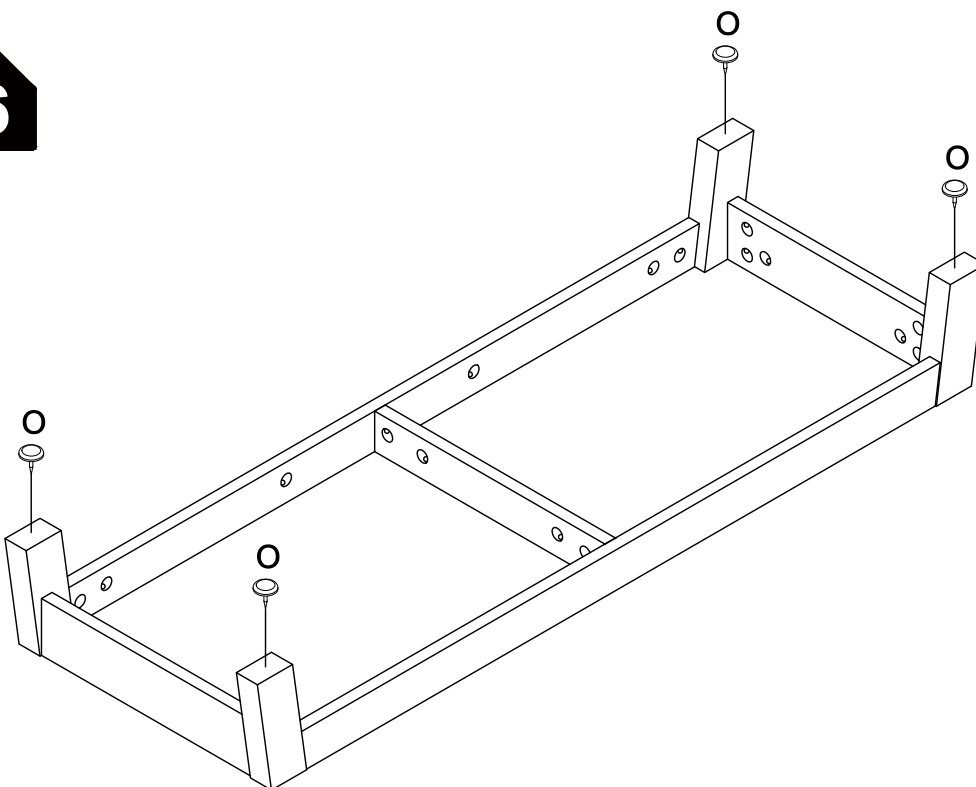


O

4 pcs

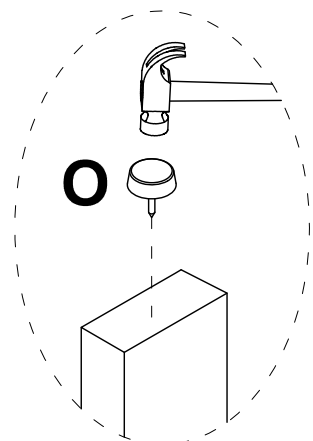


⚠ Caution! Tap lightly

7

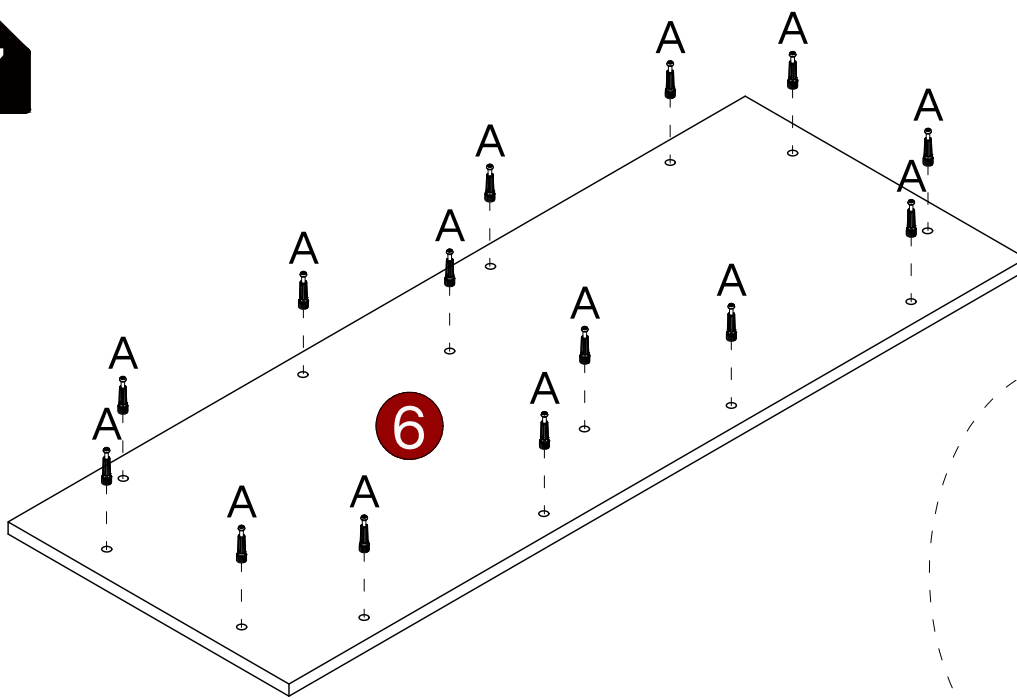


A

M6x40mm
14 pcs

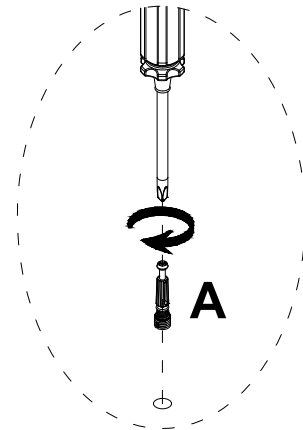


8

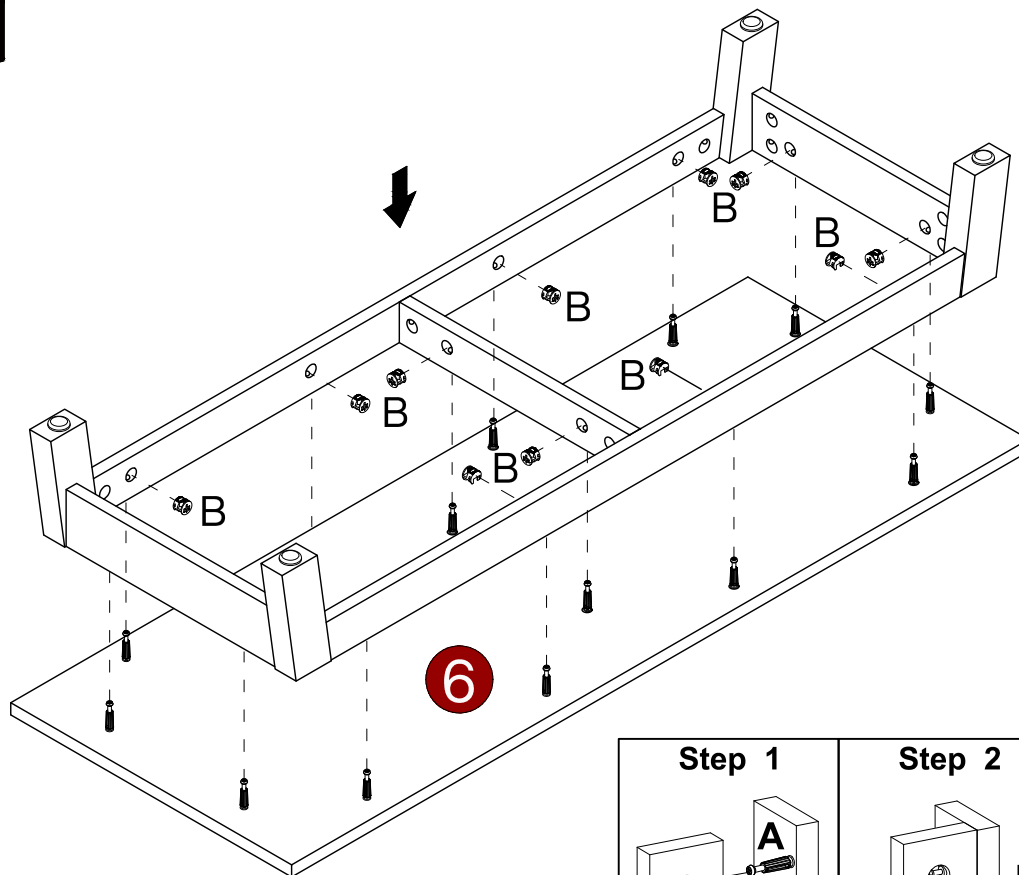



B

Ø15x12mm
14 pcs

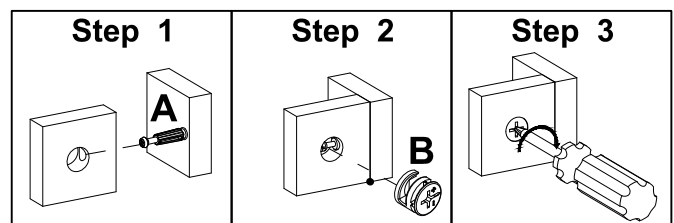



9

C	A
	
Ø8x30mm	M6x40mm
1 pc	2 pcs

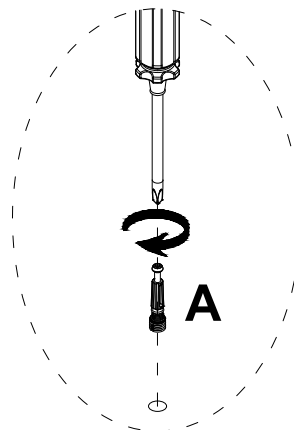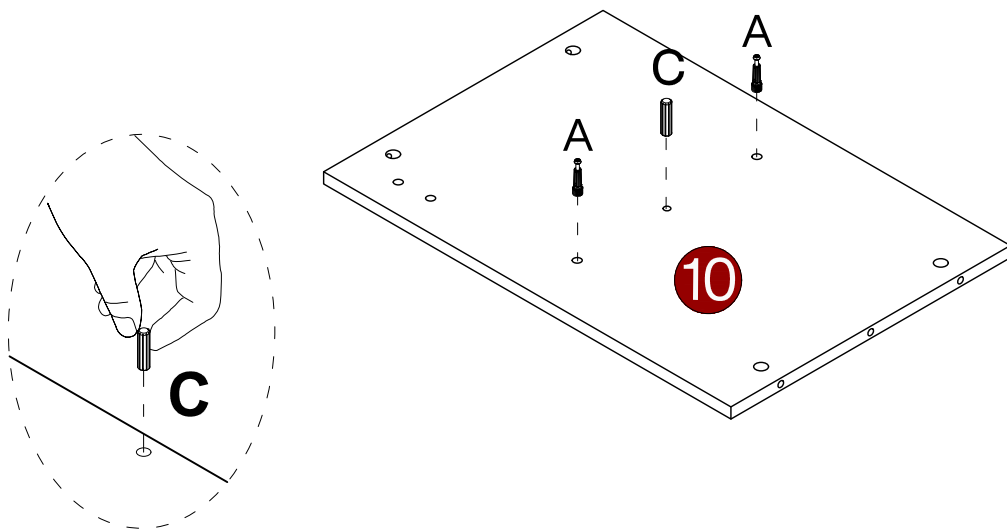


10


C	A
	
Ø8x30mm	M6x40mm
1 pc	2 pcs

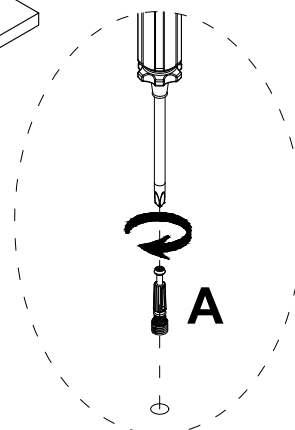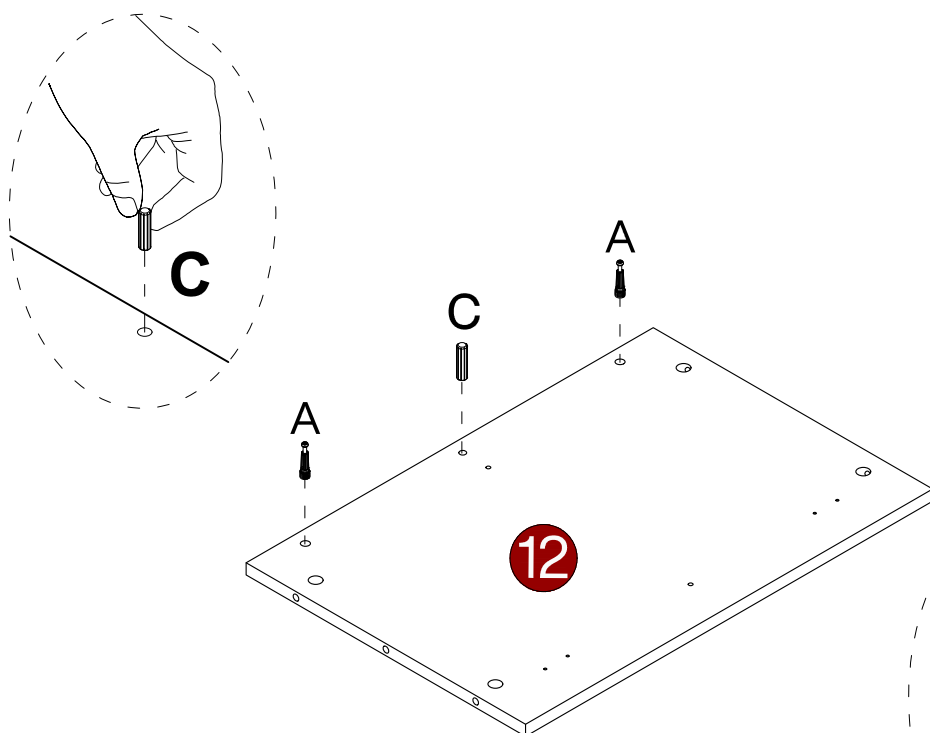



11

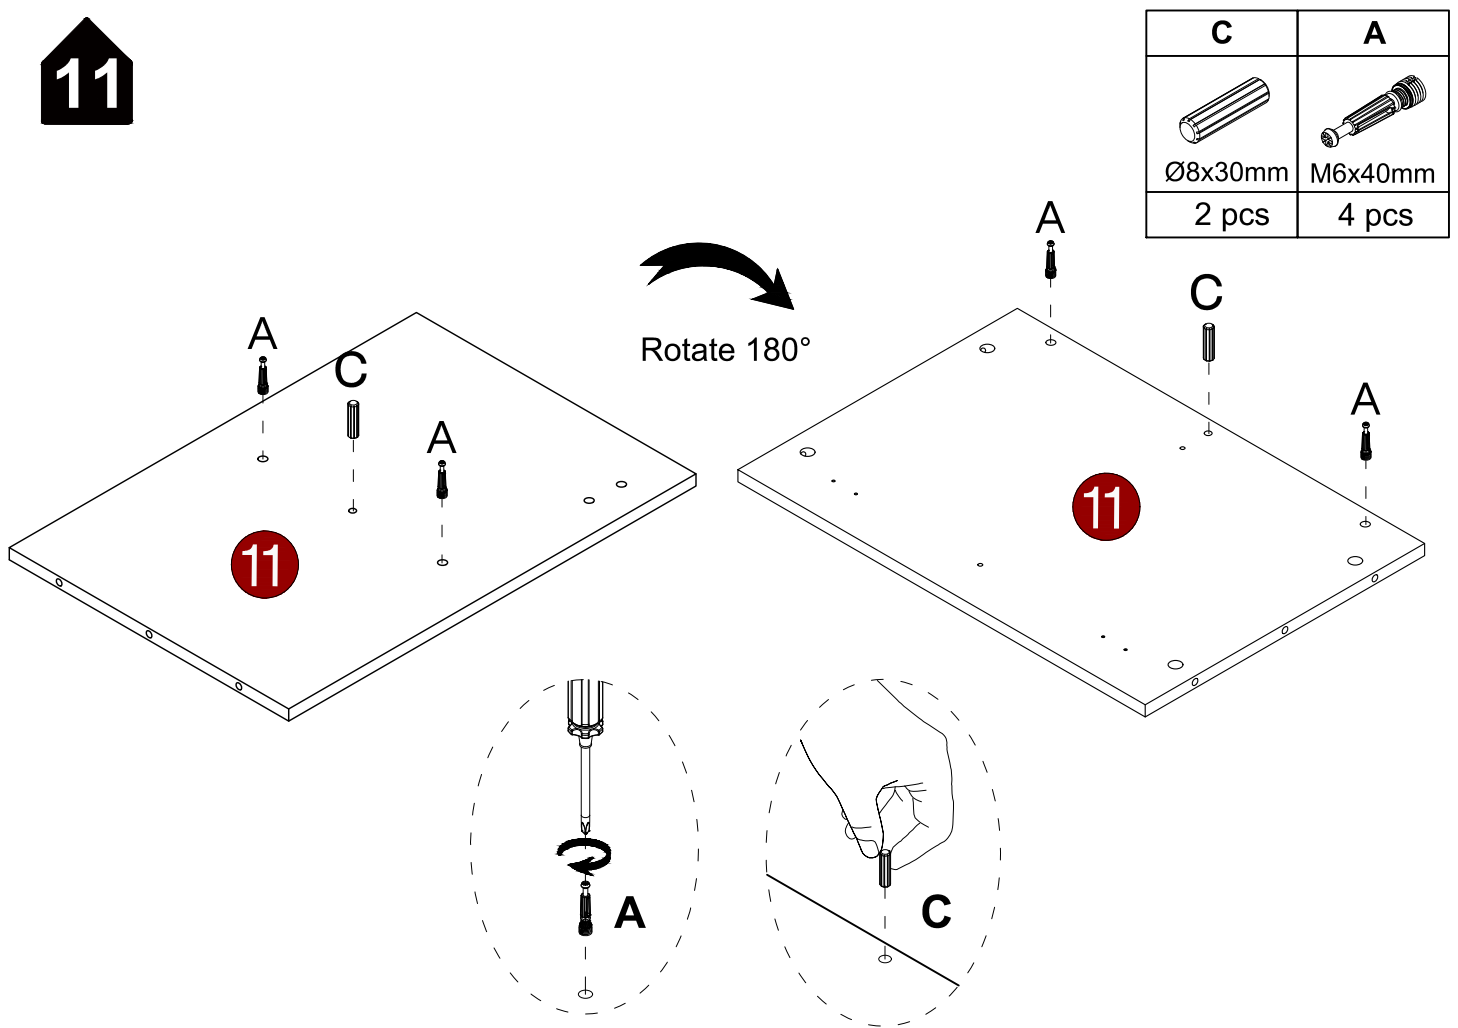

12

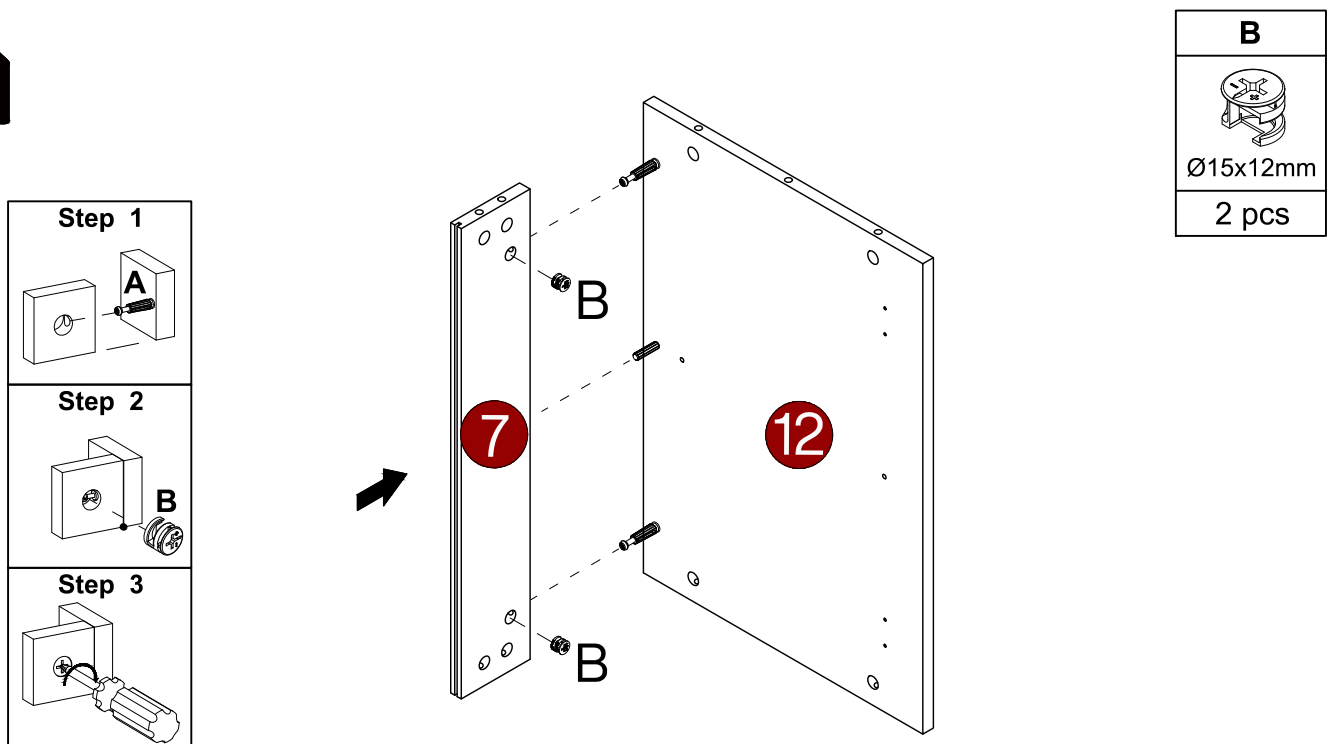


13

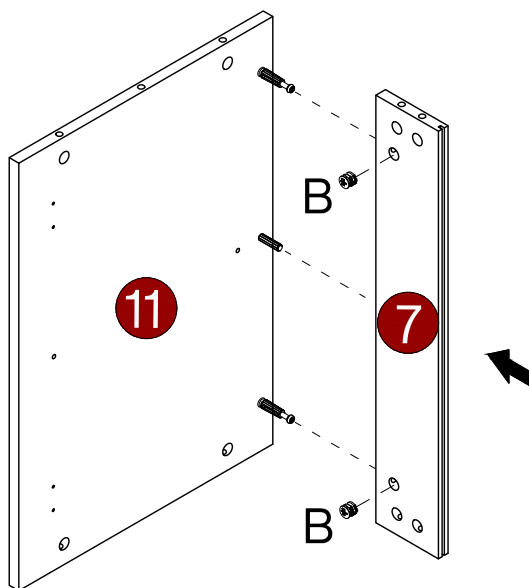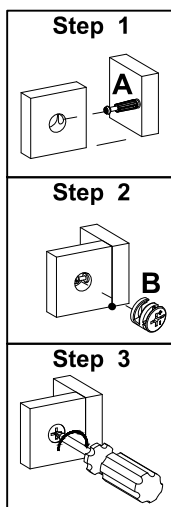

B


Ø15x12mm
2 pcs

14


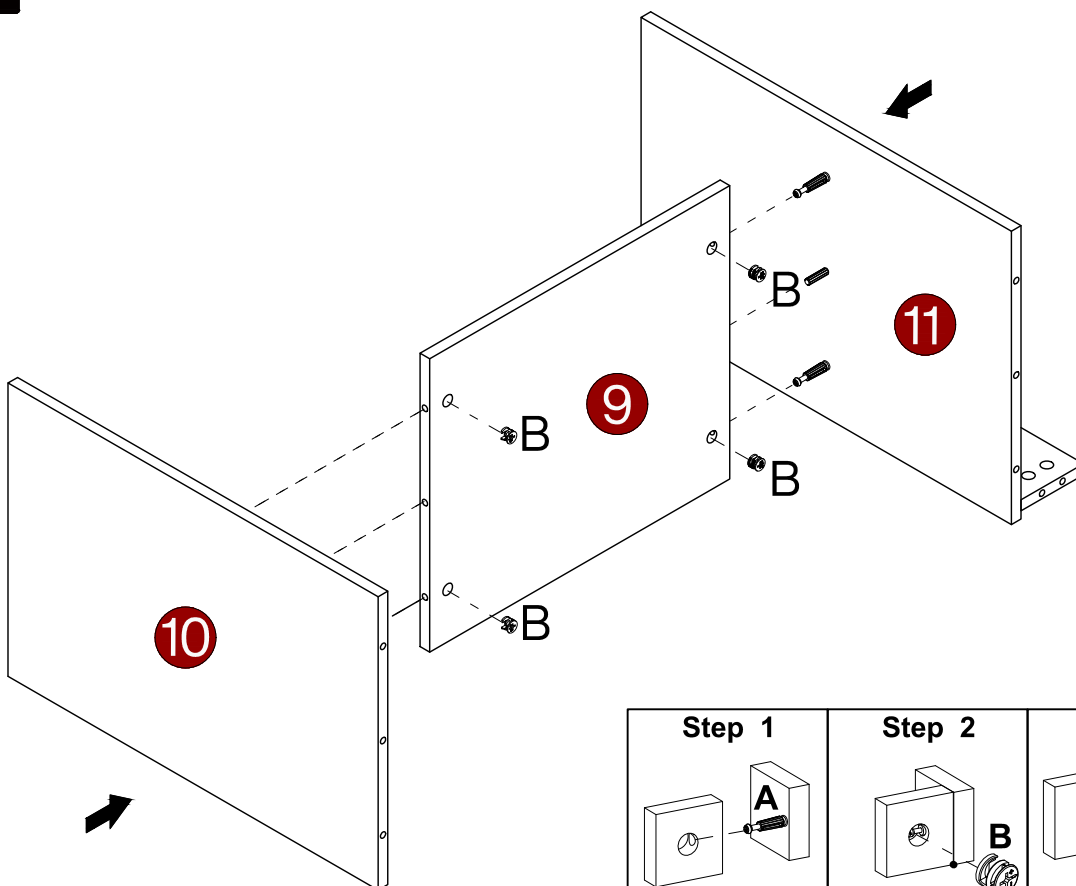



B


Ø15x12mm
4 pcs

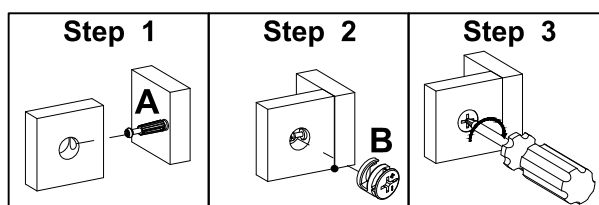


15

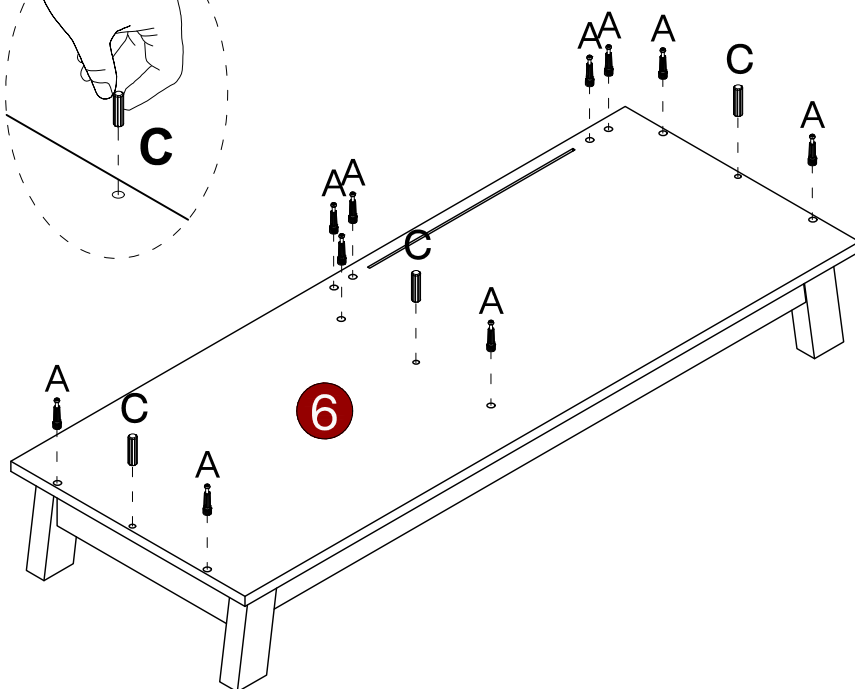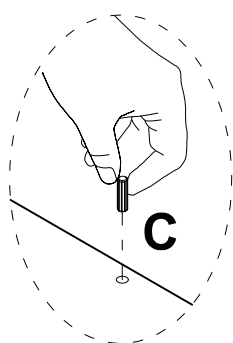

C	A
	
Ø8x30mm	M6x40mm
3 pcs	10 pcs

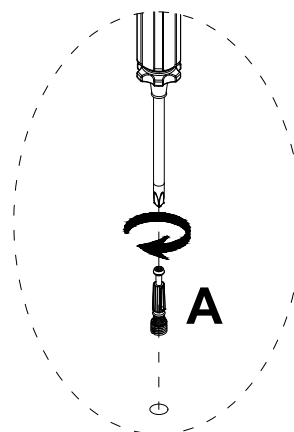


16

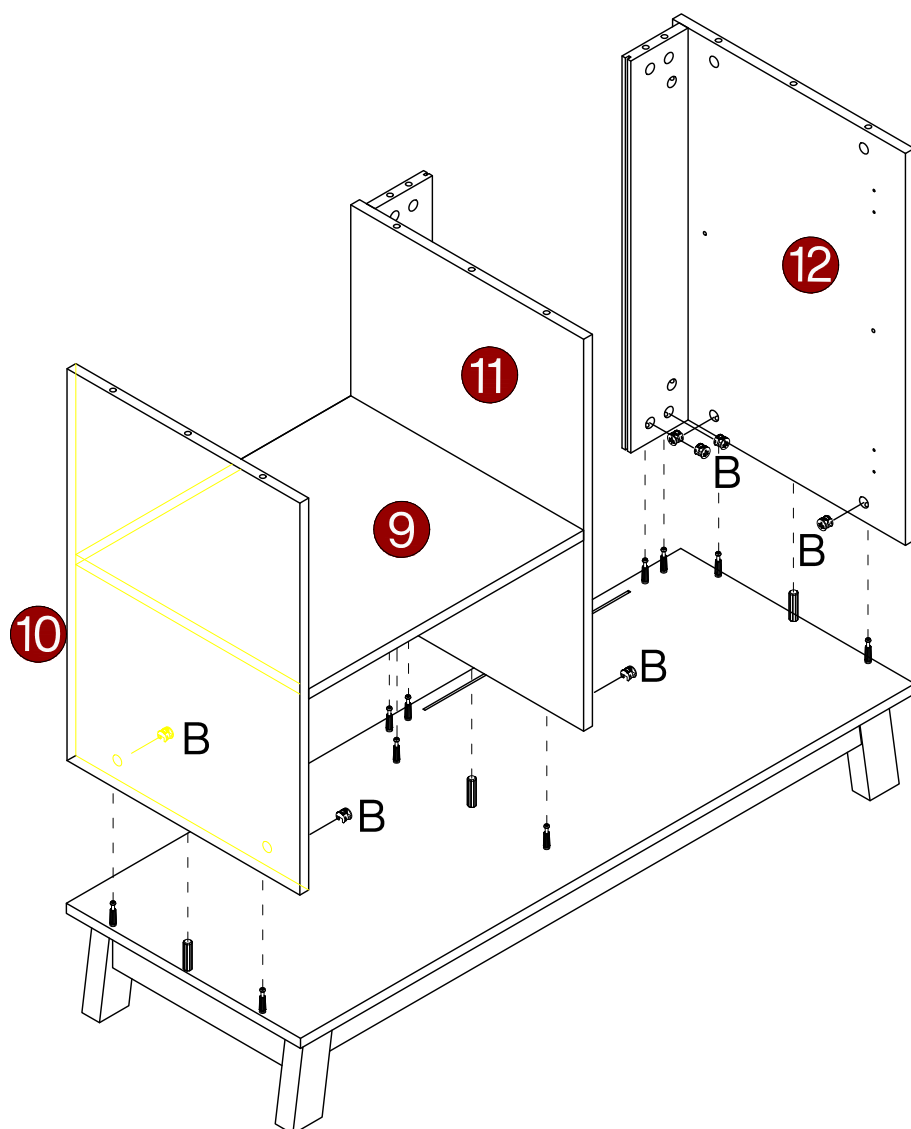


B


Ø15x12mm
10 pcs

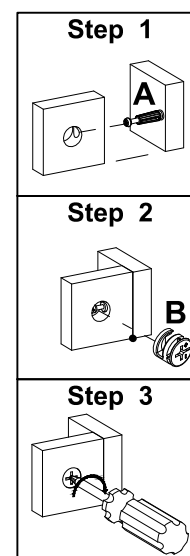



17

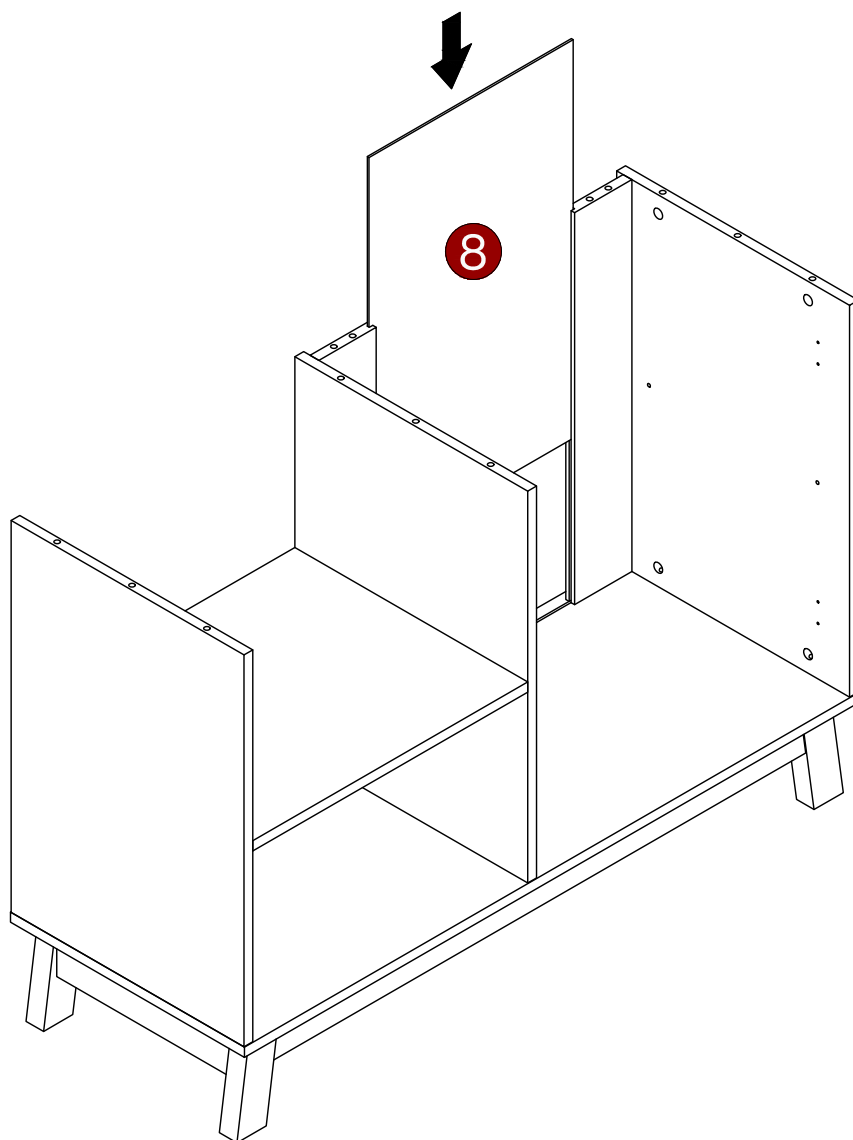


18

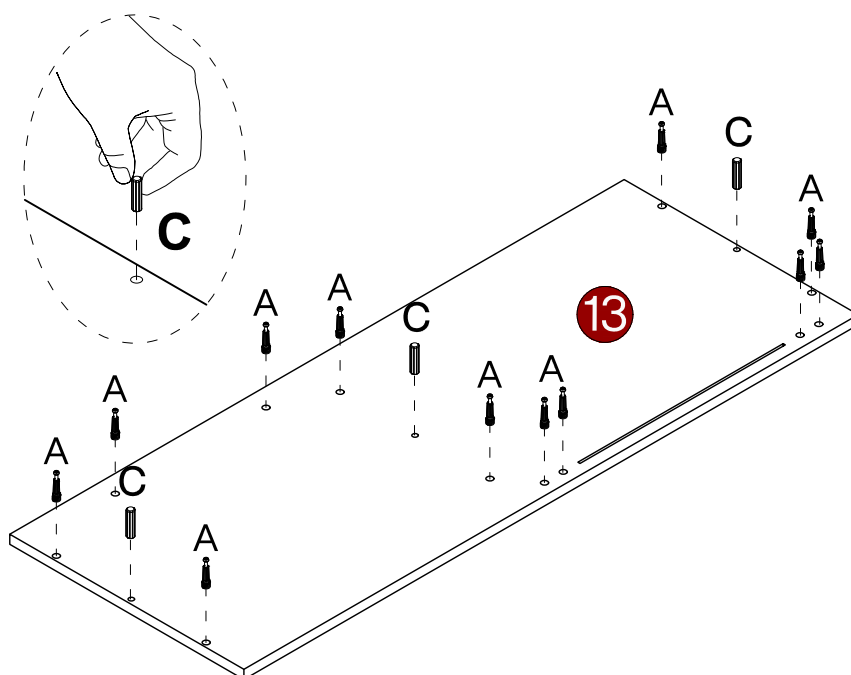

C	A
	
Ø8x30mm	M6x40mm
3 pcs	12 pcs

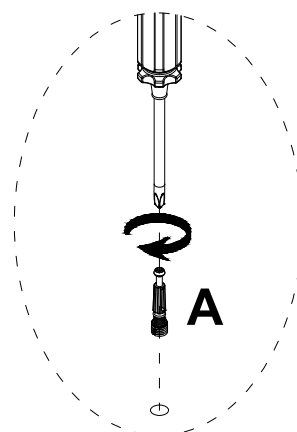


19

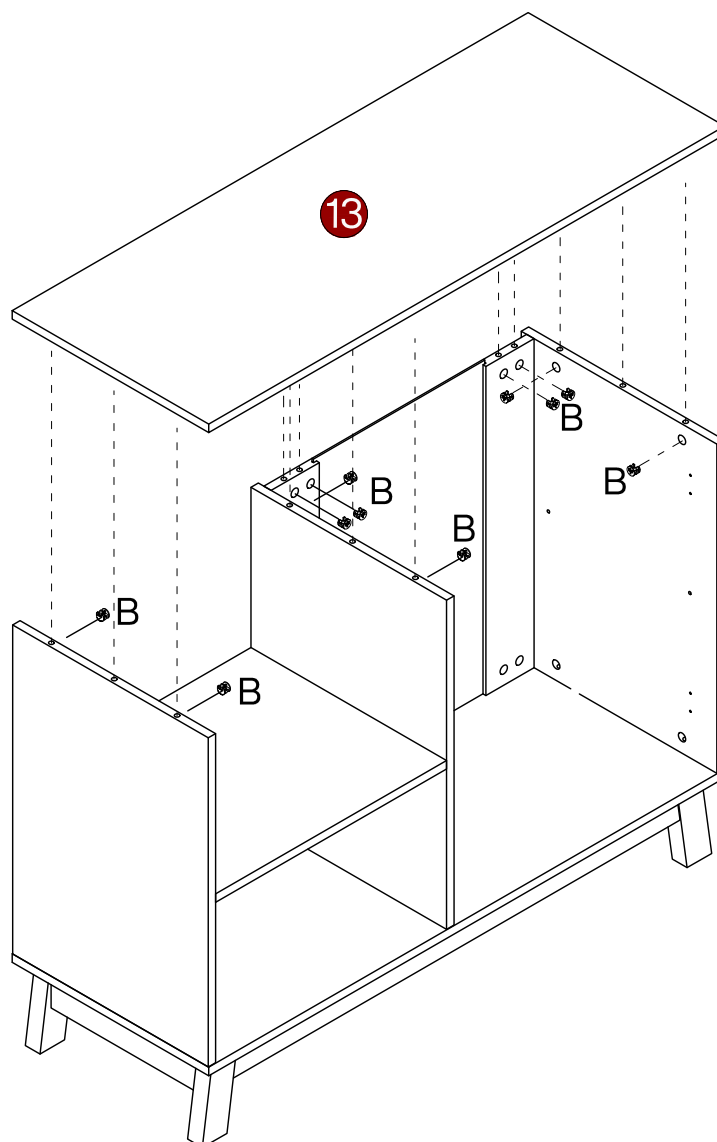

B


Ø15x12mm
10 pcs

20

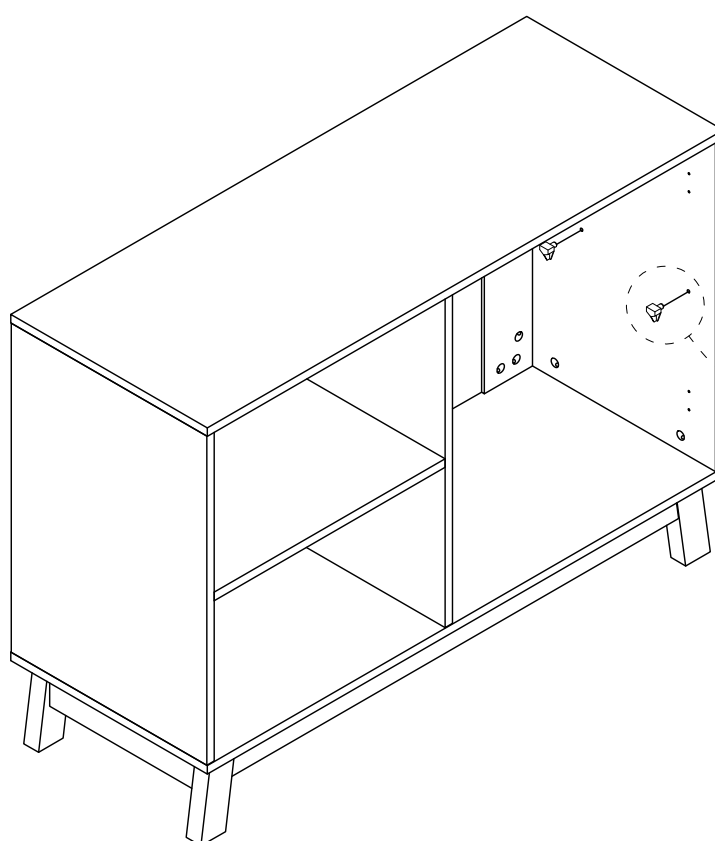


J

4 pcs

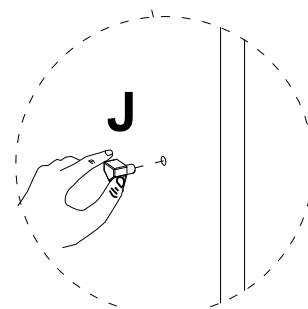


21


G	E
	 Ø3.5x14mm
6 pcs	6 pcs

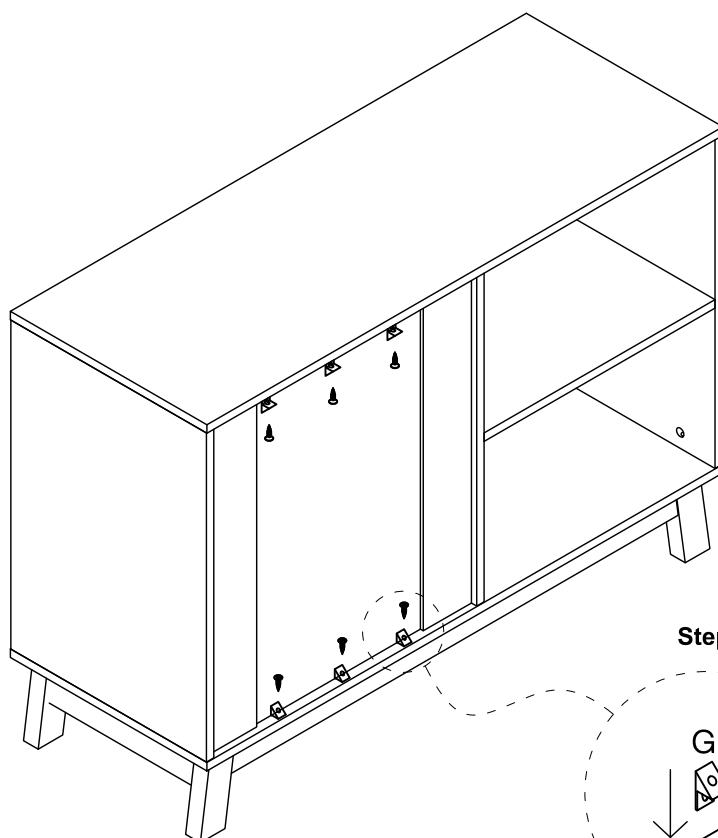


Step 1

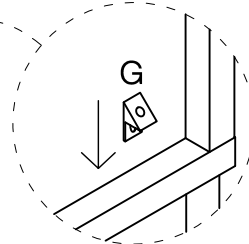


Step 2

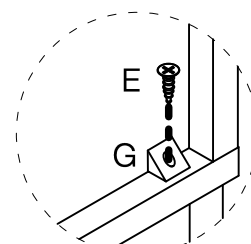

22

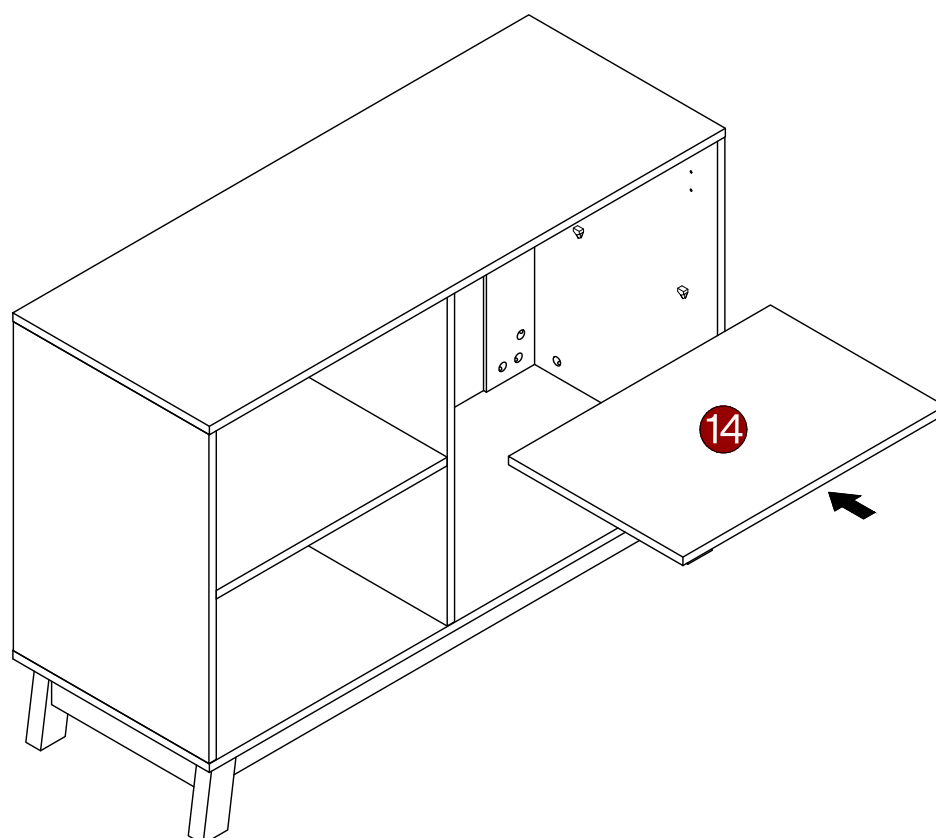


23

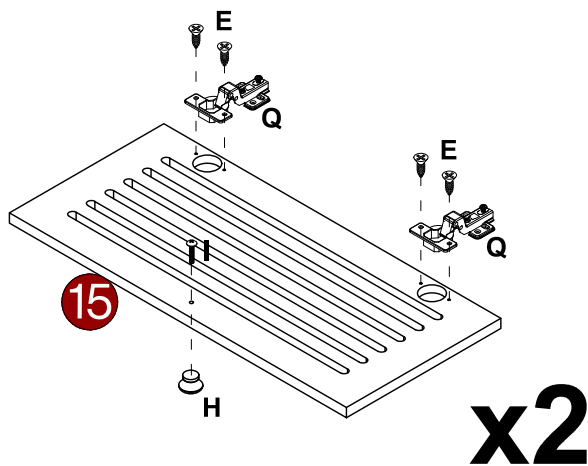

E	Q
 Ø3.5x14mm	
8 pcs	4 pcs
I	H
	
2 pcs	2 pcs

24

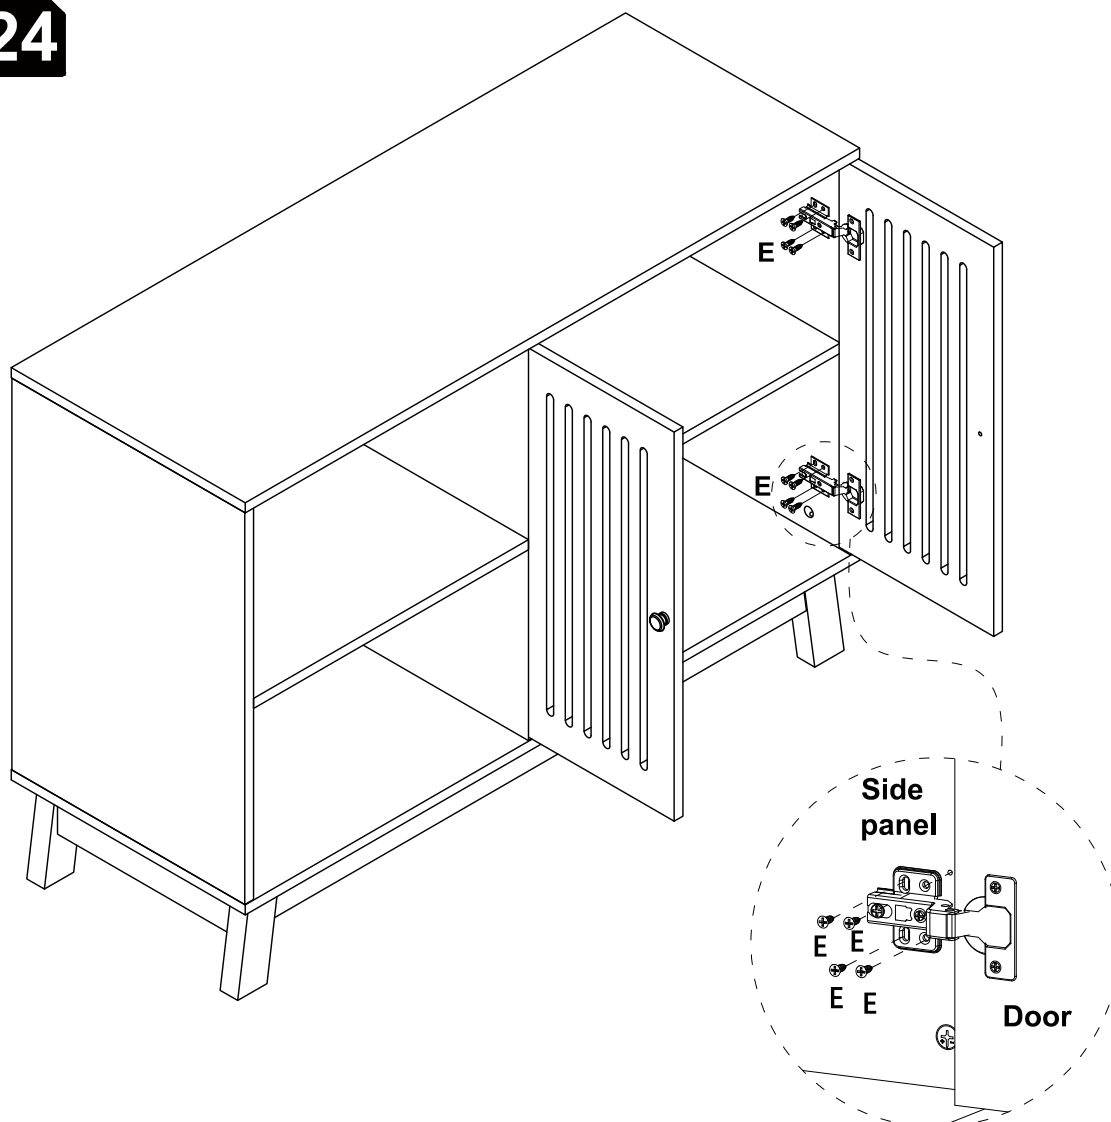


E
 Ø3.5x14mm
16 pcs

To prevent the door hinge from falling off, please install 4 screws

Step 1


Open the door.

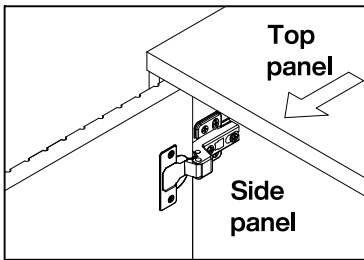

TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



Step 2

Adjust the door panel to be flush with side panel and top panel edge.

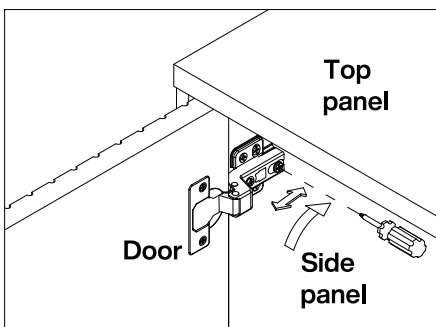



Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

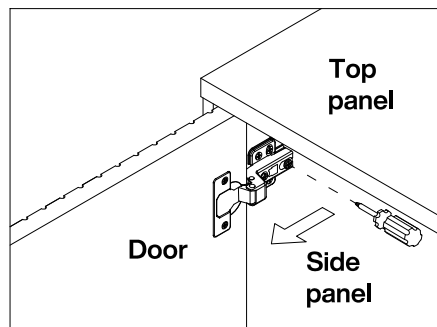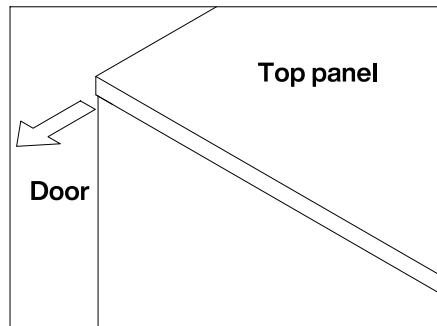

Pull the hinge forward a little.


Step 2b MOVE DOOR INSIDE

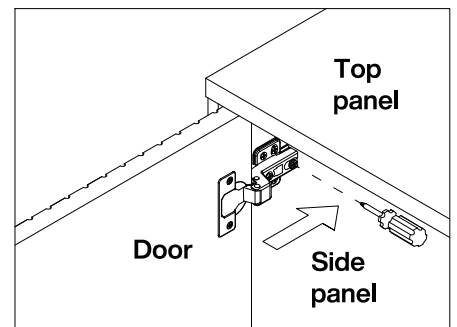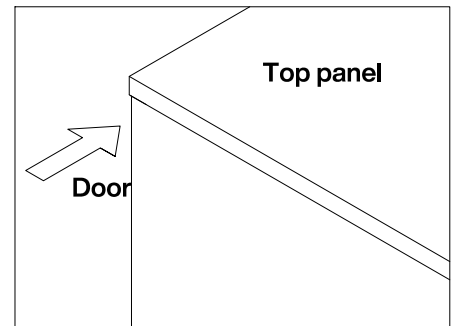

Pull the hinge back a little.



Step 3

Adjust the gap between door panel and side panel.

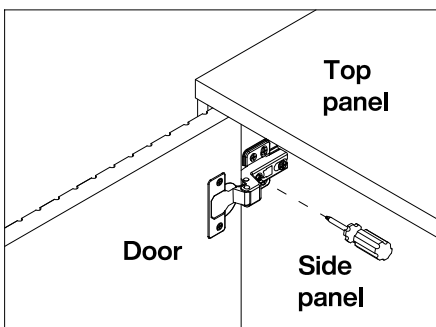



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

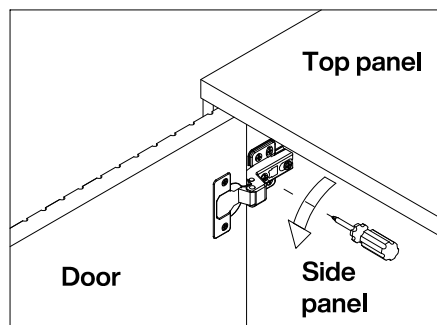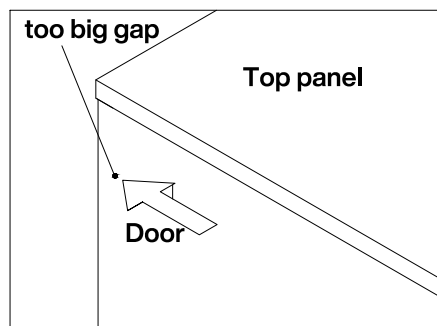


Turn the screw clockwise a little as shown to make the gap small.

Step 3b MOVE DOOR RIGHT

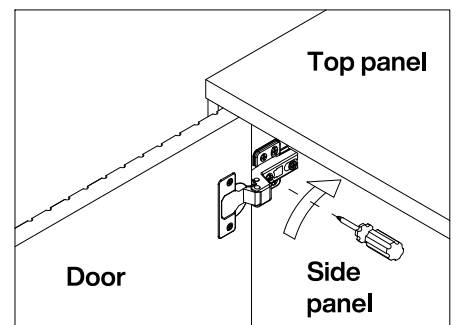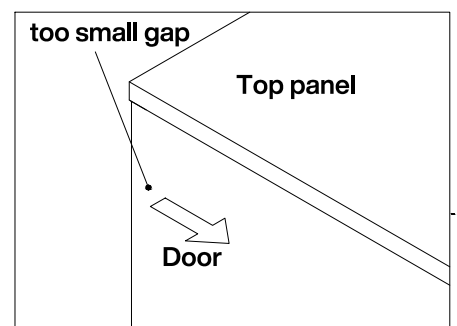

Turn the screw counterclockwise a little as shown to make the gap big.


25

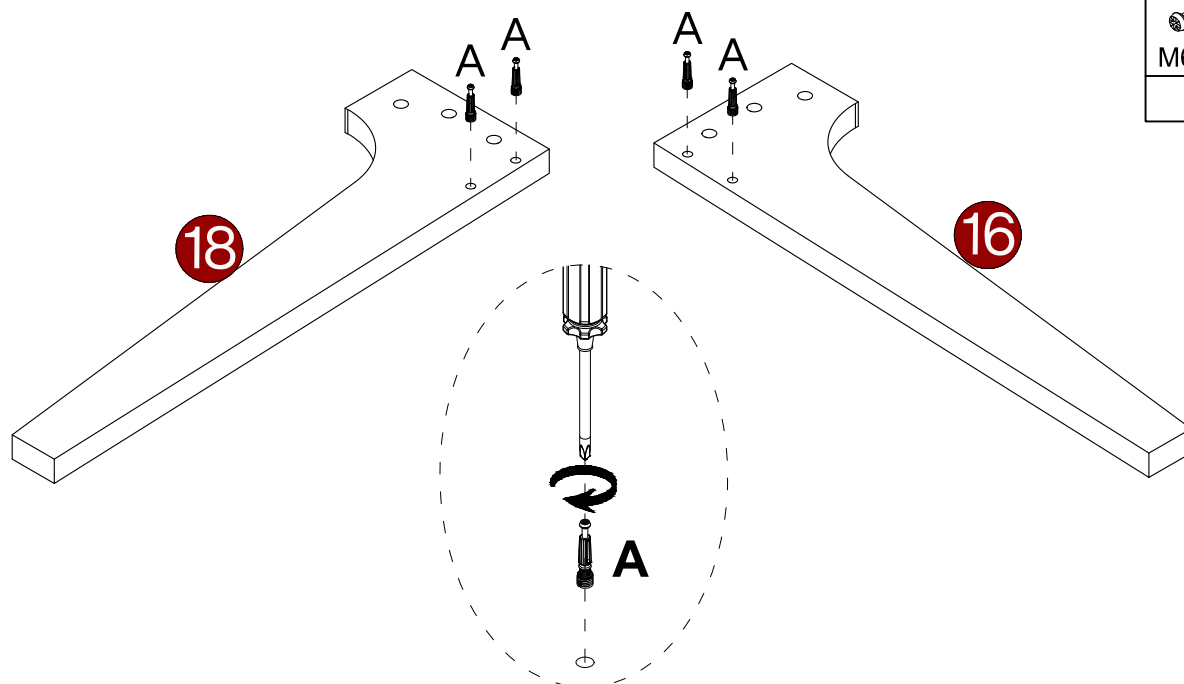

A


M6x40mm
4 pcs

26

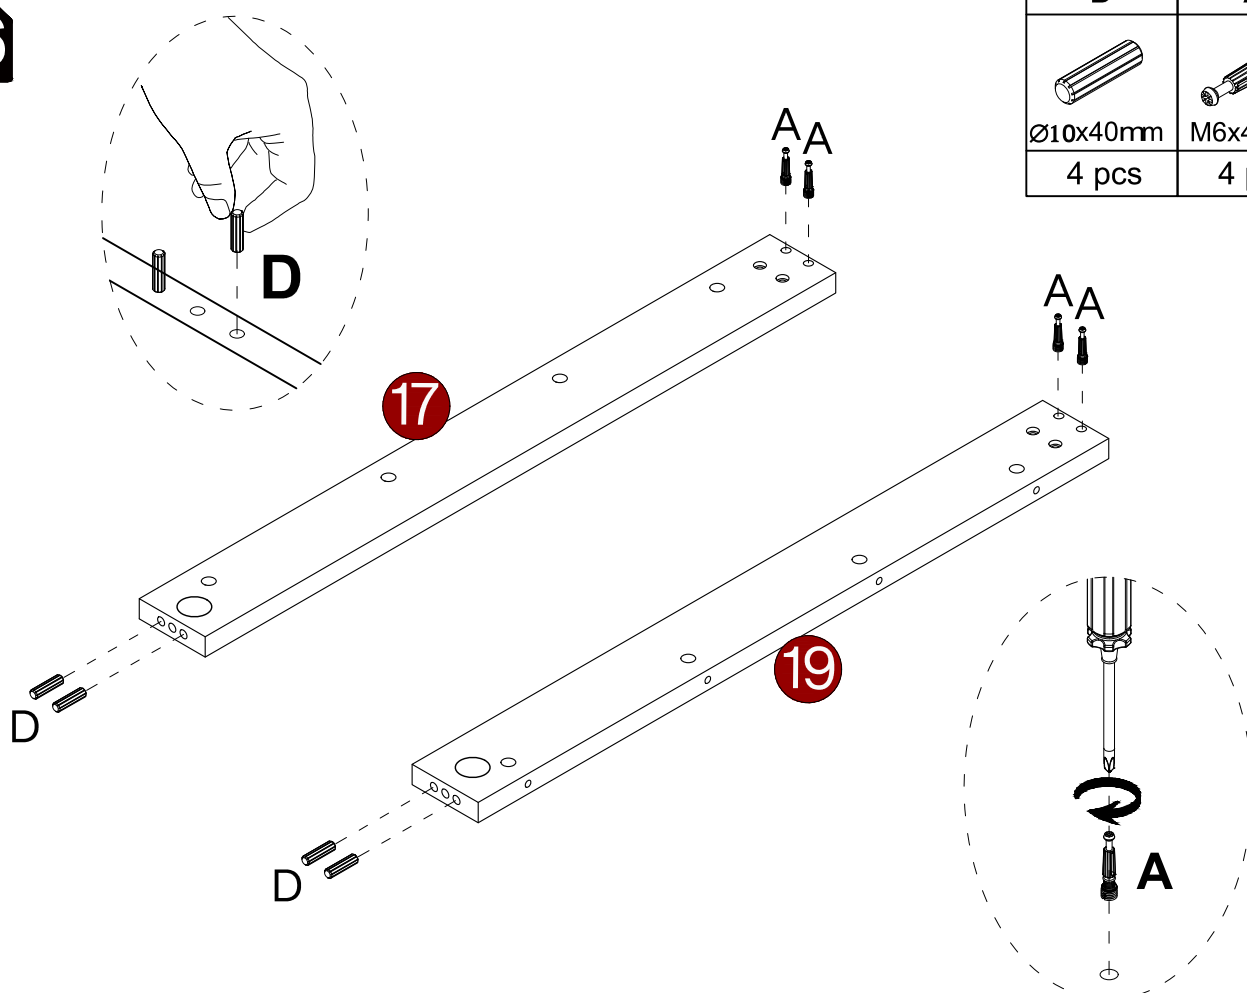


D	A
	
Ø10x40mm	M6x40mm
4 pcs	4 pcs

27

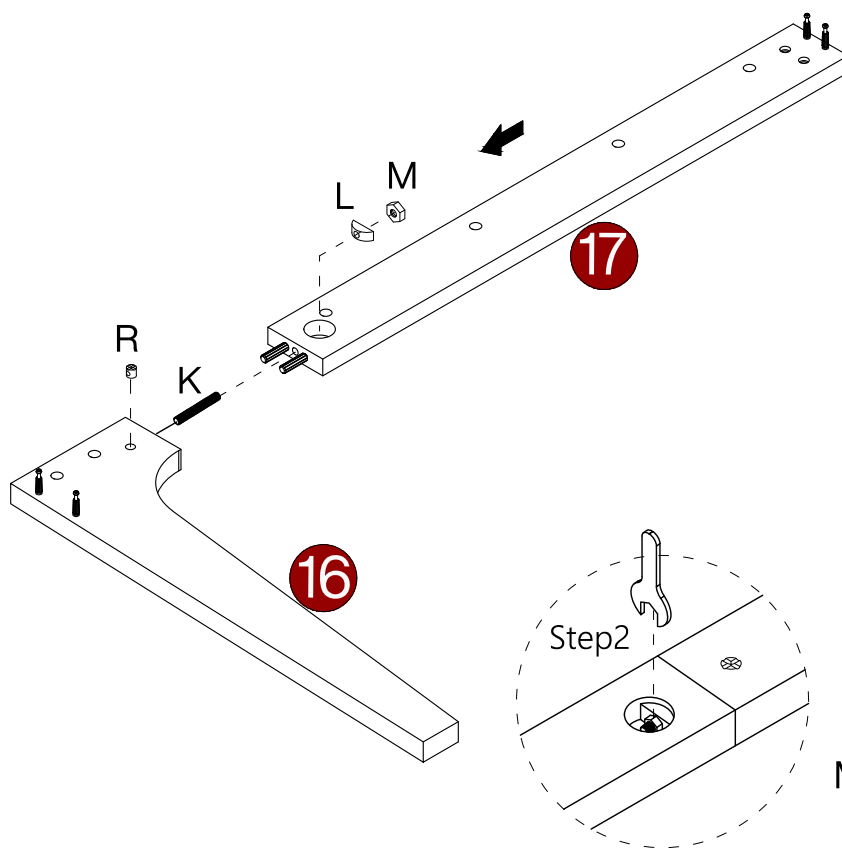

L	K
M8	Ø8x100mm
1 pcs	1 pcs
R	M
M8	M8
1 pcs	1 pcs

28


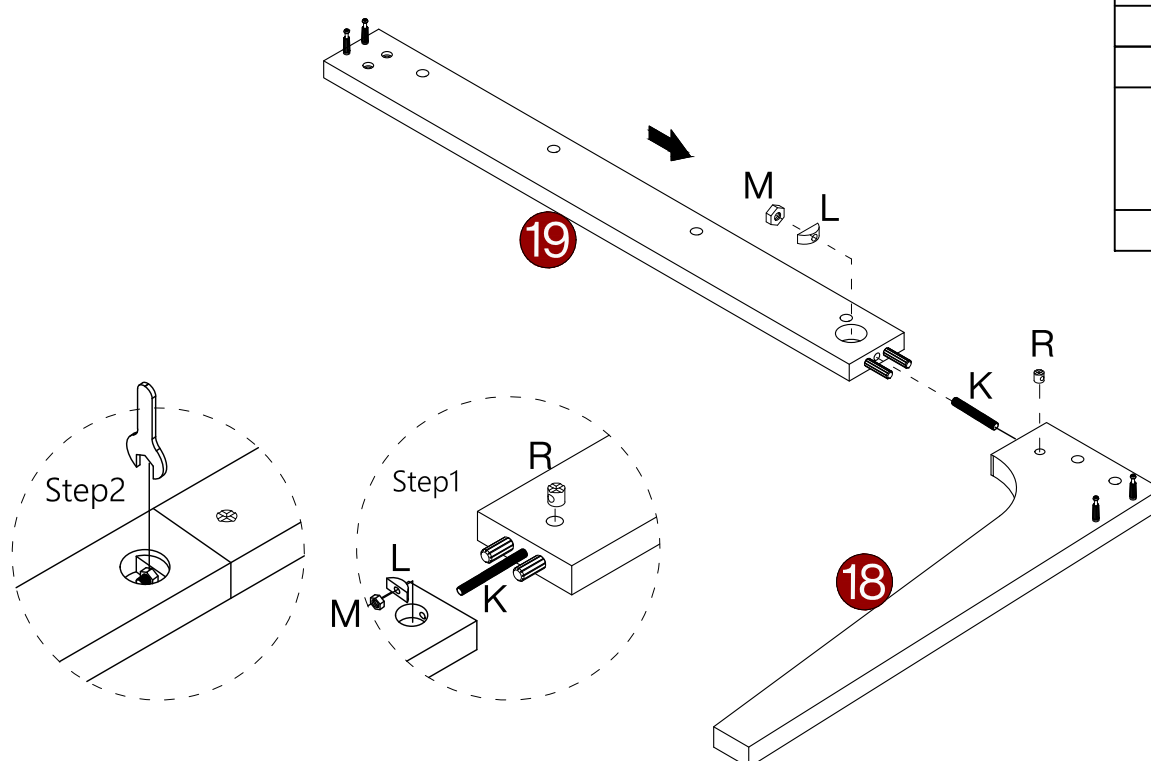


L	K
M8	Ø8x100mm
1 pcs	1 pcs
R	M
M8	M8
1 pcs	1 pcs

29

B



Ø15x12mm
8 pcs

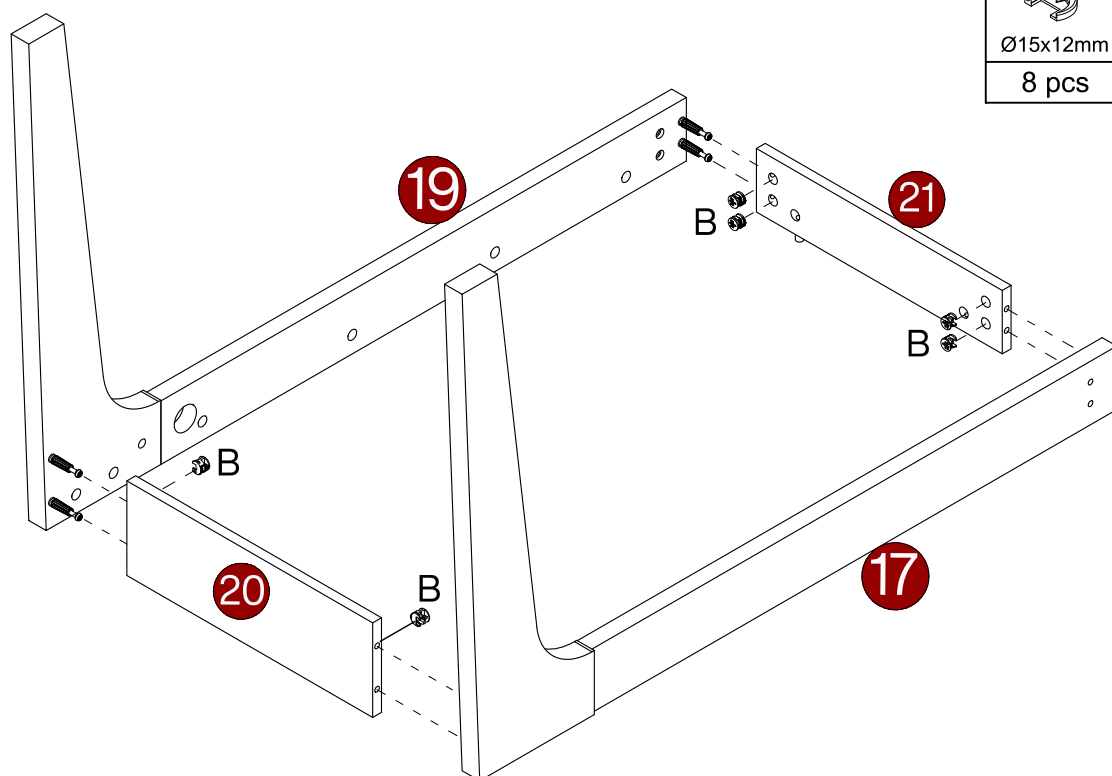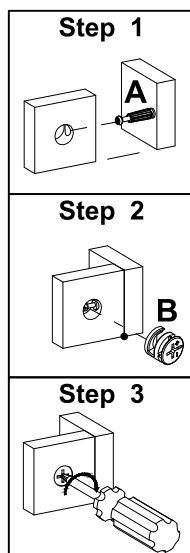

30


O

2 pcs

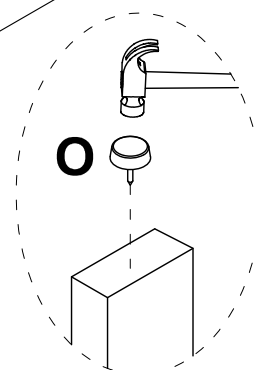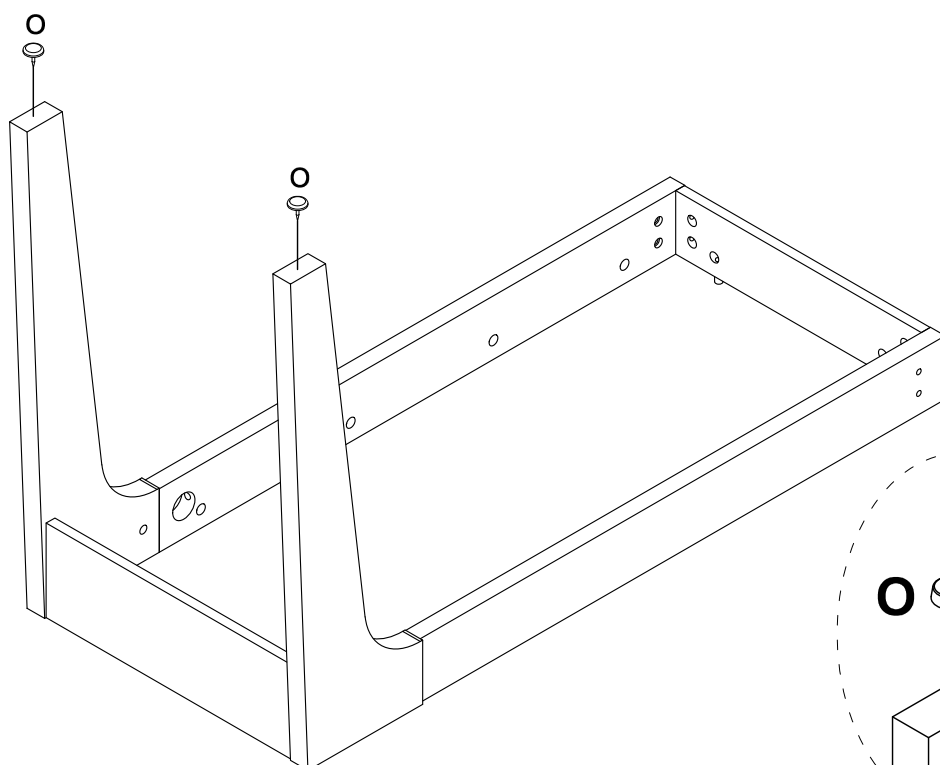

 **Caution! Tap lightly**



31

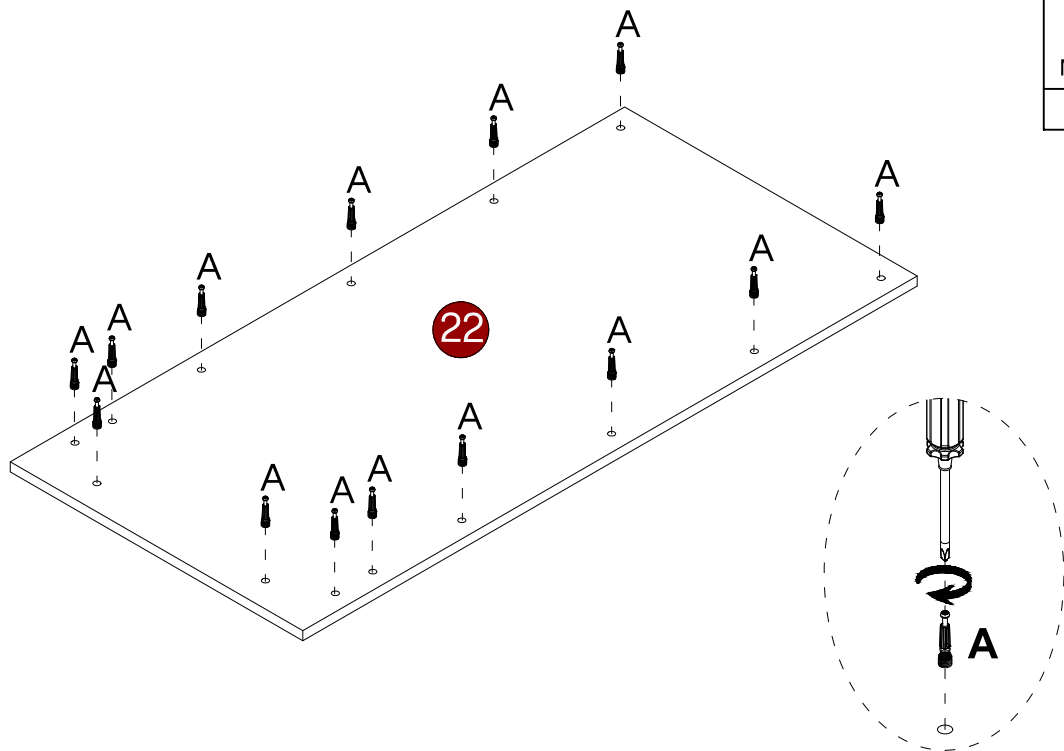

A

M6x40mm
14 pcs



32

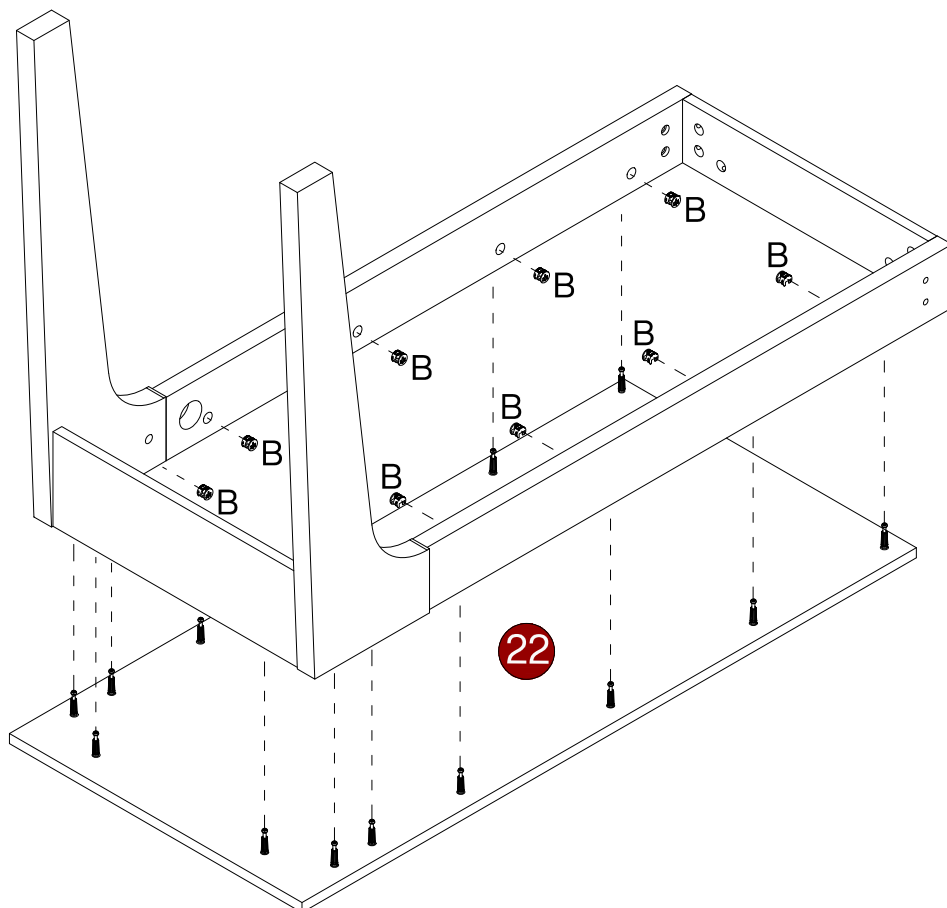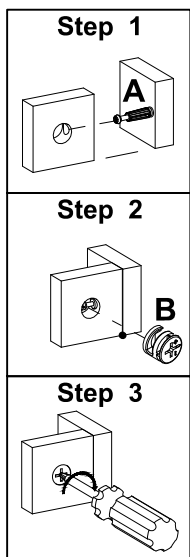

B

Ø15x12mm
14 pcs

F	B
	
M6x25mm	Ø15x12mm
4 pcs	2 pcs

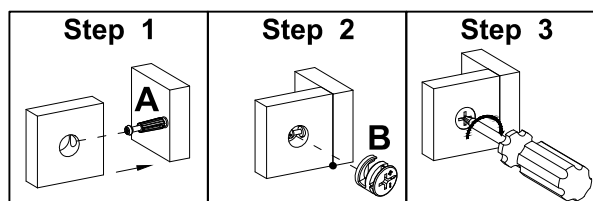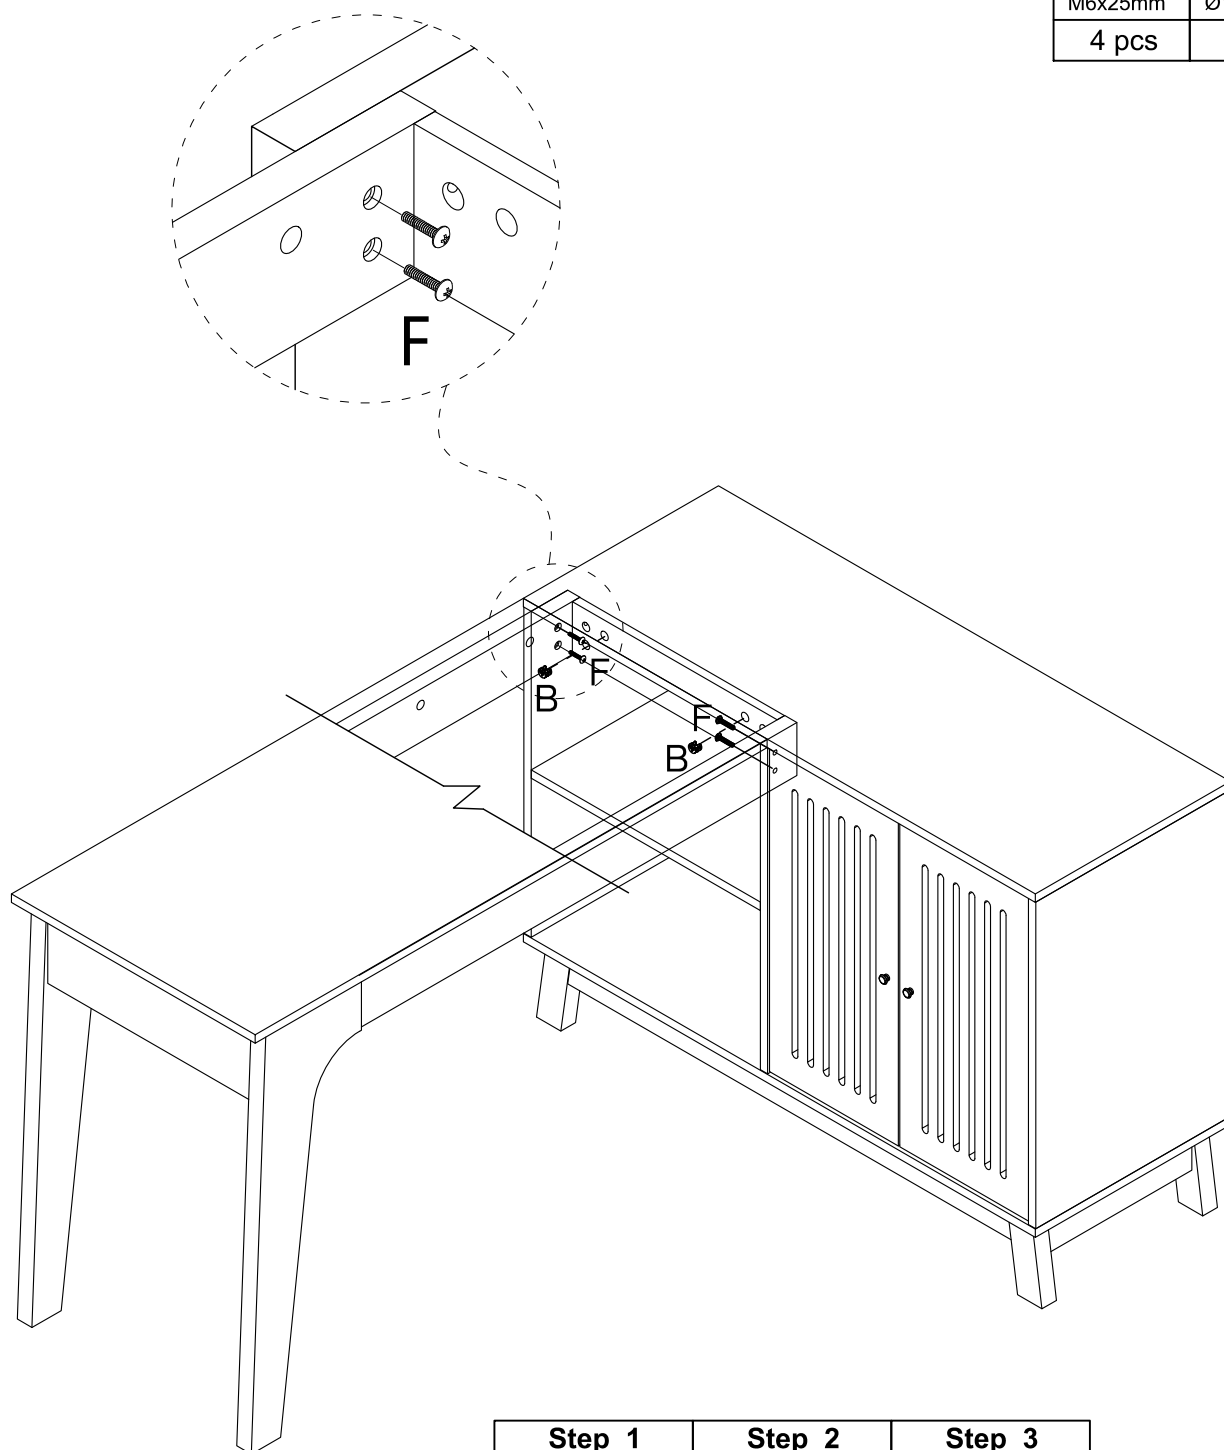

Thankyouforyoursupport !

