

12 x 16FT

WQOT225TN-1/WQOT210MS-1

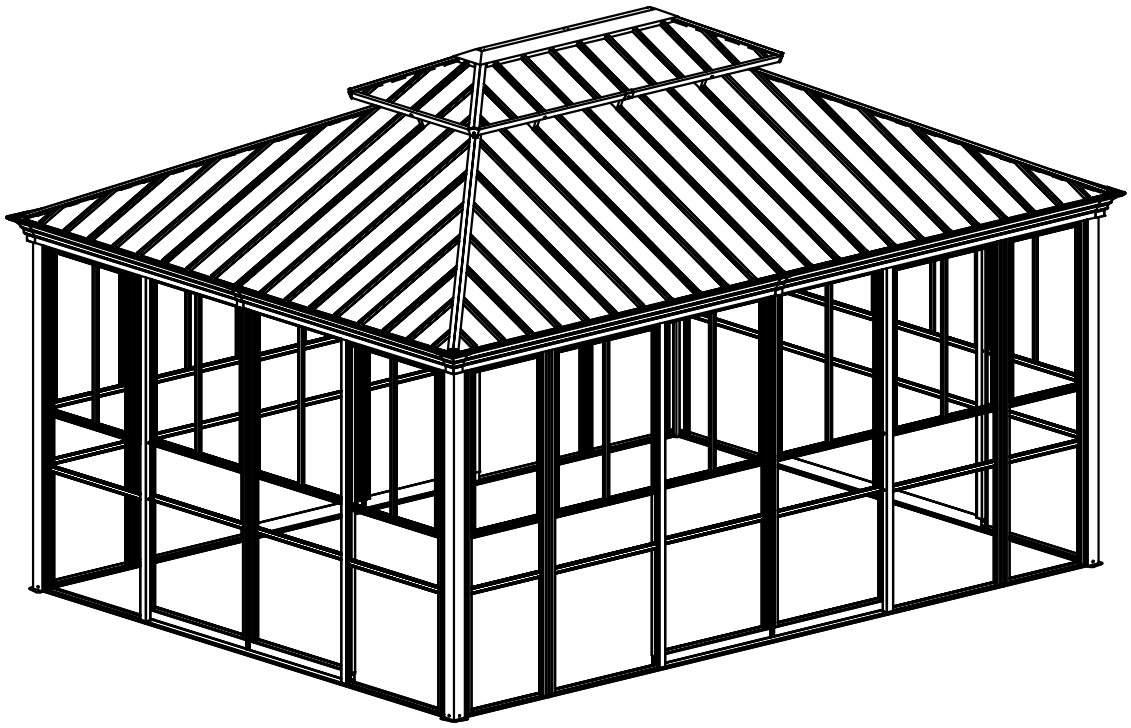

Note: The sunroom needs to be installed in cooperation with five people.


Assembly of this product requires the following tools, these tools are not included, please bring your own, if you have questions, please contact us.

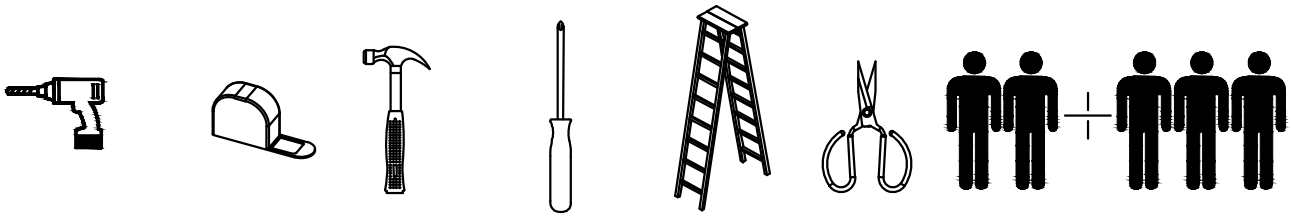



Pistol Drill Tape Measure Hammer Screwdriver Ladder Scissor 5 people


ATTENTION:

1. Please check the manual carefully and make sure you have received all the parts.
2. If any parts are missing, please let us know the letter marked on the part.
3. If any parts are damaged, please send us clear photos. We will review them and provide the best solution as soon as possible.
4. If you have any problems, please feel free to contact us. Our professional customer service and after-sales team are always ready to help you.
5. You can reach us via email at **customer01service@hotmail.com.**

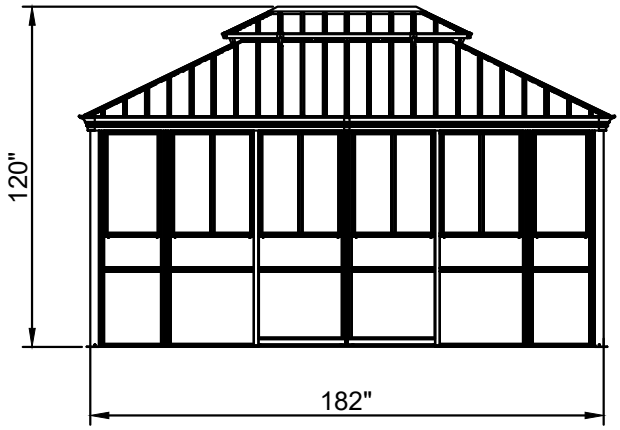
120"
182"

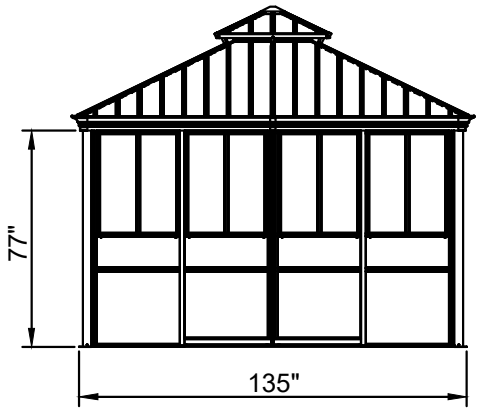
77"
135"

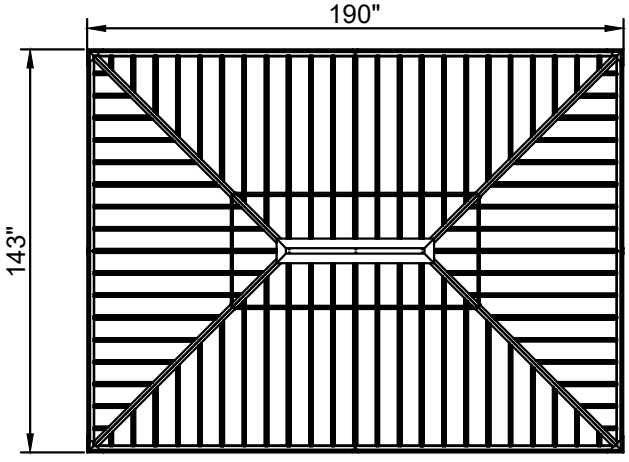
190"
143"

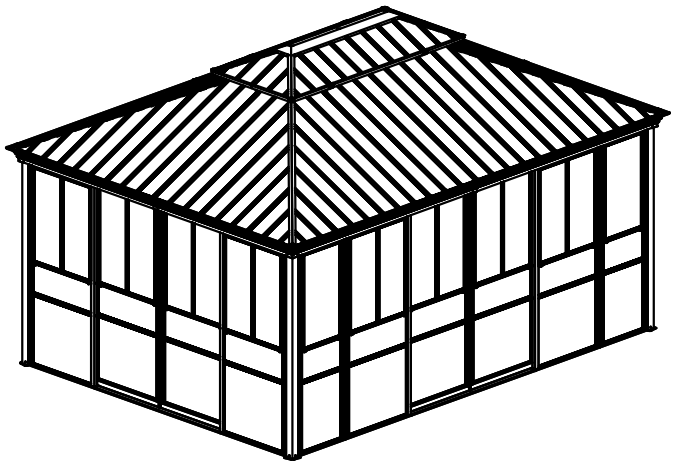

Box 1	
Part #	Qty
E	4
F1	8
F3	2
F5	2
M4P	8
M5G	2
M4L	14
Y	96
M3	1
L3C	1
I1	2
5-1	2
K1	4
U1	4
U2	4
U3	4
U4	4
12x16 ABABABABAFAFAFAF BABABABAAFAFAFAG ADADADADAFAFAFAG DADADADAAFAFAFAG AEAEAEAEAFAFAFAG	1

Box 2		
Part #		Qty
AB8		2
D15		2
M1F		2
G10		2
3	M8G	8
	M7L	8

M5G	24
M4H	8

Box 3	
Part #	Qty
AB7	2
M1F	2
M1Q	4
G1	2
G13	2
G14	2
M1G	12
M1E	4
M4L	16
M7P	4

Box 4	
Part #	Qty
JA1	4
M1A	4
M2A	4
I10	2
M1B	8
M2B	3
MQ2	36
4-1	16
V7a	2
V7b	2
V1	2

Box 5	
Part #	Qty
M2B	5
M1C	4
M2C	4
M5B	2
AB1	2
AB2	2
M4N	4
D1	2
D2	2
D3	2
D4	2
K	4
JZ2	4

Box 6	
Part #	Qty
JE3	6
P	4
E5	4
MD1	80
MD2	160
MD3	40
MD4	16
MD5	16
3-1	16
23	96
M6B	4
M1D	4
M2D	4

M5B	2
M1E	24
M4J	4
Z	64
W	4
W1	6
N	8
N1	4
Z1	8
Z2	8
AJ1	4
JZ1	6

Box 7

Part #	Qty
M1S	16
MS2	16
MS3	8
MS4	8
M4S	4
1R-2	32
MS14	4
MS15	4
1R-1	40
1R-4	8
MS1	16

Box 8


Part #	Qty
MS13	4
MS1	16
M1E	12
M1G	4
M5G	6
M4L	2

Box 9


Part #	Qty
R1	4
R2	2
R3	4
R4	2
S1	4
S2	4
S3	4
M4K	8
M4M	8
M7K	4
24	1
1.2.3.4.5.6.7.8.9 10.11.12.13.14.15 16.17.18.19.20.21 22. 25. 26	1

Box 10

Part #	Qty
R2	2
R4	2
R5	4
R6	4
R8	2
R9	2

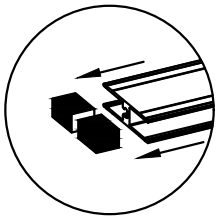

Take out the plastic (packing material) blocks at both ends of the parts marked M1E, M1G, M5G, M9G, M4H,M7H,M4L and M8L.



JA1 4x



AB1 2x



AB2 2x




AB7 2x




AB8 2x




E 4x

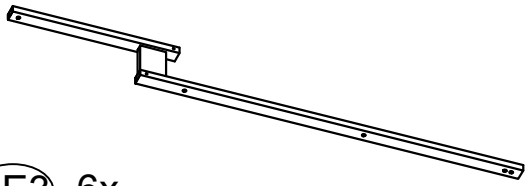


JE3 6x




D1 2x

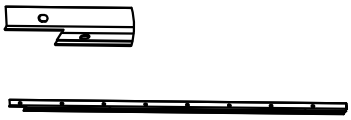

D2 2x

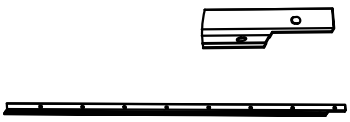

D3 2x



D4 2x



D15 2x



E5 4x



F1 8x

F3 2x

G1 2x




G10 2x




G13 2x



G14 2x




I1 2x

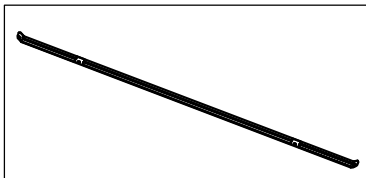


I10 2x




F5 2x




V1 2x




M3 1x



L3C 1x




V7a 2x



V7b 2x




M2A 4x

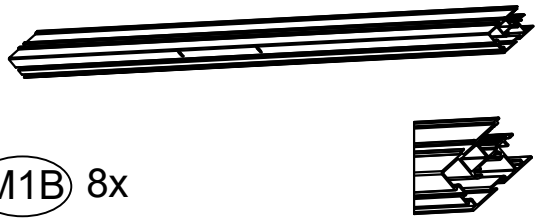


M1B 8x




M1A 4x

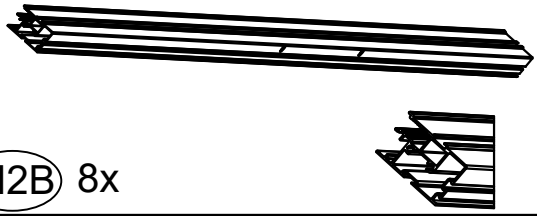


M2B 8x

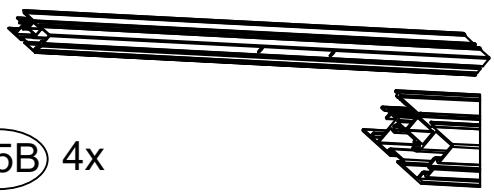


M5B 4x

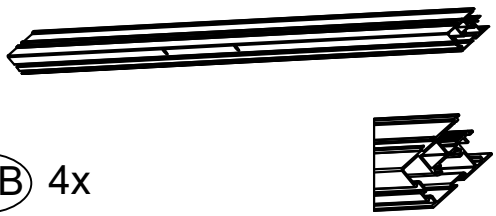

M6B 4x

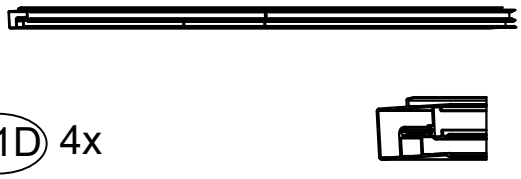

M1D 4x

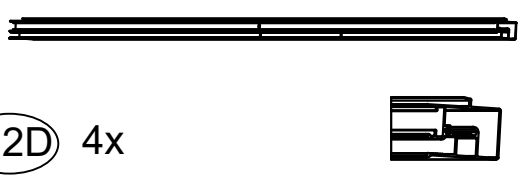


M2D 4x




M1C 4x




M2C 4x

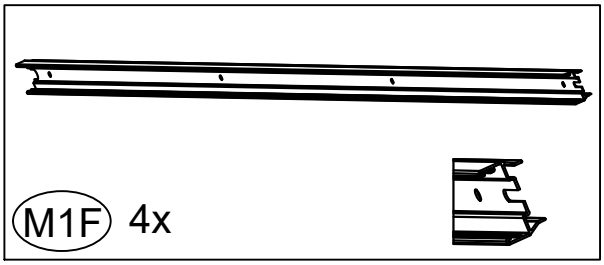


M1F 4x

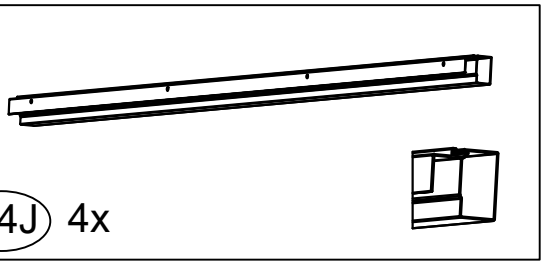

M4J 4x

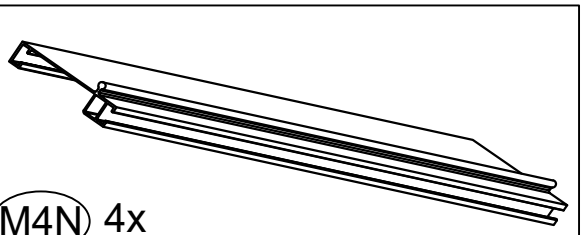


M4N 4x

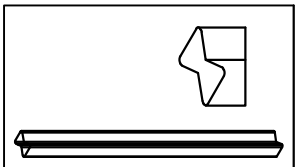

M1Q 4x



Y 96x

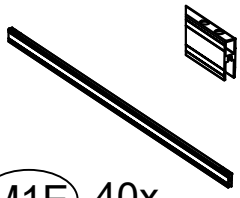


M1E 40x




M1G 16x




M5G 32x

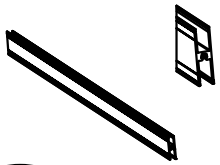


M8G 8x

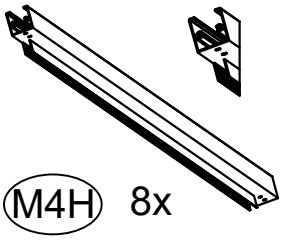


M4H 8x

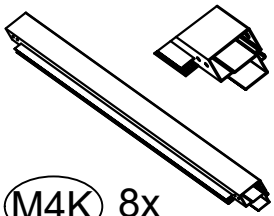


M4K 8x

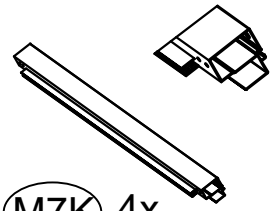


M7K 4x

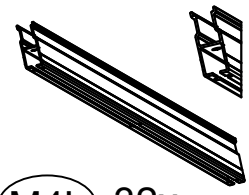


M4L 32x

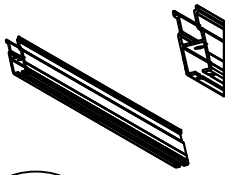


M7L 8x

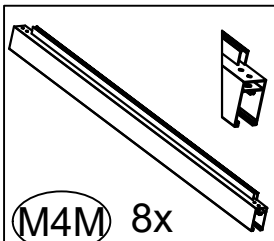


M4M 8x

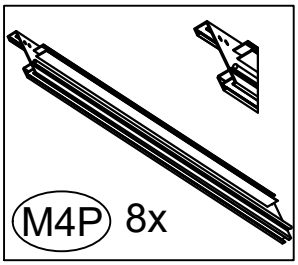

M4P 8x

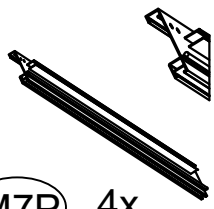


M7P 4x

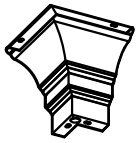

K 4x




K1 4x

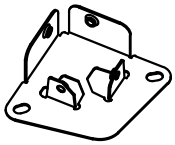


AJ1 4x




W 4x




W1 6x




P 4x




JZ1 6x




JZ2 4x




Z 64x

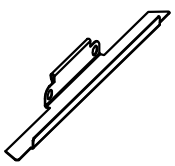

Z1 8x

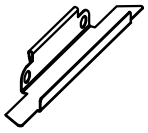

Z2 8x

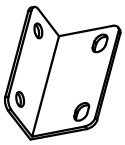

MQ2 36x




N 8x




N1 4x




5-1 2x



MD1 80x




MD3 40x



MD4 16x




MD5 16x




6.2*11*15


3-1 16x

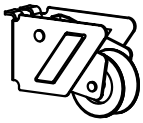


4-1 16x

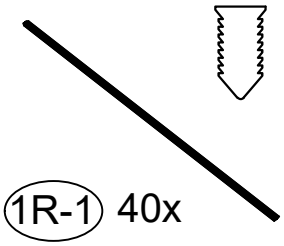


1R-1 40x

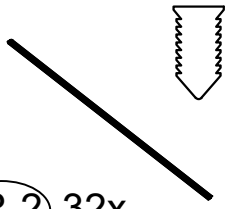


1R-2 32x

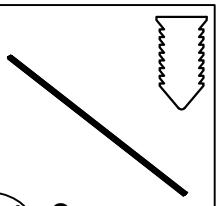


1R-4 8x

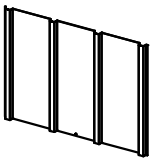


S3 4x




R1 4x




R2 4x




S1 4x



S2 4x




R3 4x




R4 4x



R5 4x




R6 4x




R8 2x




R9 2x

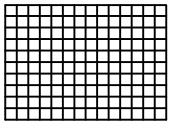


M4S 4x




MS1 32x




MS2 16x

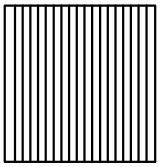


MS3 8x

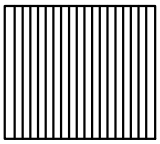


MS4 8x




MS13 4x



MS14 4x

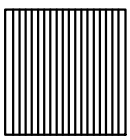

MS15 4x

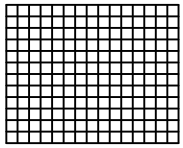

M1S 16x



MD2 160x



M6x15

1 335x



M6x25

2 86x



ST 4.8x12

3 40x



4 **2x**



M6x50

5 10x



6 8x




M6x10

7 10x



8 8x




9 1x




M6

10 94x




M6

11 16x




M4x20

12 192x




M4x35

13 128x



M4x50

14 80x



15 36x




M5x6

16 144x




M5

17 56x



M5x12

18 56x



M6

19 96x




4mm

20 2x




2.5mm

21 2x

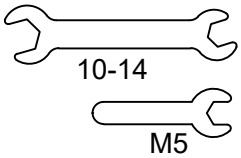


22 1x




Rubber Gasket

23 96x

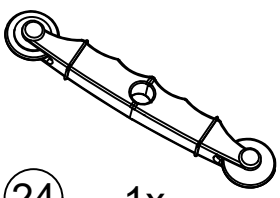


24 1x

12x16							
AB	AB	AB	AB	AF	AF	AF	AF
BA	BA	BA	BA	AF	AF	AF	AG
AD	AD	AD	AD	AF	AF	AF	AG
DA	DA	DA	DA	AF	AF	AF	AG
AE	AE	AE	AE	AF	AF	AF	AG




M5x15

25 16x



M4x12


26 4x




U1 4x



U2 4x




U3 4x



U4 4x



JA1 4x

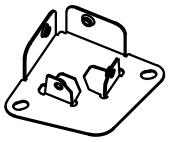


AJ1 4x





M6x15

1 8x


<1>

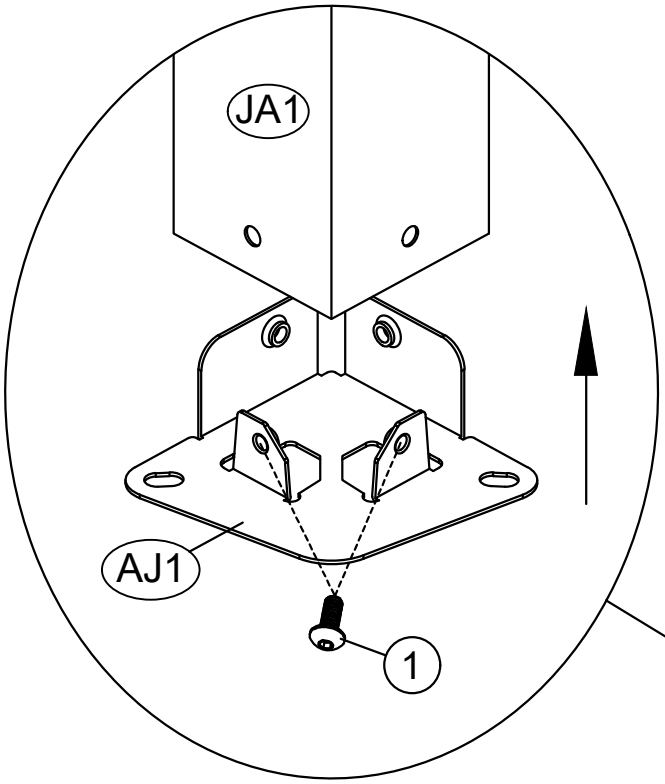

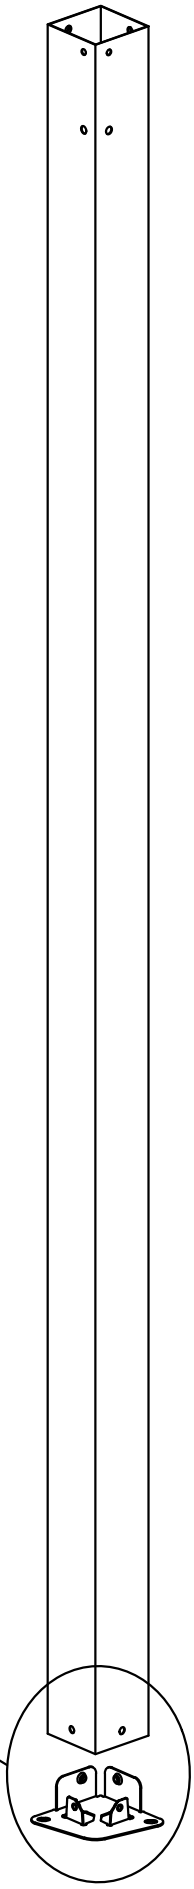


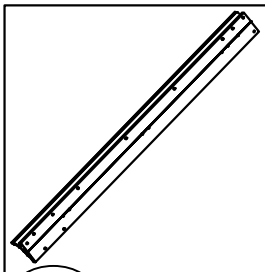


AB1 2x

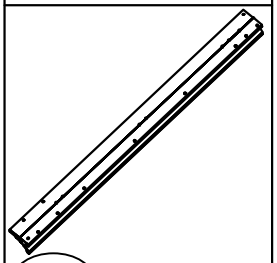


AB2 2x

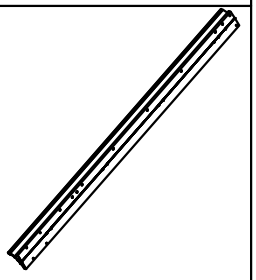

AB7 2x

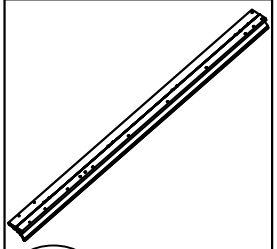

AB8 2x



P 4x



M6x15


1 72x





D1 2x

11

<2>

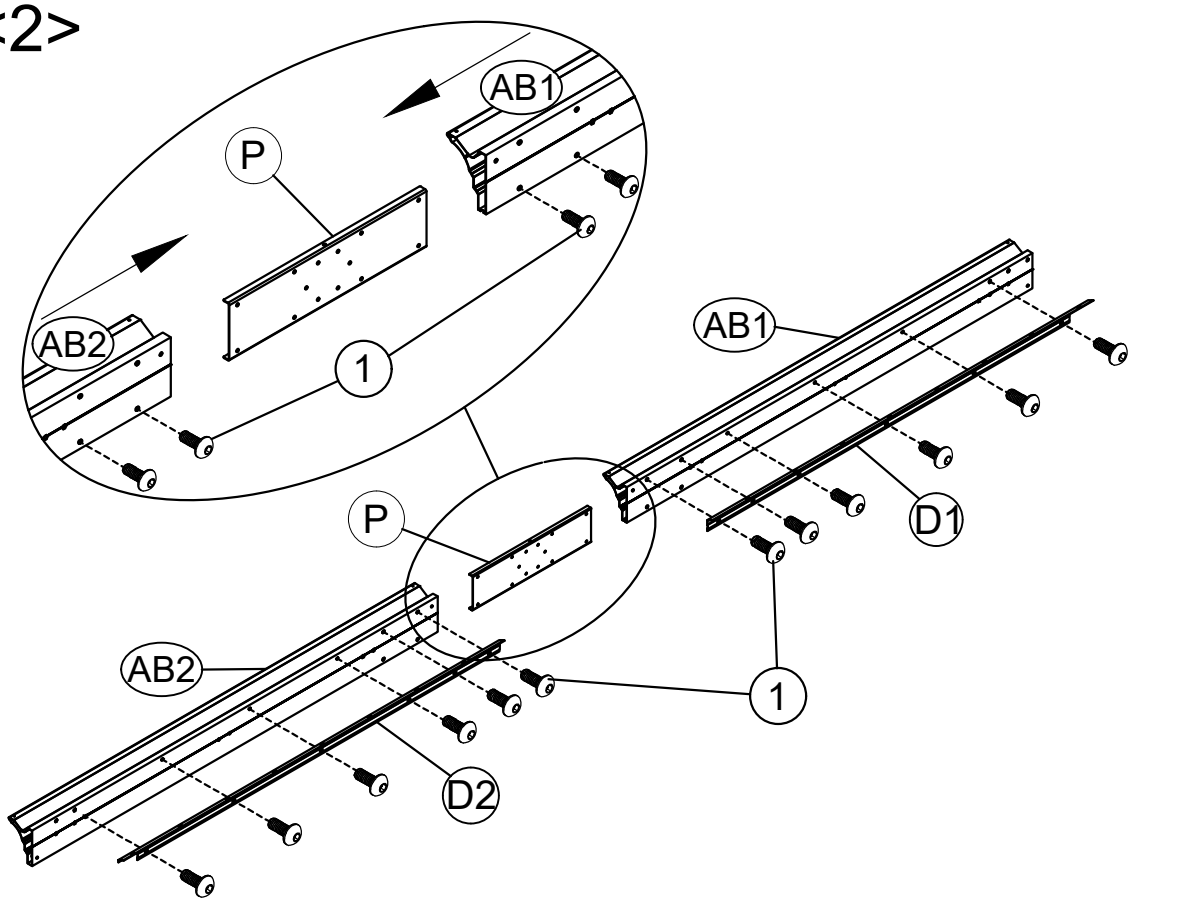

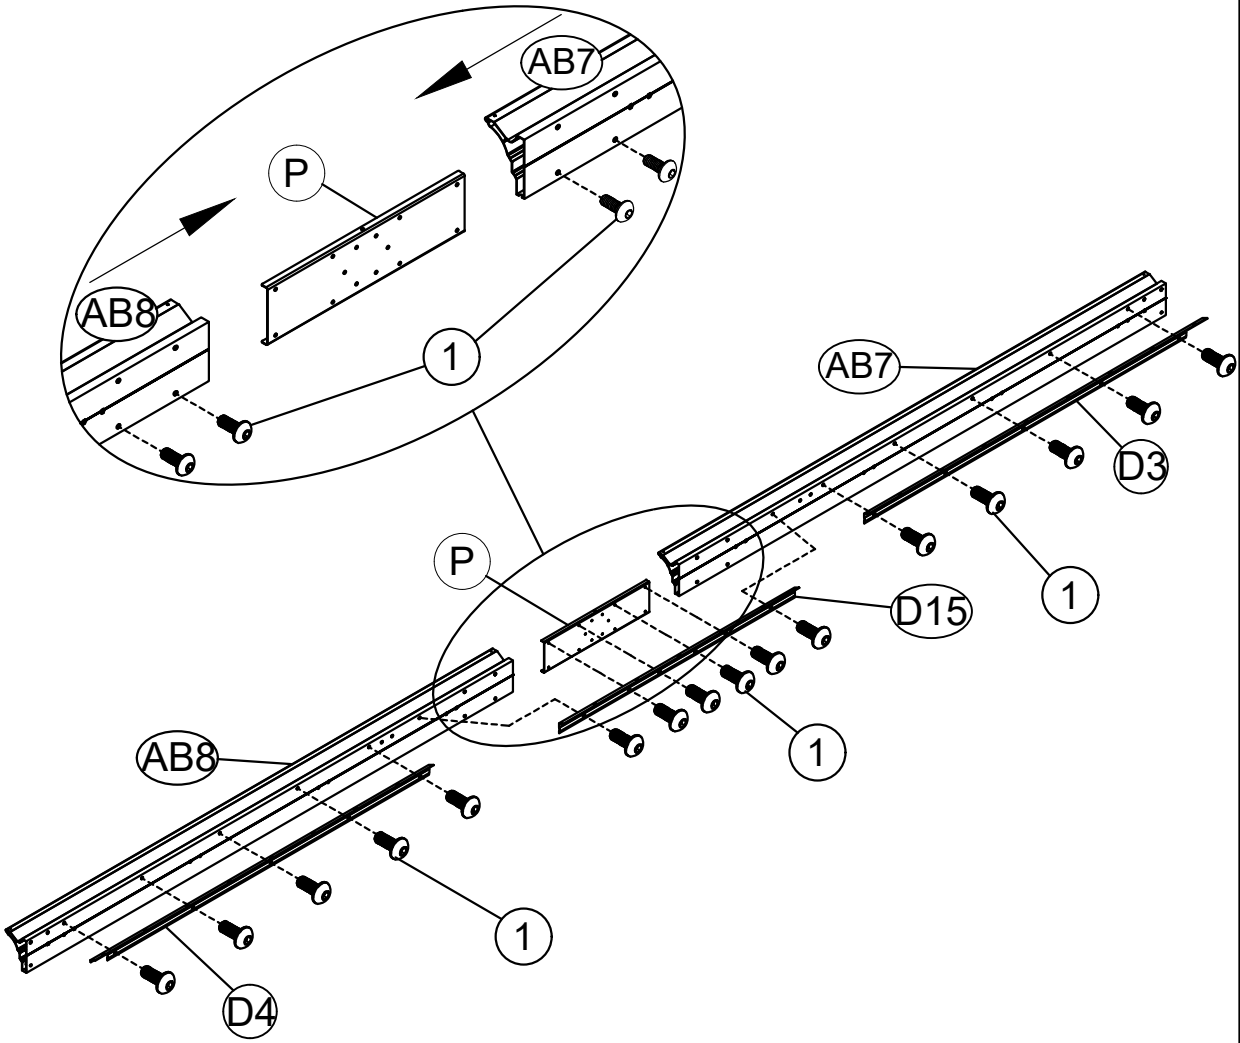

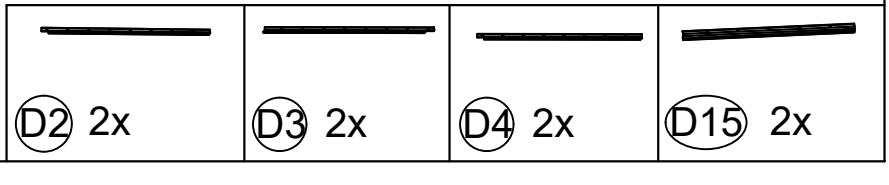


D2 2x

D3 2x

D4 2x


D15 2x

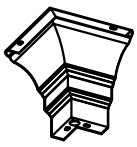

K 4x



K1 4x

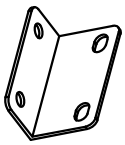

MQ2 8x



M6x15


1 36x




6 8x



3 24x

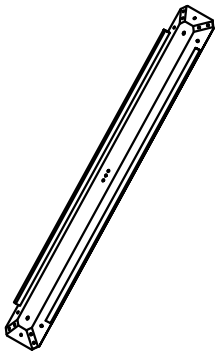


L3C 1x

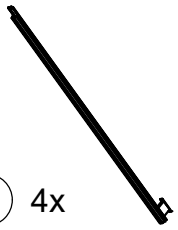

E 4x




E5 4x



JZ2 4x


M6x15


1 20x

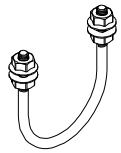

9 1x

13

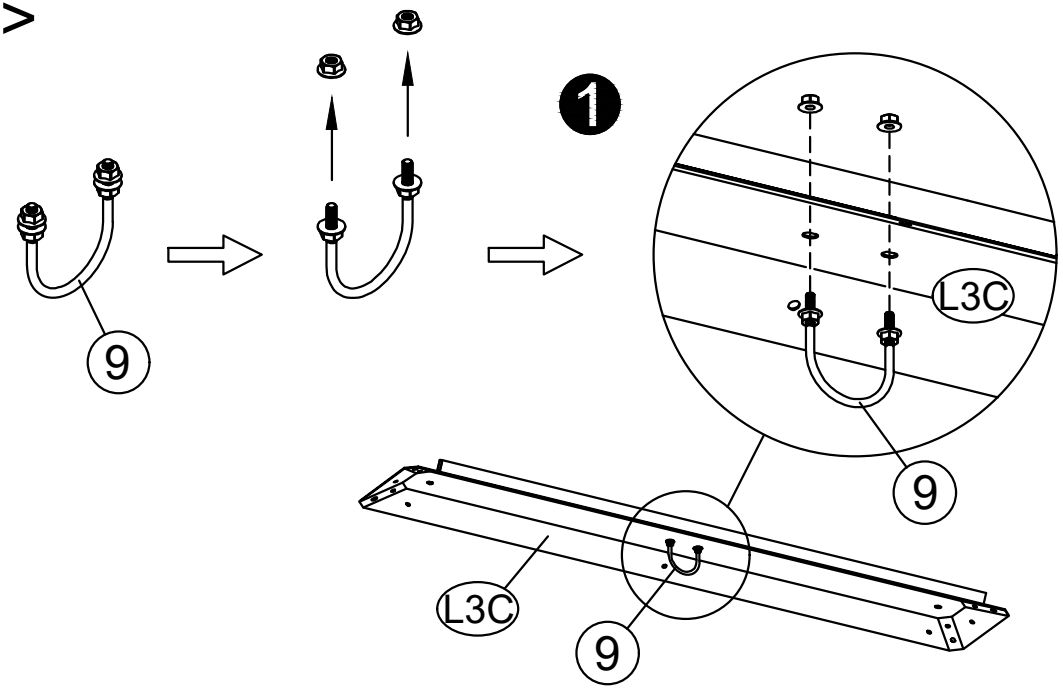


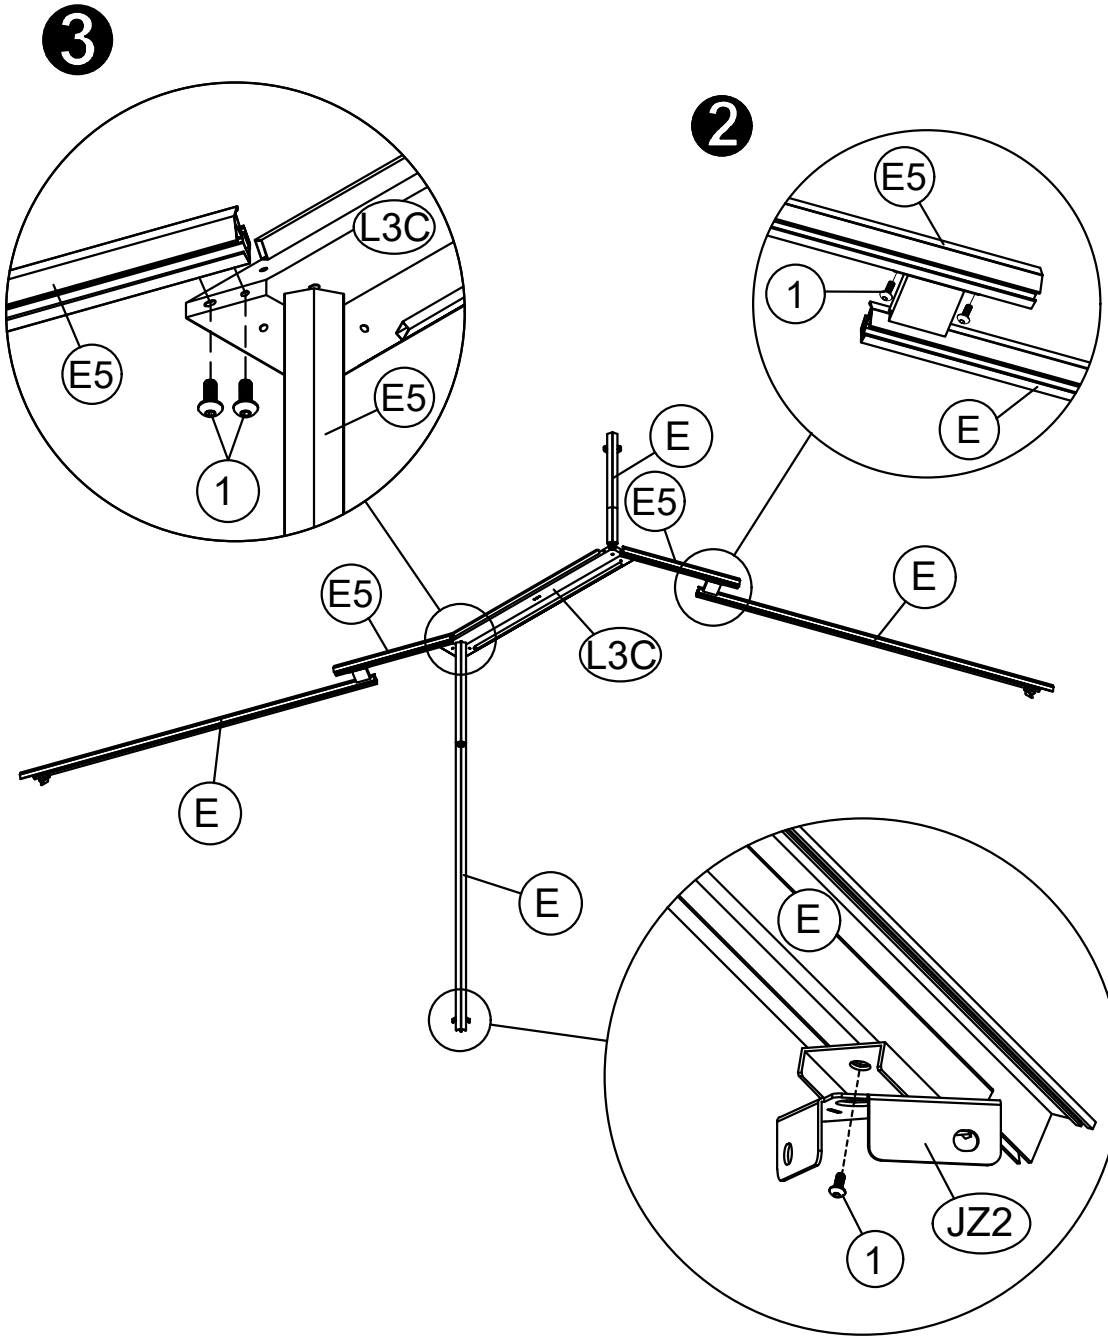


M6x15

1 8x


<5>

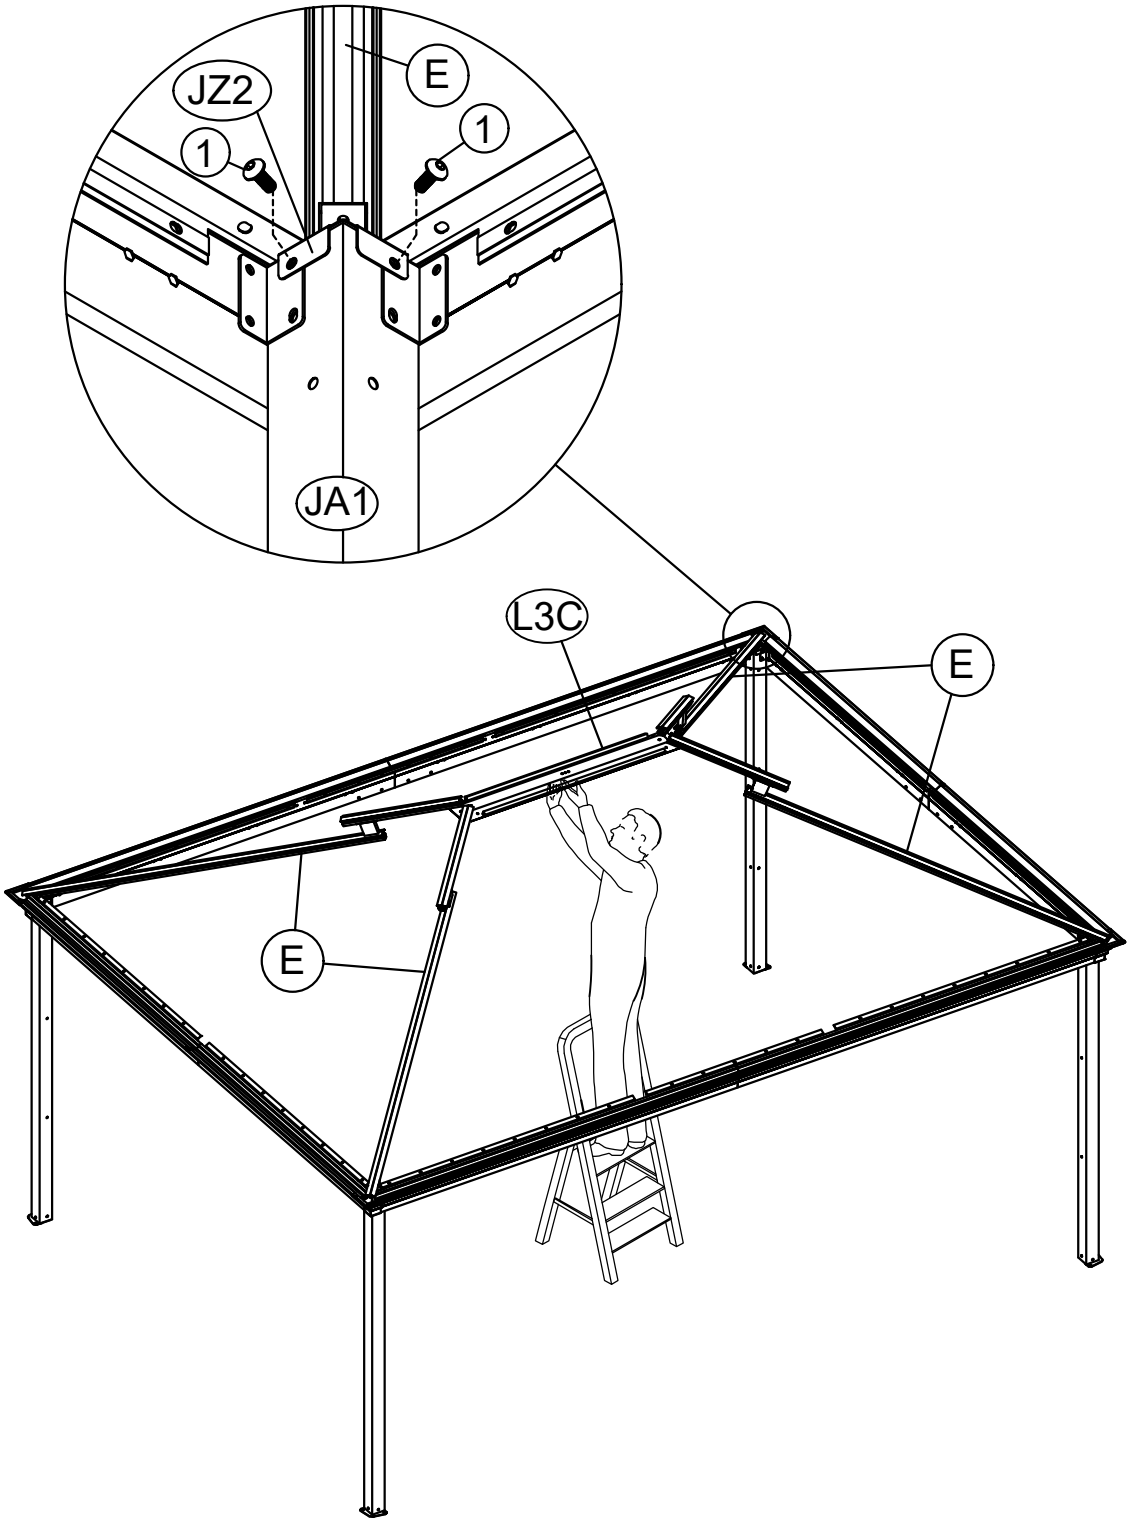


Note:
1. Have one person stand on the ladder to lift and hold L3C, while others fasten the screws of JZ2.
2. Do not release L3C until all the "JZ2" screws are fully installed.

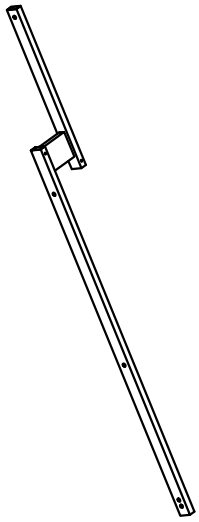

JE3 6x

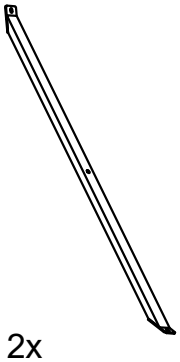

F5 2x



JZ1 6x




M6x15

1 34x




4 **2x**

15

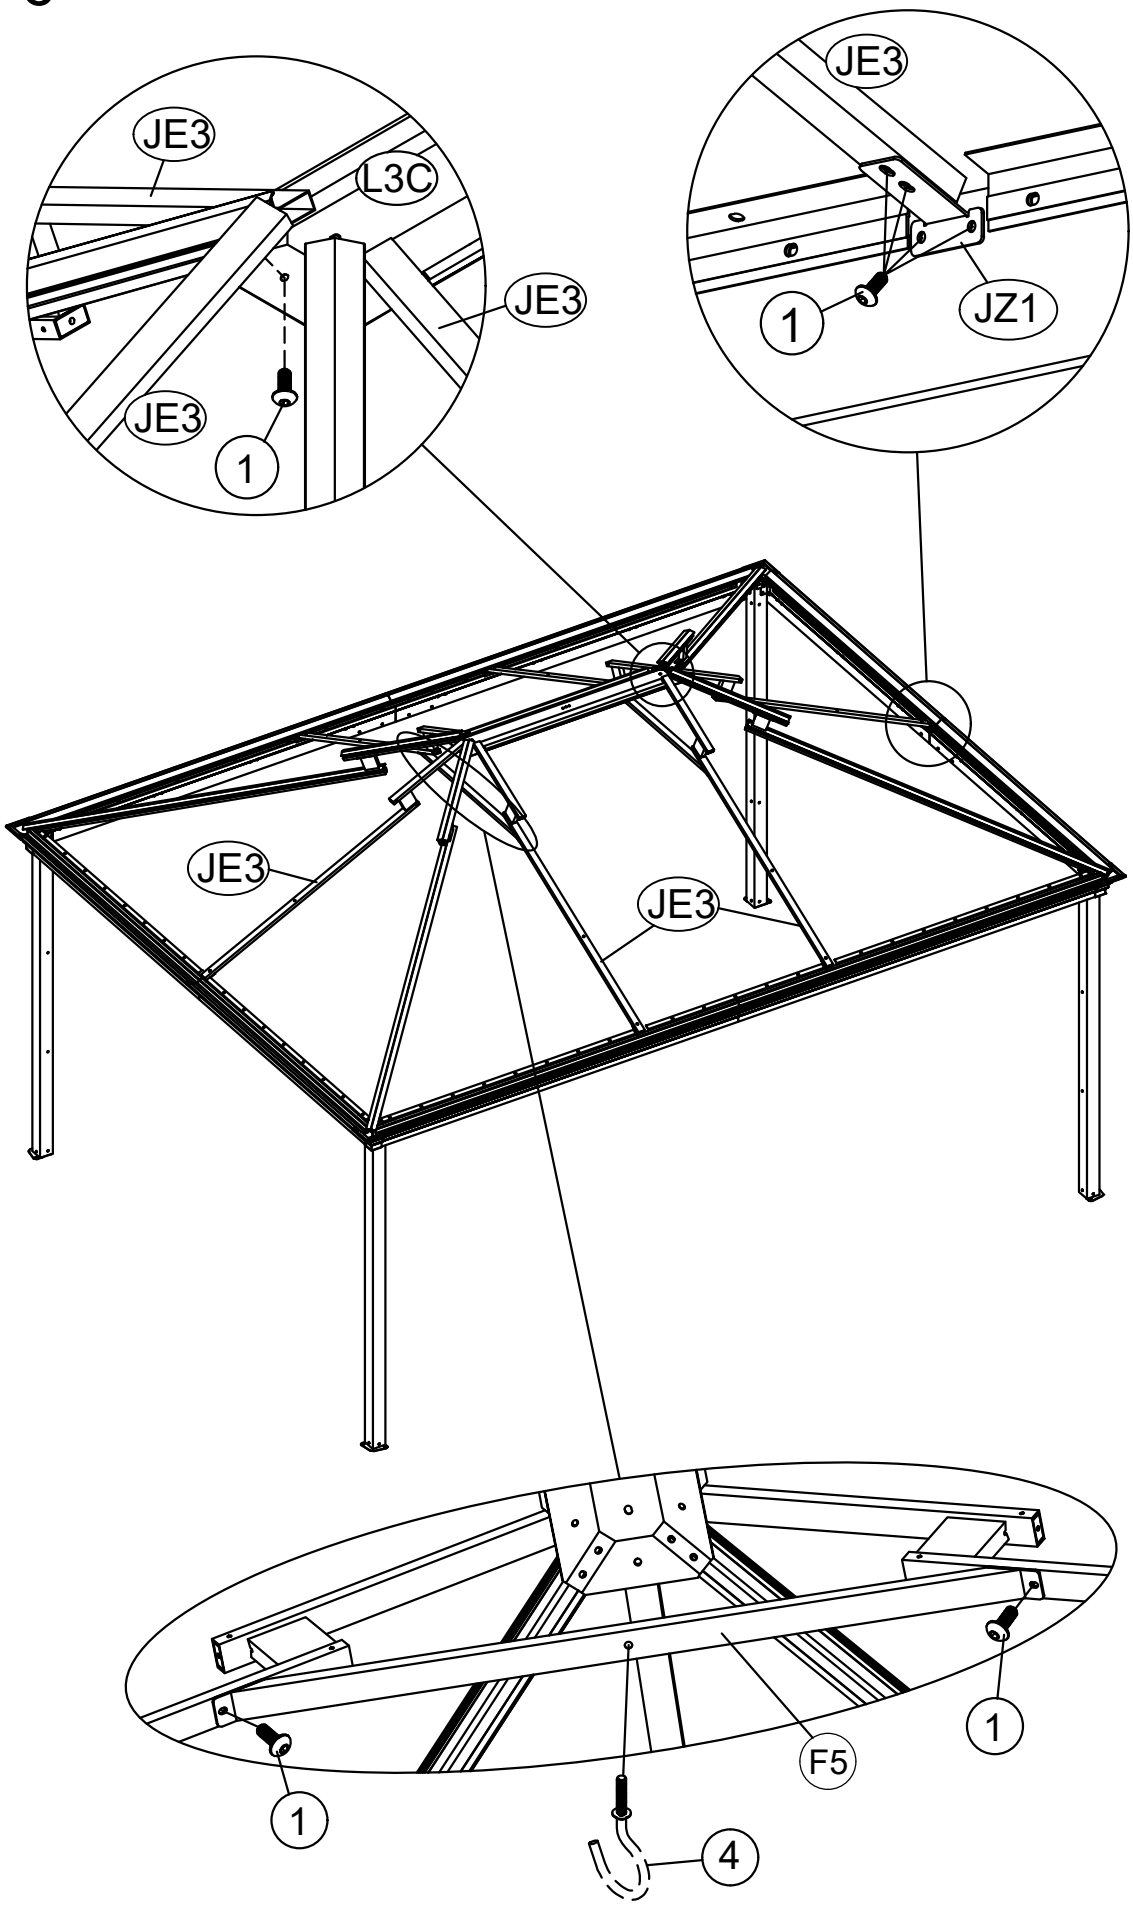





G1 2x

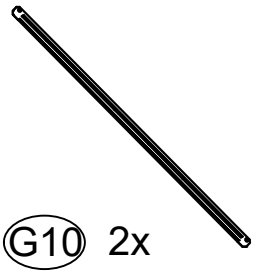

G10 2x

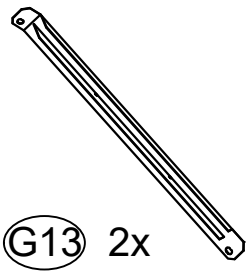

G13 2x

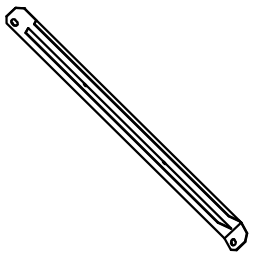

G14 2x



N 4x




N1 4x




M6x15

1 10x

16

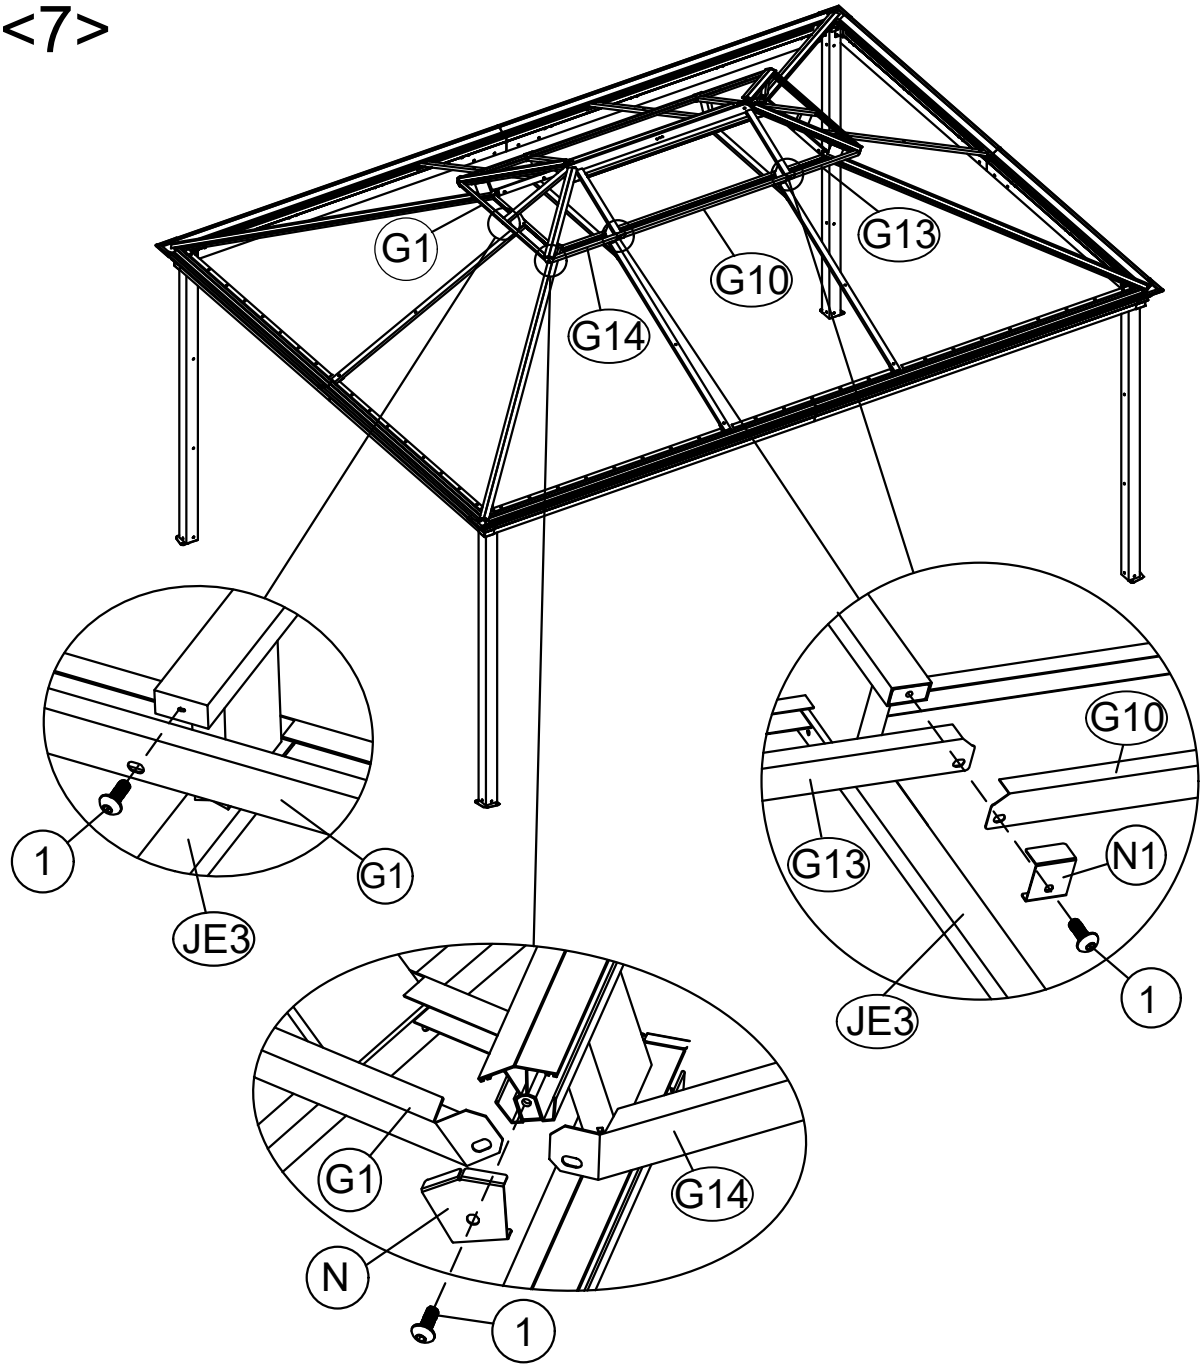

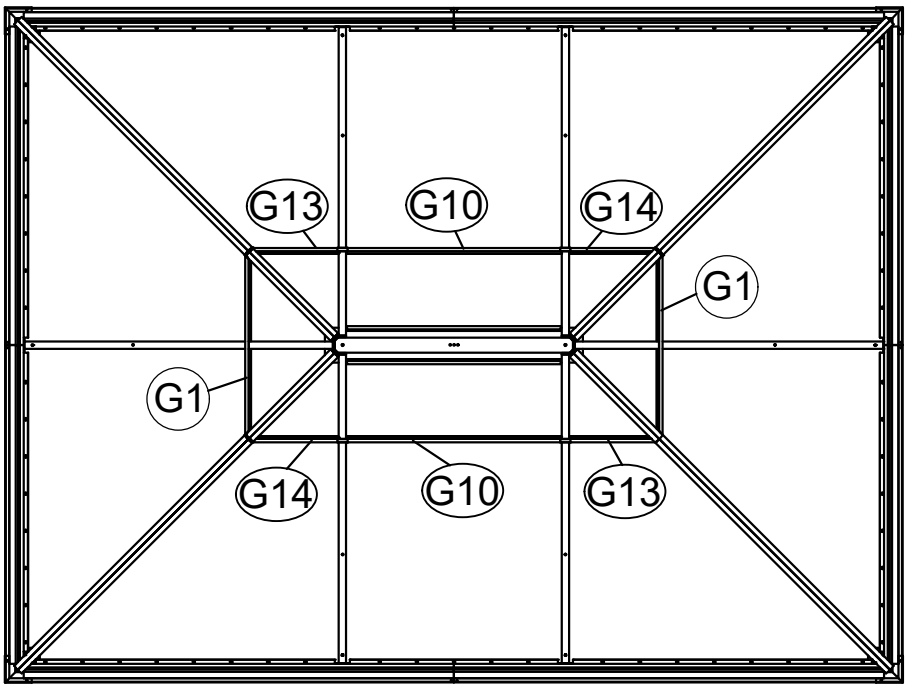

<8>

S1 2x

S2 2x

R1 2x

R2 2x

R3 2x

R4 2x


R5 2x


R6 2x


Z 32x

Z1 4x


Z2 4x

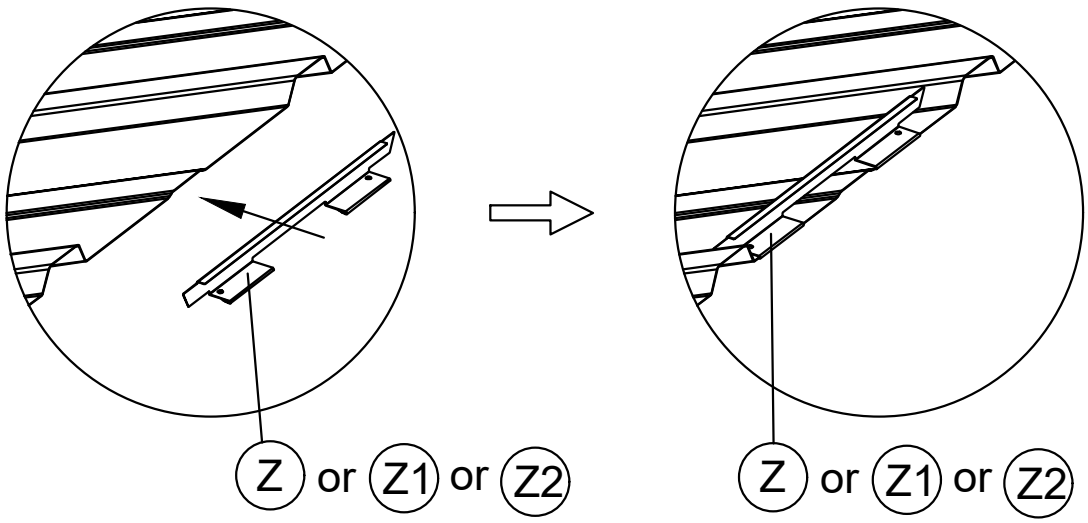


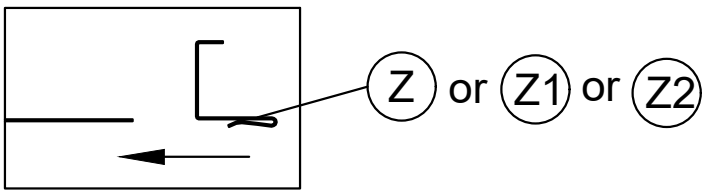


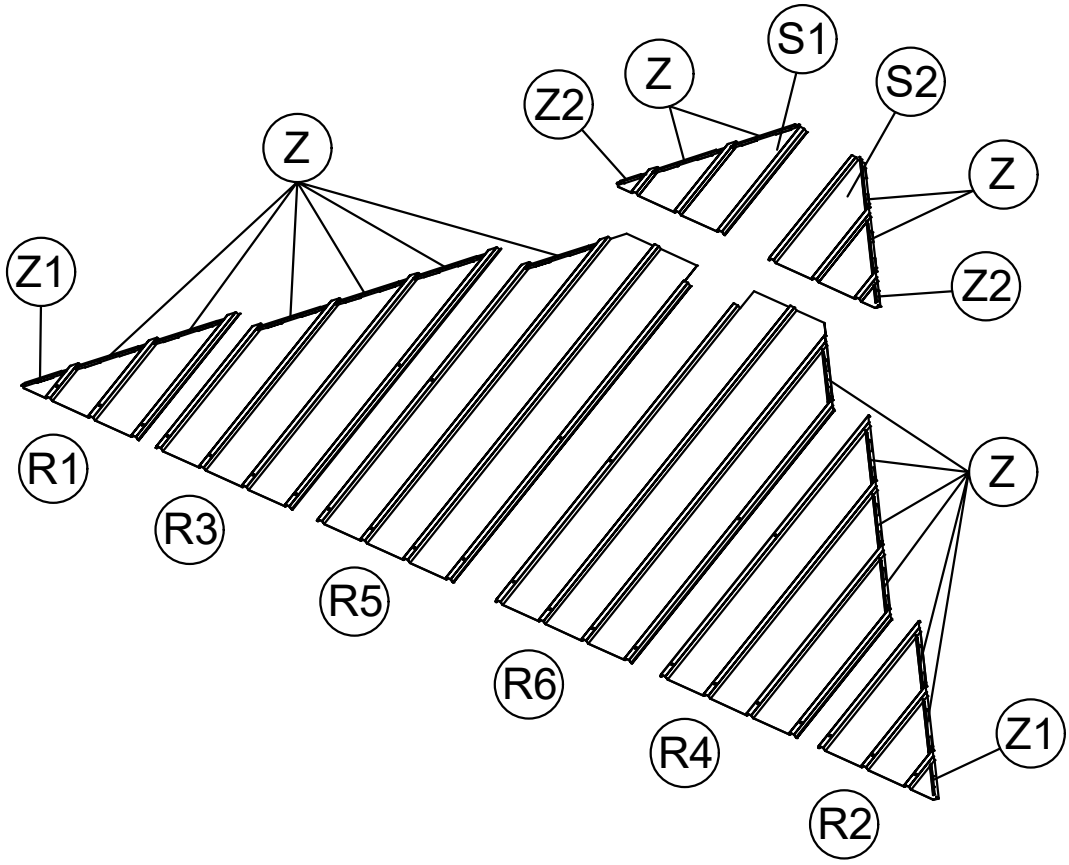

<9>

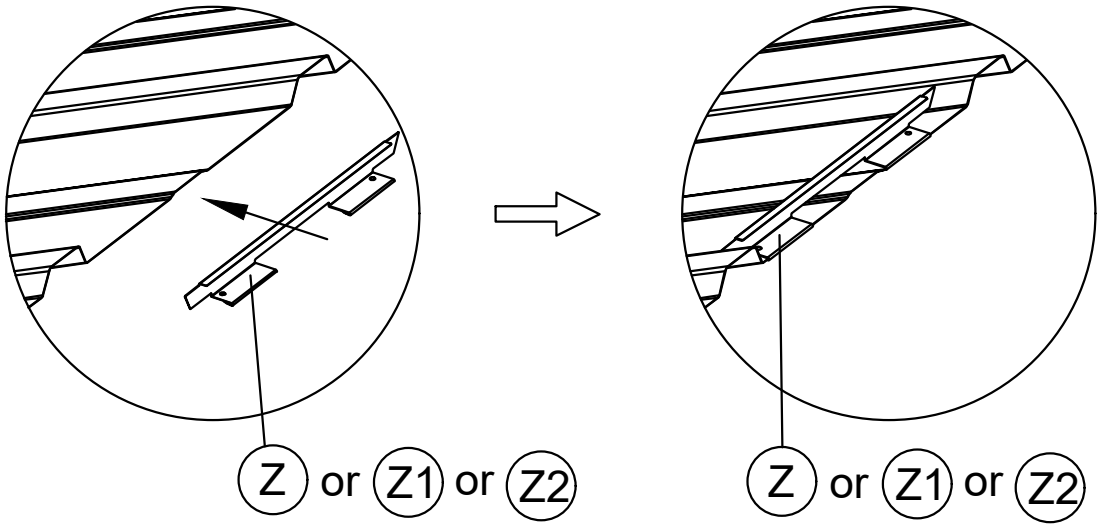

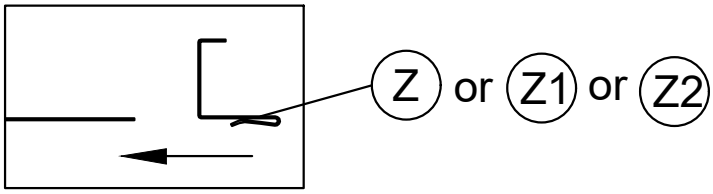

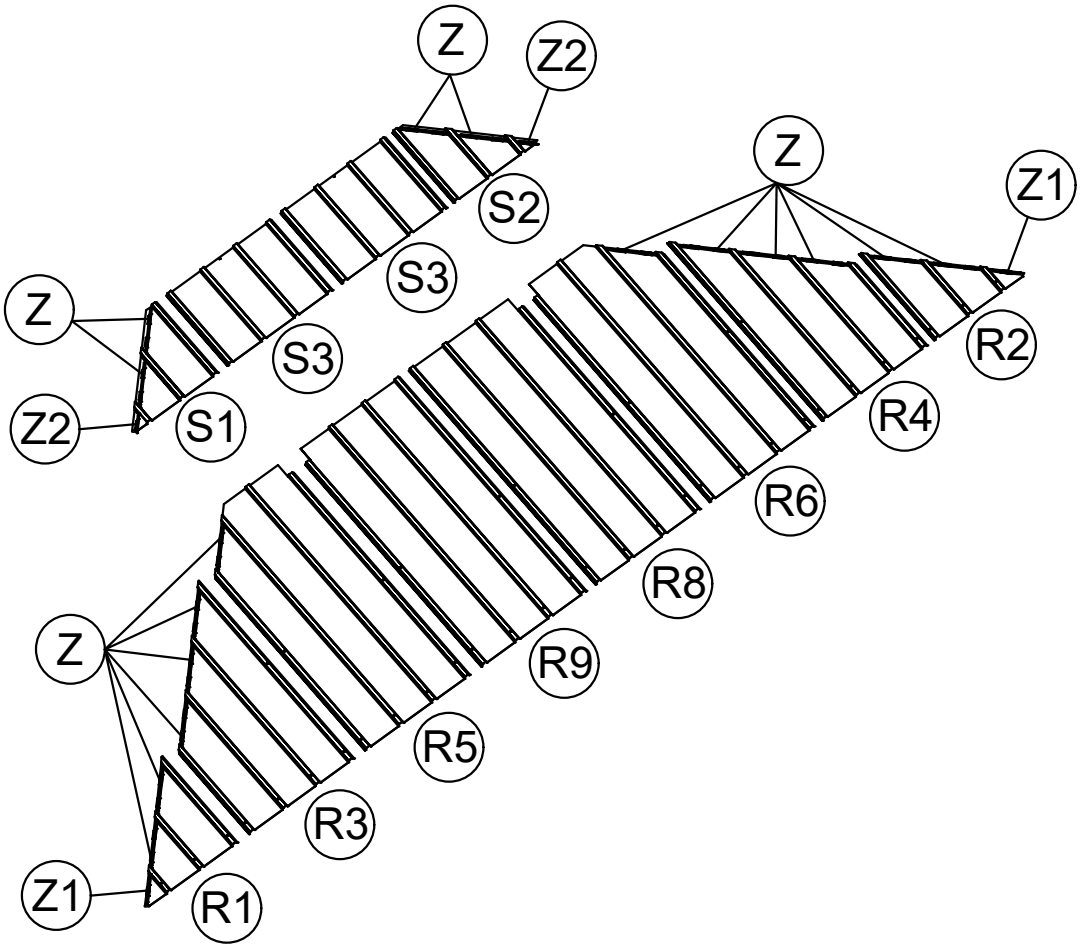

S1 2x S2 2x

R1 2x R2 2x

R3 2x R4 2x

R5 2x R6 2x

S3 4x


R8 2x R9 2x

Z 32x


Z1 4x


Z2 4x


<10>

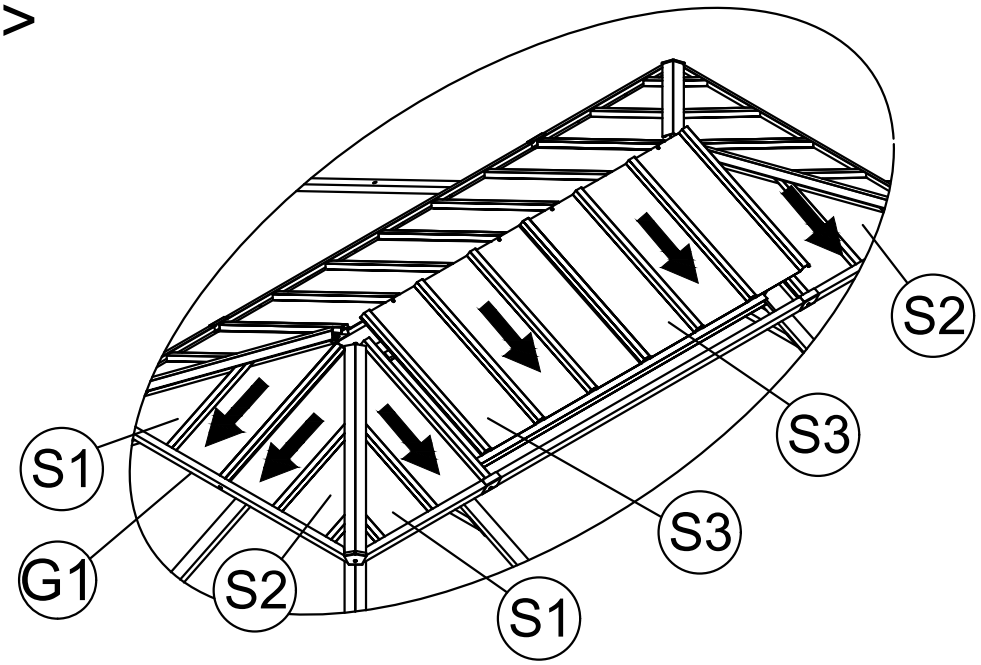

When installing the Roof plates (S2) on the short side, first detach the right end of the Roof Rib(G1) first. After S2 is installed, reattach the right end of Roof Rib (G1) .

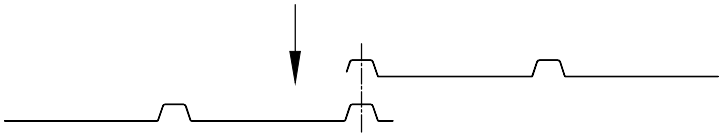

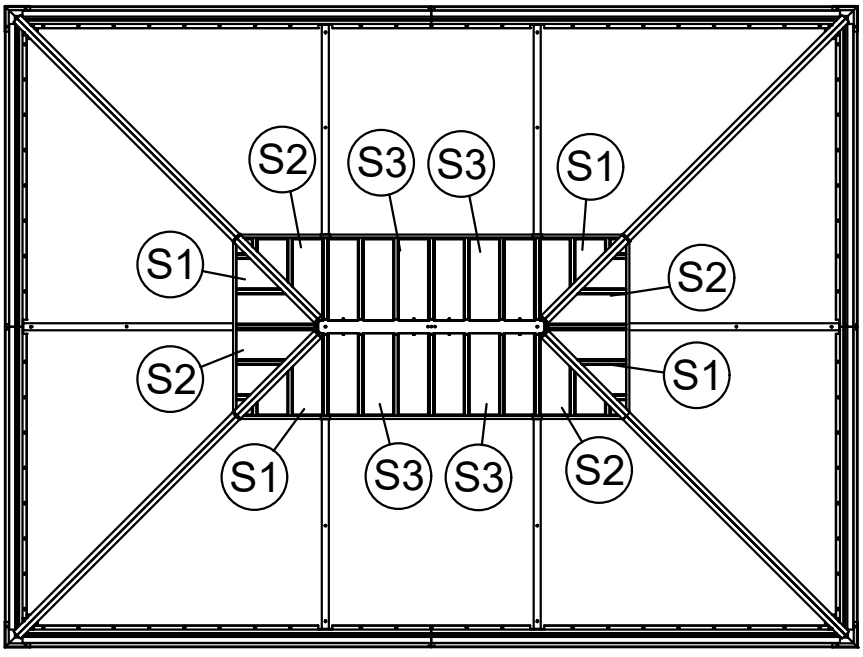

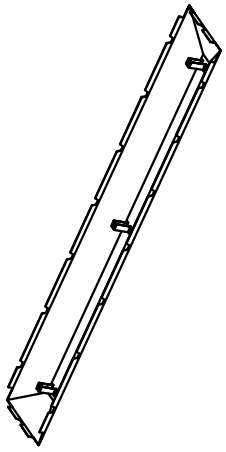



M3 1x

M6x15


1 3x

<11>

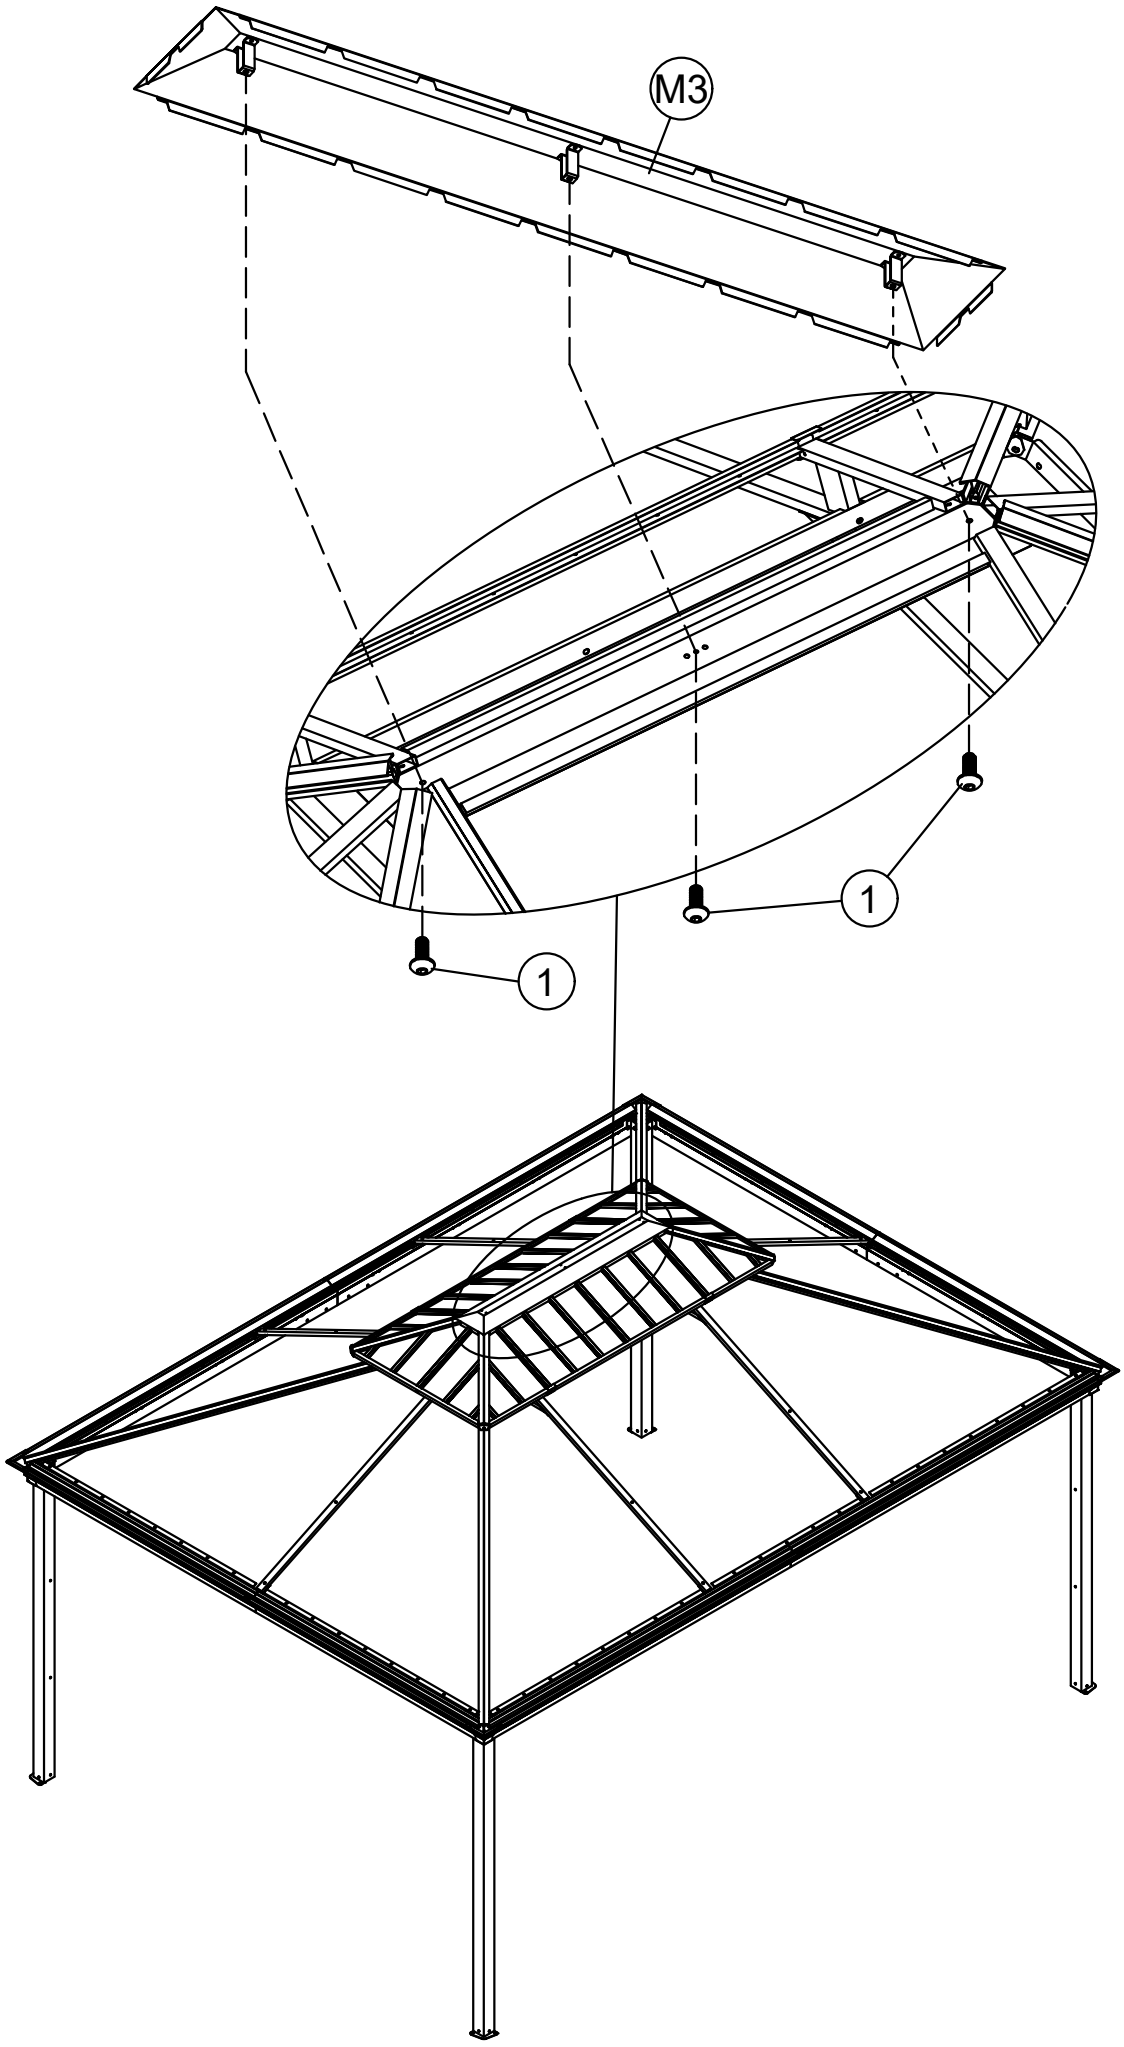

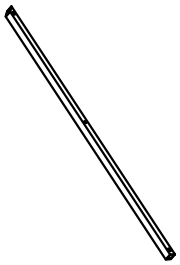


F1 8x

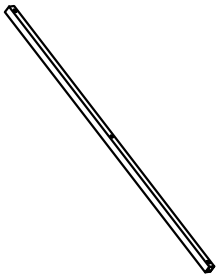

F3 2x



W 4x




W1 6x





M6x15


1 30x

21

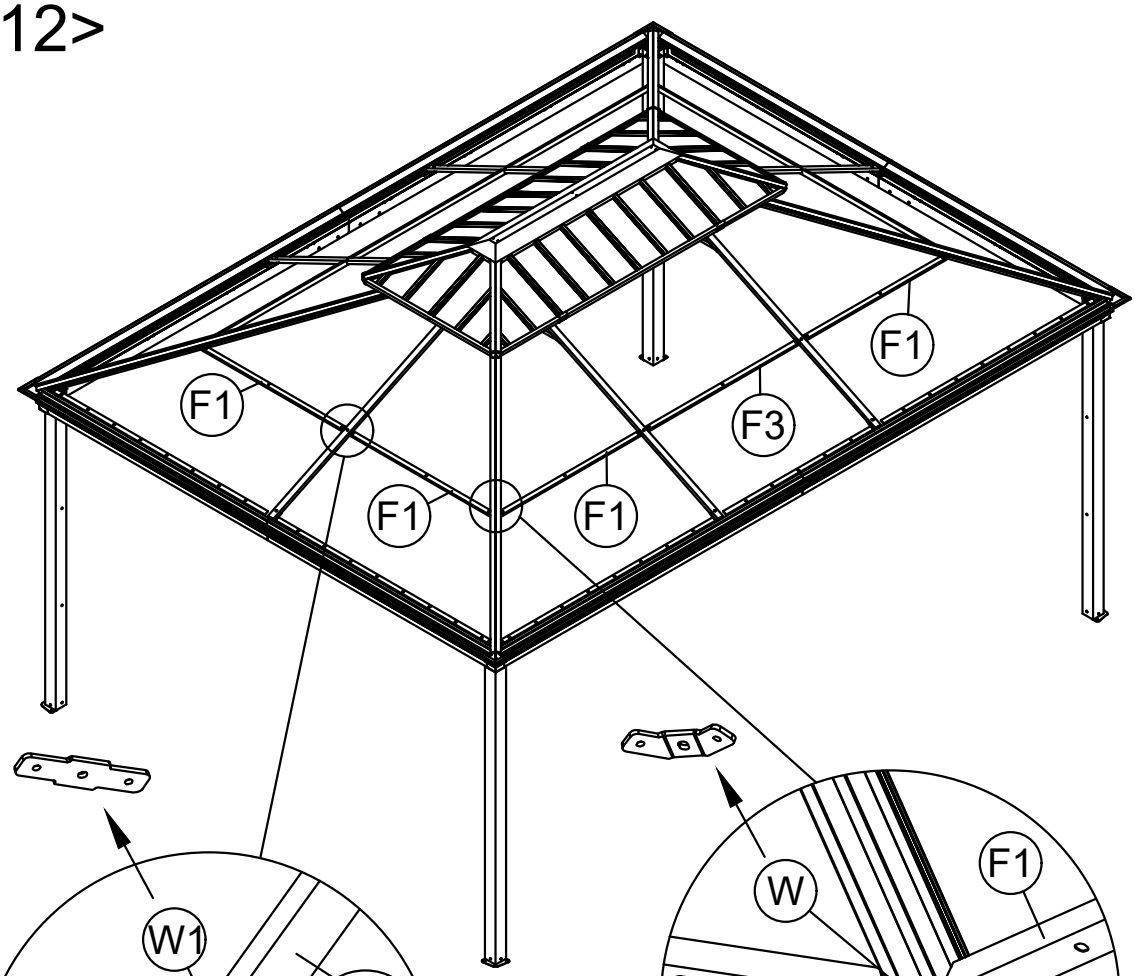


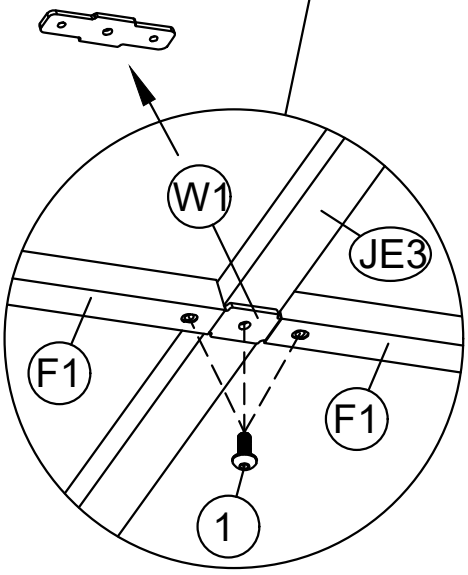


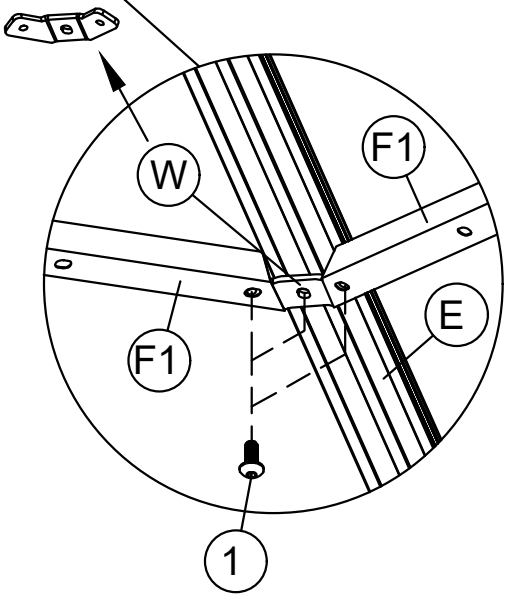


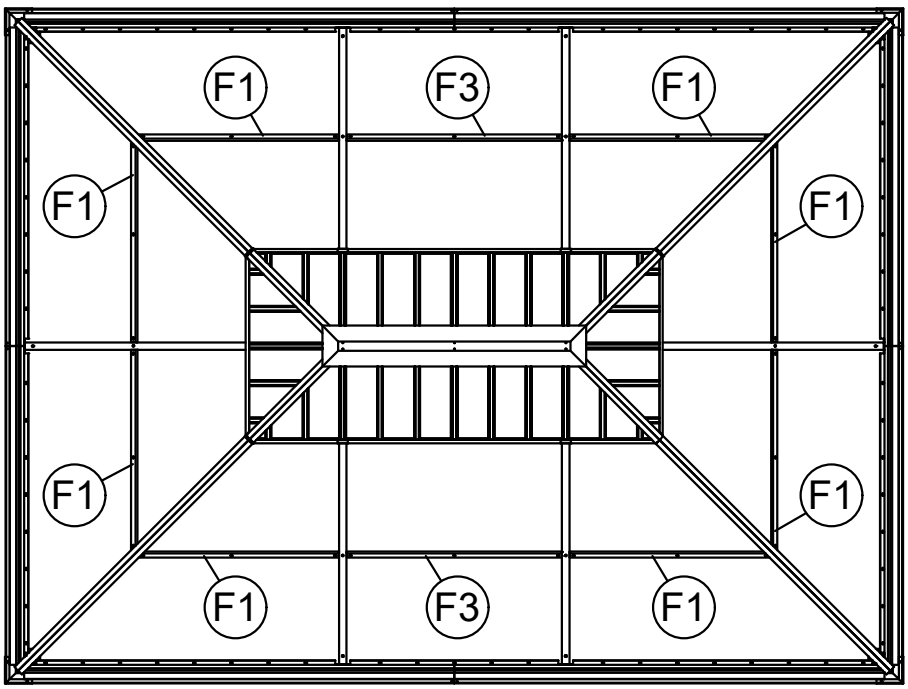


<13>

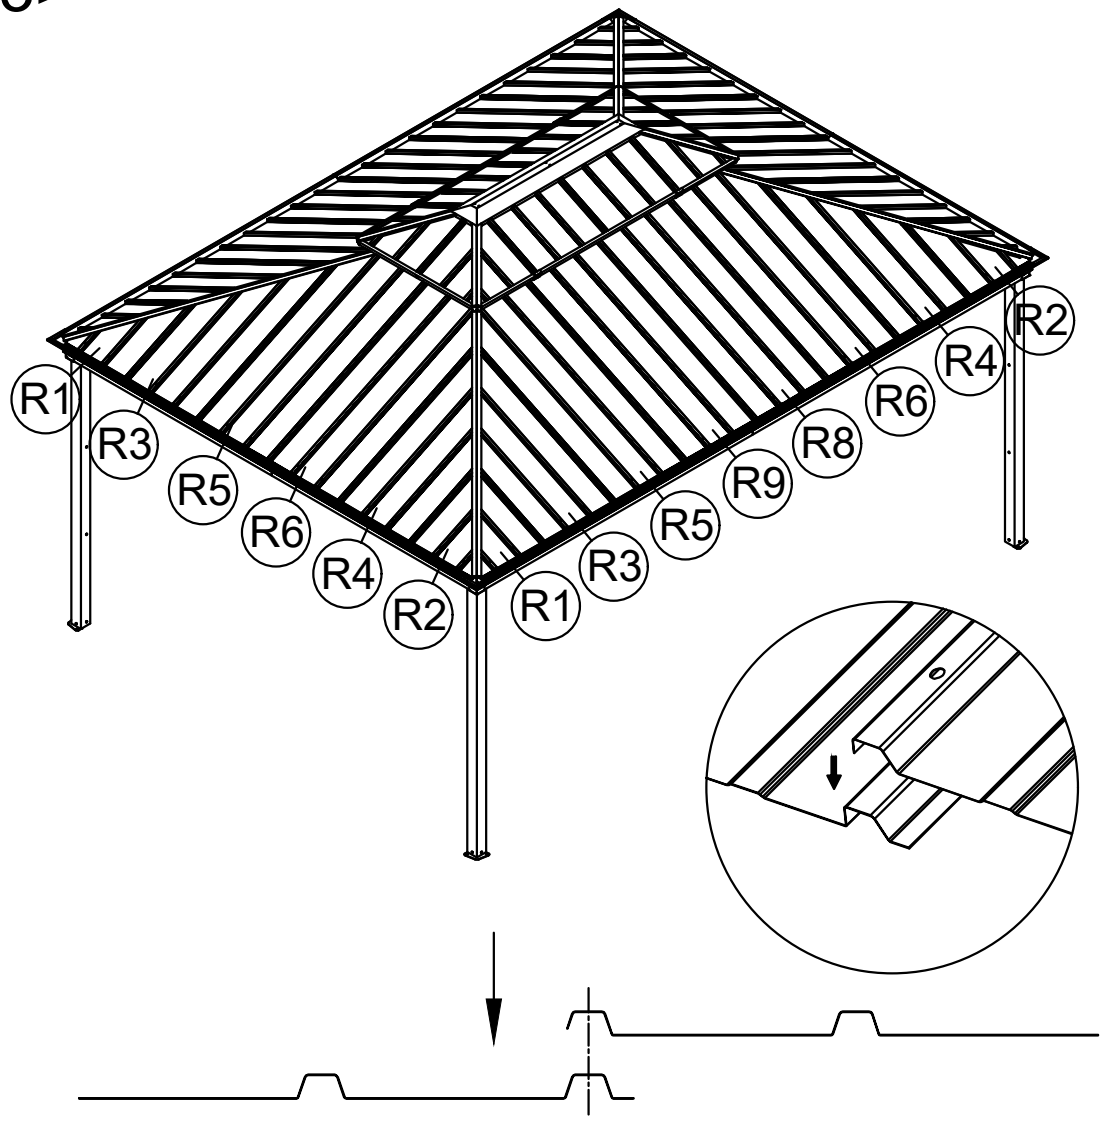
R1
R3
R5
R6
R4
R2
R1
R3
R5
R9
R8
R6
R4
R2

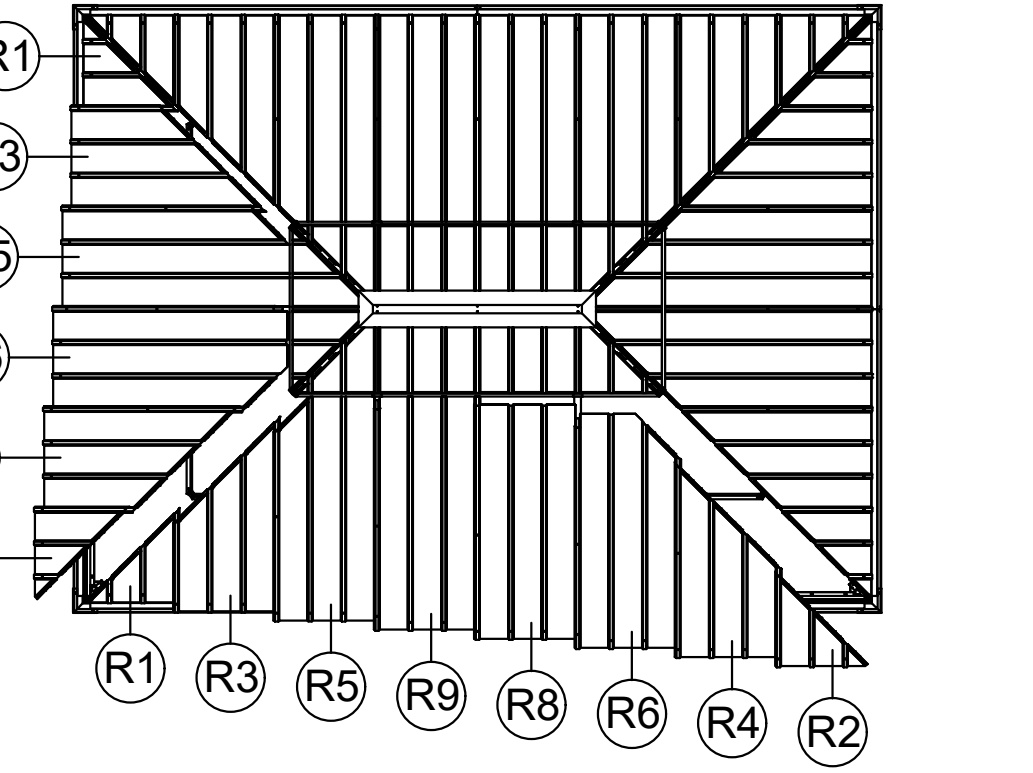
R1
R3
R5
R6
R4
R2
R1
R3
R5
R9
R8
R6
R4
R2

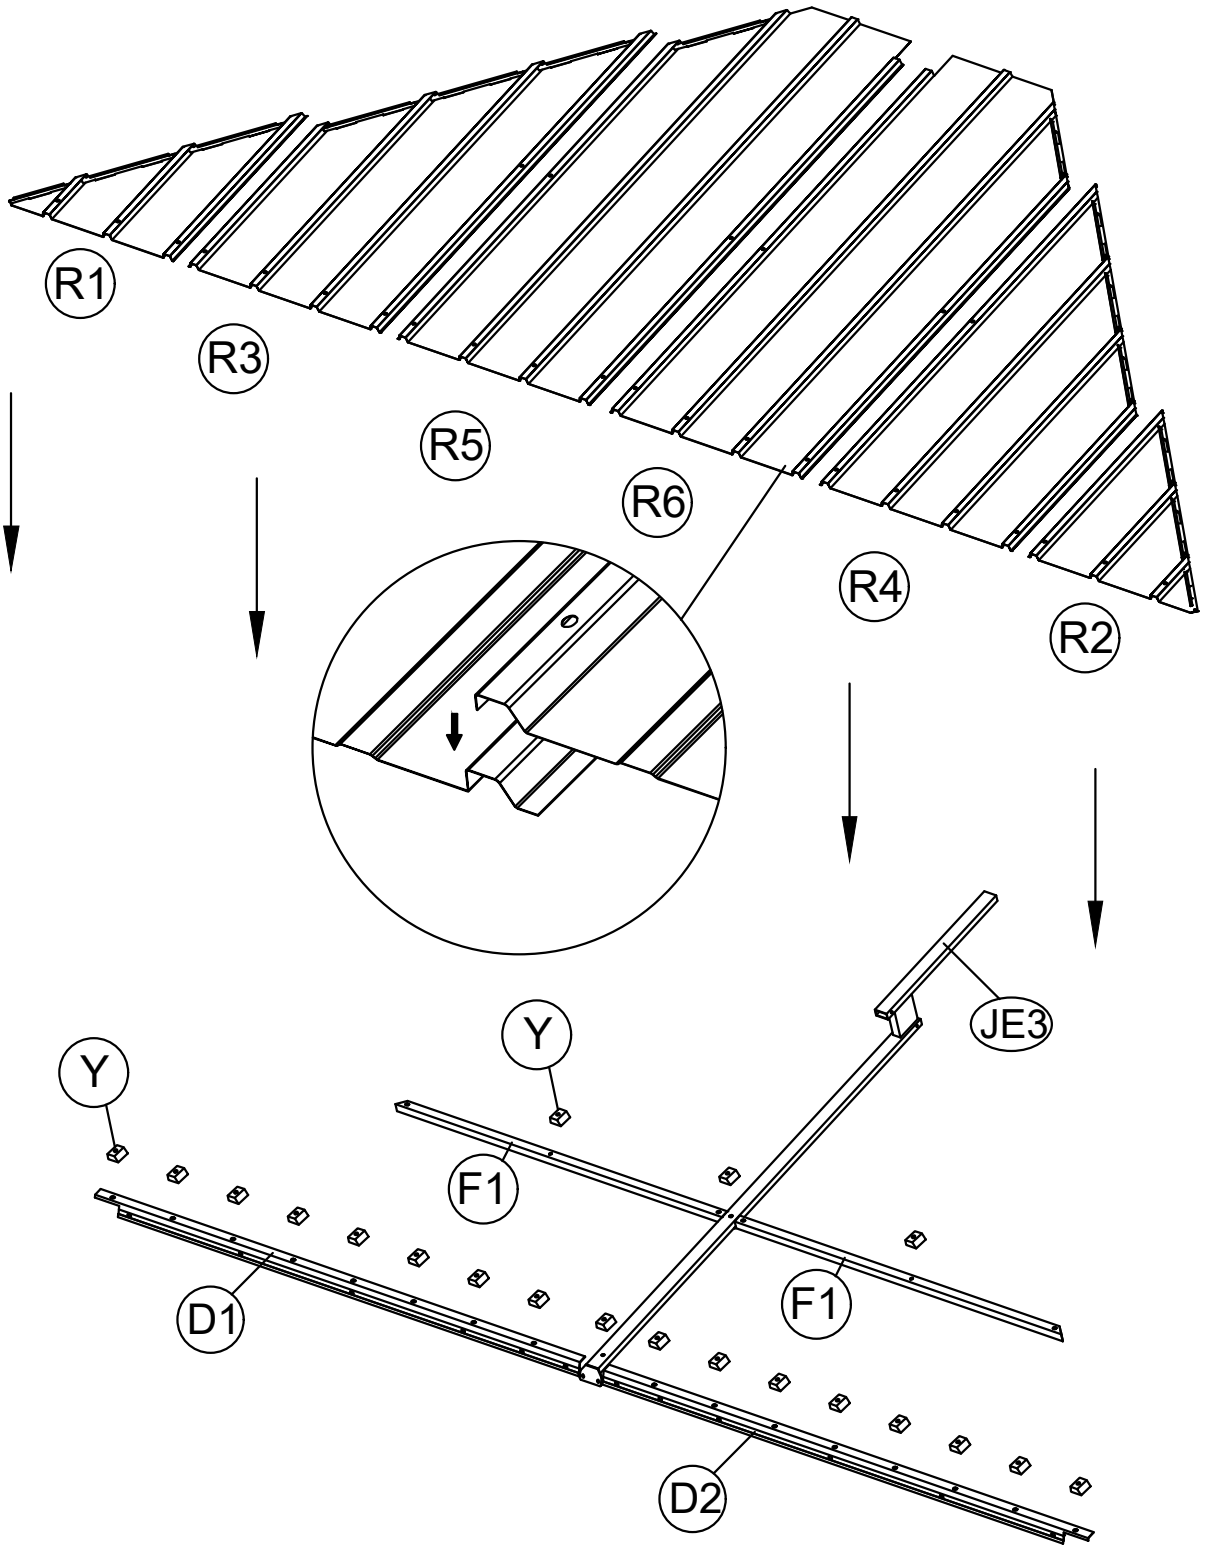
R1
R3
R5
R6
R4
R2
Y
Y
JE3
F1
F1
D1
D2

<15>

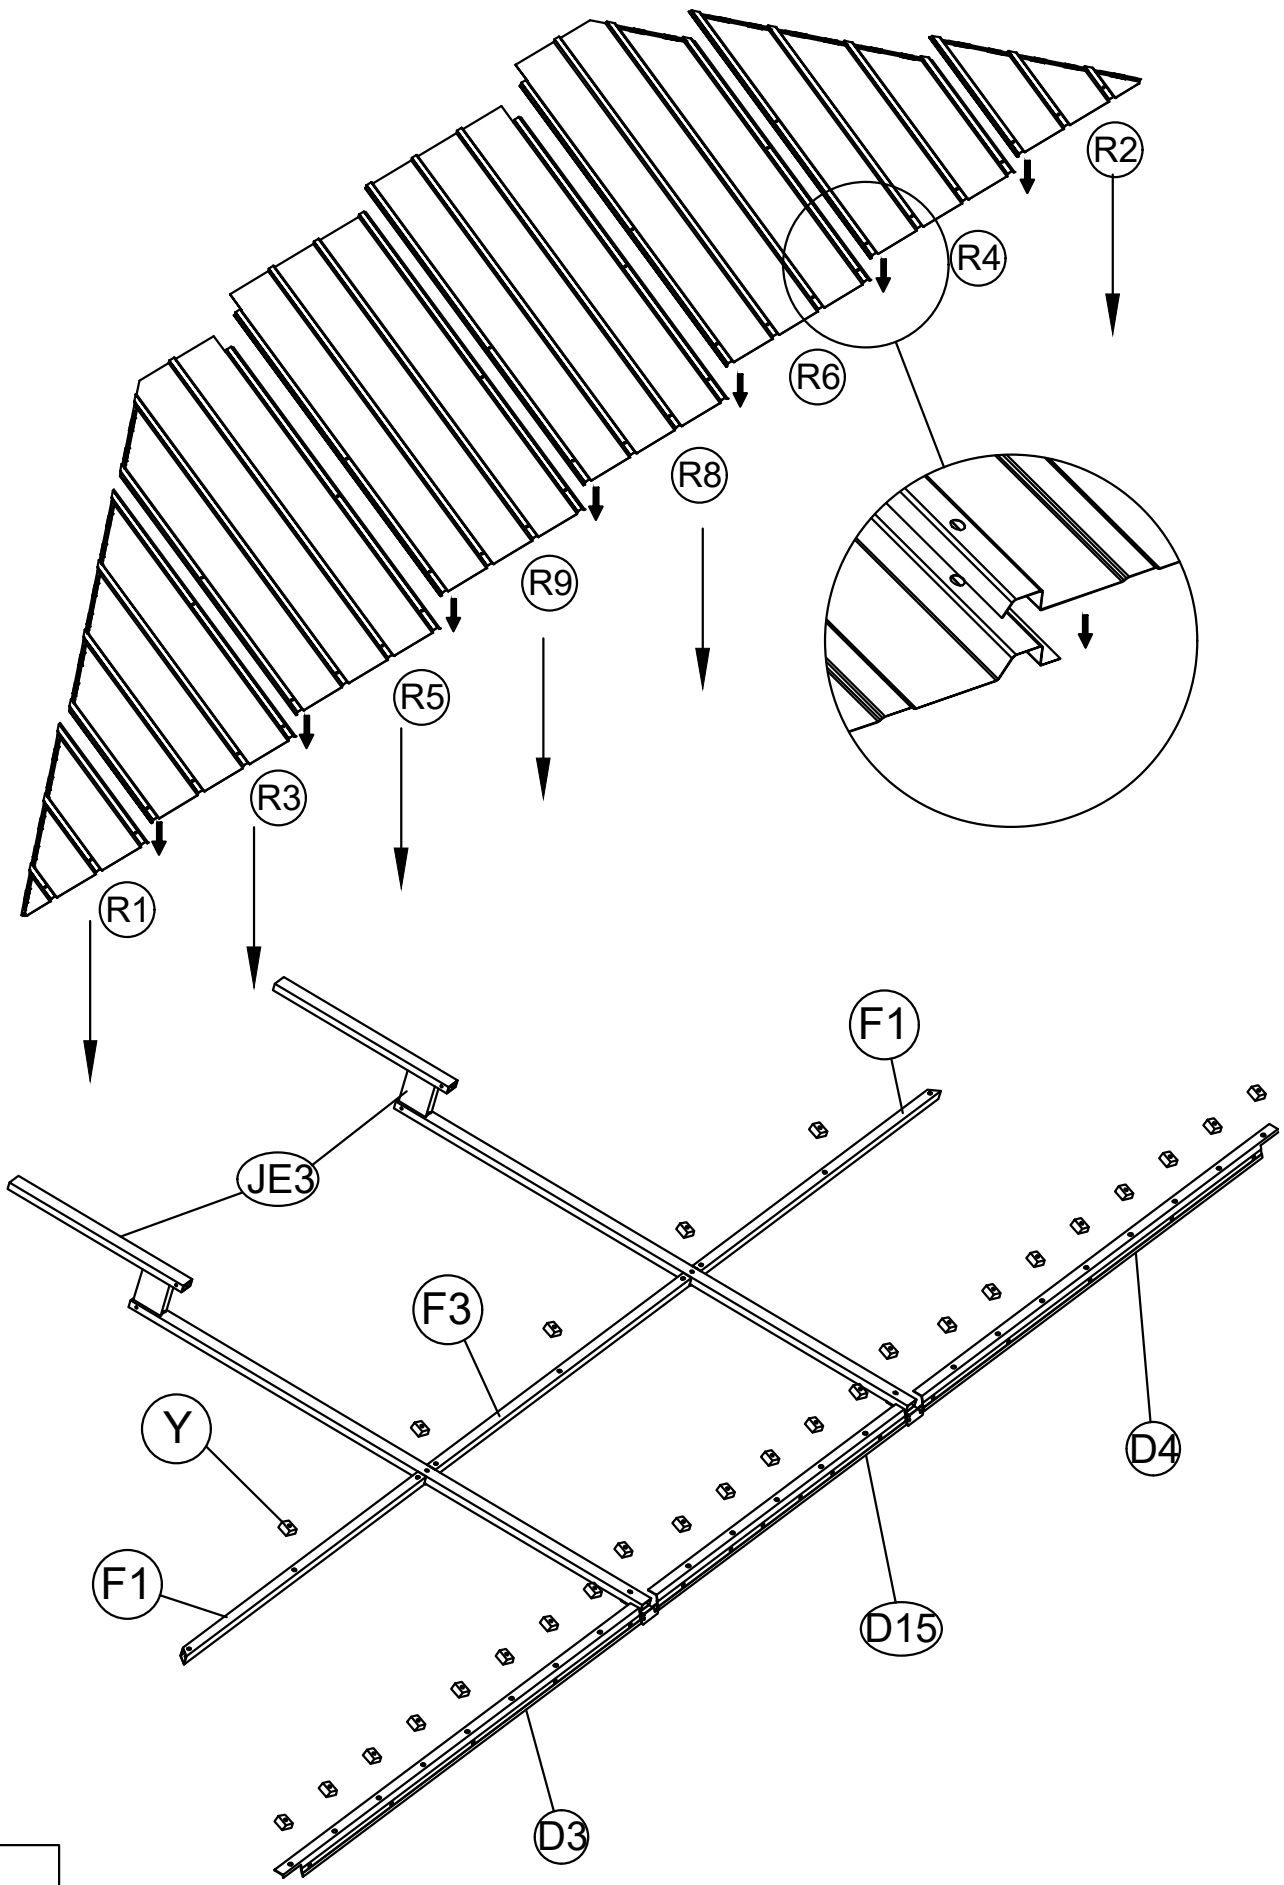

M6x25

2 86x

M6x50

5 10x

M6

10 84x


M6

19 96x


Rubber Gasket

23 96x


Y 96x

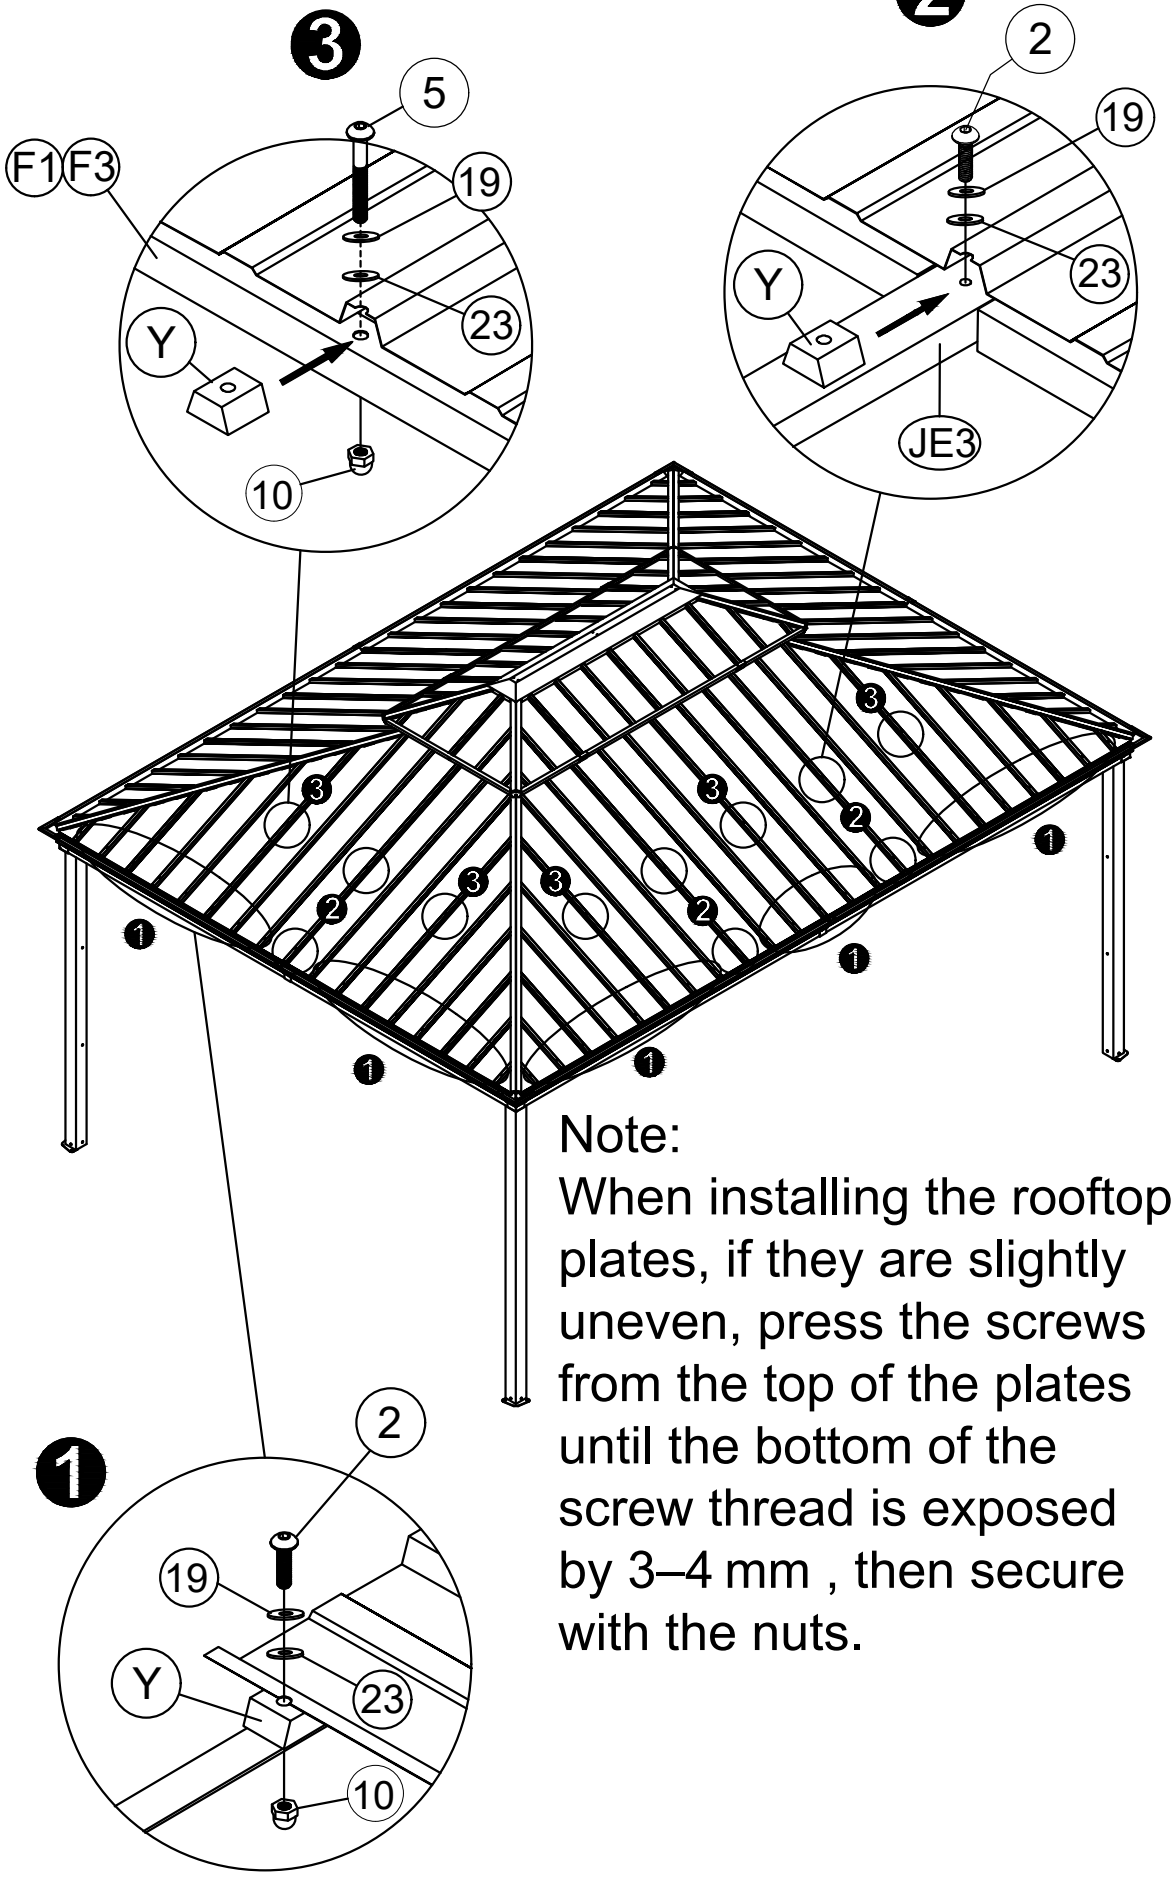

Note:
When installing the rooftop plates, if they are slightly uneven, press the screws from the top of the plates until the bottom of the screw thread is exposed by 3–4 mm , then secure with the nuts.

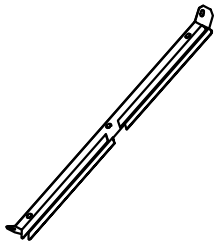


I1 2x

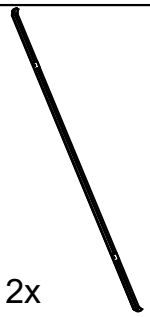


I10 2x




N 4x



V1 2x

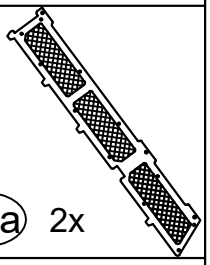

V7a 2x

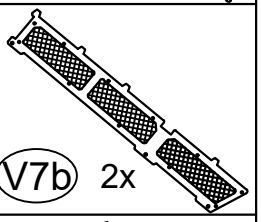

V7b 2x



M6x15

1 10x



M6x10

7 10x





M6


10 10x


26

<17>

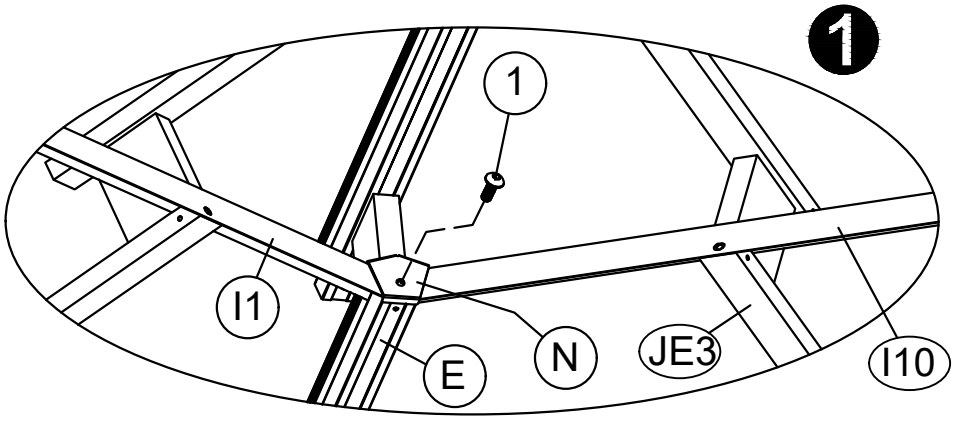


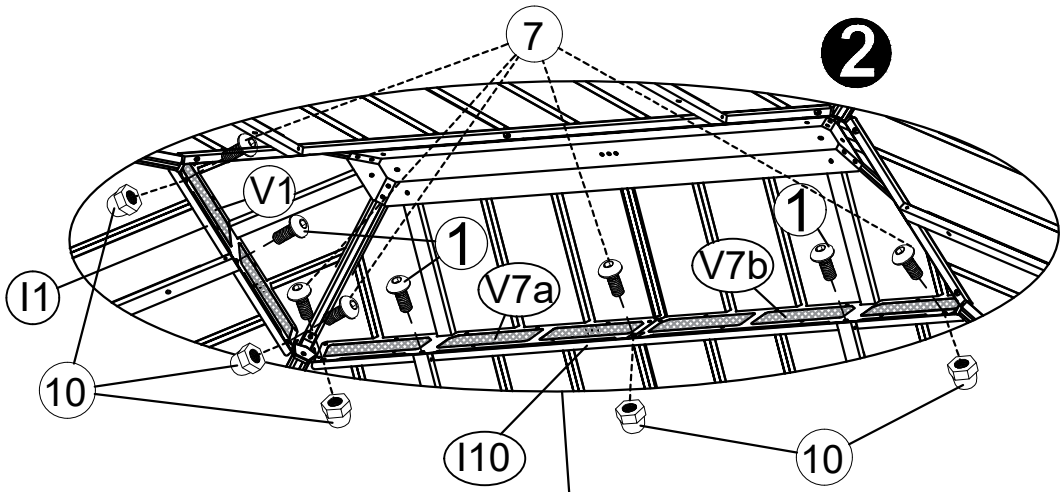

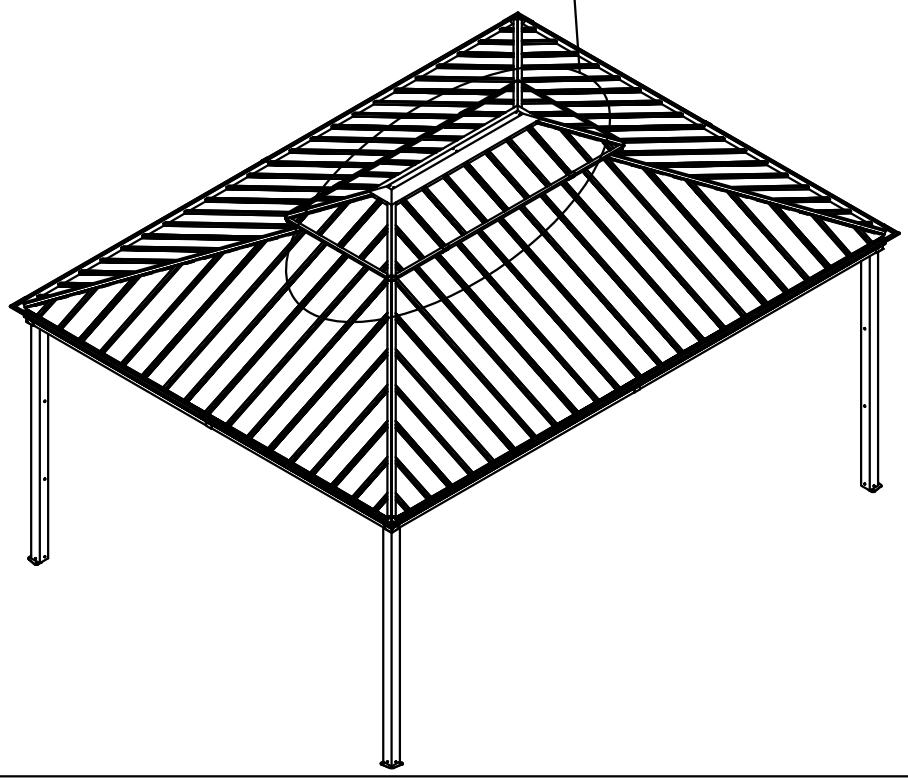


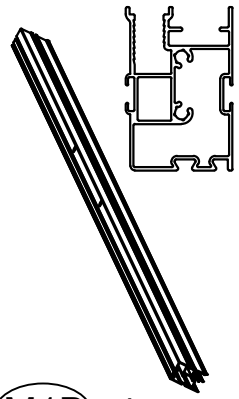


M1B 4x

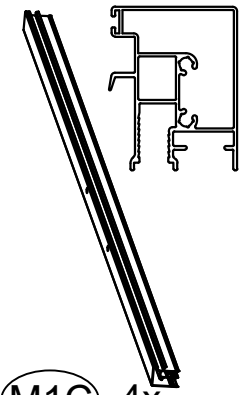


M1C 4x

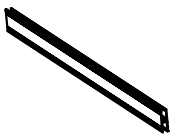

M5G 8x



MS2 4x

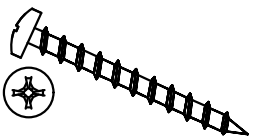


M4x50


14 16x


27

AB 4x


For component AB, repeat four times.

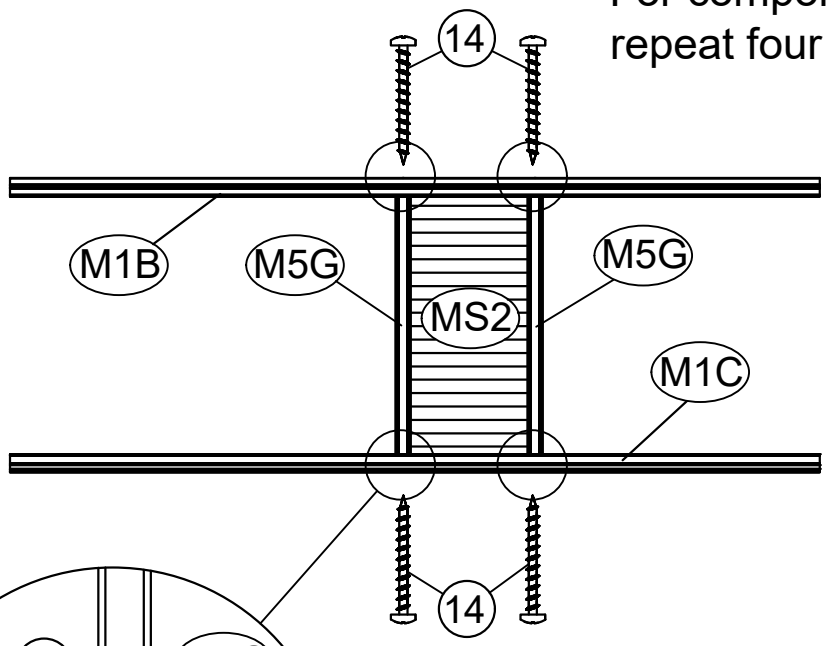

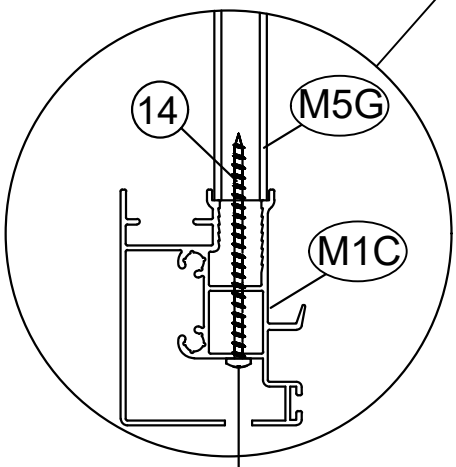

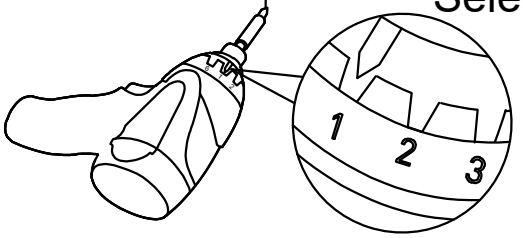


Select the low gear.

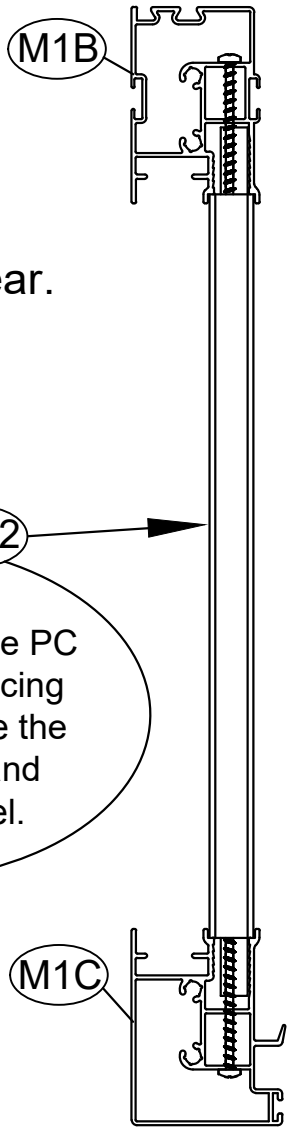


With the side of the PC Panel with text facing outwards, remove the protective film and install the panel.


The door frame installation template is shown on pages 27 to 33. All subsequent door frames should follow this template.

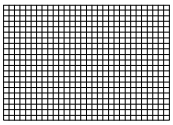

M1S 4x

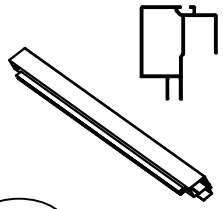

M4K 4x




M4x20


12 16x

<19>

For component AB, repeat four times.


AB 4x

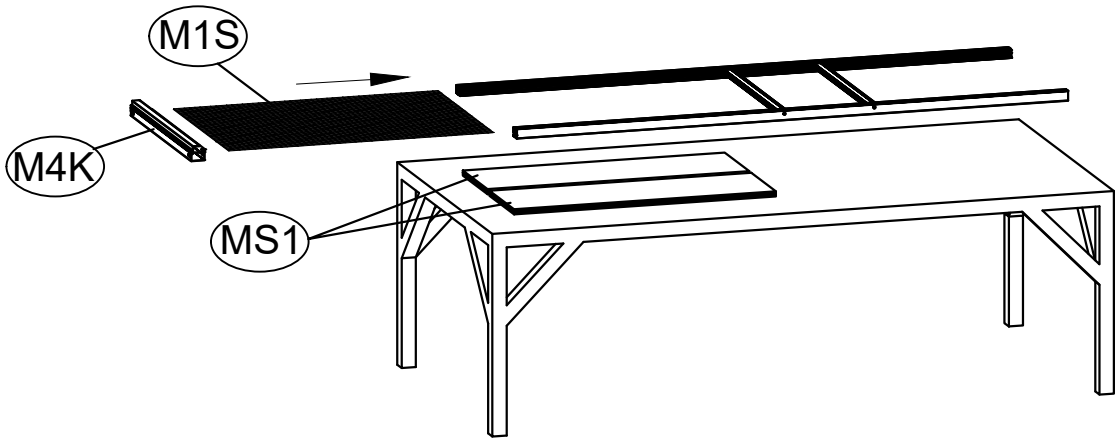

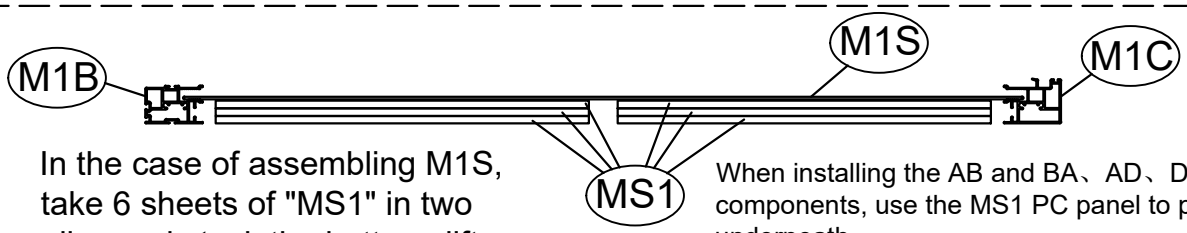

In the case of assembling M1S, take 6 sheets of "MS1" in two piles and stack the bottom, lift the "M1S".

When installing the AB and BA、AD、DA components, use the MS1 PC panel to pad underneath.
When installing the "EA" components, use the MS13 PC panel to pad underneath.

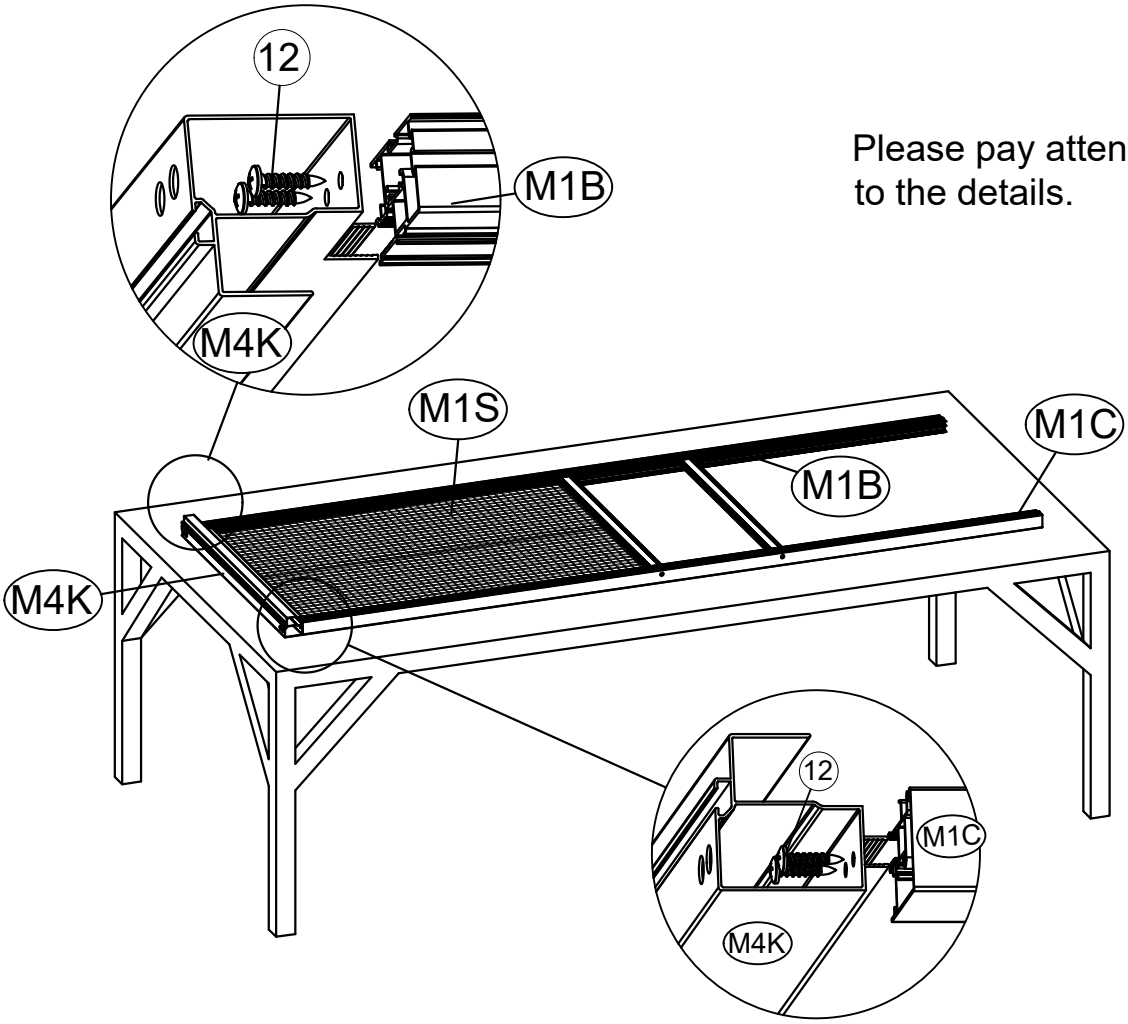


Please pay attention to the details.

<20>


AB 4x

For component AB,
repeat four times.

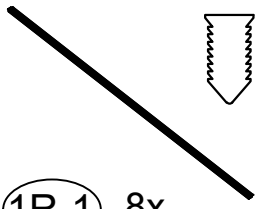



1R-1 8x


Before installing the parts 1R-1 and 1R-2，move the mesh by hand to ensure makes enough space around the mesh.

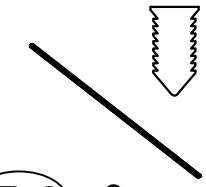


1R-2 8x

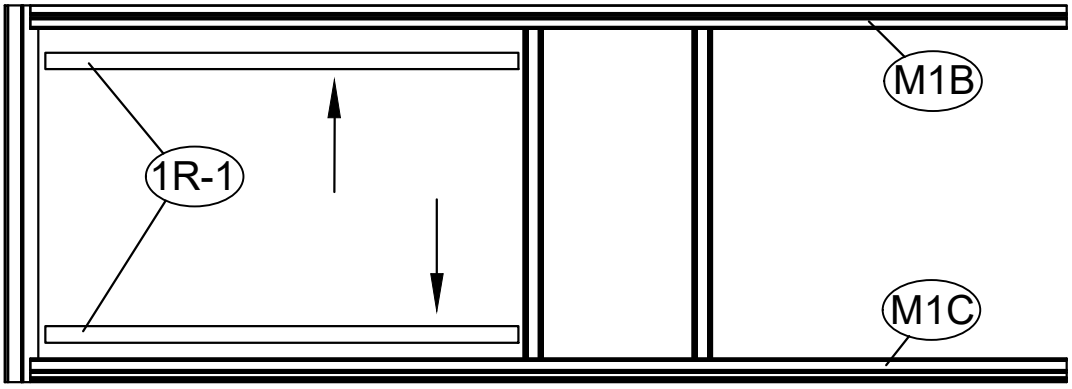

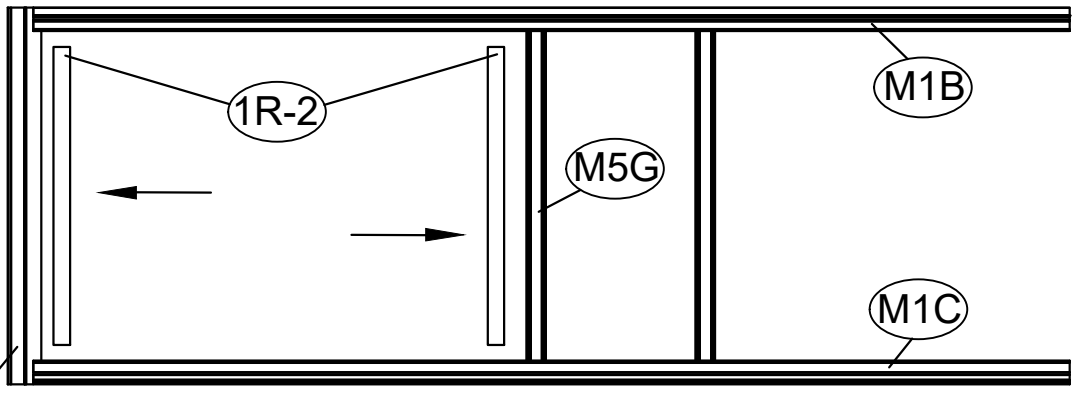


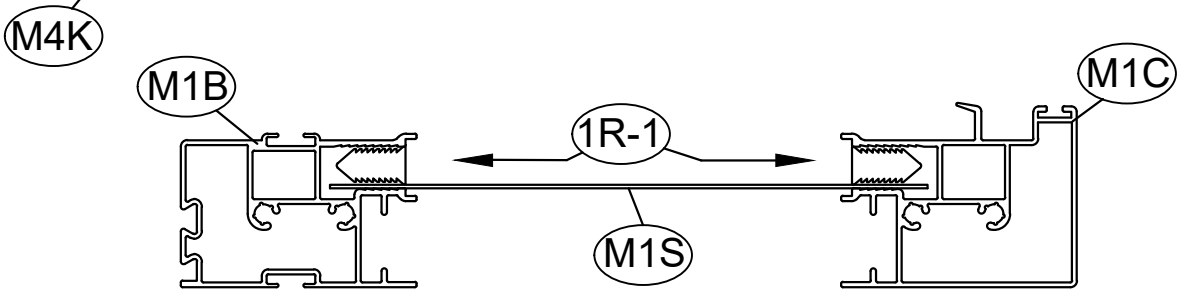

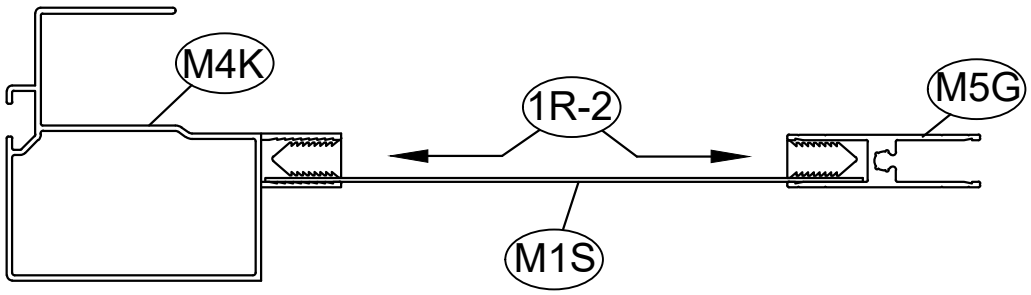


<21>

This diagram is for subsequent reference

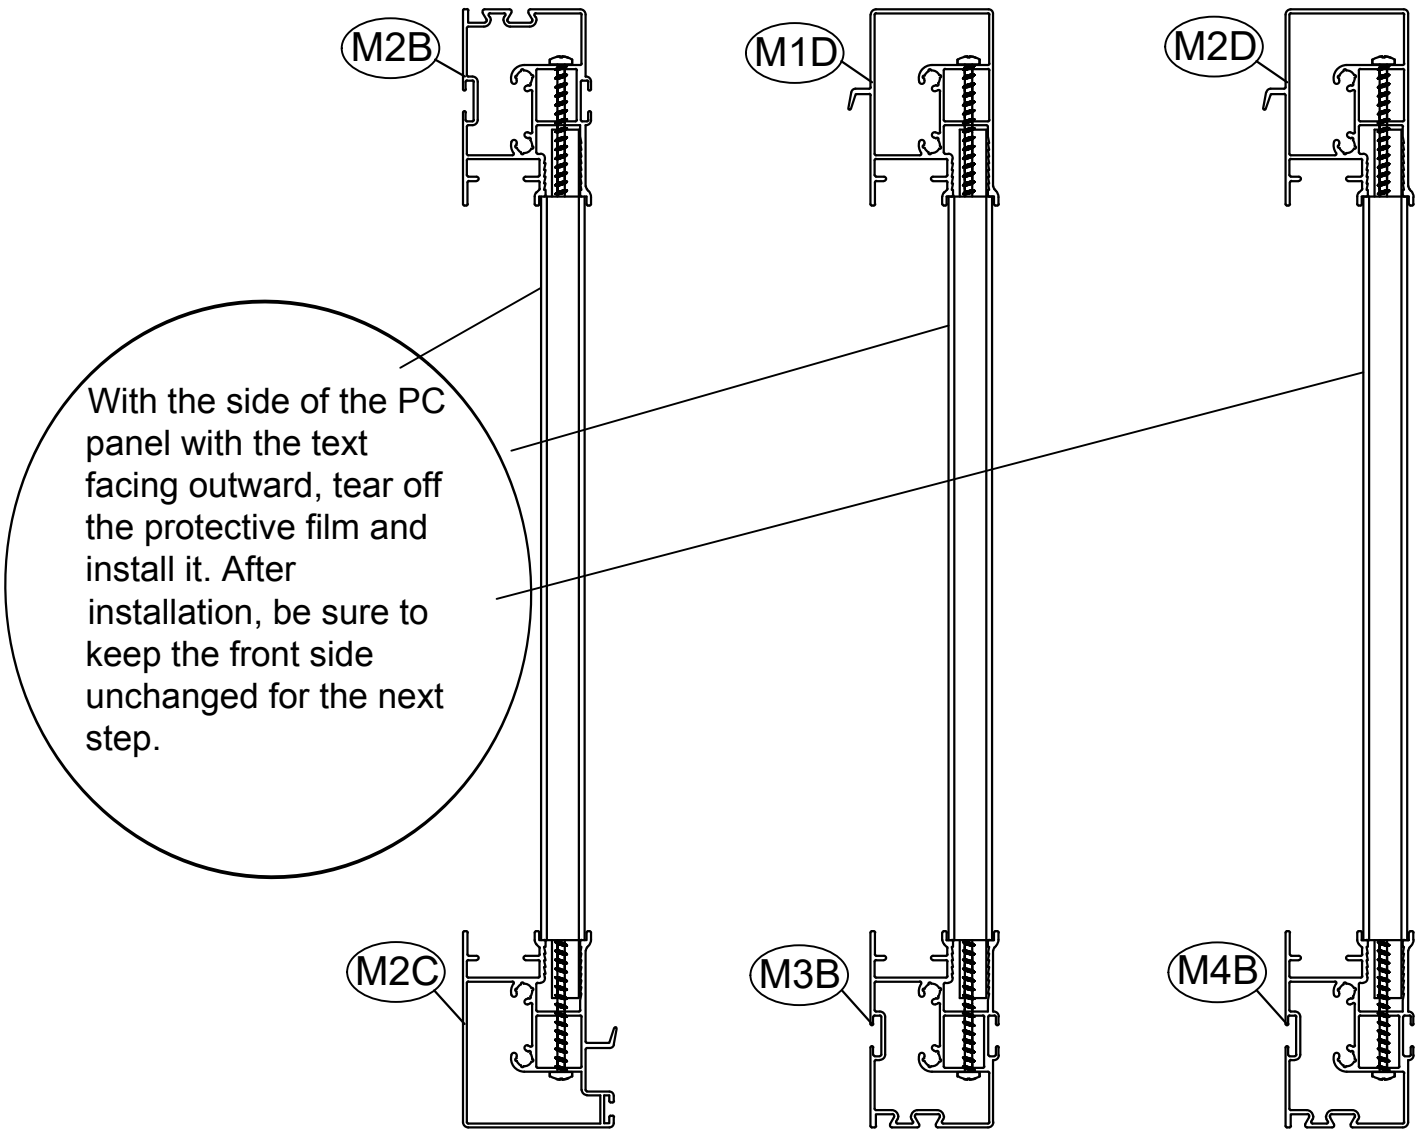


<14>

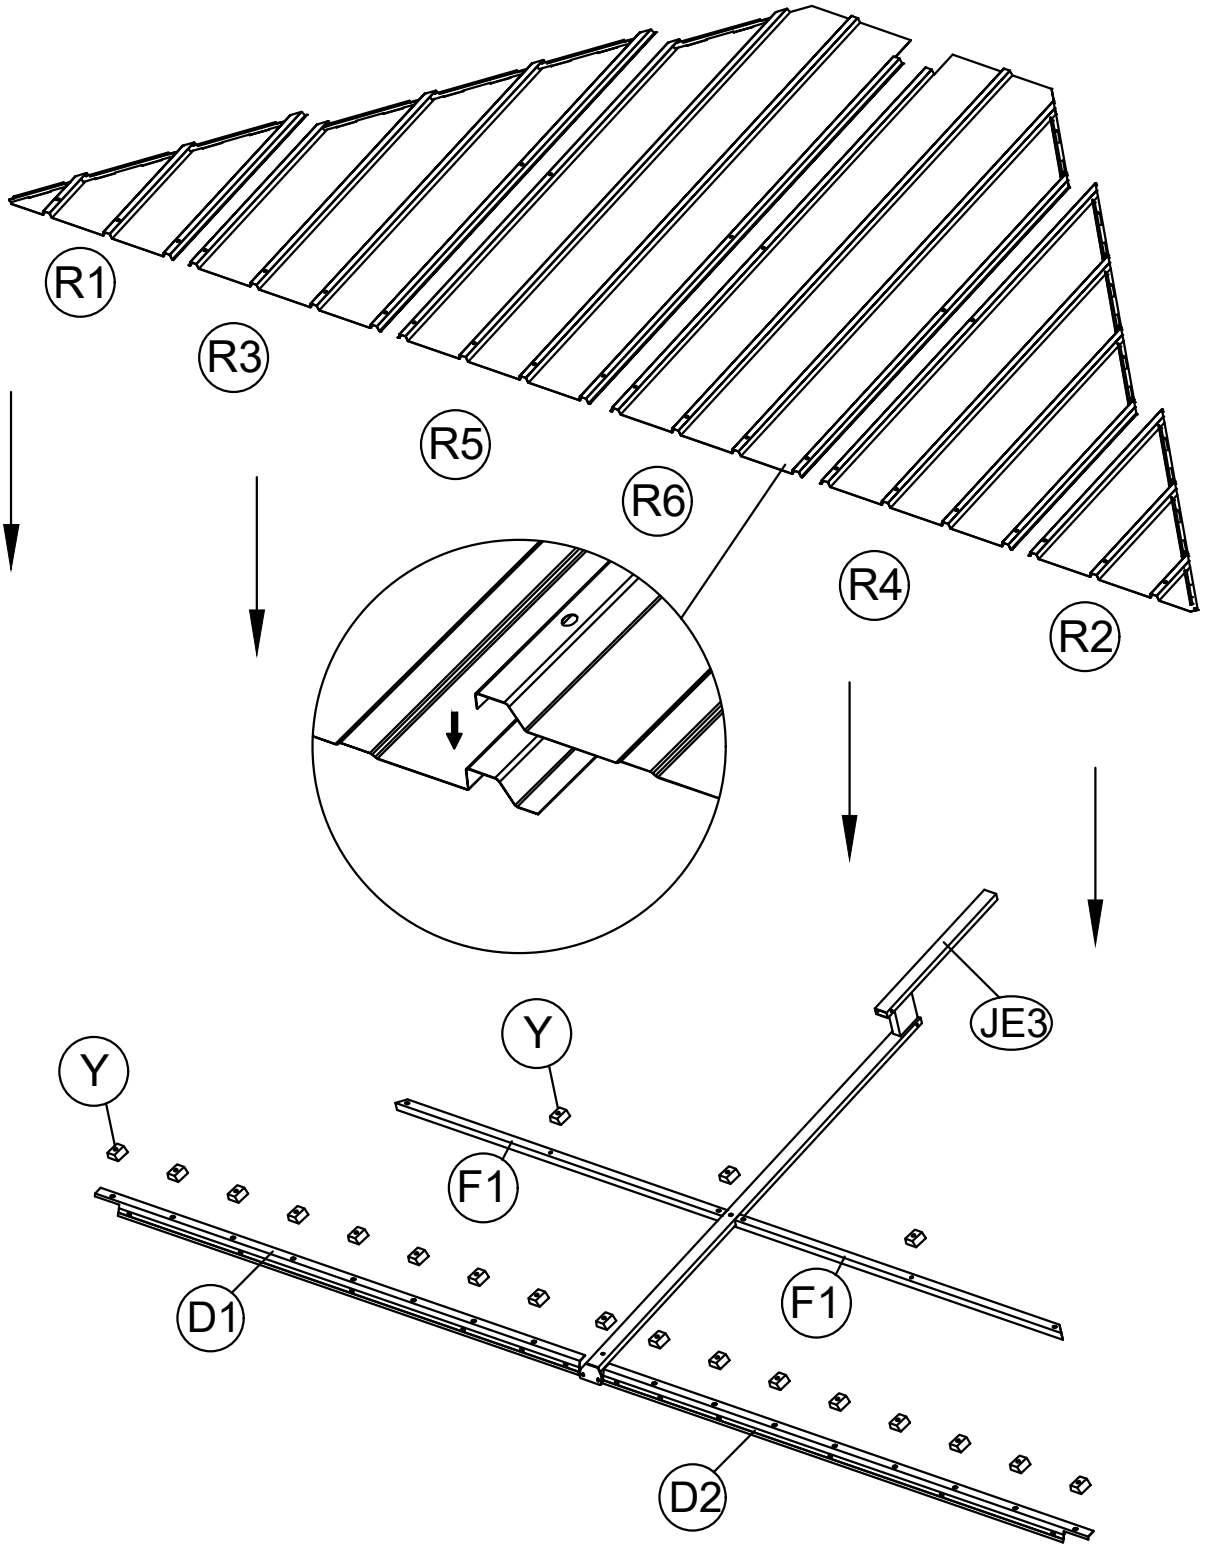


<22>

This diagram is for subsequent reference.

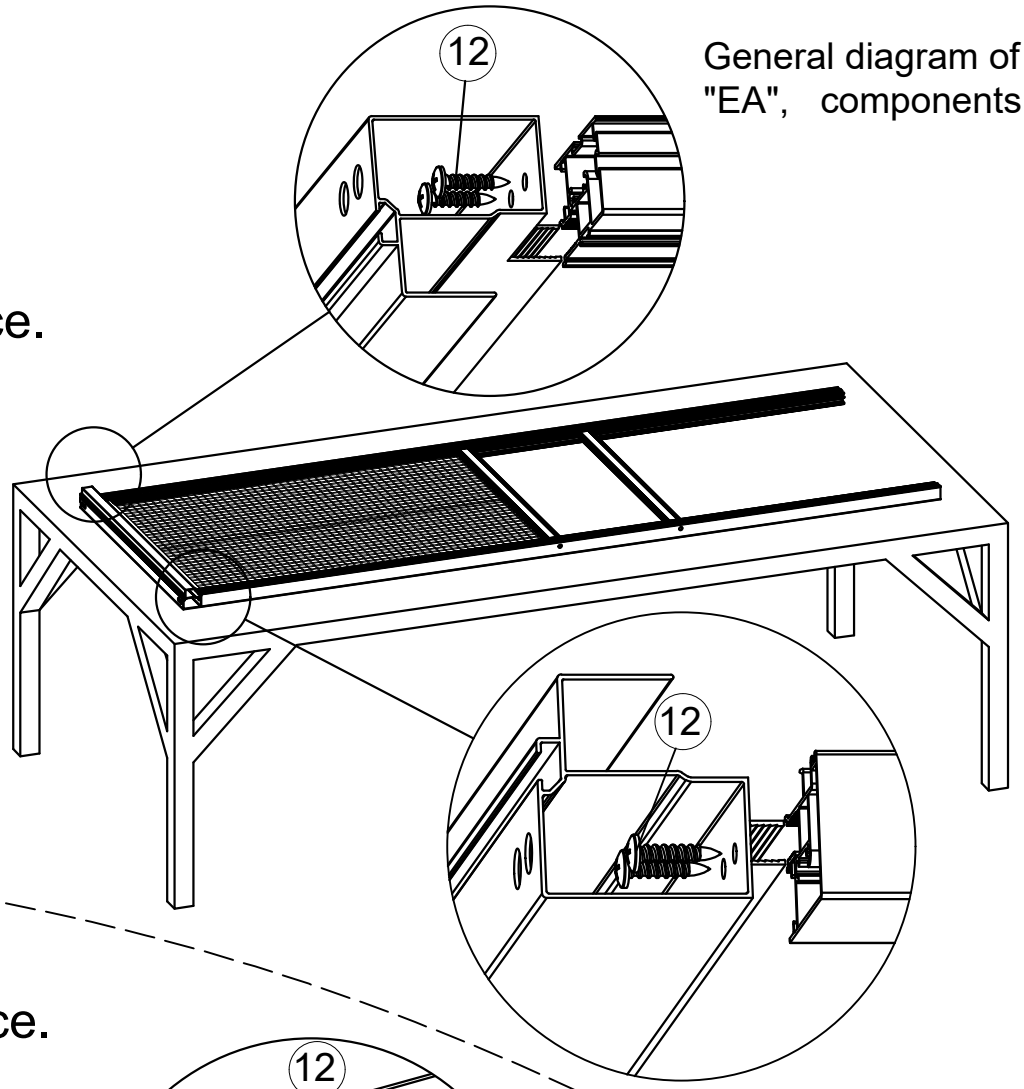

General diagram of "EA", components.

This diagram is for subsequent reference.

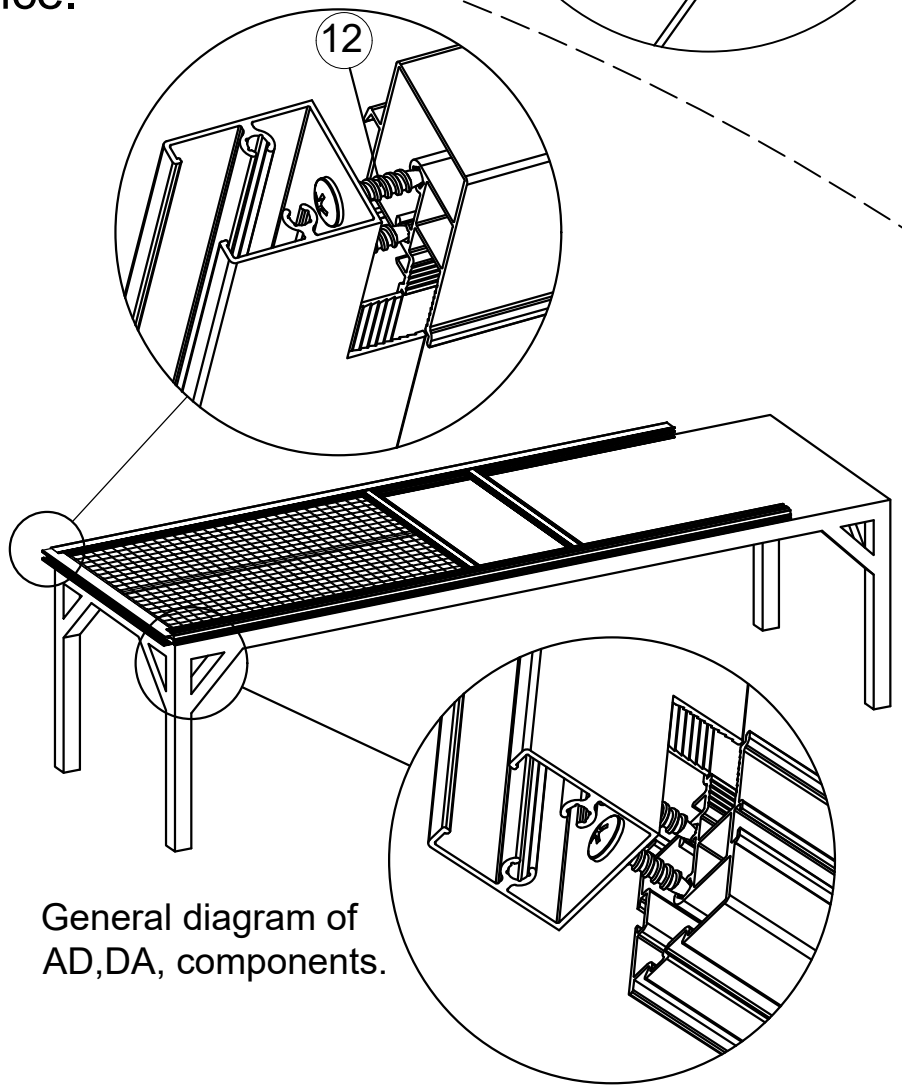


General diagram of AD,DA, components.

M4K	4x
1R-1	8x
1R-2	8x
M5G	8x
M1S	4x
MS2	4x
M2B	4x
M2C	4x
14	16x
12	16x

<23>

BA 4x


For component BA, repeat four times.

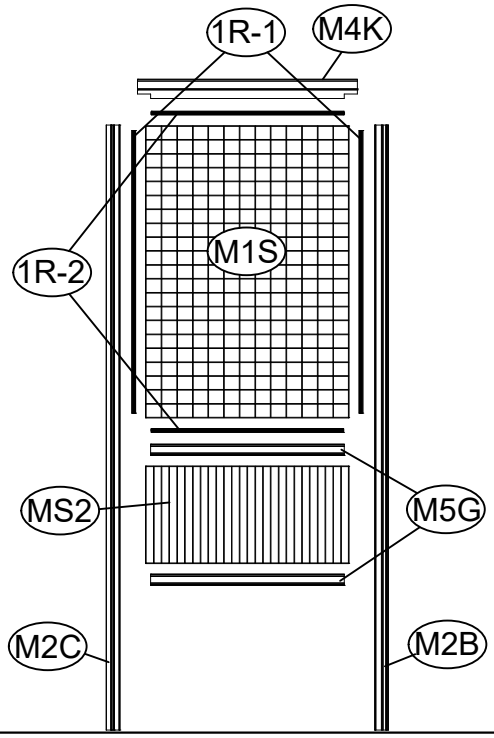

M4H	4x
1R-1	8x
1R-2	8x
M5G	8x
M1S	4x
MS2	4x
M5B	4x
M1D	4x
14	16x
12	16x

AD 4x


For component AD, repeat four times.

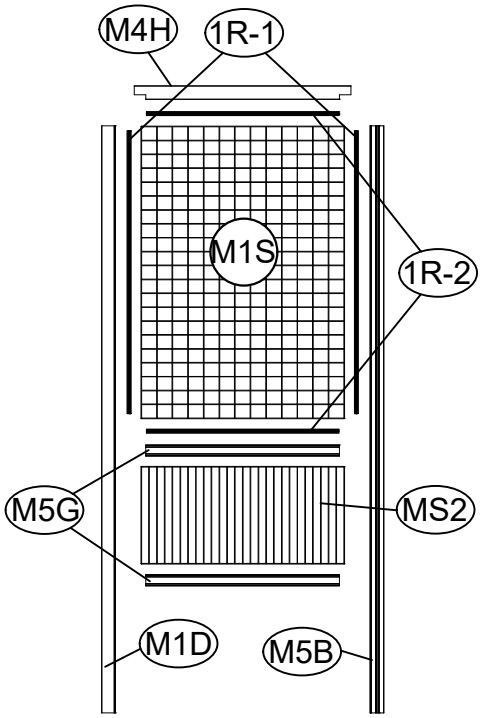

M4H	4x
1R-1	8x
1R-2	8x
M5G	8x
M1S	4x
MS2	4x
M6B	4x
M2D	4x
14	16x
12	16x

DA 4x


For component DA, repeat four times.

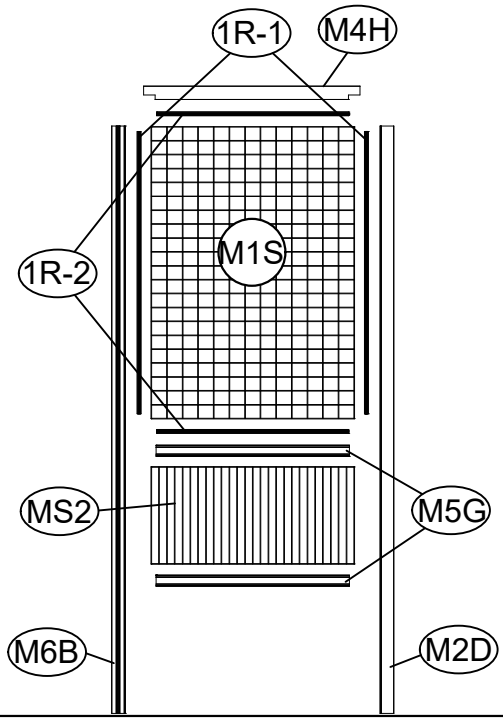

M7K	4x
1R-1	8x
1R-4	8x
M8G	8x
M4S	4x
MS14	4x
M2B	4x
M1B	4x
14	16x
12	16x

AE 4x

For component AE, repeat four times.

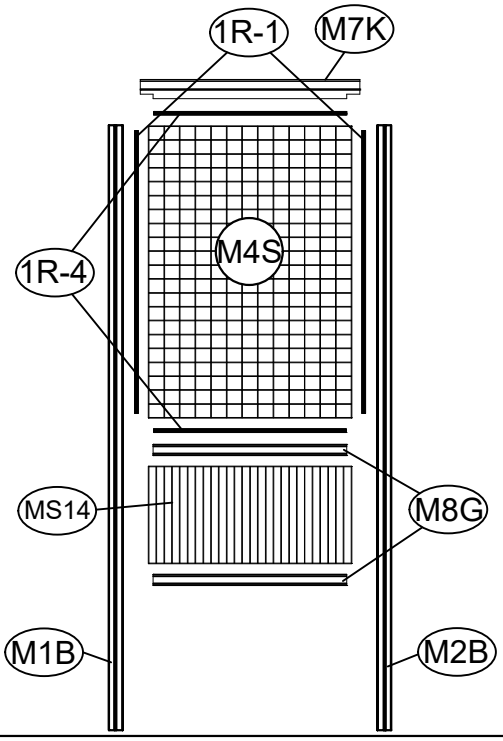

Component AB is symmetric to BA, and AD is symmetric to DA.

Install door frames BA, AD, DA, and AE according to the instructions on pages 23 to 29.

M1E 32x

M1G 16x


M4L 32x

MS1 32x


M4x35

13 96x

For component AF, repeat sixteen times. AF 16x

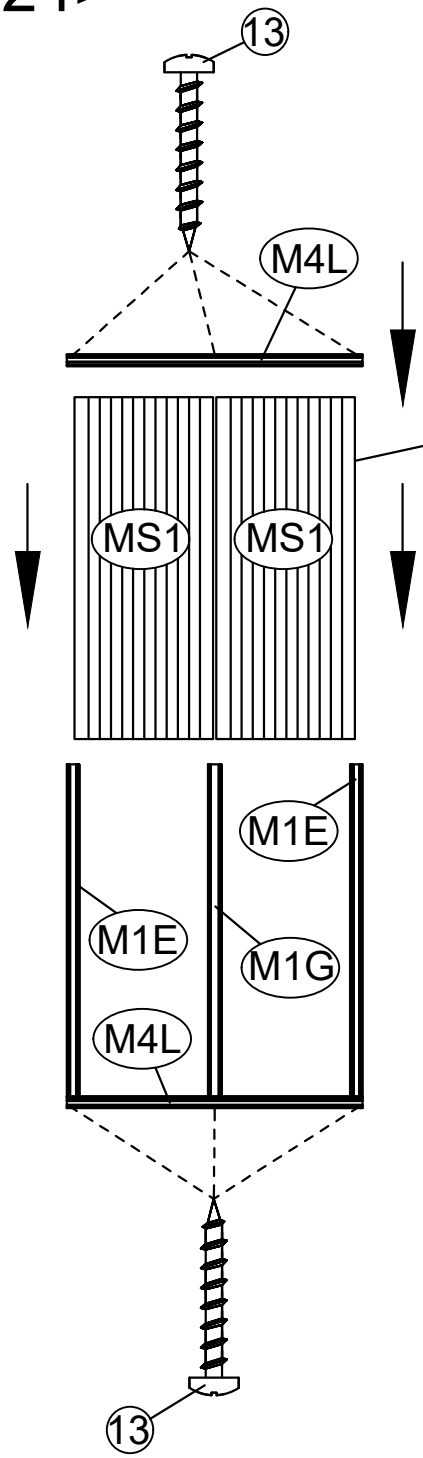

With the side of the PC panel with the text facing outward, tear off the protective film and install. After installation, be sure to leave the front side unchanged for the next step.

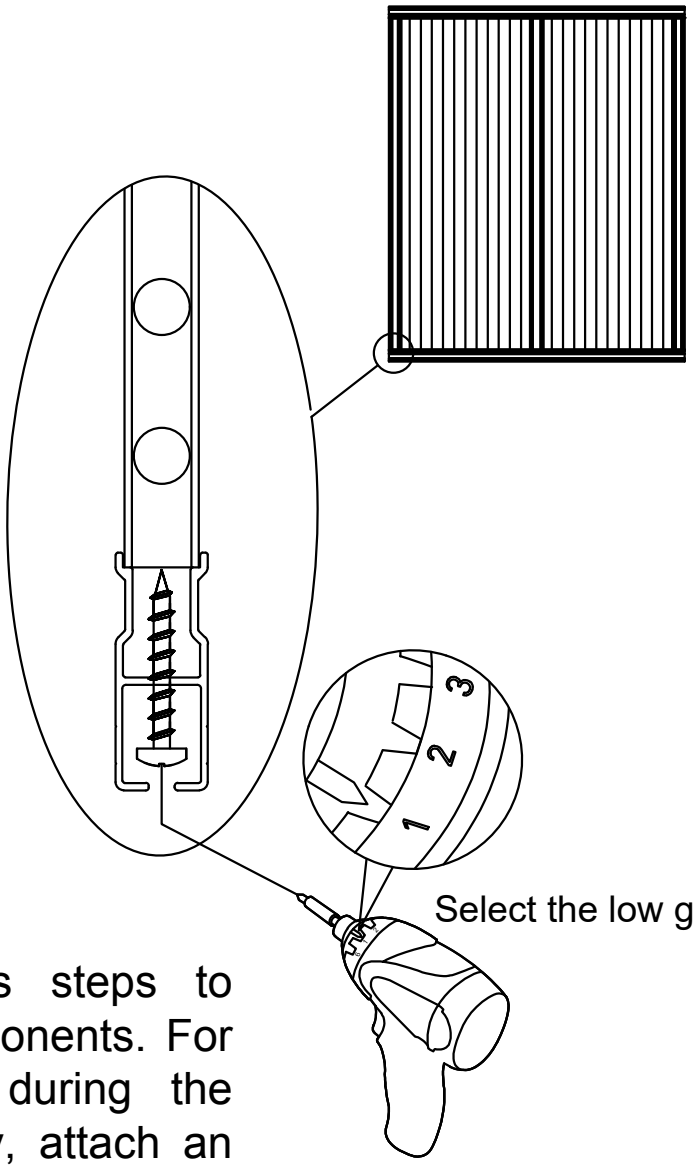

Repeat the previous steps to assemble 8 AF components. For easier identification during the subsequent assembly, attach an “AF” label to a clearly visible position on the front side.

M1E 8x


M7L 8x

MS13 4x


M4x35

13 16x

For component AG, repeat four times. AG 4x

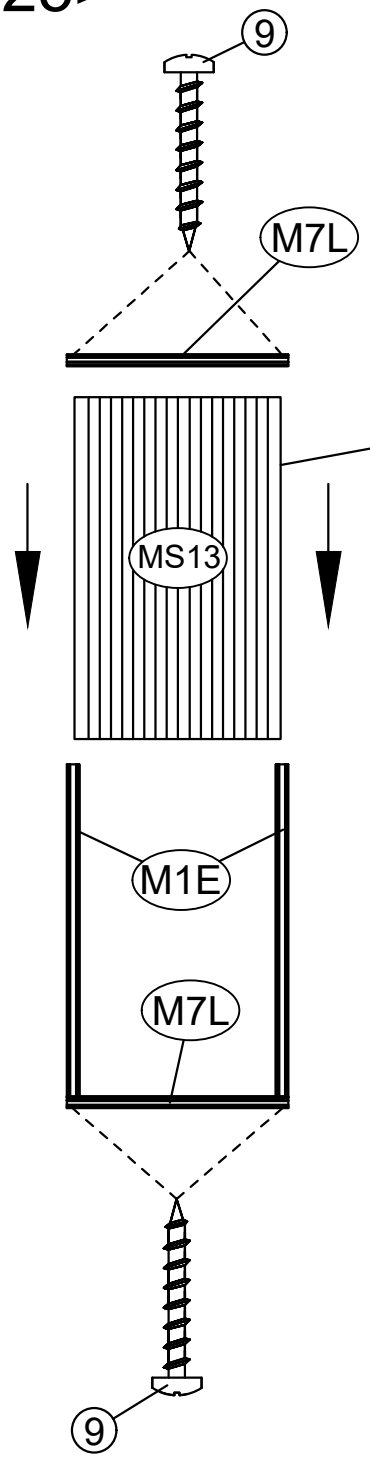


With the side of the PC panel with the text facing outward, tear off the protective film and install. After installation, be sure to leave the front side unchanged for the next step.

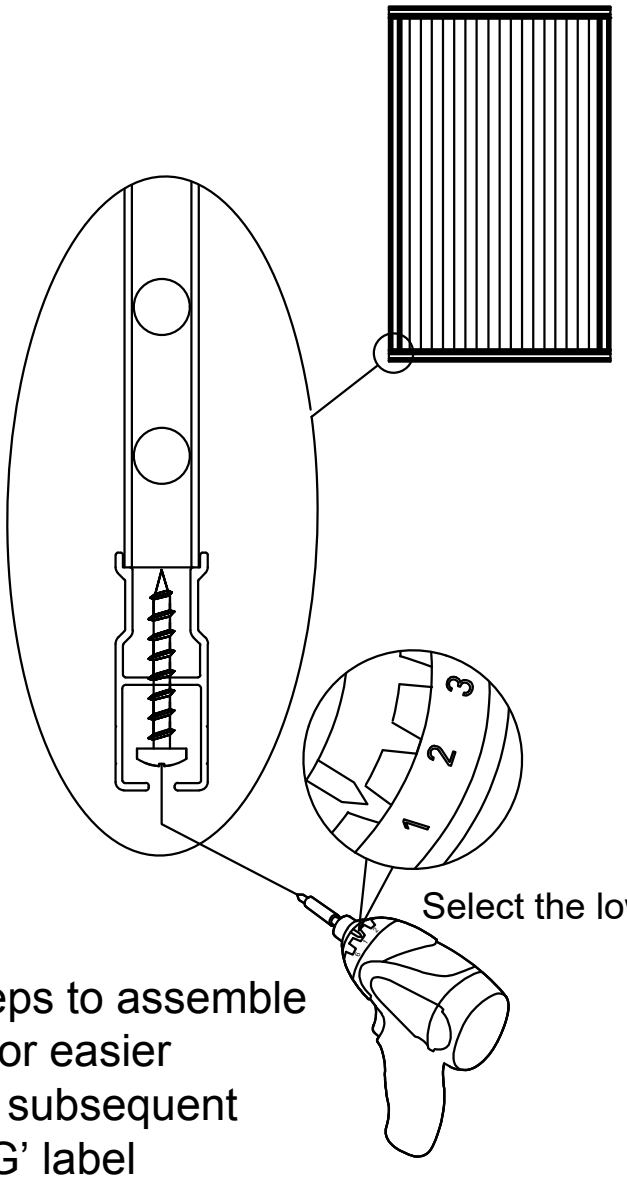

Select the low gear.


Repeat the previous steps to assemble four AG components. For easier identification during the subsequent assembly, attach an ‘AG’ label to a clearly visible position on the front side.



MD1 80x



MD2 160x




MD3 40x


<26>

AF 16x

AG 4x

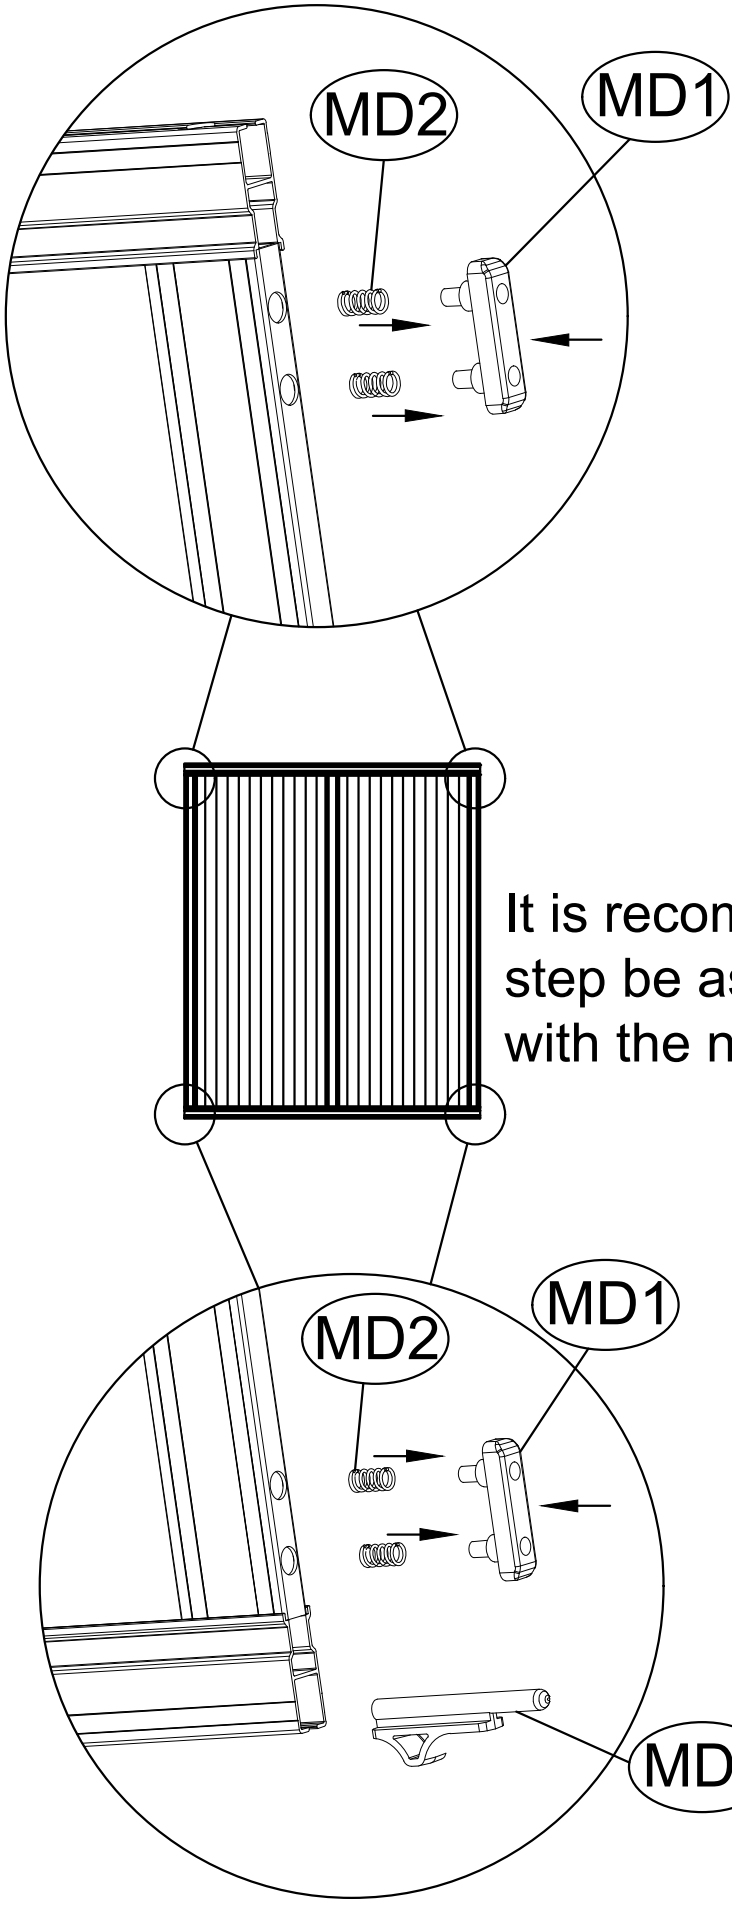


It is recommended that this step be assembled along with the next step.

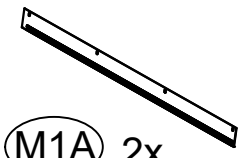


M1A 2x



M2A 2x

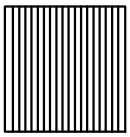

MS3 4x

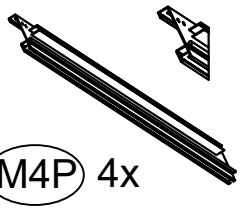

M4P 4x




M4x20


12 16x

<27>


AB 2x BA 2X

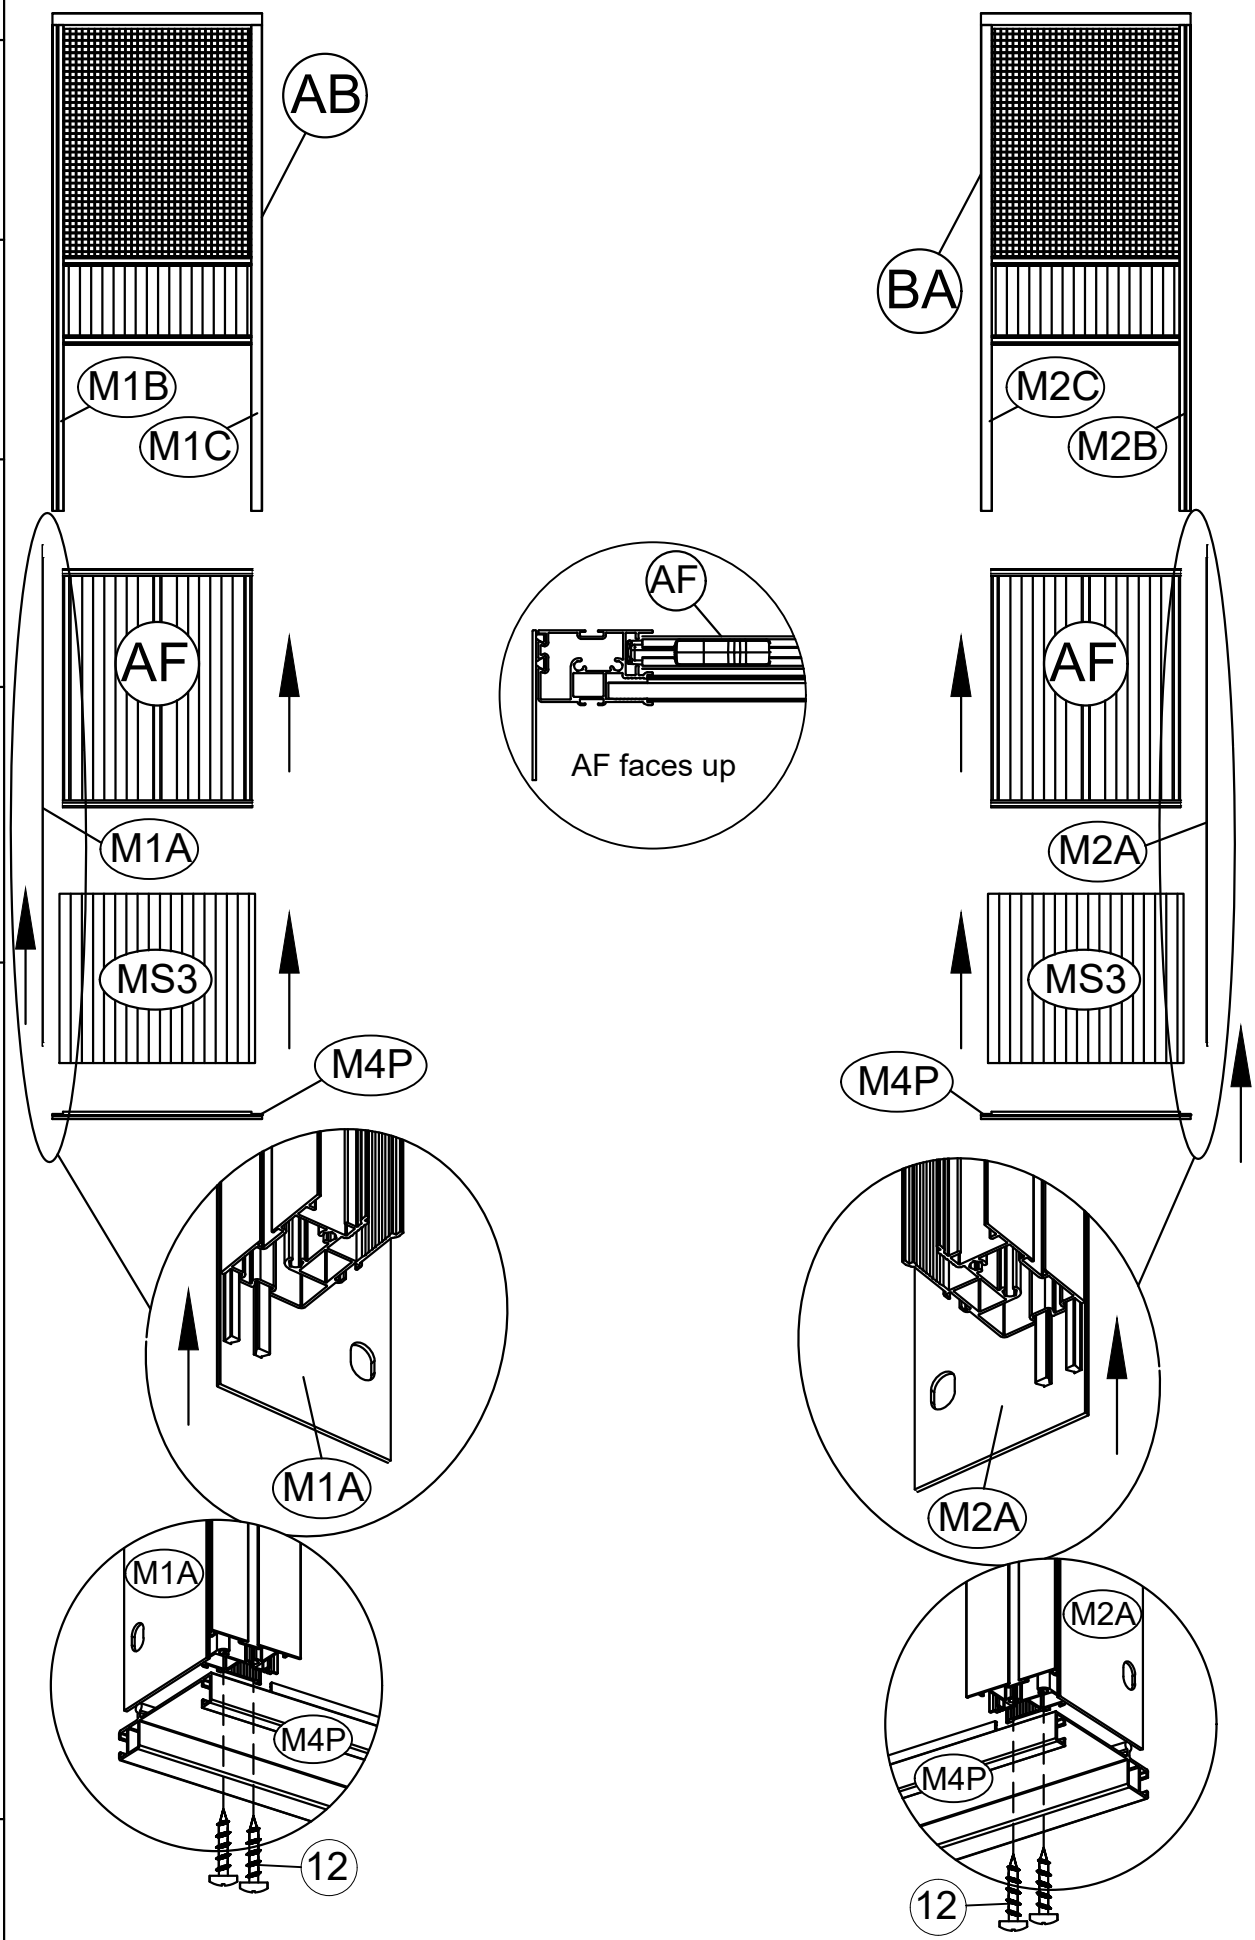


<28> 2x

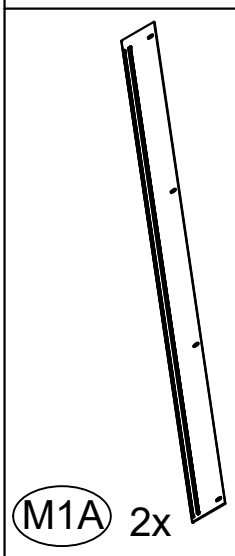


M1A 2x

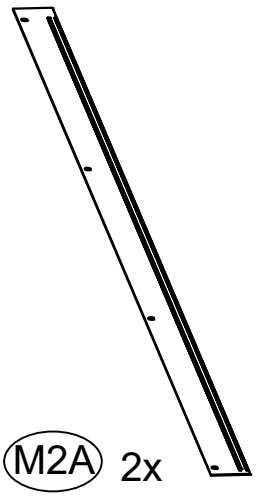

M2A 2x

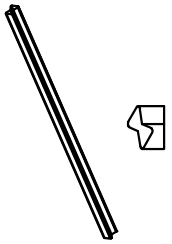

M1Q 4x




15 4x




M5x6

16 16x

37

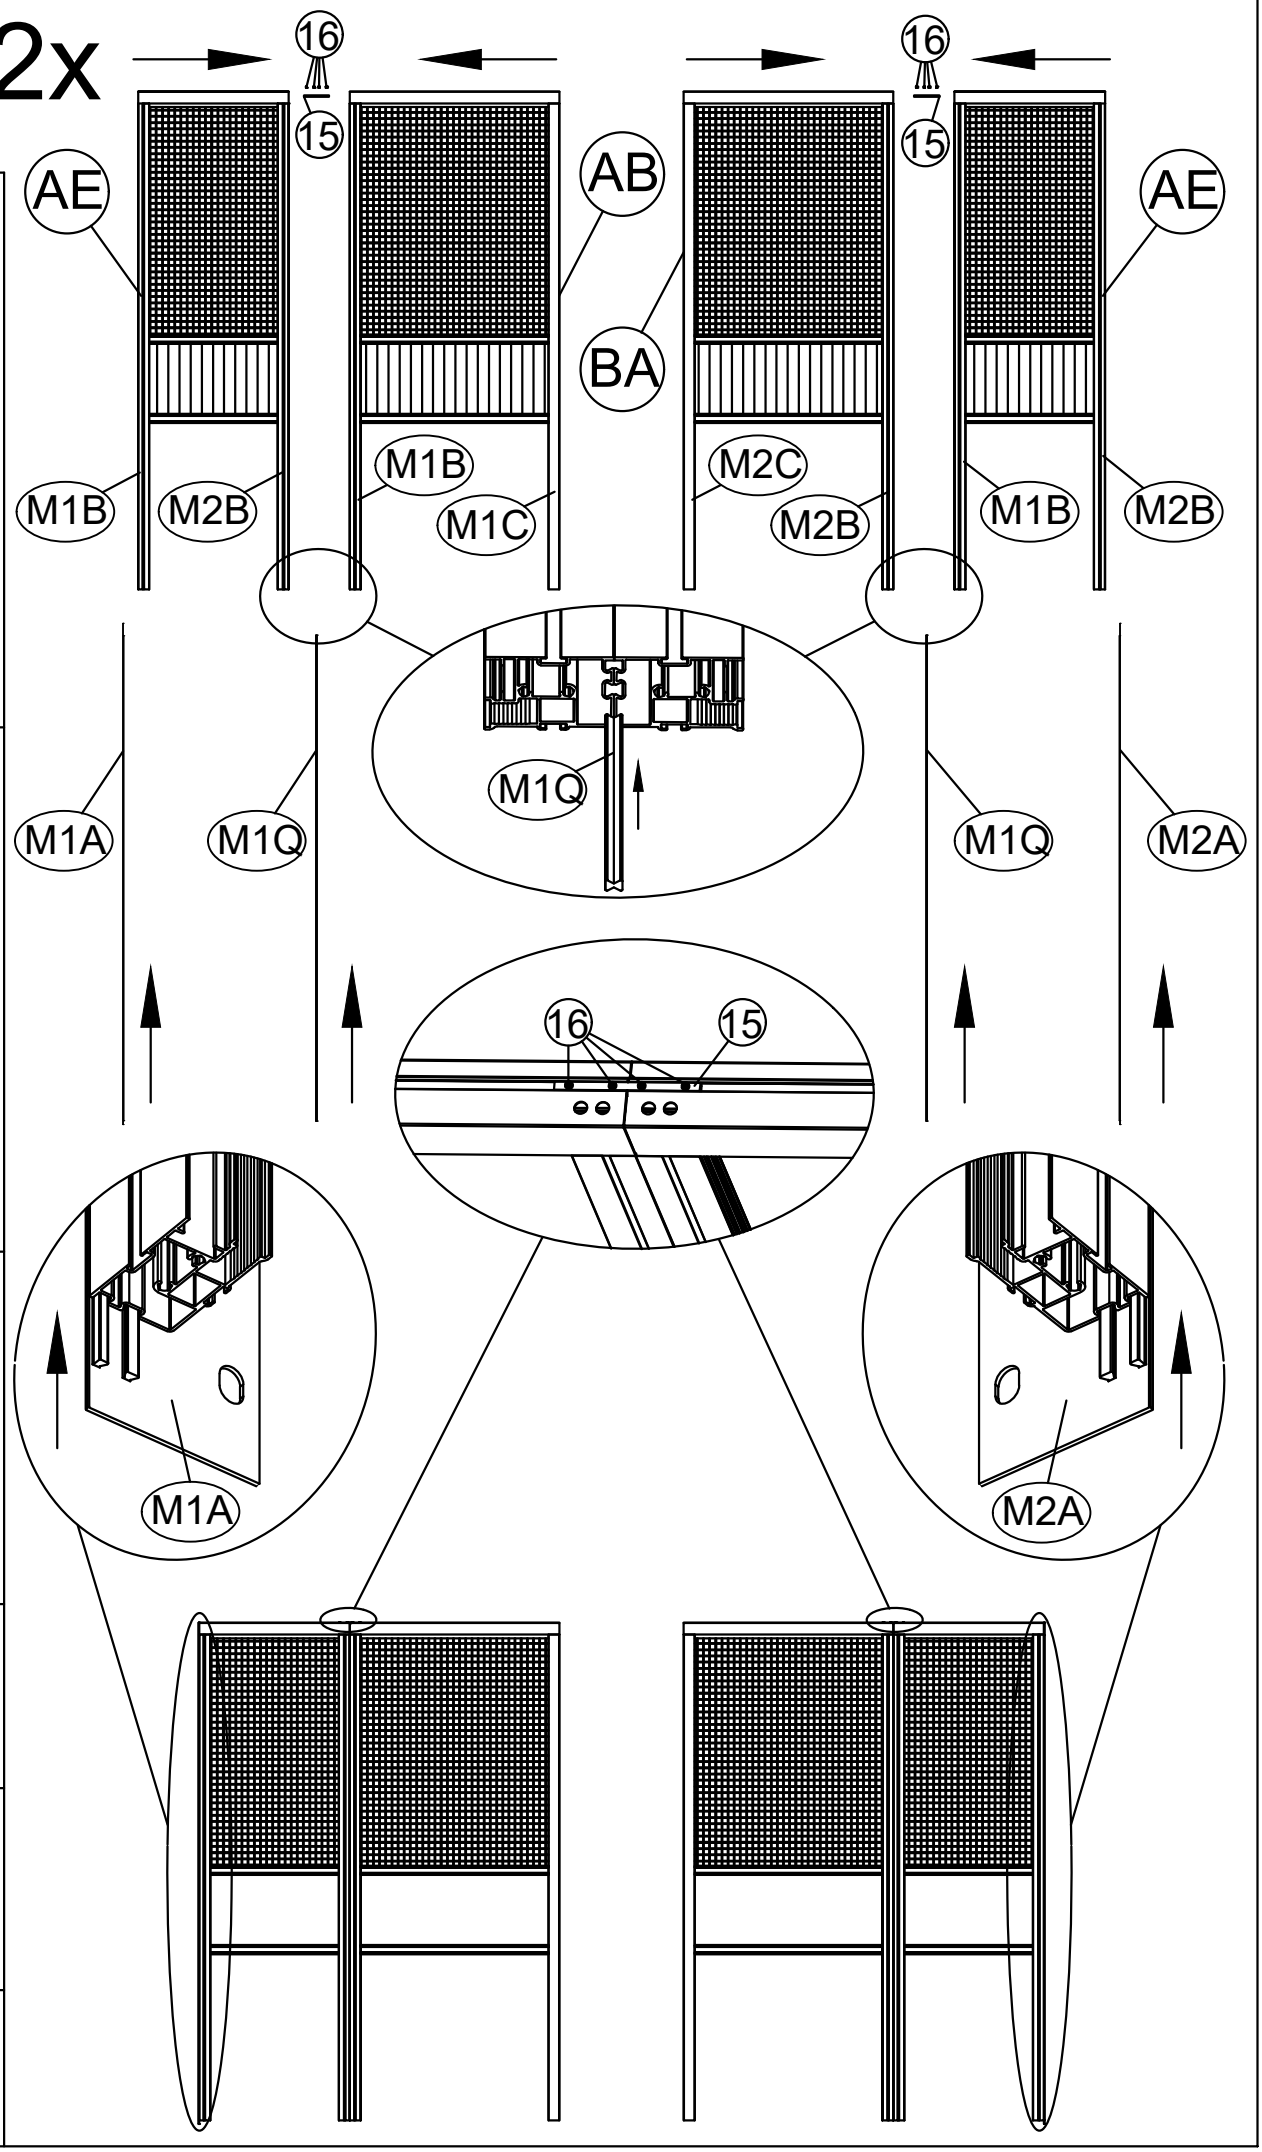




15 8x




M5x6


16 32x




MS15 4x

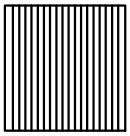


MS3 4x

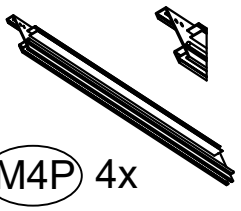

M4P 4x

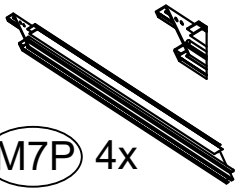


M7P 4x




M4x20


12 32x

38

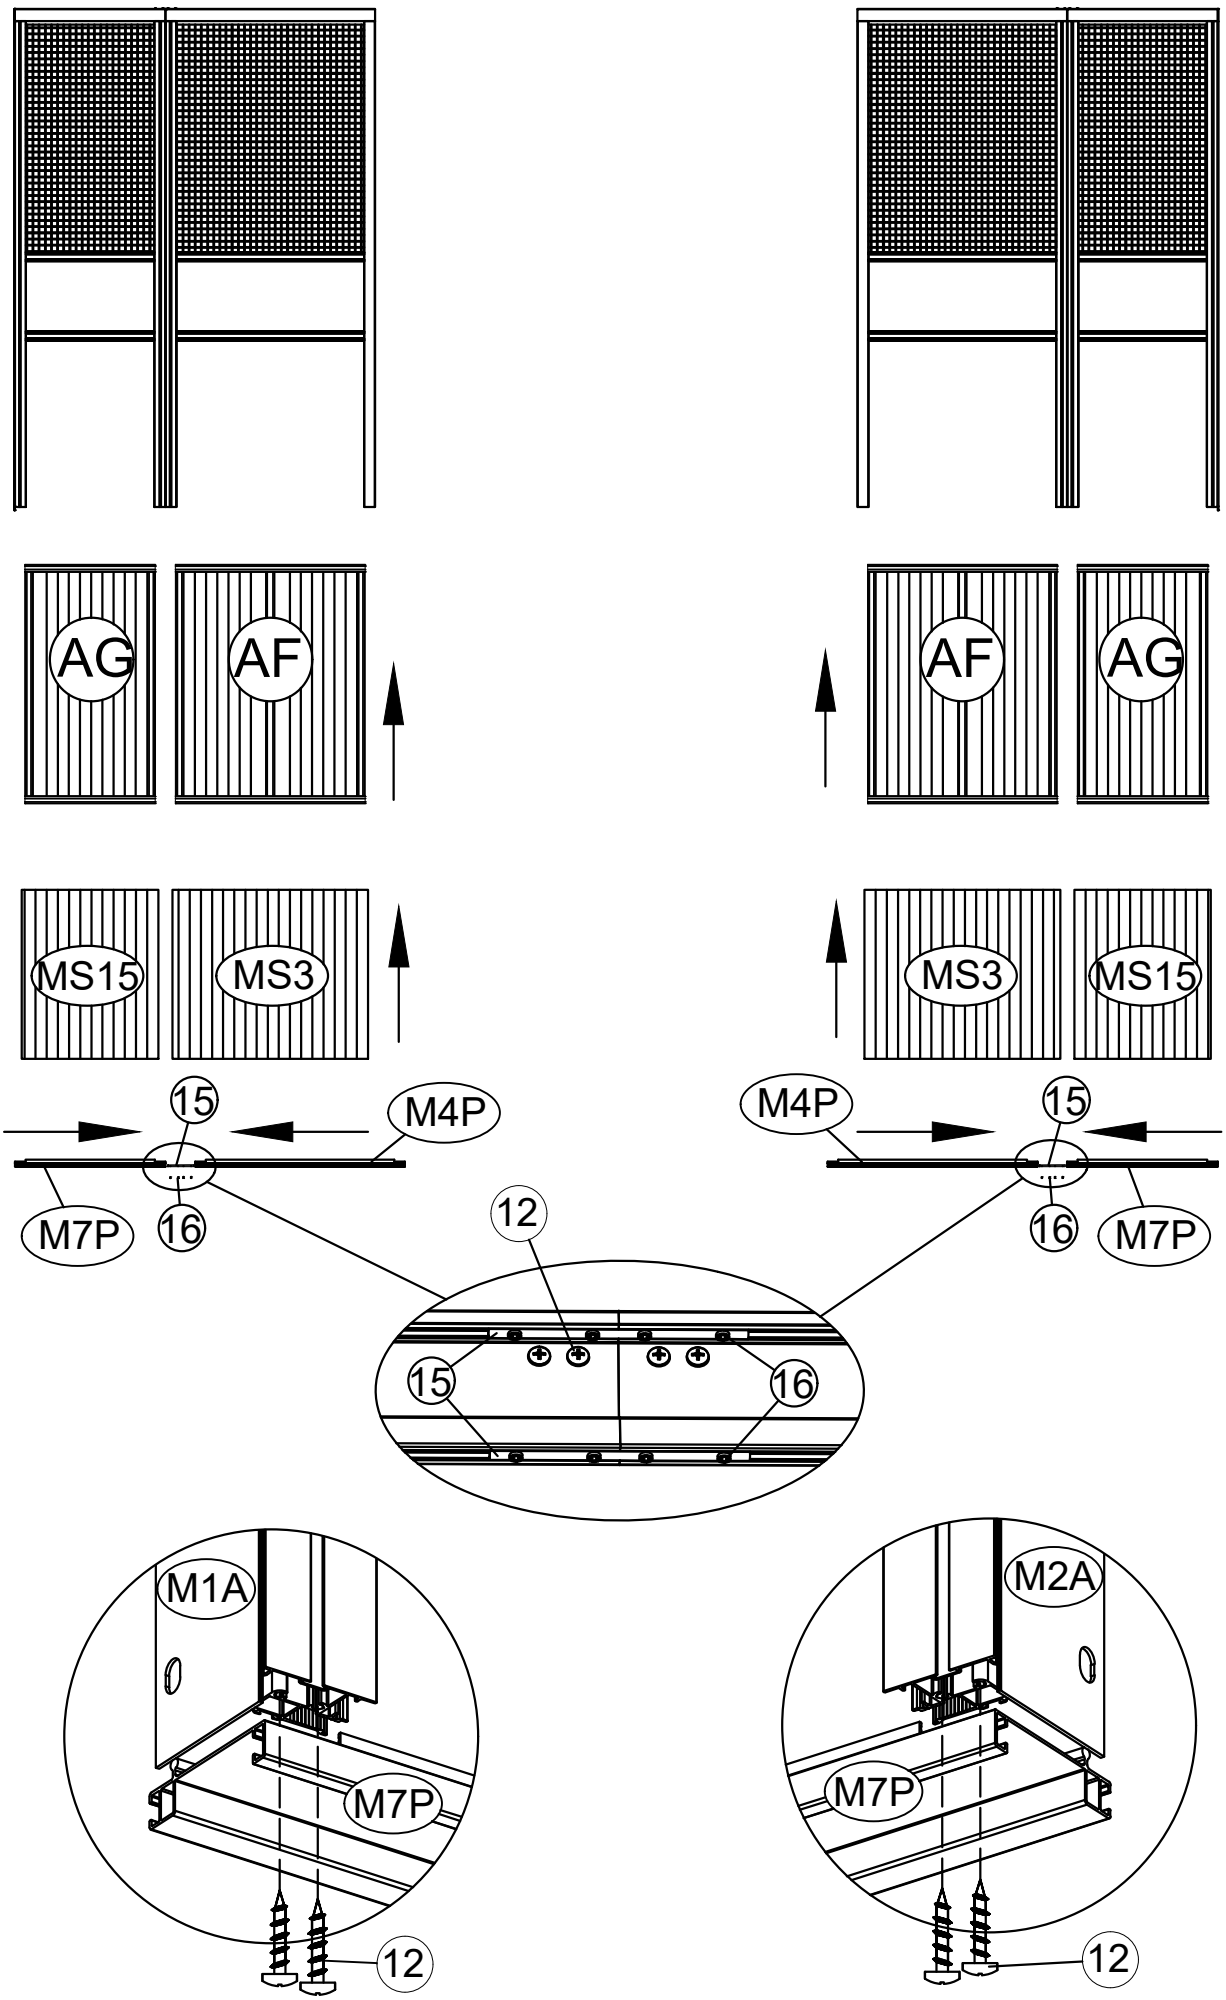


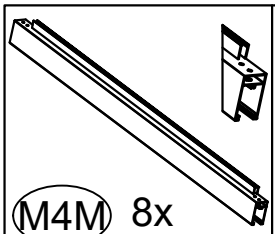

M4M 8x

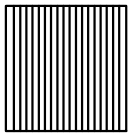


MS4 8x





M4x20


12 32x


AD 4X DA 4X

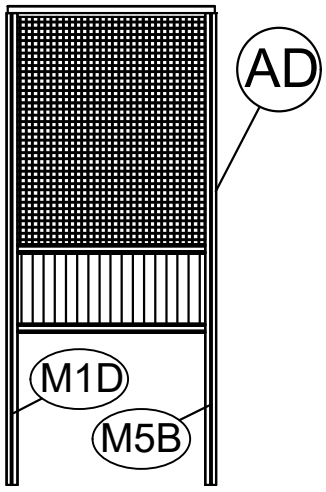


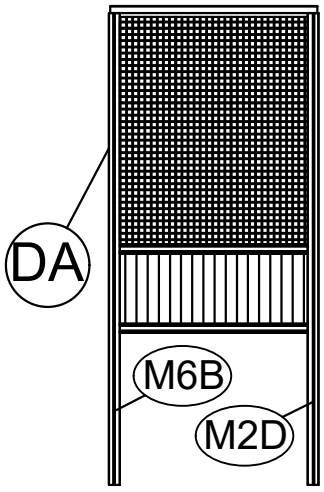


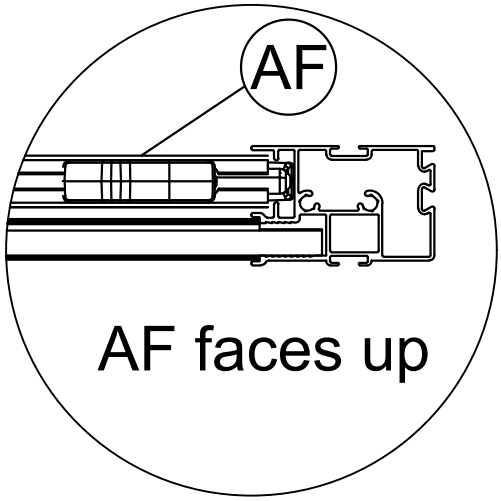


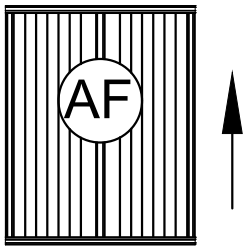

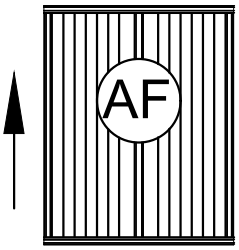

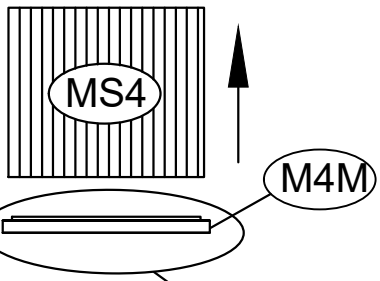


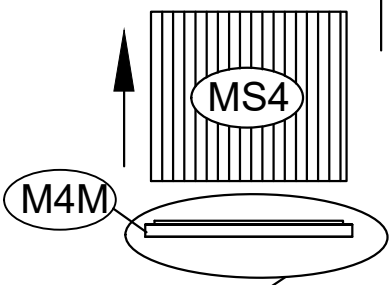

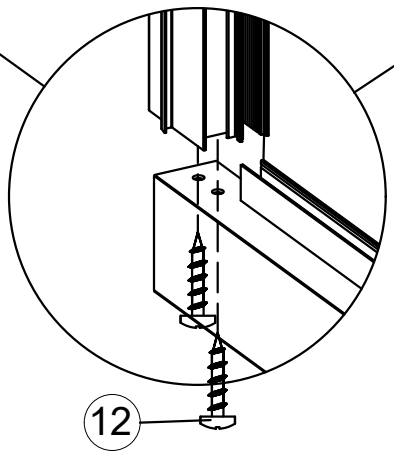



MD5 16x



MD4 16x




4-1 16x



M4x20


12 32x





M4x35


13 16x

AD 4X DA 4X

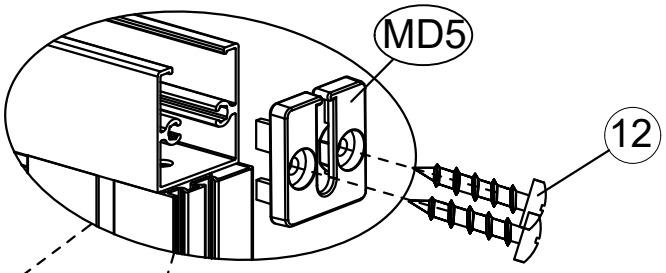

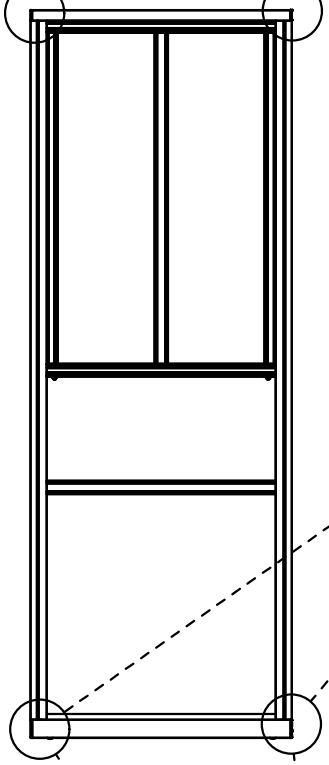

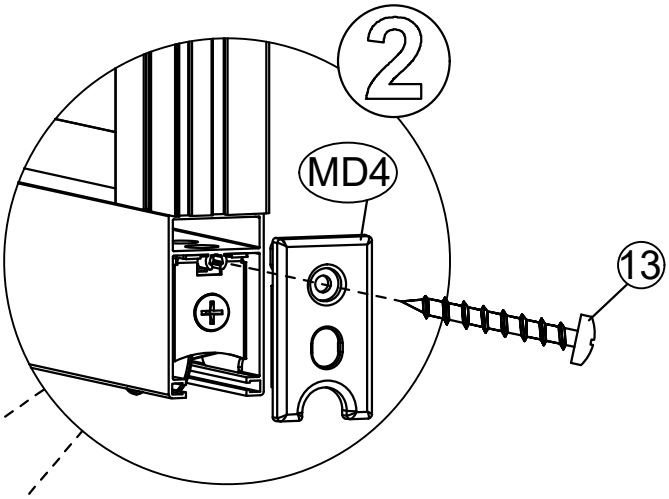


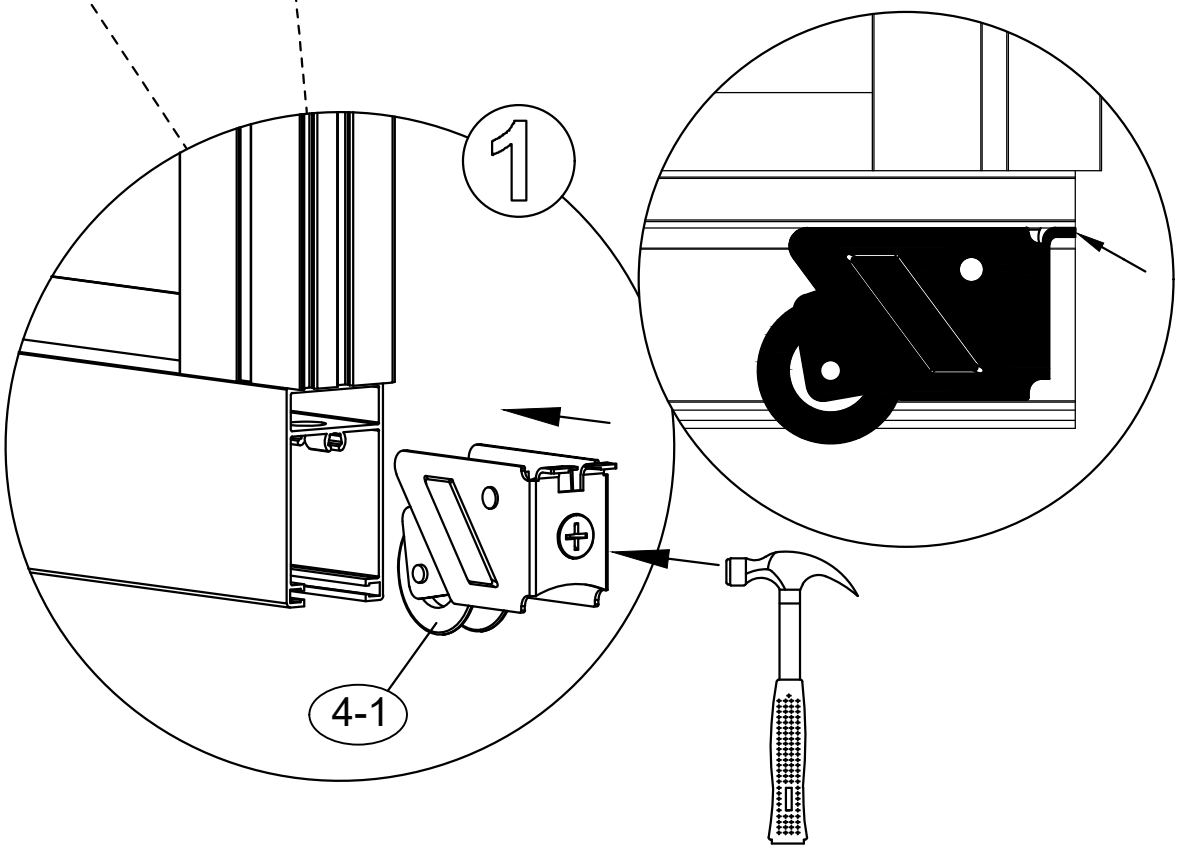

Tap gently so that the pulley is flush with the profile.




5-1 2x

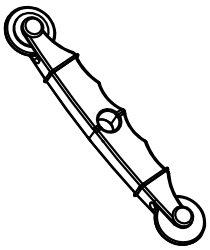


24 1x


Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

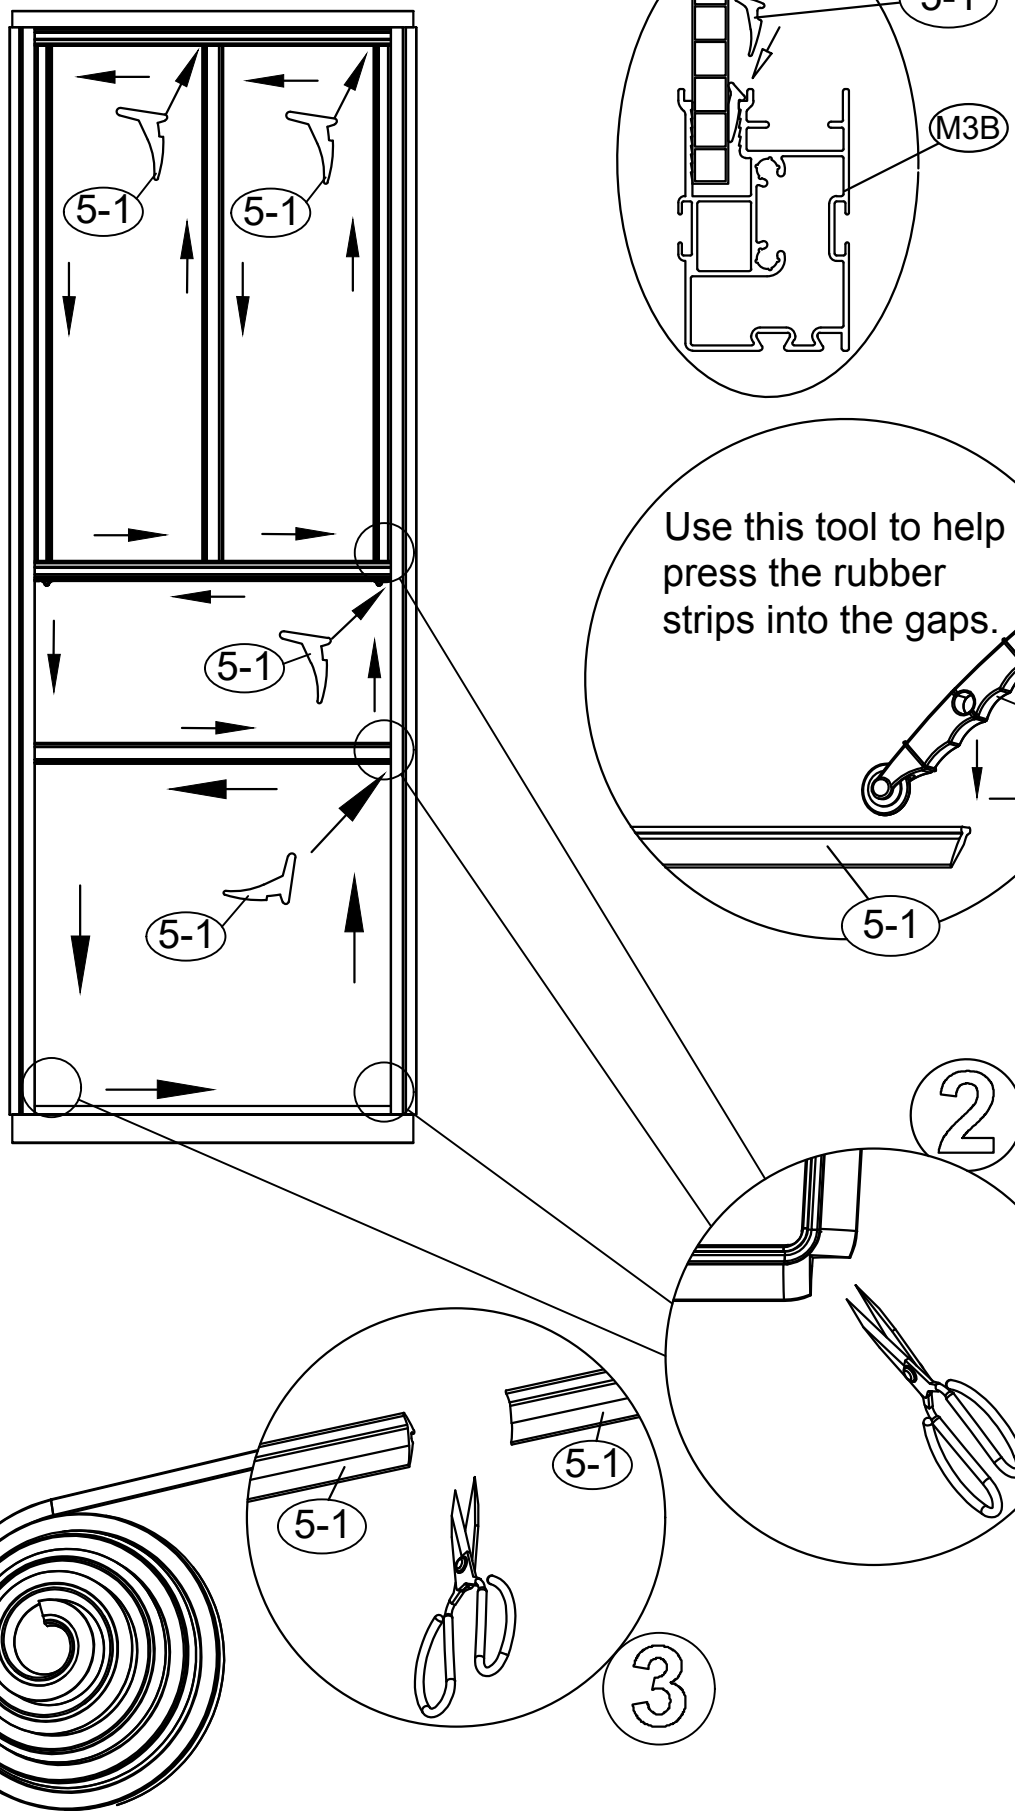

All door frames, AB, BA, AD, DA, AE installed in the same way.

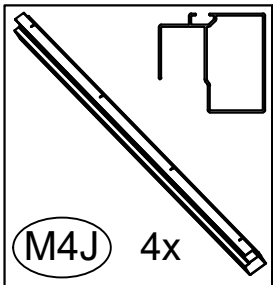


M4J 4x



6.2*11*15

3-1 16x




11 16x M6




M6x15


1 16x

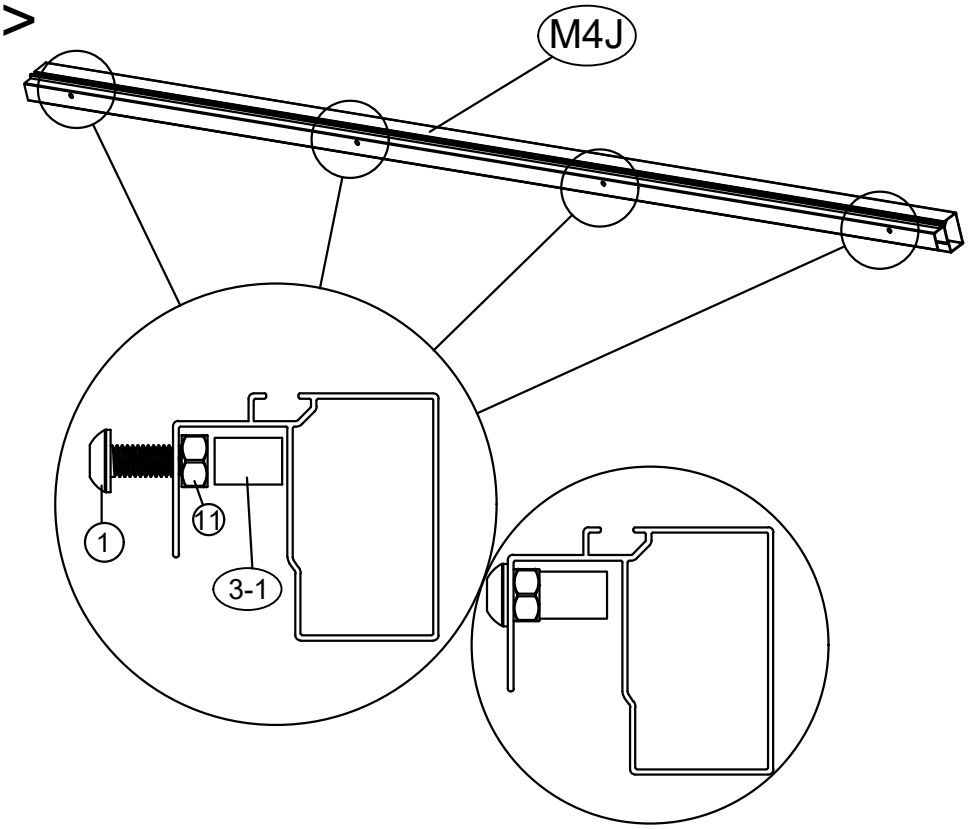

x2

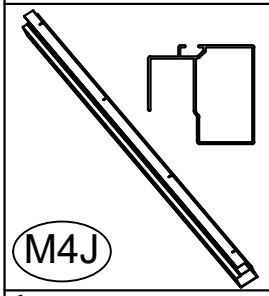

M4J

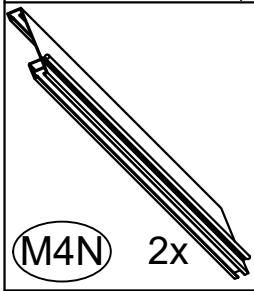

M4N 2x





15 12x




M5*6

16 48x

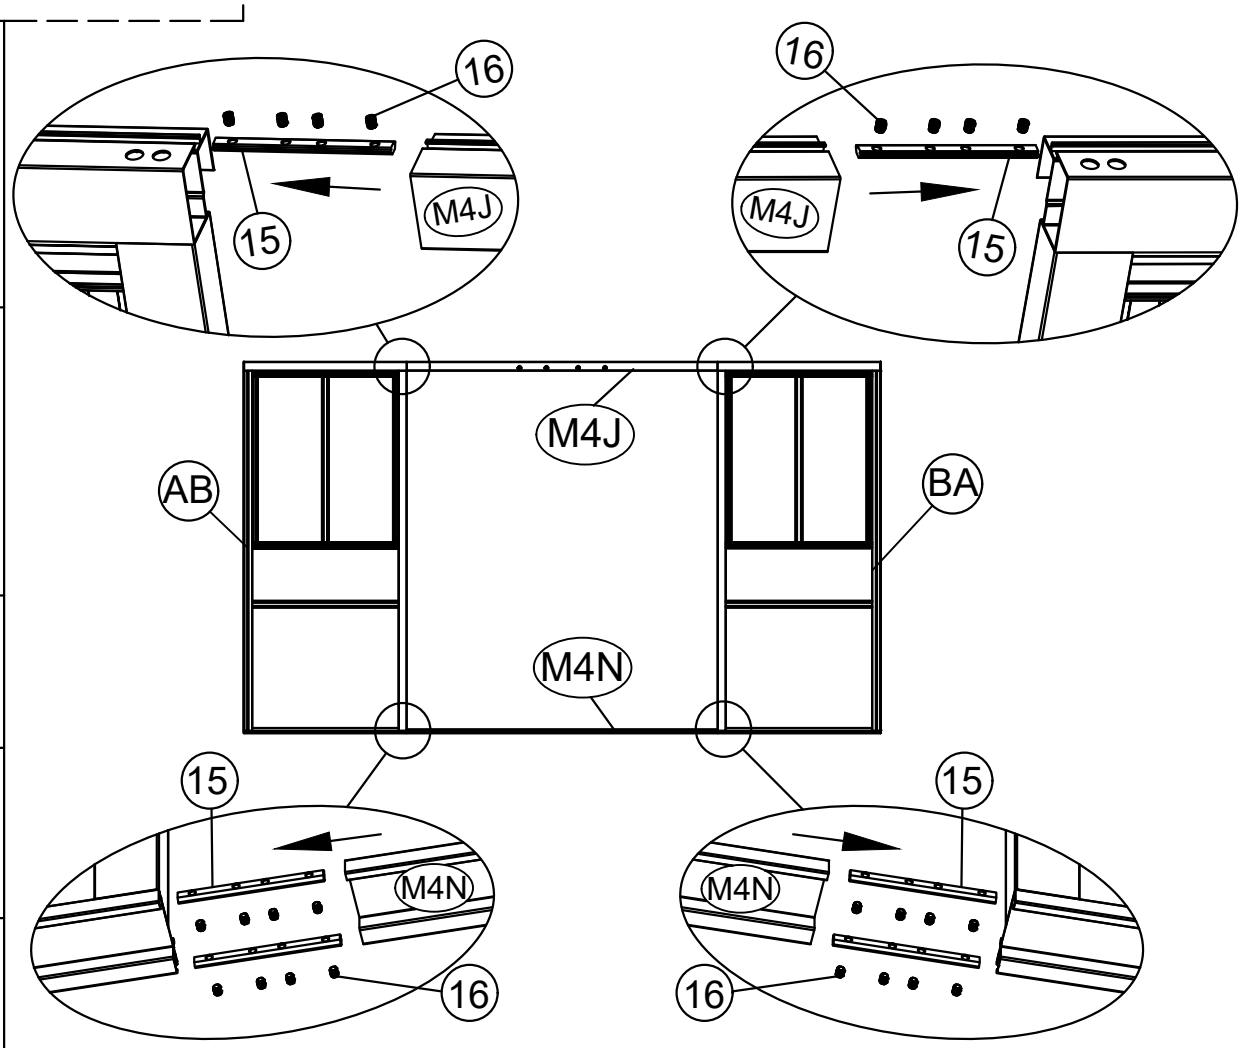


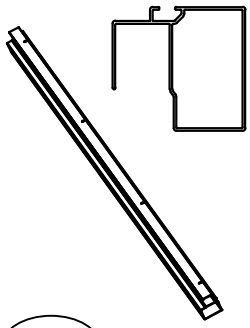

M4J

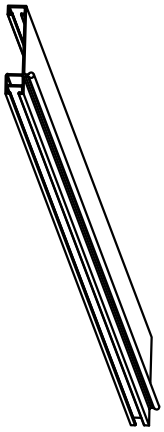

M4N 2x




15 12x




M5*6

16 48x

x2

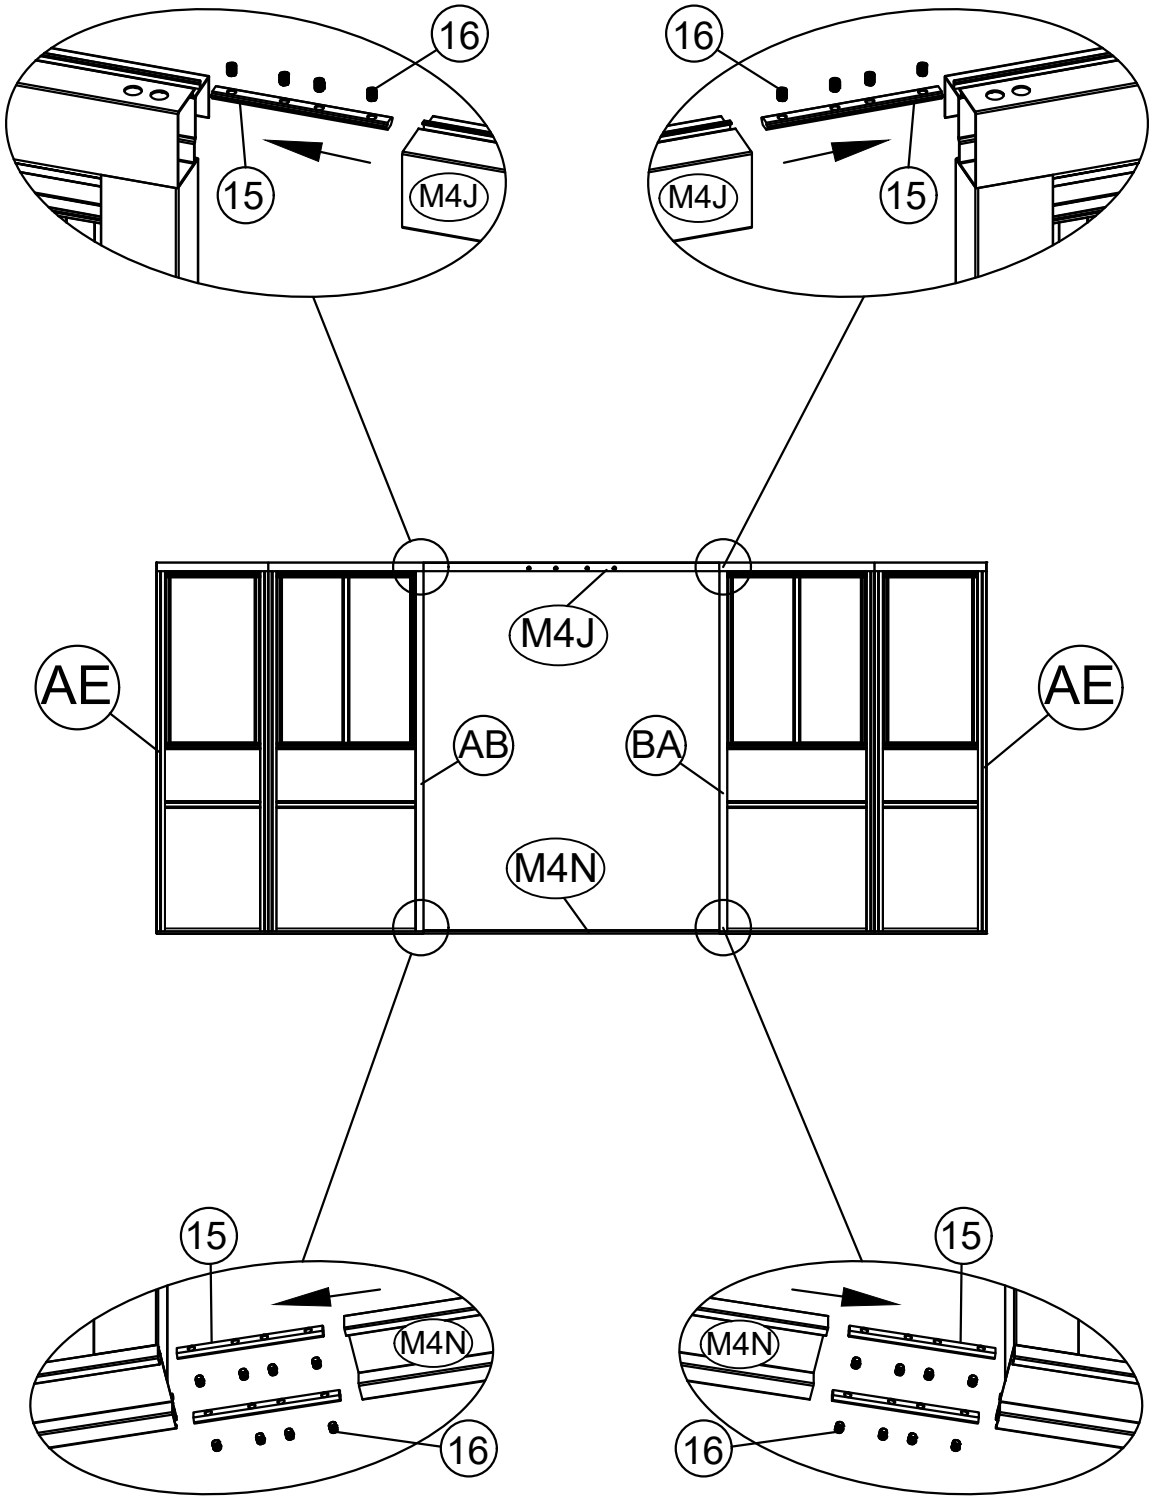

<35>

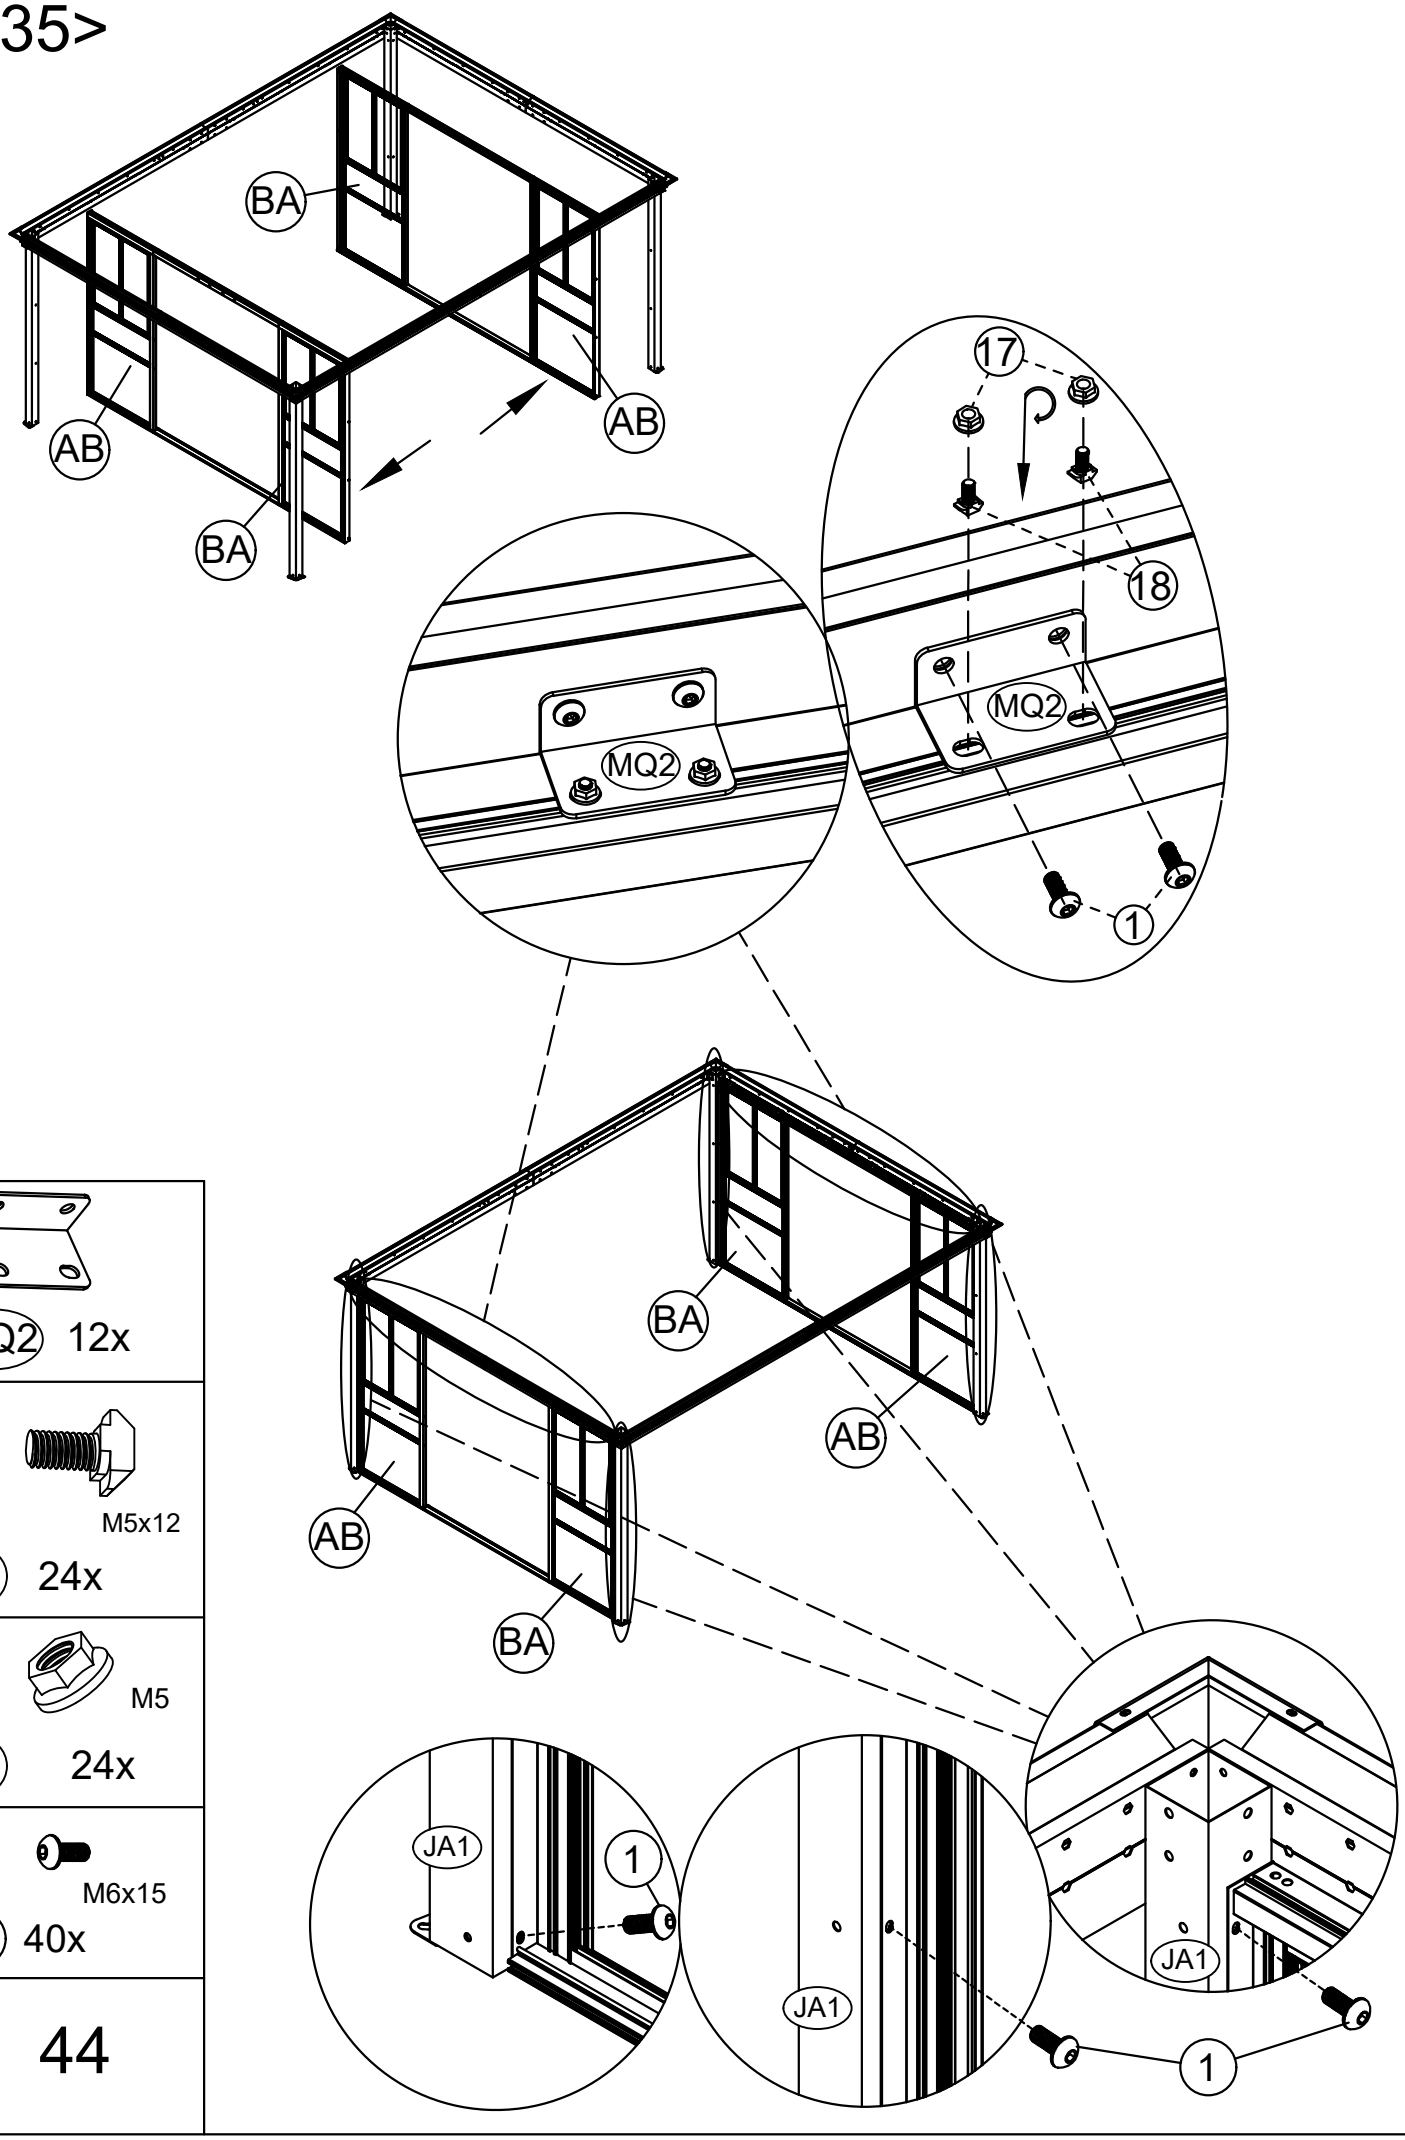

MQ2 12x

M5x12


18 24x


M5

17 24x

M6x15

1 40x

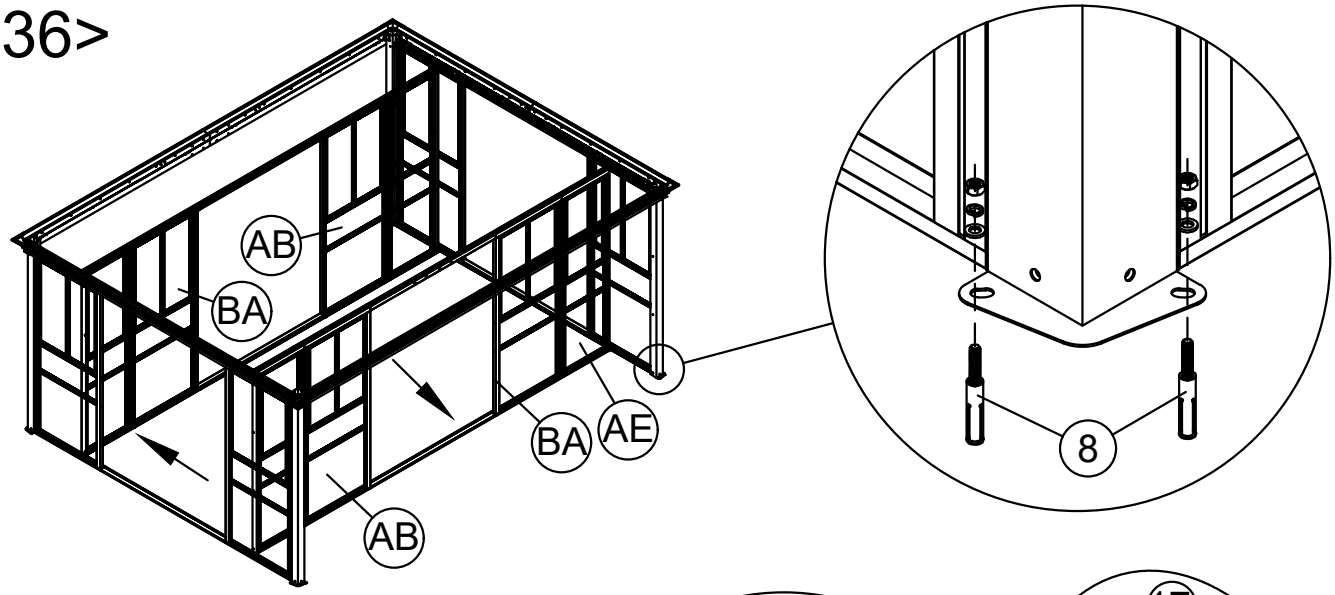

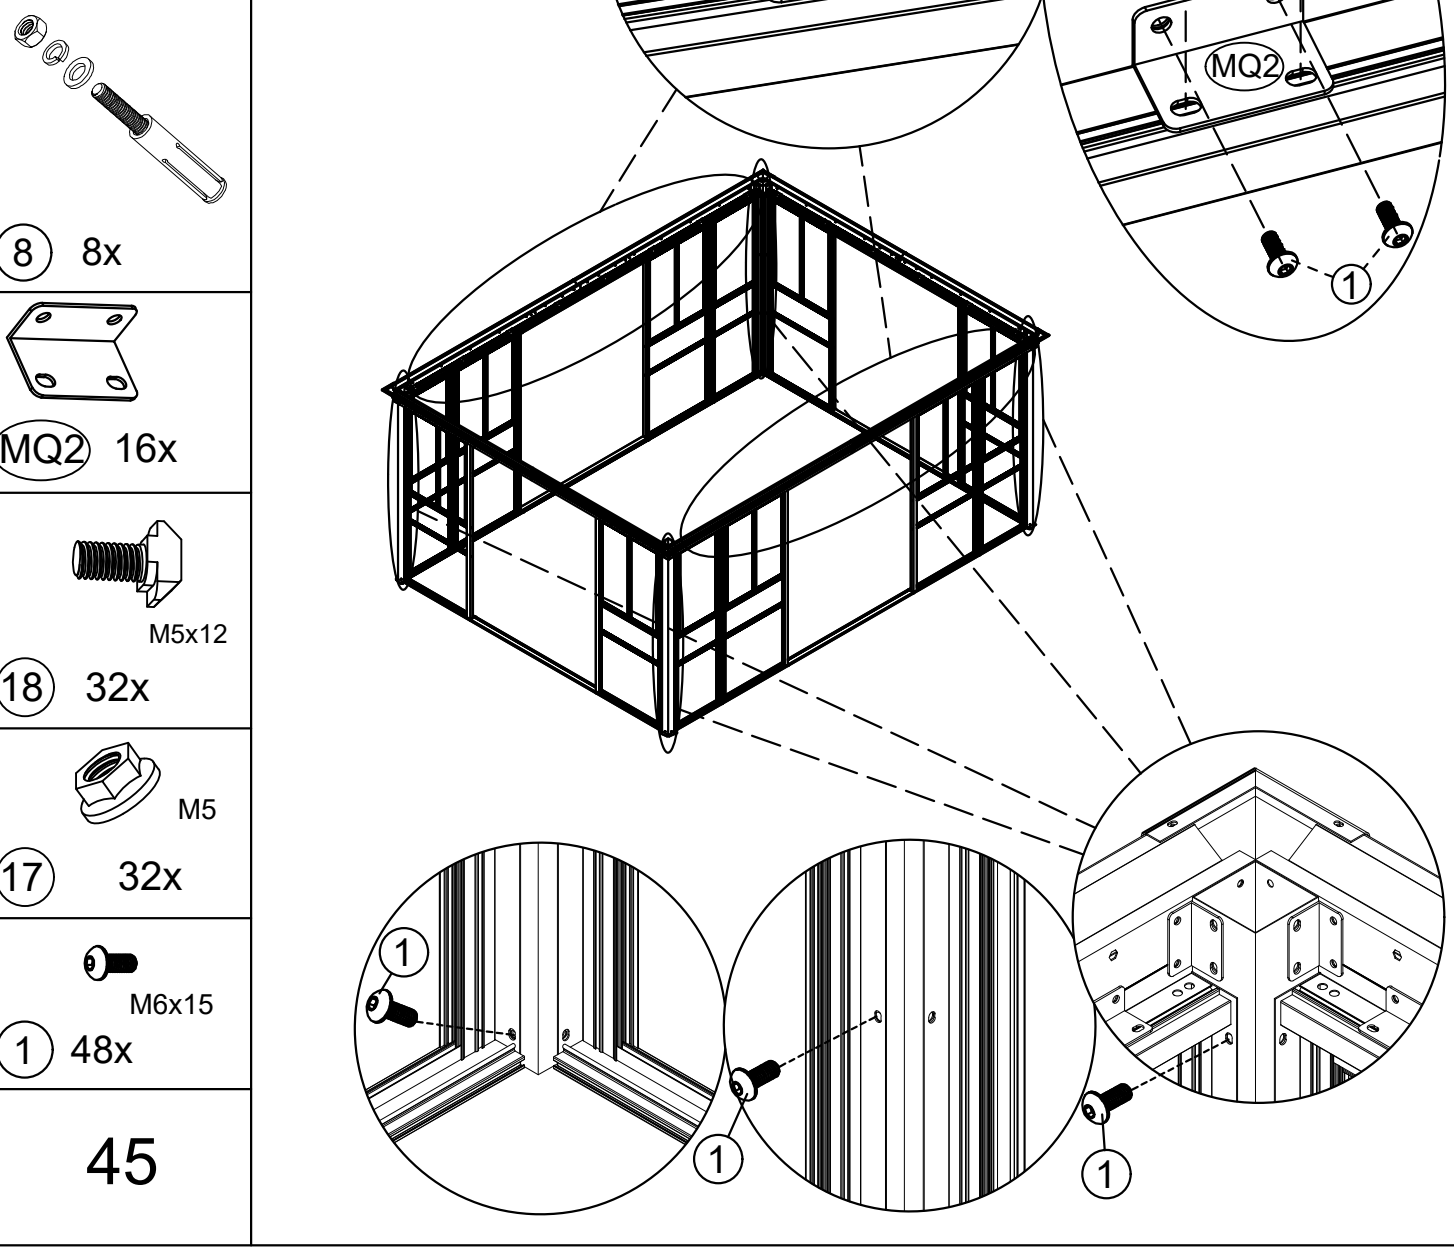

8 8x

MQ2 16x

M5x12


18 32x

M5

17 32x

M6x15

1 48x

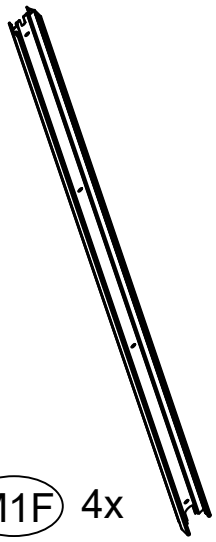

M1F 4x


ST 4.8x12


③ 16x

<37>

DA 4x

Pay attention to the left and right orientation when installing the door.

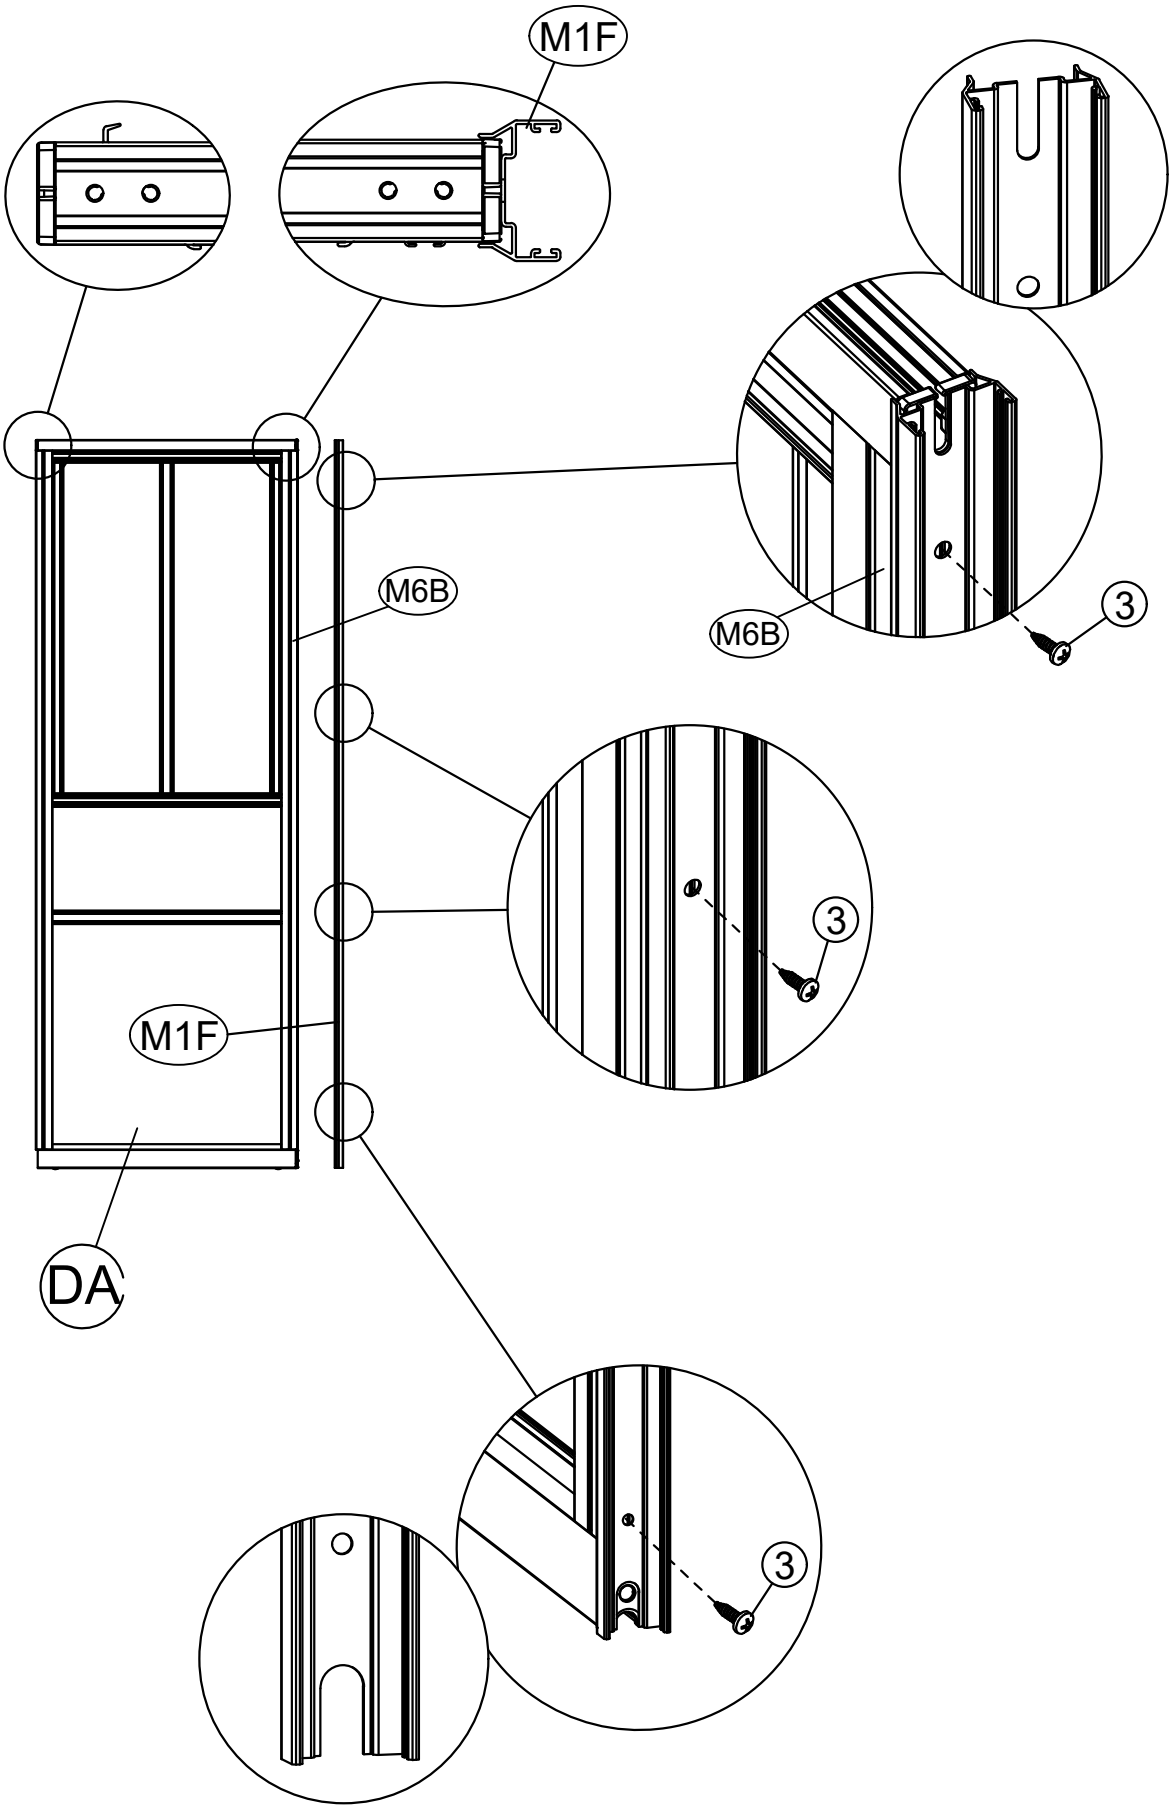




U1 4x



U2 4x




U3 4x



M4x12

26 4x




U4 4x




M5x15

25 16x


DA 4x

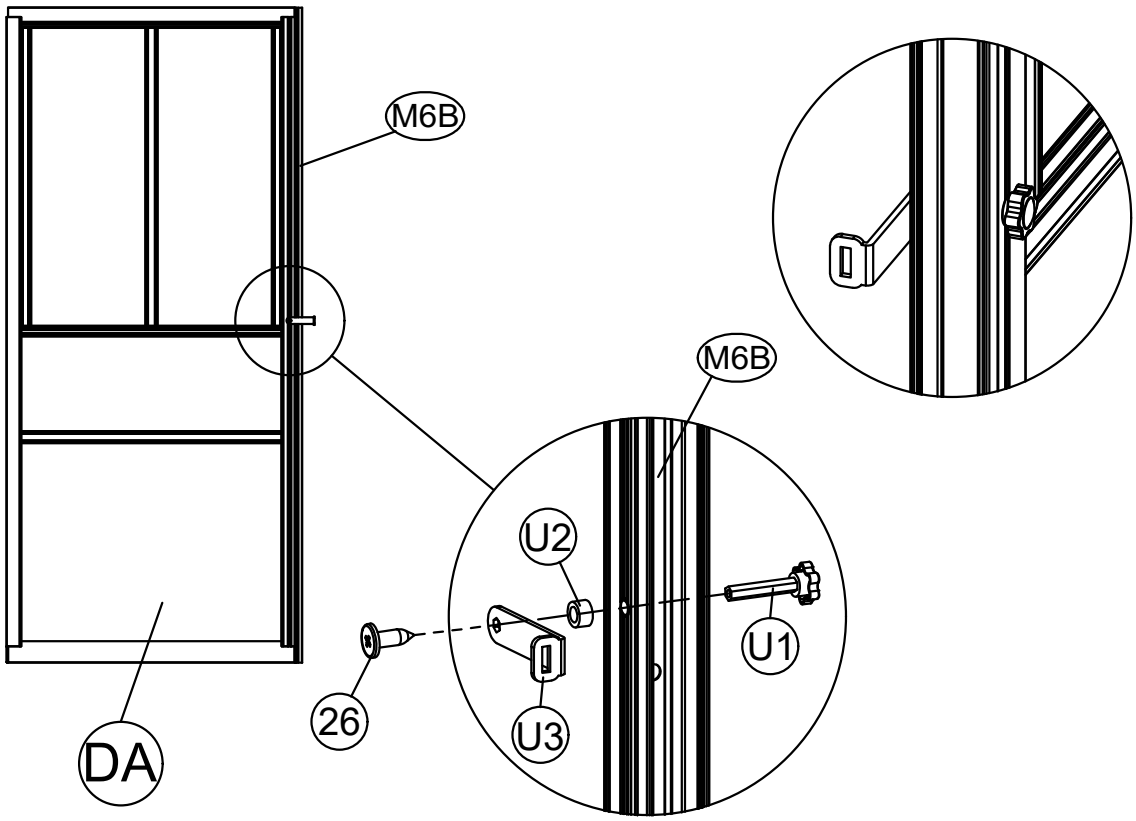


AD 4x

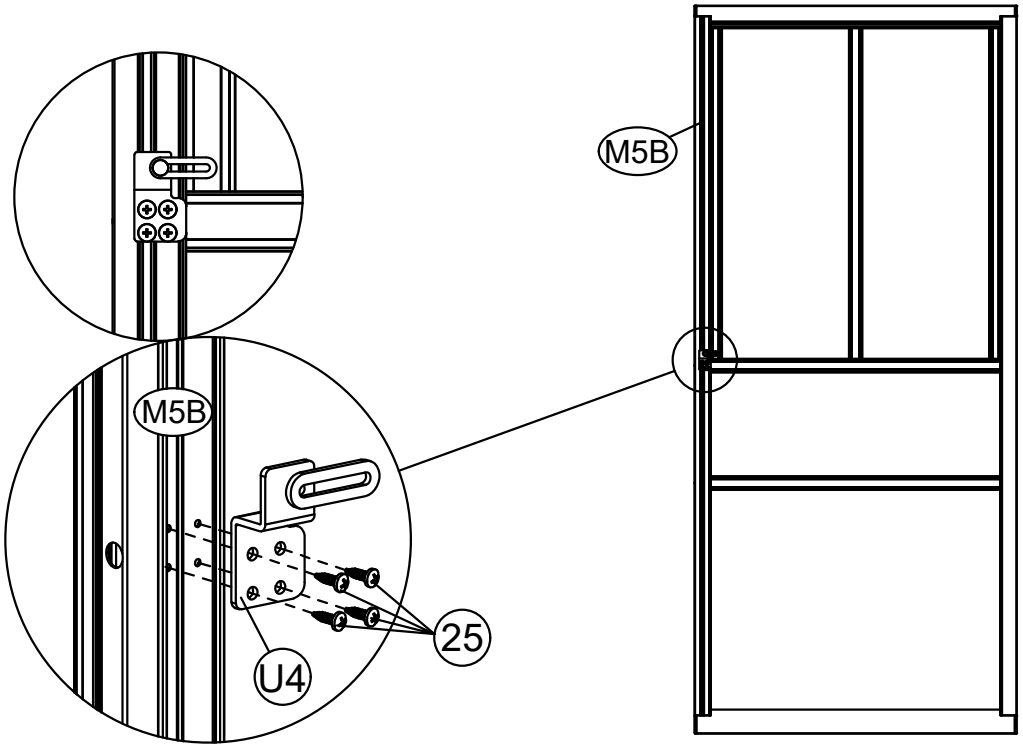

<39>

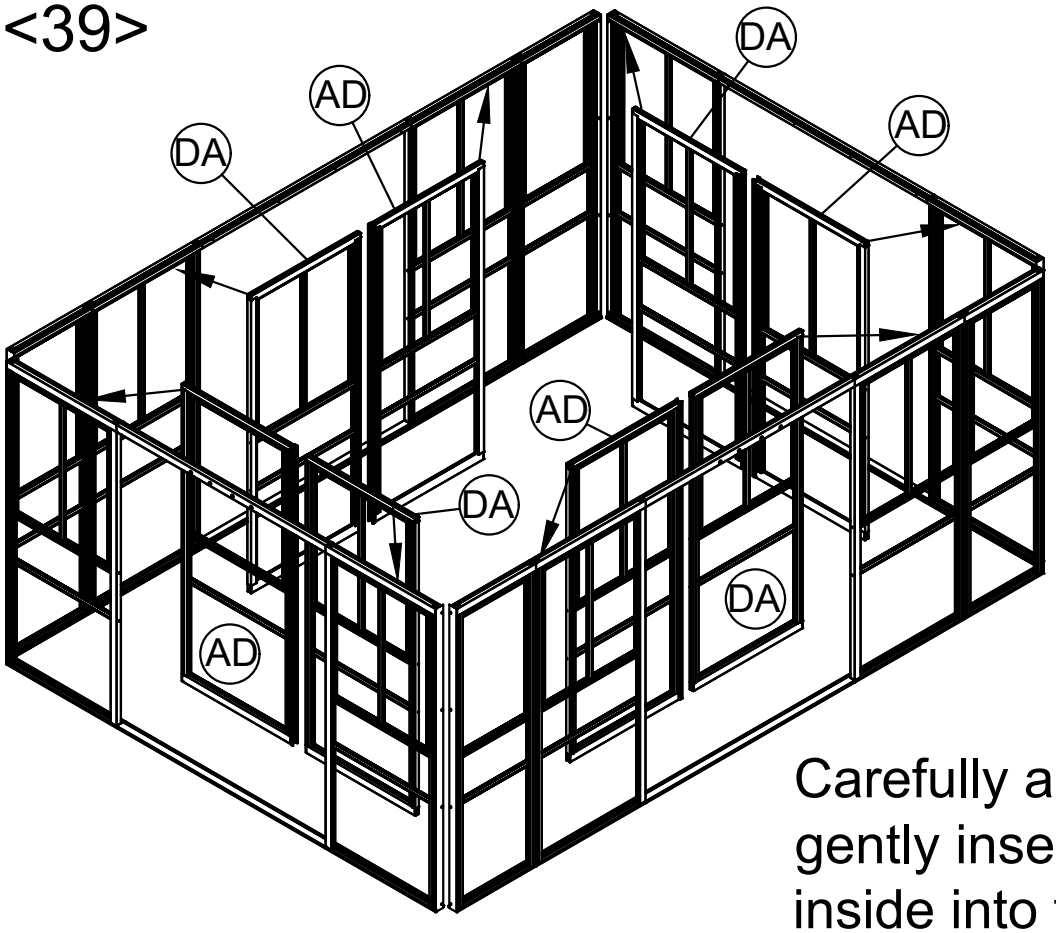



Carefully align the door and gently insert it from the inside into the upper slot.

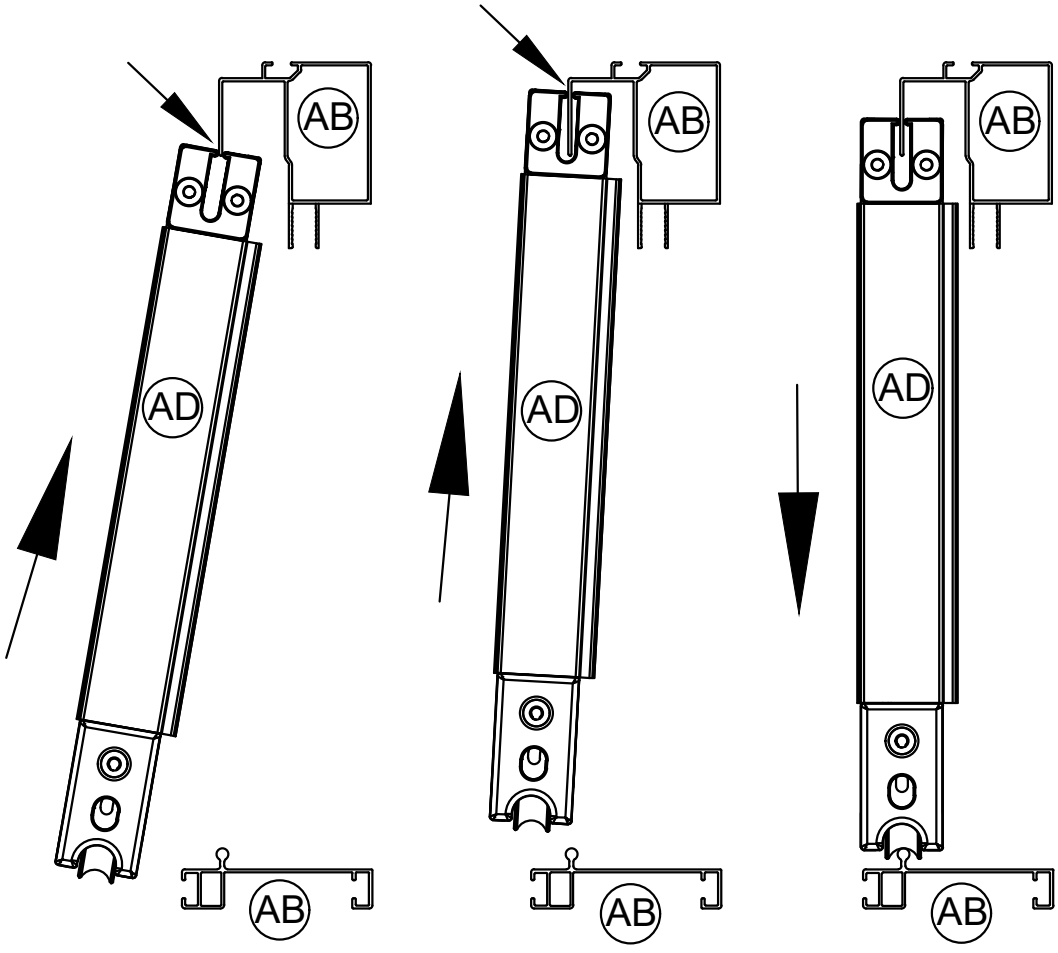

Repeat the previous steps for other components.

<40>

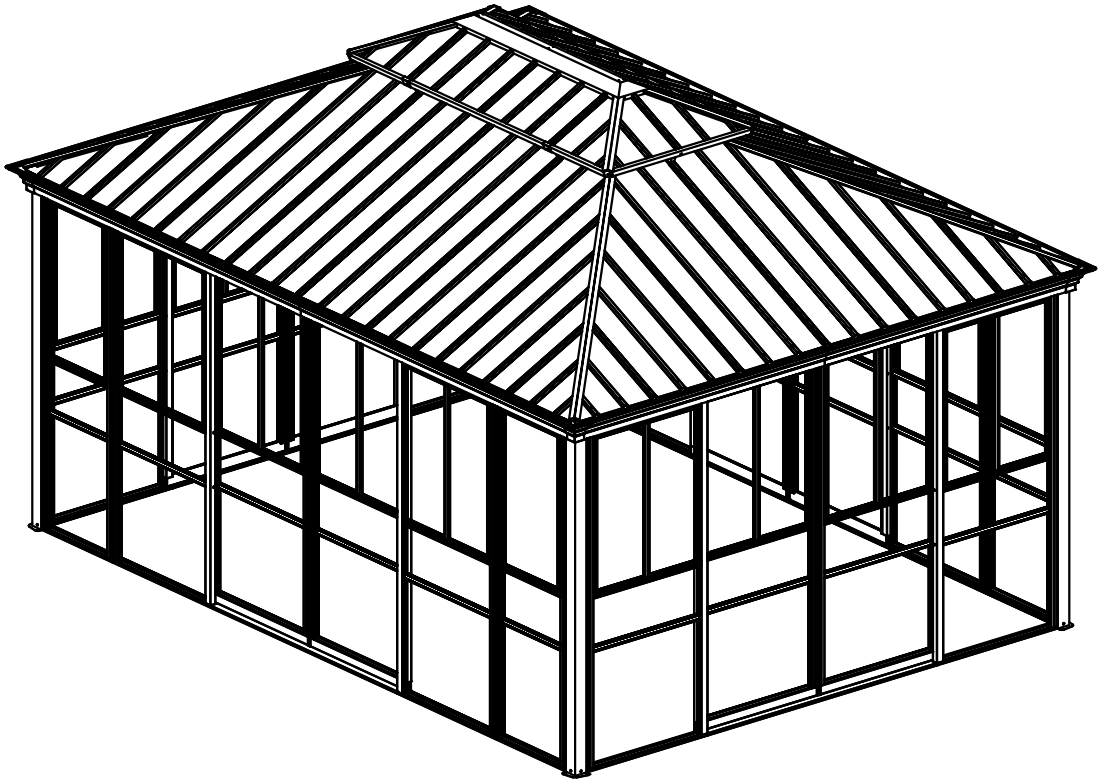

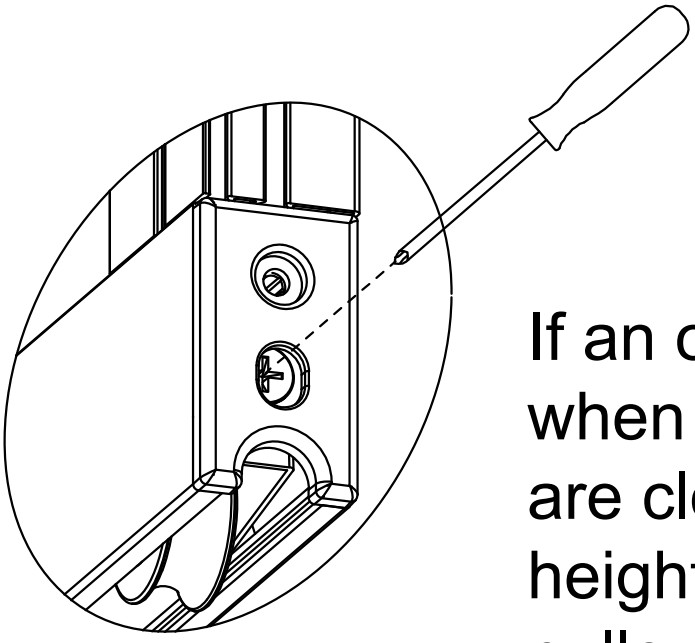

If an obvious gap appears when the two sliding doors are closed, adjust the pulley height using the screw on the pulley.

<41>

