


ASSEMBLY INSTRUCTION

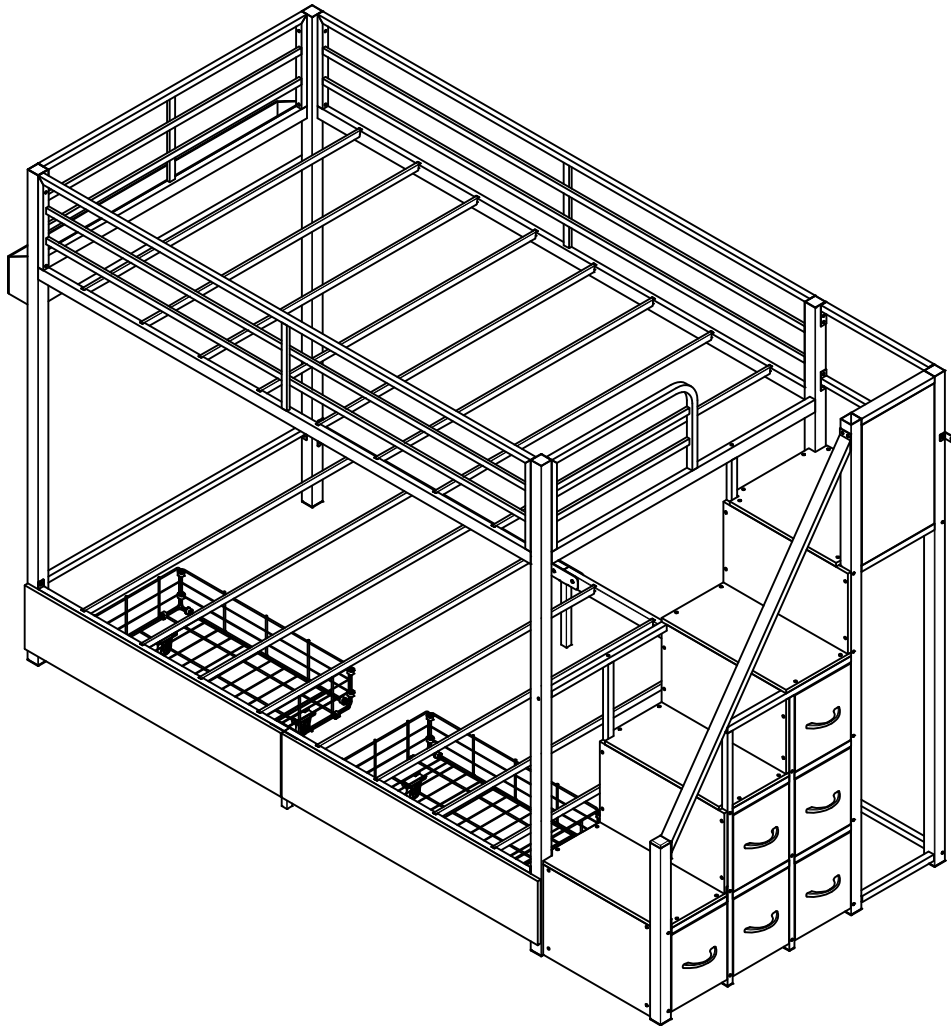


Model: C404-T-BK











Please Scan the QR code to watch the tutorial video
<https://www.youtube.com/@furnishglow/videos>





ASSEMBLY INSTRUCTION

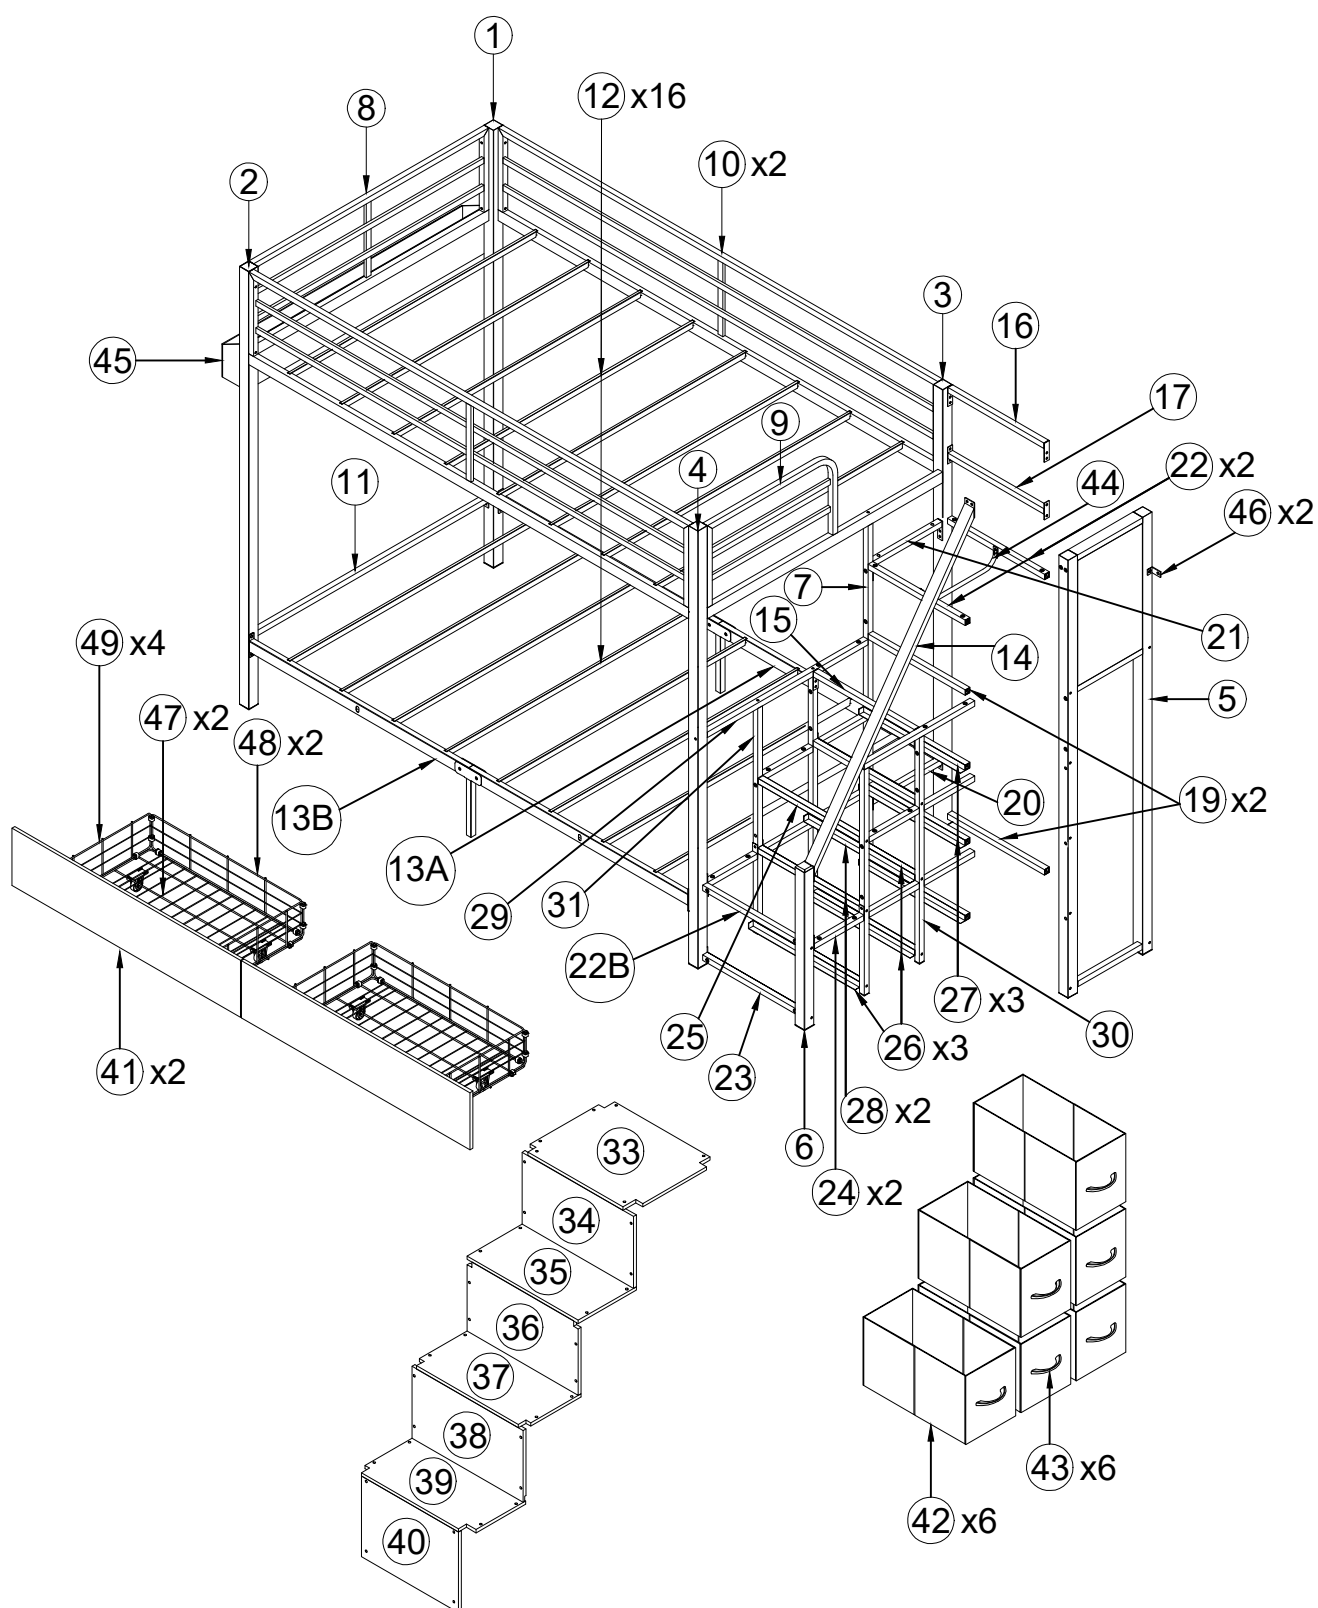










Part List Box 1

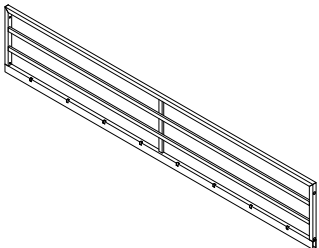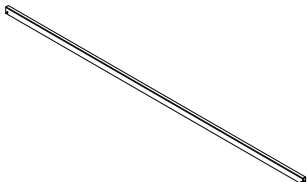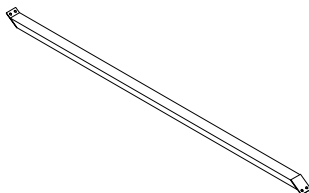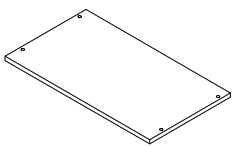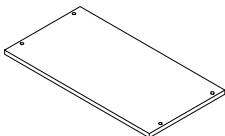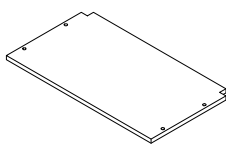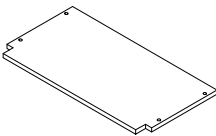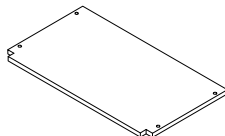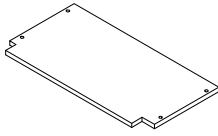1 x1 Pc  Leg	2 x1 Pc  Leg	3 x1 Pc  Leg
4 x1 Pc  Leg	5 x1 Pc  Leg	7 x1 Pc  Leg
10 x2 Pcs  Railings	12 x16 Pcs  Slats	14 x1 Pc  Handrail
34 x1 Pc  Wooden Plank	35 x1 Pc  Wooden Plank	36 x1 Pc  Wooden Plank
37 x1 Pc  Wooden Plank	38 x1 Pc  Wooden Plank	39 x1 Pc  Wooden Plank

Part List Box 1

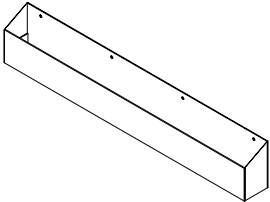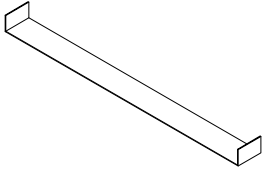
45 x1 Pc  Fabric Basket	45A x1 Pc  Bottom Fabric Basket
--	---

Part List Box 2

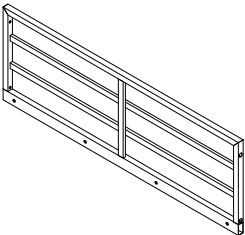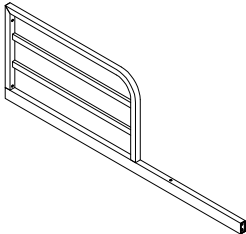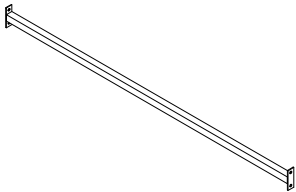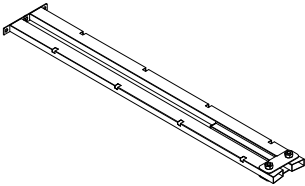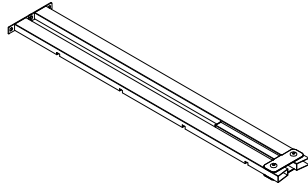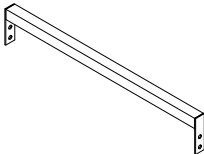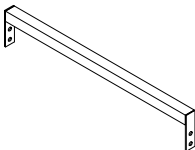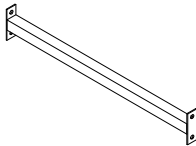6 x1 Pc  Leg	8 x1 Pc  Bed Head Railing	9 x1 Pc  Bed End Railing
11 x1 Pc  Headboard Rail	13A x1 Pc  Right Side Rail	13B x1 Pc  Left Side Rail
15 x1 Pc  Rails	16 x1 Pc  Rails	17 x1 Pc  Rails


Part List Box 2

(19) x2 Pcs

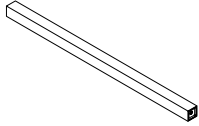


Rails

(20) x1 Pc




Rails

(21) x1 Pc

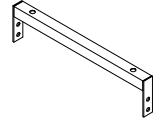


Rails

(22) x2 Pcs

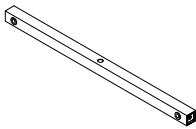


Rails

(22B) x1 Pc

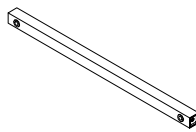


Rails

(23) x1 Pc

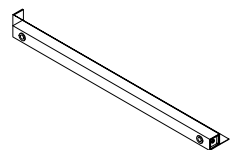


Rails

(24) x2 Pcs




Rails

(25) x1 Pc

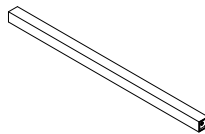


Rails

(26) x3 Pcs

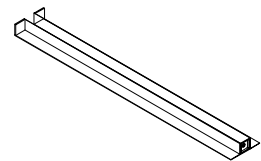


Rails

(27) x3 Pcs

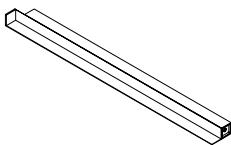


Rails

(28) x2 Pcs

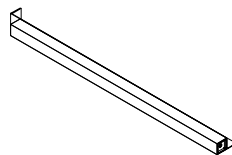


Rails

(29) x1 Pc

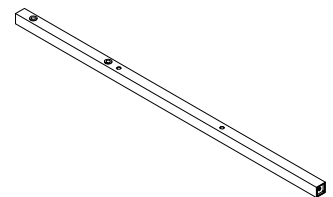


Rails

(30) x1 Pc

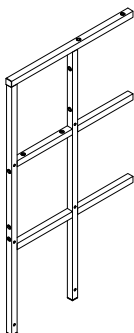


Iron Frame

(31) x1 Pc

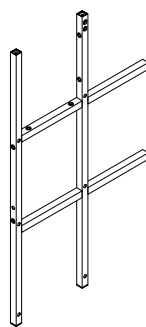

Iron Frame


(33) x1 Pc

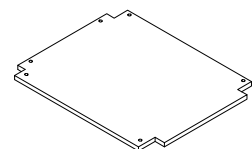

Wooden Plank


Part List Box 2

40 x1 Pc

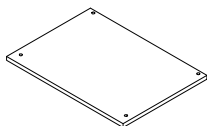


Wooden Plank

41 x2 Pcs

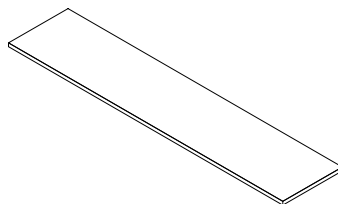


Drawers Panels

42 x6 Pcs

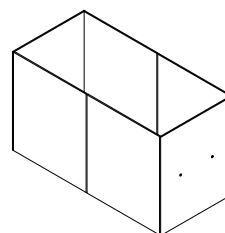

Fabric Drawers

42A x6 Pcs

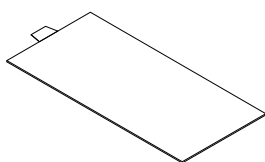


Bottom Drawers

43 x6 Pcs




Handle

44 x1 Pc

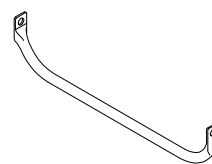


Handle

46 x2 Pcs




Anti-Overturning

47 x2 Pcs

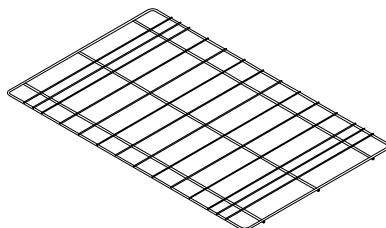


Bottom Of Drawer

48 x2 Pcs

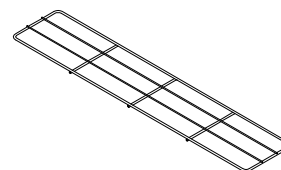

Back Of Drawer


49 x4 Pcs

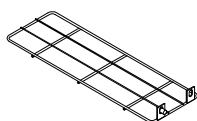

Side Of Drawer

Hardware List

(A) x2 Pcs

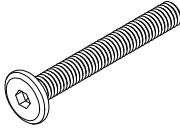


Bolts M8x55mm

(B) x52 Pcs




Bolts M6x15mm

(C) x70 Pcs



Bolts M6x30mm

(D) x18 Pcs




Bolts M6x55mm

(F) x2 Pcs



Allen key

(M) x8 Pcs



Wheels

(Q) x12 Pcs




Lock

(I) x12 Pcs




Screw M4x15mm

(J) x2 Pcs

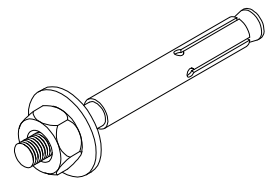

M6x60mm

(K) x1 Pc



Wrench

(L) x2 Pcs




Bolts M6x20mm

(N) x10 Pcs




Bolts M6x10mm


STEP 1

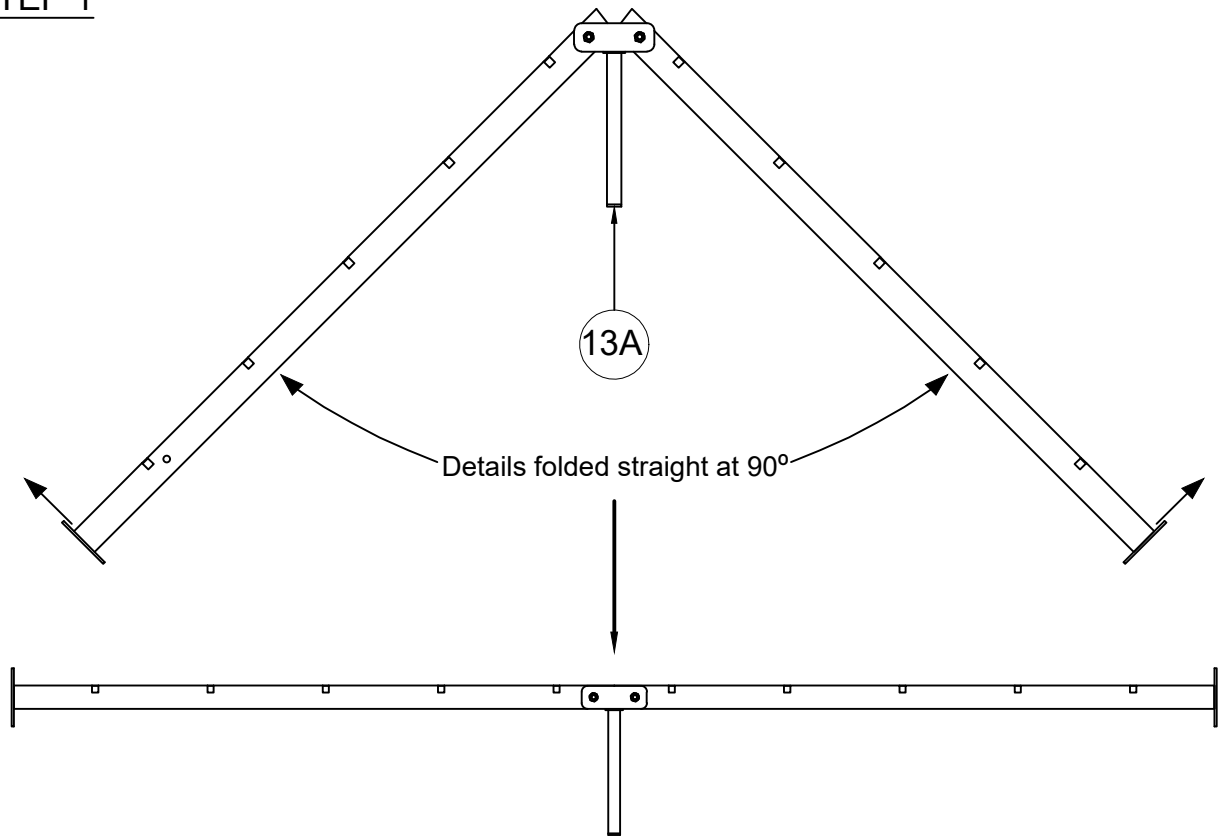


STEP 2

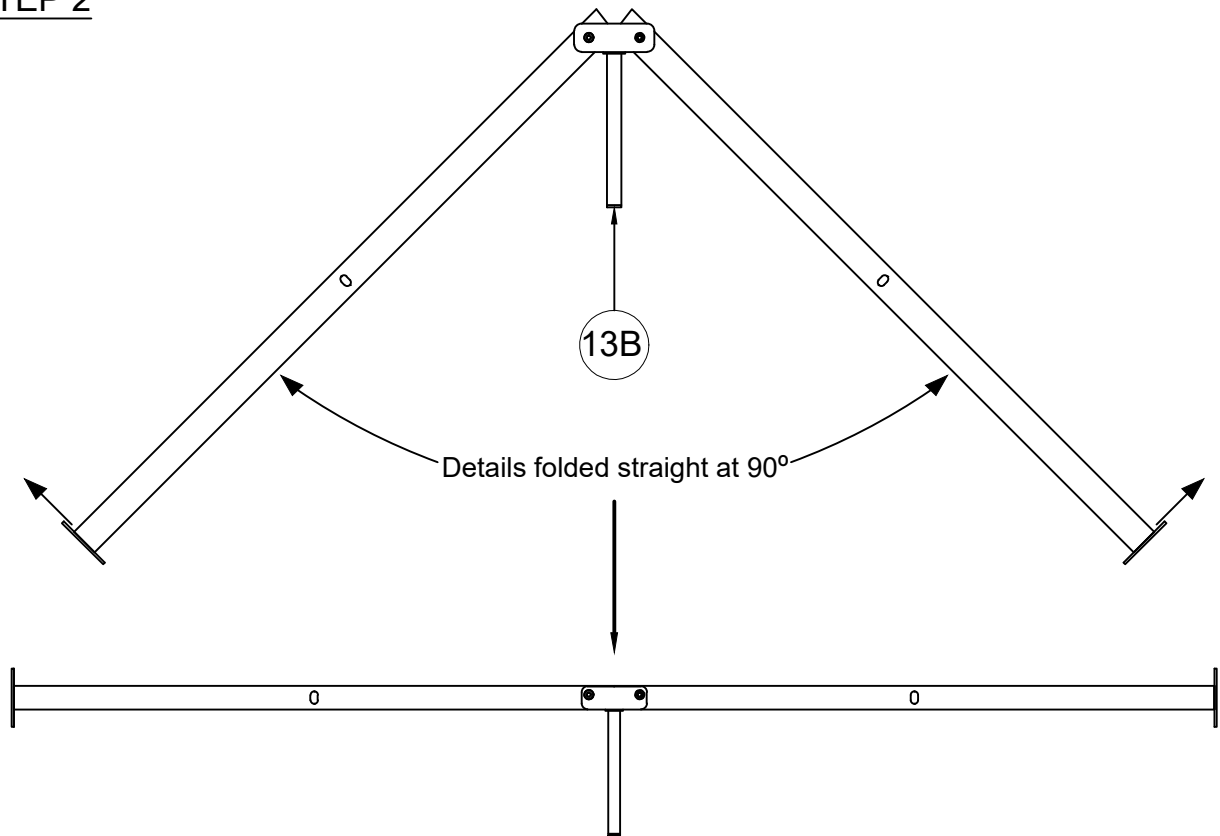


STEP 3

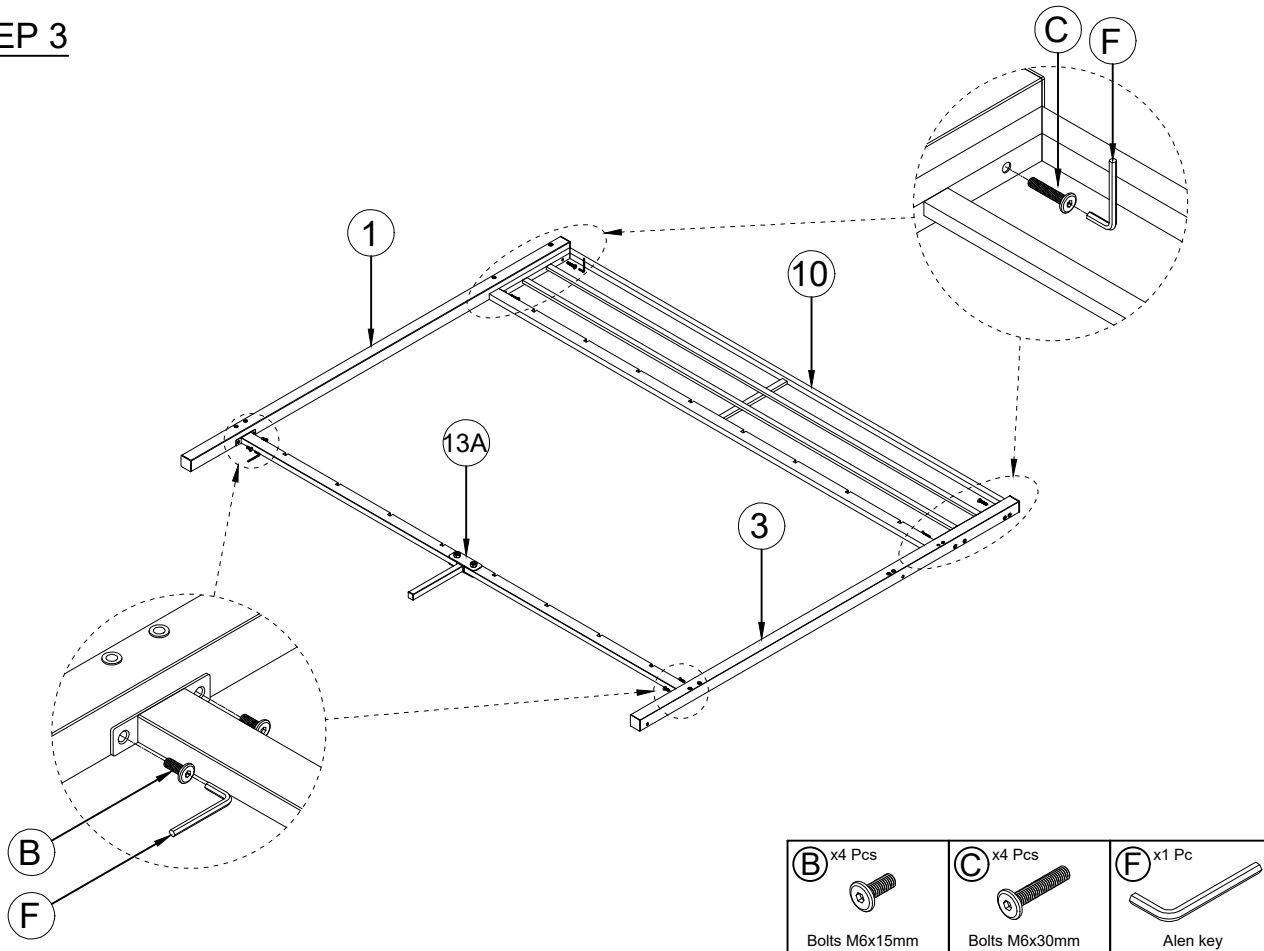


STEP 4

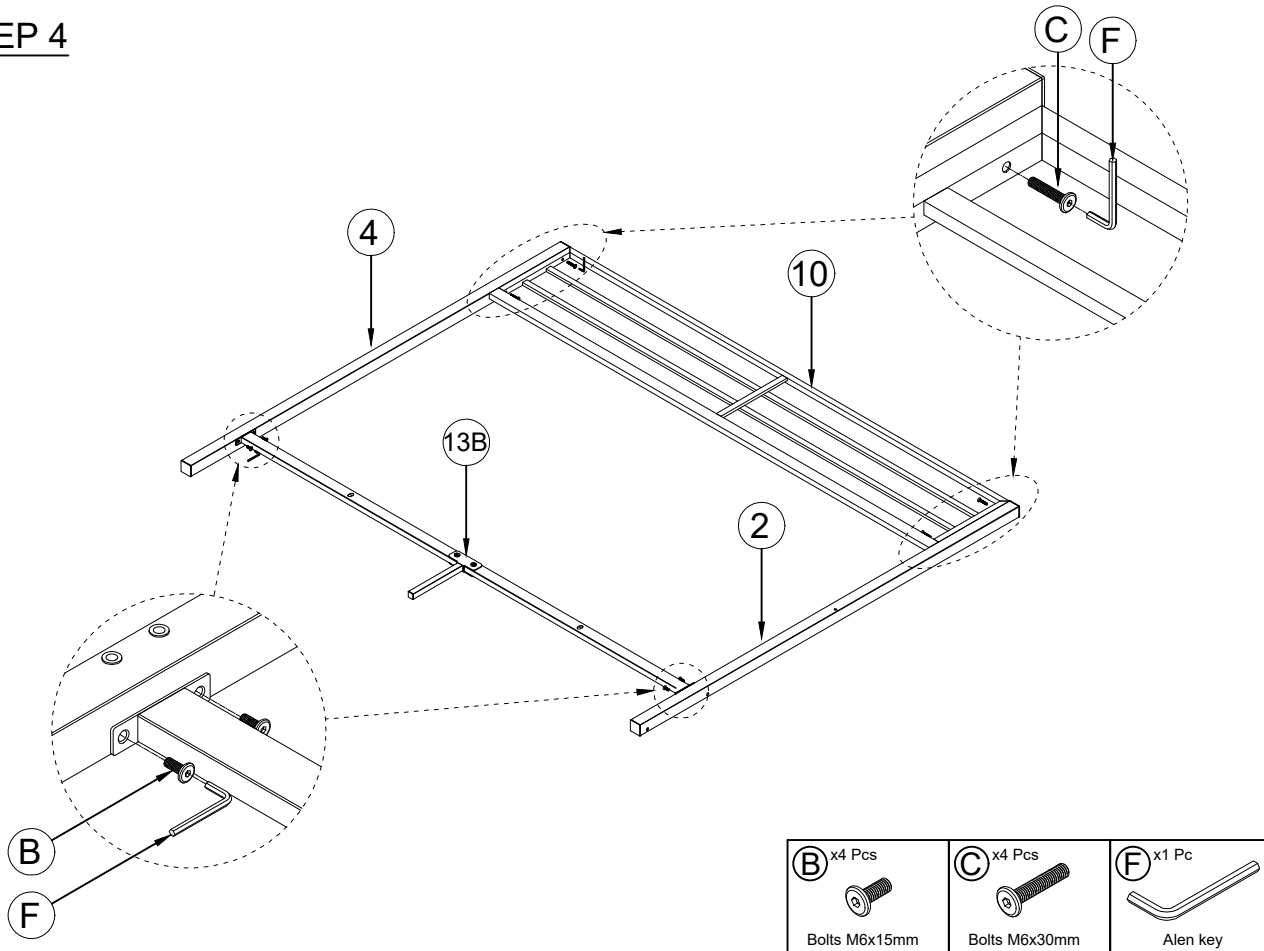


STEP 5

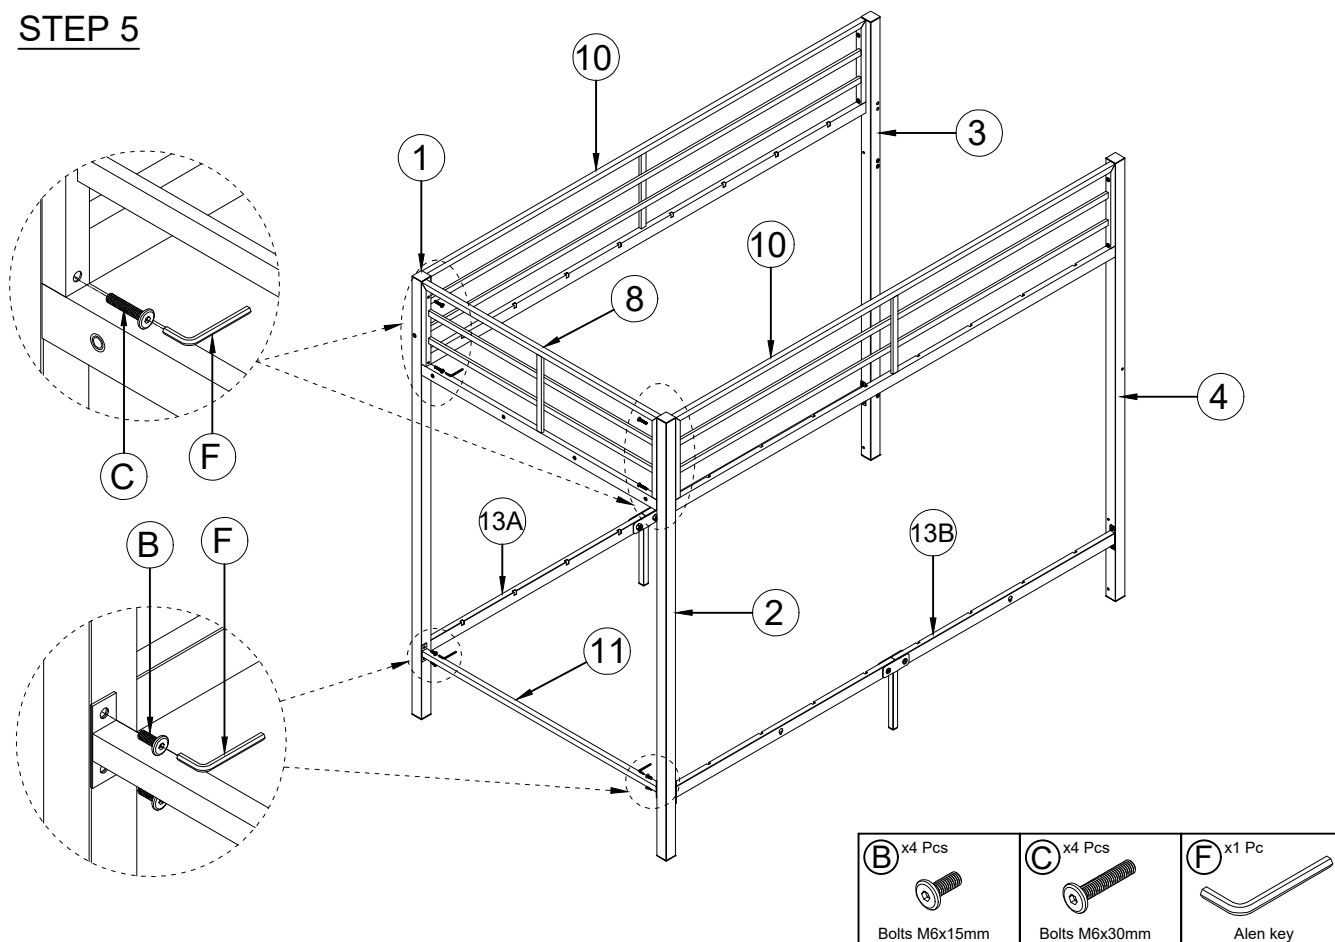


STEP 6

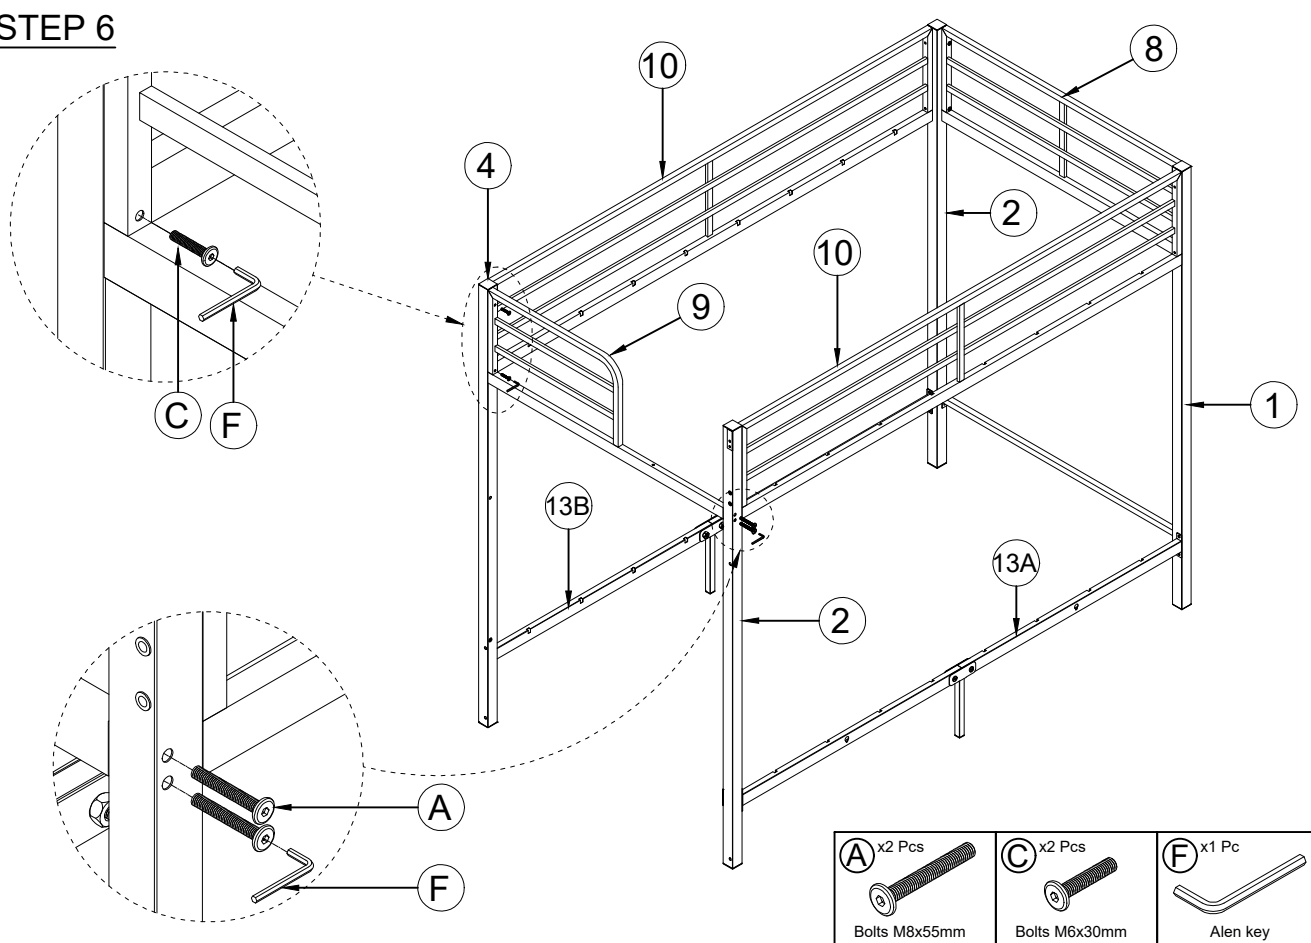


STEP 7

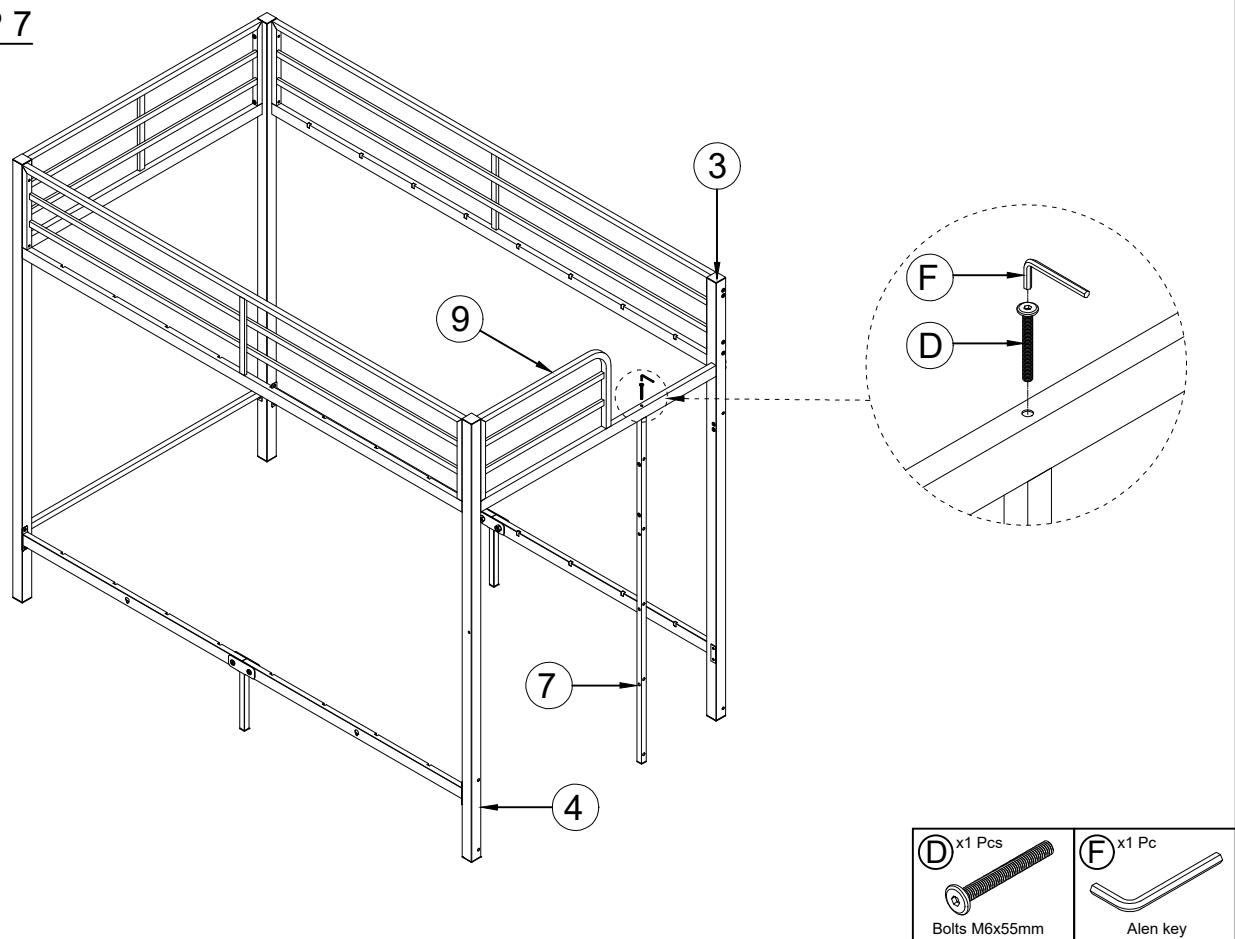


STEP 8

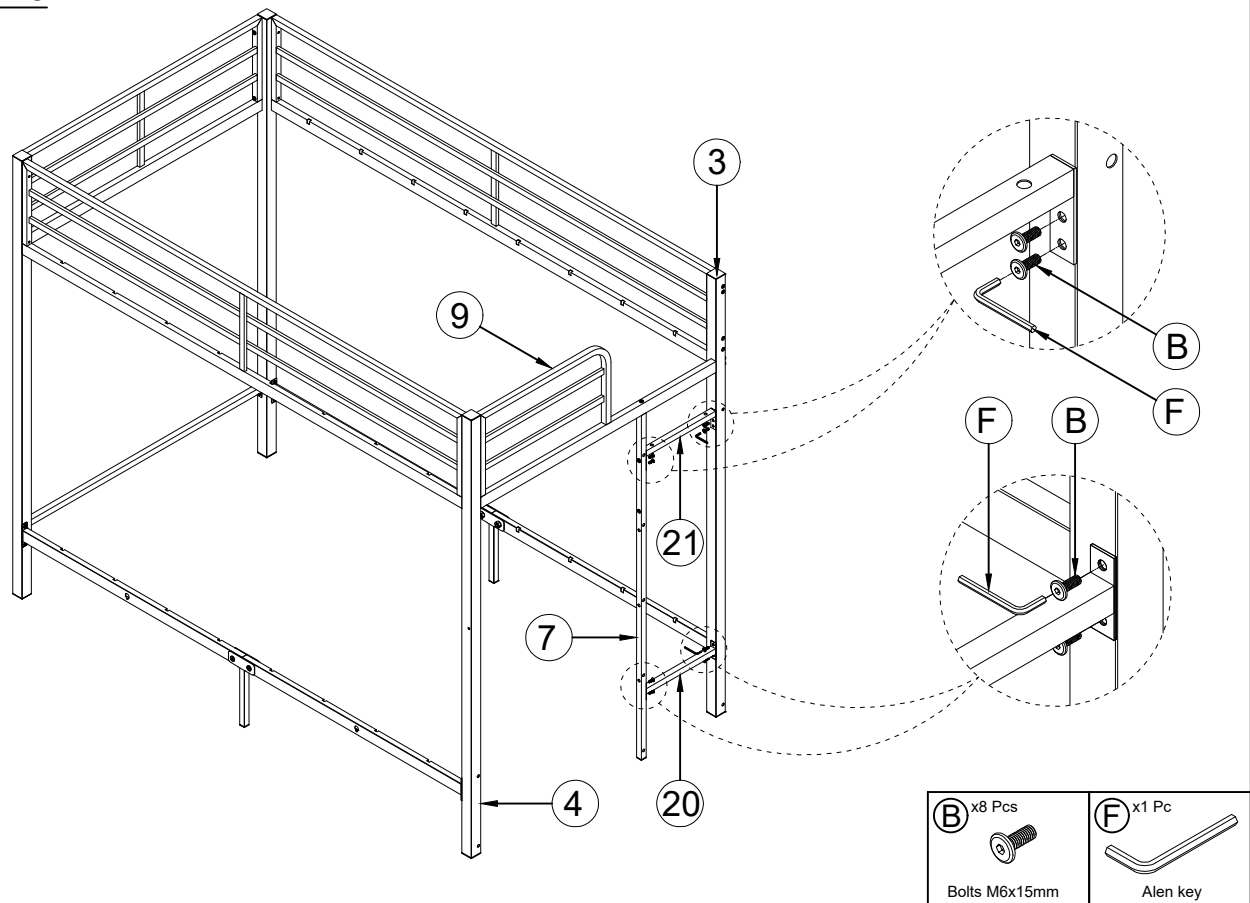


STEP 9

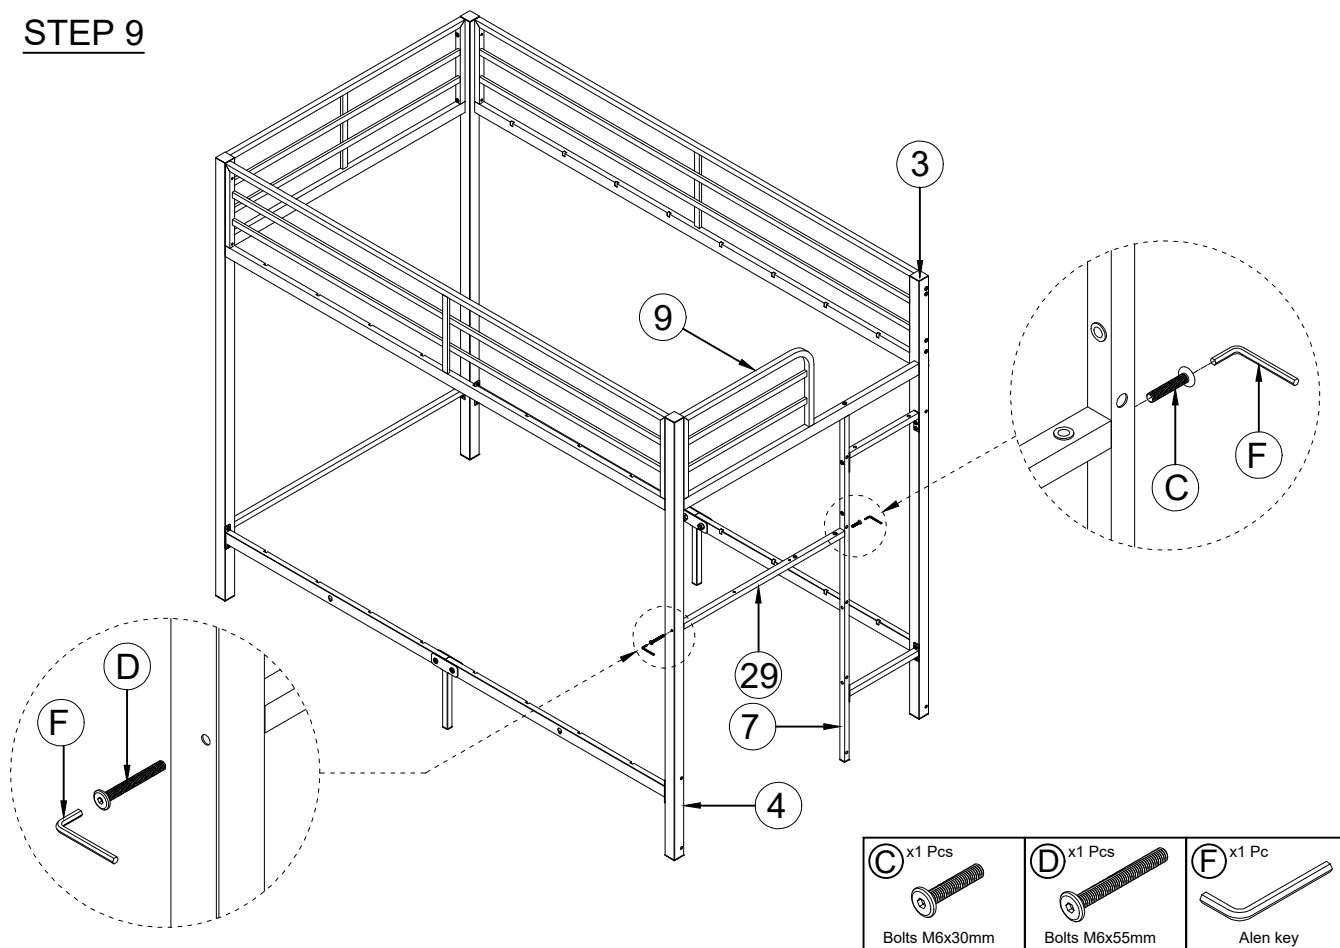


STEP 10

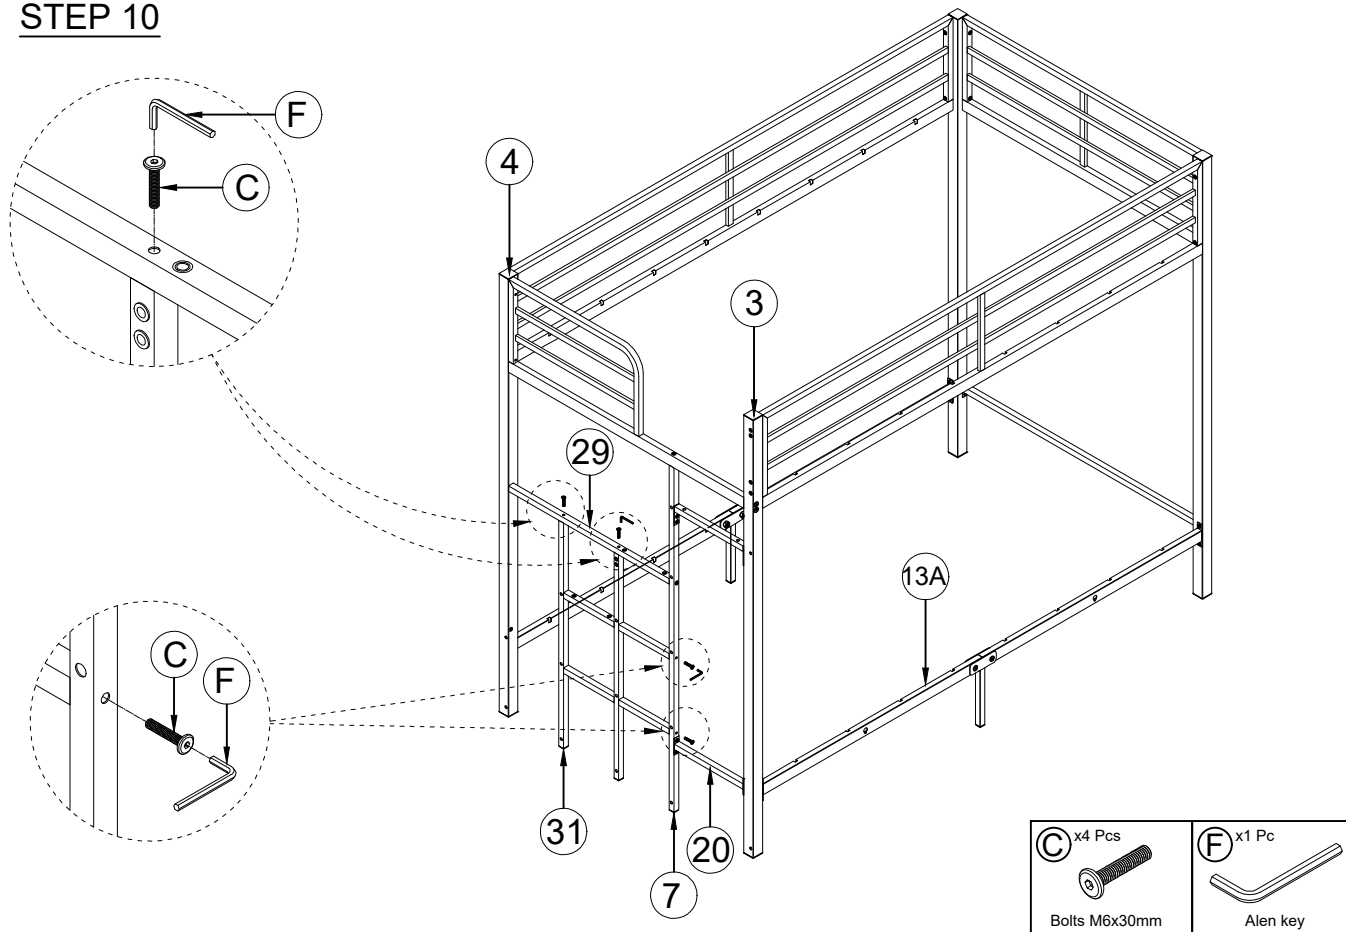


STEP 11

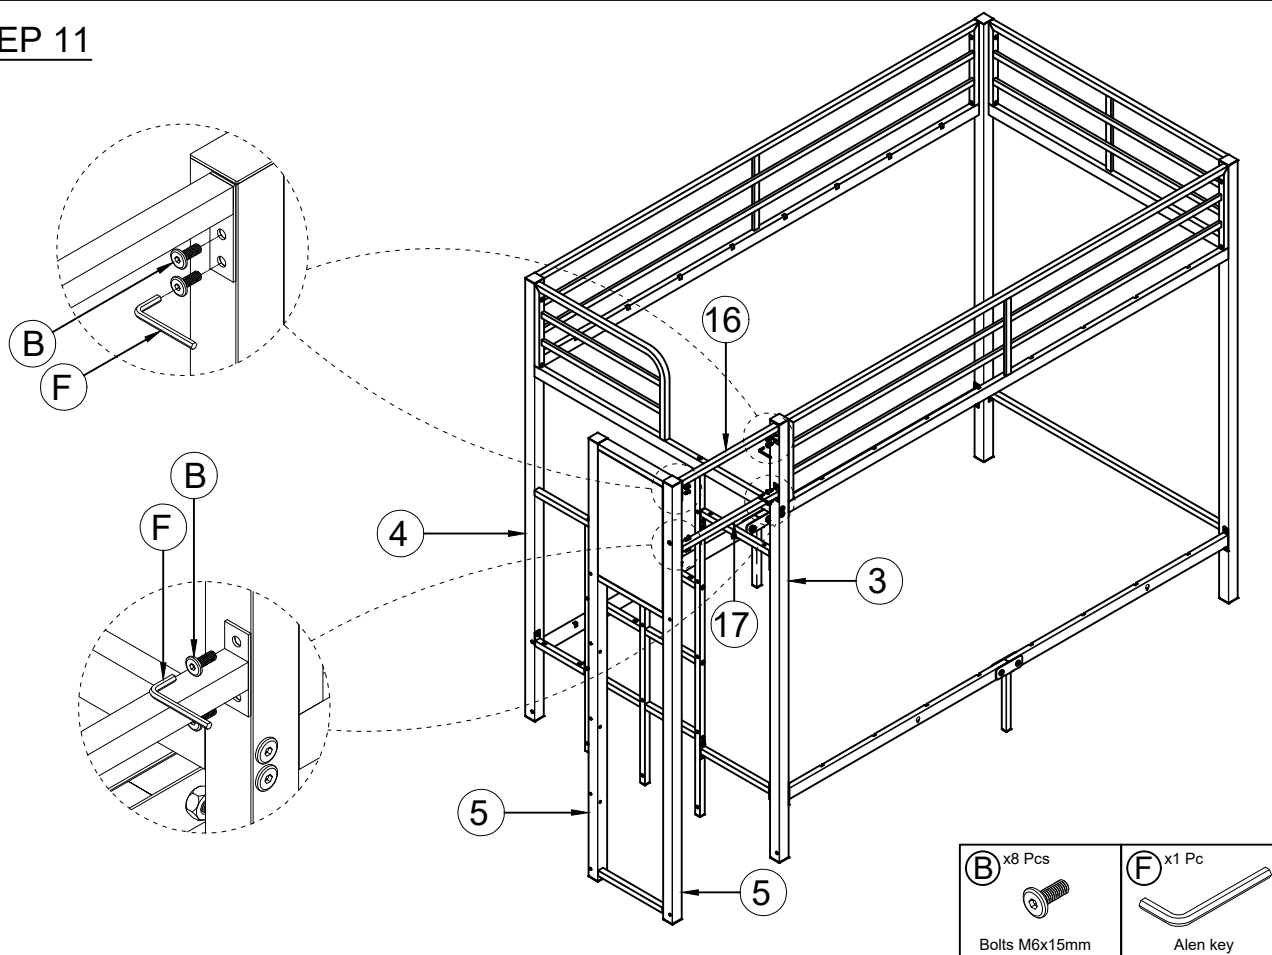


STEP 12

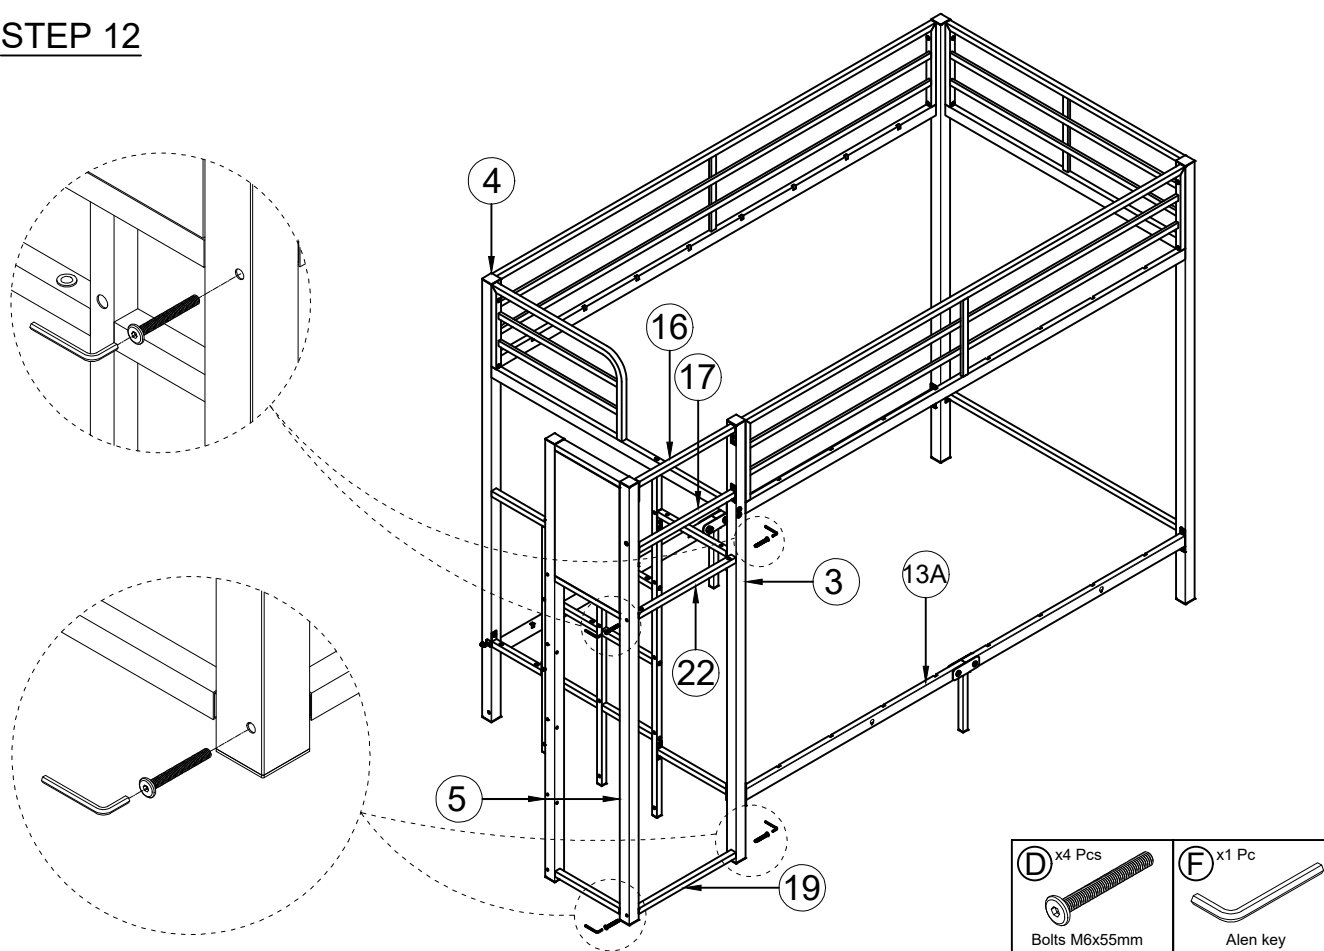


STEP 13

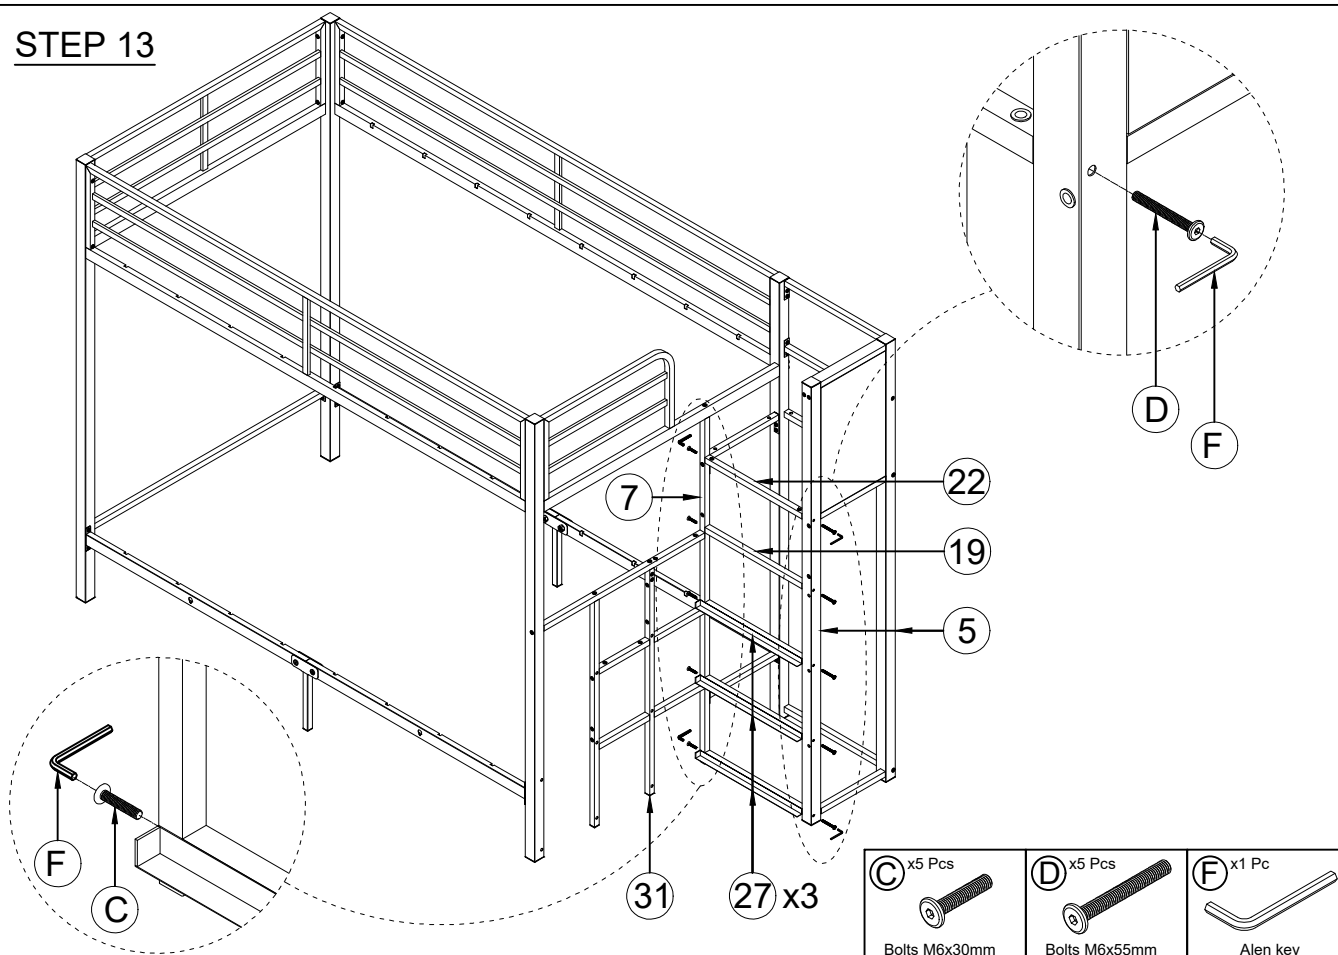

STEP 14

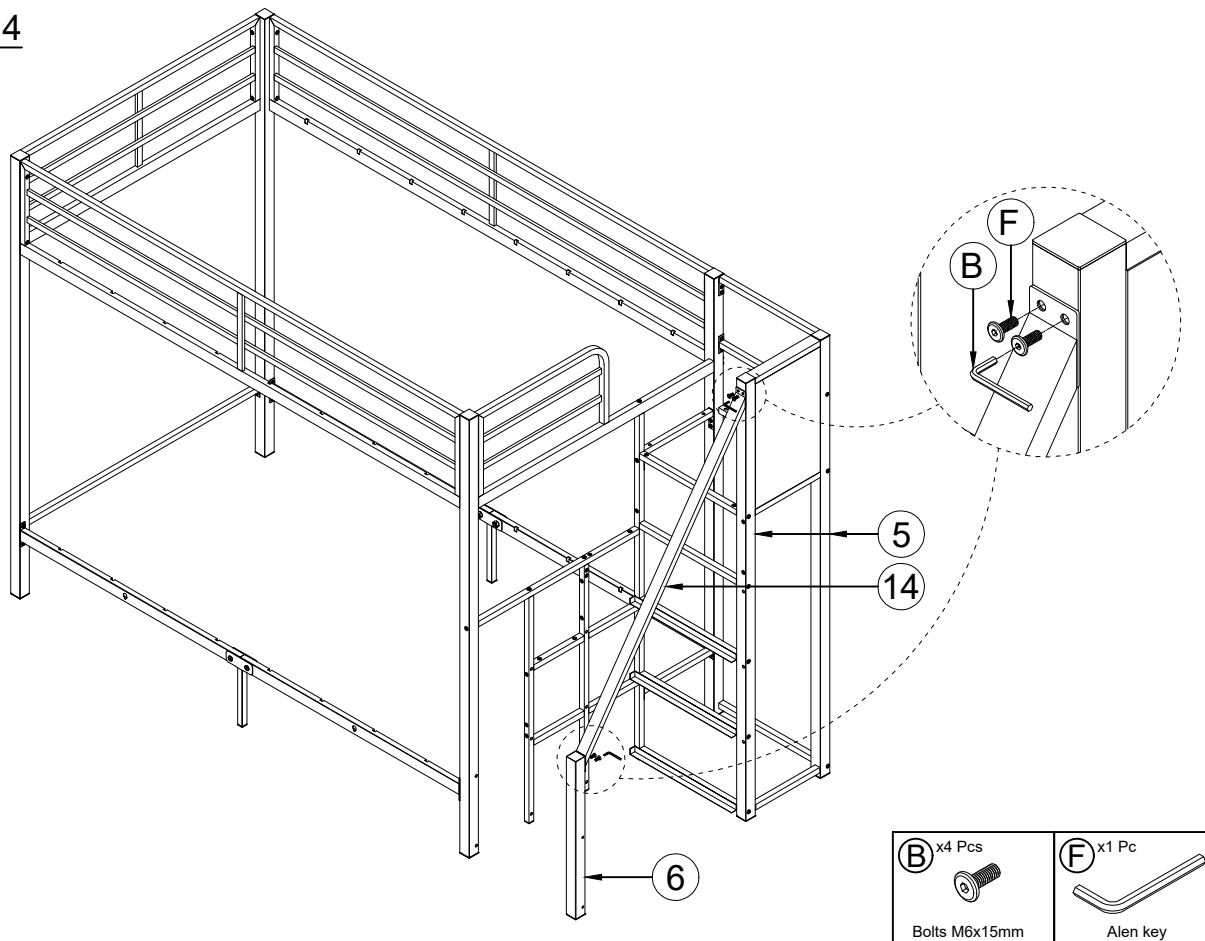


STEP 15

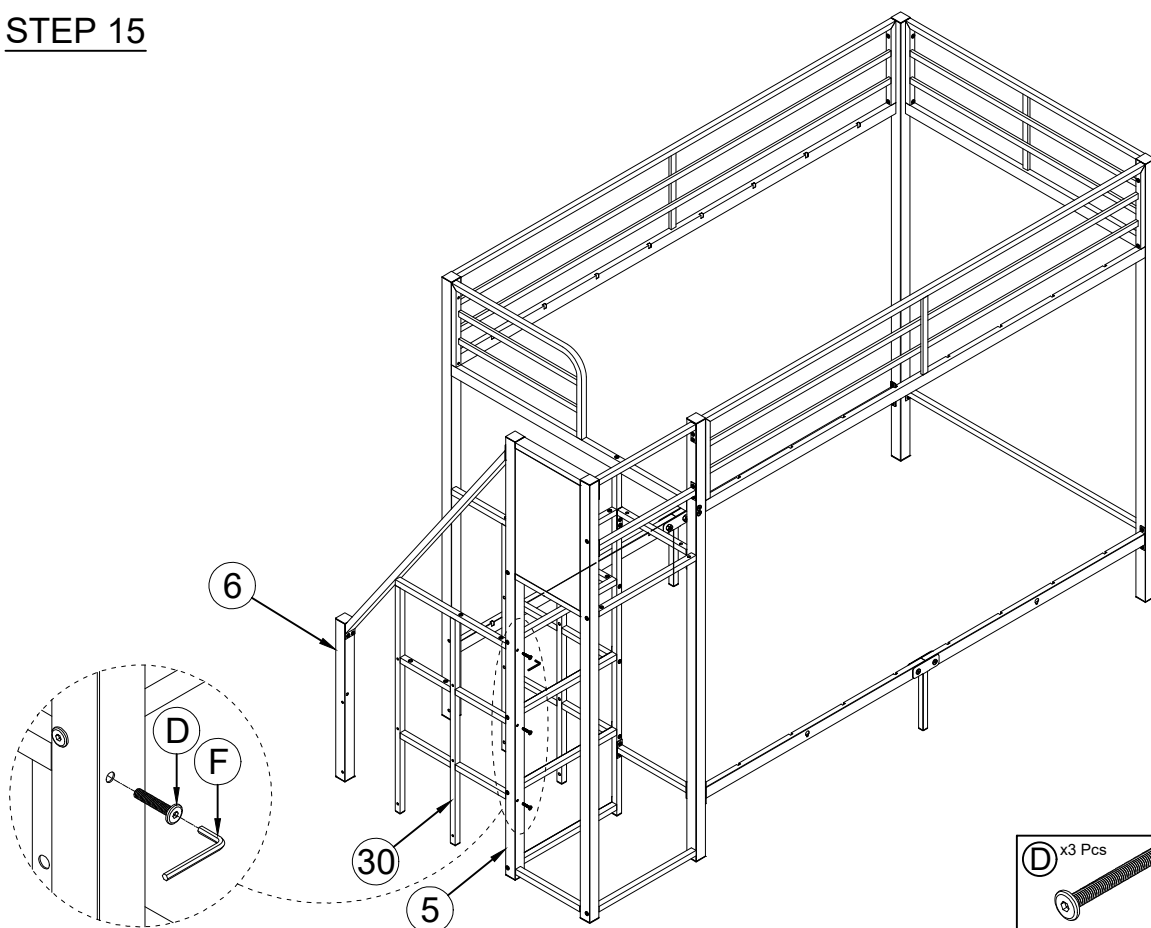

(D) x3 Pcs
Bolts M6x55mm

(F) x1 Pc
Allen key


STEP 16

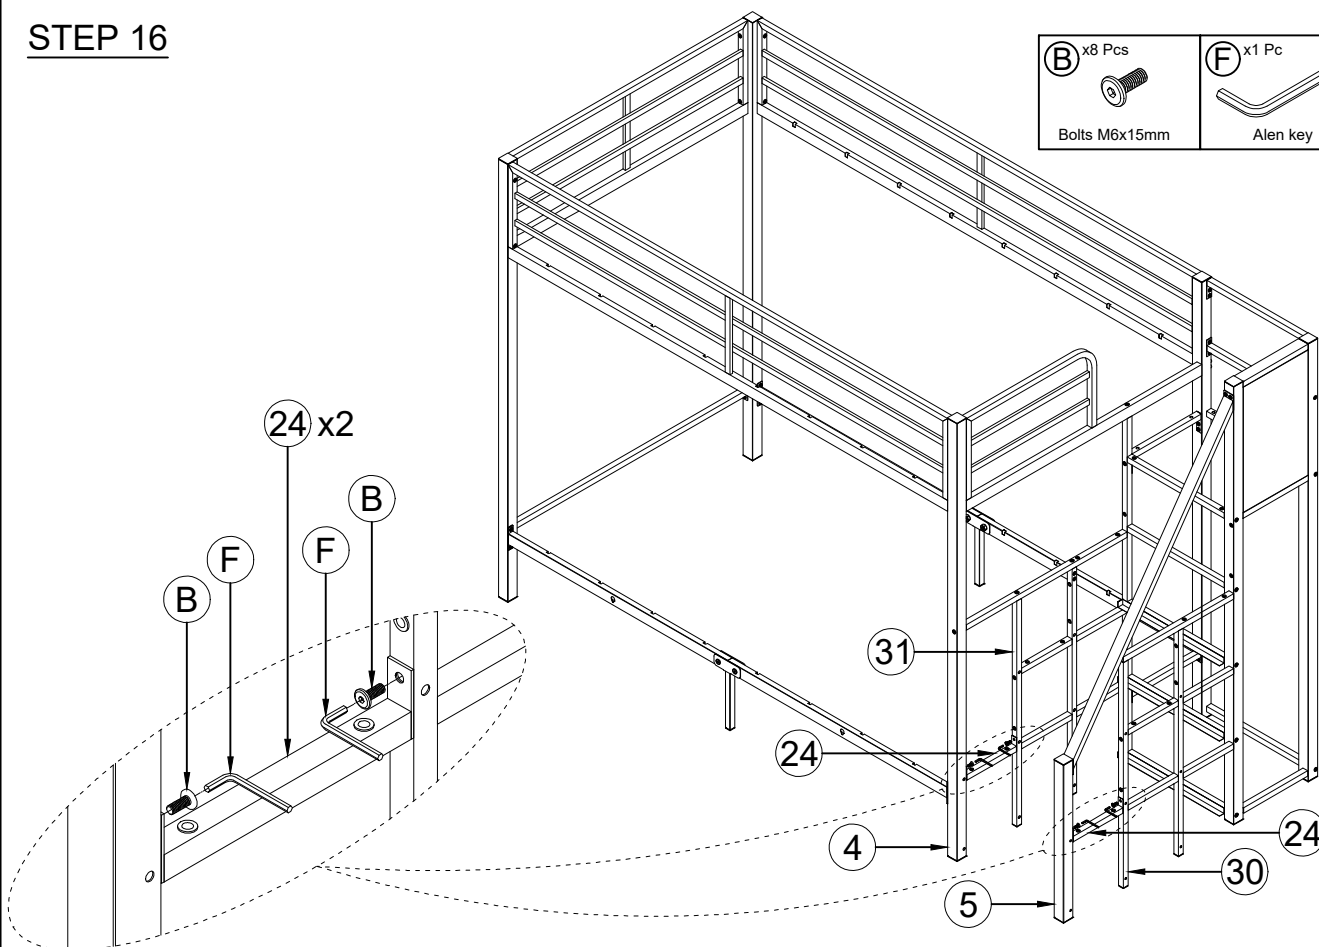


(B) x8 Pcs
Bolts M6x15mm

(F) x1 Pc
Allen key



STEP 17

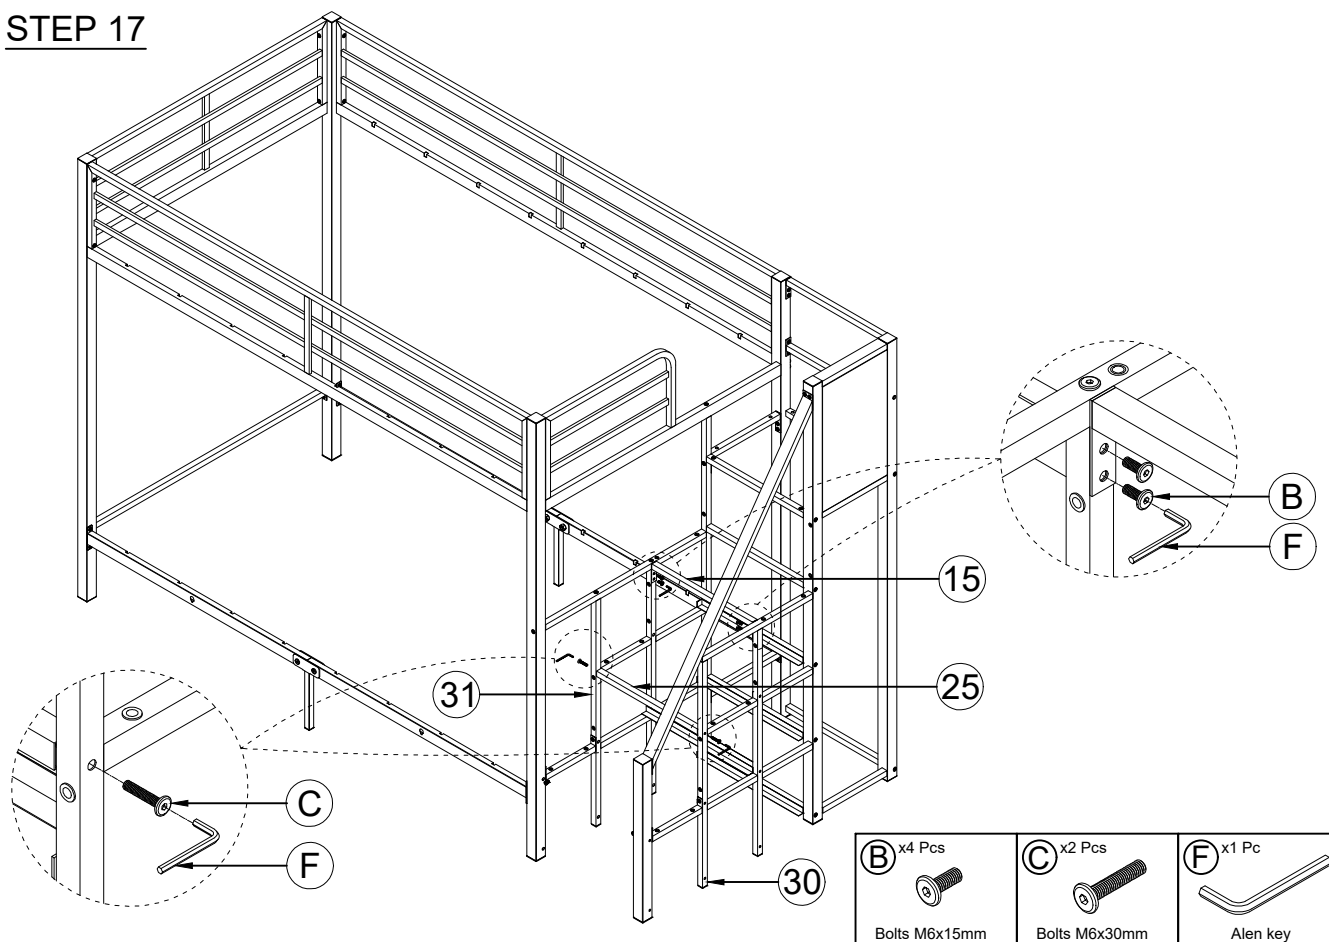



STEP 18

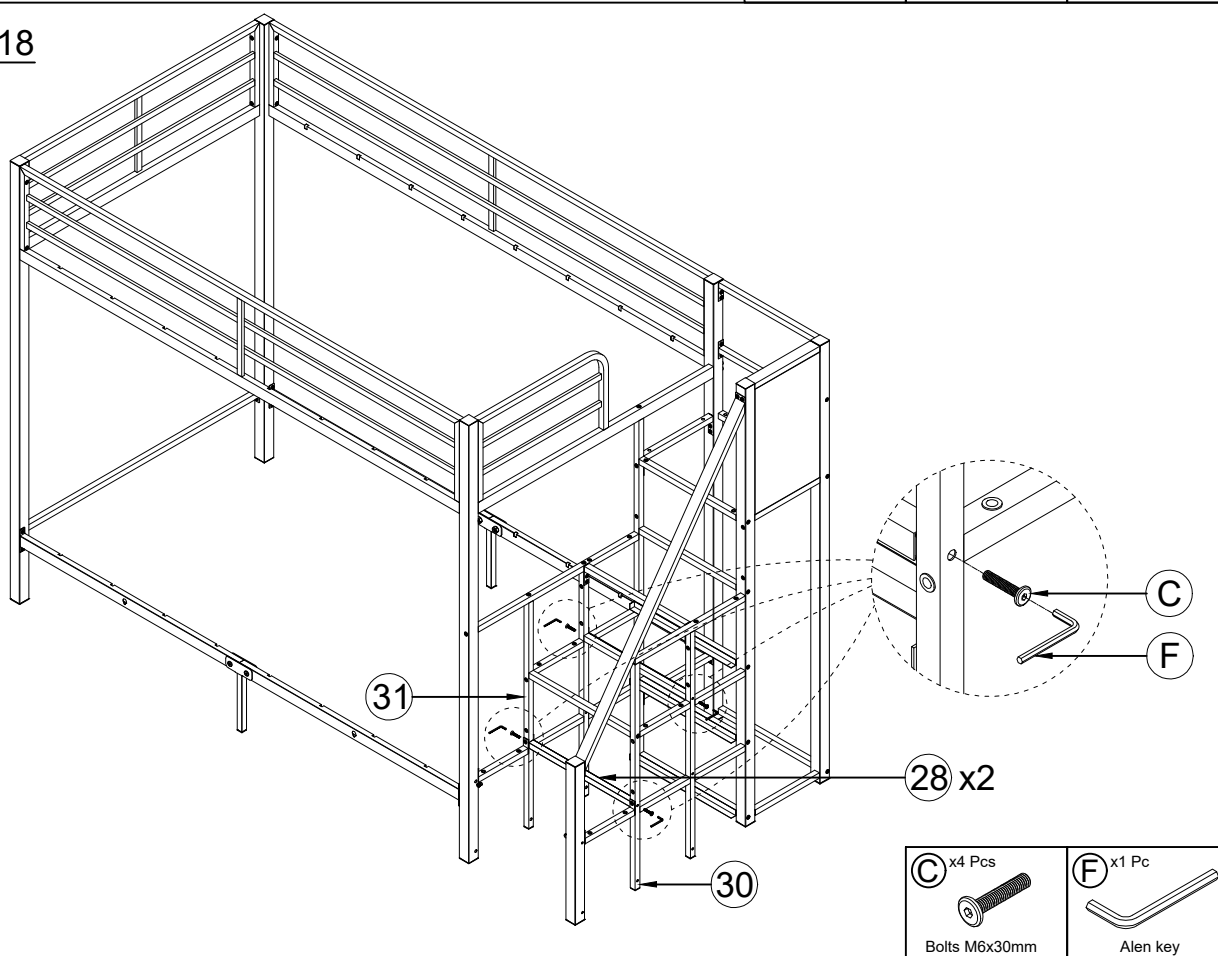


STEP 19

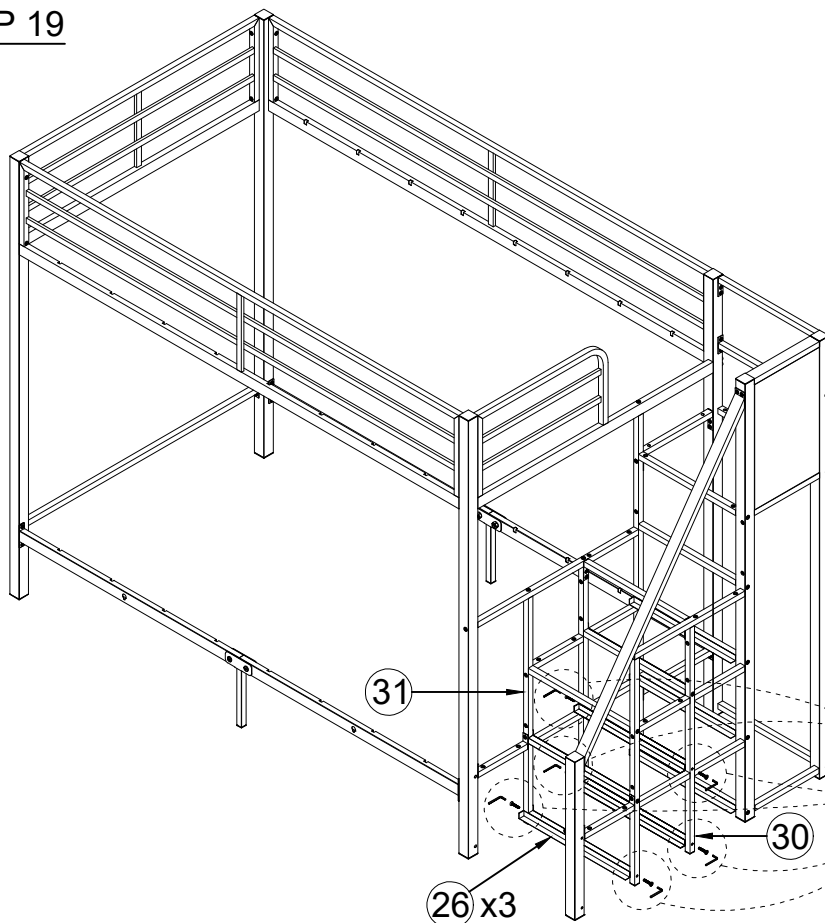

STEP 20

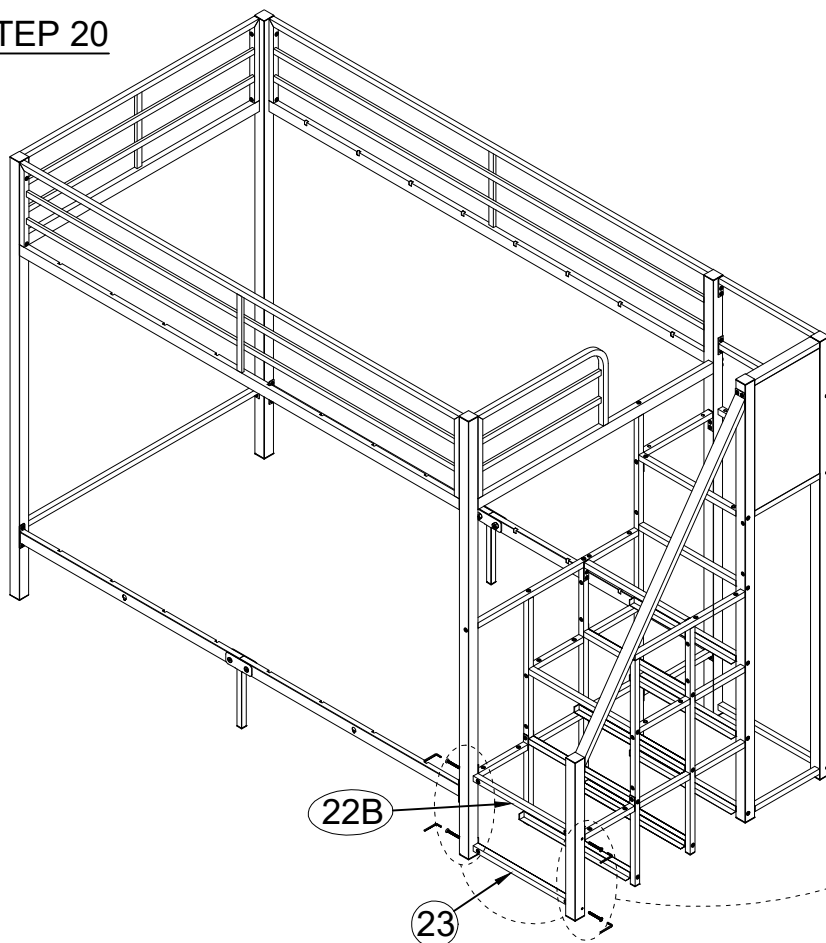

STEP 21

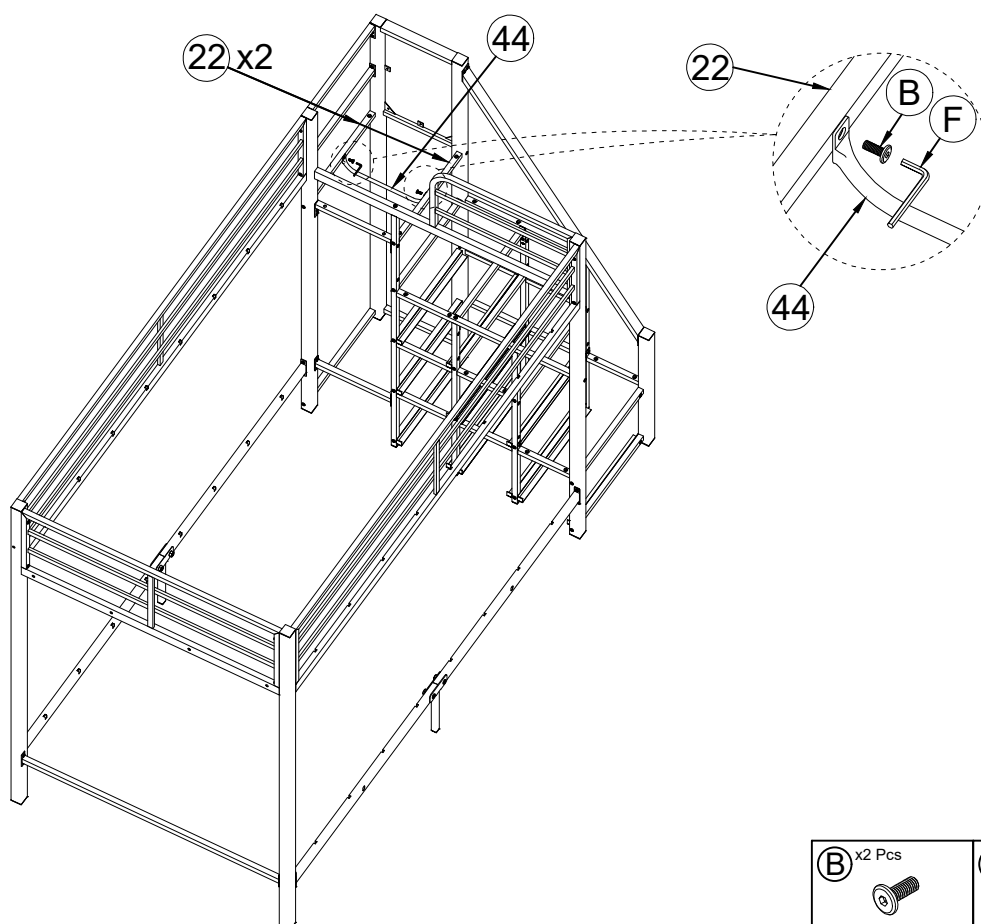

(B) x2 Pcs




Bolts M6x15mm

(F) x1 Pc



Allen key

STEP 22

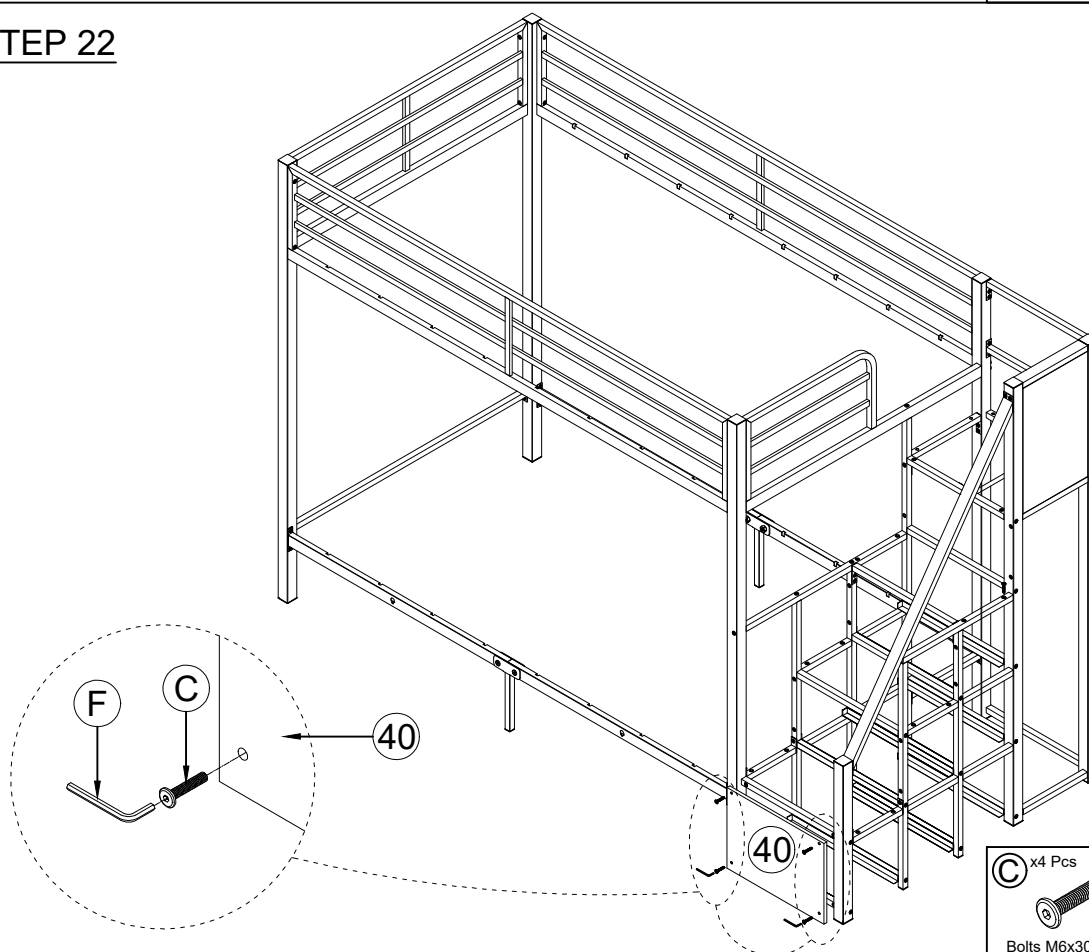

(C) x4 Pcs




Bolts M6x30mm

(F) x1 Pc



Allen key

STEP 23

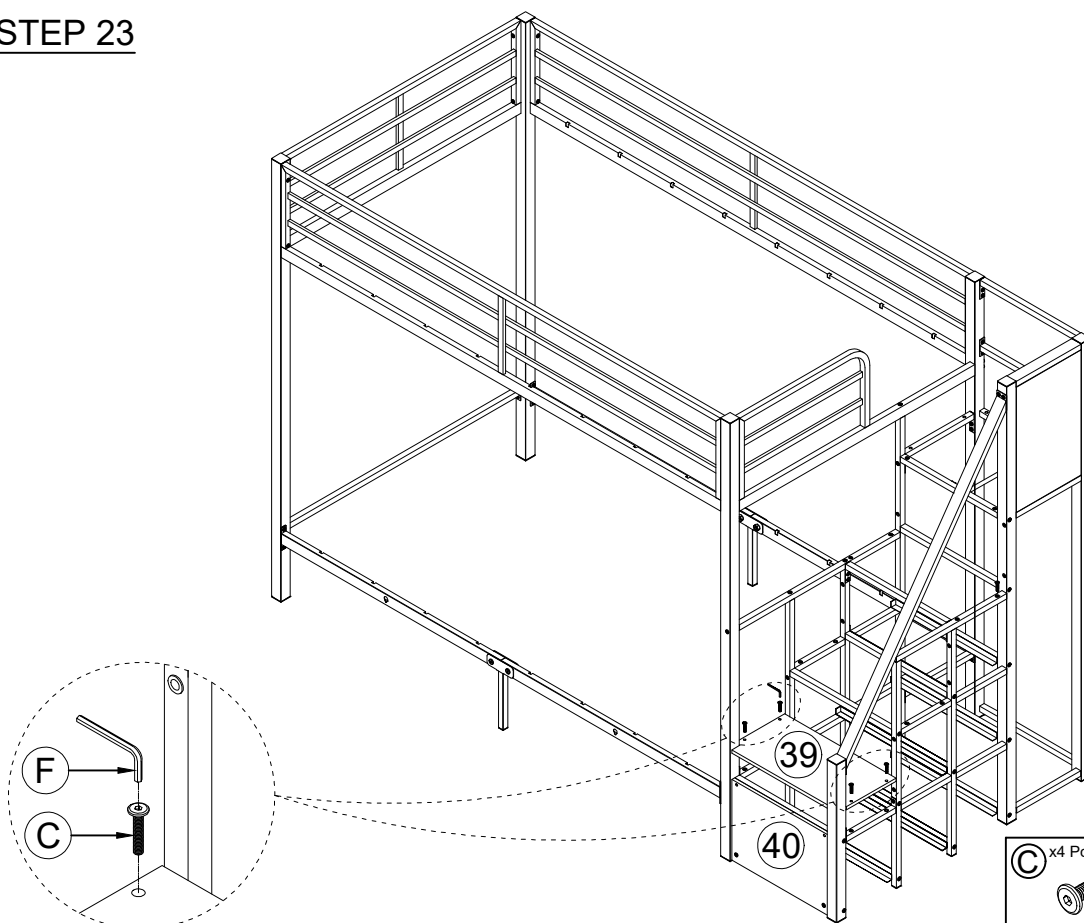


(C) x4 Pcs
Bolts M6x30mm

(F) x1 Pc
Allen key

STEP 24


The subsequent planks are assembled similarly.
Please see page 2 for the exact placement of the planks.

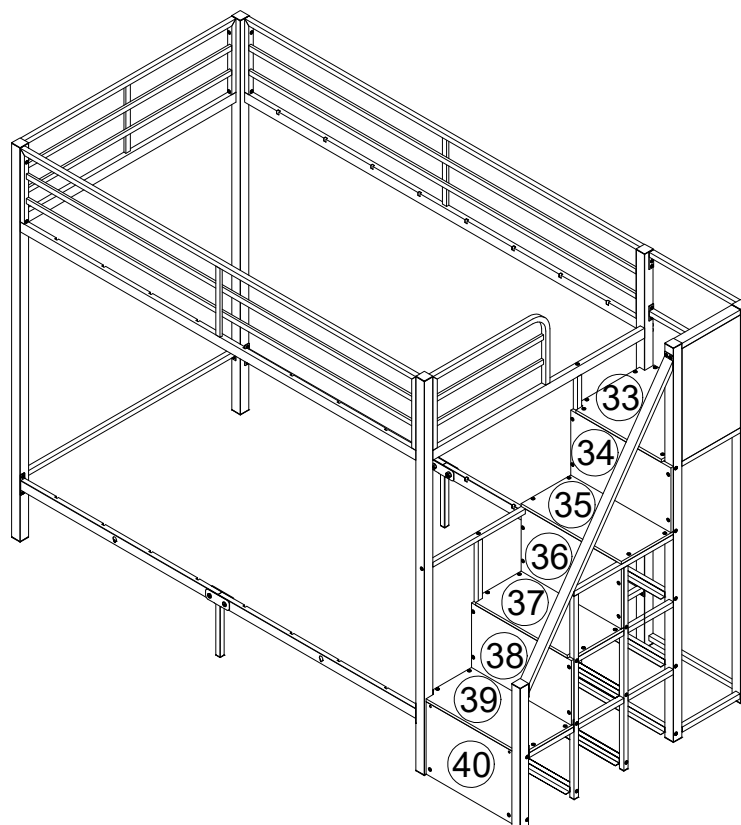


(C) x26 Pcs
Bolts M6x30mm

(F) x2 Pcs
Allen key



STEP 25

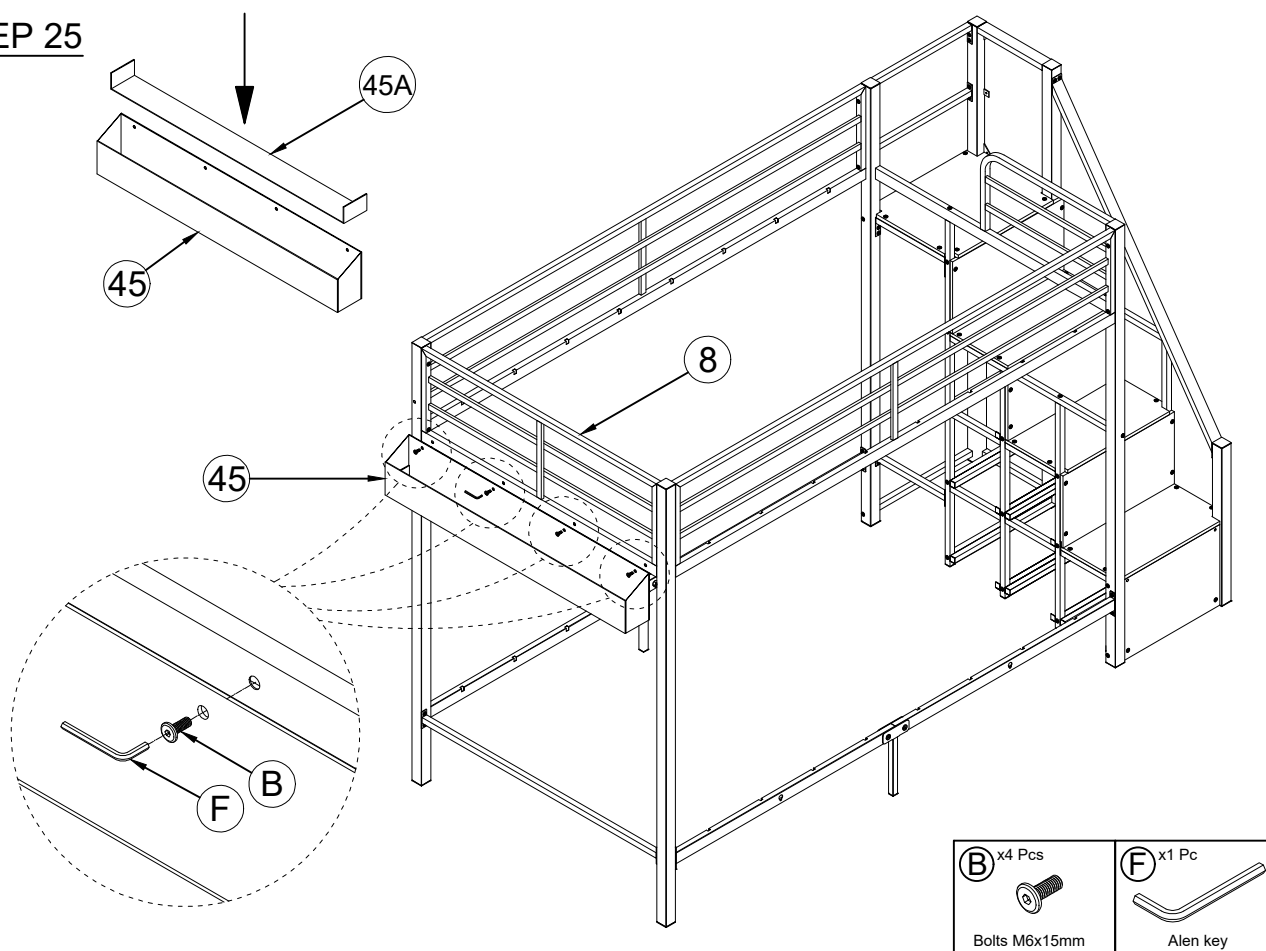


STEP 26

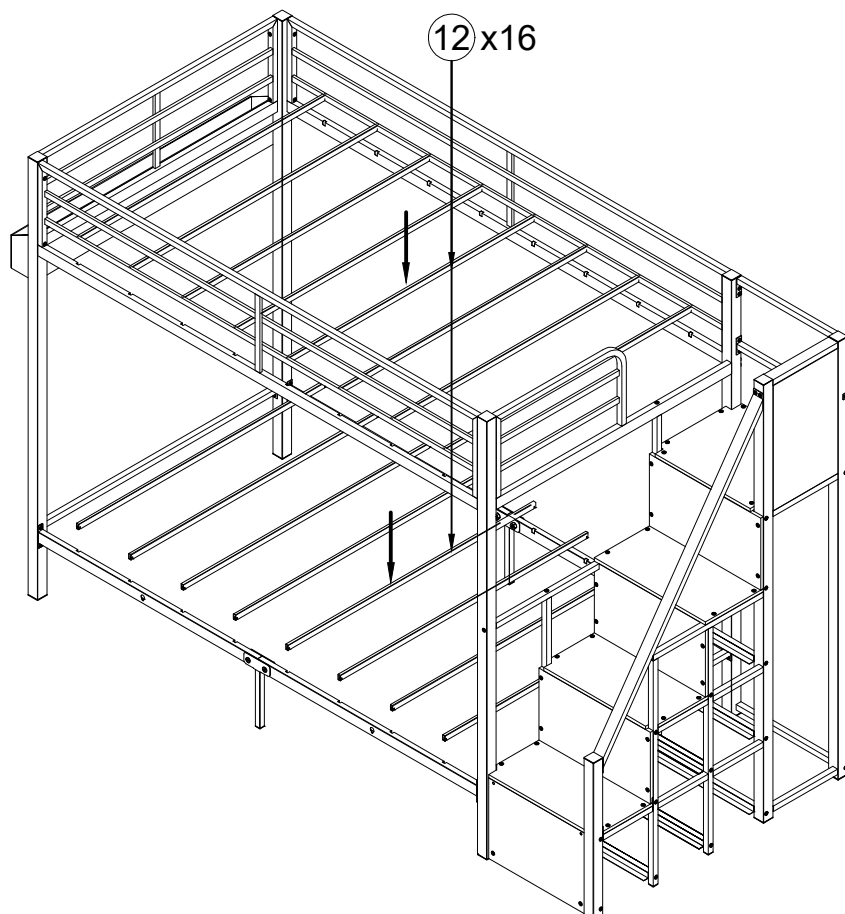


STEP 27

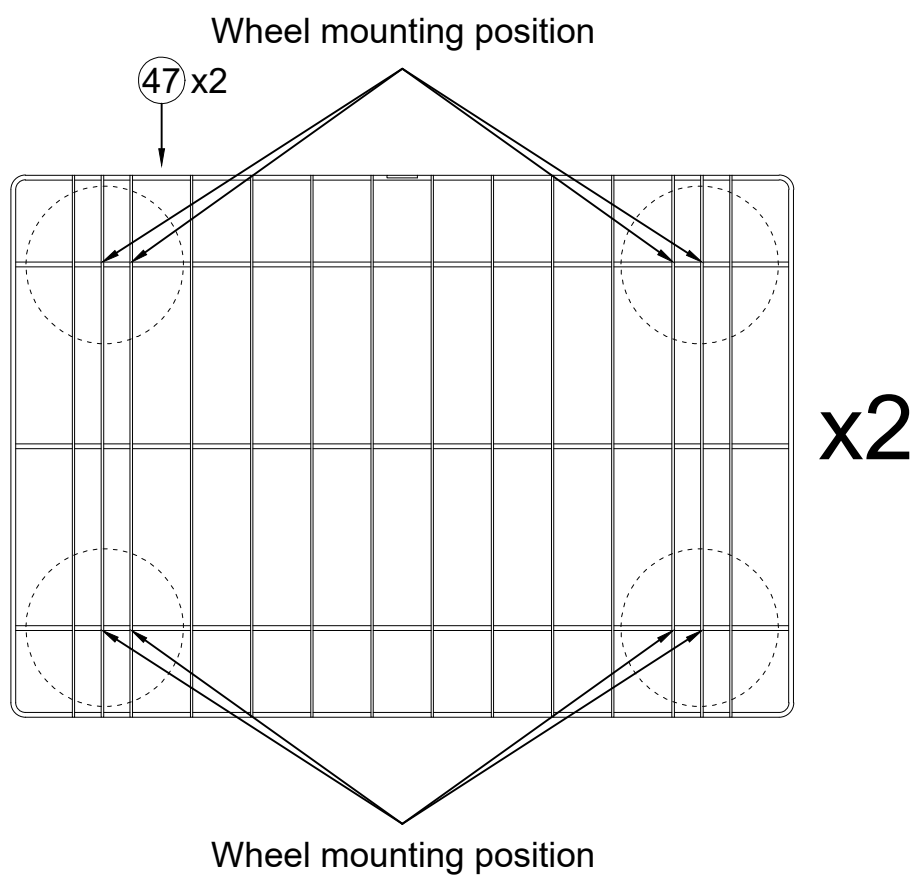


STEP 28

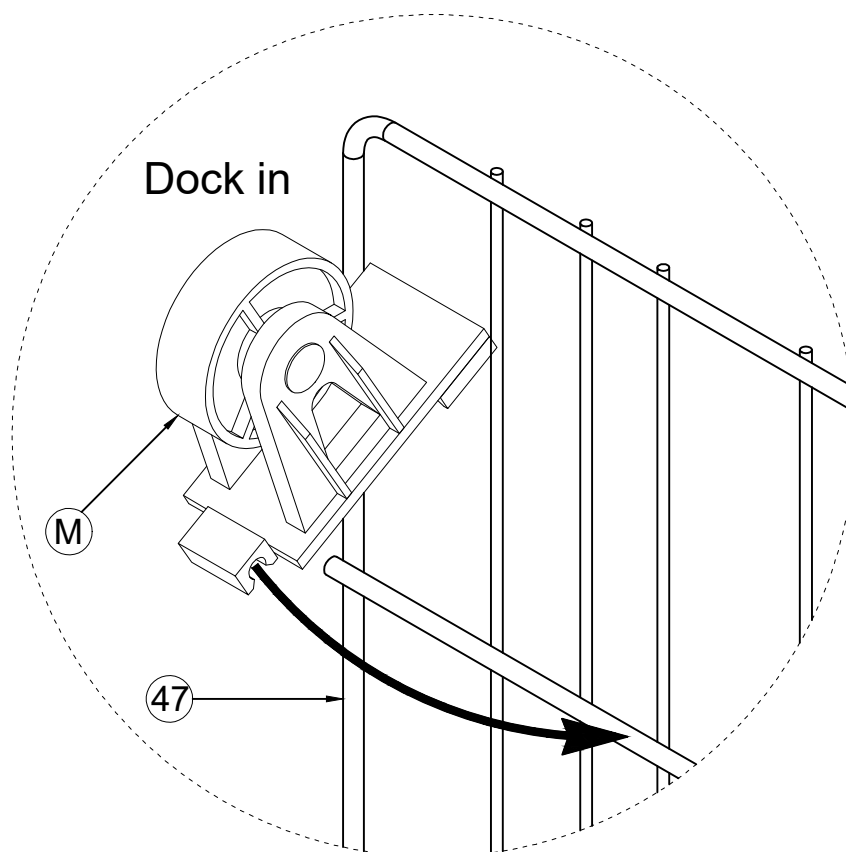

STEP 29

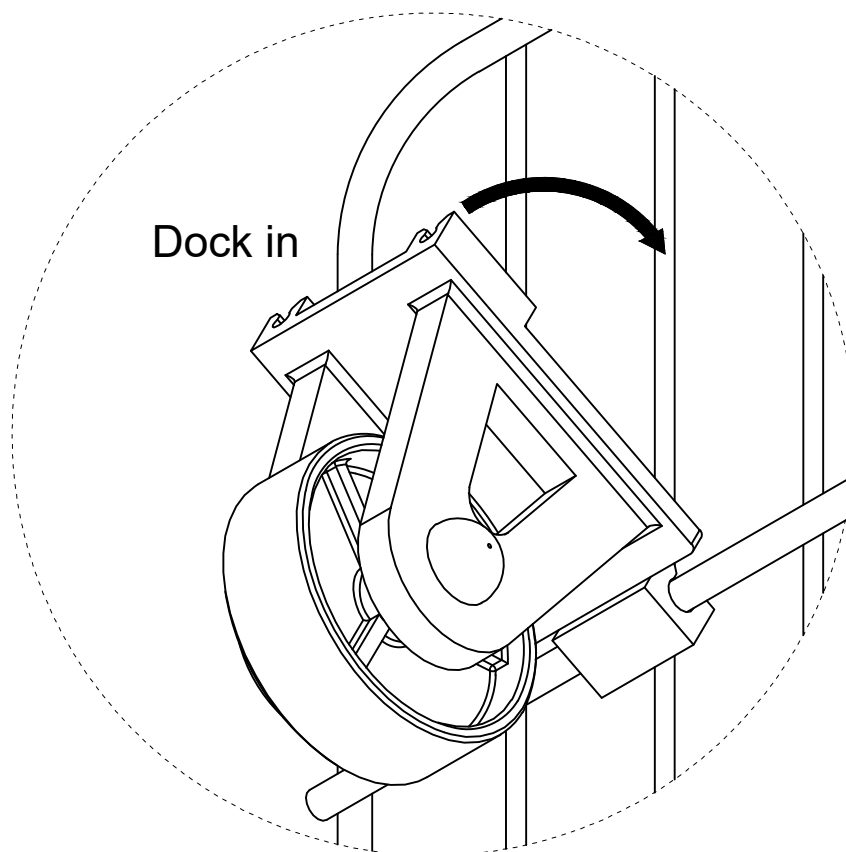


STEP 30


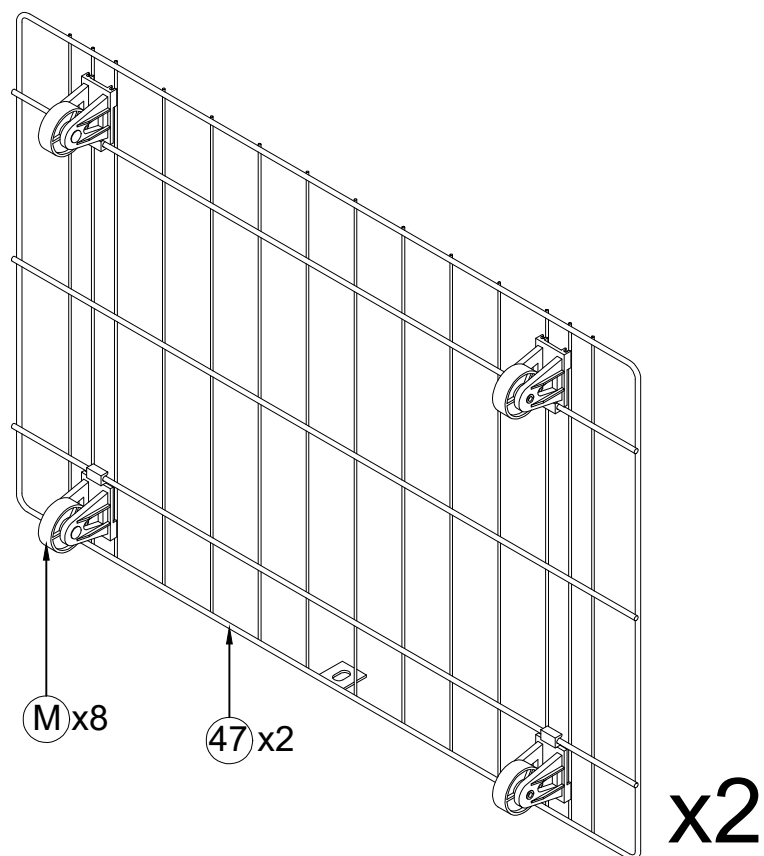


STEP 31


Detailed assembly instructions Q

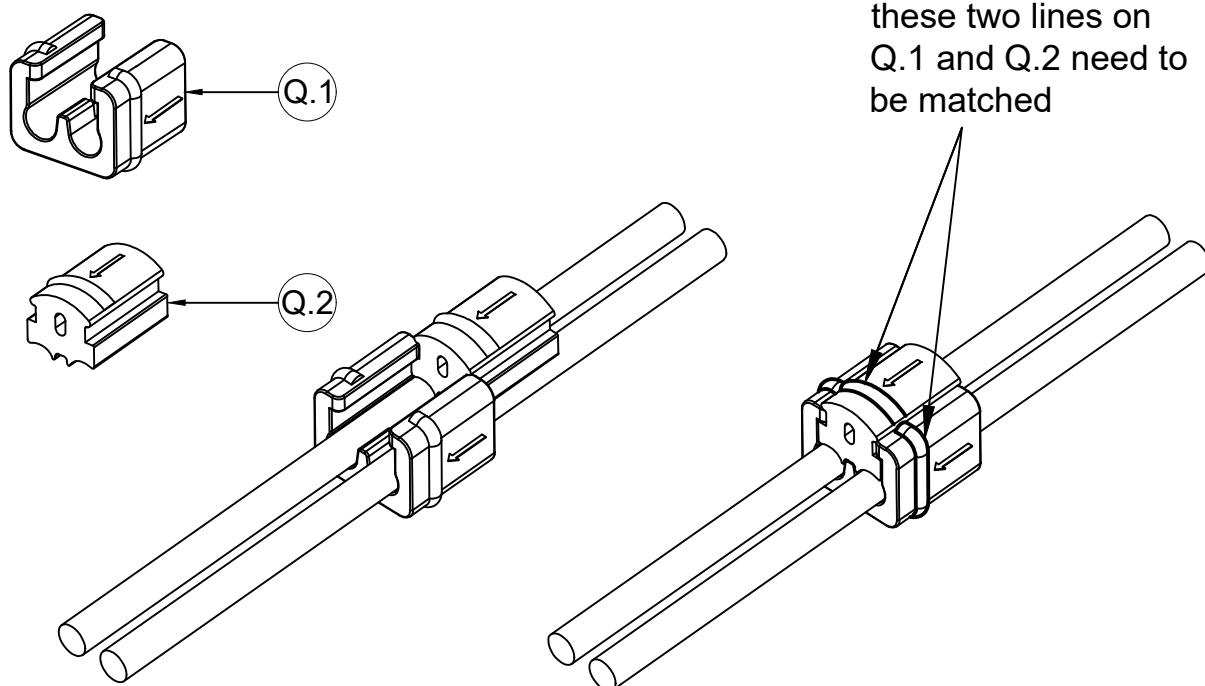


STEP 32

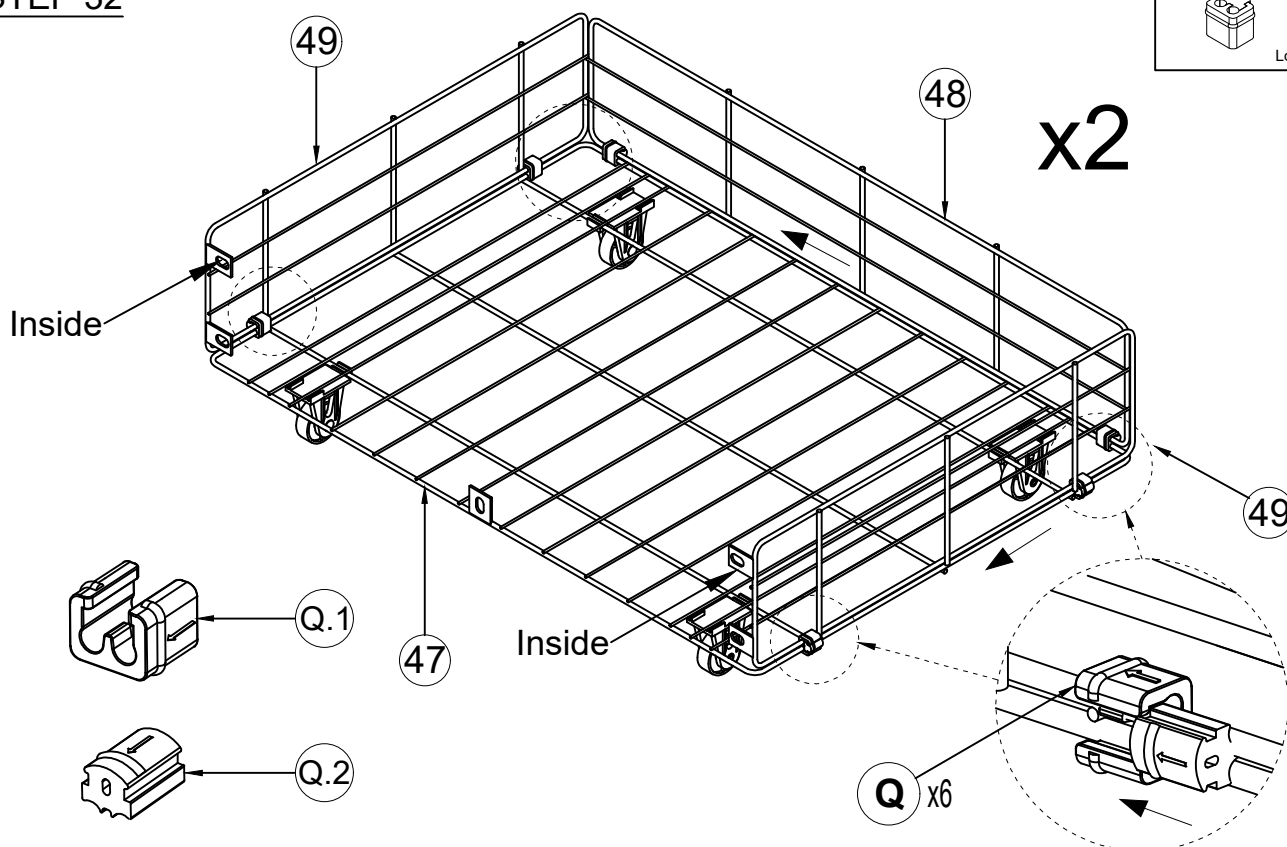


STEP 33

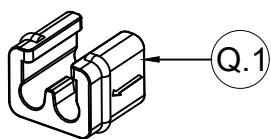


Q.1



Q.2

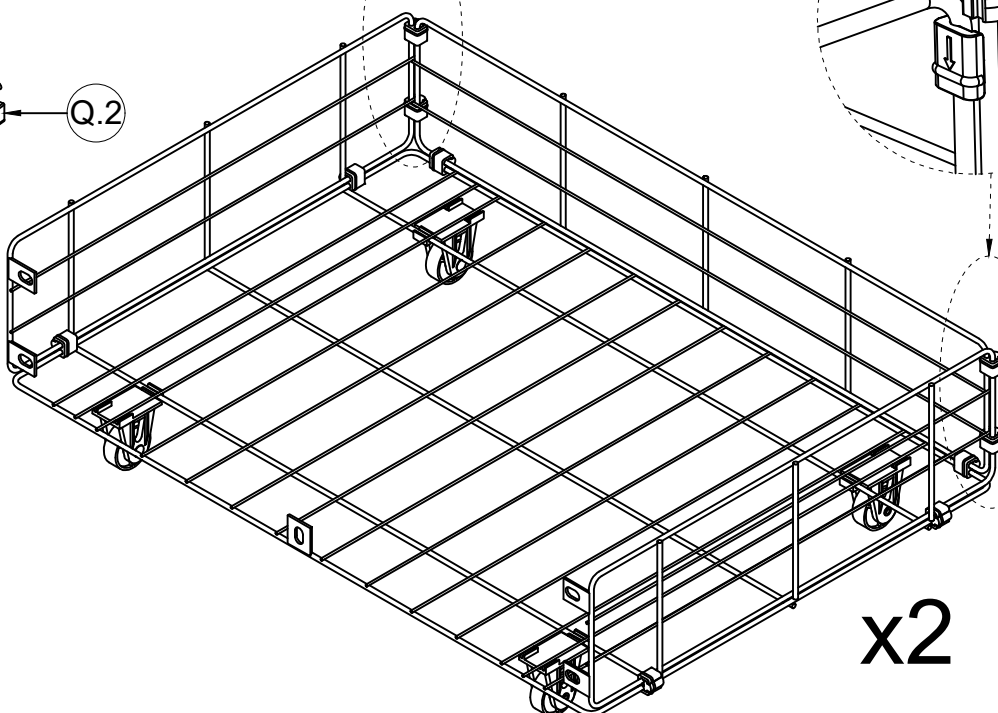

x2



STEP 34

N x10 Pcs



Bolts M6x10mm

L x2 Pcs




Bolts M6x20mm

F x1 Pc




Allen key

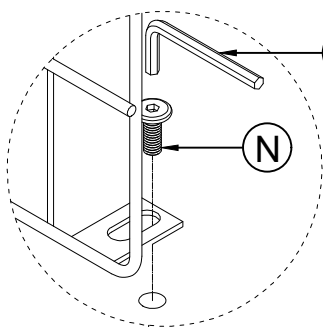


F

N

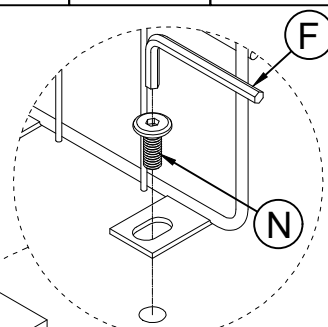


F

N

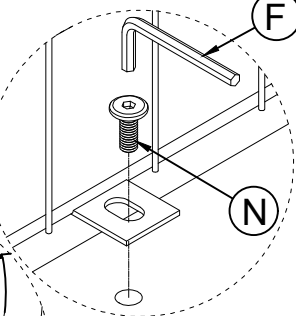

F

N

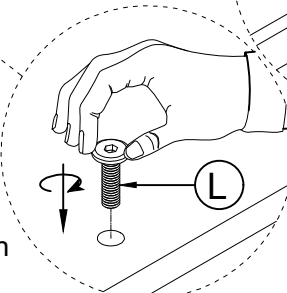


L

x2

Note: Tighten bolt B by hand just enough to avoid damaging the drawer panel.



STEP 35

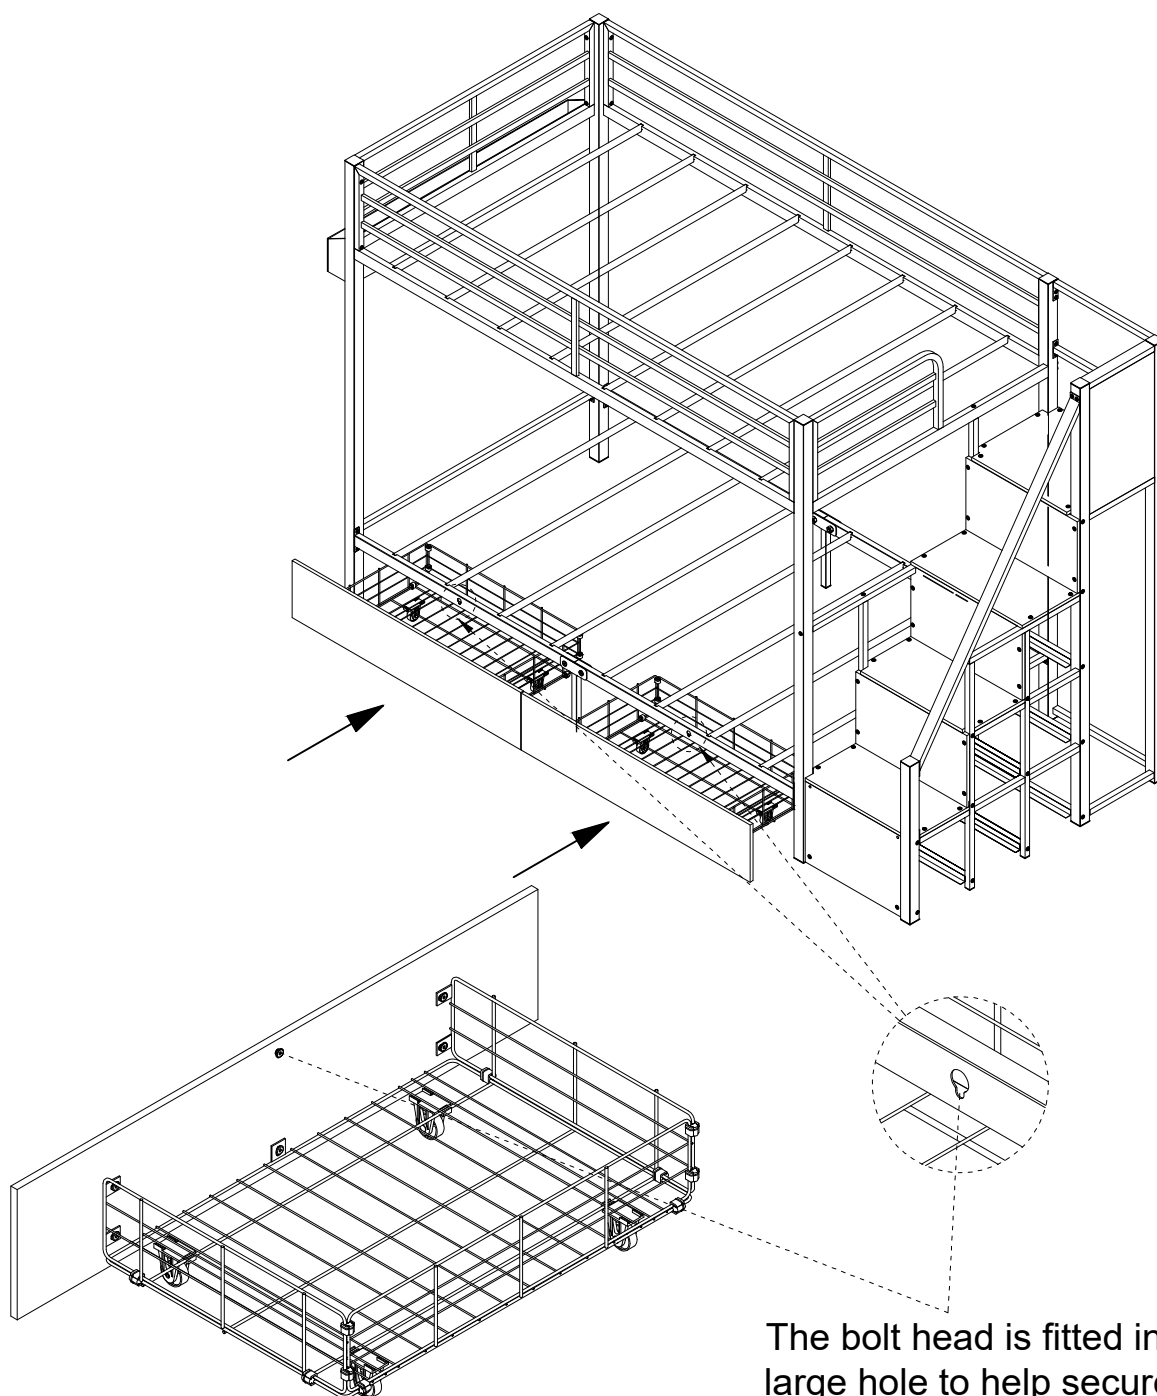


The bolt head is fitted into the large hole to help secure the drawer in place, to open the drawer, simply lift and pull it out.

STEP 36

① x12 Pcs
Screw M4x15

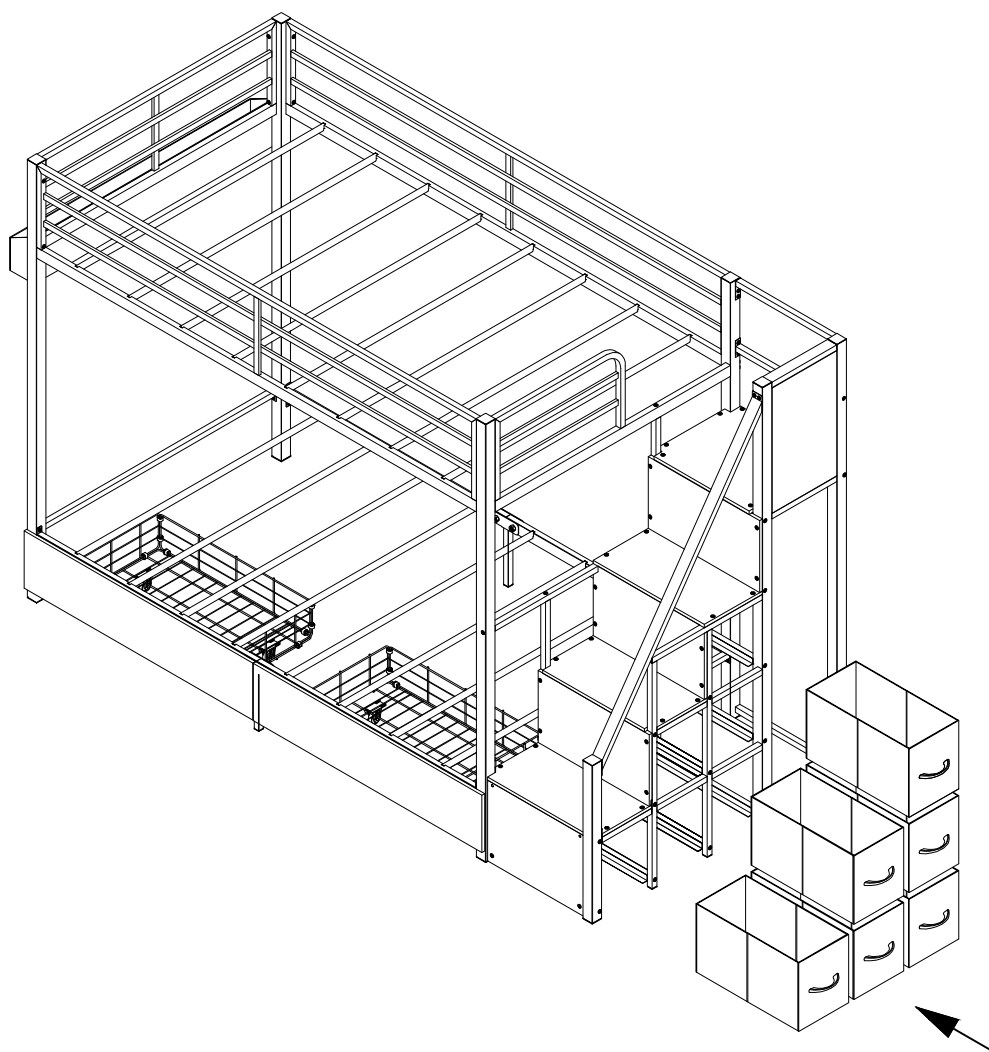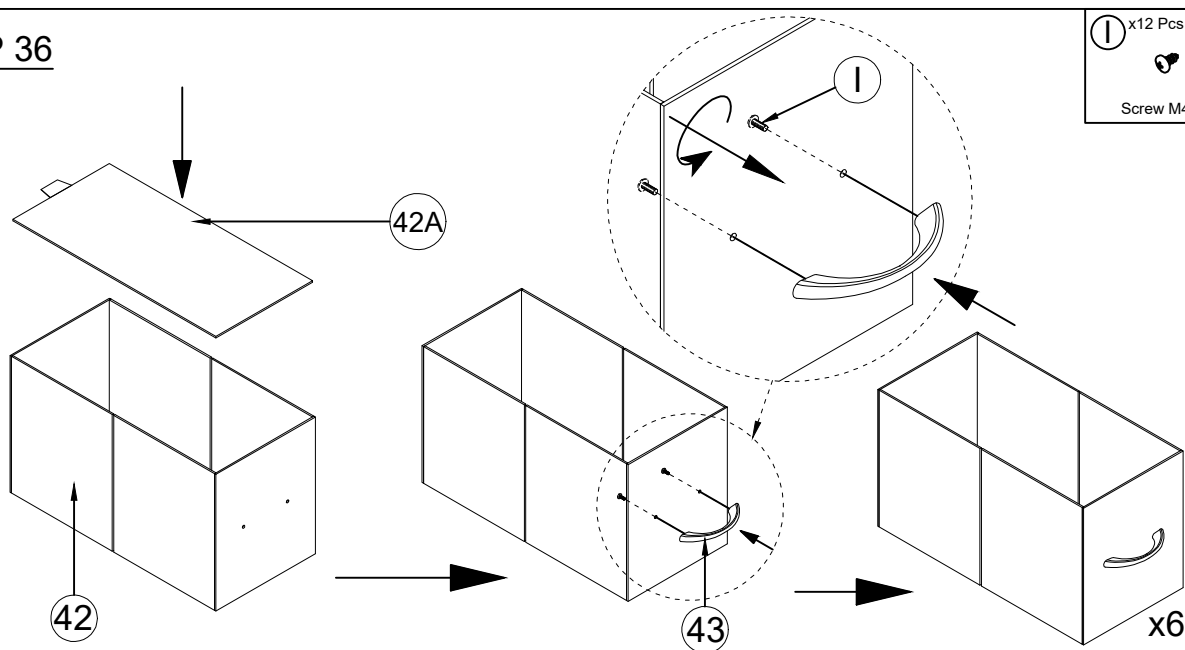


STEP 37

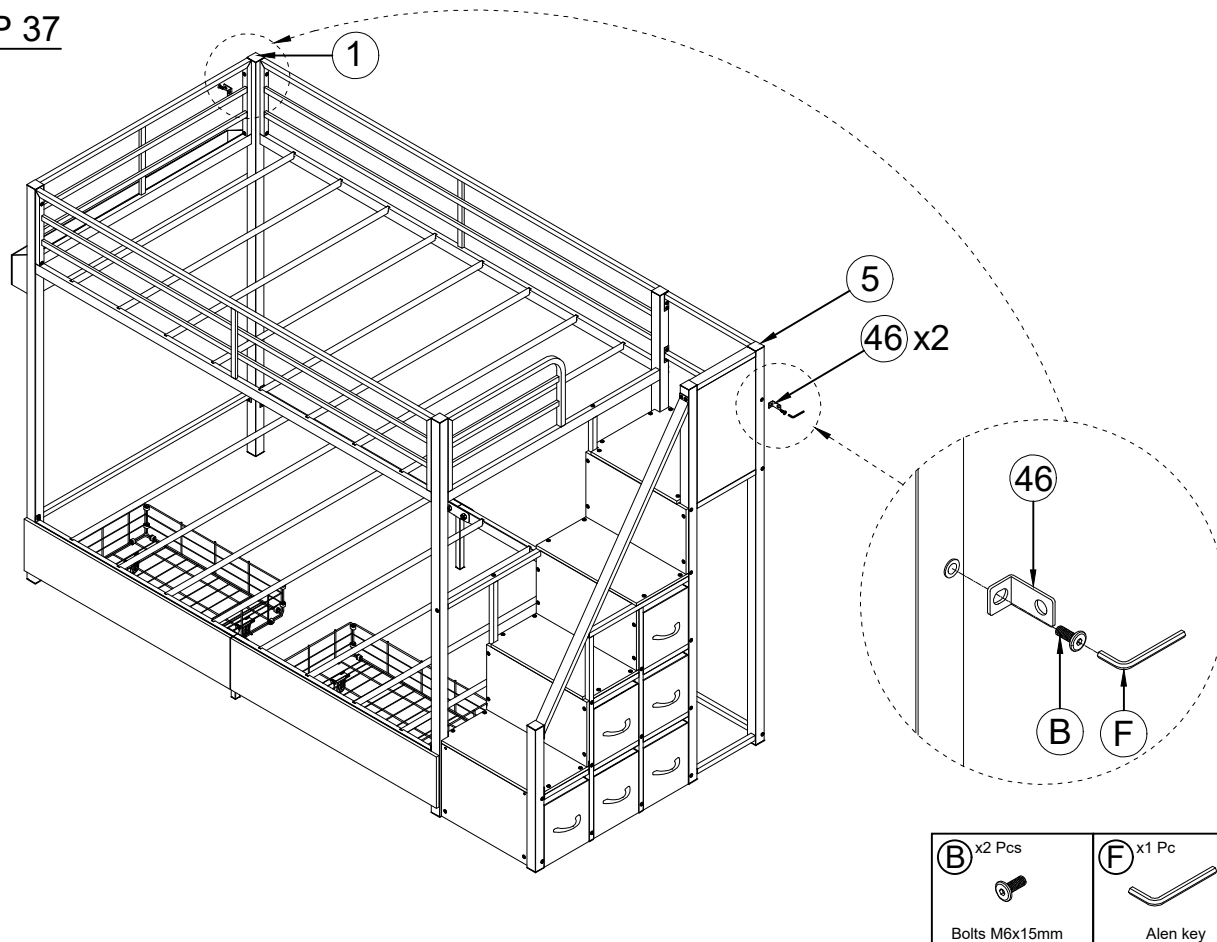


STEP 38


Mark the 2 anti-Overturning (parts 46), then lift the bed to one side and drill with an 8mm drill bit 8cm deep.

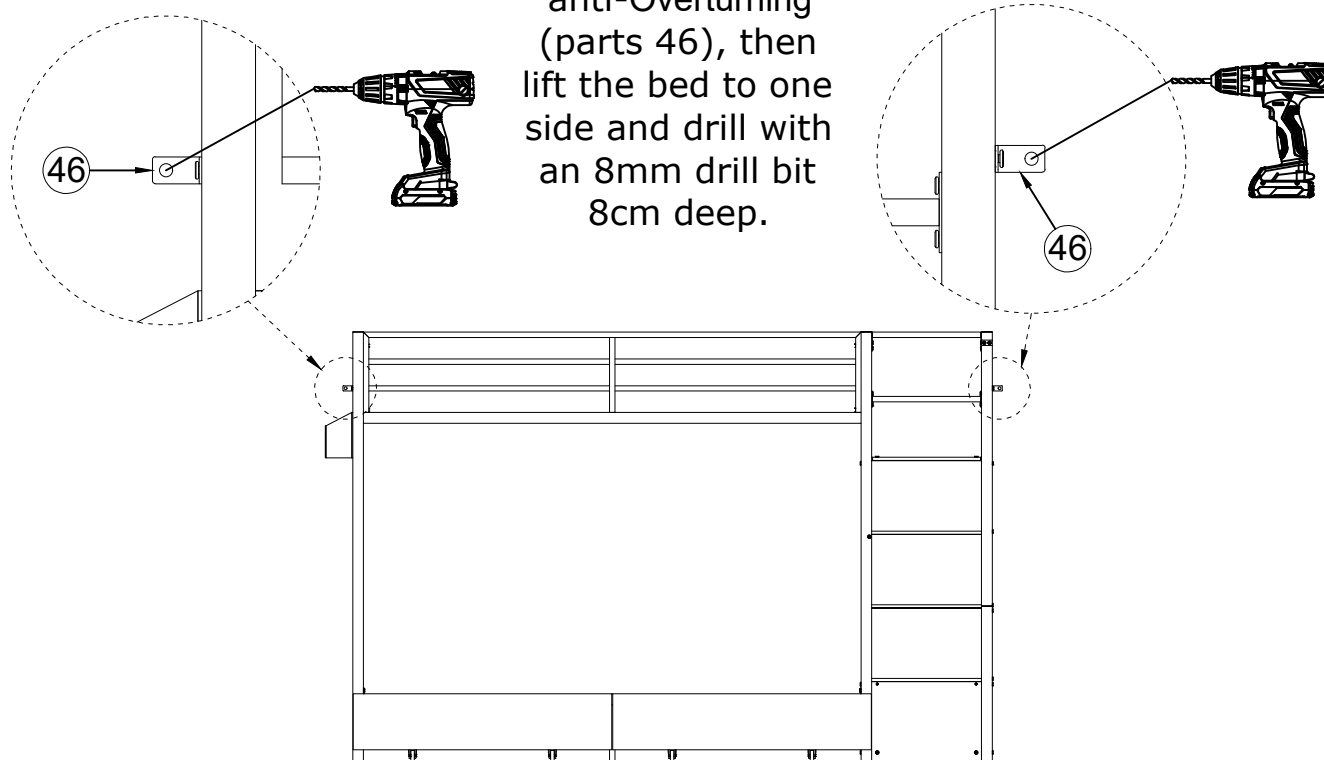


STEP 39

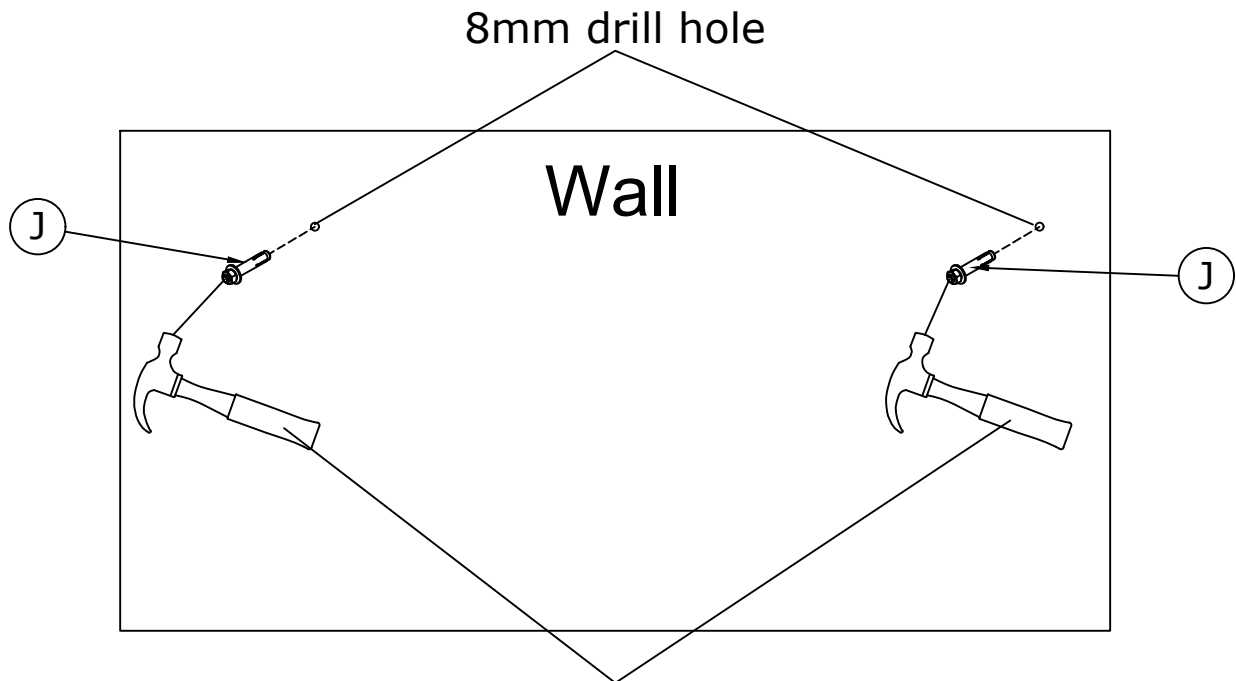


Use a hammer to drive the expanding anchor (J) hook into the 8mm drilled hole.





STEP 40

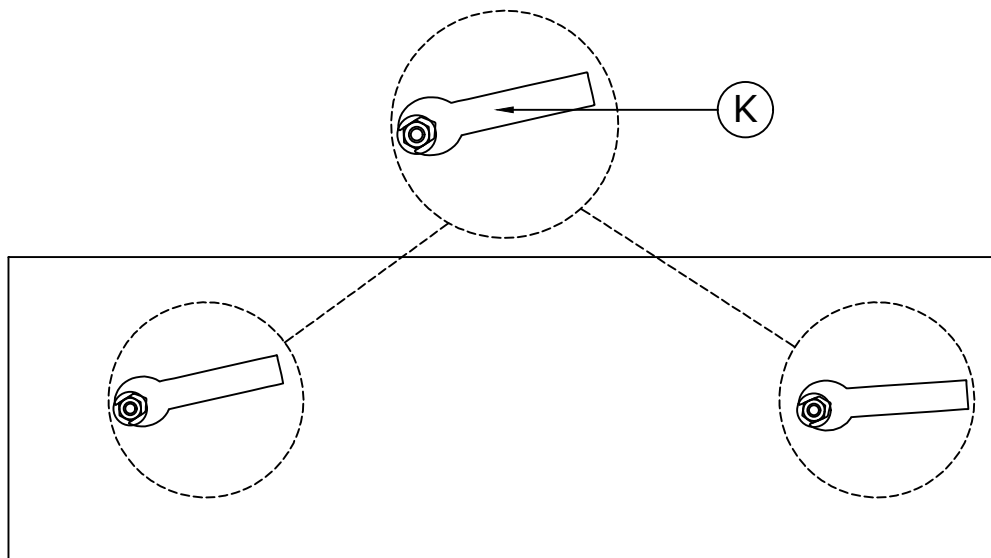

Use wrench (K) to tighten the nuts on the expanding anchor (J) that was just installed, then remove the nuts and washers.



STEP 41

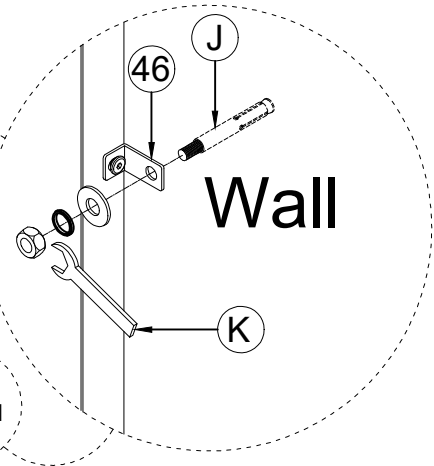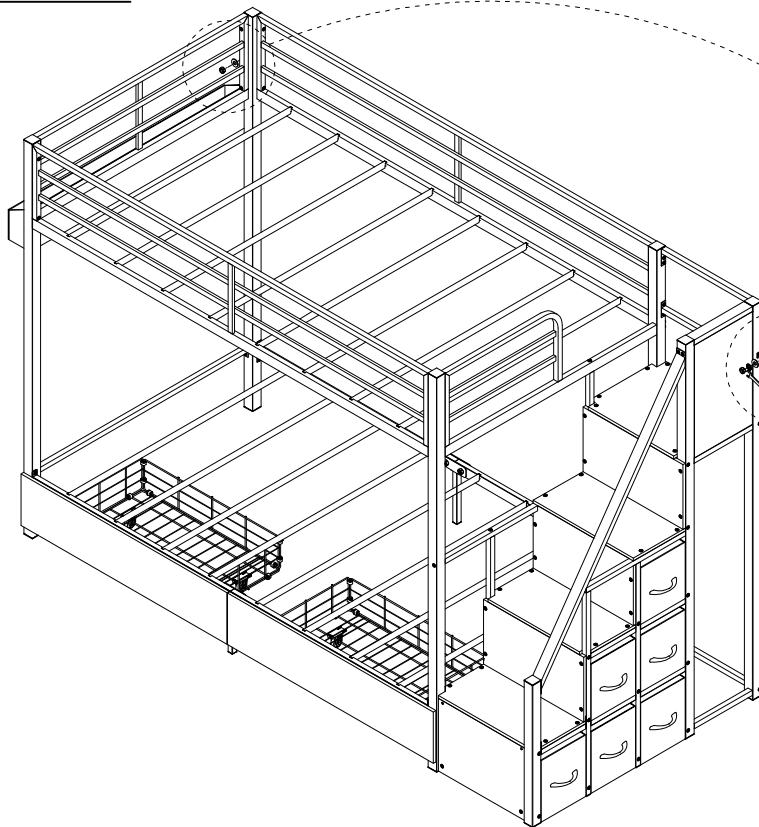

Put the 46 position on the bed into the 2 J bolts, then put the washer and nut in and use the K wrench to tighten it.

COMPLETE

