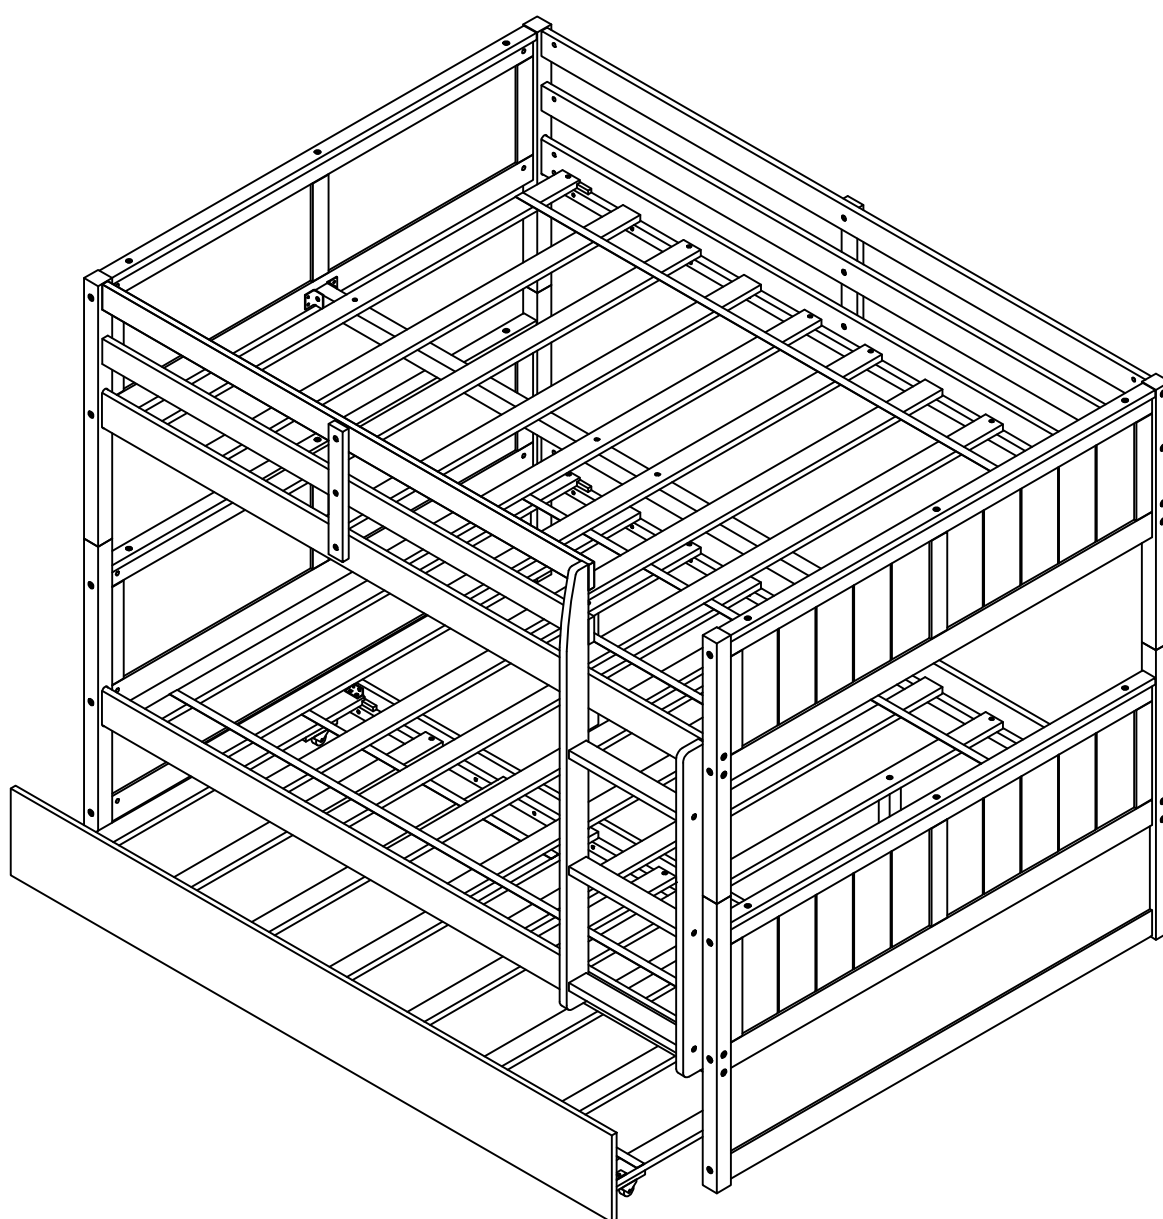



ASSEMBLY INSTRUCTIONS

BUNKBED WITH TRUNDLE













WF194492/WF194493

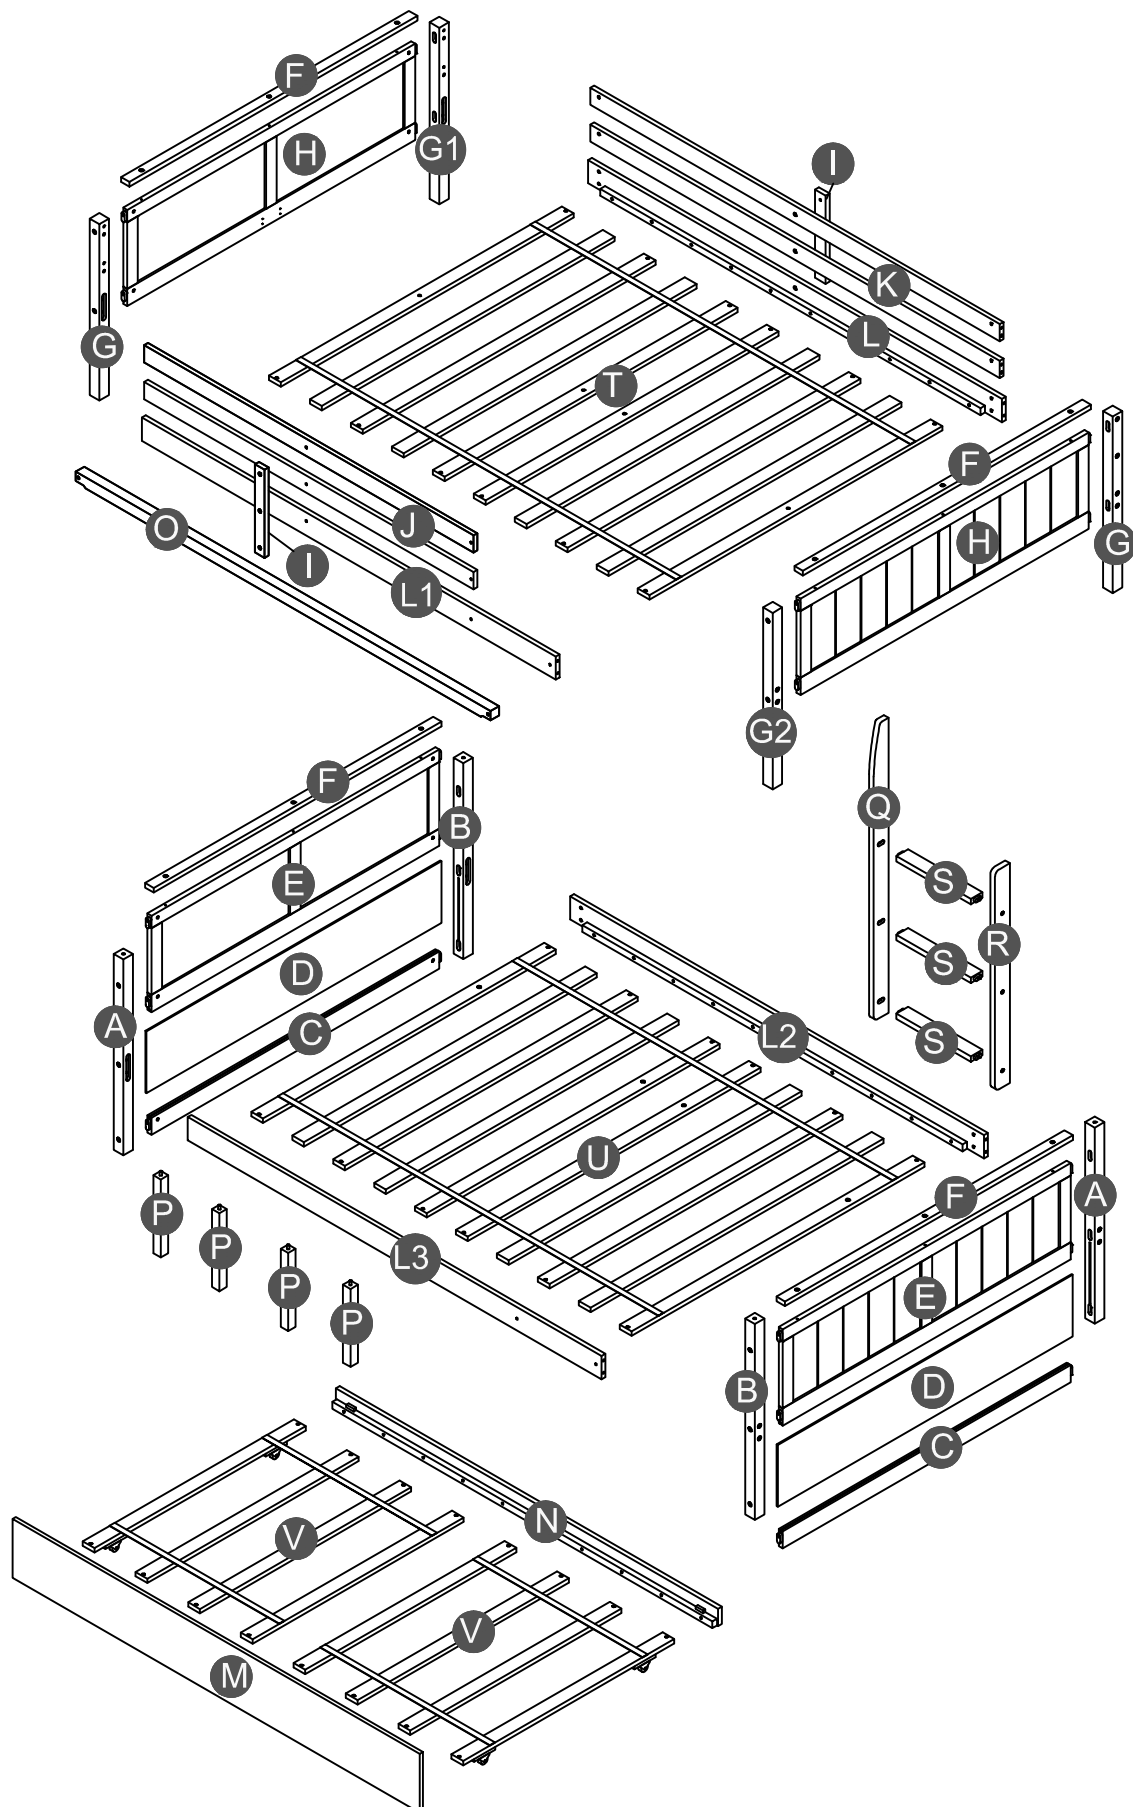Detail View











Part List









Hardware List (WF194492)

A  Lower leg HB&FB (Left)- 2pcs	B  Lower leg HB&FB (Right)- 2pcs	F  Cap for upper HB&FB - 2pcs
G  Upper leg HB&FB (Left,Right)-2pcs	G1  Upper leg HB (Right)-1pc	G2  Upper leg FB (Left)-1pc
I  Vertical guard rail - 2pcs	J  Upper Guard rail (front) - 2pcs	K  Upper Guard rail (back) - 2pcs
L  Upper side rail (back)- 1pc	L1  Upper side rail (front)- 1pc	L2  Lower side rail (back)- 1pc
L3  Lower side rail (front)- 1pc	M  Drawer front panel - 1pc	N  Drawer back panel - 1pc
O  Slat support - 1pc	P  Lower slat support- 4pcs	V  Drawer Slat - 8pcs

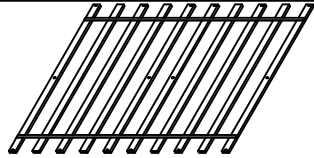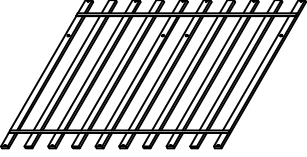
WF194493

C  Horizontal bar - 2pcs	D  Lower Side panel - 2pcs	E  Lower HB&FB (2pcs)
F  Cap for lower HB&FB - 2pcs	H  Upper HB&FB (2pcs)	Q  Left side ladder - 1pc
R  Right side ladder - 1pc	S  Step ladder - 3pcs	T  Upper Slat - 1set (10pcs)
U  Lower Slat - 1set (10pcs)		

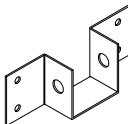Hardware List


1	 Ø10*40mm Wood dowel (6pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (22pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (20pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (6pcs)	5	 (Ø12)1/4"*40mm Hex-Head bolts (8pcs)	6	 (Ø12)1/4"*30mm Hex-Head bolts (6pcs)
7	 (Ø12)1/4"*40mm Hex-Head bolts (12pcs)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(48pcs)	9	 Ø9*90mm Connecting bar (4pcs)
10	 (Ø13)1/4" x 9/16" Hex Cap (2pcs)	11	 116*40*27mm Hooks(2pcs)	12	 Ø3.5*15mm Wood screws (8pcs)
13	 100*65*20mm Wheels (4pcs)	14	 Ø4*30mm Wood screws (52pcs)	15	 (1/4")4.5*58mm Allen key (2pcs)
16	 95*95*18*3mm Metal bracket (2pcs)	17	 Ø3.5*15mm Wood screws (16pcs)	18	 40*18*18*2mm Metal bracket (2pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

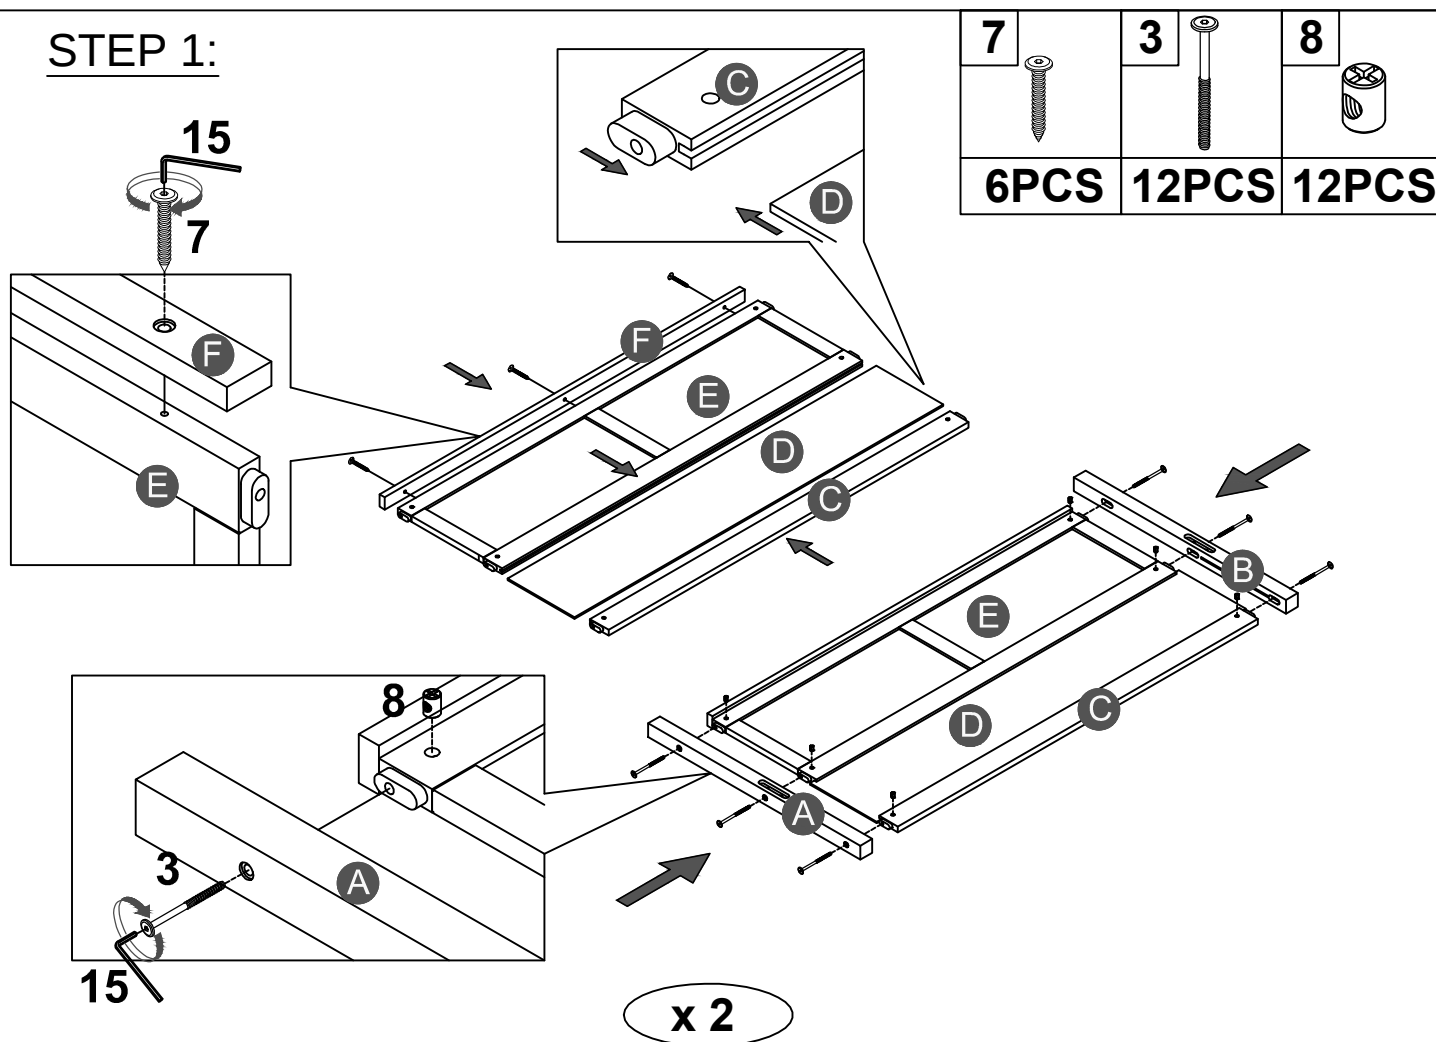STEP 1:



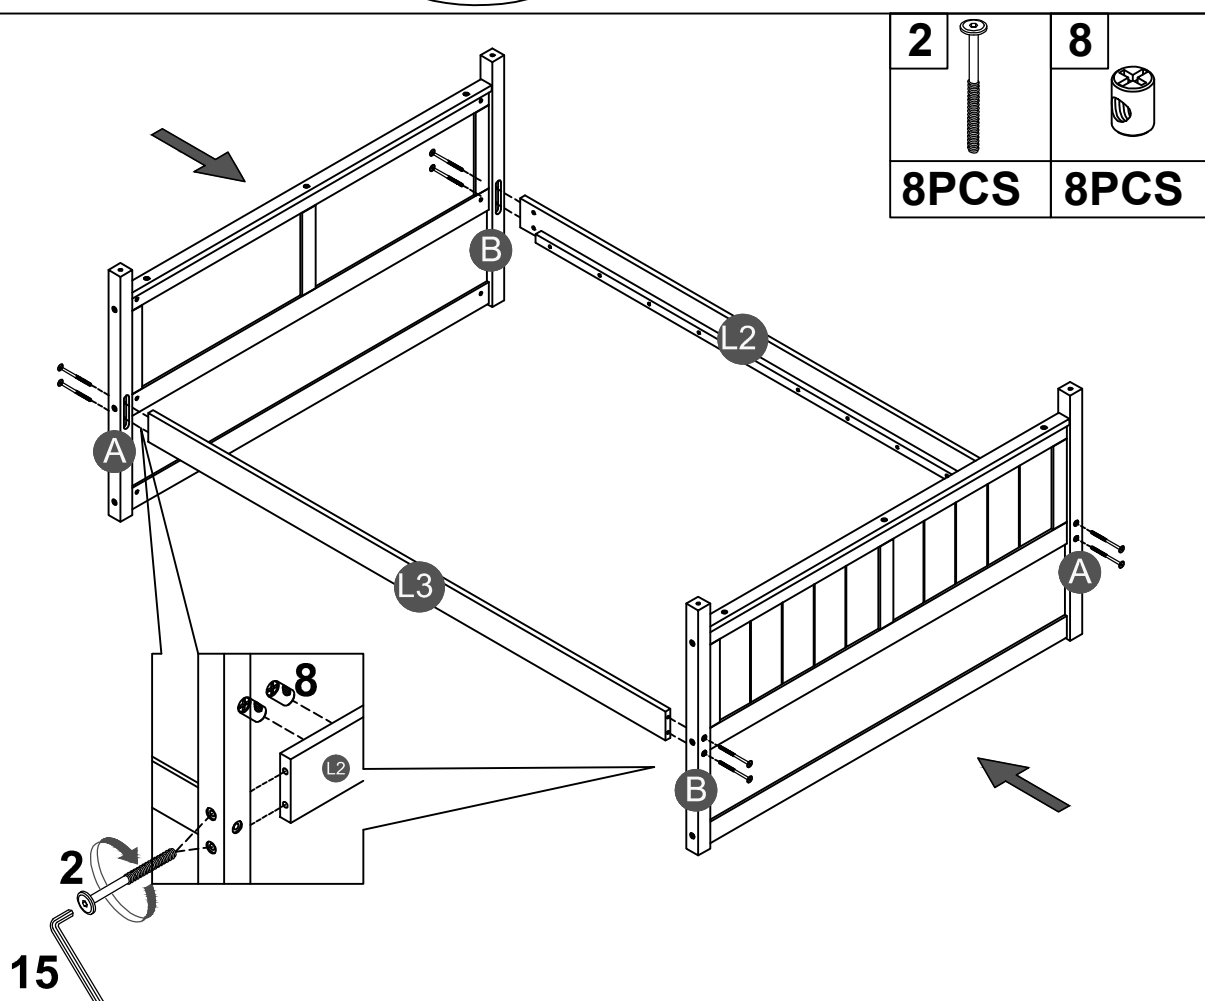STEP 2:




STEP 3:

7



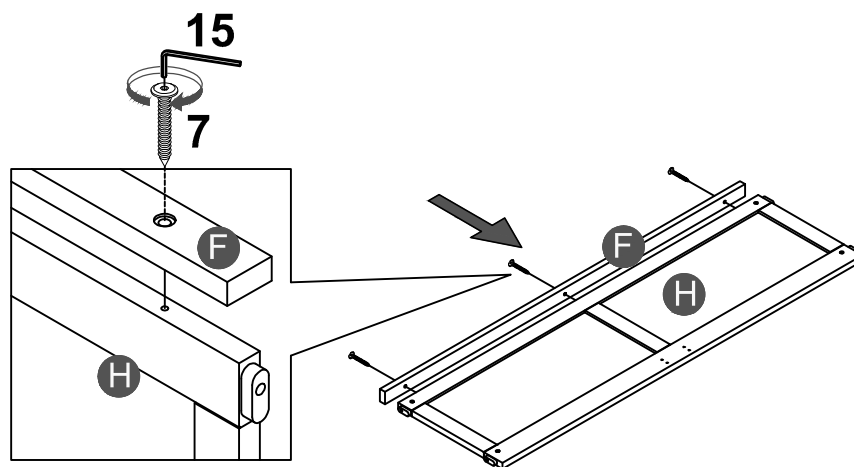6PCS



x 2

STEP 4:

3

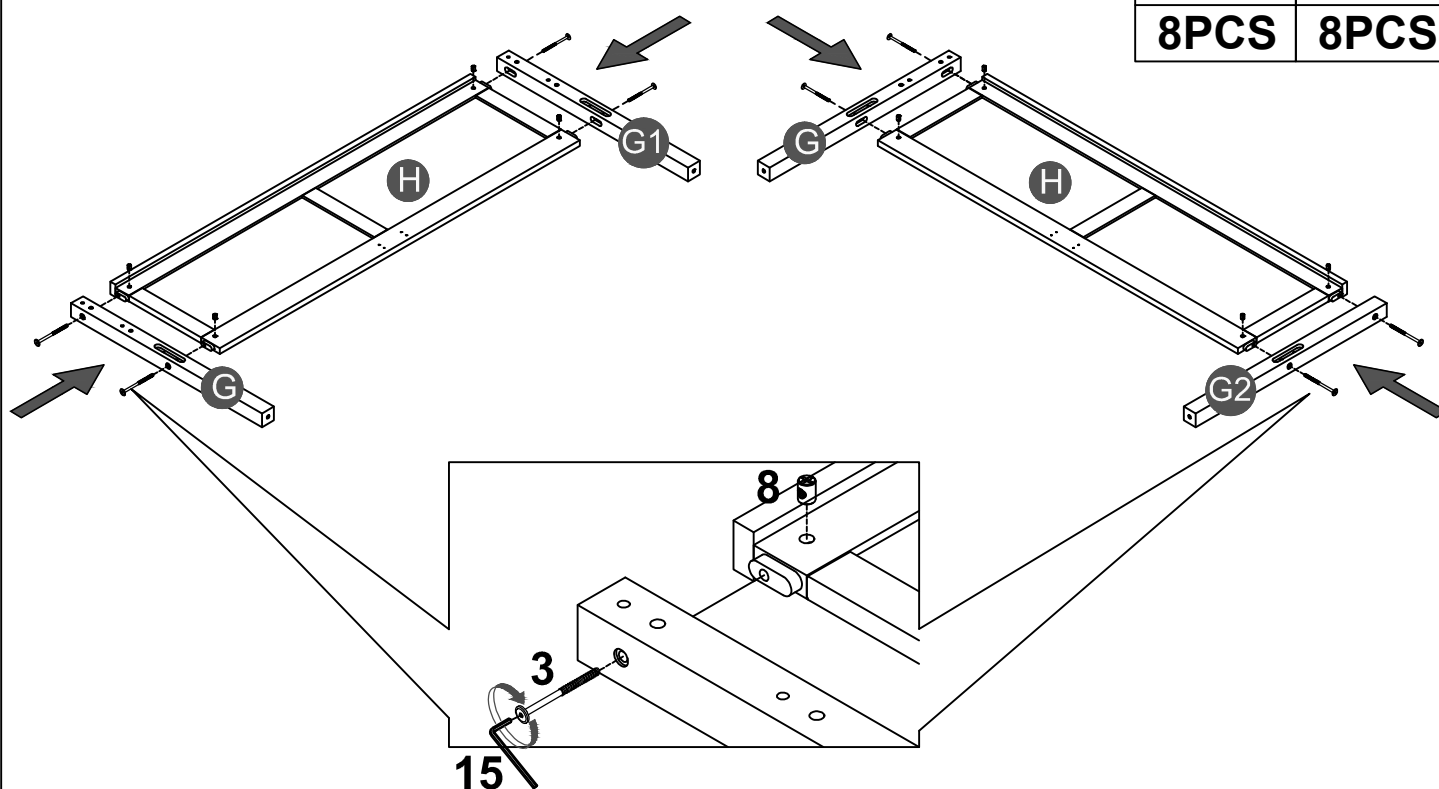


8PCS

8



8PCS



STEP 5:


1	2	6
6PCS	14PCS	6PCS

8
14PCS


STEP 6:

The diagram illustrates the final assembly step. On the left, a detailed view shows a vertical post (labeled 9) being inserted into a hole in the frame. A large arrow points down to indicate the direction of insertion. On the right, a larger view of the frame shows the four posts being installed. The posts are labeled A, B, G, G1, and G2, indicating their positions on the frame. A large arrow points down to indicate the direction of insertion.



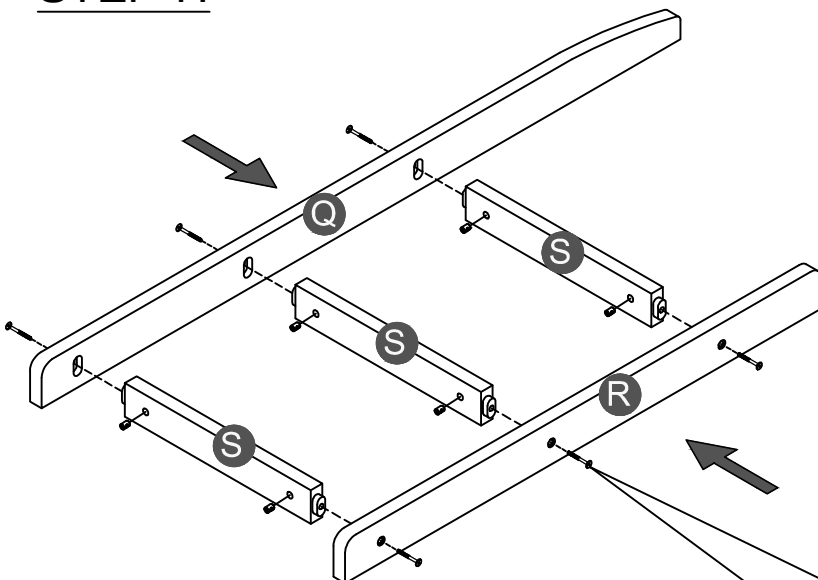
STEP 7:





4		8	
6PCS		6PCS	


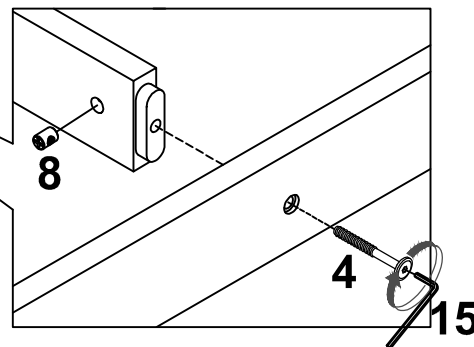


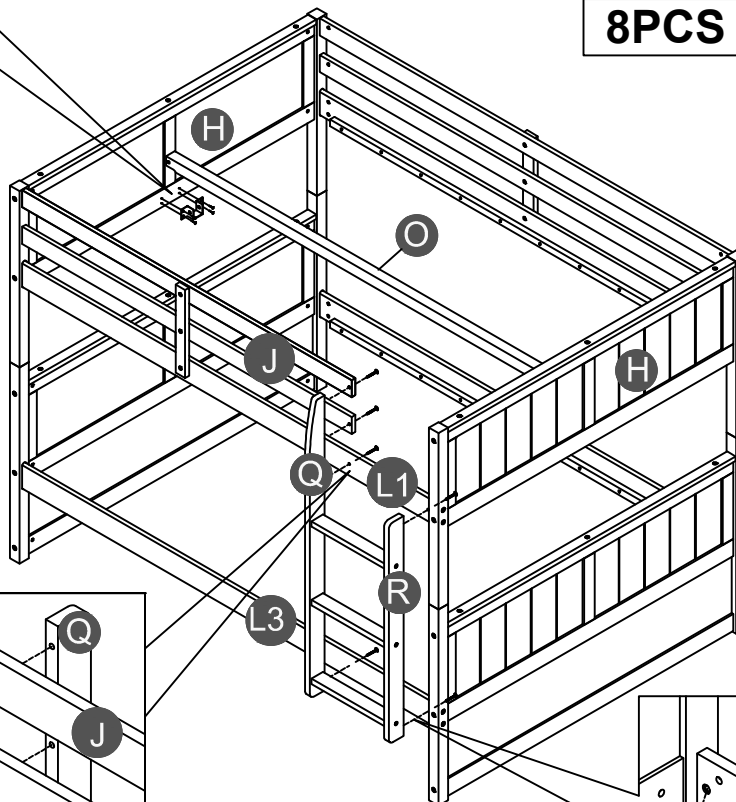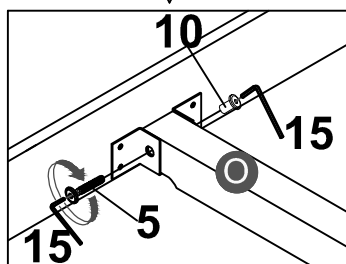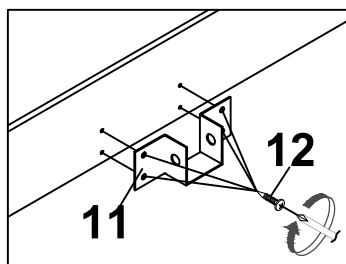STEP 8:




5		10		11	
8PCS		2PCS		2PCS	


12	
8PCS	

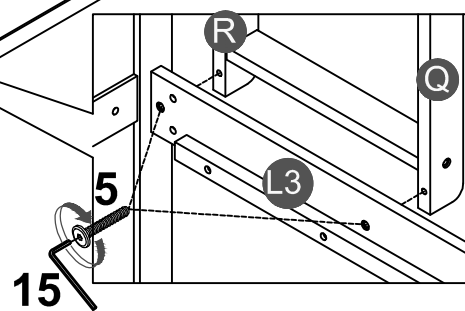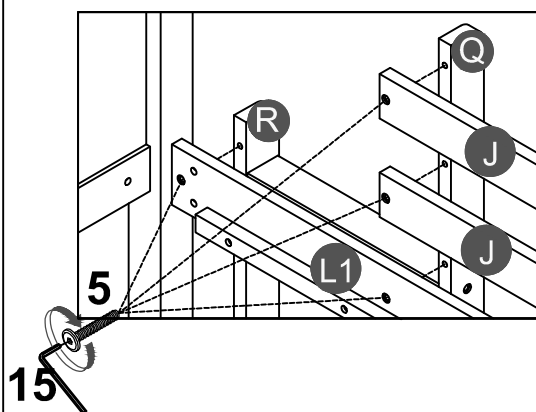



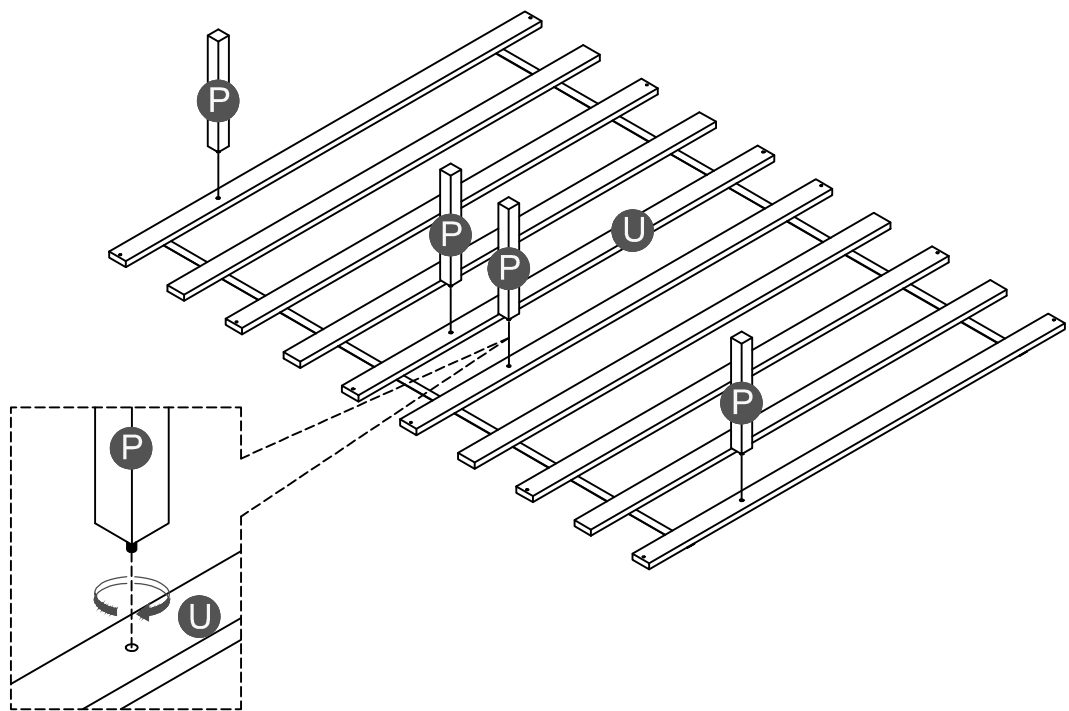
STEP 9:



STEP 10:



14

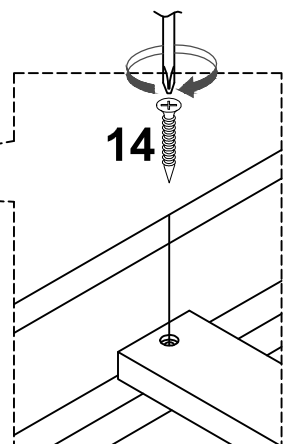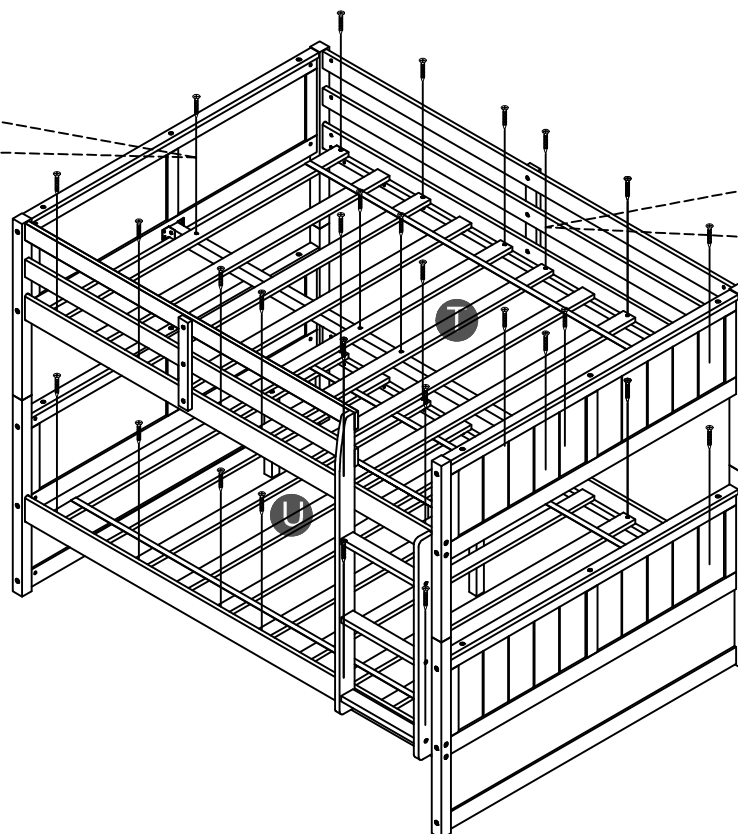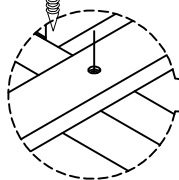

14



14



28PCS

STEP 11:



13	14
	
4PCS	8PCS

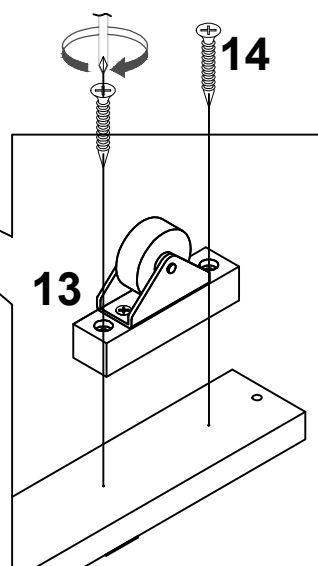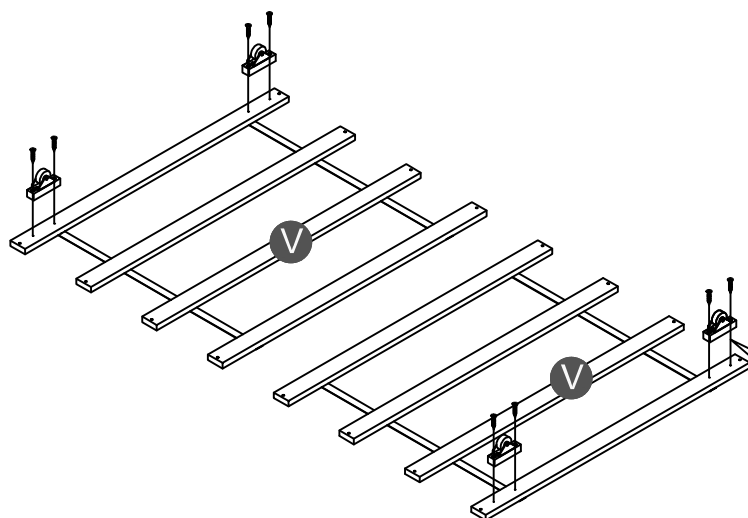


STEP 12:

14

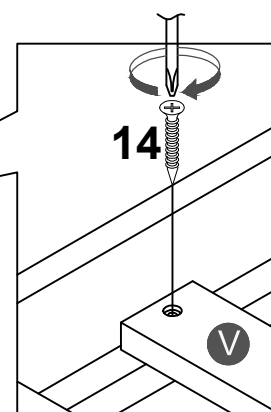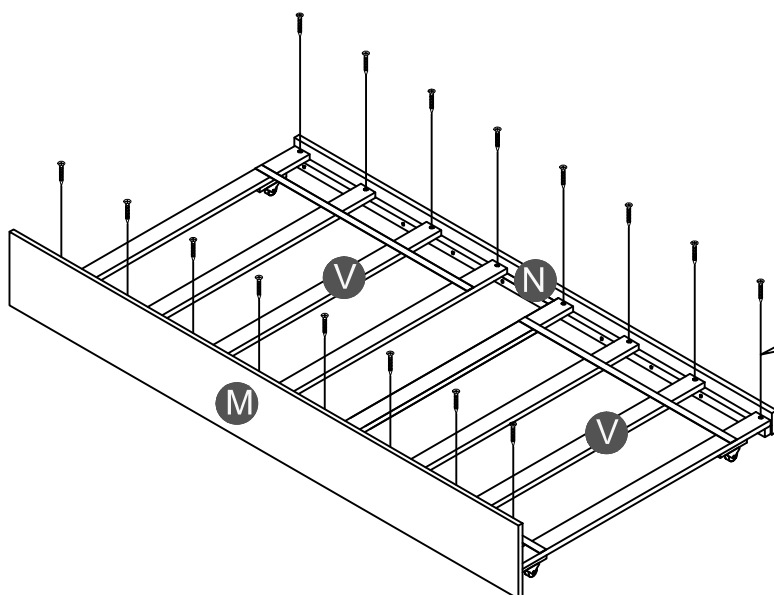
16PCS



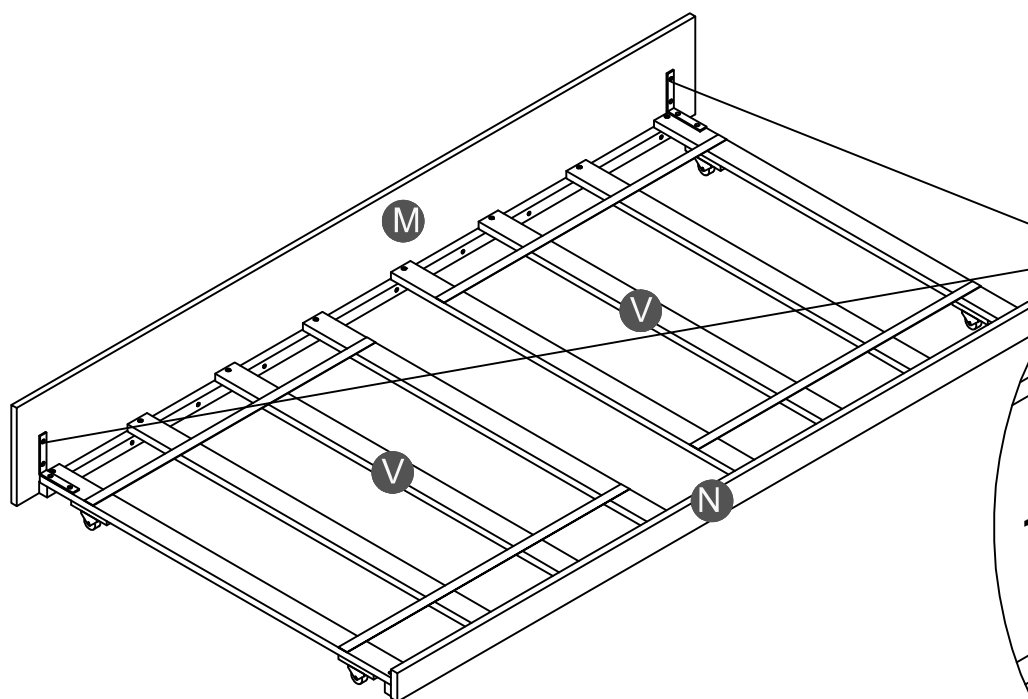
STEP 13:



16	17
	
2PCS	8PCS

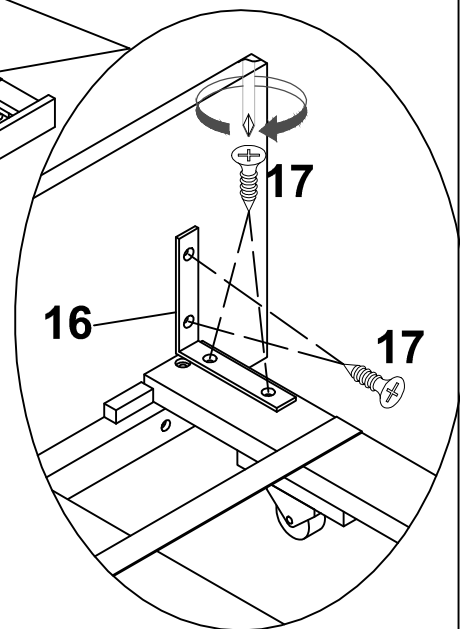


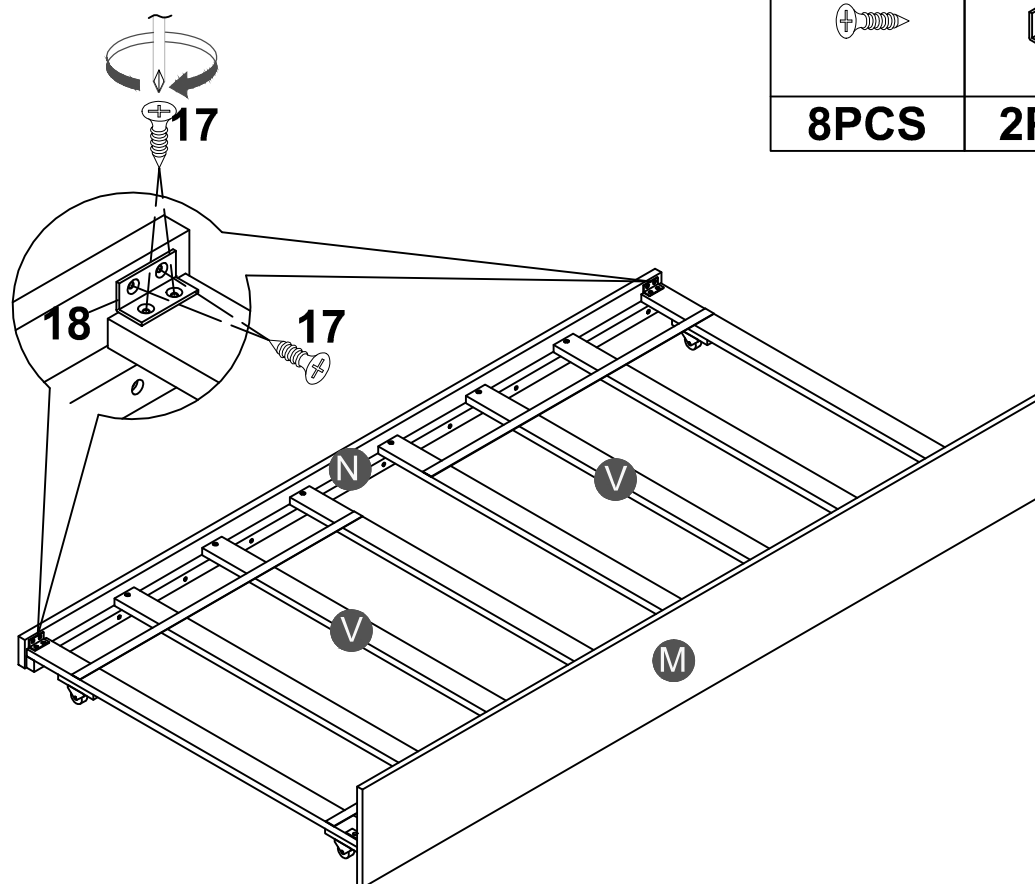STEP 14:



17	18
	
8PCS	2PCS

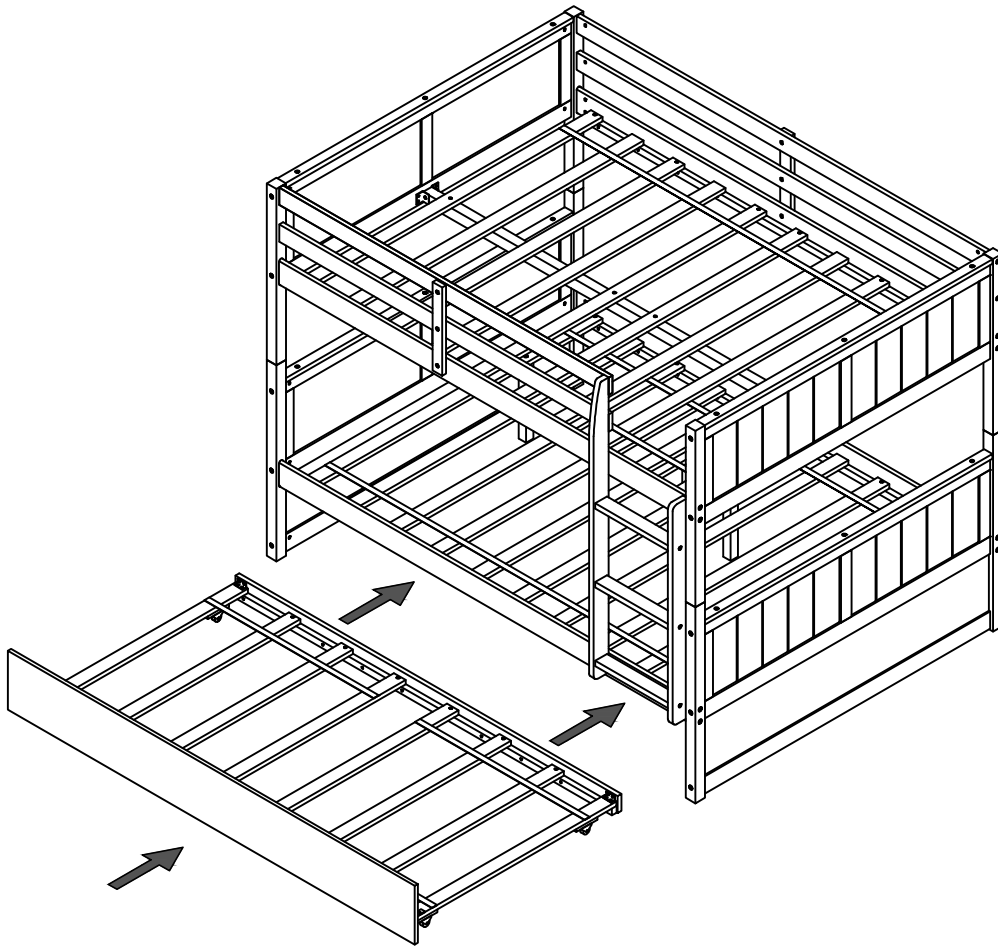STEP 15:



Push Trundle under the bottom of Bunkbed.

