



**Congratulations on your purchase!**  
**We thank you for choosing Rayne Mirrors!**

## Hardwood Floating Shelf


**You may contact us with any questions by e-mail at:**

**ORDERS@RAYNEMIRRORS.COM**

**OR**

**by telephone at:**

**(573) 325-1344**

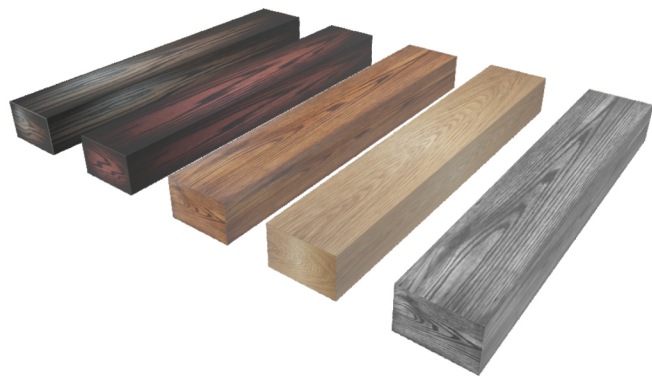

A hardwood collection from  
The Ozark Mountains in  
Southern Missouri

***Kit Contains:***  
***1x Floating Shelf***  
***1x Hardware pack***

***Hardware pack includes:***

***2x Lag bolts***

***2x Hollow Wall Anchors***



*Start by measuring the distance between the pre-attached mounting brackets.*




*Using a level, take the measurements from your shelf and mark where you want to place the shelf.*



*\*Lag bolt installation is recommended where applicable\**


For Lag Bolt into stud method, you may drill 3/16" pilot holes. This will make driving them into your studs easier in the next step

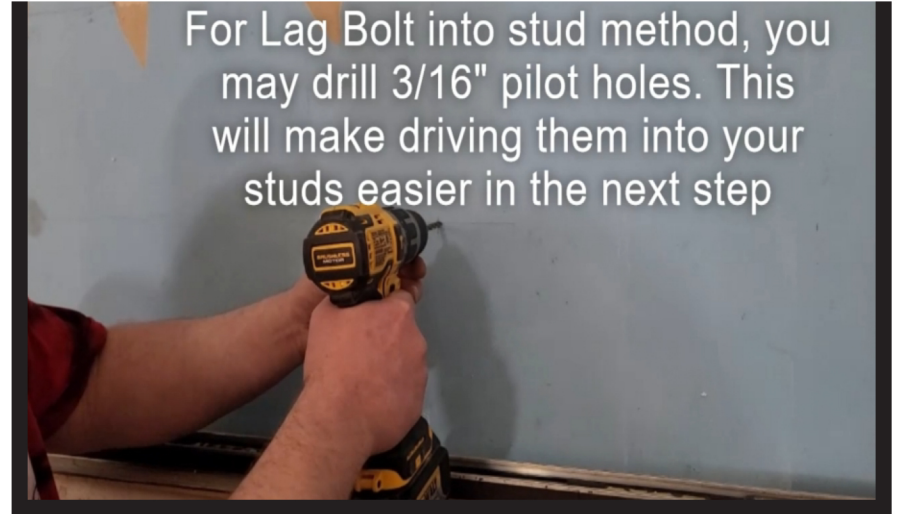

For hollow wall anchor method you will need to drill 7/16" holes on your marks to insert your anchors into.



Insert the anchor and tighten the set screw with a #2 Phillips until you feel it tighten. Be careful not to over tighten. You will notice the anchor start to embed into the wall, this is when you should stop. Back out and remove your set screw at this point.

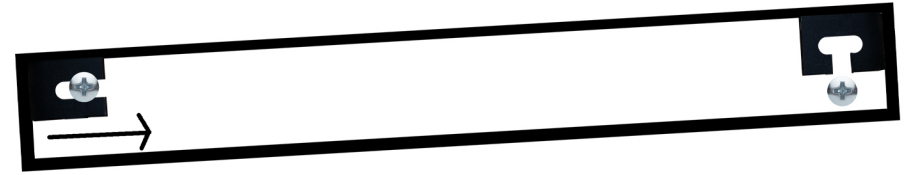

*Place your shelf on the wall at a slight angle.  
Slide the first screw into the horizontal  
slot on the bracket.*



*Rotate the shelf down to place the second screw  
into the vertical cut bracket.*

*This bracket system gives you slight side to side  
adjustment if needed.*

*And you are finished installing your shelf!*

*When tightening Lag or Screw leave approximately  
1/4" of the screw out to connect to the bracket.*

*If too loose tighten slightly to adjust snugness*