

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:


- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.

▲Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

END TABLE PARTS LIST:


- A. TOP FRAME-END




1 PC
- B. SHELF FRAME



1 PC
- C. LEG






4 PCS
- D. GLASS-END




2 PCS

Z HARDWARE LIST:


NO.	DESCRIPTION	FIGURE	QTY
1	ø1/4"X1/2" BOLT		30PCS
2	SUCTION CUP		12 PCS
3	4. 0mm ALLEN KEY		1 PC

COFFEE TABLE PARTS LIST:


- E. TOP FRAME-COFFEE




1 PC
- F. FRONT LEFT LEG




1PC
- G. FRONT RIGHT LEG




1PC
- H. BACK LEG




2PCS
- I. BACK STRETCHER BACK



1 PC
- J. SIDE STRETCHER BACK




2 PCS
- K. GLASS-COFFEE




1 PC

END TABLE


STEP 1: Attach 3pcs Legs(C) to Top Frame-End (A) by inserting bolt(1) through the metal bracket into the holes on the top frame.

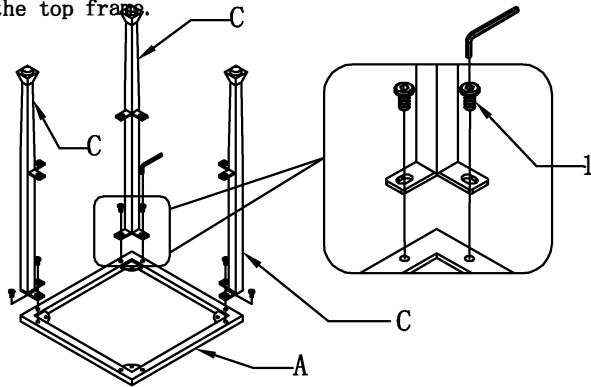


STEP 2: Attach Shelf frame(B) to the 3pcs legs (C) by inserting by bolt(1) through metal bracket.

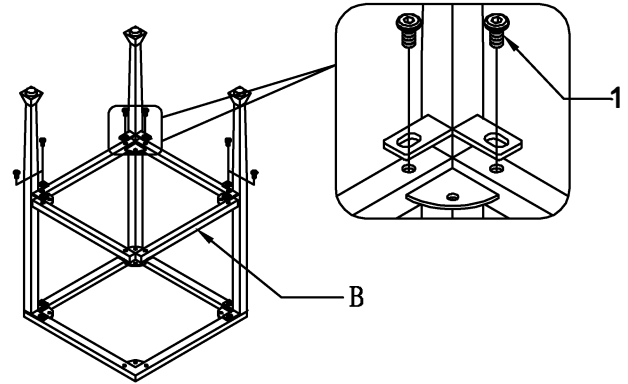

STEP 3: Attach the 4th leg(C) to the top frame and shelf frame, with bolts (1). Assemble and tighten with Allen Key.

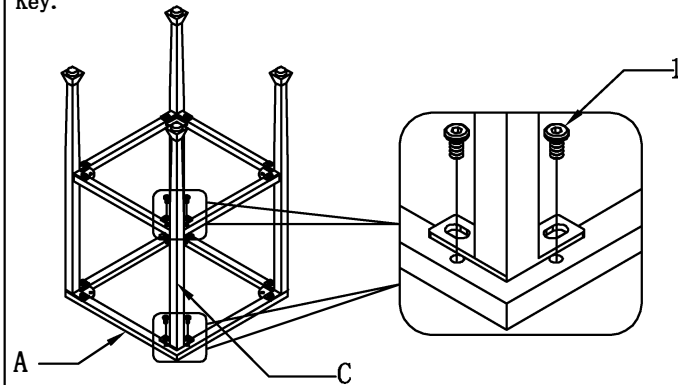


STEP 4: Assemble Suction cup(2) into the shelf frame and top frame. Put Glass-End (D) on.

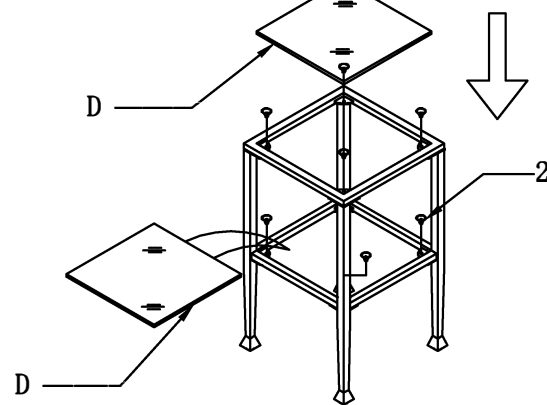


COFFEE TABLE


STEP 1: Attach Front left leg(F) & Front right leg(G) & Back legs(H) to Top Frame-Coffee (E) by inserting, using bolt(1) through the metal bracket into the holes on the top frame.

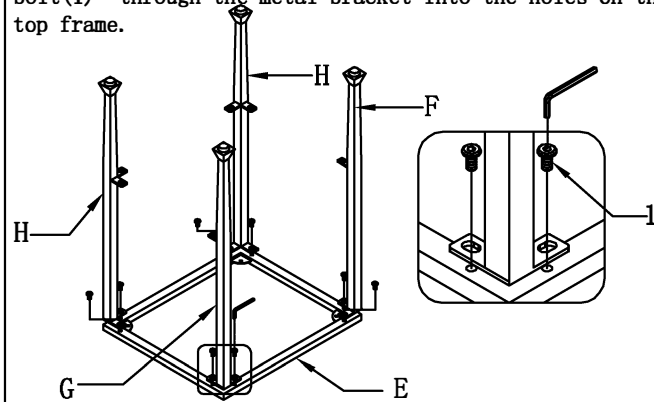

STEP 2: Attach Back stretcher(I) to the back legs (H) by inserting bolt(1) through the metal bracket.

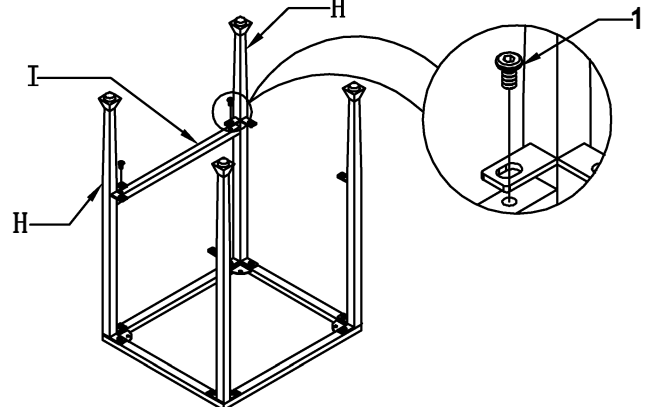

STEP 3: Attach Side stretcher(J) to back leg and side leg, with bolts (1) through the metal bracket. Tighten all bolts. with Allen Key.

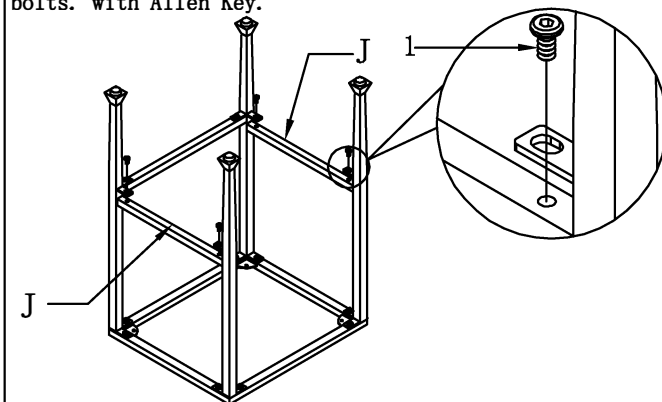

STEP 4: Assemble Suction cup(2) into the top frame and put Glass(K) on the top frame.

