
King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	D	Е	F	I	J	M	N	О	P	Q
Φ φ8*20MM	®8*30MM	© φ6ΜΜ	О Ф8ММ	H=120MM	φ8ММ	H=205MM	⊚				0
8PCS	0PC	6PCS	8PCS	4PCS	1PC	6PCS	6PCS	26PCS	2PCS	39PCS	2PCS

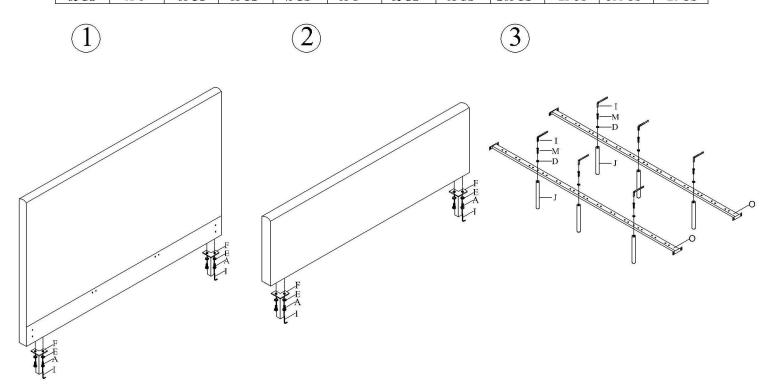

Step#1

Retrieve feet from behind HB. Attach bed feet (F) to the headboard using Wrench (I), Bolt (A) and Washer (E).

Step#2

Attach bed feet (F) to the footboard using Wrench (I), Bolt (A) and Washer (E).


Step#3

Attach steel center support legs (J) to the center support rail (O) using Wrench (I), Bolt (M) and Washer (D).

King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	D	Е	F	I	J	M	N	О	P	Q
Φ φ8*20ΜΜ	Ф8*30MM	© φ6ΜΜ	Θ φ8ΜΜ	H=120MM	φ8MM	H=205MM	90000 φ6*40MM	\bigcirc			
8PCS	0PC	6PCS	8PCS	4PCS	1PC	6PCS	6PCS	26PCS	2PCS	39PCS	2PCS

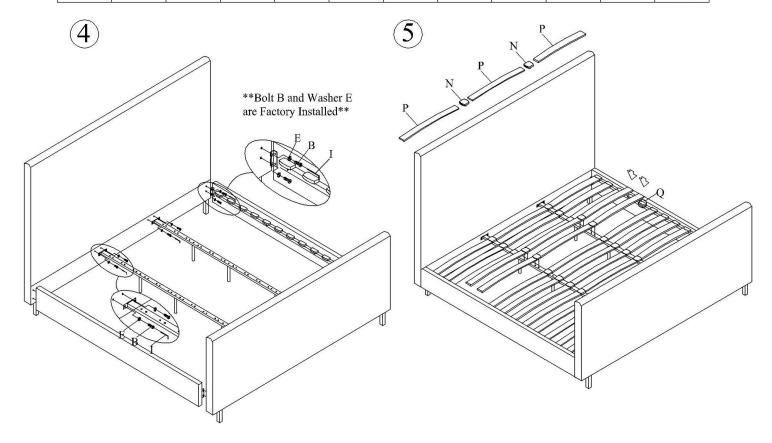

Step#4

Attach side rails to headboard and footboard using factory installed Bolt (B) and Washer (E). Attach steel center support rail to the headboard and footboard using factory installed Bolt (B) and Washer (E).

Step#5(IMPORTANT:Make sure slats are inserted into center cilp BEFORE snapping into place)

Verify Euro Slat System Tension Slats are installed curved upwards per diagram. Insert tension slats into Center Clip (N) and factory installed End Clip (Q) before snapping into place.