


# INSTRUCTION MANUAL

# Before You Start

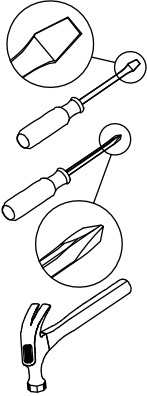

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, Please slow down or stop when the screw is tightened. Otherwise it may cause the screws to peel off.

## Helpful Hints

























### PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting to assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.







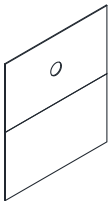
# Board Identification

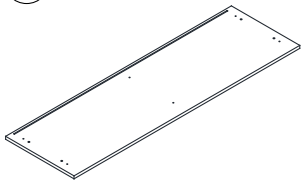Not actual size

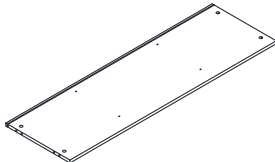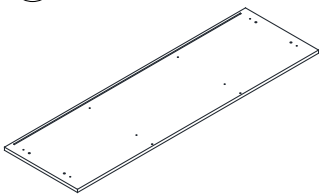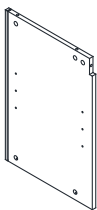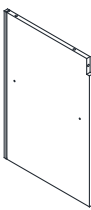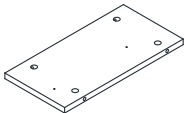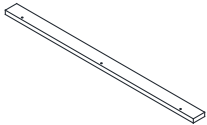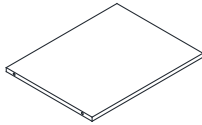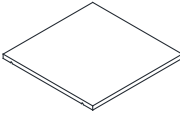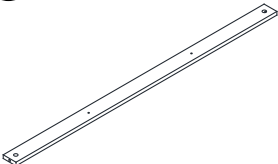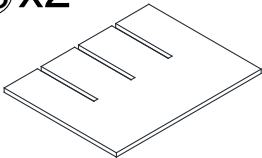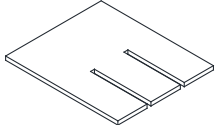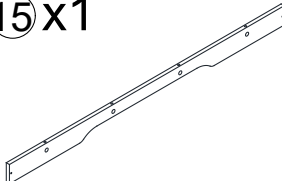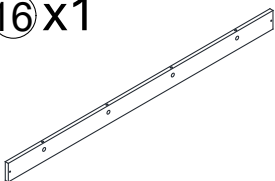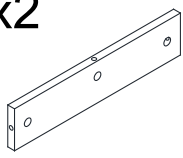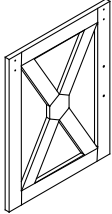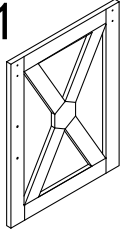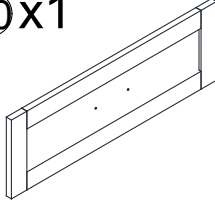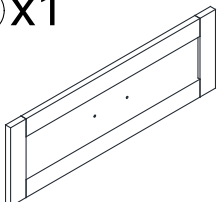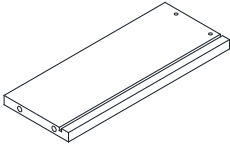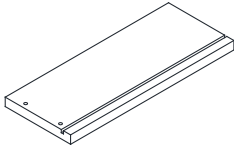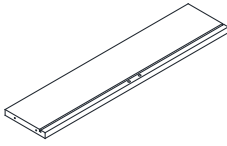



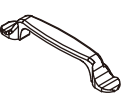



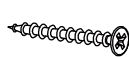

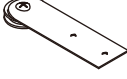


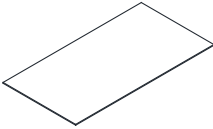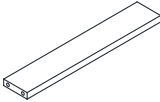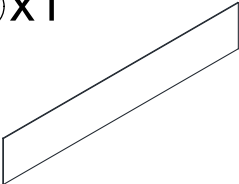



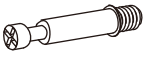


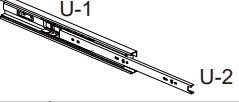
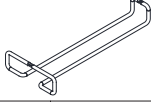
<p>①x1</p>  <p>Roof Plate</p>	<p>②x1</p>  <p>Left Side Plate</p>	<p>③x1</p>  <p>Right Side Plate</p>	<p>④x1</p>  <p>Upper Fixing Plate</p>
<p>⑤x1</p>  <p>Bottom Plate</p>	<p>⑥x1</p>  <p>Neutral Grille On The Left</p>	<p>⑦x1</p>  <p>Neutral Grille On The Right</p>	<p>⑧x1</p>  <p>Upper Support Plate</p>
<p>⑨x2</p>  <p>Front Vertical Bar Of Side Panel</p>	<p>⑩x1</p>  <p>In The Middle Fixed Lamination</p>	<p>⑪x2</p>  <p>Left And Right Active Laminates</p>	<p>⑫x1</p>  <p>Fixed Slide Plate</p>
<p>⑬x2</p>  <p>Transverse Partition</p>	<p>⑭x3</p>  <p>Vertical Partition</p>	<p>⑮x1</p>  <p>Front Cross Bar Under Base Plate</p>	<p>⑯x1</p>  <p>Rear Cross Bar Under Base Plate</p>
<p>⑰x2</p>  <p>Left And Right Vertical Bars Under Bottom Plate</p>	<p>⑱x1</p>  <p>Left Door Frame</p>	<p>⑲x1</p>  <p>Right Door Frame</p>	<p>⑳x1</p>  <p>Left Drawer Panel</p>
<p>㉑x1</p>  <p>Right Drawer Panel</p>	<p>㉒x2</p>  <p>Drawer Left Panel</p>	<p>㉓x2</p>  <p>Drawer Right Panel</p>	<p>㉔x2</p>  <p>Drawer Back Panel</p>

# Board Identification

Not actual size


<p>25x2</p>  <p>Drawer Bottom Plate</p>	<p>26x2</p>  <p>Drawer Support Plate</p>	<p>27x1</p>  <p>Upper Cabinet Back Panel</p>	<p>28x2</p>  <p>Left And Right Back Plates</p>
<p>29x1</p>  <p>Middle Back Panel</p>			

# Part List


 Ø6x35mm <b>A</b> x60(+3) Cam Bolt	 Ø15x10mm <b>B</b> x60(+3) Cam Lock	 Ø8x30mm <b>C</b> x12(+1) Dowel	 M6x20mm <b>D</b> x4 Hexagon Socket Bolt	 <b>E</b> x 4 Hold Hands
 M4x10mm <b>F</b> x 4 Handle Bolt	 Ø12mm <b>G</b> x 11(+1) Foot Nail	 <b>H</b> x8(+1) Removable Plate Holder	 Ø3.5x35mm <b>I</b> x 8(+1) Screw	 Ø3.5x10mm <b>J</b> x16(+1) Screw
 <b>K</b> x 4 Door Pulley	 <b>L</b> x12(+1) Large Flat Head Screw	 <b>M</b> x1 The Iron Bars Of a Door Pulley	 <b>N</b> x12(+2) Sticker	 <b>O</b> x2 Anti-Fall Strip
 <b>P</b> x2 Plastic Expansion Screw	 <b>Q</b> x12(+1) Back Buckle	 Ø3x16mm <b>R</b> x12(+1) Back Buckle Screw	 M4x20mm <b>S</b> x6(+1) Handle Bolt	 Ø6x30mm <b>T</b> x8(+1) Dowel
 <b>U</b> x 4 Three Section Rail	 <b>V</b> x 2 Cup holder			

## Cam Lock Fastening System







This Cam Lock Fastening System will be used throughout the assembly process.

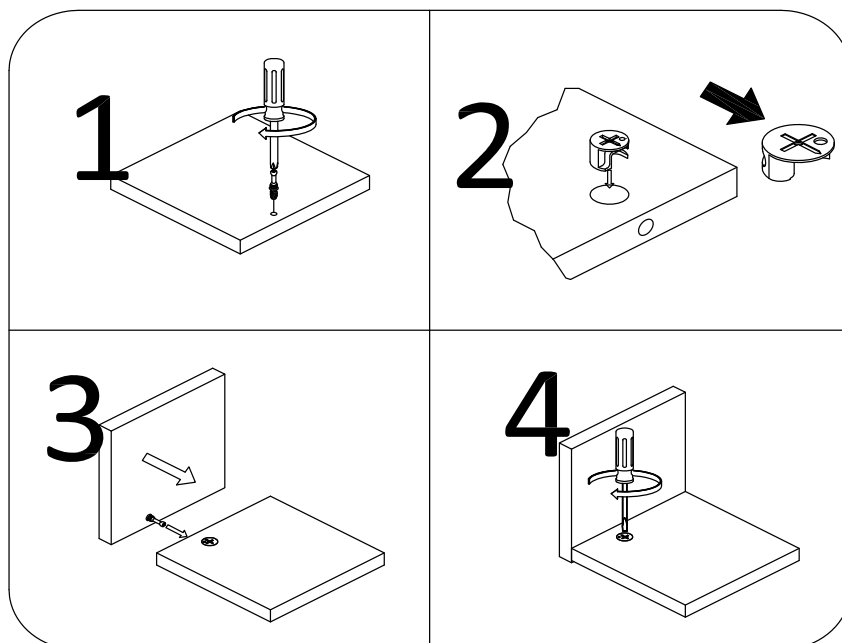











# Board Identification

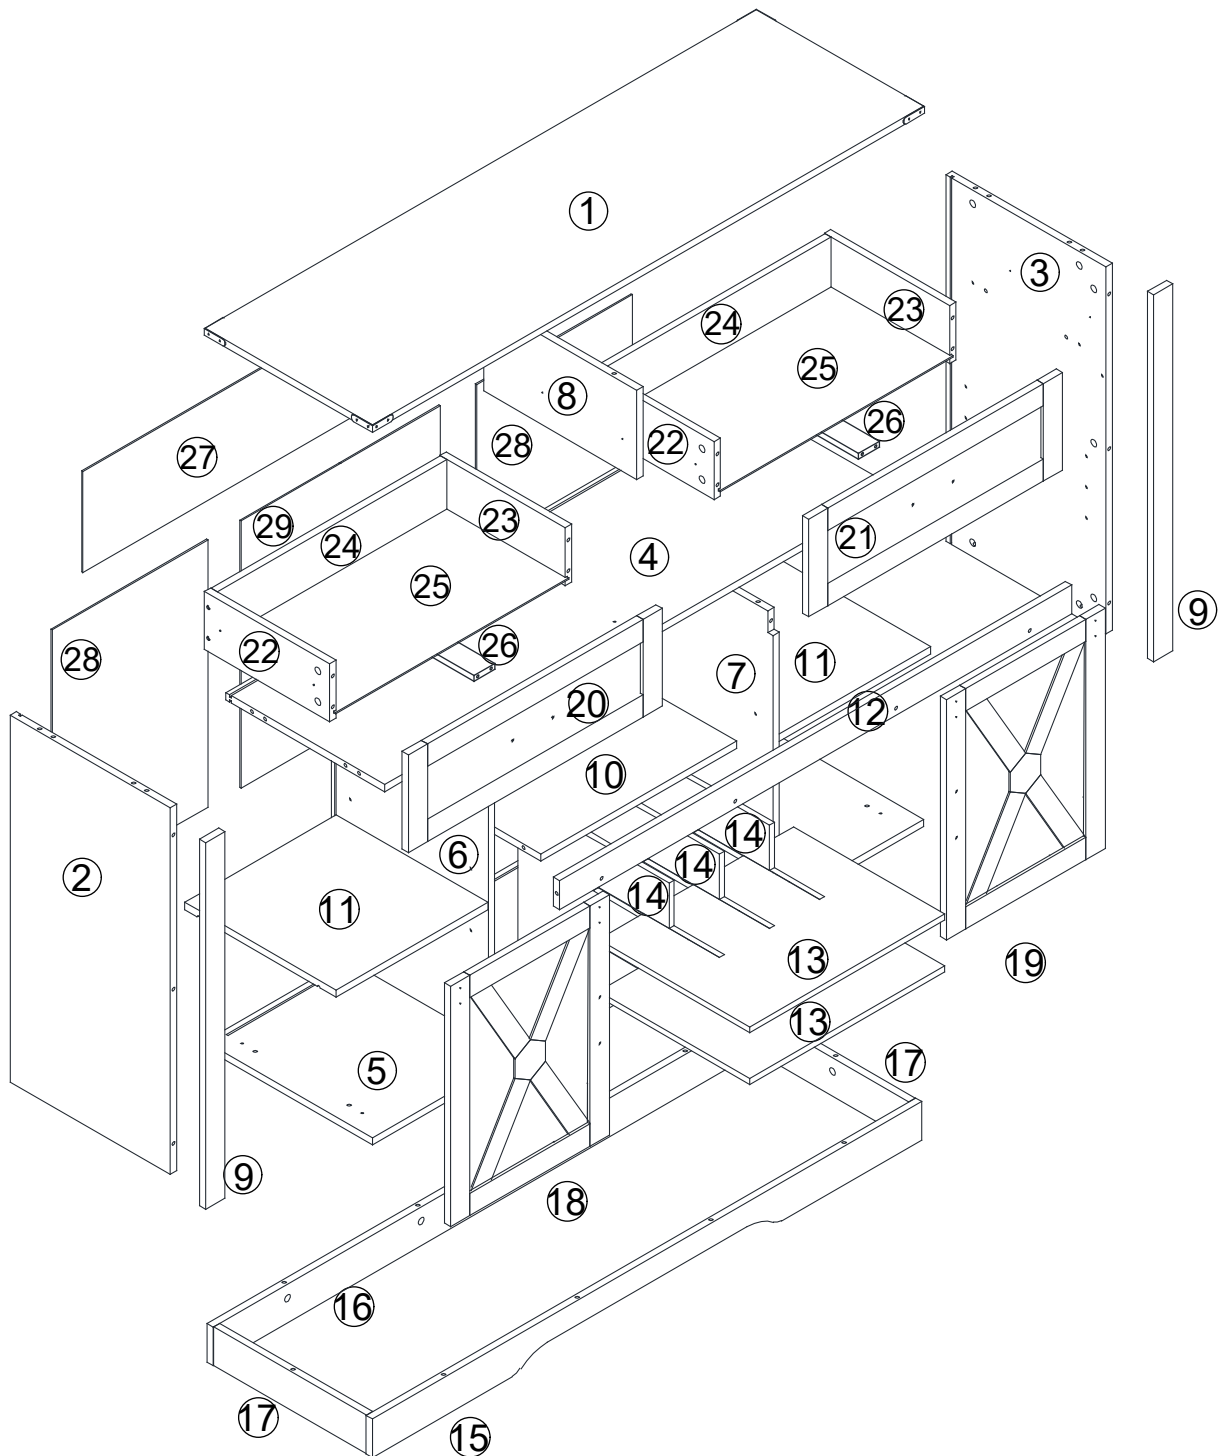


# STEP 1

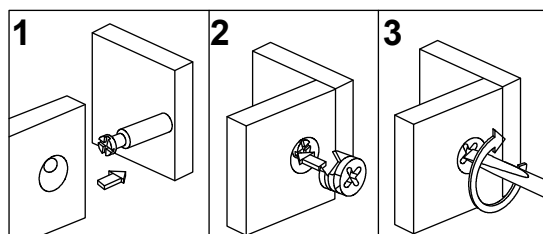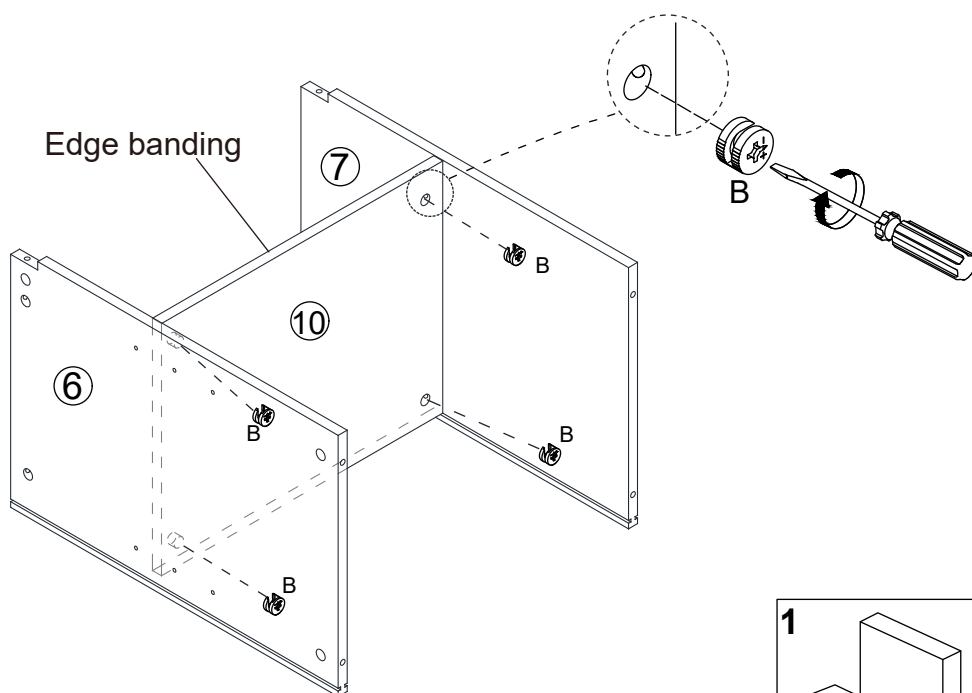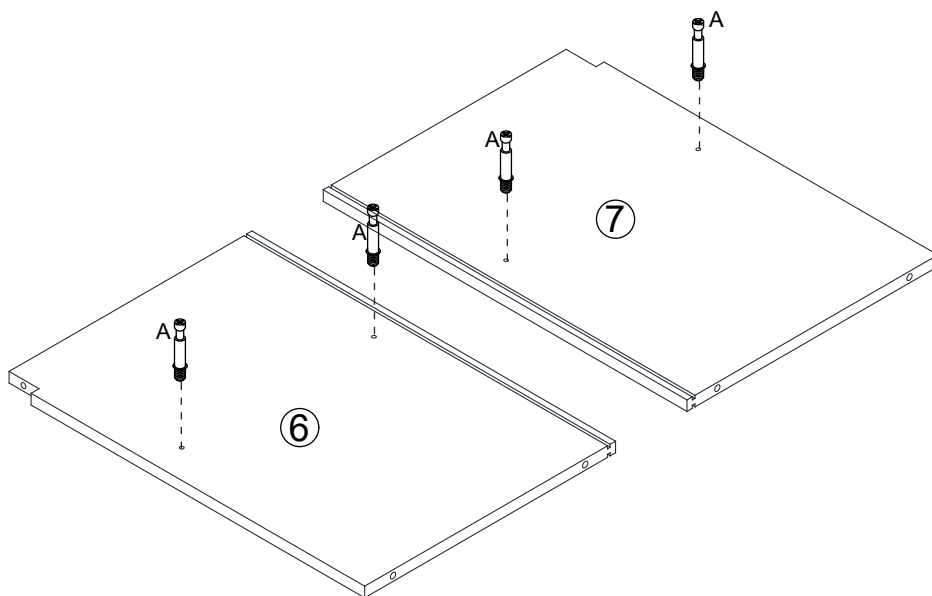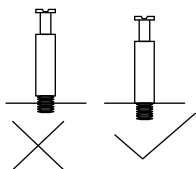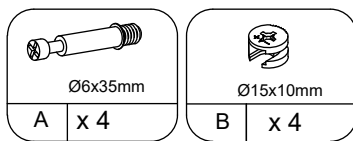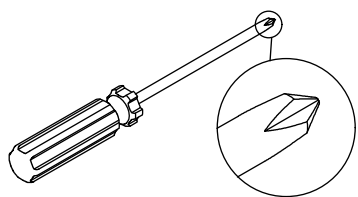

# STEP 2

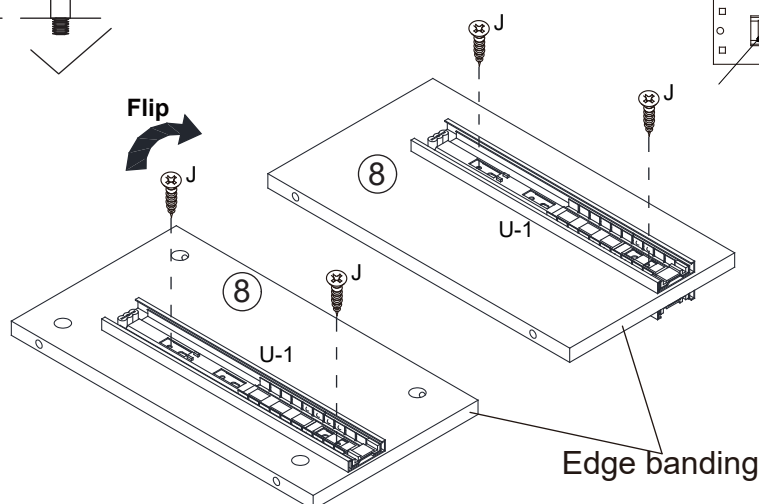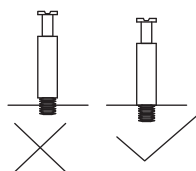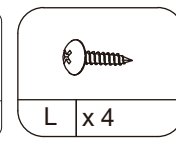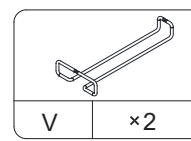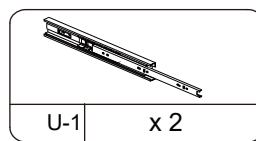
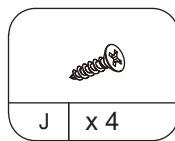
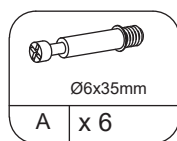
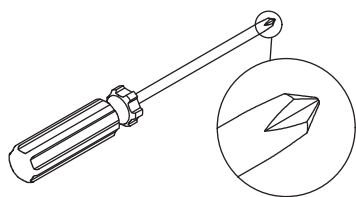


Edge banding

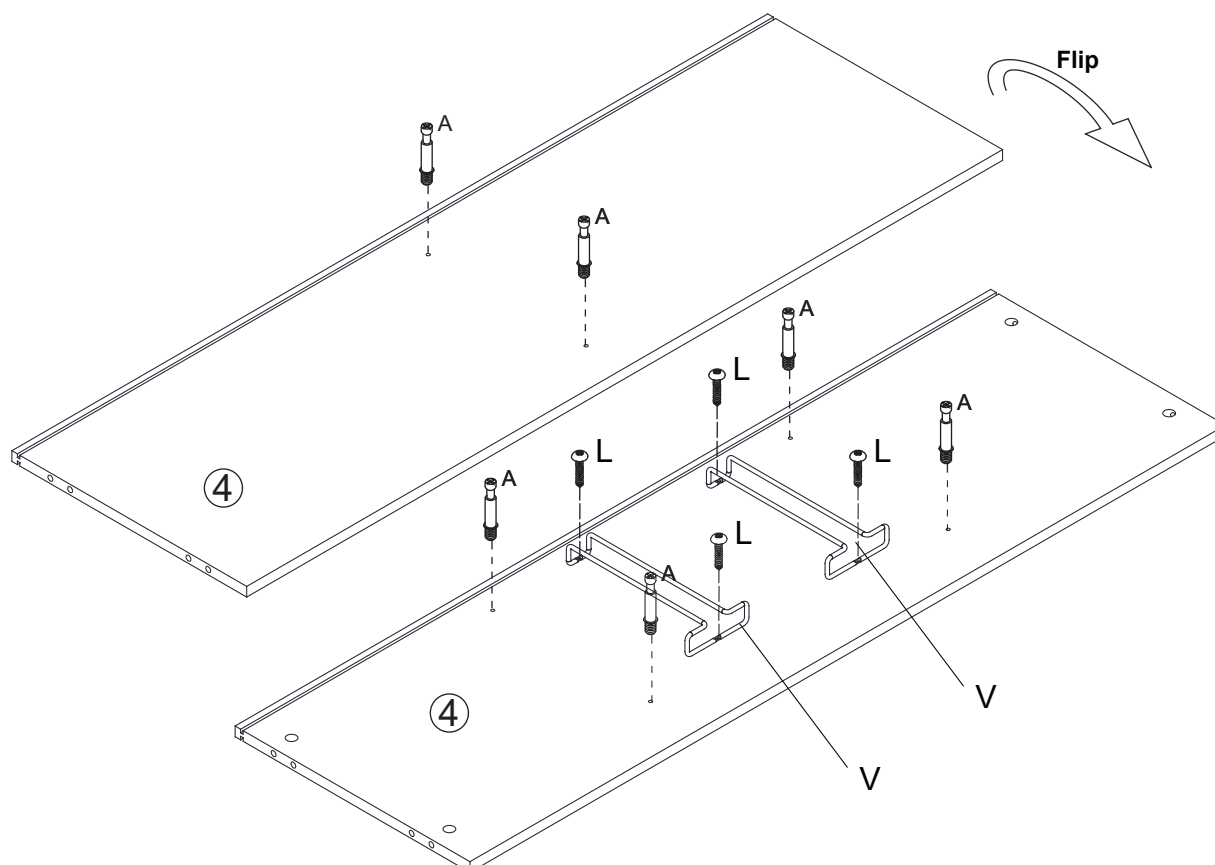




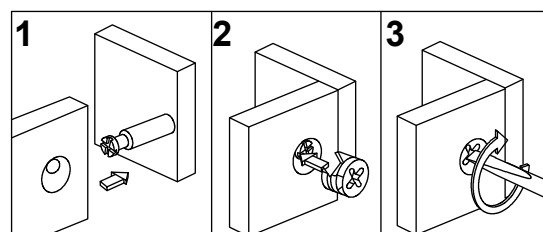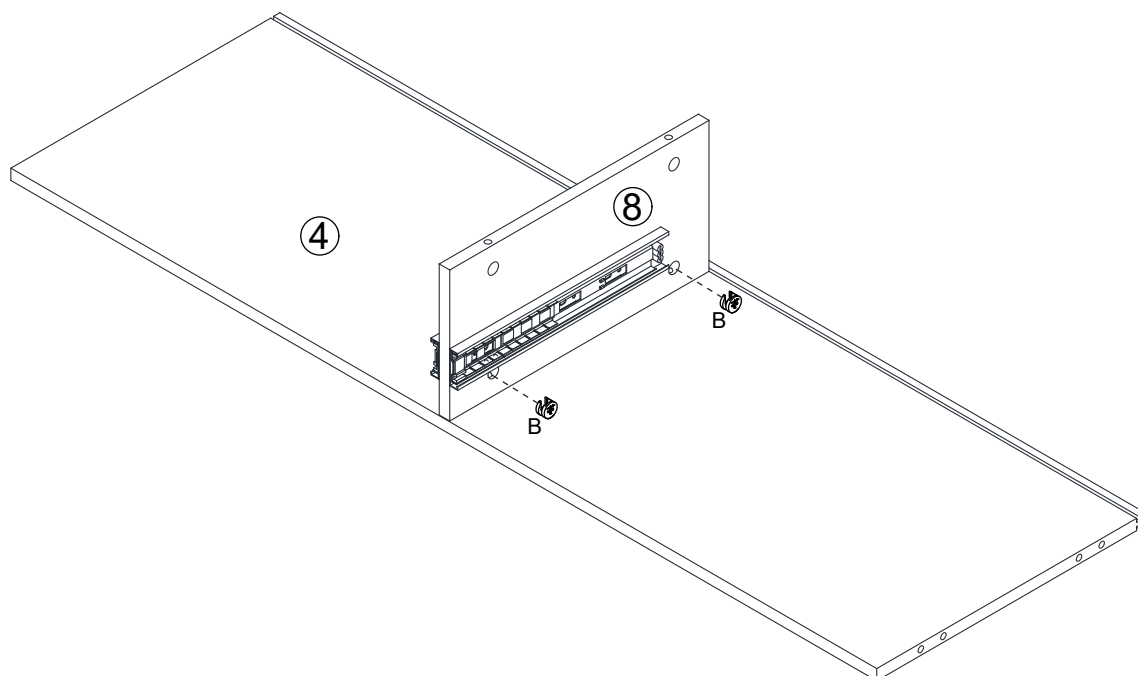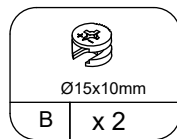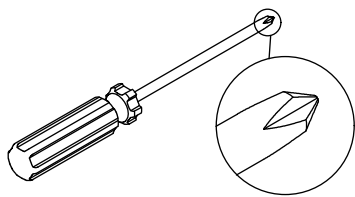




# STEP 3

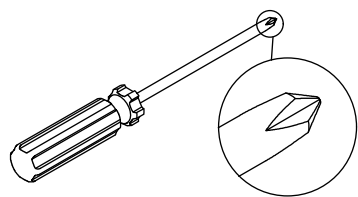








# STEP 4








			
Ø6x35mm		Ø15x10mm	
A	x 2	B	x 6

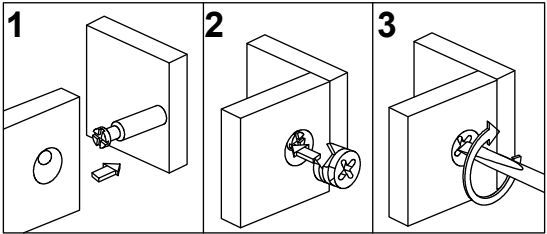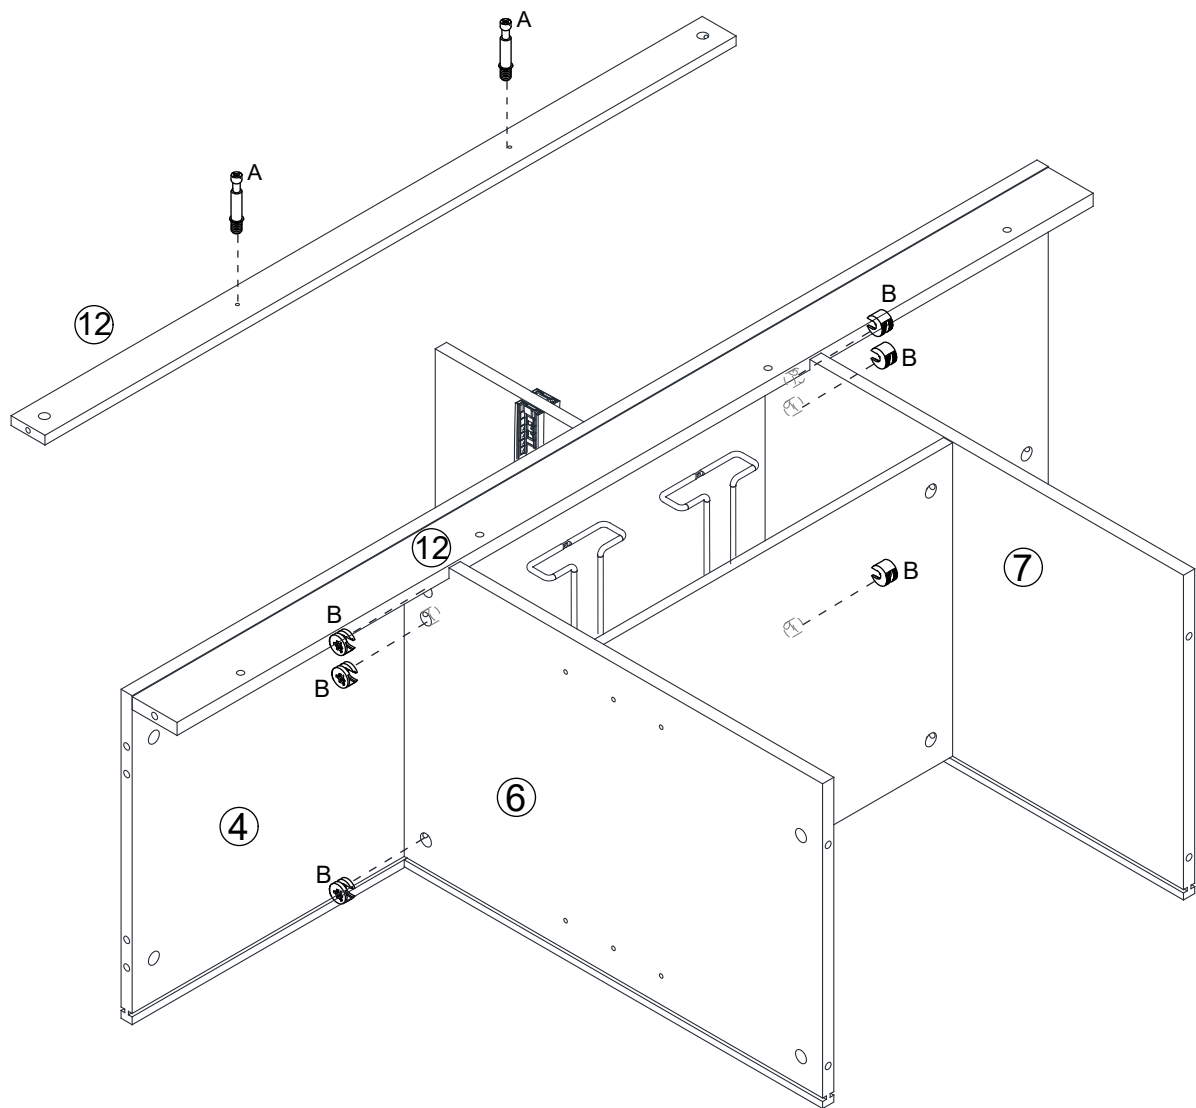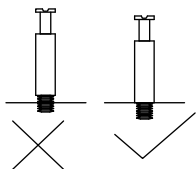





# STEP 5

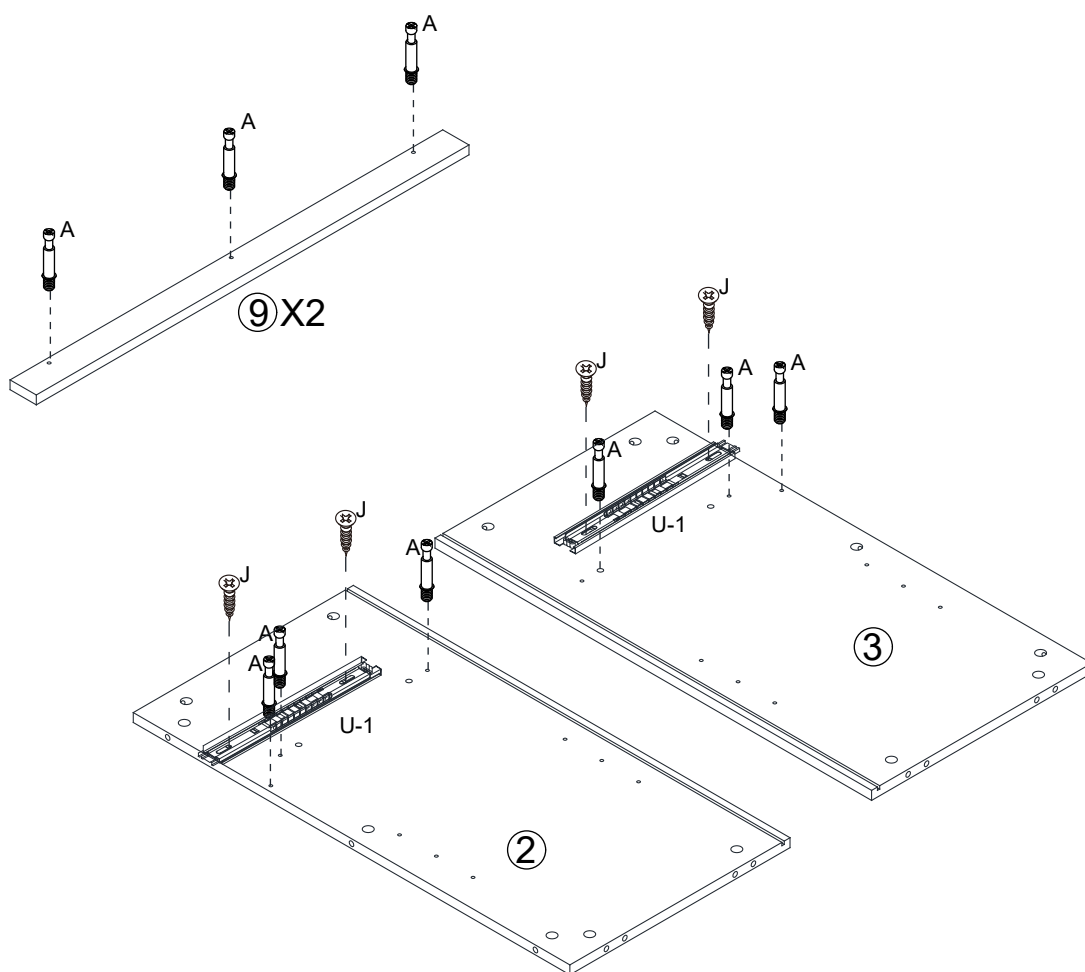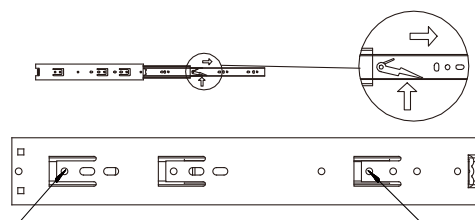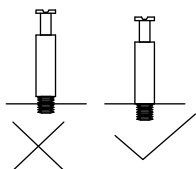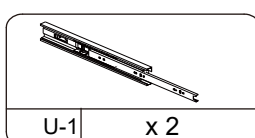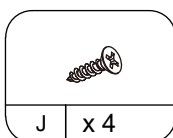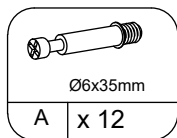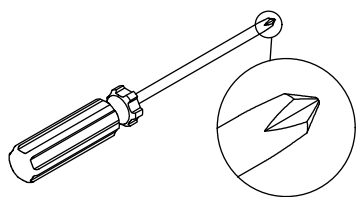





# STEP 6

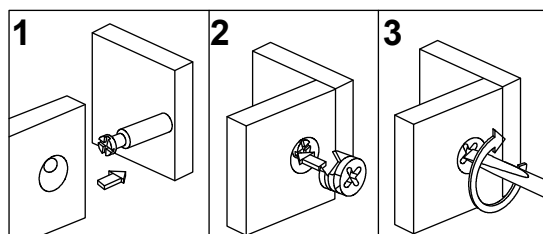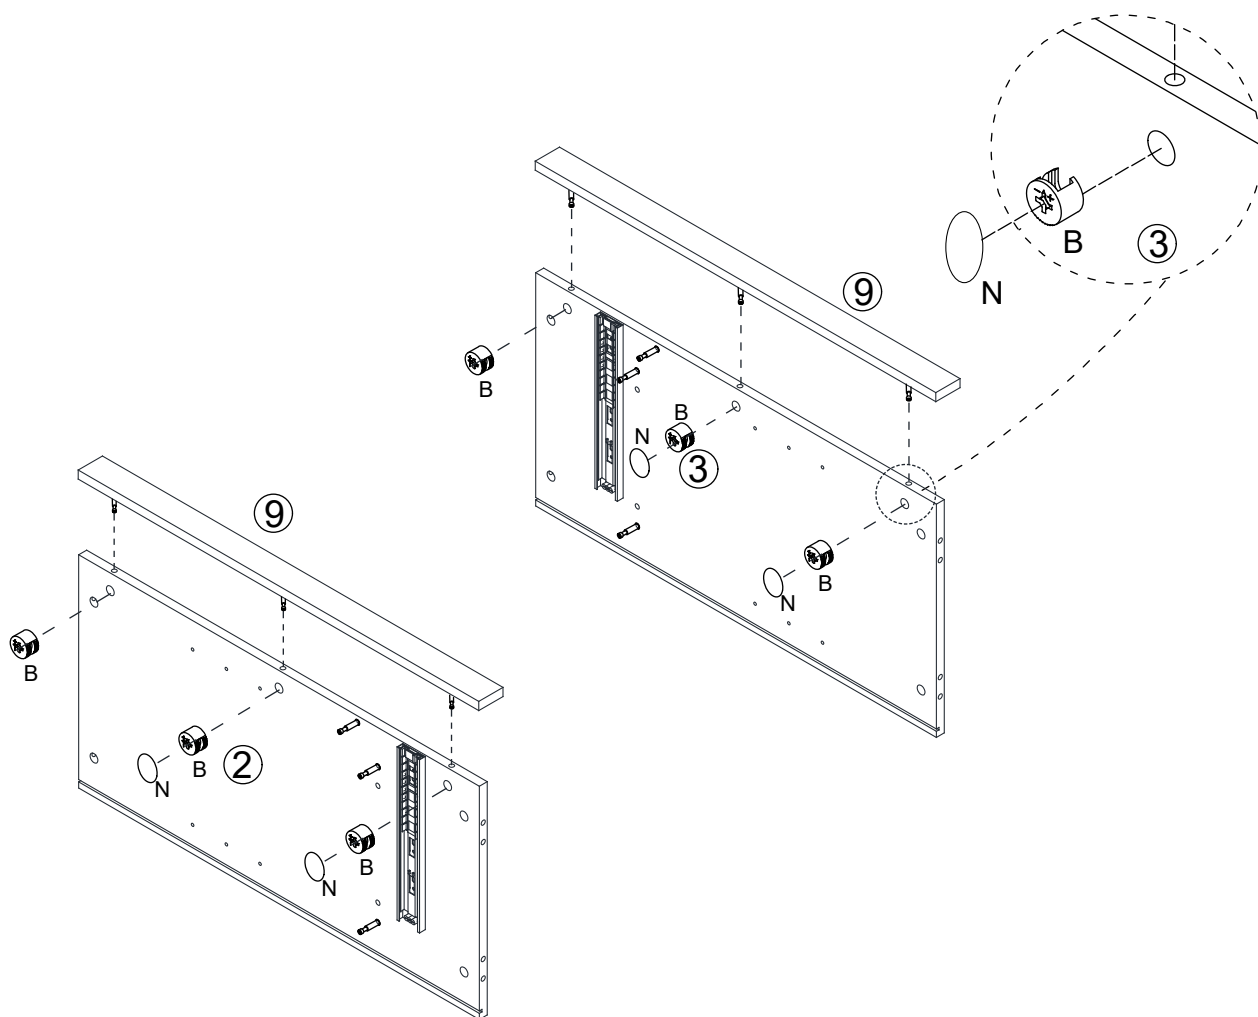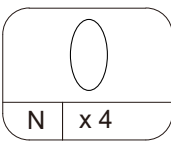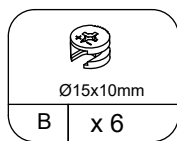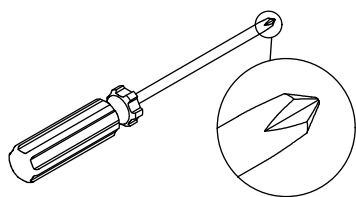


# STEP 7

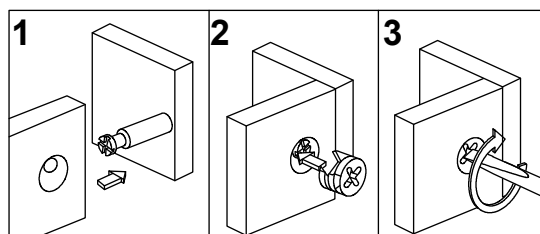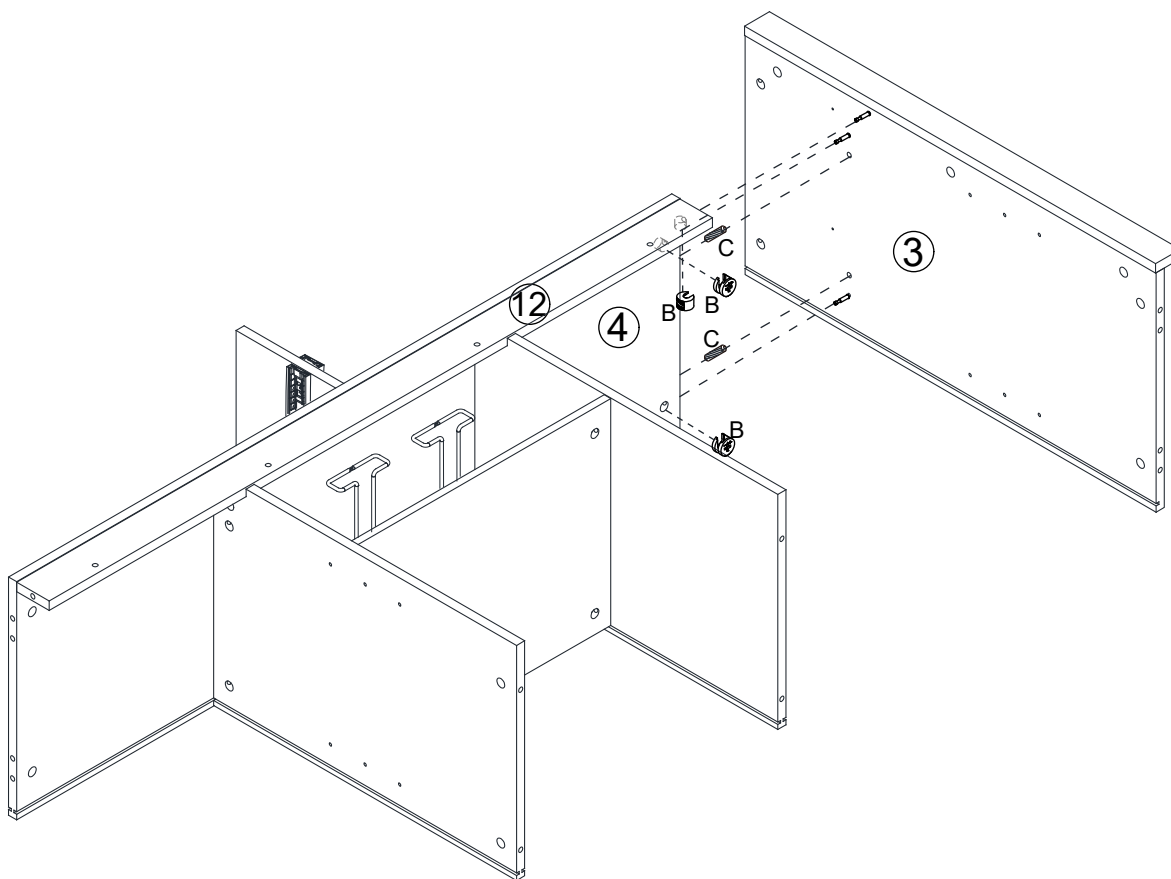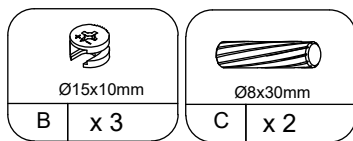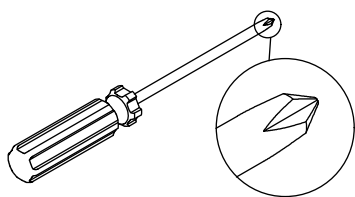






# STEP 8

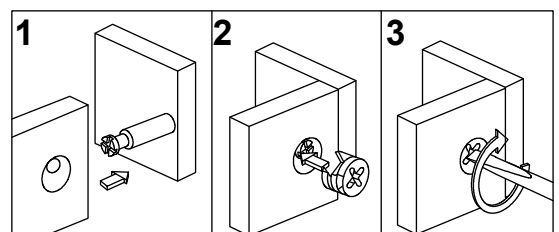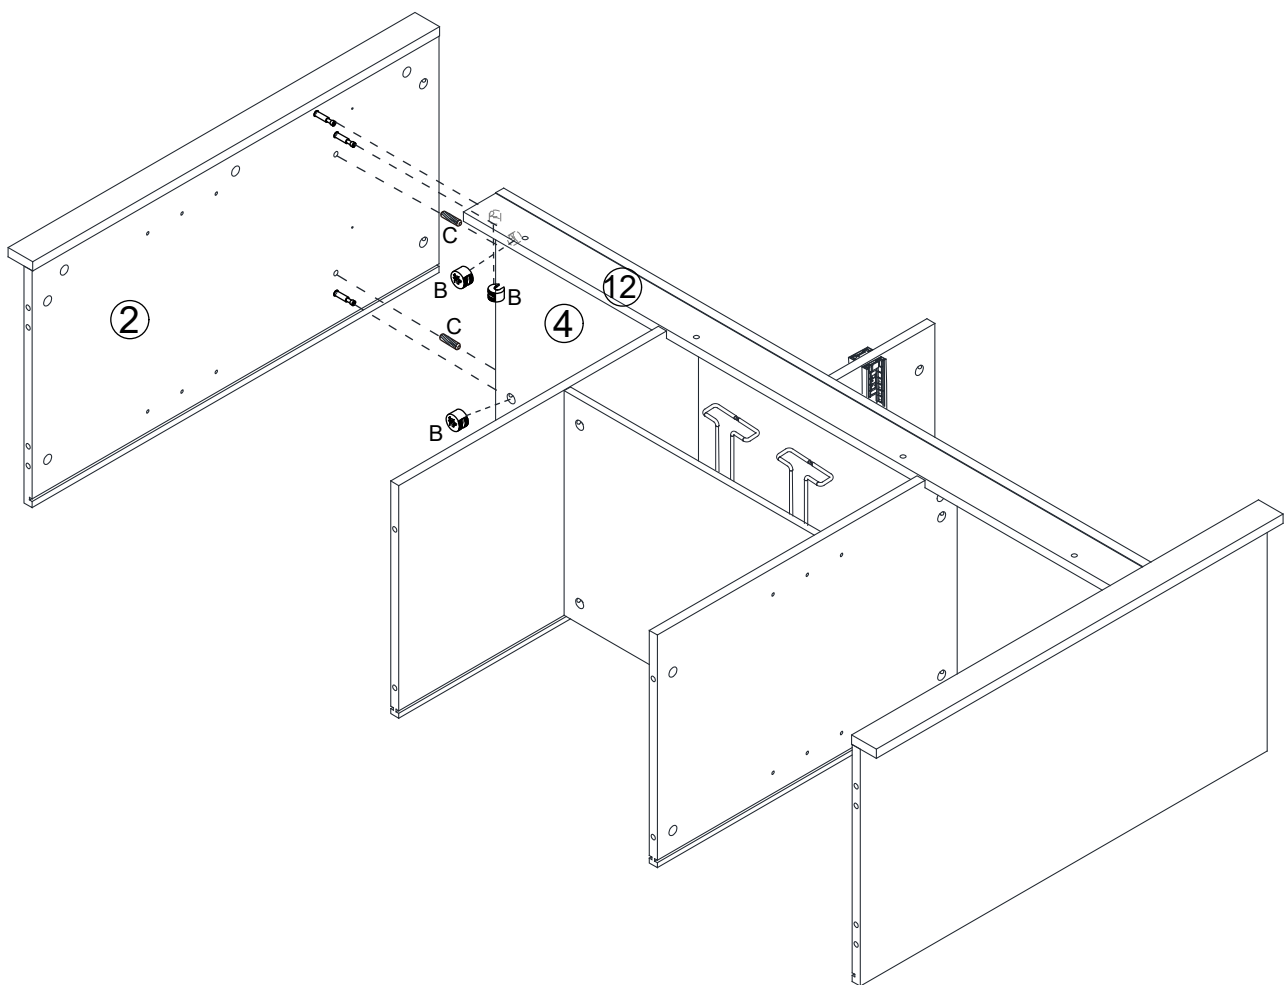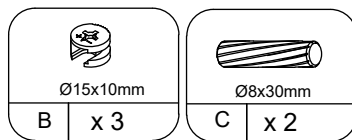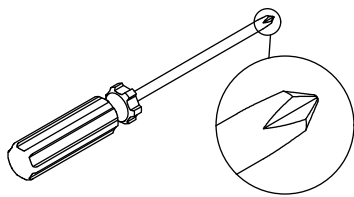

## STEP 9





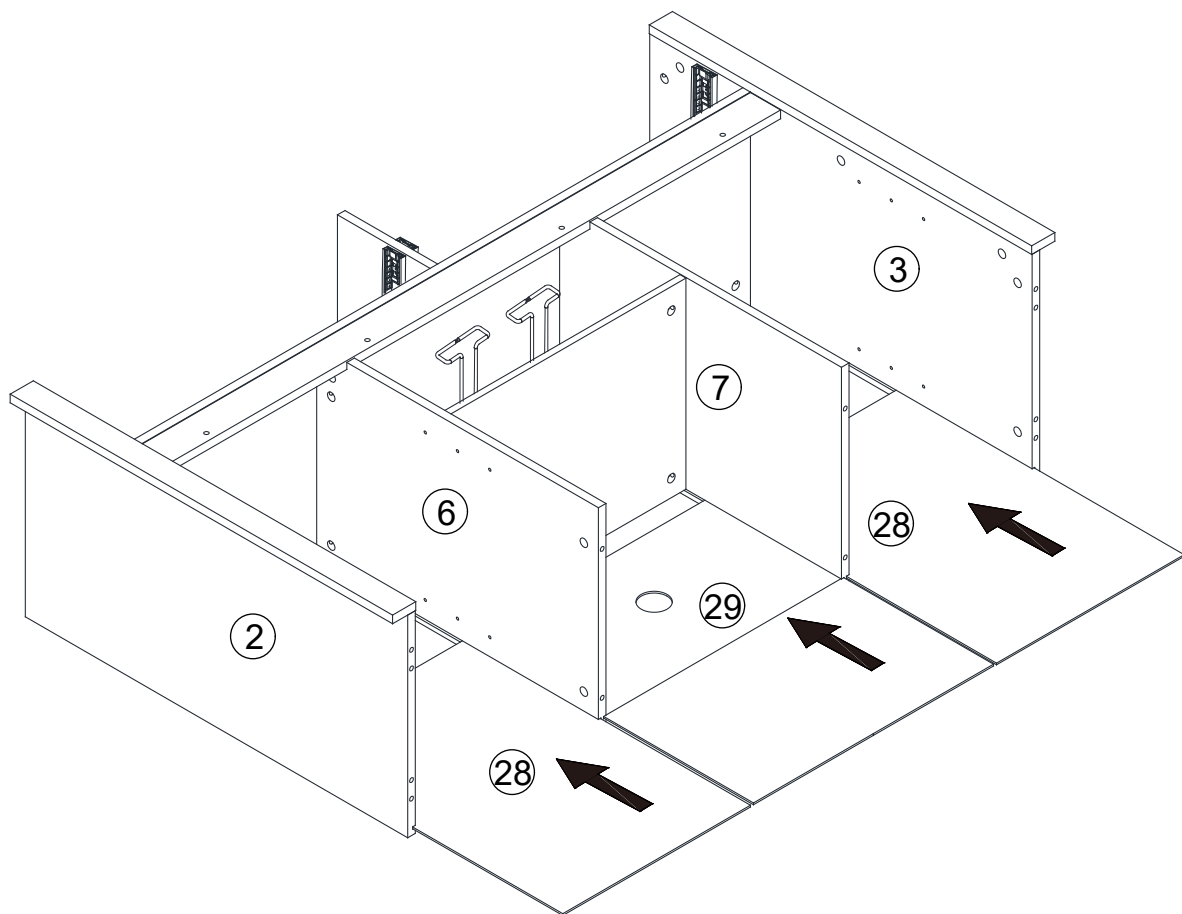


# STEP 10



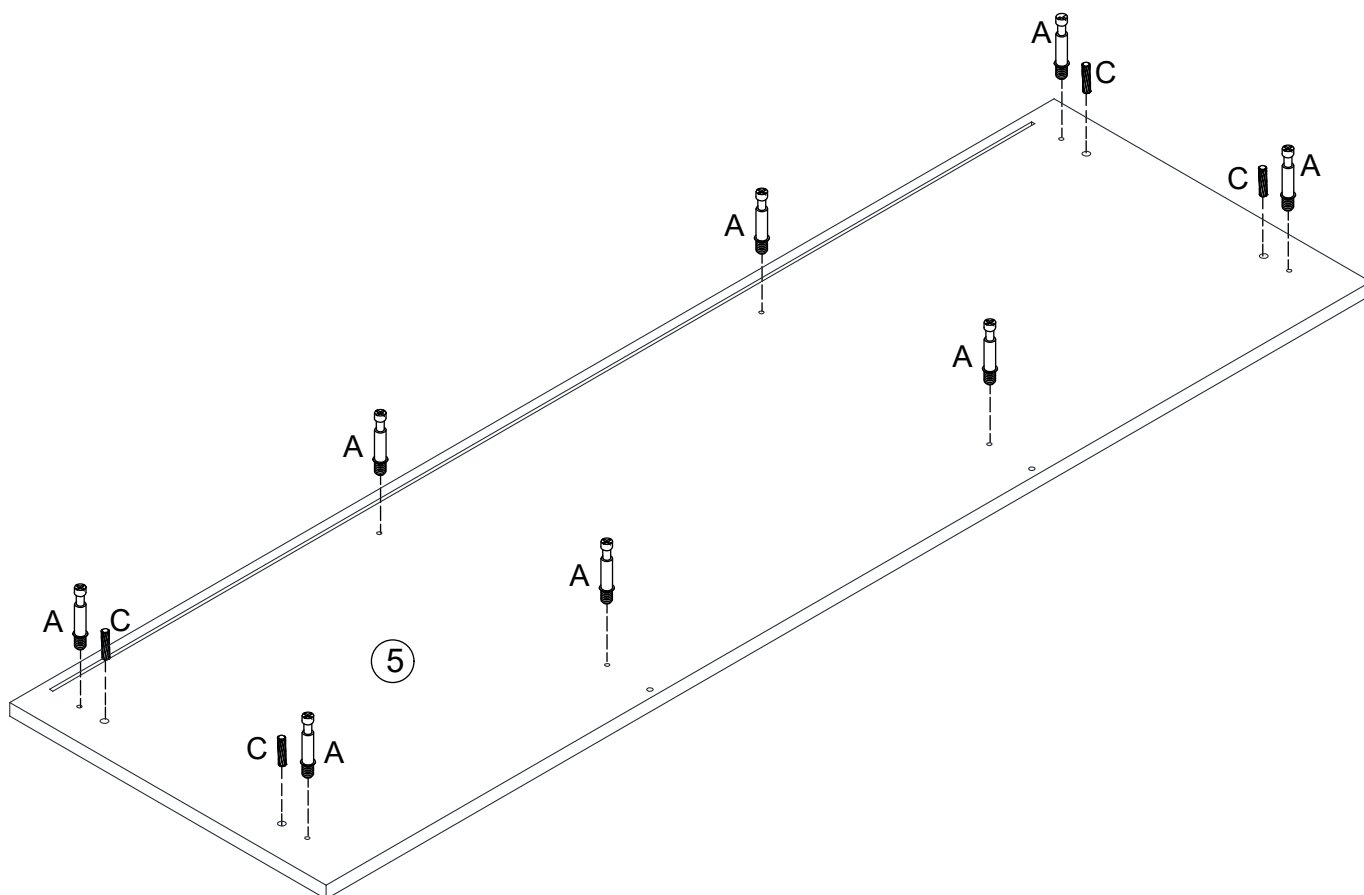
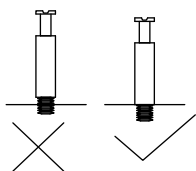
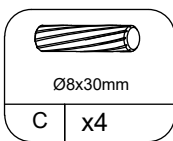
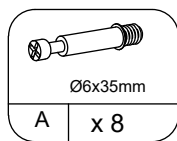
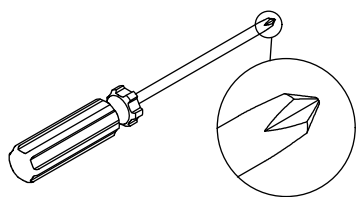











# STEP 11

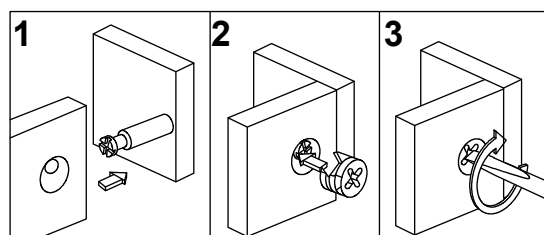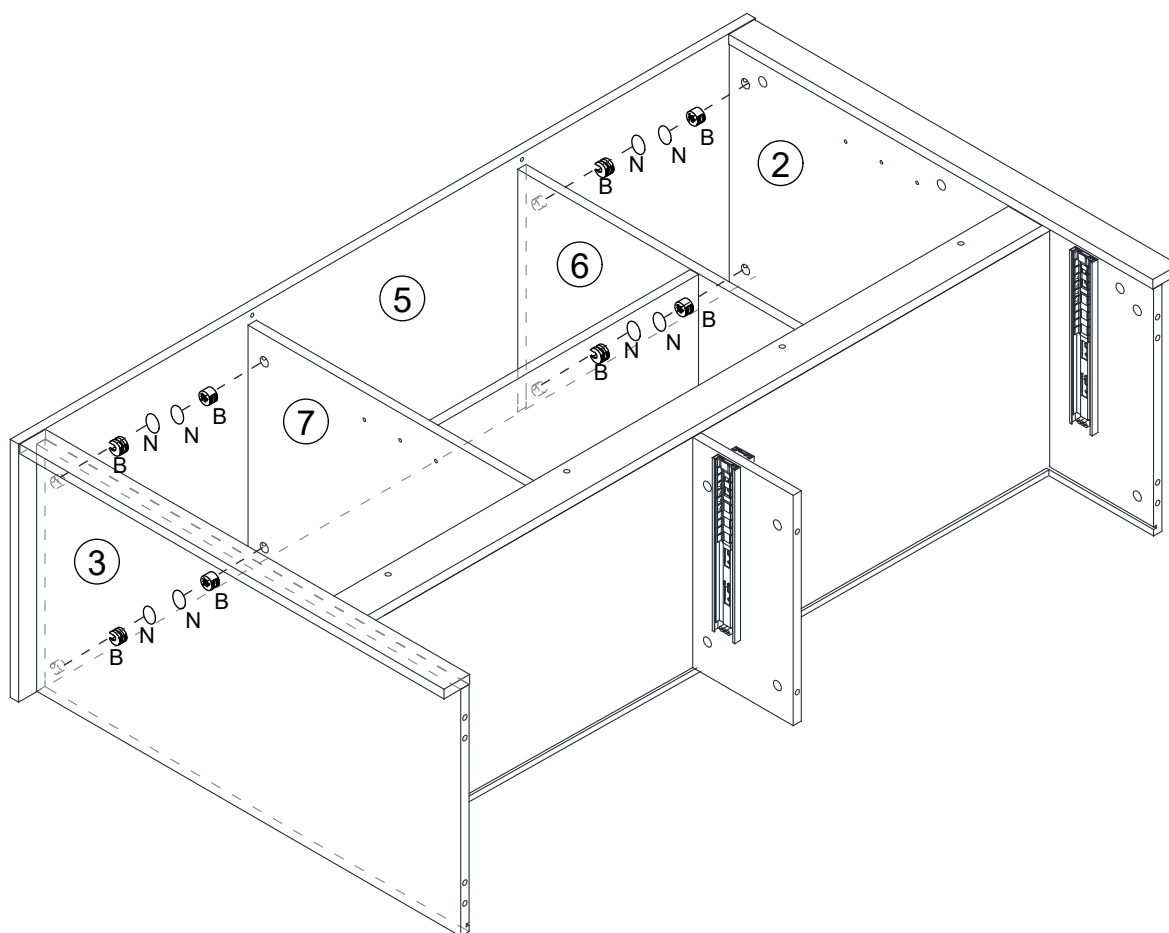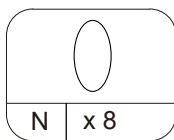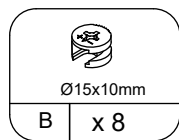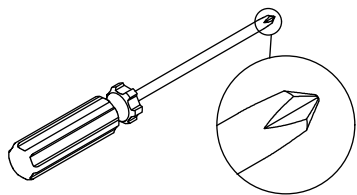





# STEP 12

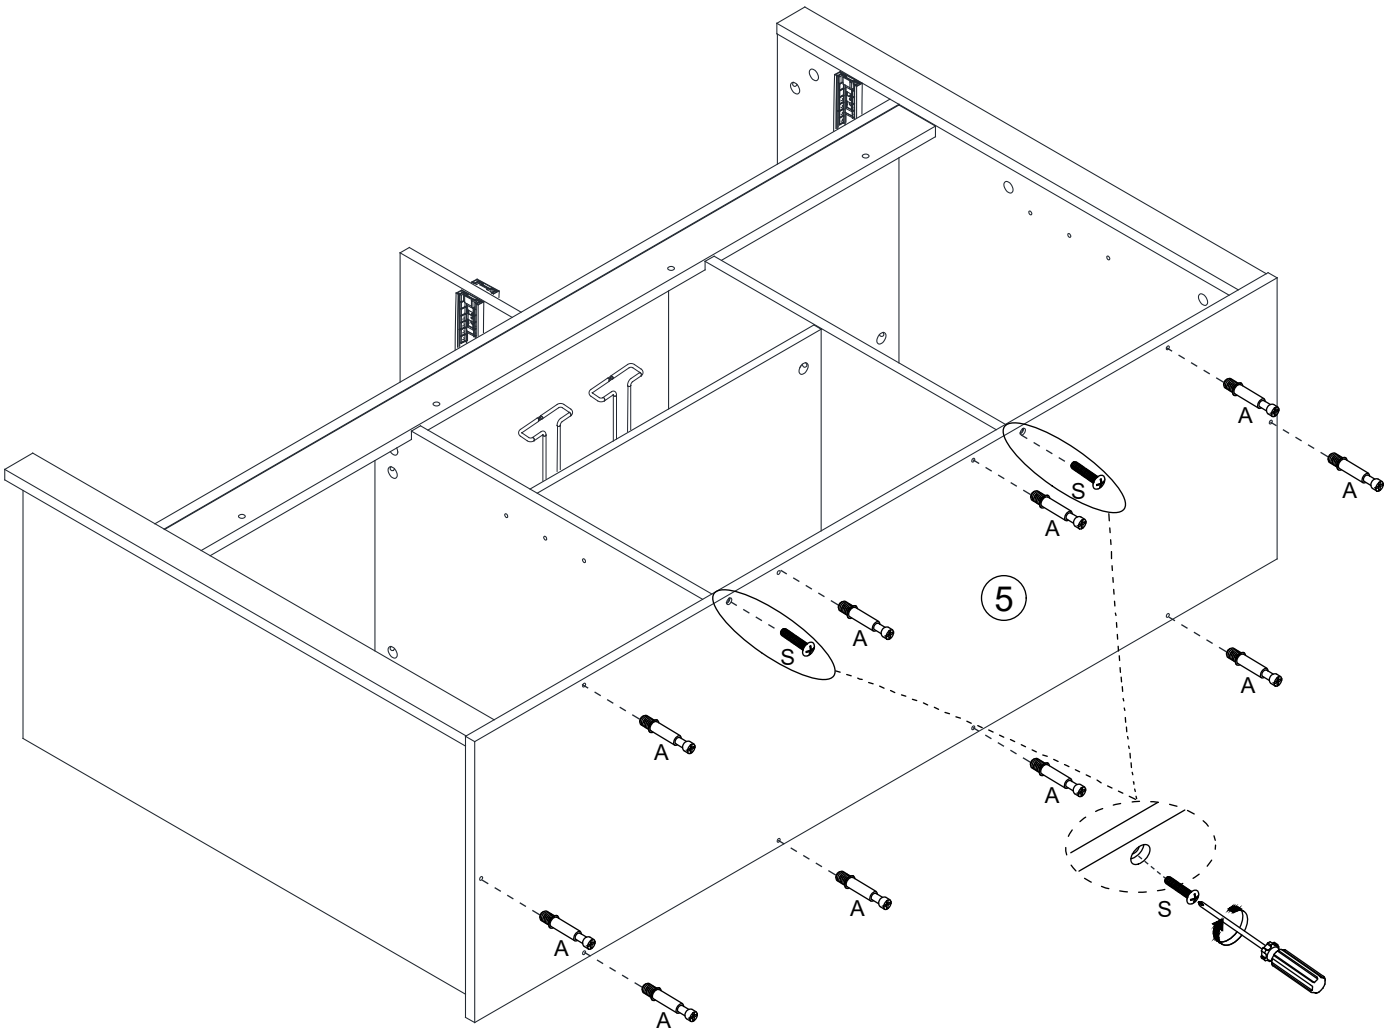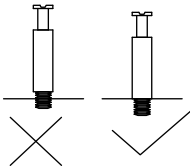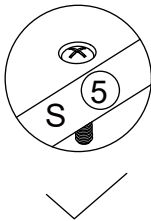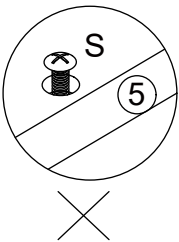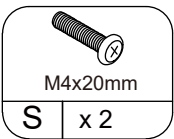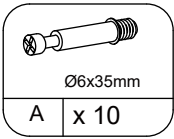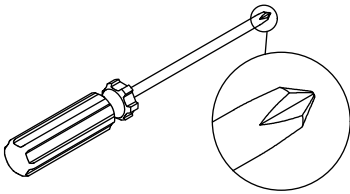



# STEP 13

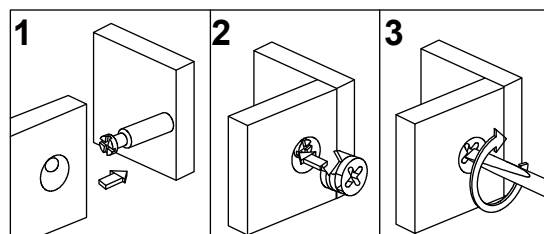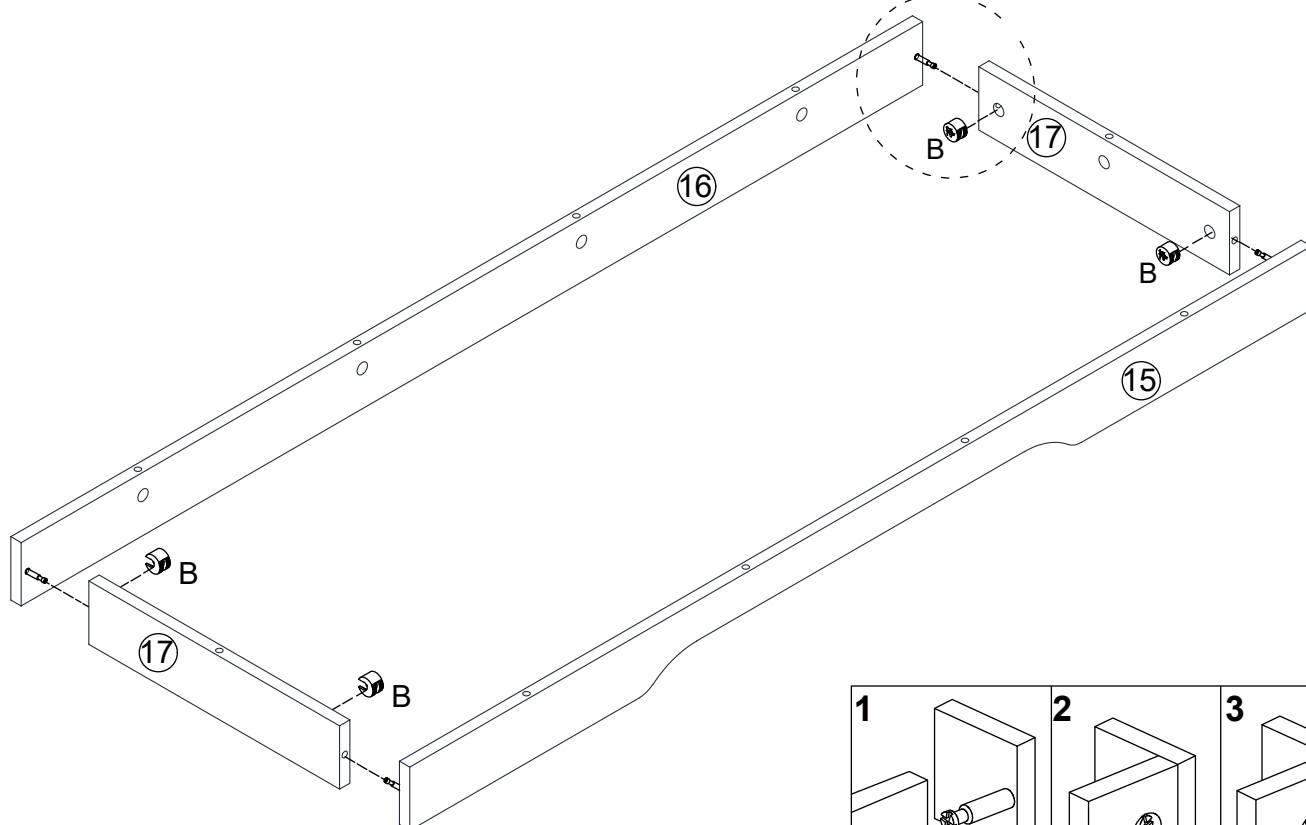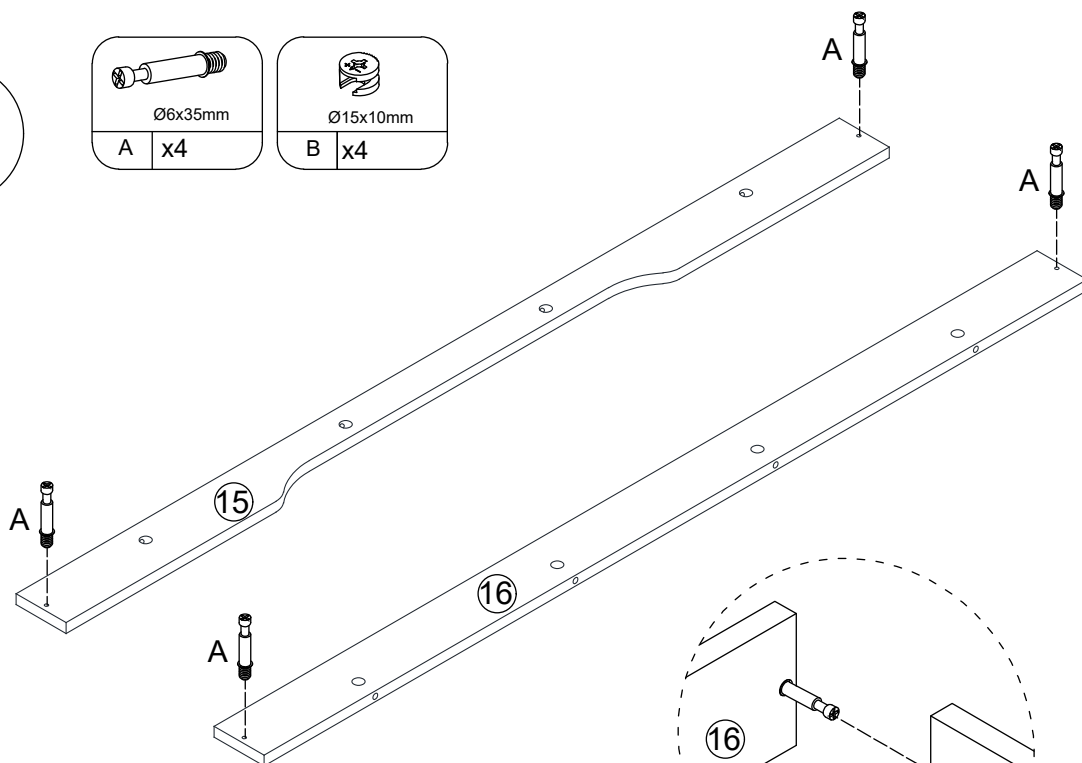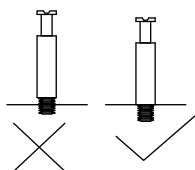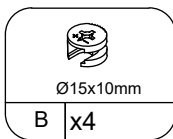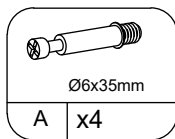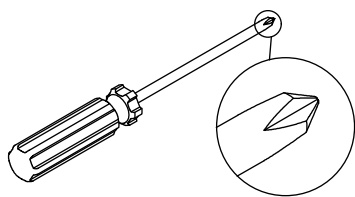



# STEP 14

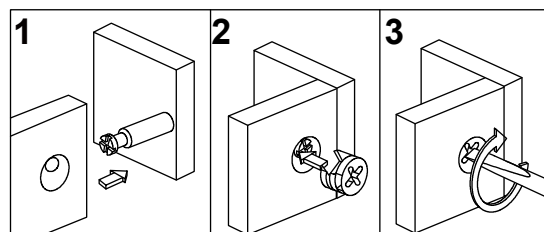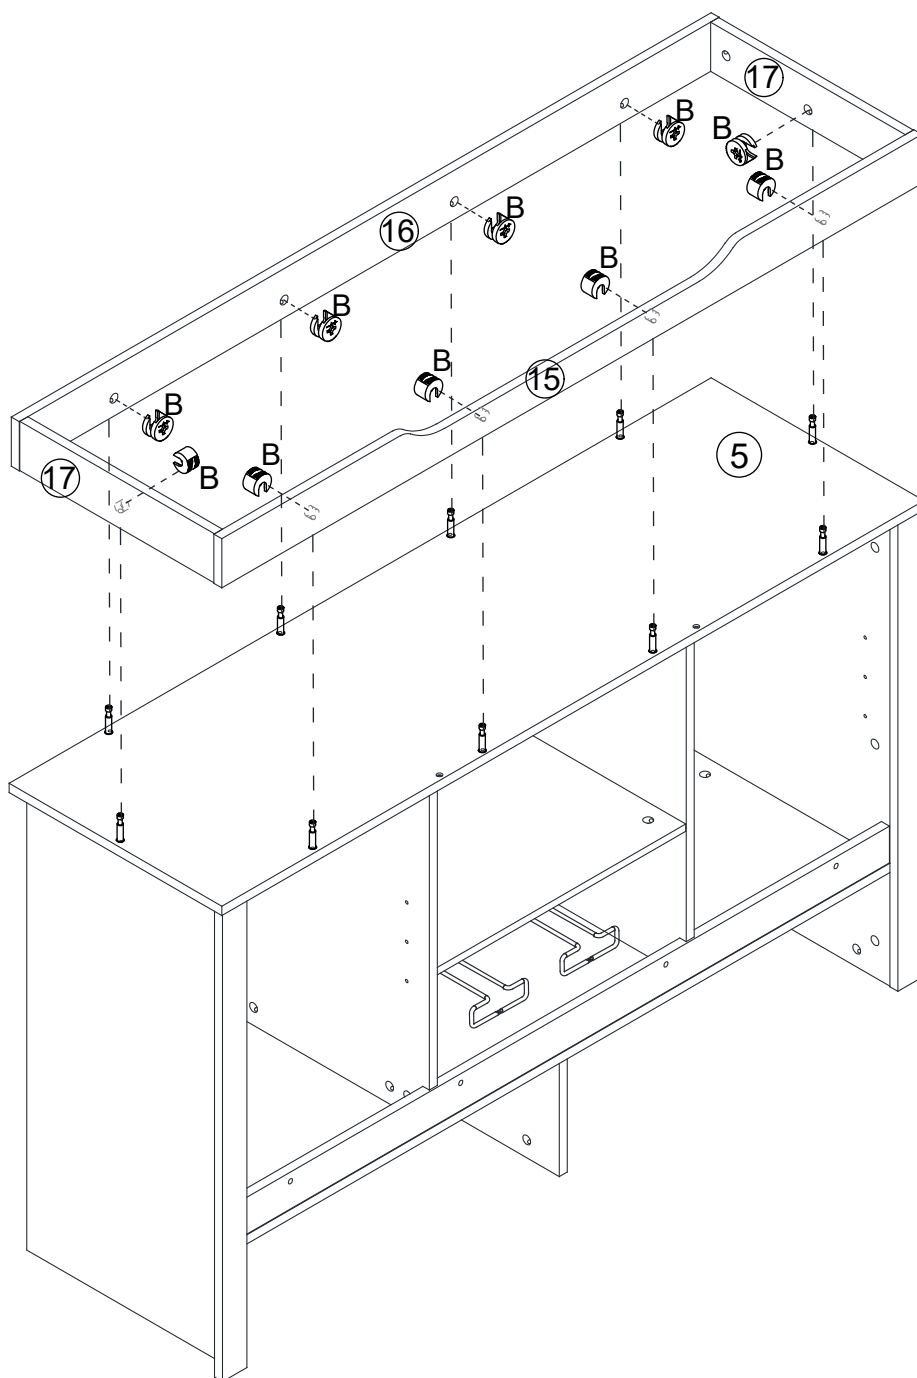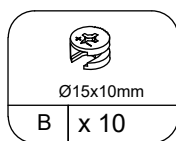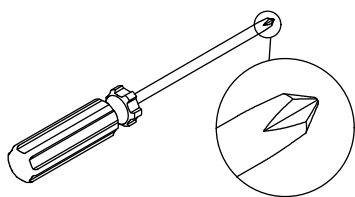







## STEP 15

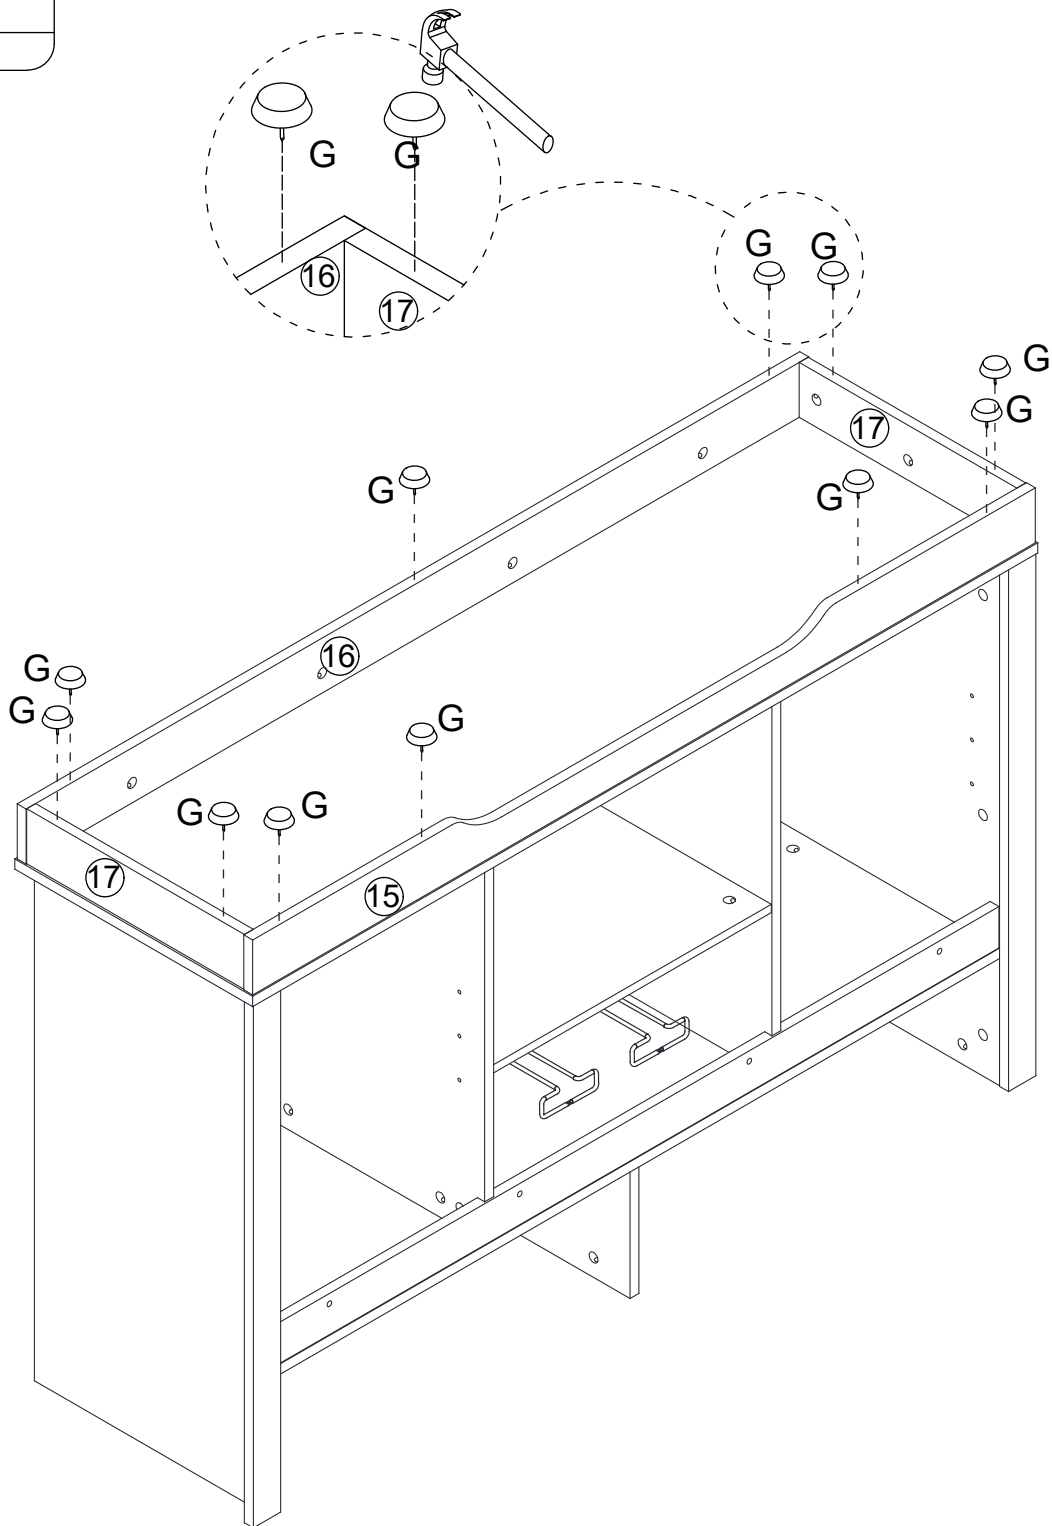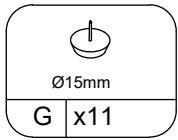



# STEP 16

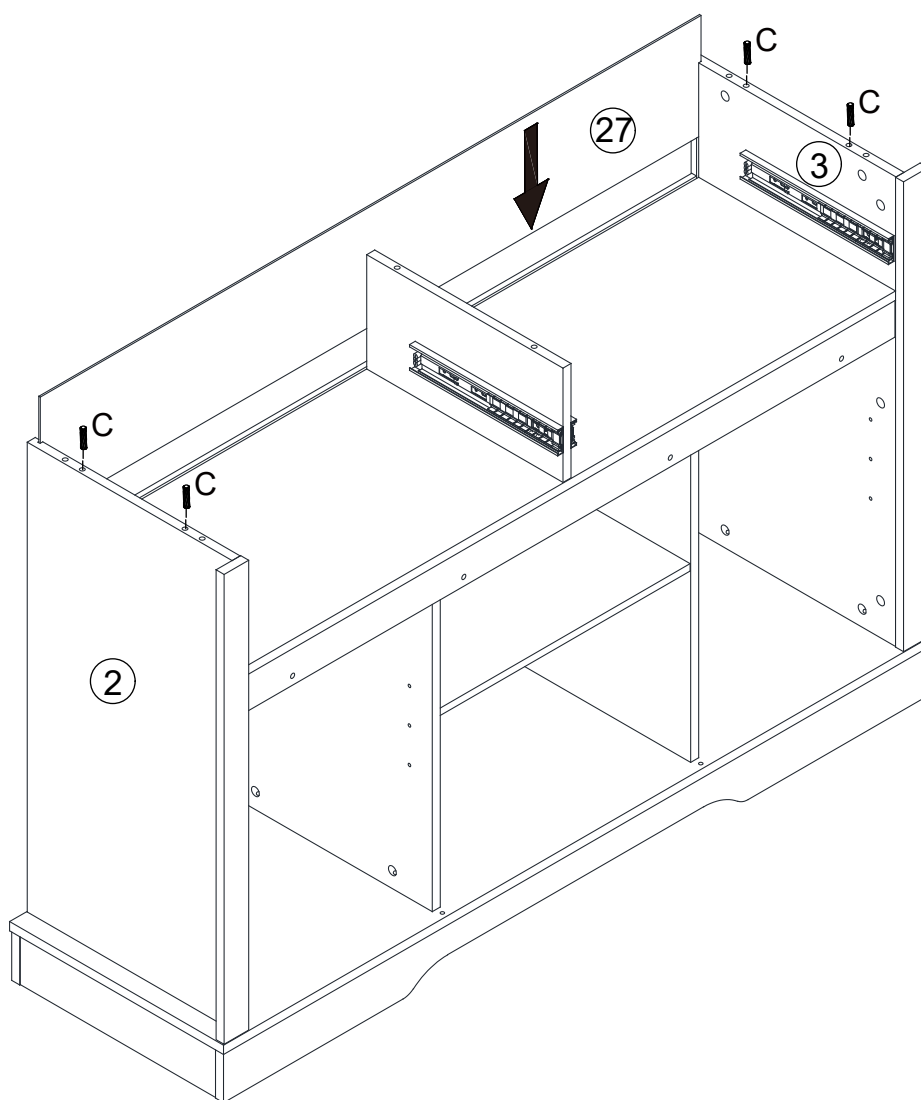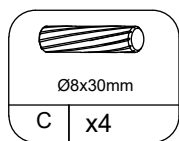


# STEP 17

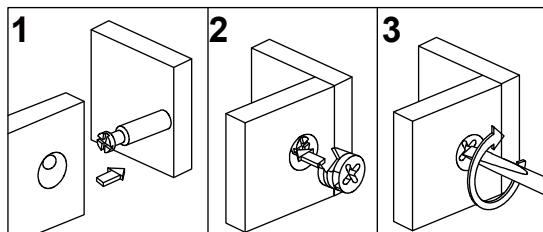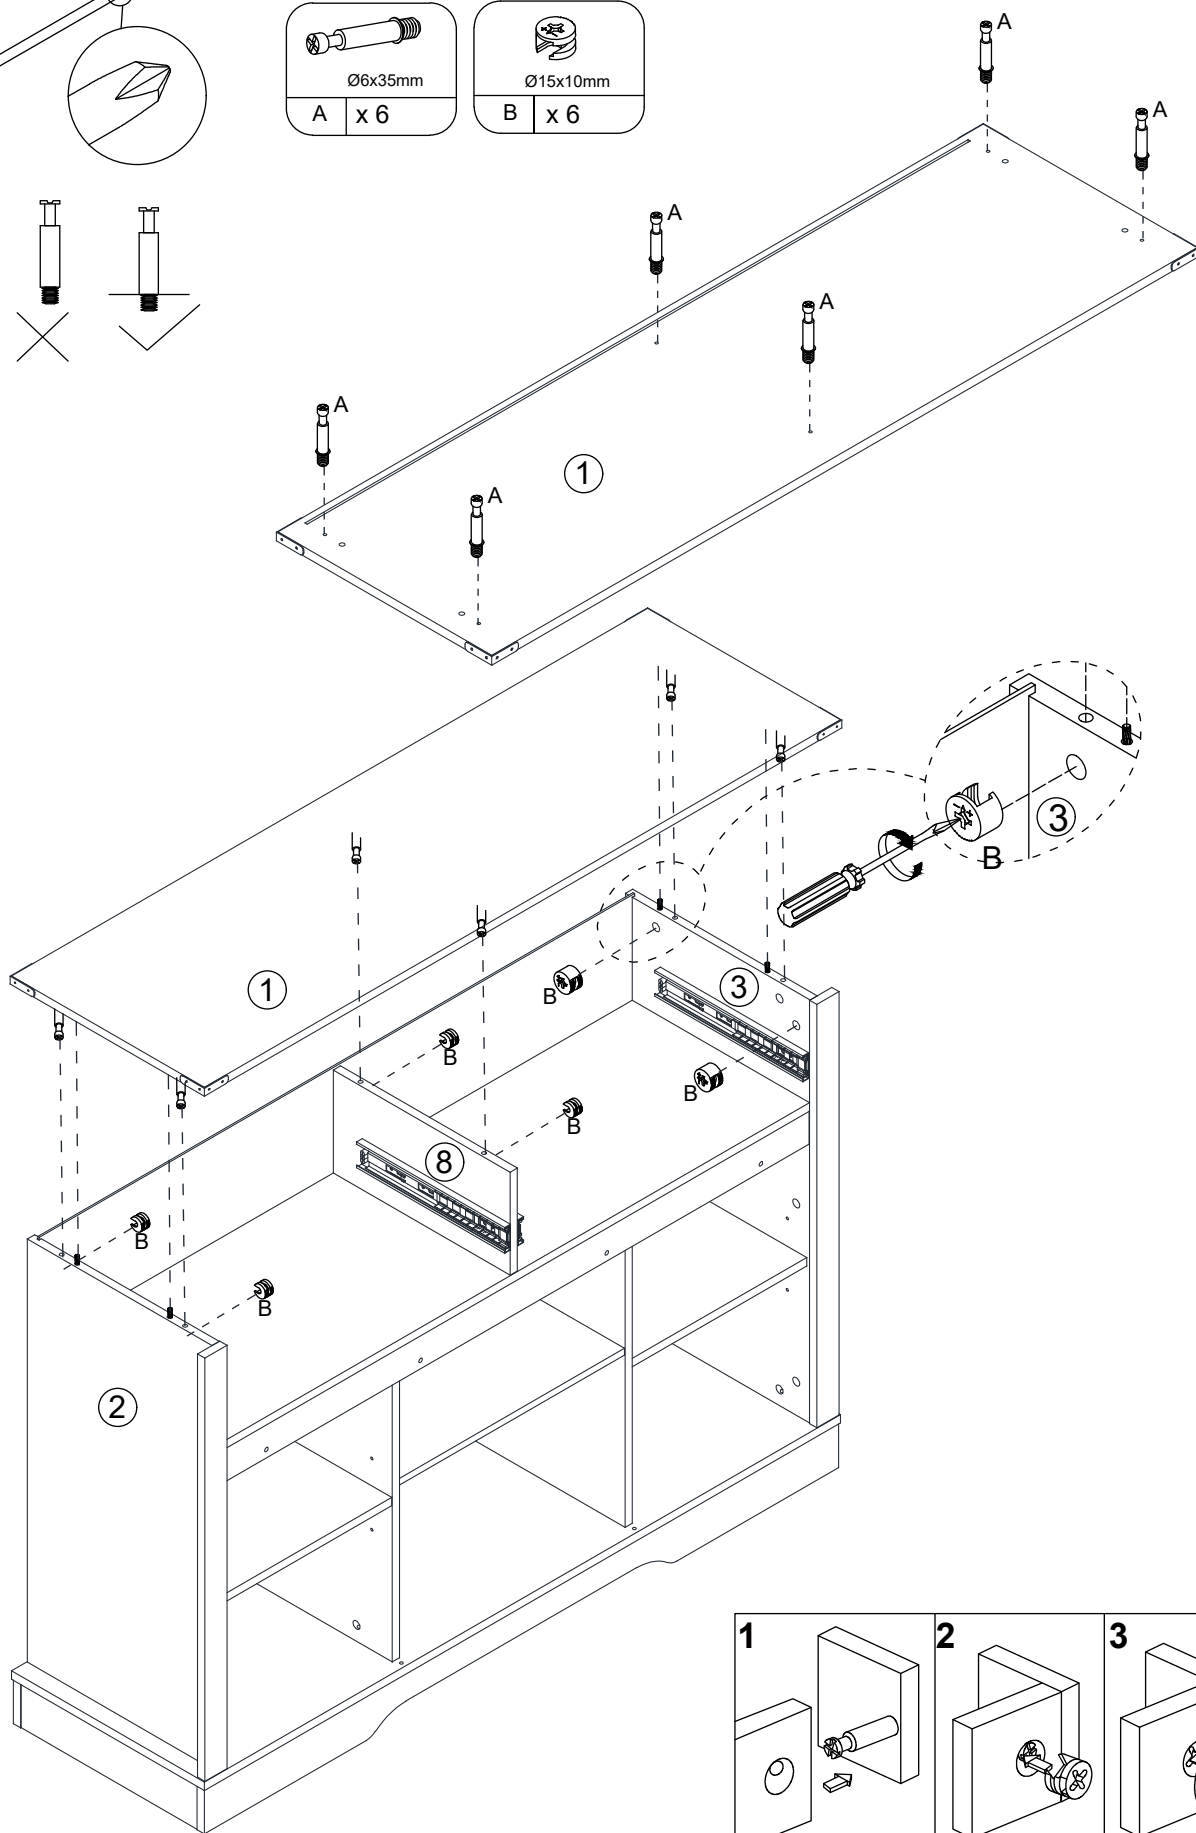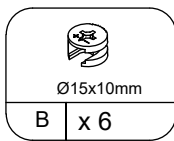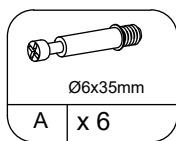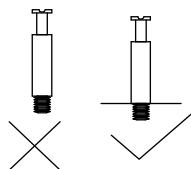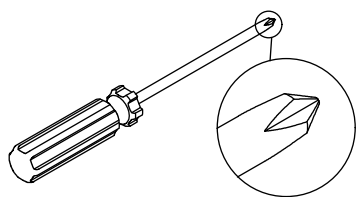


# STEP 18

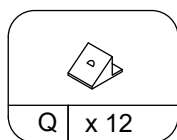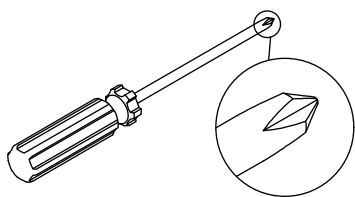

Q x 12



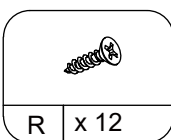


R x 12



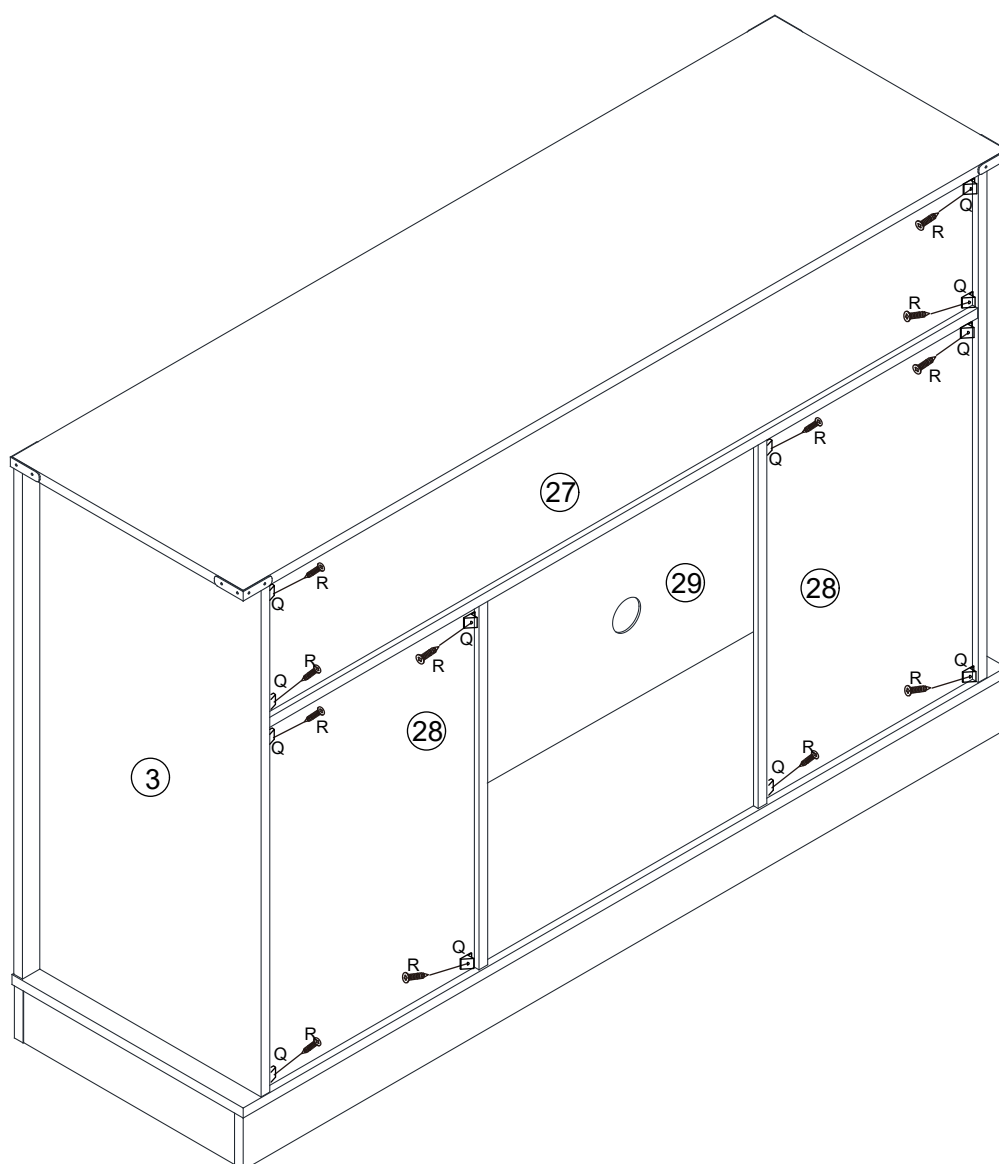





# STEP 19

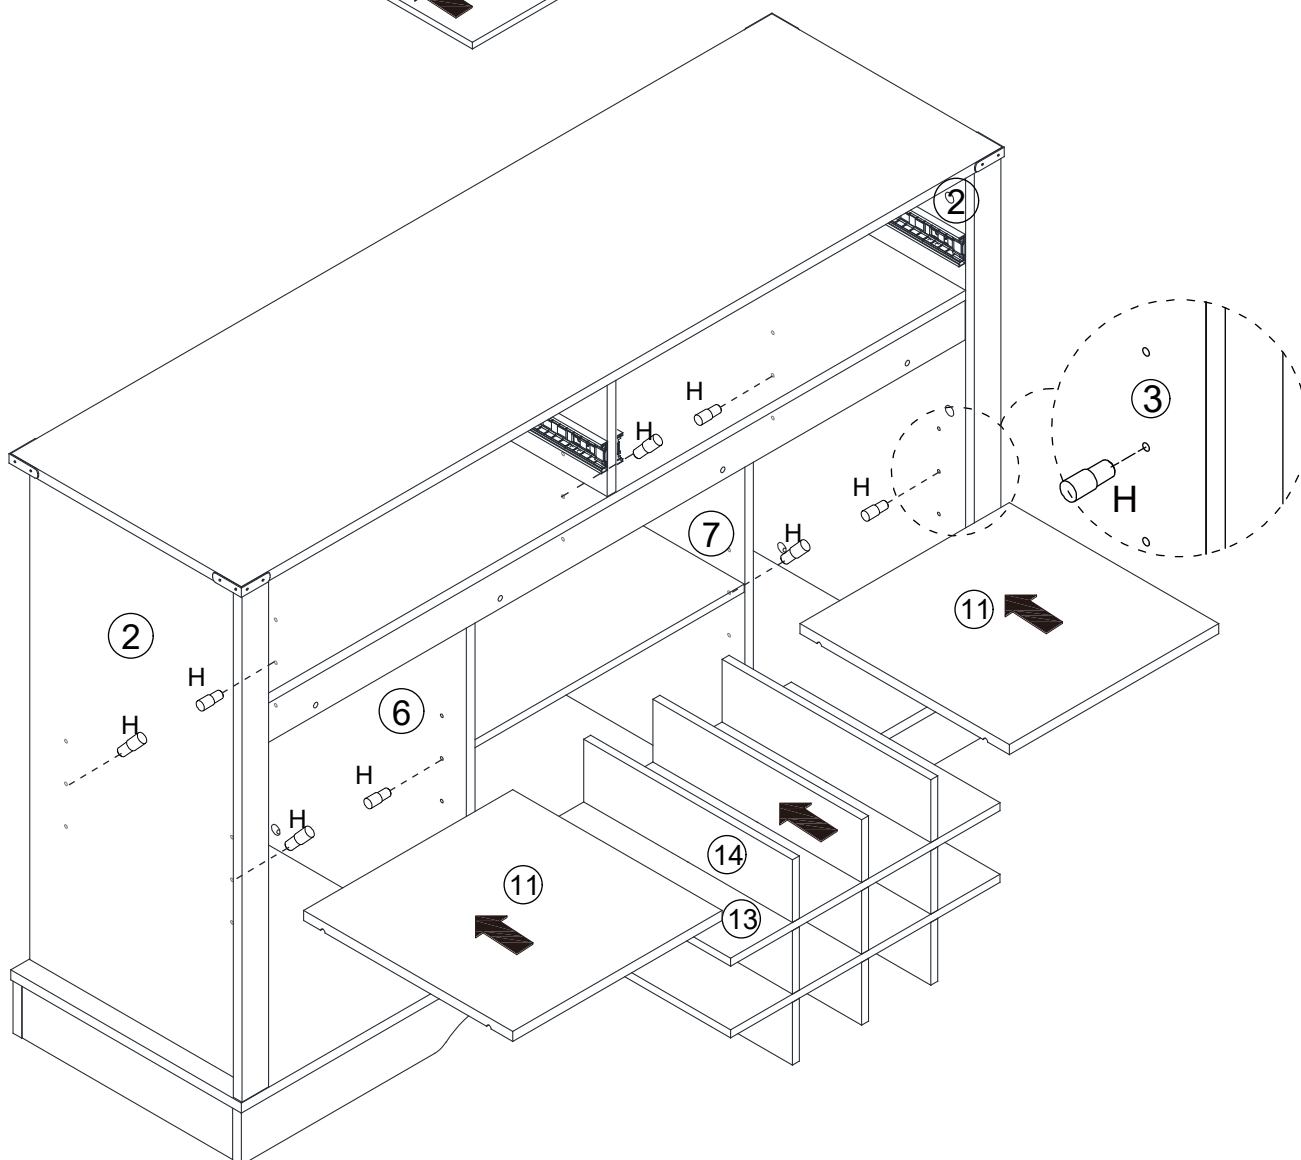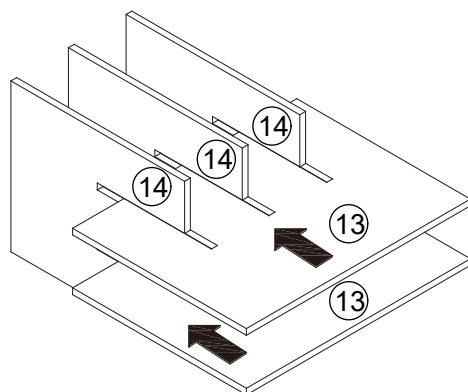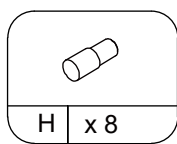







## STEP 20

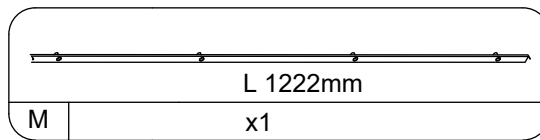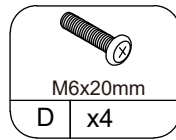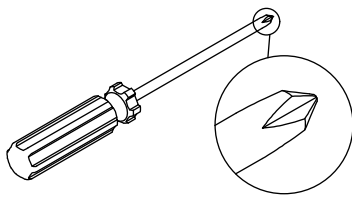


The door sliders have large holes on the outside and small holes on the inside

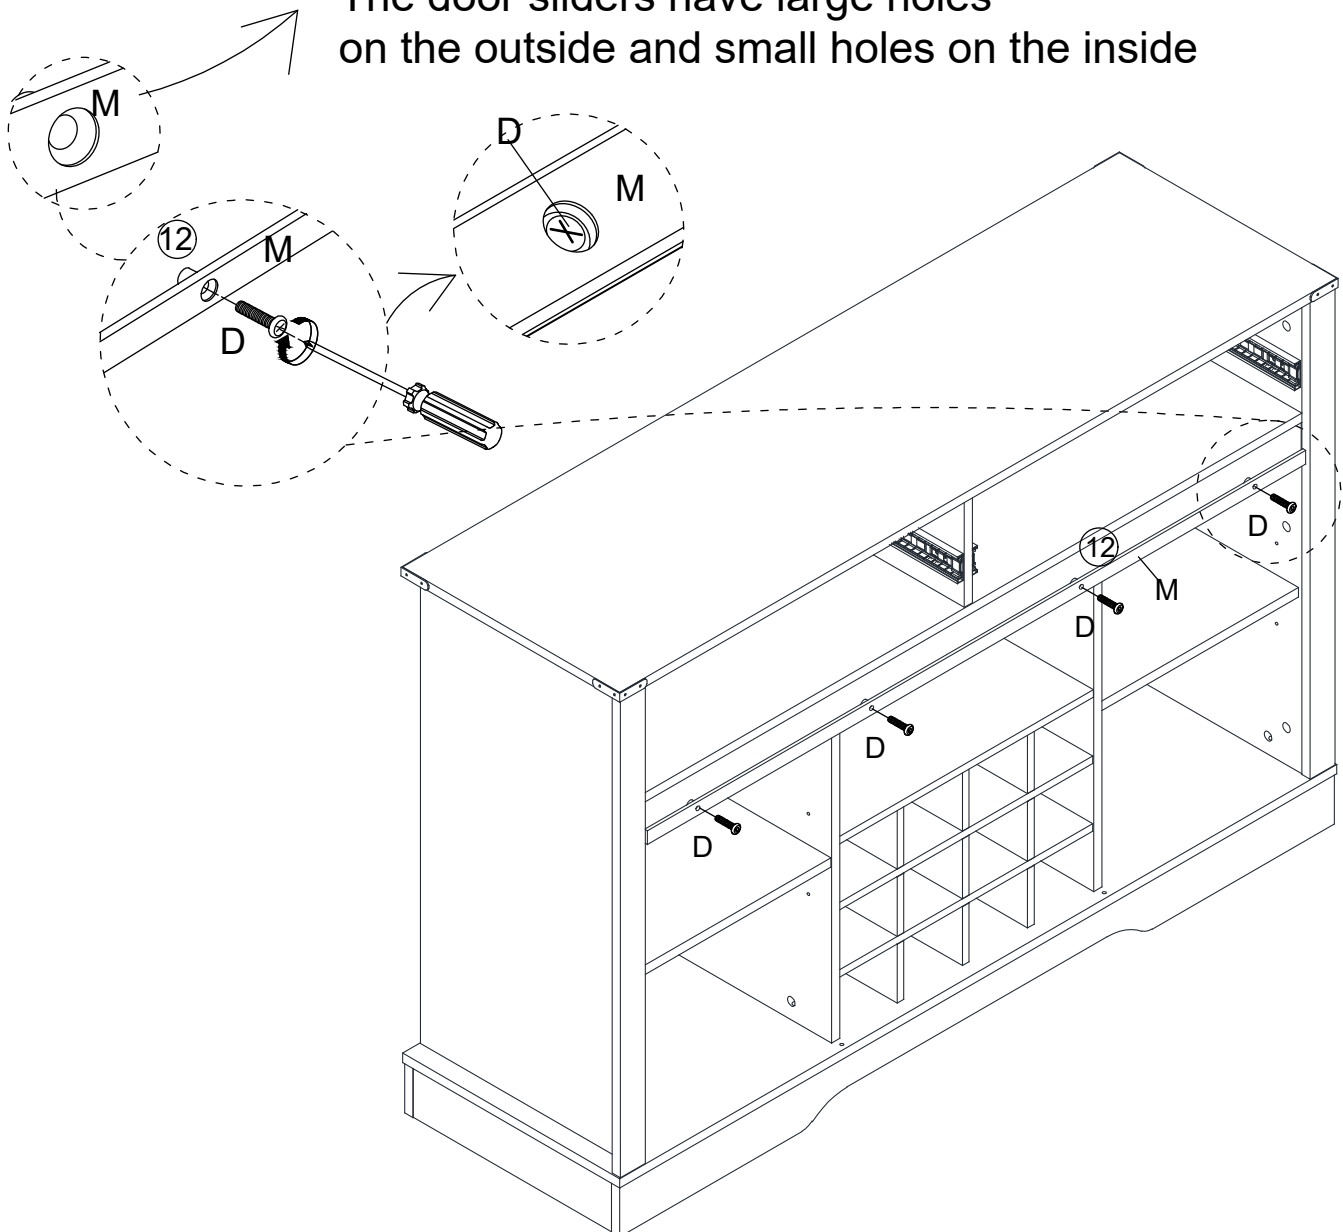






# STEP 21

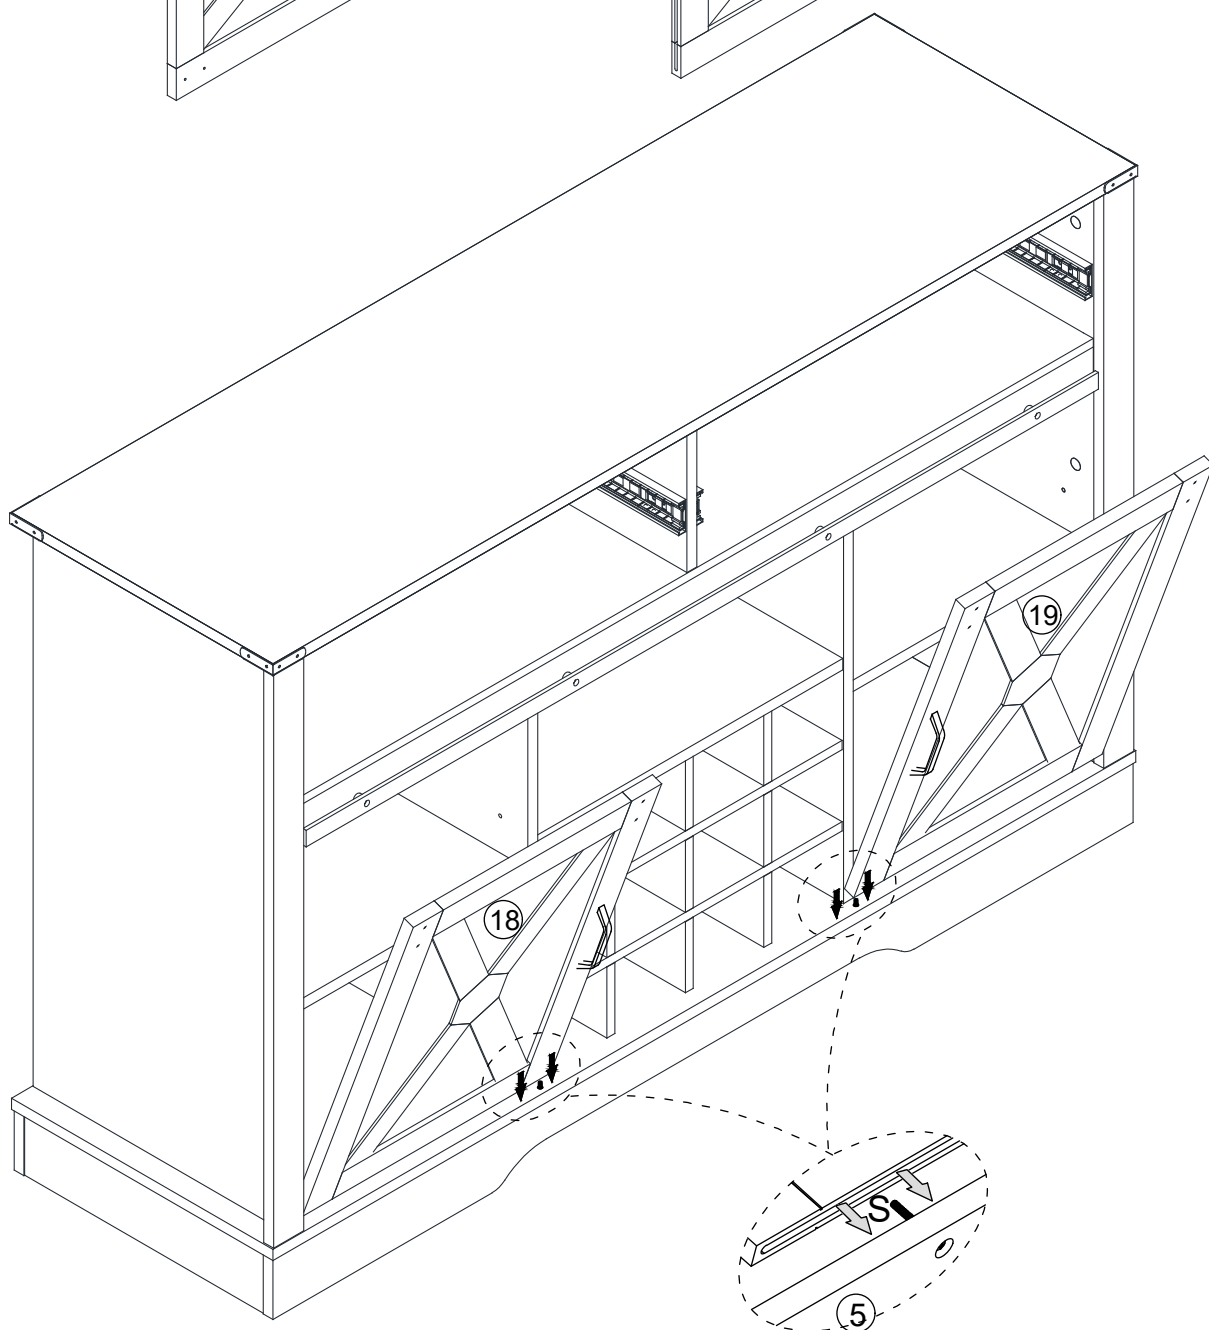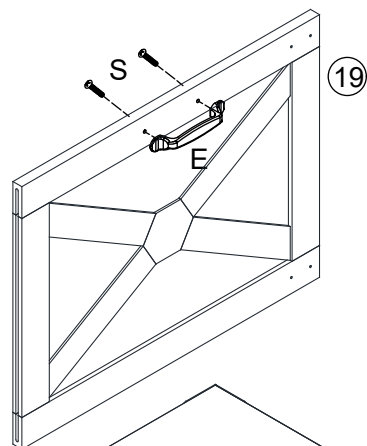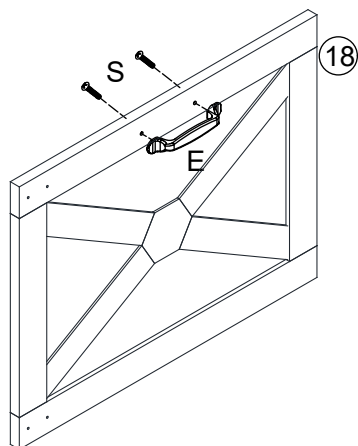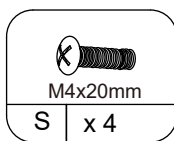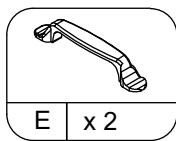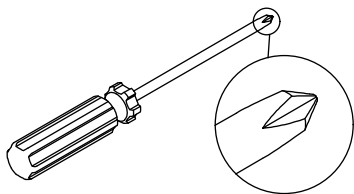



## STEP 22

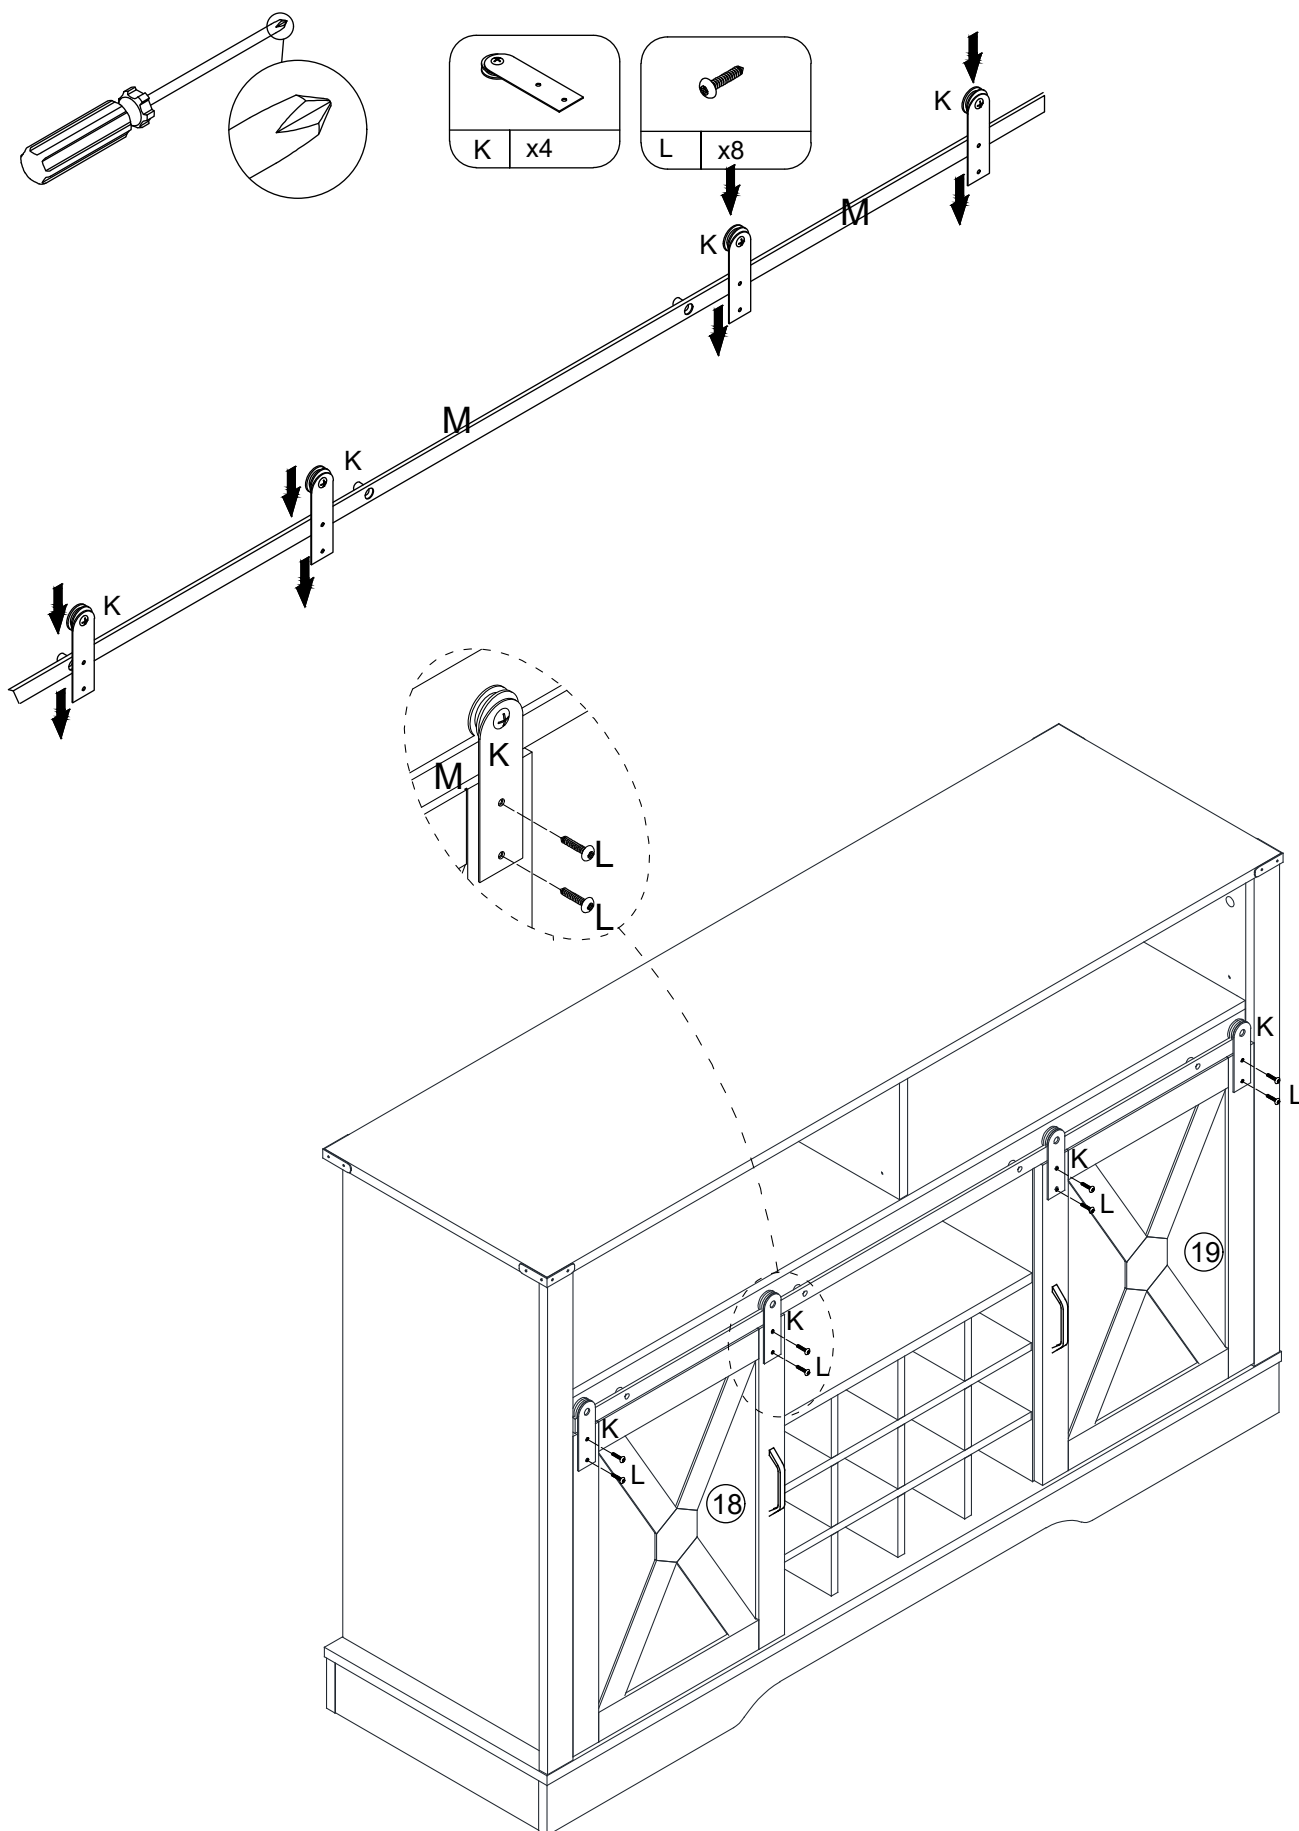












# STEP 23

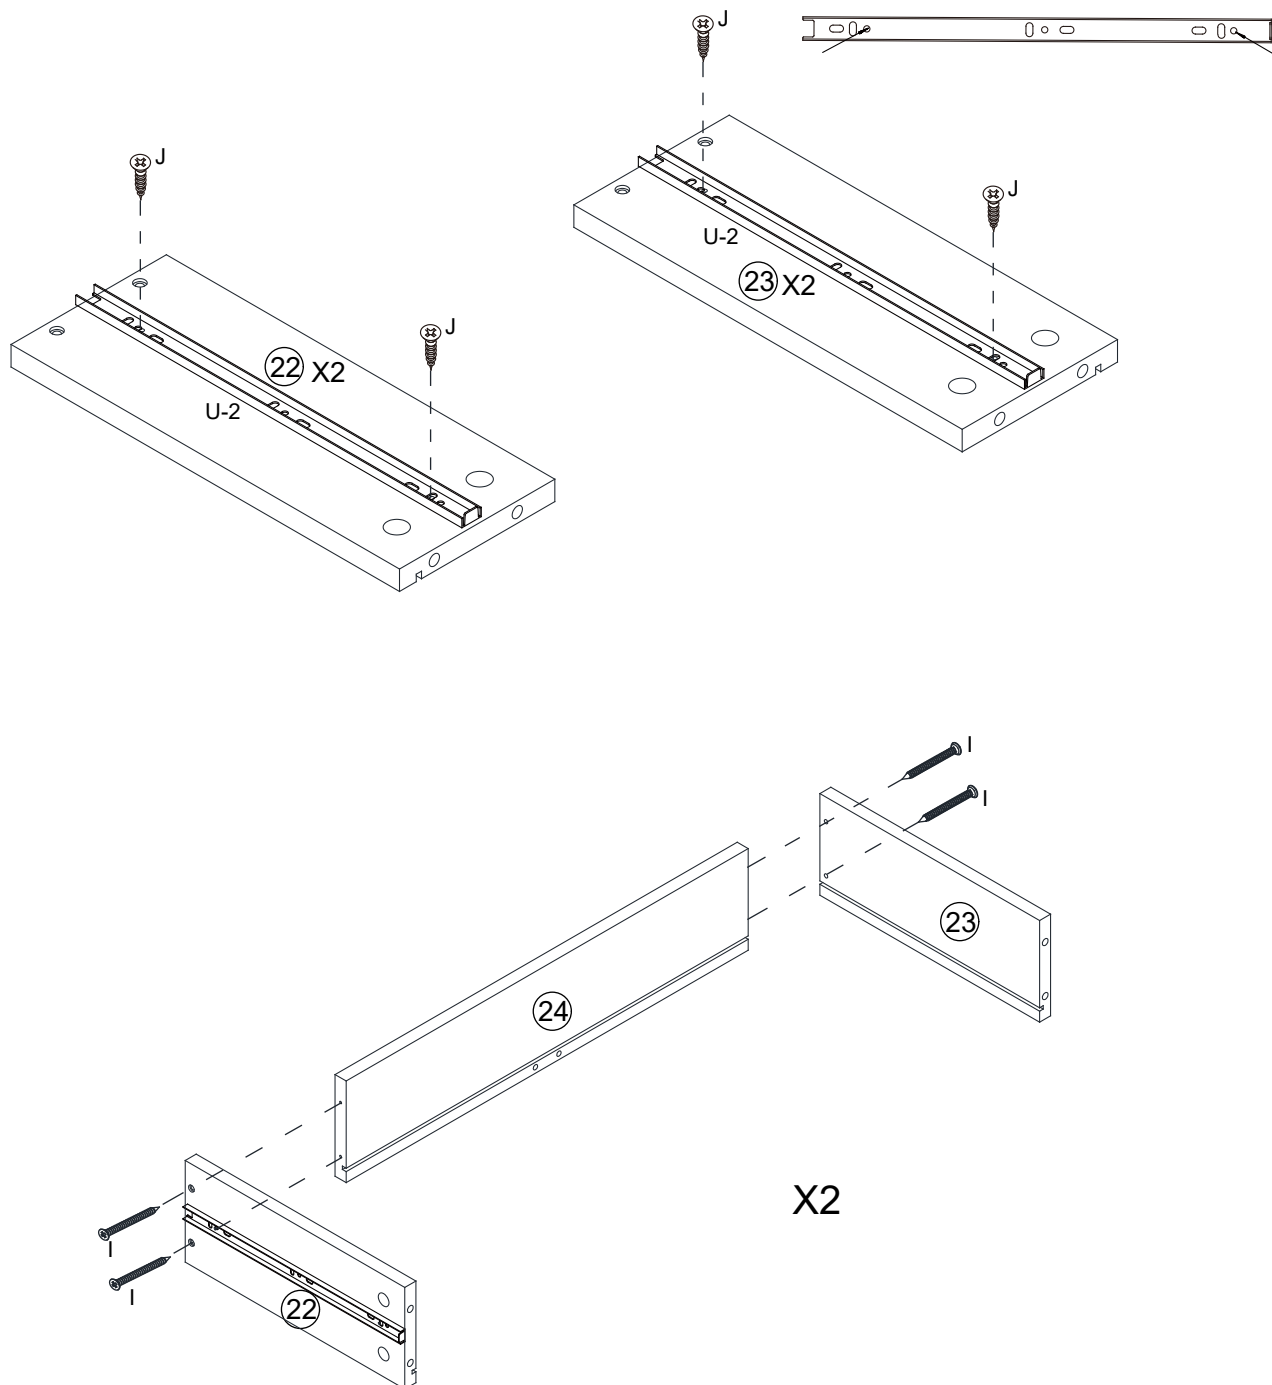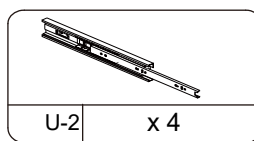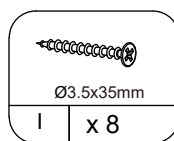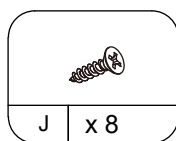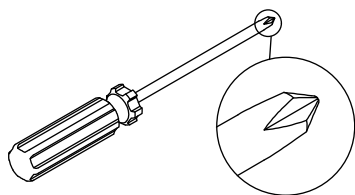

# STEP 24

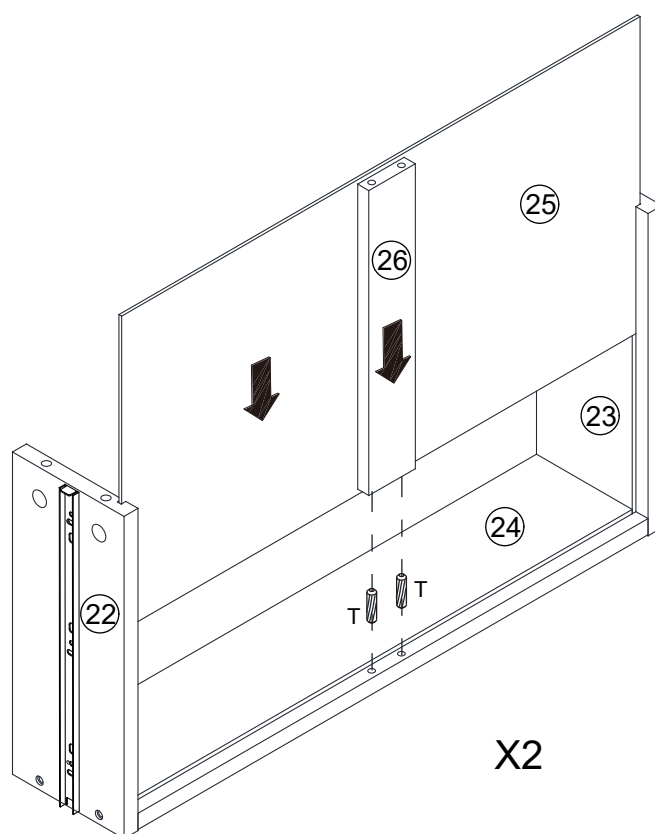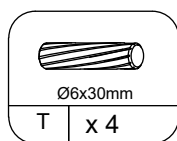


# STEP 25

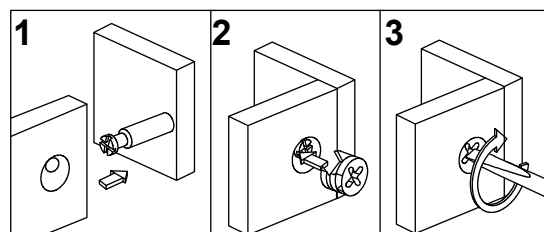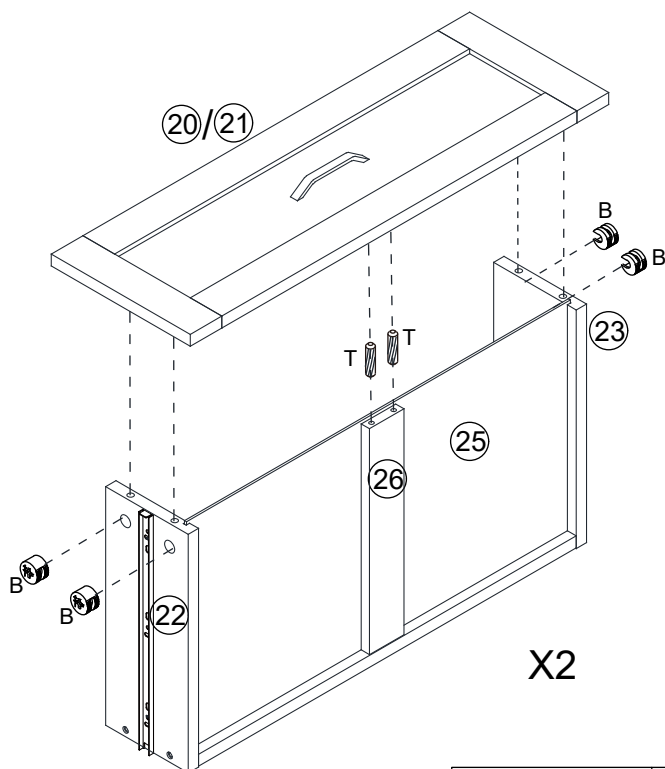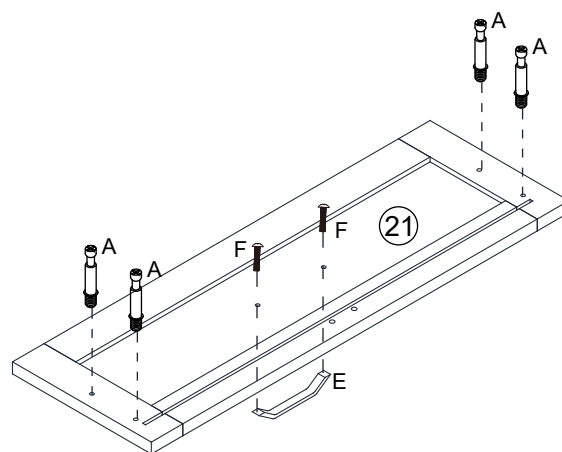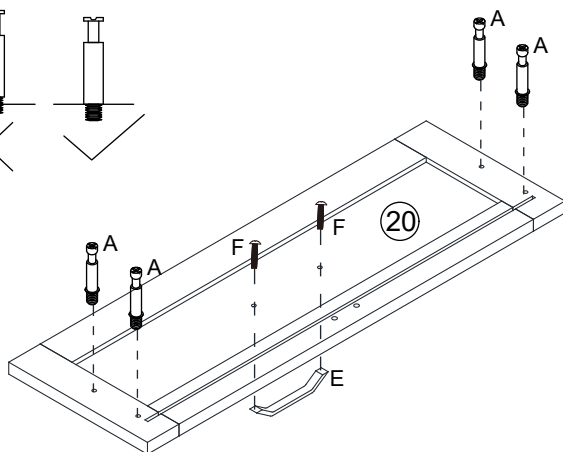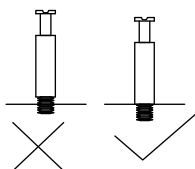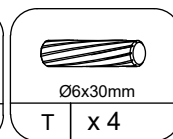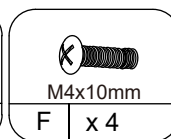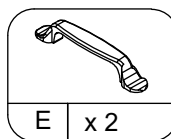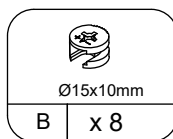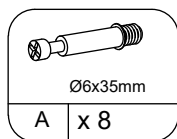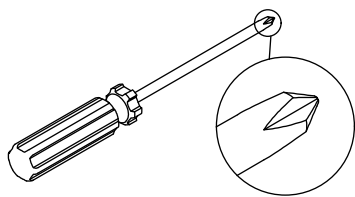

---




## STEP 26

---

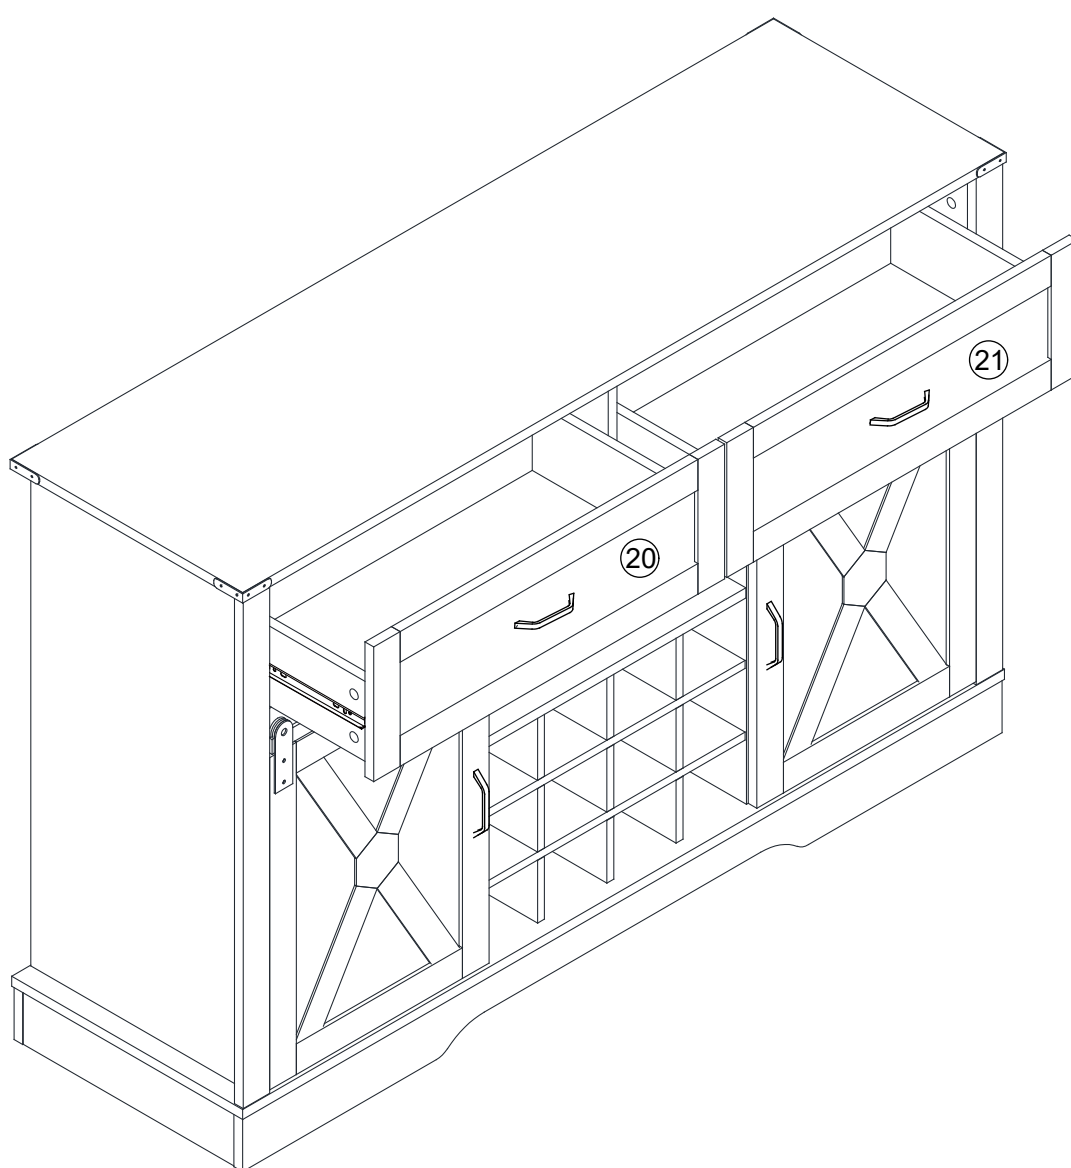



# STEP 27

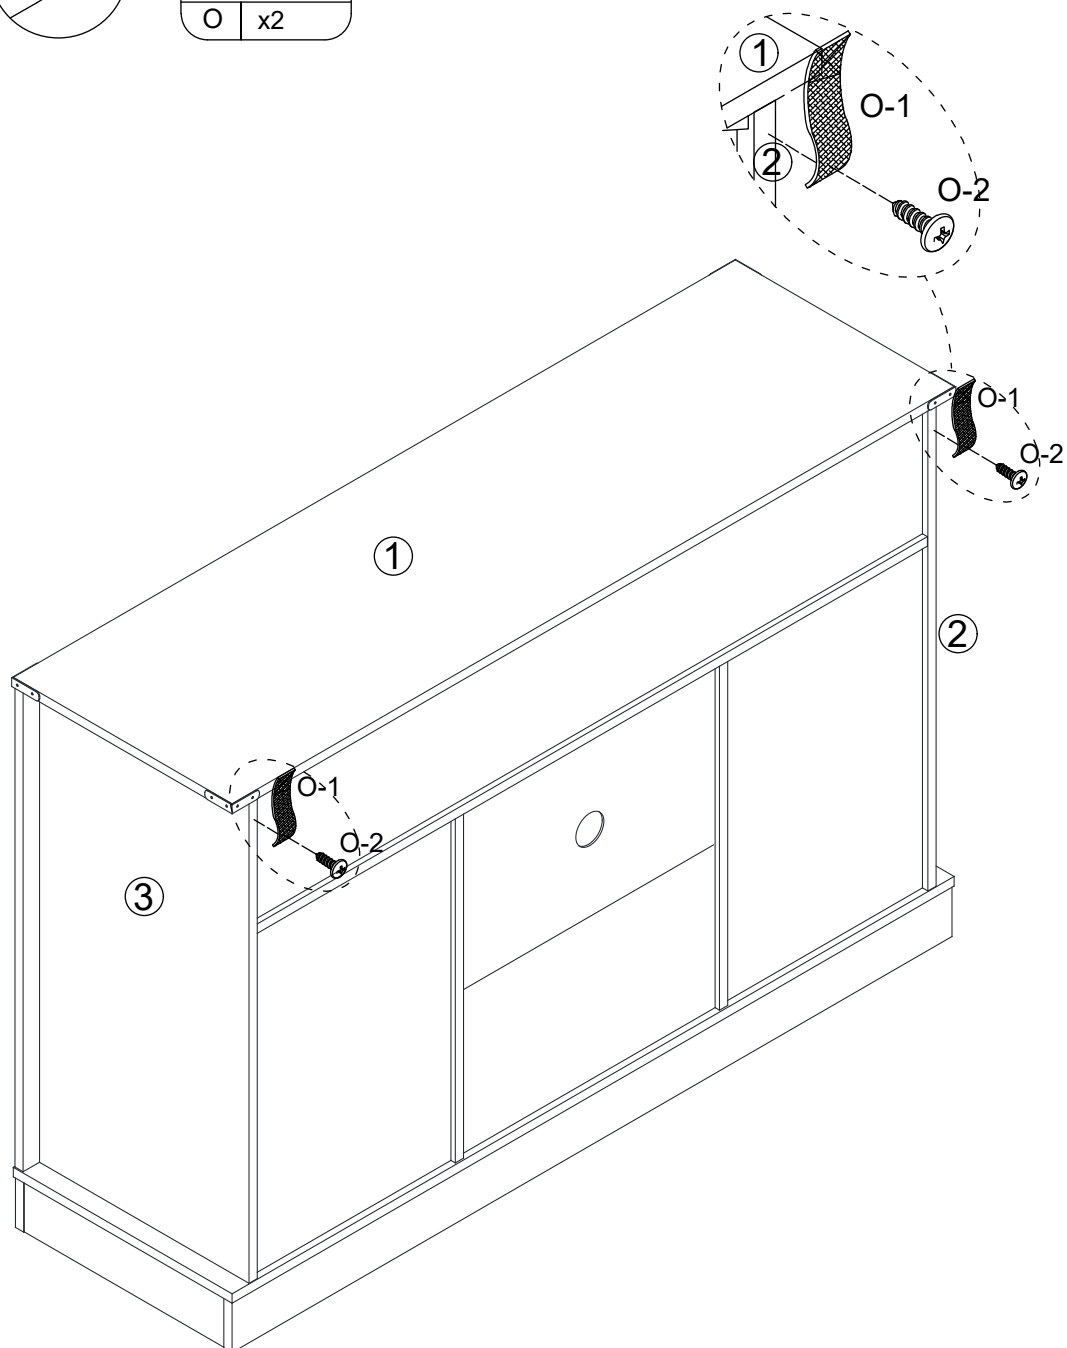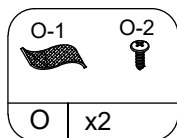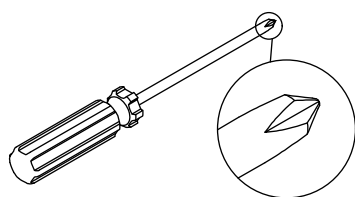

# STEP 28

