

Parts List For Twin Bed

BED CARTON

- (1) HEADBOARD PANEL-1
- (2) FOOTBOARD PANEL-1
- (3) DRAWER BACK PANEL-1
- (4) LEFT SIDE DRAWER PANEL-1
- (5) RIGHT SIDE DRAWER PANEL-1
- (6) DRAWER BASE-1
- (7) DRAWER BOTTOM SUPPORT RAIL-1
- (8) DRAWER FRONT PANEL-1
- (9) WOOD SLATS-1


SIDE RAIL CARTON

- (10) LEFT SIDE RAIL-1
- (11) RIGHT SIDE RAIL-1
- (12) CENTER SUPPORT RAIL-1


HARDWARE BAG

- (13) 1/4-20 X 3/4" FLAT ALLEN HEAD SCREW-8
- (14) 1/4" ID X 5/8" OD FLAT METAL WASHER-8
- (15) 10MM X 40MM WOOD DOWEL-14
- (16) 1/4-20 X 1" FLAT ALLEN HEAD SCREW-4
- (17) #4 X 30MM PHILLIPS HEAD WOOD SCREW-8
- (18) #4 X 35MM PHILLIPS HEAD WOOD SCREW-8
- (19) 10-24 X 1" PHILLIPS HEAD SCREW-2
- (20) WOOD HANDLE-1
- (21) 4MM ALLEN WRENCH-1

TOOLS NEED: PHILLIPS SCREWDRIVER
(NOT INCLUDE)



NOTE: DISCARD CENTER SUPPORT (12)
RAIL AFTER TWIN BED ASSEMBLY

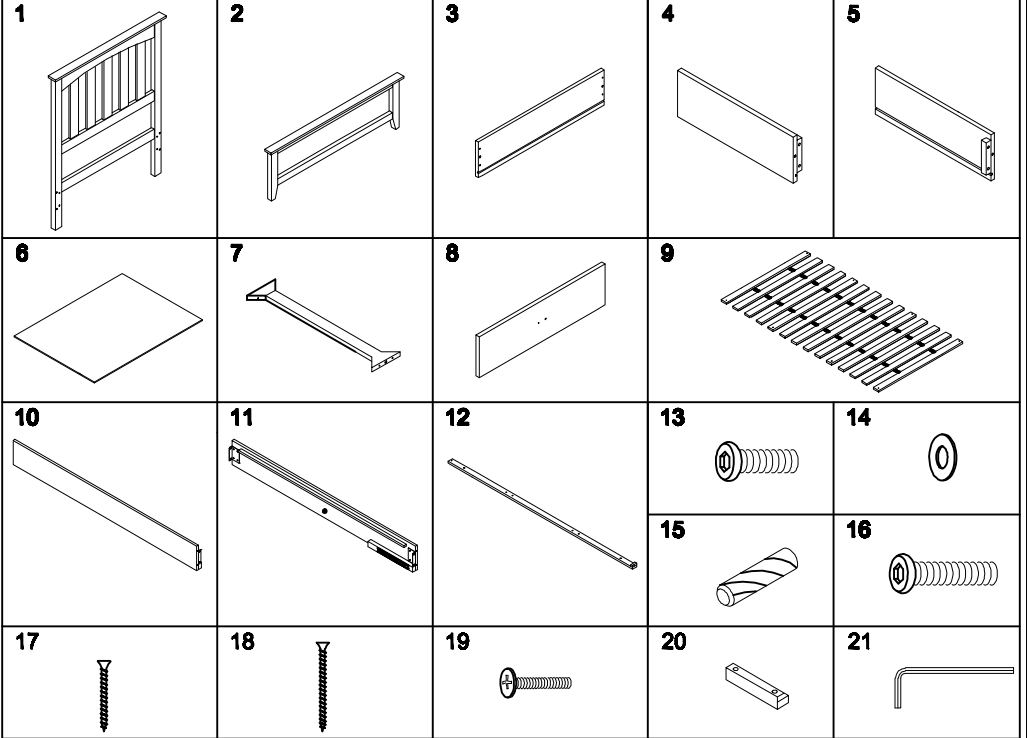

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND COULD BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

NOTE: FOR EASY ASSEMBLY ASSISTANCE FROM ANOTHER PERSON WOULD BE BENEFICIAL.

Step 1- Assembly of Side Rails.

- Insert wood dowel (15) into pilot holes on headboard panel (1) place right side rail (11) over wood dowel (15). SEE FIGURE 1
- Secure right side rail (11) with screw (13) and flat metal washer (14). Use Allen wrench (21) to tighten.
- Repeat same steps with left side rail (10) and footboard panel (2).

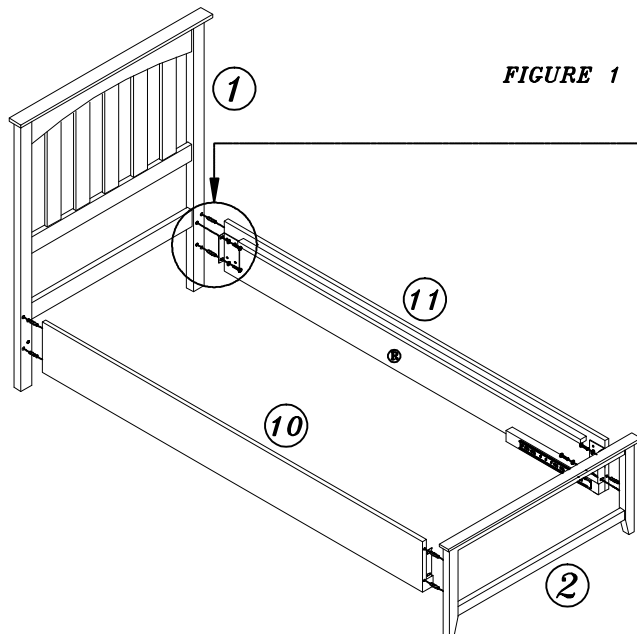


FIGURE 1

