



ASSEMBLY INSTRUCTION

ITEM: MV-5969-90251-85 Roatan 5/0 Panel Headboard
MV-5969-90252-85 Roatan 5/0 Panel Footboard
MV-5969-90267-85 Roatan 6/0-6/6 Panel Headboard
MV-5969-90268-85 Roatan 6/0-6/6 Panel Footboard
MV-5969-90253-85 Roatan 5/0-6/6 Rails
MV-5969-90263-85 Roatan 6/0 Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

HARDWARE LIST OF RAIL				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Spanner Wrench	Ø3/8"	1PC
B		Nut	Ø3/8"	8PCS
C		Curved Washer	Ø3/8"	8PCS
D		Threaded Rod	Ø3/8"*4"	8PCS


HARDWARE LIST OF FOOTBOARD				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
E		Screw	1 1/4"	16 PCS (for 5/0 bed) 20 PCS (for 6/6 & 6/0 beds)

PARTS LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Headboard	1PC
2		Rail	2PCS
3		Footboard	1PC
4		Slat	4 PCS (for 5/0 bed) 5 PCS (for 6/6 & 6/0 beds)
5		Support Leg	4 PCS (for 5/0 bed) 5 PCS (for 6/6 & 6/0 beds)

ASSEMBLY INSTRUCTION

ITEM: MV-5969-90251-85 Roatan 5/0 Panel Headboard
 MV-5969-90252-85 Roatan 5/0 Panel Footboard
 MV-5969-90267-85 Roatan 6/0-6/6 Panel Headboard
 MV-5969-90268-85 Roatan 6/0-6/6 Panel Footboard
 MV-5969-90253-85 Roatan 5/0-6/6 Rails
 MV-5969-90263-85 Roatan 6/0 Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip—do not fully tighten bolts until assembly is complete. It will make assembly easier.

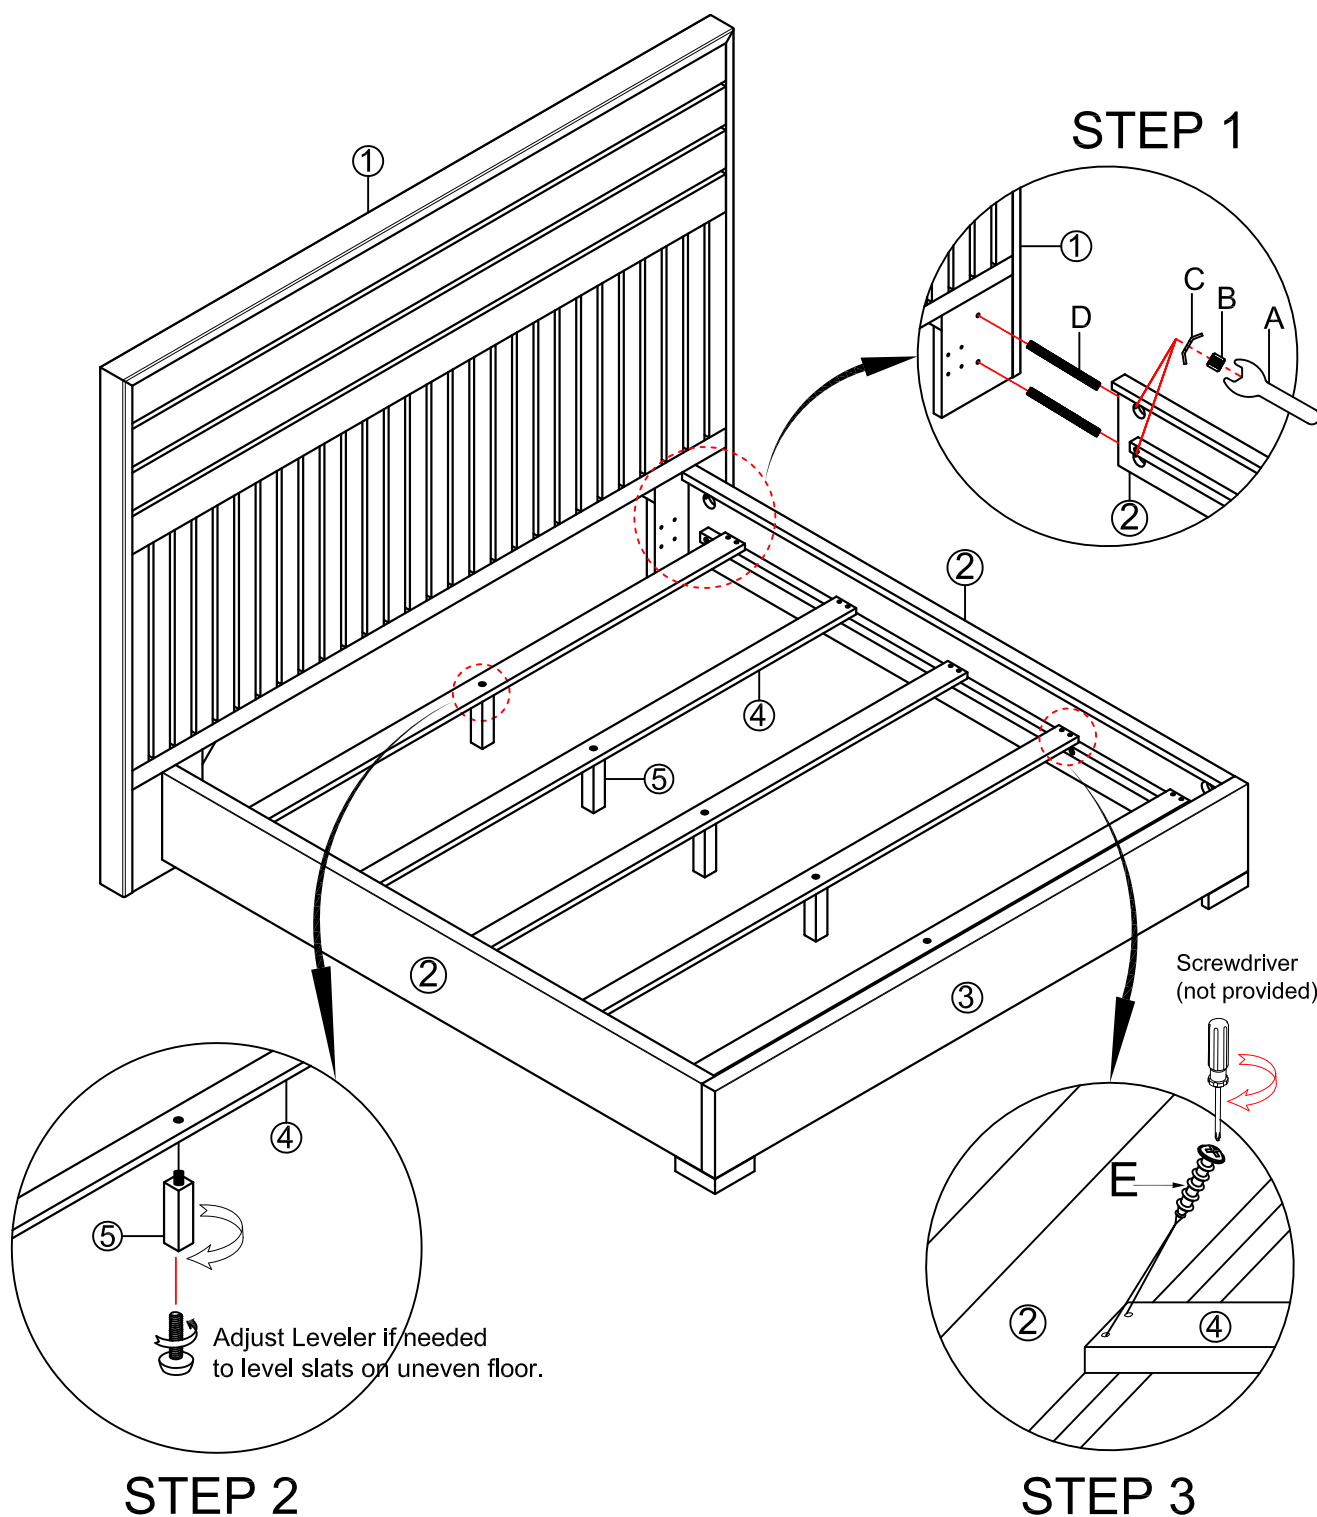



ASSEMBLY INSTRUCTION

ITEM: MV-5969-90251-85 Roatan 5/0 Panel Headboard
MV-5969-90252-85 Roatan 5/0 Panel Footboard
MV-5969-90267-85 Roatan 6/0-6/6 Panel Headboard
MV-5969-90268-85 Roatan 6/0-6/6 Panel Footboard
MV-5969-90253-85 Roatan 5/0-6/6 Rails
MV-5969-90263-85 Roatan 6/0 Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip—do not fully tighten bolts until assembly is complete. It will make assembly easier.

Step 1: Attach rails (2) to headboard (1) and footboard (3) by using threaded rods (D), curved washers (C) and nuts (B), tighten them with open wrench (A) .

Step 2: Attach support legs (5) to slats (4).

Step 3: Attach slats (4) to the rails (2) and tighten them by using Phillips head screwdriver.